USER MANUAL

TEMPERATURE HUMIDITY XS SENSOR ZSE44 800LR





Monitor temperature and

- humidity via Z-Wave NEW 800 series chip for faster
- communication and more battery life than ever • Z-Wave Long Range for ultra
- reliable no-mesh communication Snap-in mounting bracket
- Powered by a single coin battery
- The latest S2 security and SmartStart for secure set-up
- Supports OTA firmware updates
- **SPECIFICATIONS**

• Model Number: ZSE44 800LR

- Power: 1 x CR2450 battery • Operating Temperature: 5°-104° F
- Dimensions: 2.2" x 1.3" x 0.2"
- Range: Up to 150 feet (up to 1300
- ft with Long Range) line of sight • Installation and Use: Indoor or outdoor under eve (can't be
- exposed to direct rainfall or sun, a little splash is OK) INSTALLATION

1. POWER THE SENSOR

Use the triangle tool to gently open the sensor's cover and access the battery. Pull the tab from under the battery to activate the sensor.


or light up at all?



for around 10 seconds once the sensor is powered. The LED indicator doesn't blink

Make sure the battery is inserted correctly per the

- positive / negative pole marks. Try a fresh lithium nonrechargeable battery.
- Click the Z-Wave button 3 times as quickly as possible to
- force inclusion/exclusion mode in case you missed when it first flashed. **Z-WAVE**

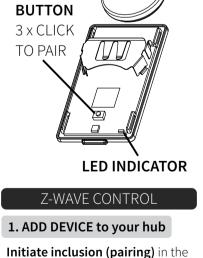

app (or web interface). Not sure

how? ask@getzooz.com If you're using an S2 hub, it will ask you to enter the DSK PIN or scan the QR code printed on the inside of the sensor's battery cover to complete SmartStart inclusion. 2. ACTIVATE the sensor While the hub is looking for new

devices, click the Z-Wave button 3 times as quickly as possible. The LED indicator will start

flashing to confirm inclusion mode and turn off once inclusion is completed. TIP! It's best to add your sensor from the area where it will be installed so the hub can find the best route

to reach it right away. PAGE 1

NEED SOME HELP? ask@getzooz.com

Choose your hub and scan the QR code with your phone's camera. Then click on the link to access the step-by-step pairing instructions.



Hubitat



ww.support.getzooz.com **TROUBLESHOOTING**

The sensor won't add to your

system? Try this: 1. Initiate **EXCLUSION** in your hub and click the Z-Wave button 3

- times as quickly as possible. 2. Click the Z-Wave button quicker
- when adding it. 3. Bring the sensor **closer** to your hub, it may be out of range.
- 4. Double-check if the device is powered.
- 5. Get troubleshooting tips specific to your hub at
 - www.support.getzooz.com

EXCLUSION (REMOVE DEVICE)

1. Bring the sensor within direct range of your Z-Wave hub.

- 2. Put the Z-Wave hub into exclusion mode (not sure how to
- do that? ask@getzooz.com). 3. Click the **Z-Wave button 3 times** as quickly as possible.
- 4. Your hub will confirm exclusion and the sensor will disappear
 - from your controller's device list. **FACTORY RESET**

When your network's primary controller is missing or otherwise inoperable, you may need to reset the device to factory settings manually. In order to complete the process, make sure the sensor is powered, then click the Z-Wave button twice and hold it the third

indicator will blink continuously. Immediately after, click the Z-Wave button twice more to finalize the reset. The LED indicator will flash 3 times to

confirm a successful reset.

time for 10 seconds. The LED

device's memory. **WAKE-UP MODE**

NOTE: All previously recorded activity and custom settings will be erased from the

The sensor's wake-up interval is set

to 12 hours by default to save battery life. Use the Wake Up Command Class to adjust the interval. Click the Z-Wave button 4 times quickly to wake the sensor up manually. The LED indicator will flash once to confirm the device is awake. During wake-up, the sensor turns the Z-Wave radio on for one minute to receive communication from the hub. Long wake-up interval will not affect how often the sensor reports to your hub so we recommend leaving the default setting to conserve battery.

The XS Sensor supports Group 1 for

ASSOCIATION

Lifeline communication and Groups 2-5 with up to 5 devices per group for basic on/off control. Use Group 2 for high temperature alerts; Group 3 for low temperature alerts; Group 4 for high humidity alerts; and Group 5 for low humidity alerts. See parameters 5-8 to set the thresholds. Please note that not all Z-Wave systems give users access to direct

PAGE 2

association settings so if you're

note sure where to find it, please

get in touch with our support and

we'll be happy to help.

ADVANCED SETTINGS

Parameter 2: Decide when the sensor should report low battery to the hub.

Values: 10-50 (% battery life). Default: 5

Size: 1 byte dec

Parameter 3: Set the temperature reporting threshold. The sensor will send a new temperature report if the difference compared to last reading exceeds the value set here. Values: 10 - 100 (degrees where 10 equals 1 degree); Default: 20. <u>Size:</u> 1 byte dec

reporting threshold. The sensor will report a new humidity value if the difference compared to last reading exceeds the value set here. Values: 1 - 50 (%); Default: 10. Size: 1 byte dec

Parameter 4: Set the humidity

reporting interval. The sensor will report temperature at least that Values: 0 – disable this setting; 1 –

Parameter 16: Set the temperature

480 (minutes); Default: 240. <u>Size:</u> 2 byte dec Parameter 17: Set the humidity

reporting interval. The sensor will report humidity at least that often. <u>Values:</u> 0 – disable this setting; 1 – 480 (minutes); Default: 240. Size: 2 byte dec Click the Z-Wave button 4 times

after updating the settings. We listed the most helpful settings above. For a complete list of

quickly to wake the sensor up

parameters, please go to www.support.getzooz.com or scan the QR code for a direct link to all of the settings.

Not sure how to access advanced



ask@getzooz.com MOUNTING

INDOOR MOUNTING

We recommend including your sensor to the Z-Wave network

- from the location you want to install it before you actually mount it. 2. Place the sensor on a dry and clean surface in the space you'd
- like to monitor temperature and humidity. Use the supplied adhesive tape to fix the sensor to the surface, with the battery slot and sensor perforation pointing down. 3. Test the sensor overnight to make sure it's reporting both
- temperature and humidity according to the settings. It may take up to 48 hours to adjust to the environment so give it a couple of days before evaluating the reports. **OUTDOOR MOUNTING**

1. Install the product outdoors

- under eve with the snap-on mounting bracket (included) for best results. 2. Add the sensor to Z-Wave from
- the area where it will be installed before mounting it. 3. Use the supplied screws to fix the
- mounting bracket to a dry clean surface around the spot you'd like to monitor.
- 4. Insert the sensor into the bracket, it should snap right on. Remember to position the device so that the sensor perforation is

pointing down. SNAP-ON MOUNTING **BRACKET**

PAGE 3



Scan to register your product for extended warranty and direct access to firmware files.

BATTERY POWER TIP! This sensor runs on a coin battery

with smaller capacity than the lithium CR batteries used in other sensors so you may see the battery readings fluctuate from low to higher readings when the sensor is awake during programming and testing. The battery will usually go back to its stable reading within a few hours so always allow a day or two after you see the first lower reading before checking on the actual battery life left for your device

This product can be included and operated in any Z-Wave network with other Z-Wave certified devices from other manufacturers and/or other applications. All non-battery operated nodes within the network will act as repeaters regardless of vendor to increase reliability of the network. This product features the latest Security 2 (S2) framework to remove smart home network hacking risks. This device is equip-ped with a unique authentification code for trusted wireless communication.

This product should be installed

- indoors or outdoors under eve upon completion of any building renovations. · Prior to installation, the device should be stored in a dry, dust-and-mold-
- proof place. Do not install the device in a place with direct sun exposure, high
- temperature, or humidity. Keep away from chemicals, water, and dust.
- · Ensure the device is never close to any heat source or open flame to
- prevent fire. No part of the device may be replaced or repaired by the user except for the batteries.
- WARRANTY This product is covered under a 12-

month limited warranty and 5-year extended warranty once registered. To read the full warranty policy, register your product, or file a warranty claim, please go to

ww.getzooz.com/warranty

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipme generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions

may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna · Increase the separation between the equipment and

- receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician The device has been evaluated to meet general RF
- exposure requirement. The device can be used in portable exposure condition without restriction.

All brand names displayed are trademarks of their respective holders. © Zooz 2023

PAGF 4