




IN THE BOX

Make sure you have everything shown here.

NOTE: The CR2032 battery comes pre-installed.

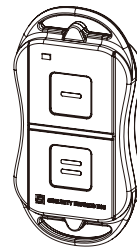


300-MHz Transmitter



Visor Clip

WHAT'S WHAT

The 300-MHz Transmitter has two programmable buttons and a status LED. Each button can be paired to a separate receiver or the same receiver.

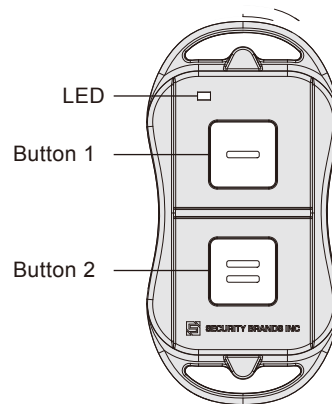


SETUP

1. On your 300-MHz receiver, set DIP switches to desired positions.

NOTE: For best results, we recommend using the Security Brands Receiver 300 (14-REC300).

NOTE: By default, both sets of DIP switches on the 300-MHz Transmitter are matched to the default DIP switch positions of the Receiver 300 and other 300-MHz receivers. For security reasons, we recommend using custom DIP switch positions.


NOTE: Some DIP switches may be labeled differently. The position labeled 10 corresponds to the position labeled 0 on the remote, and the DIP switches on some receivers have the off position labeled as OPEN.

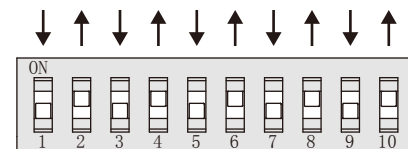

DIP Switches on Receiver 300 (default positions)


2. Open 300-MHz Transmitter unit by removing two screws on bottom side and pulling case apart. Remove visor clip if needed for easier access.

NOTE: Make sure the circuit board stays attached to the base of the remote unit and does not come off with the cover.

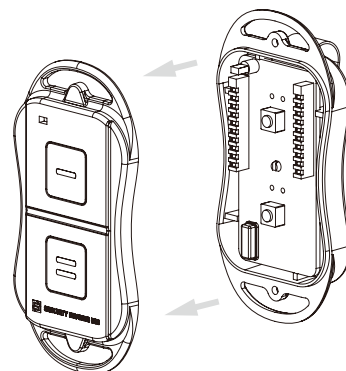

3. Find DIP switches on 300-MHz Transmitter unit corresponding to button you want to program.


NOTE: Pay attention to the markings on the circuit board showing which set of DIP switches corresponds to which button.

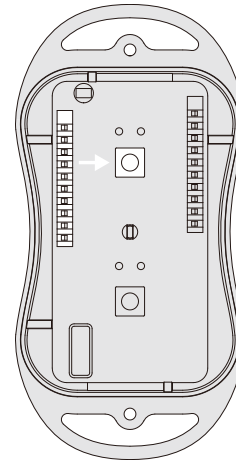

4. Set DIP switches to match those set on receiver.

5. Repeat procedure for second button if desired. Otherwise, close unit and secure with screws.

NOTE: The second button can be paired with the same or a different 300-MHz receiver.

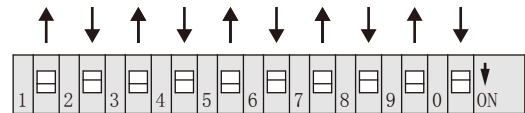

DIP Switches on 300-MHz Transmitter
(default positions for both buttons)

HOW TO USE

1. Make sure you are in range of 300-MHz receiver you want to control.
2. Press remote button linked to desired receiver. LED should light.
3. Receiver will respond and operate gate/door.

NOTE: If the receiver does not respond, make sure it has power and that the remote LED is lighting when a button is pressed. If not, check the battery. If the receiver still does not respond, make sure its antenna is not inside a metal box, the DIP switch positions match on both remote and receiver, and if it is a third-party receiver, make sure the frequency jumper is in the 300-MHz position.



WARNING! AUTOMATIC GATES CAN CAUSE SERIOUS INJURY OR DEATH! ALWAYS CHECK THAT THE GATE PATH IS CLEAR BEFORE OPERATING! REVERSING OR OTHER SAFETY DEVICES SHOULD ALWAYS BE USED!



**NEED
HELP**

call
(972) 474-6390
or email
techsupport@securitybrandsinc.com

Two-Year Limited Warranty

Visit securitybrandsinc.com/warranty/ for details



SECURITY BRANDS INC™
your *partner* in access control

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.