




MyForm Product Specification (Project Span)


TTC, NHT, ILM
23/11/2023

cobalt


THROUGH MOUNT VARIATION

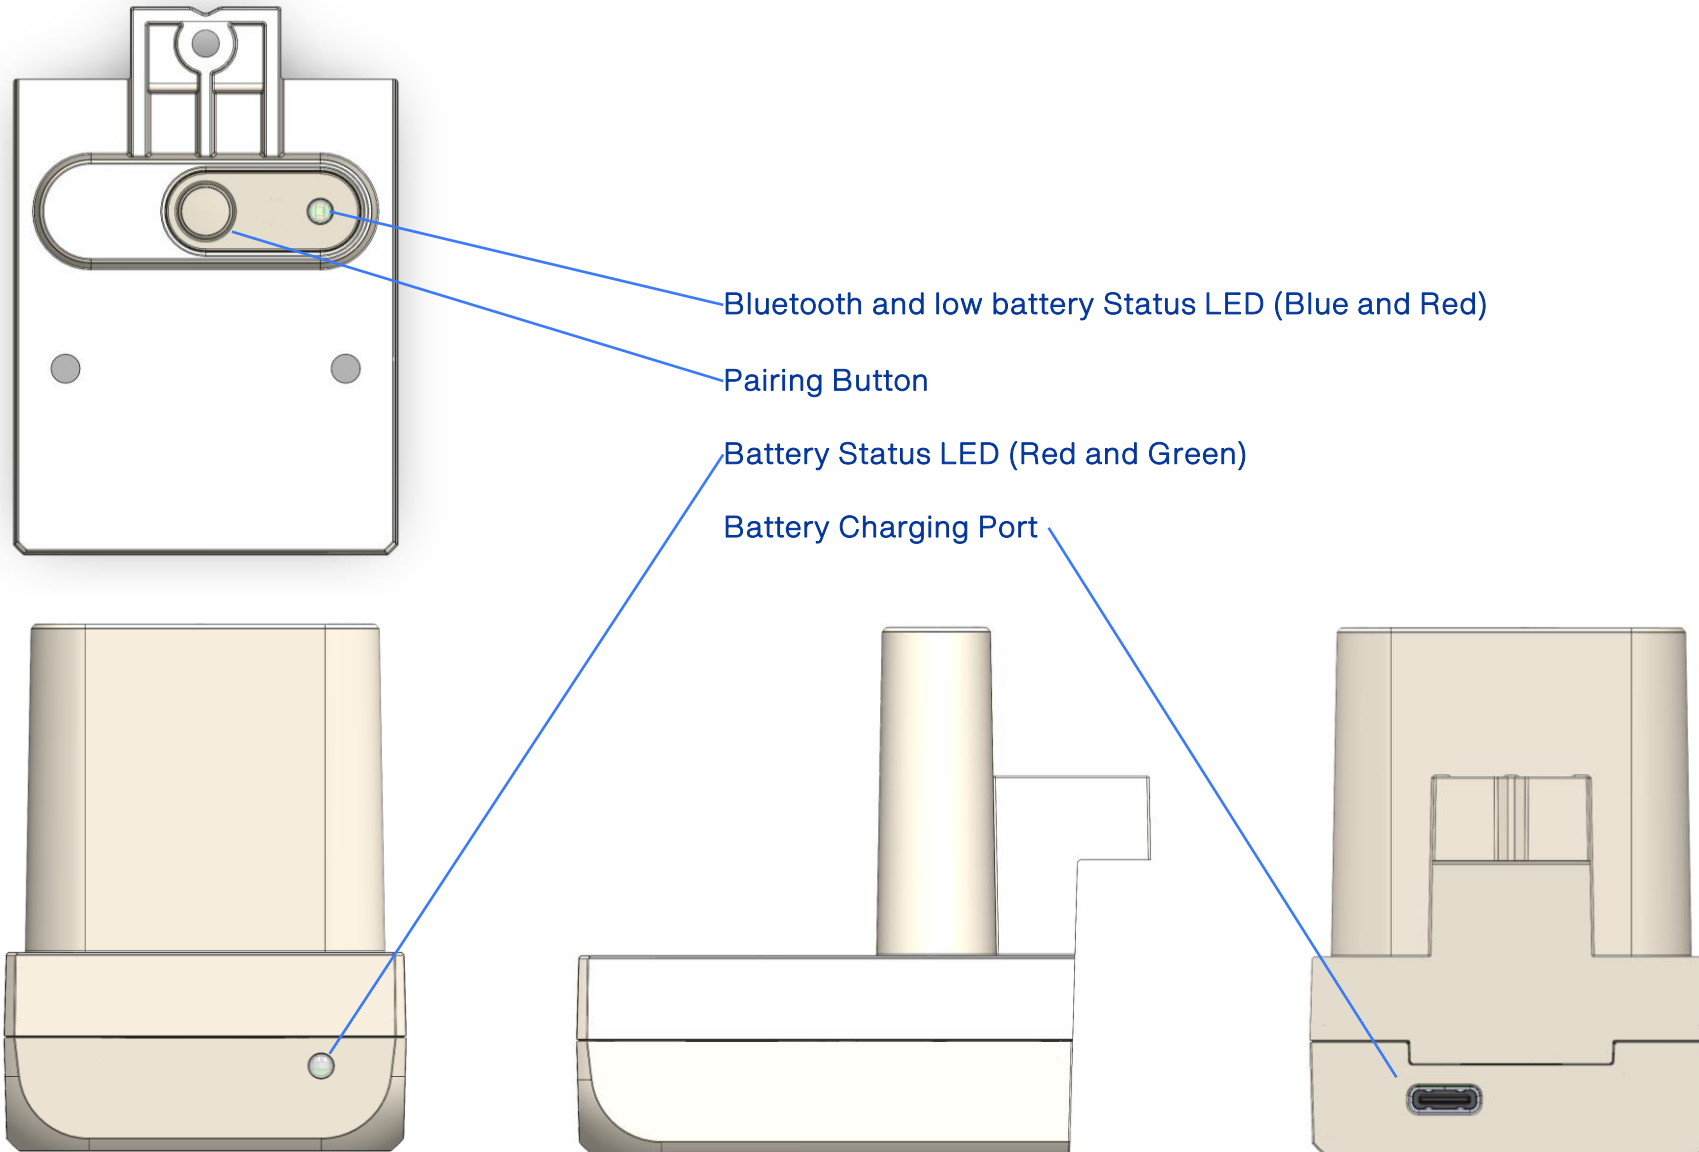

FRONT MOUNT VARIATION

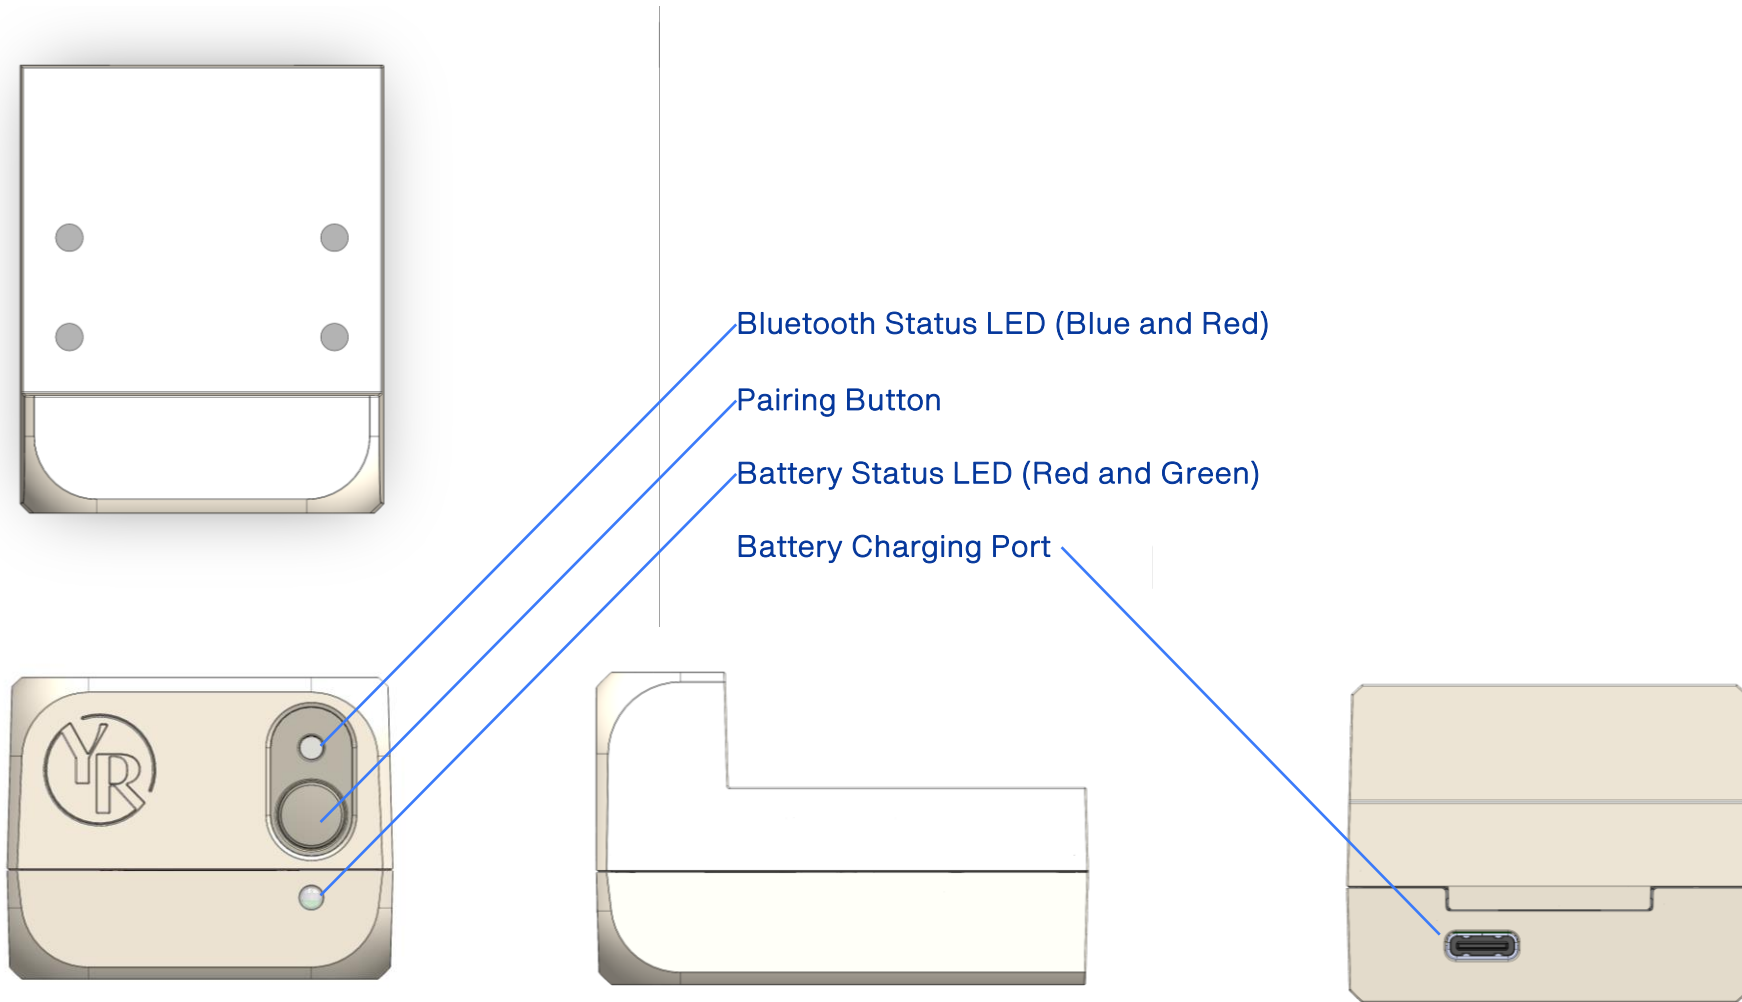


902 HOUSING UPPER THROUGH

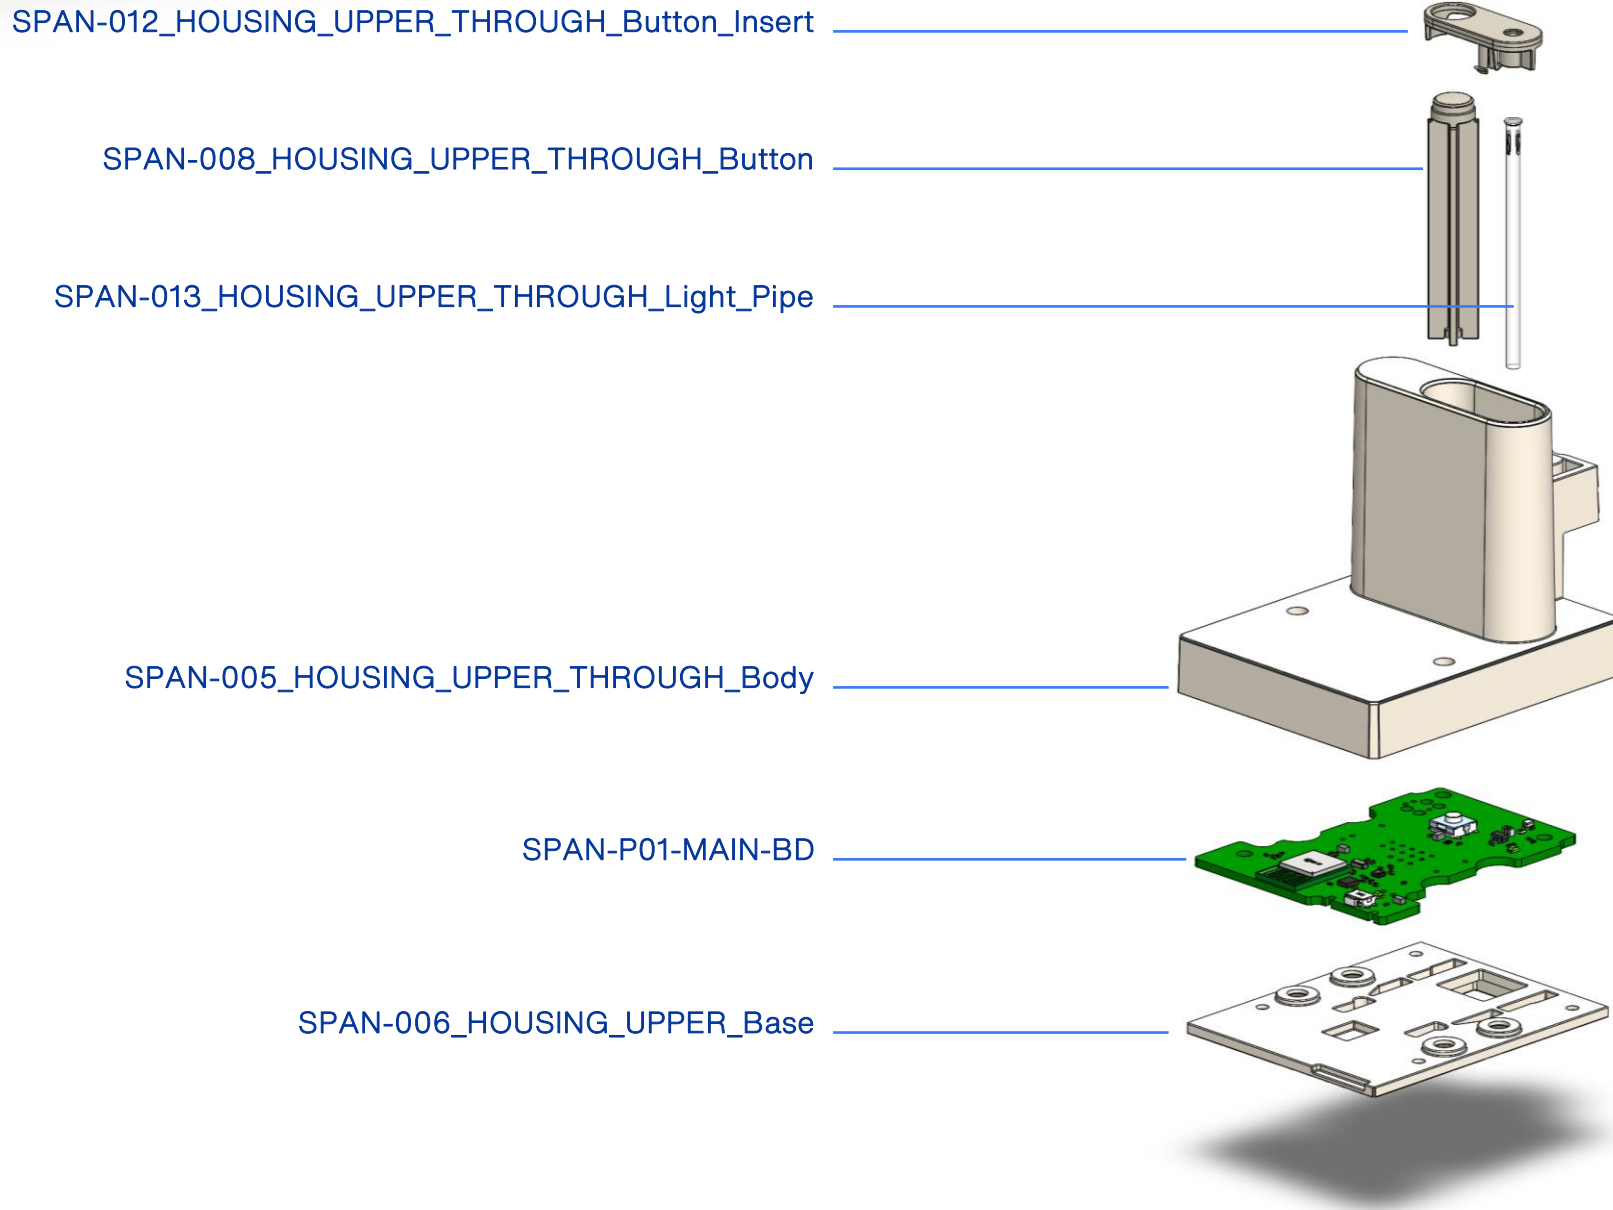

903 HOUSING UPPER FRONT

SPAN-007_HOUSING_UPPER_FRONT_Body

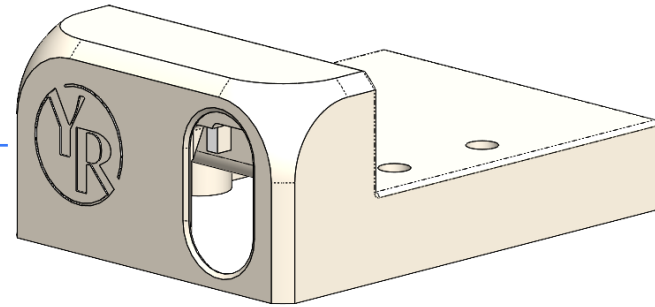


SPAN-011_HOUSING_FRONT_Custom_LED_Light_Pipe

SPAN-009_HOUSING_UPPER_FRONT_Button


SPAN-010_HOUSING_UPPER_FRONT_Insert

SPAN-P01-MAIN-BD


SPAN-006_HOUSING_UPPER_Base

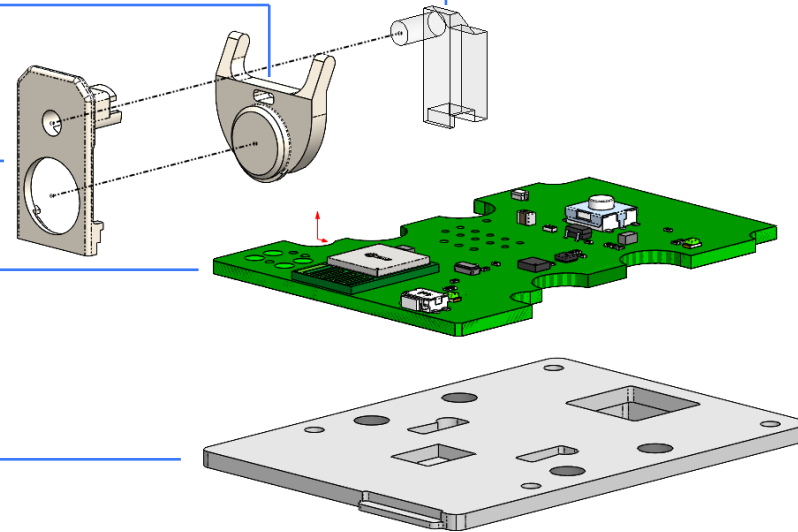


901 BATTERY MODULE

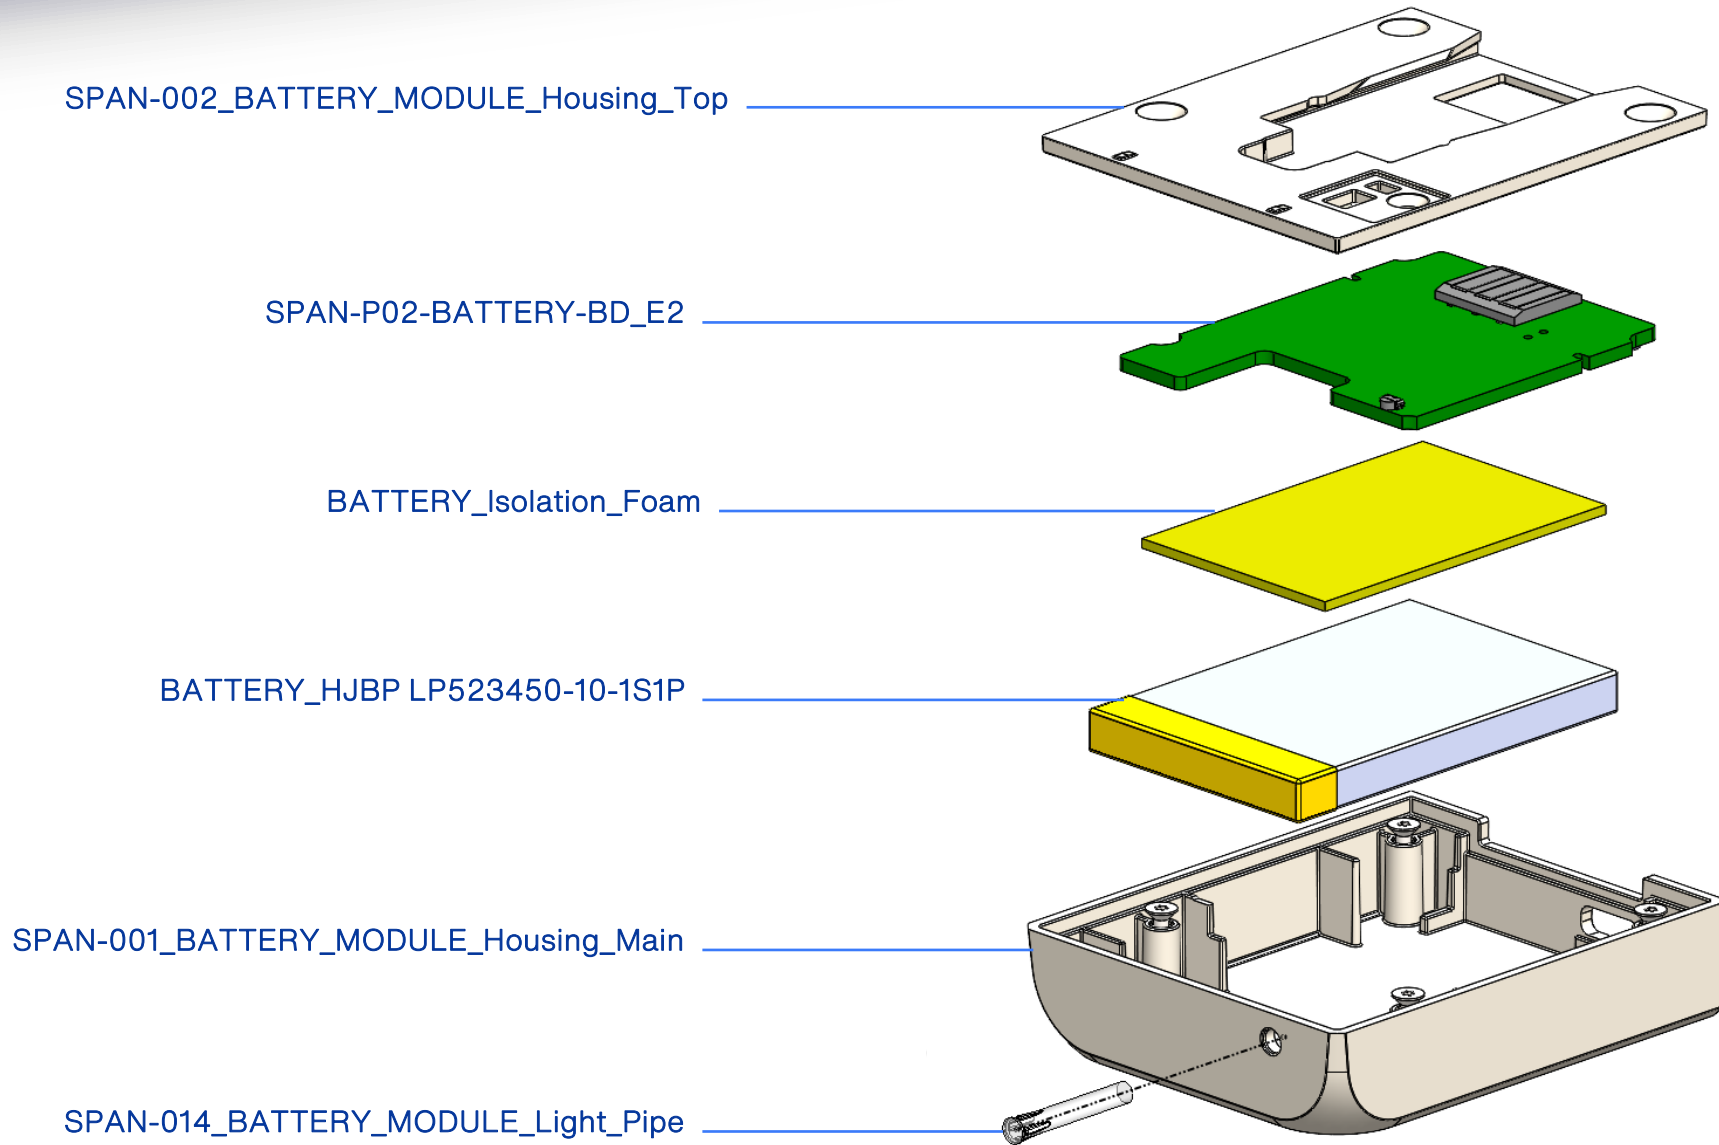

MAIN PCB – TOP LAYER

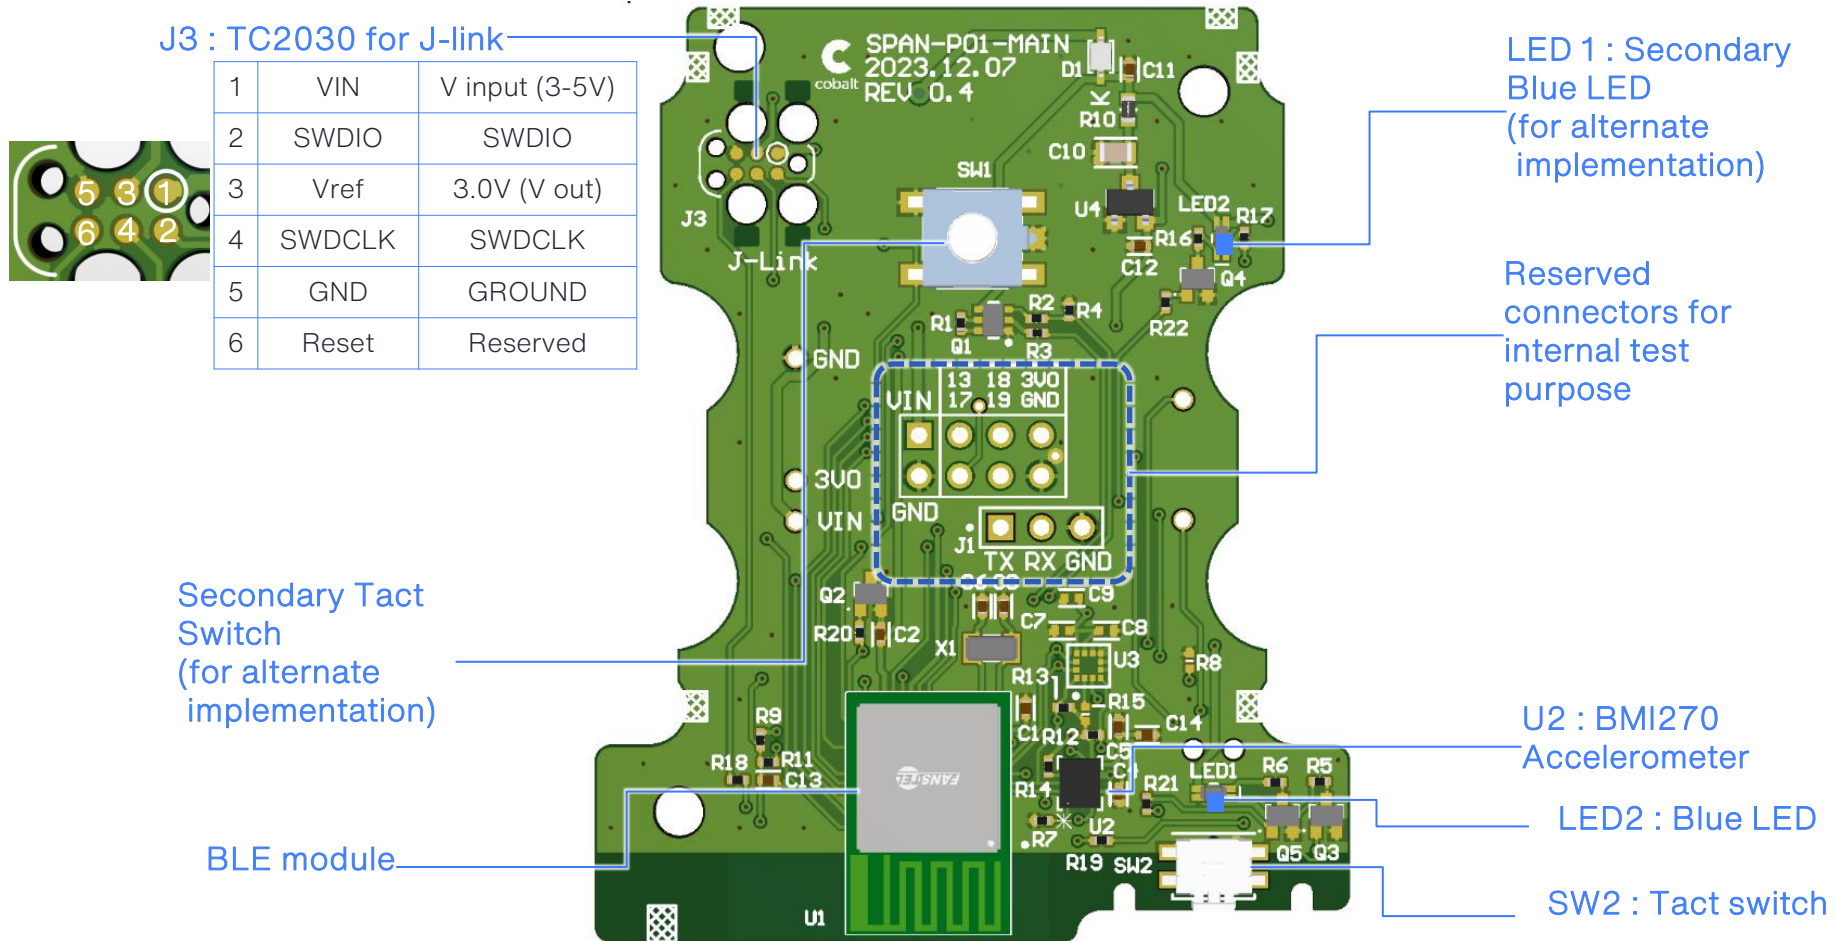

MAIN PCB – BOTTOM LAYER

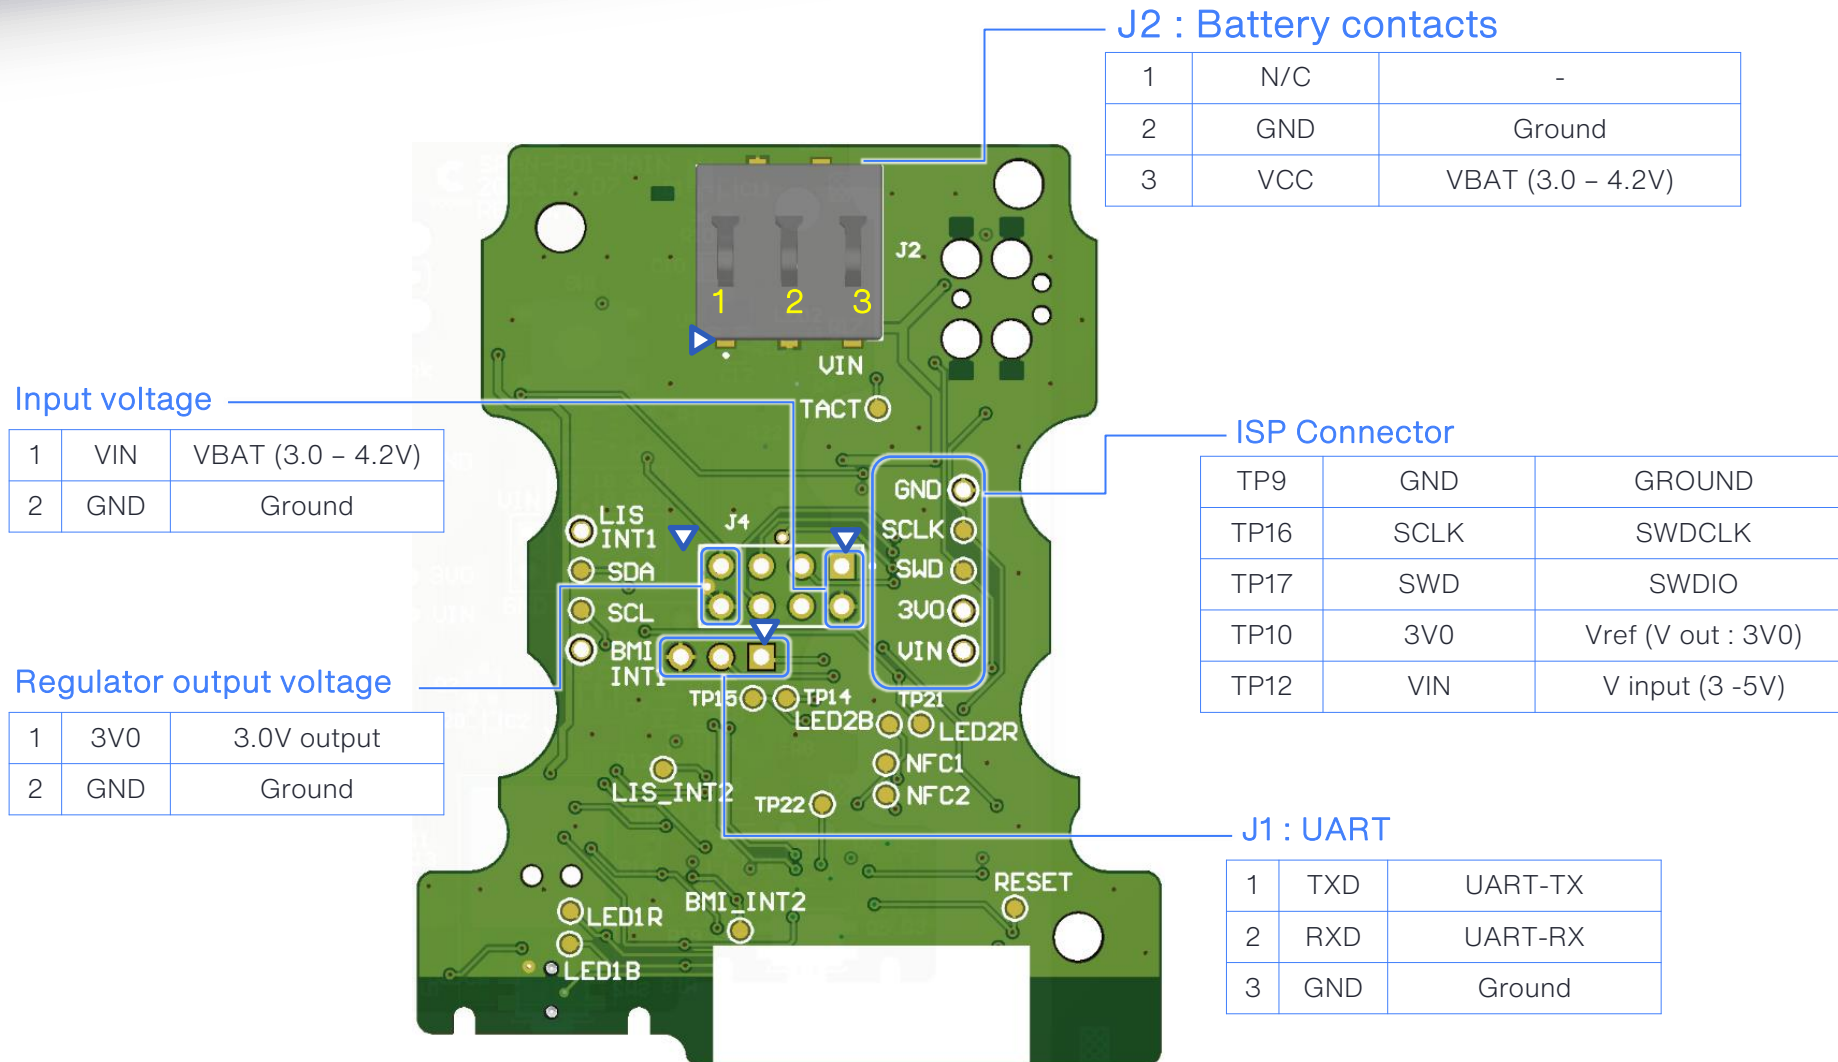

J2 : Battery contacts

1	N/C	-
2	GND	Ground
3	VCC	VBAT (3.0 – 4.2V)

Input voltage

1	VIN	VBAT (3.0 – 4.2V)
2	GND	Ground

Regulator output voltage

1	3V0	3.0V output
2	GND	Ground


ISP Connector

TP9	GND	GROUND
TP16	SCLK	SWDCLK
TP17	SWD	SWDIO
TP10	3V0	Vref (V out : 3V0)
TP12	VIN	V input (3 -5V)


J1 : UART

1	TXD	UART-TX
2	RXD	UART-RX
3	GND	Ground

BATTERY PCB – TOP LAYER

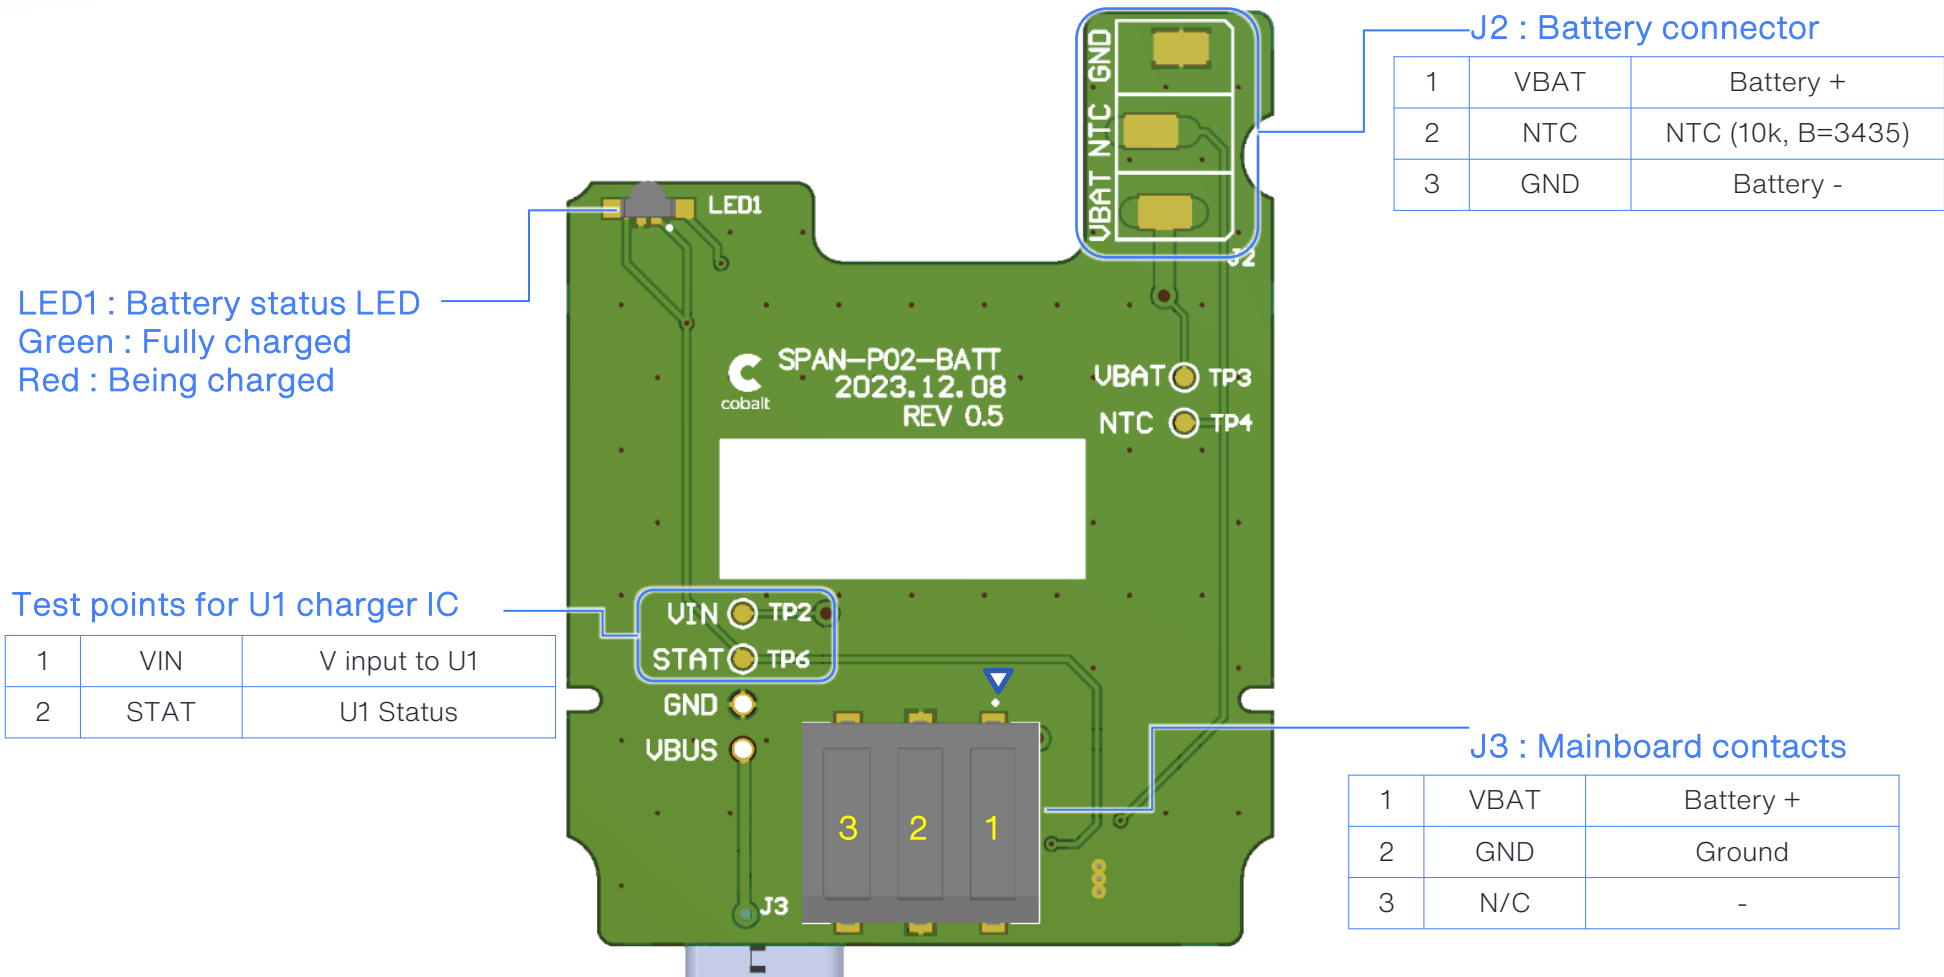

BATTERY PCB – BOTTOM LAYER

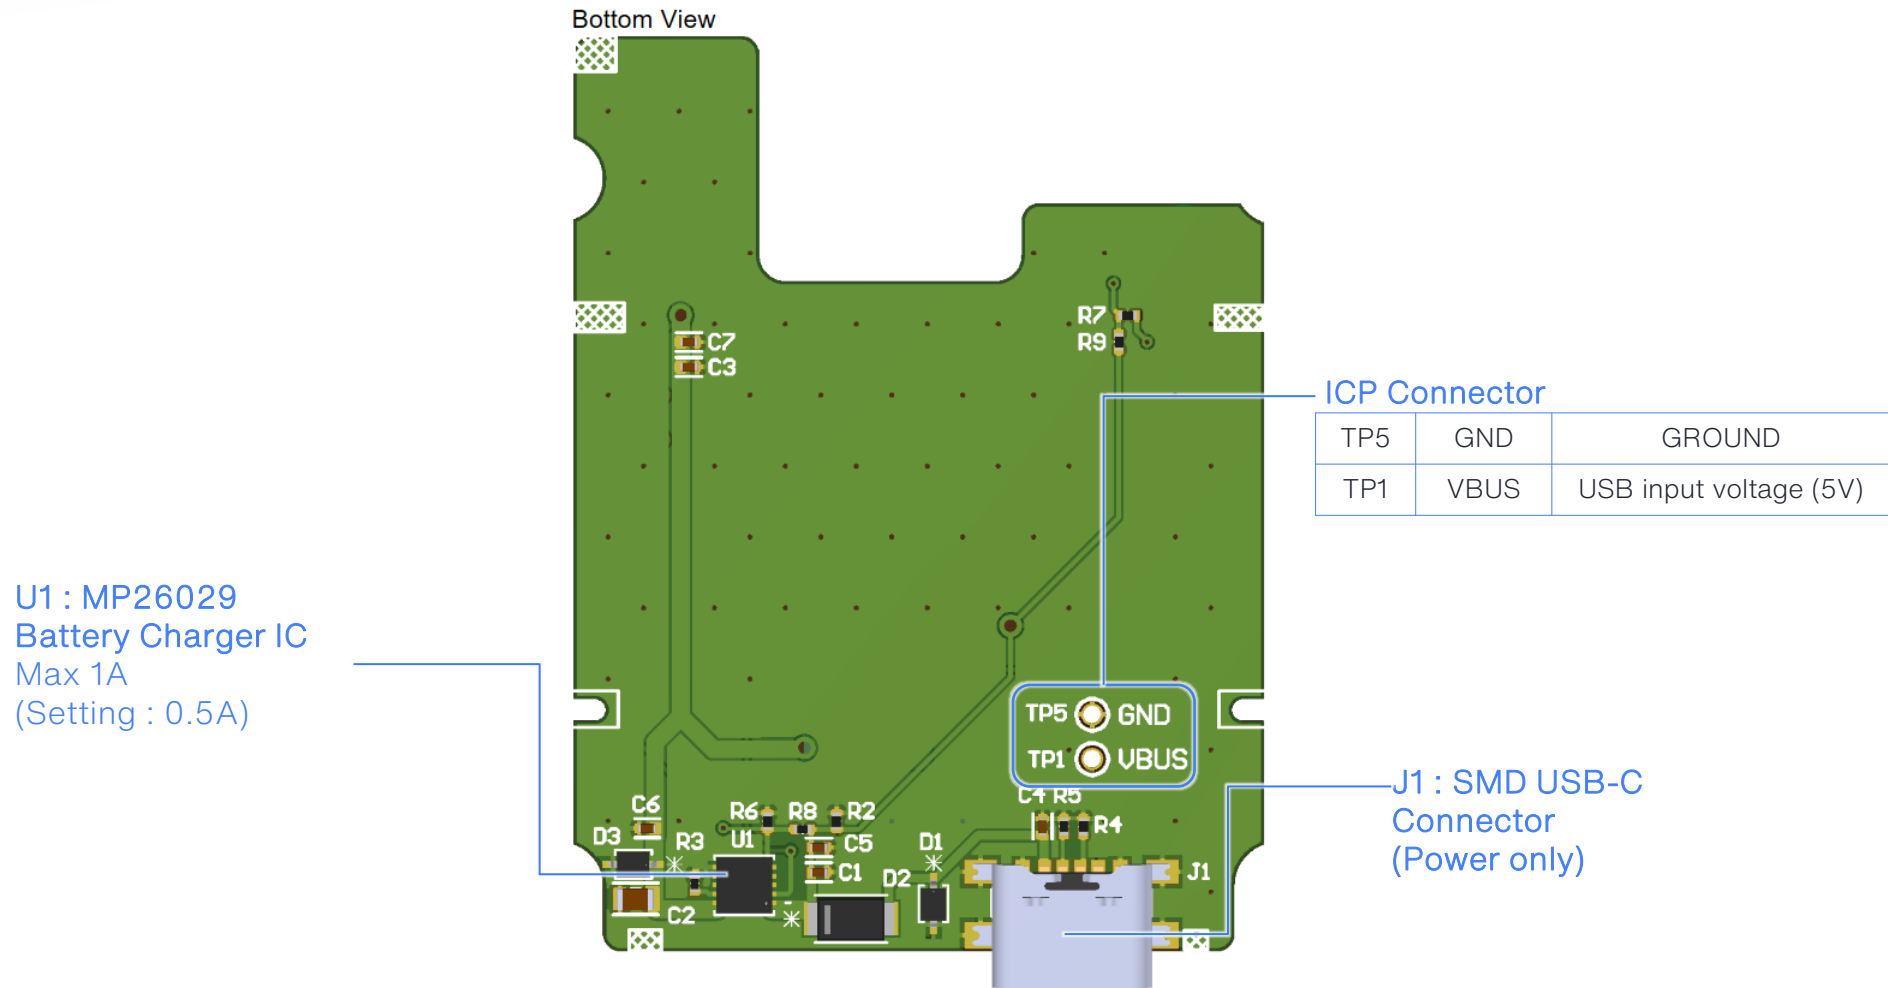

USER INTERFACE - THROUGH MOUNT VARIATION

Pairing Button


Manually activates pairing mode

Bluetooth Status LED

- Turns on for 1 second when battery connected
- In pairing mode Blinks once every 500ms in pairing mode for 1 minute, or until successfully paired
- Blinks SOS pattern when hardware error detected (cannot access accelerometer)

Battery Status LED

Shows red when plugged in and charging
Shows green plugged in and fully charged

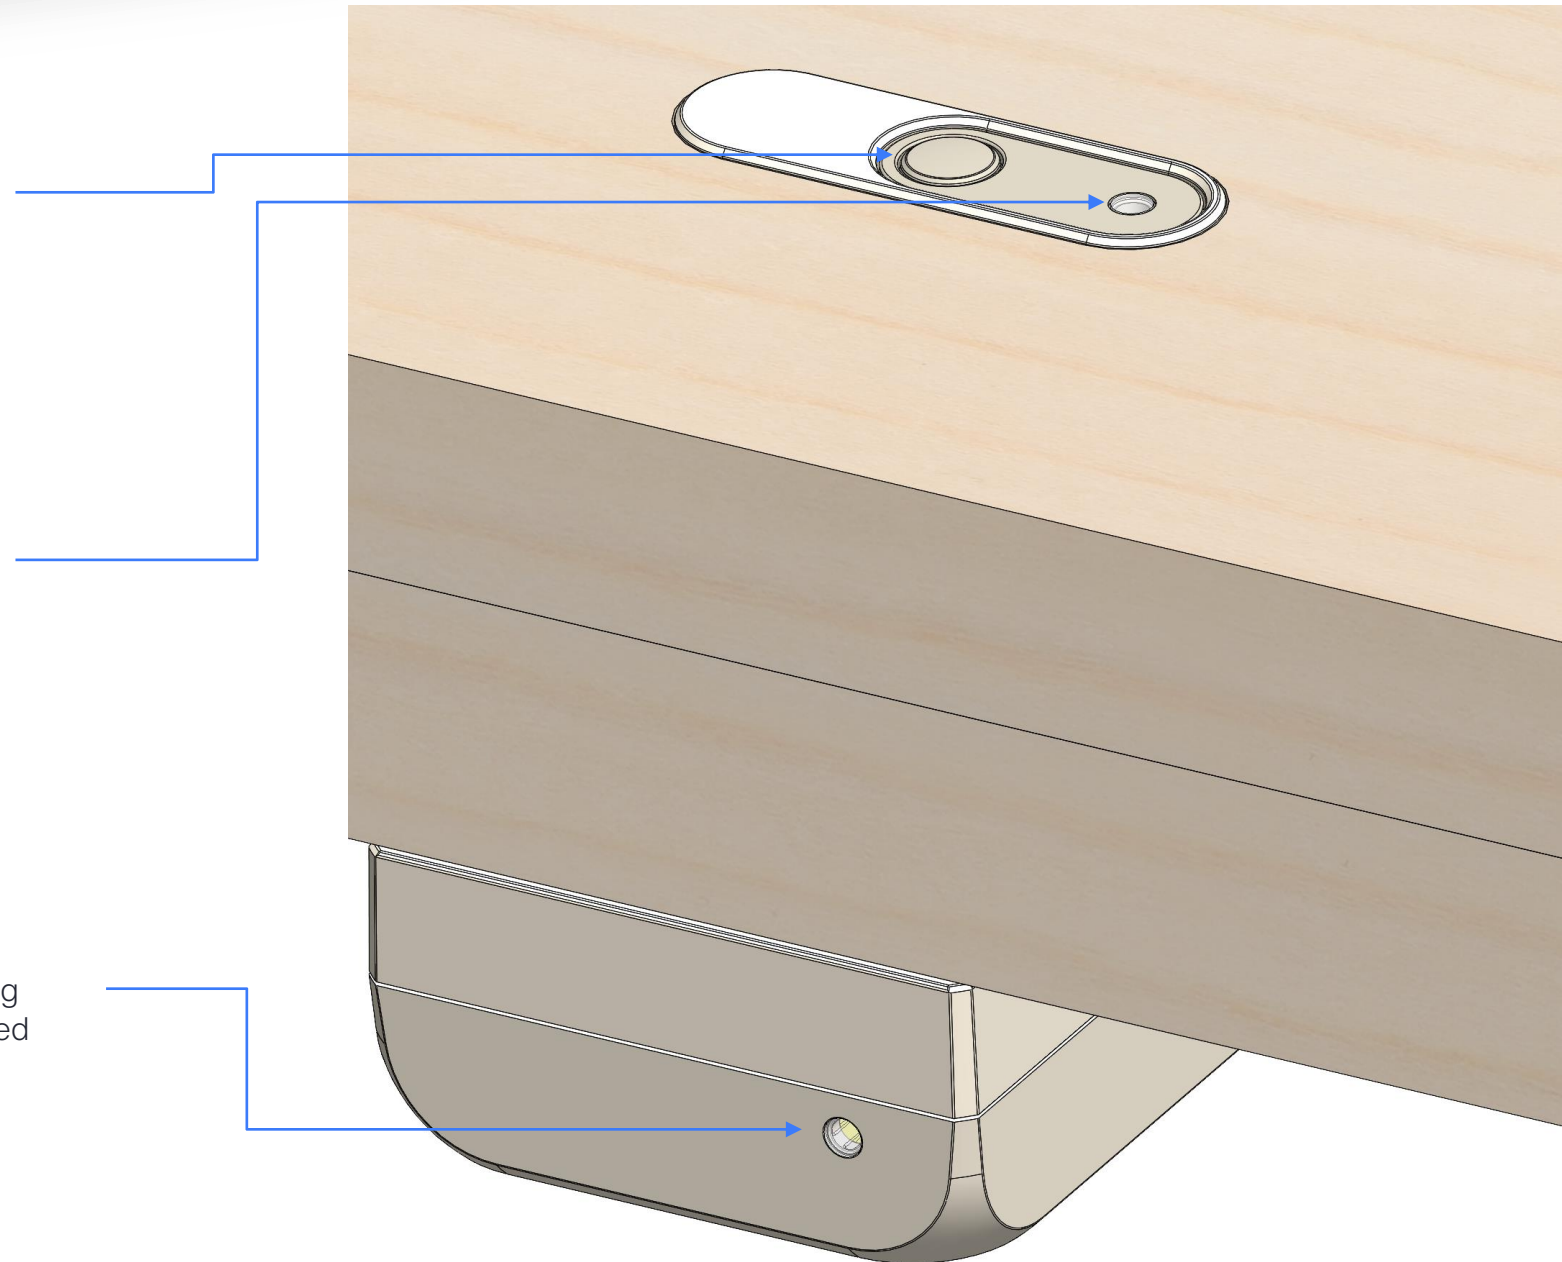

USER INTERFACE - FRONT MOUNT VARIATION

Bluetooth Status LED


- Turns on for 1 second when battery connected
- In pairing mode Blinks once every 500ms in pairing mode for 1 minute, or until successfully paired
- Blinks SOS pattern when hardware error detected (cannot access accelerometer)

Pairing Button

Manually activates pairing mode

Battery Status LED

Shows red when plugged in and charging
Shows green plugged in and fully charged

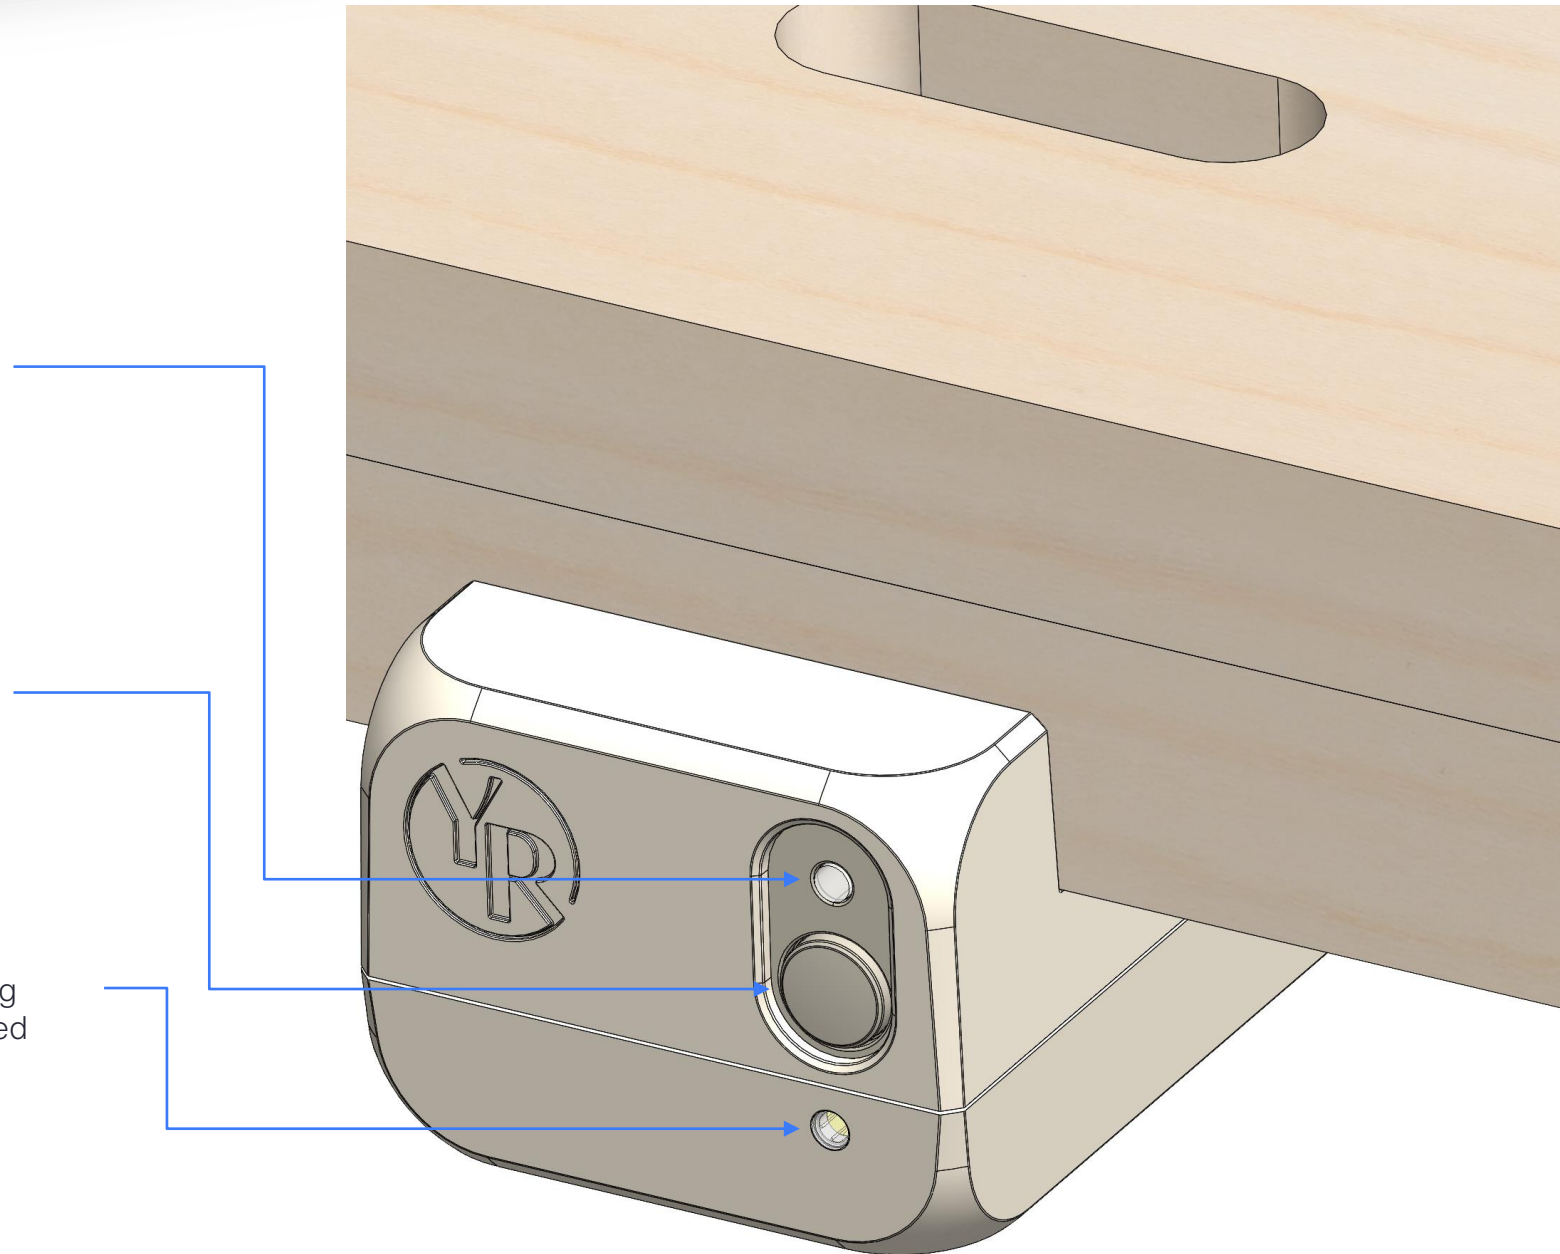

SPECIFICATIONS

<i>Attribute</i>		<i>Value</i>	<i>Remark</i>
Power	Charging input Voltage / Current	5V / 0.5A	USB-C connector
	Digital I/O voltage	3.0V	
	Charger IC	MP26029GQ-XXXX-Z	Li-ion charger (Max 1A)
Battery capacity	Battery voltage range	3.0 – 4.2V	
	Battery cut-off threshold	3.0V	
	Battery capacity	1000mAh	
Current consumption	Sleep	Less than 0.05mA	
	Advertising	0.05 – 0.08mA	
	Connection	1.7 – 2.2mA	
Main platform	BLE Module	BM832-P	Fanstel
	BLE SoC	nRF52832	Nordic Semiconductor
	Flash	512KB	
	RAM	64KB	
	Core	64 MHz Cortex-M4 with FPU	
Connectivity		Bluetooth Low Energy	2.4GHz ISM band
Battery pack Indicator	Green / Red dual LED	Green : Vf = max 2.5V, If = 30mA Red : Vf = max 2.5V, If = 30mA	Iv = 80 – 200mcd
Main module indicator	Blue / Red dual LED	Blue : Vf = max 3.4V, If = 2mA, Red : Vf = max 2.5V, f = 2mA	Iv = 20 -36mcd

FIRMWARE PROGRAMMING

0 - Preparation

- 1) SEGGER J-LINK
- 2) 5PIN – 2.5mm pitch Pogo probe (or TAC2030)
- 3) Firmware package
- 4) Laptop and nRF Connect for Desktop (Programmer)

1. Option 1 : Tag connect TAC2030

- 1) The main board has the Tag connect interface on the top layer.
- 2) Before connecting TAC2030, check the pin description of J3 and J-Link
- 3) Refer to the below example wiring diagram.

VTref	1 ● ● 2	NC	Pin	Description
Not used	3 ● ● 4	GND	19	VIN
Not used	5 ● ● 6	GND	7	SWDIO
SWDIO	7 ● ● 8	GND	1	Vref
SWCLK	9 ● ● 10	GND	9	SWDCLK
Not used	11 ● ● 12	GND	20	GND
SWO	13 ● ● 14	GND*	15	Reset
RESET	15 ● ● 16	GND*		
Not used	17 ● ● 18	GND*		
5V-Supply	19 ● ● 20	GND*		




J3 for TAC2030 connect

1	VIN	V input (3-5V)
2	SWDIO	SWDIO
3	Vref	3.0V (V out)
4	SWDCLK	SWDCLK
5	GND	GROUND
6	Reset	Reserved



TOP LAYER

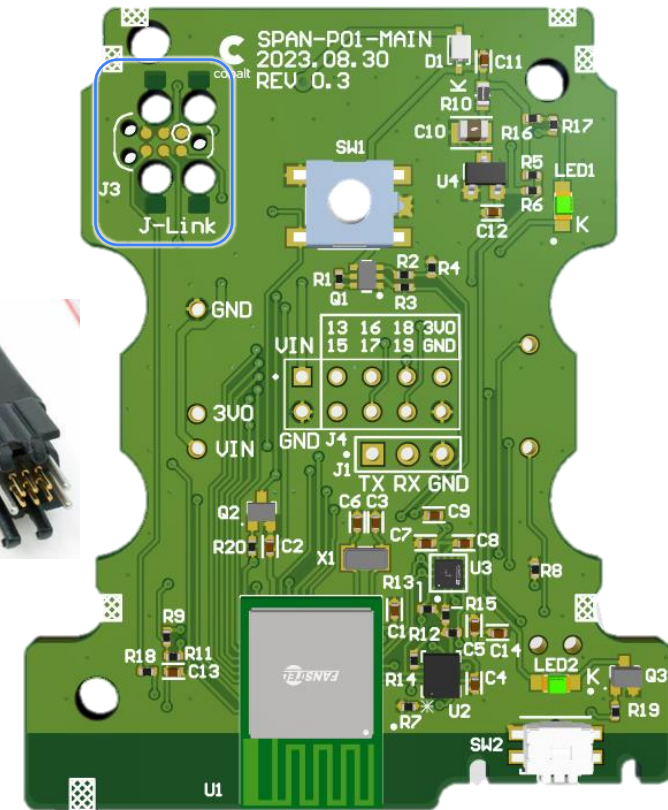

FIRMWARE PROGRAMMING

2. Option 2 : contacts for ISP

- 1) The bottom layer also has the ISP contact for firmware programming.
- 2) They are designed for ICT jig.
- 3) If ICT jig doesn't have the programming feature, Pogo probe can be used.
- 3) Refer to the below example wiring diagram.

Pogo probe




VTref	1 ● ● 2	NC
Not used	3 ● ● 4	GND
Not used	5 ● ● 6	GND
SWDIO	7 ● ● 8	GND
SWCLK	9 ● ● 10	GND
Not used	11 ● ● 12	GND
SWO	13 ● ● 14	GND*
RESET	15 ● ● 16	GND*
Not used	17 ● ● 18	GND*
5V-Supply	19 ● ● 20	GND*

Pin	Description
20	Ground
9	SWDCLK
7	SWDIO
1	VTref
19	5V-Supply

TP	Signal	Descro[topm
9	GND	GROUND
16	SCLK	SWDCLK
17	SWD	SWDIO
10	3V0	Vref (V out : 3V0)
12	VIN	V input (3 -5V)



BOTTOM LAYER

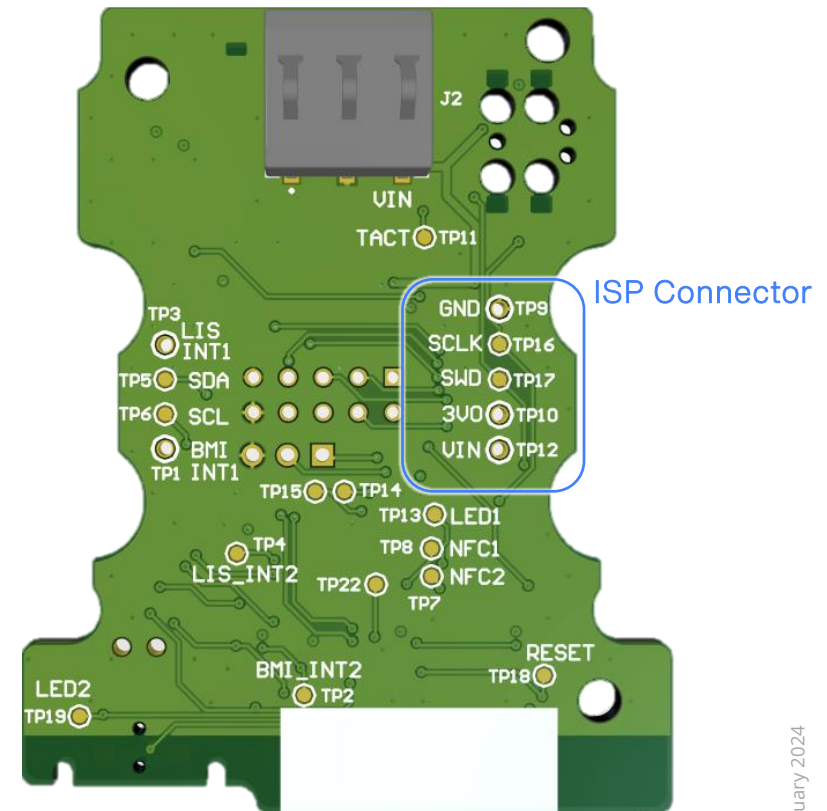

FIRMWARE PROGRAMMING

3 – Running nRF Connect for Desktop and Programmer

- 1) Connect the Segger J-Link to the device
- 2) Run nRF Connect for Desktop and run Programmer

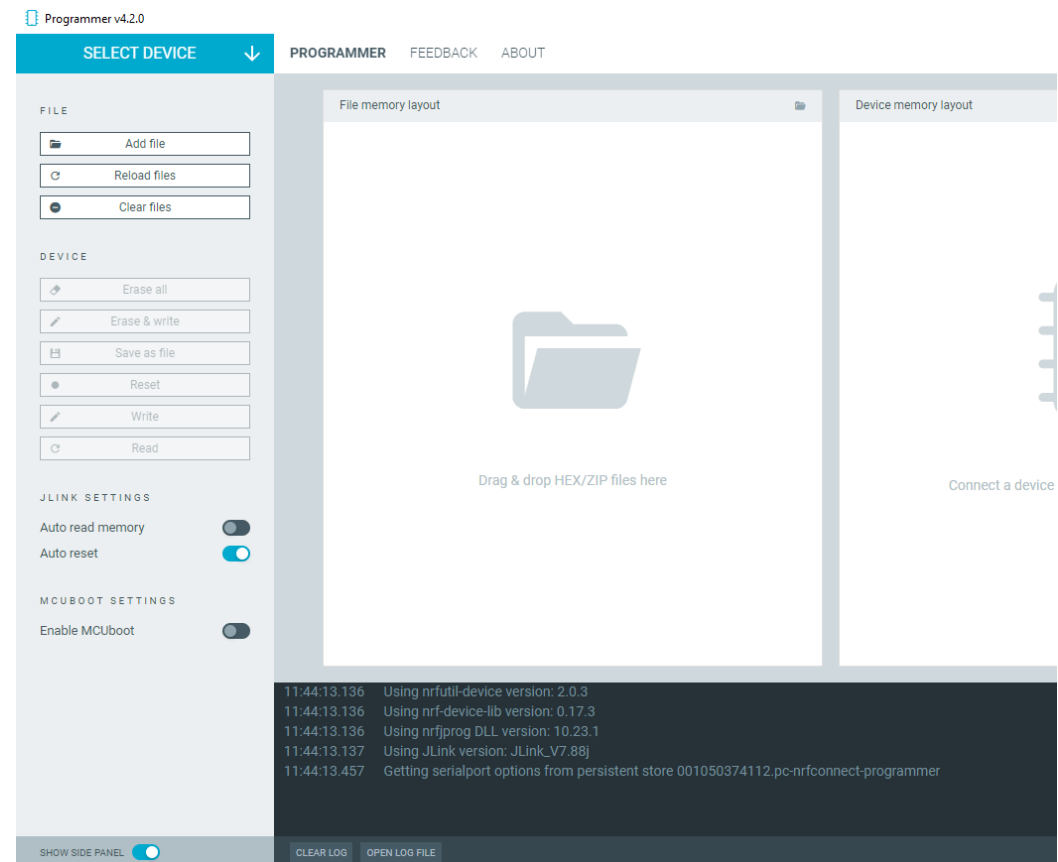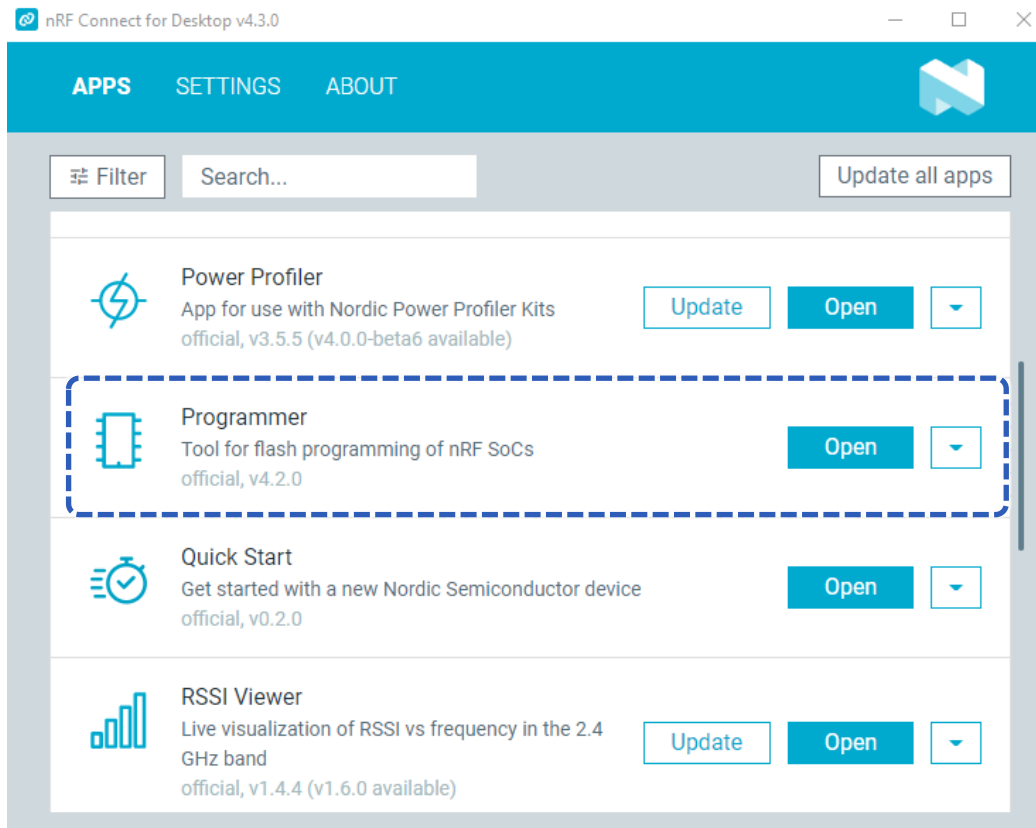

FIRMWARE PROGRAMMING

4 – Generating Identity-out file

- 1) Check the “identity-base.bin” file if it is the latest version.
- 2) Check if “identity-out.bin” and “identity-out.hex” exist in the same folder. If yes, check the bin file if it was generated before and delete them.
- 3) Run identityMain.exe
- 4) Then, identity-out.bin and identity-out.hex will be generated.
- 5) For the serial data format, refer to the word file “SPAN_SN_CB_SPEC.docx”

Identity.bin	12/12/2023 7:06 PM
Identity.hex	12/12/2023 9:32 PM
Identity_Original.bin	12/12/2023 7:06 PM
Identity-base.bin	12/12/2023 7:06 PM
IdentityMain.exe	20/12/2023 5:11 PM
IdentityMain.zip	9/01/2024 9:50 AM
Identity-out.bin	9/01/2024 10:21 AM
Identity-out.hex	9/01/2024 10:21 AM

Identity-base.bin

Template file for the output

IdentityMain.exe

Executable file to generate the identity-out.bin and identity-out.hex file.

Identity-out.bin / identity-out.hex

Output file with serial data.
The information can be viewed with Hex editor.
Identity-out.hex is used during the firmware programming.

```

ImHex - Identity-out.bin
File Edit View Workspace Extras Help
Hex editor
Address 00 01 02 03 04 05 06 07 08 09 0A 0B 0C 0D 0E 0F ASCII
00000000: 01 01 00 81 FD E8 07 01 09 00 01 00
  
```

FIRMWARE PROGRAMMING

5 – Firmware setting

- 1) Connect the Segger J-Link to the device
- 2) Add the 3 firmware files to “File Memory layout”

Firmware and Bootloader

File name starts with

Firmware : “nrf52832_xxaa_yr_sensor_b17-with_bootloader_setting.hex”

Bootloader : nrf52832_xxaa_s132_yr_bl_b11.hex

* These file names will be updated according to the firmware revision.

Identity-out

File name : identity-out.hex

Softdevice


File name : s132_nrf52_x.x.x_softdevice.hex



FIRMWARE PROGRAMMING

6 – Firmware programming

- 1) Click the “Erase & Write”
- 2) During the firmware programming, the device will be reset and 4 LEDs will blink once.
- 3) Check the log message when the firmware programming is done.

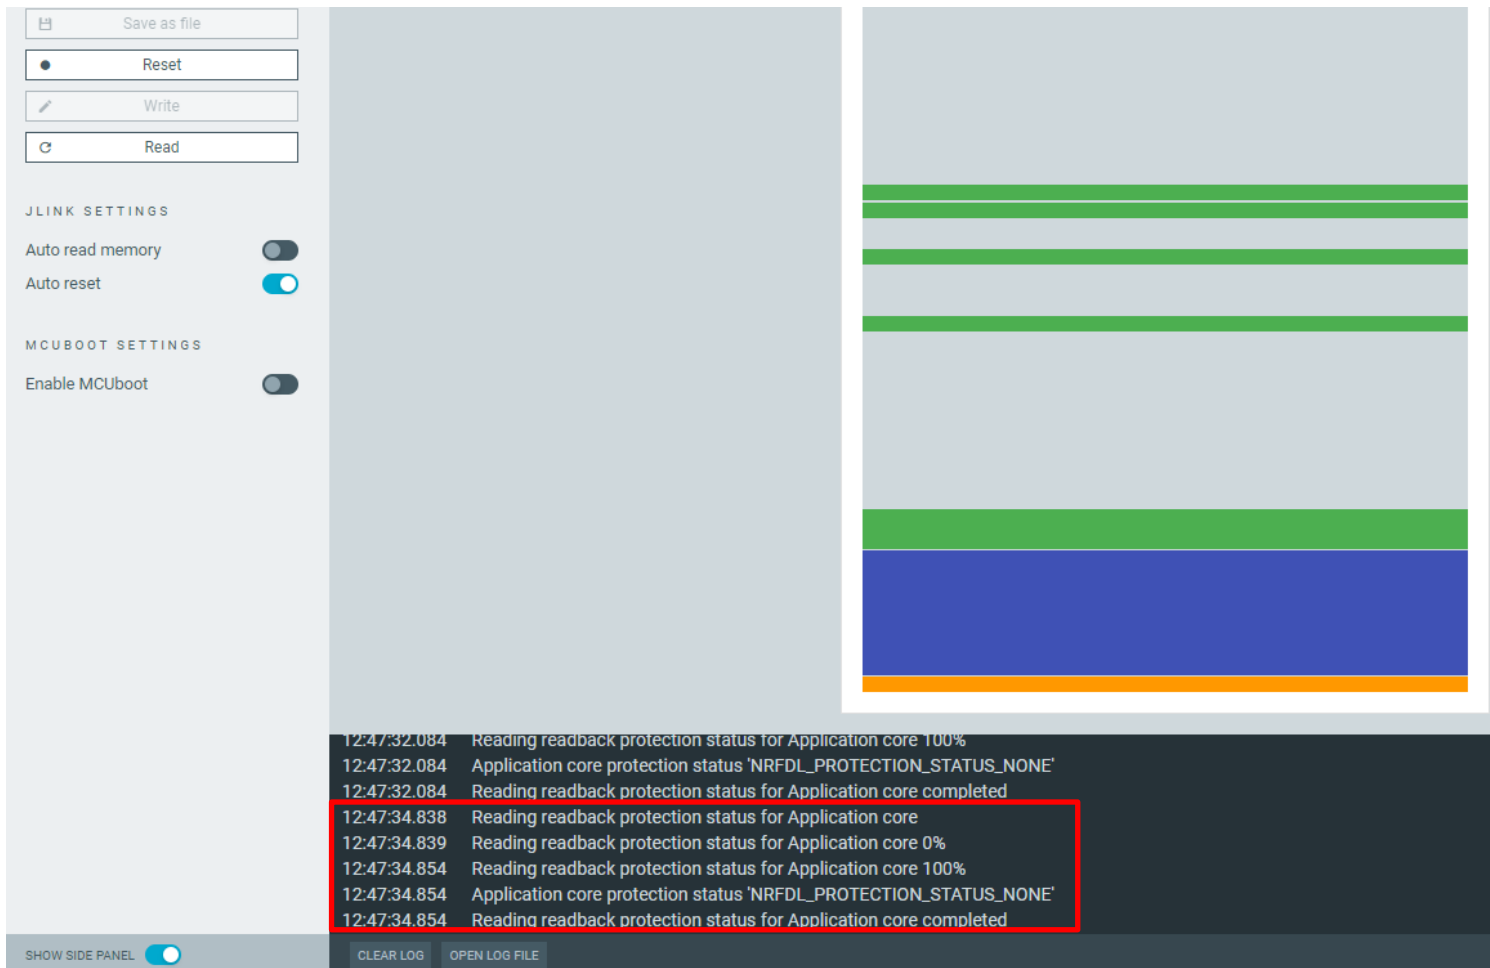

The screenshot displays a firmware programming interface. On the left, there are control buttons: "Save as file", "Reset", "Write", and "Read". Below these are "JLINK SETTINGS" with "Auto read memory" (disabled) and "Auto reset" (enabled), and "MCUBOOT SETTINGS" with "Enable MCUboot" (disabled). The main area shows a progress bar with segments in green, blue, and orange. At the bottom, a log window shows the following messages:


```
12:47:32.084 Reading readback protection status for Application core 100%
12:47:32.084 Application core protection status 'NRFDL_PROTECTION_STATUS_NONE'
12:47:32.084 Reading readback protection status for Application core completed
12:47:34.838 Reading readback protection status for Application core
12:47:34.839 Reading readback protection status for Application core 0%
12:47:34.854 Reading readback protection status for Application core 100%
12:47:34.854 Application core protection status 'NRFDL_PROTECTION_STATUS_NONE'
12:47:34.854 Reading readback protection status for Application core completed
```

The last four lines of the log are highlighted with a red box. At the bottom left, there is a "SHOW SIDE PANEL" toggle (enabled) and "CLEAR LOG" and "OPEN LOG FILE" buttons.

YR YOUR
REFORMER

MyForm

Improve your form with real-time feedback.

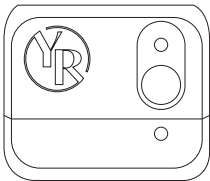

This cutting-edge device attaches to most reformer beds and seamlessly syncs with the Your Reformer App, giving you live feedback on consistency, control and speed, during your class.

- Real-time feedback for improved technique.
- Personalised goals for accountability.
- Easy-to-understand progress tracking.
- Hassle-free setup and syncing with Your Reformer App.
- Works with all Your Reformer beds and most other brands.
- Compact design for minimal distraction.

Items included

MyForm device, charging cable, double sided tape, screws.

Go to this link for our installation video.
yourreformer.com.au/myform-installation


INSTALLATION OPTION A: USING DOUBLE SIDED TAPE

①

Peel off one side of the double sided tape and place it on the top side of the MyForm device. Press the tape firmly.

②

Peel off the other side of the tape and place the MyForm device a maximum of 3cm away from the headrest (Image below). This makes sure that it doesn't hit the side of the bed frame or any stoppers when exercising. Press the device firmly for best results.

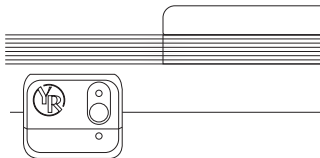

INSTALLATION OPTION B: USING SCREWS

Items needed

Cordless Drill

①

Take the MyForm out of the box, the bottom section of the device is the battery. Slide the battery forward to detach it from the MyForm tracker.


②

IMPORTANT: Ask for another person to help you with the lifting of the carriage.

Release all the springs, remove both shoulder rests and gently pull out the ropes from the grips. Place a clean cloth or towel next to the bed as you'll be placing the carriage on the ground. Make sure you and the other person slowly lift the carriage off the bed together with proper posture. Lift the carriage and place it on the ground with the upholstery facing down.


③

Place the MyForm tracker a maximum of 3cm away from the headrest (Image below). This makes sure that it doesn't hit the side of the bed frame or any stoppers when exercising.

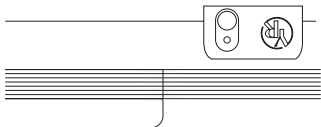

④

Using the cordless drill, carefully drill the four screws into the four holes on the MyForm tracker.

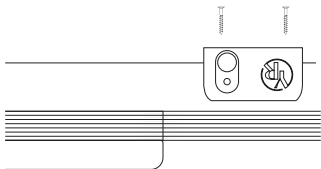

⑤

Once all the screws have been drilled in, carefully lift the carriage with the other person, and slowly place it on the bed frame like it was before.

⑥

After the battery has been fully charged, slide it back into the MyForm tracker.

Go to this link for our warranty information.
yourreformer.com.au/myform-warranty

 **YOUR
REFORMER**

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

ISED Statement

- English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

- French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux CNR exempts de licence d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes :

(1) Cet appareil ne doit pas causer d'interférences.

(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

This device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 2.5 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé.

Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

cobalt