Instruction manual for electronic class all-in-one machine



Dear users:

Welcome to use the company's production of 32-inch electronic class all-in-one machine, this intelligent display terminal all-in-one machine using advanced integrated circuits and high-quality LED display, with low power consumption, stable performance, no and other advantages. This intelligent display terminal all-in-one machine is easy to operate, safe, and has HDMI output. The interactive intelligent tablet can also be used in intelligent warehousing, industrial control automation equipment and other systems.

For reliable, long-term normal use and optimal use, please read this instruction manual carefully

Precautions

1. Please use the power adapter that comes with it, and if you need it, please pay attention to provide a qualified power supply.

2. Do not put the machine in the sun, nor do you store or use it in a cold, hot or humid place.

3. When using, the display screen should be protected from strong light to ensure the image effect and long-term use of the machine.

4. Although there are anti-shock protection measures inside the machine, it should also avoid violent collisions.

5. The all-in-one intelligent display terminal equipped with touch function should avoid using metal objects for operation when operating, so as not to damage the surface of the touch screen.


6. Do not use chemical reagents or solvents to scrub the machine, use a soft cloth to wipe off the dust on the machine to ensure that the case is not scratched.


7. There are no user-adjustable components in the machine, non-professionals, please do not open the machine by yourself or try to repair the product by yourself to avoid unnecessary damage.

Table of Contents

- 1. Product Features ------ 3
- lacksquare Connection between power supply, signal cable and machine ---- 5
- II. Operating Instructions ----- 6
- III. Technical Parameters ------ 11
- IV. Annexes ----- 11
- V. Frequently Asked Questions Exclusion ------ 12

1. Product features:

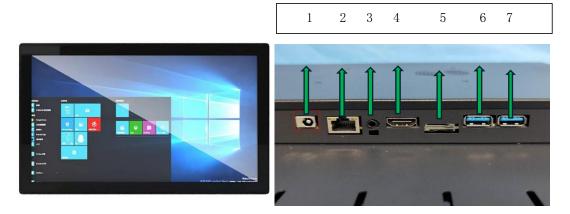

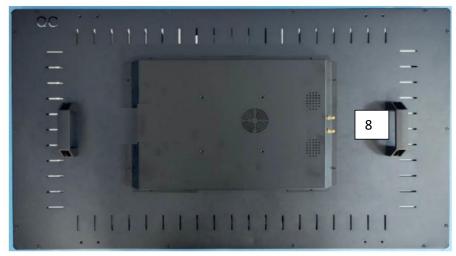

- 1. DC 12V input voltage interface
- 2. LAN input port: HDMI output port
- 3. 3.5mm audio output port
- 4. HDMI output port
- 5. SIM card/TF card Bears the card slot
- 6. USB3.0 interface
- 7. USB OTG interface
- 8. WIFI/Bluetooeh antenna

• Matching power supply

- 1. The power cord with the prefix of the national standard
- 2. DC 2.5 interface power

adapter



• Connection between the adapter and power cord and the unit

1. Insert the matching prefix power cable into the corresponding interface of the power adapter, make sure that it is in good contact, and then plug the DC2.5 power input terminal at the other end into the DC power input port of the device (product feature "1" position).

2. When using the machine, please use the power adapter that is supplied with the machine, if you need to use other types of power supply for other reasons, please note that the supply power should be not less than 60W DC12V±10% qualified communication power supply.

2. Operating instructions

• Firmware update operation instructions

First of all, you need to install ADB on the computer, prepare a double-ended USB data cable, and plug it into the USB near the power port of the Android board
If the motherboard is booted on, you need to turn on USB mode

	设备		,			
	¥	USB				
÷	USB					م
	连接到 PC	;				

朗趣固件 >	烧录方法	AndroidTool	Release v2.35 >
--------	------	-------------	-----------------

│ 名称 ^	修改日期	类型
📙 bin	2020-07-31 17:38	文件夹
🔄 Language	2020-07-31 17:38	文件夹
Log	2020-07-31 17:38	文件夹
Output	2020-07-31 17:38	文件夹
🔀 AndroidTool.exe	2015-08-11 11:04	应用程
Android开发工具手册.pdf	2015-08-11 11:04	WPS F
Config.cfg	2016-06-23 15:32	CFG 戈
🔲 🗟 config.ini	2015-08-04 11:22	配置设

If the ADB tool is normal, an ADB device will be found

ŧ		地址	名字	路径				
1		0x00000000	Loader	\rockdev\RK3288VbootLoader_V2.30	1.1			
2	~	0x00000000	Parameter	\rockdev\rk3288box=3.10=uboot.par				
3	~	0x00004000	Misc	\rockdev\Image\misc.img				
4	7	0x00006000	Resource	\rockdev \Image \resource. img				
5	~	0x0000E000	Kernel	\rockdev \Image \kernel. img				
6	~	0x00016000	Boot	\rockdev\Image\boot.img				
7	•	0x00026000	Recovery	\rockdev\Image\recovery. img				
8	•	0x00092000	System	\rockdev\Image\system.img				
9		0x0039C000	Userdata	\rockdev\Image\data.img				
10		0x00036000	Backup					
oad	ler 1	/er:2.30	执行	切换 低格 清空				

		地址	名字	路径		
		0x00000000	Loader	\rockdev\RK3288UbootLoader_V2.30		
	~	0x00000000	Parameter	\rockdev \rk3288box=3. 10=uboot. par		
8 8	7	0x00004000	Misc	\rockdev\Image\misc.img		
Ş.,	~	0x00006000	Resource	\rockdev\Image\resource. img		
a R	~	0x0000E000	Kernel	\rockdev \Image \kernel. img		
č.	◄	0x00016000	Boot	\rockdev\Image\boot. img		
ŝ	•	0x00026000	Recovery	\rockdev\Image\recovery.img		
1	•	0x00092000	System	\rockdev\Image\system.img		
		0x0039C000	Userdata	\rockdev\Image\data.img		
0		0x00036000	Backup			
bad	er V	'er:2.30	执行	切换低格清空		

Android开发工具 v2.35		8.	×
下载镜像 升级固件 高级功能 固件 升级 切换 擦除Flash			
固件版本: Loader版本:	芯片信息:		
固件:			
Demo			
发现一个ADB设备	<u>ች</u>		

Android开发工	具 v2.35	- 🗆 X
下载镜像 升级的 固件	固件 高级功能 3 升级 切换 擦涂Flash	
固件版本:	5.0.00 Loader版本: 2.30 芯片信息: RK32	
固件:	D:\DeskTop\定昌安卓板\朗趣固件\k_lq08(lqlauncher)_xqy_dork3286	
🗌 Demo		
	发现一个ADB设备	

After clicking Switch, wait a while, the Android board will go black, don't worry, click Upgrade

X Android开发工	具 v2.35	\frown		×
下载镜像 升级	固件 高级功能	切换Rockusb开始 切换Rockusb成功		
固件	升级 切换 擦除Flash	CHARLEN CERTING		
固件版本:	5.0.00 Loader版本: 2.30 芯片信息: RK32			
固件:	D:\DeskTop\定昌安卓板\朗趣固件\k_lqO8(lqlauncher)_xqy_dork3288			
🗌 Demo				
	发现一个LOADER设备			
1. C				
X Android开发工	具 v2.35		- 0	×
X Android开发工 下载镜像 升级		切换Rockusb开始		×
		切换Rockusb开始 切换Rockusb成功	- <u> </u>	×
下載遺像 升级	固件 高级功能		<u>-</u> П	×
下载遺像升级			<u>-</u> Д	×
下载遺像 升级 固件 固件版本:	固件 高級功能 升级 切換 擦除Flash 5.0.00 Loader版本: 2.30 芯片信息: RK32		<u>-</u> <u></u>	×
下载遺像 升级 固件 固件版本: 固件:	固件 高級功能 升级 切換 擦除Flash 5.0.00 Loader版本: 2.30 芯片信息: RK32		<u>-</u> Д	×
下载遺像 升级 固件 固件版本: 固件:	固件 高級功能 升级 切換 擦除Flash 5.0.00 Loader版本: 2.30 芯片信息: RK32		<u> </u>	×
下载遺像 升级 固件 固件版本: 固件:	固件 高級功能 升级 切換 擦除Flash 5.0.00 Loader版本: 2.30 芯片信息: RK32		<u> </u>	×
下载遺像 升级 固件 固件版本: 固件:	固件 高級功能 升级 切換 擦除Flash 5.0.00 Loader版本: 2.30 芯片信息: RK32		_ <u>_</u>	×

🔀 Android开发工	具 v2.35						3 - 3	×
下载镜像 升级国	固件 高级功	能				测试设备开始 测试设备成功		
固件	升级	切换	擦除Flash			校验芯片开始 校验芯片成功		
固件版本:	5.0.00	Loader;	版本: 2.30	芯片信息:	RK32	获取FlashInfo开始 获取FlashInfo成功 准备IDB开始 准备IDB成功		
固件:	D:\DeskTo	p\定昌安卓	板\朗趣固件\k_lq	08 (1 q1 auncher)	_xqy_dcrk3288	T 下载IDB开始 下载IDB成功 重启设备开始		
Demo						重启设备成功 等待Loader开始 等待Loader成功		
						到试设备开始 则试设备成功 下载固件开始		
						1.4214414212		
		发现一	个LOADER	设备				

載鏡像 升级	固件 高级功	能				测试设备开始 测试设备成功		
固件	升级	切换	擦除Flash			校验芯片开始 校验芯片成功		
固件版本:	5.0.00	Loader册	反本: 2.30	芯片信息:	RK32	获取FlashInfo开始 获取FlashInfo成功 准备IDB开始		
固件:	D:\DeskTo	₽\定昌安卓村	版\朗趣固件\k_lq(08(lqlauncher)	_xqy_dcrk3288	准备IDB成功 下载IDB开始 下载IDB成功		
						重启设备开始 重启设备成功		
Demo						等待Loader开始		
Demo						等待Loader开始 等待Loader成功 测试设备开始		
Demo						等待Loader开始 等待Loader成功 测试设备开始 测试设备成功 下数面件升超 正在下数固件100%)		
Demo						等待Loader开始 等待Loader成功 测试设备开动 测试设备成功 下我回汗升始		

、Android开发工 下载镜像 升级[消散				测试设备开始	2 <u>—</u> 21	×
固件	升级	切换	擦除Flash			测试设备成功 校验芯片开始 校验芯片成功 获取FlashInfo开始		
固件版本:	5.0.00	Loader;	版本: 2.30	芯片信息: 08(1-1	RK32			
固件:	D. (Deski)	小化自义学		oo(iqismener)	_x4y_467x5266	下载IDB成功 重启设备开始 重启设备成功 等待Loader开始		
						等待Loader成功 测试设备开始 测试设备成功		
						下载固件开始 正在下载固件(100%) 正在校验固件(100%) 不载固件成功		
						重启设备开始重启设备成功		
		没有	有发现设备					

Then wait for the device to restart, about a minute or so, you need to enter the system and set it to portrait mode, **Settings-Display-Screen Orientation-Vertical Screen**.

3. Technical parameters

display screen	TFT-LCD 2073600 Pixels
CPU	RK3568, quad-core 64-bit Cortex-A55, clocked at up to 1.8GHz
GPU	ARM G52 2EE, supports OpenGL ES 1.1/2.0/3.2, OpenCL 2.0, Vulkan 1.1, and embeds high-performance 2D acceleration hardware
RAM	LPDDR4X 1GB/2GB(default)/4GB/8GB
ROM	EMMC 8G(default)/16/32G/64G/128GB(Optional)
Memory expansion	Support up to 128GB TF card expansion
Ethernet	1 standard RJ45 interface, 10/100M adaptive Ethernet
WIFI/ Bluetooth	Onboard WIFI/BT module, support WiFi2.4GHz, support 802.11b/g/nprotocol, support Bluetooth 4.0
Mobile Networks	1 BUILT-IN MINI PCIE SOCKET SLOT FOR EXTENDED CONNECTION TO 3G/4G MODULES
operating system	Android11/debian/ubuntu18.04/ubuntu20.04/buildroot
Default physical resolution	1920*1080
Resolutions can be supported	3840*2160 (outputHDMI 2.0)
Average brightness	<mark>250 cd/㎡</mark>
contrast	1200: 1 (Translucent)
Viewing angle	89°/89°,89°/89° (Typ)
Pixel layout	RGBVertical striated
Display mode	ADS (Long black display, transmissive)
Speaker output power	≥250mW/8Ω
Enter the supply voltage range	DC12V±10%
Signal input channel	LVDS
Use ambient temperature	0 ~ 60°C
Store at ambient temperature	– 20 ~ 60°C
Exterior dimensions	464 (W) ×769.9(H)×50.4(D)mm

4. Random attachments

AC power adapter for indoor use	1Pcs
Three plugs in the power cord at the prefix	1Pcs
antenna	2Pcs

5. Troubleshooting common problems

1. 1. No black screen is displayed

Please make sure that the power cord is plugged in tightly from the pint to the adapter.

Make sure that the DC 2.5mm of the adapter is connected to the All-in-One Smart Terminal and plugged in tightly.

2. The touch screen has no effect

Confirm whether the APP program is stuck, power off and restart the device.

3. No 4G network

Please check if your SIM card is in arrears.

Please check if the 4G antenna is not connected.

Please check that the SIM card is inserted tightly.

4. No wired internet

Please check whether the network cable is plugged in tightly, and whether the network cable is unblocked.

5. No WIFI network

Please check if the WIFI antenna is plugged in tightly.

Remarks:

If you still have other questions, please contact our relevant personnel.

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that are deemed to comply without testing of specifc absorption ratio (SAR).Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation du débit d'absorption spécifque (DAS).

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only mobile configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."