

INSTALLATION INSTRUCTION FOR CEILING FAN REMOTE CONTROLLER


IMPORTANT POINTS:

1. Please read this instruction, and save it for further use.
2. Before installation, TURN OFF THE POWER OF YOUR CEILING FAN.
3. Please note that all wiring appliances should be installed by a qualified electrician.
4. This unit is to be used in a 100-130V~ 50/60Hz supply only. (Rating: RECEIVER: Max 35W for fan motor, Max 18W for LED. TRANSMITTER: transmitting frequency range: 433.92MHz±300kHz, Maximum transmitting power: 8dBm.)
5. Do not install in damp locations or immerse in water. (For indoor use only.)
6. Do not pull on or cut leads shorter.
7. Do not drop or bump the unit.
8. PLEASE NOTE: The battery will weaken with age and should be replaced before leaking takes place as this will damage the transmitter.
9. The batteries must be removed from the transmitter before it is scrapped. And the batteries shall be disposed of safely.
10. The switch shall be mounted at a height greater than 1.7m.
11. The electric shock protection of the RF receiver shall be depended on its installation.
12. The RF remote controller shall be used within its rating range, otherwise overheating and dangerous phenomenon may occur.
13. The RF ceiling fan remote controller is made by XIN HUI A.A. ELECTRONICS LTD.
14. CAUTION: To reduce the risk of fire or injury, do not use this product in conjunction with any variable (rheostat) wall control.
15. Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
16. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
17. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.



CONTROL INSTRUCTIONS:

1. The receiver is only control by transmitter.
2. If you would like to operate receiver by a new transmitter, you must use the transmitter to code the remote controller.
3. The way of code is within 10s after the receiver is powered on, you should press and hold on the key of FAN ON/OFF for 3s to code. If code successfully, you will hear a sound "beep" from buzzer.
4. After code successfully, the new transmitter can control the receiver and the old transmitter can not control the receiver.

FUNCTIONS OF TRANSMITTER:

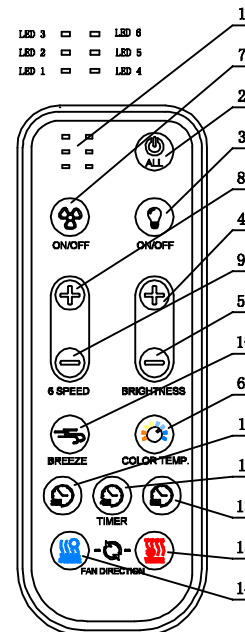

1. 6 indicator lights display fan light status.
 - ① Each time the power is turned on, the fan is turned off by default, the third gear is set, and the indicator lights are all on for about 0.5 seconds before turning off
 - ② Press the button (except for gears 1-6 and fan on function), the indicator lights LED1-LED6 will all light up, and release the button to turn off.
 - ③ Fan on function, 1-6 gear function. When the button is pressed, the corresponding indicator light will turn on, and when the button is released, it will turn off. The corresponding indicator lights for each function are as follows:
 - Turn on fan mode 1: LED1 lights up.
 - Turn on fan mode 2: LED1 & LED2 lights up.
 - Turn on fan mode 3: LED1 & LED2 & LED3 lights up.
 - Turn on fan mode 4: LED1 & LED2 & LED3 & LED4 lights up.
 - Turn on fan mode 5: LED1 & LED2 & LED3 & LED4 & LED5 lights up.
 - Turn on fan mode 6: LED1 & LED2 & LED3 & LED4 & LED5 & LED6 lights up.
2. Main switch: Lights and fans fully turned on or off.
3. Switching lights: Turn on/off the lights.
4. Dimming + : The brightness of the lamp increases by 1 level, and the brightest is 6 levels (the off state is invalid).
5. Dimming - : The brightness of the lamp decreases by 1 level, with the darkest being 1 level (the off state is invalid).
6. Color conversion: Color temperature conversion (switching cycle change order is 2700K-3000K-3500K-4500K-5500K-6500K...) (invalid when turned off).
7. Switching fan: a. Turn on/off ceiling fan. b. Within 10 seconds of power on, press and hold the fan power button for 3 seconds to verify the code. If the buzzer beeps, the verification is successful. Only one verification can be performed each time the power is turned on.
8. Gear position + : Wind speed increases by 1 gear, with 1 gear being the slowest and 6 gear being the fastest.
9. Gear position - : Reduce the wind speed by 1 gear, with 1 gear being the slowest and 6 gear being the fastest.
10. Natural Wind: The gears cycle in the order of 1-2-3-4-6-5-4-, with a 19 second interval between each gear.
11. 2H: The LED and ceiling fan will turn off after two hours.
12. 4H: The LED and ceiling fan will turn off after four hours.
13. 8H: The LED and ceiling fan will turn off after eight hours. Press and hold on 3s to reset the WIFI.
14. Forward rotation: Switch to forward rotation (invalid when the fan is turned off).
15. reversal: Switch to reverse (invalid when the fan is turned off).

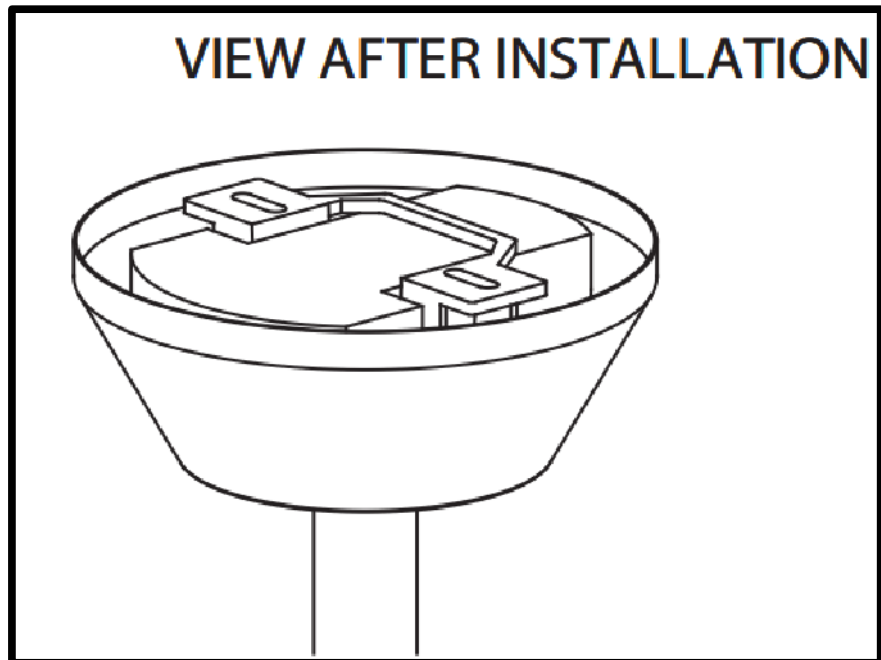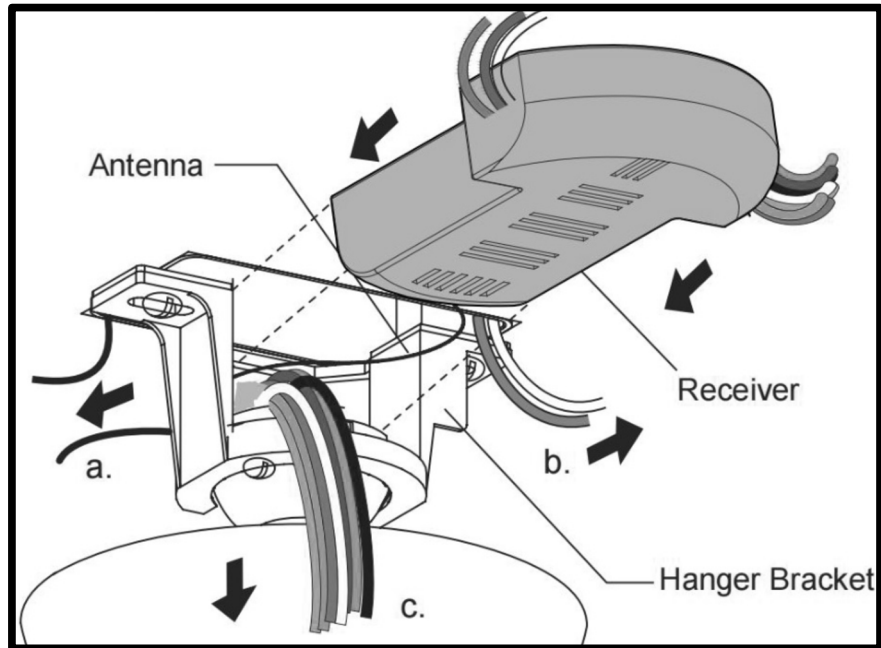

INSTALLATION INSTRUCTIONS:

CAUTION: INCORRECT WIRE CONNECTION WOULD DAMAGE THIS RECEIVER.

1. Make the wiring connection must be stuck inside canopy.
2. Once the connection has been made, the receiver inserts into the drop rod hanging bracket. The canopy comes up to cover the receiver and bracket.
3. To change the batteries is to open the battery housing cover by sliding out the cover downward to the arrow shown direction while pressing down the cover with thumb. Holder for transmitter: if desired, install onto the wall with screws.
4. This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

