


User Manual

English

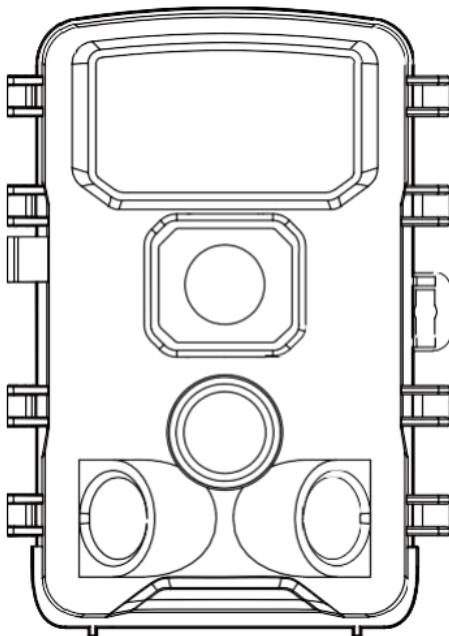

V20240802-6


Catalog

1. Package Content	01
2. Button Function Introduction	01
3. System Setting	03
4. APP Download and Installation	08
5. Device and Smartphone Connection	09
6. Installation and Positioning	12
7. USB Connection and Use Card Reader	13
8. Specification Sheet	14

1. Package Content

1*USB Cable, 1*Strap, 1*Hunting Camera, 1*User Manual

2. Button Function Introduction

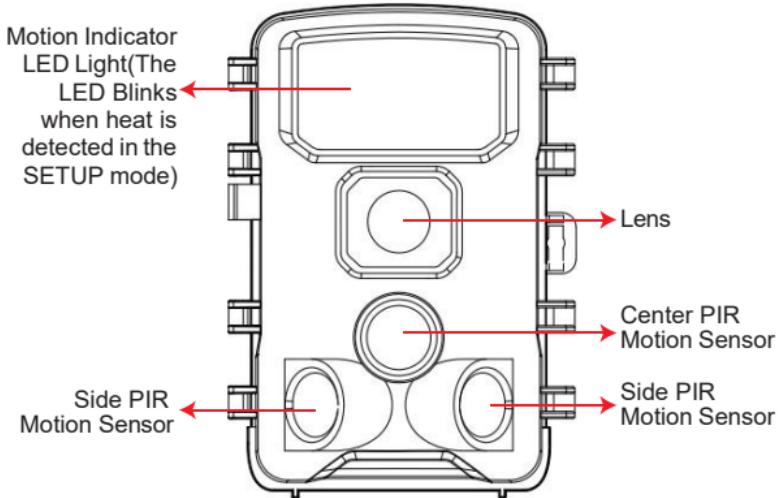



3. System Setting

3.1. Power ON/OFF & System Setting

After installing the batteries, switch the slider to the "**SETUP**" position to set it. In **TEST** mode, the infrared light is turned off, and you can set parameters, check the camera, manually take and view photos and videos, etc. Note: Please replace the batteries in **OFF** mode.

3.1.1. Switch the slider from "**OFF**" to "**SETUP**" mode to turn on the device.

3.1.2. Press **UP/DOWN** button to switch between photo and video modes.

3.1.3. Press the **MENU** button to bring up the settings menu, and press the **OK** button to save the settings.

3.1.4. Press the **MENU** button again to return to the previous level or exit.

3.1.5. Switch the slider to "**OFF**" to turn off the camera power.

3.2. Advanced Settings

Item	Setting (Bold =default)	Description
Mode	Motion detection	Set the shortest time gap between photo/video, to avoid SD card full of similar photos/videos.

	Timelapse normal	Turn on time lapse mode and the camera will take photos, videos or photo+video automatically between time gap, for example every 10 seconds. Note: When this function is turned on, the PIR sensor does not work.
	Timelapse video	Used to record video at situations like sunrise and sunset that require long-term recording but do not change much in the scene, which saves memory space and presents better results! Note: When this function is turned on, the PIR sensor does not work.
Work Time	Off On	If select Off, the camera will work 7/24, If select On, you can set the camera working time range.
Photo or Video	Photo /Video/ Photo+Video	Select the camera working mode, if select Photo+Video mode, the camera will take a photo before record video.
Photo Resolution	Smart Best Photo , 2MP, 8MP, 16MP, 24MP, 32MP, 42MP, 48MP, 64MP, 84MP	The higher the resolution, the better the photo quality. The larger the file, the larger the SD card capacity occupied.

Video Resolution	Smart Best Video , 720P, 1080P, 2.7K, 4K, 6K, 8K	The higher the resolution, the better the video quality. The larger the file, the larger the SD card capacity occupied.
Photo Series	1P/2P/3P/4P/5P	The number of photos taken in sequence each time the camera is triggered.
Video Length	5-59 seconds · 1min, 2mins, 3mins	Attention: We recommend you to set the video length within 10 seconds, and not set it too long to save battery and avoid occupying too much SD card storage space.
Audio Recording	On/Off	Select the option to set if record video with sound or not.
Shot Lag	5 seconds-1 hour	After the camera triggers shooting, within the set interval time, the camera will not take/record photos. This can prevent the SD card from being filled with duplicate files.
PIR Sensitivity	Low Middle High	The sensitivity of PIR sensors can be affected by changes of ambient temperature. When the ambient temperature is high, the "high" setting is more suitable for capturing distant animals, while the "medium"/"low" setting is more suitable for cold weather. Note: If the time lapse function is enabled, PIR will not work.

Side Motion Sensor	On/Off	The sensors on both sides will be deactivate.
Motion Filter	On Off	After activation, prevent false trigger. After the PIR was trigger, use video algorithms to analyze whether there are moving objects in front of the lens.
Motion Test	The if PIR sensor work normally.	Test if PIR is working properly
Fill Light Distance	Near, Middle, Far	Here are 3 options to select.
Camera Name	Set the camera name	Set the camera name
Date & Time	Set the date and time of the camera.	Use the UP/DOWN button to set the date and time, and press the OK button to confirm
Date Format	D/M/Y or M/D/Y or Y/M/D	Press UP/DOWN button to select date format, press OK button to confirm.
Time Format	24H 12H	If the 12H format is set, AM will be displayed in the morning and PM will be displayed in the afternoon after the time.
Loop Record	On Off	If turned on, when the memory card is full, earliest file will be deleted and recording will continue. If turned off, when the memory card is full, recording will stop

Beep Sound	On Off	The default is "on", and when "off" is selected, the speaker will not sound when button is pressed.
Memory Card Format	No Yes	After formatting the memory card with the camera, all files will be deleted. Note: Please format the memory card on this camera for the first time using it
Language	English, Deutsch, Francais, Español, Nederlands, Italiano, Polski, 简体中 文, 한국어, 日 本语, Русский	Select the language you want to use.
Password Protection	Off On	1. Set a 4-digit numerical power on password to protect your camera. 2. If you forget your password, long press the UP button and OK button together, (don't let goof your fingers), then turn the power to "SETUP" to automatically clear the password upon camera startup. And the camera will unlock.
Factory Reset	No Yes	Selecting "YES" will restore the system to its factory settings.

3.3. Playback Mode

Take the camera from its installation position, switch the slider to "**SETUP**", press the **Replay** button bring up to enter playback mode. Press the **UP/DOWN** buttons to view the captured pictures or videos. When playing back video files, press the **OK** button to play and pause. Press the Replay button to return to standby mode.

3.3.1 Delete current file

Using this function, you can delete the currently selected picture or video from the camera's memory card. In playback mode, press the **MENU** button, select "**Delete current file**" and press **OK** to confirm.

3.3.2 Delete all files

Using this function, you can delete all photos and videos from the camera's memory card. In playback mode, press the **MENU** button, select "**Delete all files**", and press the **OK** button to confirm.

4. APP Download and Installation

Method 1: Search for "**TrailCam Go**" on Google Play on Android phones or Apple Store on iOS phones to download and install.

Method 2: Please scan the QR code below using your Android or IOS phone to download the "TrailCam Go" app.



5. Device and Smartphone Connection

5.1. Switch the power slider to **SETUP** or **ON** mode, turn on the Bluetooth and **WiFi** settings of the phone. Short press the "TrailCam Go" app icon, prompt for privacy permission, confirm agreement, and ensure that the smartphone have connect to the camera normally as shown in Figure 1.

5.2. Click "+" to add device, select the device type as Wi-Fi camera, please make sure the camera is turned on and near you as shown in Figure 1-3.

5.3. If a single camera is connected, please click on "**Connect Camera**". If multiple cameras are added, please click on "**Connect Other Cameras**". Select the Bluetooth name you want to connect to, and the camera will automatically connect as shown in Figure 4.

5.4 During the connection process, you will be prompted to use a temporary WLAN network to connect to your device. Click "**Join**", and once the connection is successful, a camera name or location input interface will pop up. Please input and save it, and then enter the main page as shown in Figure 5-7.

5.5. When the camera enters the preview interface, click on "**Map**" to find the location of the camera. Click on "**Camera List**" and edit the location of each device as shown in Figure 8.

Note: When using, please confirm if your smartphone location is turned on. The location information of "TrailCam Go" requires permission. Please click on "Allow when using".

5.6. Short press the Homepage icon, select the camera tab you want to preview or do some setting. Here you can view

information such as battery/storage/camera name as shown in Figure 9.

5.7. Short press the camera icon on bottom left to enter preview interface, here you can control camera to take photo or video as shown in Figure 10.

5.8. Short press on the Gallery to view videos and photos, delete/share files, and save the captured files in smartphone instead of in the camera's storage card as Figure 11.

5.9. Short press the setting icon to enter the parameter setting interface, where you can set the time, working mode, recording/photography mode, etc. as Figure 12.

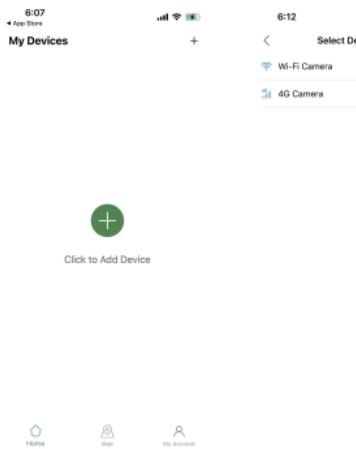


Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6



Figure 7



Figure 8

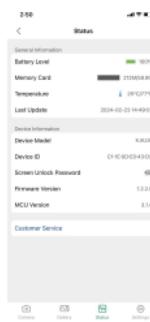


Figure 9



Figure 10



Figure 11

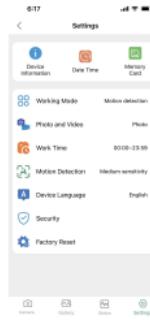


Figure 12

6. Installation and Positioning

6.1. If you want to put the camera on the wall.

6.1.1. Mark the installation position with the help of a metal plate and punch holes on the wall.

6.1.2. Place the green component(Rubber plug) into the hole.

6.1.3. Fix the fixing kit according to the method shown in the picture.

6.1.4. Place the camera in the position you have chosen and fix it in the position you have chosen.

6.2. If you want to put the camera on a tree.

6.2.1. Thread the installation strap through the bracket on the back of the camera, tie it to a tree, and adjust the position of the camera.

6.2.2. If you are worried that the camera may fall off, you can also use the fixing kit and mounting strap together to ensure that the camera is firmly fixed in the correct position.

6.3. Calibrate Camera

6.3.1. To verify whether the camera effectively monitors the selected area, move the switch to the SETUP state and secure the camera.

6.3.2. Within the desired monitoring area, try walking repeatedly in front of the camera at different distances and angles. When walking, the camera's LED indicator light will flash, indicating that it is within the monitoring range. If the camera's LED light is not lit, it indicates that it is outside the monitoring range.

6.3.3. The results verified through testing will help you find

the best location to install the camera.

6.3.4. The height of placing the camera above the ground should vary depending on the size of the animal being photographed. Generally, a height of 1-2 meters is preferred.

6.3.5. Ensure that the camera is not subjected to unnecessary interference during operation. When fixing the Hunting camera, it is important to choose a good angle and position to ensure that you can obtain the best image during the day. If the camera is pointing towards the sun, it may cause some glare.

7. USB Connection and Use Card Reader

Connect the camera to the computer using a USB cable. The camera will automatically turn on.

7.1. After connect the camera to computer, a disk named "Removable Disk" will appear automatically.

7.2. Double click on the disk and find the folder "DCIM".

7.3. You can copy or cut photos and video files to your computer. Alternatively, you can insert a storage card into a card reader on your computer.

8. Specification Sheet

Screen	2.0 inch
Photo Resolution	Smart Best Photo, 4MP, 8MP, 16MP, 24MP, 32MP, 42MP, 48MP, 64MP, 84MP
Video Resolution	Smart Best Video, 720P, 1080P, 2.7K, 4K, 6K, 8K
Video format	MP4
Photo format	JPG
Menu language	English, Deutsch, Francais, Español, Nederlands, Italiano, Polski, 简体中文, 한국어, 日本语, Русский,
Memory Card	SD card support up to 128GB
Wi-Fi/APP	2.4G/TrailCam Go (WiFi hunting camera can't connect to home WiFi router.)
USB	TYPE-C
DC Power Source	DC power source 6V/1.5A
Battery	8X1.5V Alkaline battery
Microphone	Built-in
Speaker	Built-in
Working Temperature	-20°C to +60°C
Storage Temperature	-30°C to +70°C
Dimension	138x100x65mm

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.
Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition, compliance with exposure requirements.