




## INSTRUCTION MANUAL

VHF MOBILE TRANSCEIVER  
**IC-F5061**  
**IC-F5063**

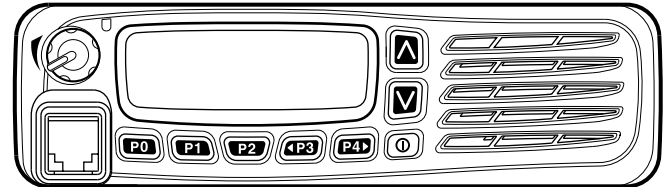

Icom Inc.

---

## IMPORTANT

---

**READ ALL INSTRUCTIONS** carefully and completely before using the transceiver.

**SAVE THIS INSTRUCTION MANUAL** — This instruction manual contains important operating instructions for the **IC-F5061 and IC-F5063 VHF MOBILE TRANSCEIVERS**.

---

## EXPLICIT DEFINITIONS

---

WORD	DEFINITION
<b>⚠ WARNING</b>	Personal injury, fire hazard or electric shock may occur.
<b>CAUTION</b>	Equipment damage may occur.
<b>NOTE</b>	If disregarded, inconvenience only. No risk of personal injury, fire or electric shock.

**NOTE:** See the operating guide for details of BIIS, MDC and LTR operation. Ask your dealer for details.

Icom, Icom Inc. and the ICOM logo are registered trademarks of Icom Incorporated (Japan) in the United States, the United Kingdom, Germany, France, Spain, Russia and/or other countries.

All other products or brands are registered trademarks or trademarks of their respective holders.

---

## PRECAUTIONS

---

**⚠ WARNING! NEVER** connect the transceiver to an AC outlet. This may pose a fire hazard or result in an electric shock.

**NEVER** connect the transceiver to a power source of more than 16 V DC such as a 24 V battery. This connection will ruin the transceiver.

**NEVER** cut the DC power cable between the DC plug and fuse holder. If an incorrect connection is made after cutting, the transceiver might be damaged.

**NEVER** place the transceiver where normal operation of the vehicle may be hindered or where it could cause bodily injury.

**NEVER** allow children to touch the transceiver.

**NEVER** expose the transceiver to rain, snow or any liquids.

**USE** the specified microphone only. Other microphones have different pin assignments and may damage the transceiver.

**DO NOT** use or place the transceiver in areas with temperatures below  $-30^{\circ}\text{C}$  ( $-22^{\circ}\text{F}$ ) or above  $+60^{\circ}\text{C}$  ( $+140^{\circ}\text{F}$ ), or in areas subject to direct sunlight, such as the dashboard.

---

# TABLE OF CONTENTS

---

IMPORTANT .....	i
EXPLICIT DEFINITIONS .....	i
PRECAUTIONS .....	i
TABLE OF CONTENTS .....	ii
<b>1 PANEL DESCRIPTION .....</b>	<b>1-7</b>
■ Front panel .....	1
■ Function display .....	2
■ Programmable function keys .....	3
<b>2 BASIC OPERATION .....</b>	<b>8-13</b>
■ Turning power ON .....	8
■ Channel selection .....	8
■ Call procedure .....	9
■ Receiving and transmitting .....	9
◇ Transmitting notes .....	10
◇ TX code channel selection .....	10
◇ TX code number edit.....	11
◇ Talkgroup ID code selection .....	12
◇ TX Status message selection .....	12
◇ DTMF transmission .....	12
■ Scrambler function .....	13
■ User set mode .....	13
<b>3 CONNECTION AND MAINTENANCE .....</b>	<b>15-17</b>
■ Rear panel connection .....	15
■ Supplied Accessories .....	16
■ Mounting the transceiver.....	16
■ Antenna.....	17
■ Fuse replacement .....	17
■ Cleaning .....	17
■ Options .....	17
<b>4 SAFETY TRAINING INFORMATION .....</b>	<b>18</b>

---

**AVOID** operating the transceiver without running the vehicle's engine. The vehicle's battery will quickly run out if the transceiver transmits while the vehicle's engine OFF.

**AVOID** placing the transceiver in excessively dusty environments.

**AVOID** placing the transceiver against walls. This will obstruct heat dissipation.

**AVOID** the use of chemical agents such as benzine or alcohol when cleaning, as they damage the transceiver surfaces.


**BE CAREFUL!** The transceiver will become hot when operating continuously for long periods.

*For U.S.A. only*

**CAUTION:** Changes or modifications to this transceiver, not expressly approved by Icom Inc., could void your authority to operate this transceiver under FCC regulations.

# PANEL DESCRIPTION

## ■ Front panel

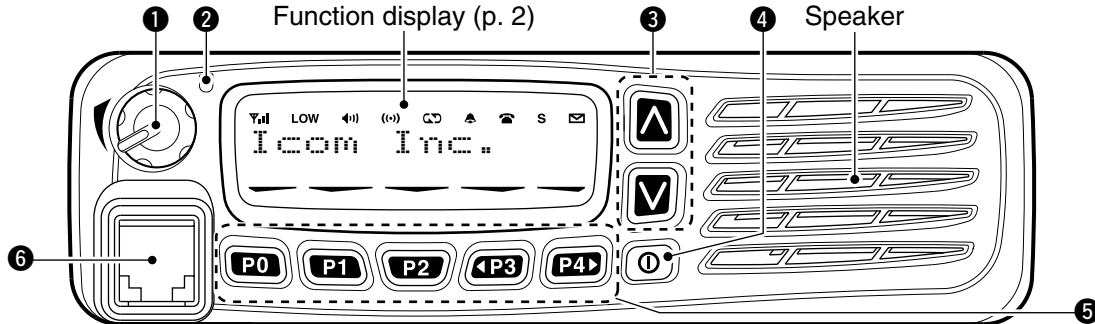

### ① AF VOLUME CONTROL KNOB

- Rotate the knob to adjust the audio output level.
- Minimum audio level is pre-programmed.

### ② TRANSMIT INDICATOR

- Lights red while transmitting a signal.
- Lights green while receiving a signal.

### ③ UP/DOWN KEYS

- Push to select an operating channel, etc.
- \*The desired function can be assigned by your dealer. (p. 3)

### ④ POWER SWITCH [POWER]

- Push to turn the power ON and OFF.
- Automatic scan start, Password prompt and Set mode access are available at power ON.

### ⑤ DEALER-PROGRAMMABLE KEYS

- Desired functions can be programmed independently by your dealer. (p. 3)


### ⑥ MICROPHONE CONNECTOR

- Connect the supplied microphone or optional DTMF microphone.
- ⚠ **NEVER** connect non-specified microphones. The pin assignments may be different and the transceiver may be damaged.

### ◇ MICROPHONE

- The supplied microphone has a PTT switch and a hanger hook.
- The following functions are available when the microphone is on or off hook:
  - Automatic scan start when on hook.
  - Automatic priority channel selection when off hook.
  - Sets to 'Inaudible' condition (mute condition) when on hook.
  - Sets to 'Audible' condition (unmute condition) when off hook.

## Function display

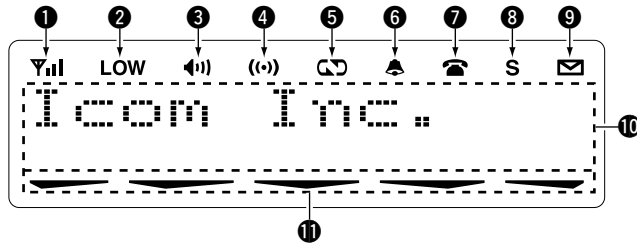

### 1 SIGNAL STRENGTH INDICATOR

Indicates relative signal strength level.

### 2 LOW POWER INDICATOR

Appears when low output power is selected.

### 3 AUDIBLE INDICATOR

- Appears when the channel is in the 'audible' (unmute) condition.
- Appears when the specified 2/5-tone/BIIS\*<sup>1</sup>/MDC\*<sup>2</sup> code is received.

### 4 COMPANDER INDICATOR

Appears when the compander function is activated.

### 5 SCRAMBLER INDICATOR

Appears when the voice scrambler function is activated.

### 6 BELL INDICATOR

Appears/blinks when the specific 2/5-tone/BIIS\*<sup>1</sup>/MDC\*<sup>2</sup> code is received, according to the pre-programming.

### 7 CALL CODE MEMORY INDICATOR

- Appears when the call code memory is selected.
- Appears when the DTMF or phone call is received.\*<sup>3</sup>

### 8 SDM MEMORY INDICATOR

Appears when the SDM memory is displayed.\*<sup>1</sup>

### 9 SDM INDICATOR

Appears when an SDM is received, or a transmit SDM is selected.\*<sup>1</sup>

### 10 ALPHANUMERIC DISPLAY

Displays an operating channel number, channel name, Set mode contents, DTMF code, etc.

The indication mode can be selected from 1 line or 2 lines. Ask your dealer for details.

In this instruction manual, the LCD illustration is described using the 2 lines indication mode.

### 11 ACTIVATED KEY INDICATOR

Appears above the key assigned as [Scan A Start/Stop], [Scan B Start/Stop], [Scan Add/Del(Tag)], [Lock], [Talk Around], [Surveillance], [Talkgroup]\*<sup>4</sup> and [DIGITAL]\*<sup>1</sup> keys when that keys have been activated.

\*<sup>1</sup> BIIS operation only

\*<sup>2</sup> MDC operation only

\*<sup>3</sup> LTR operation only

\*<sup>4</sup> Digital operation only

**NOTE:** See the operating guide for details of BIIS, MDC and LTR operation. Ask your dealer for details.

## ■ Programmable function keys

The following functions can be assigned to [UP], [DOWN], [P0], [P1], [P2], [P3] and [P4] programmable function keys. Consult your Icom dealer or system operator for details concerning your transceivers programming.


If the programmable function names are bracketed in the following explanations, the specific key is used to activate the function depends on the programming.

### **CH UP AND DOWN KEYS**

- Push to select an operating channel.
- Push to select a transmit code channel after pushing [TX Code CH Select].
- Push to select a DTMF channel after pushing [DTMF Autodial].
- Push to select a scan group after pushing and holding [Scan A Start/Stop]/[Scan B Start/Stop].

### **ZONE KEY**

Push this key, then select the desired zone using [CH Up]/[CH Down].

 **What is “zone”?**—The desired channels are assigned into a zone according to the intended use for grouping. For example, ‘Staff A’ and ‘Staff B’ are assigned into a “Business” zone, and ‘John’ and ‘Cindy’ are assigned into a “Private” zone.

### **SCAN A START/STOP KEY**

- This key’s operation depends on the Power ON Scan setting.
  - When the power ON scan function is turned OFF;**  
Push to start and cancel scanning operation.
  - When the power ON scan function is turned ON;**  
Push to pause scanning, then resumes scanning after a specified time period has passed.
- Push and hold this key for 1 sec. to indicate the scan group, then select the desired group using [CH Up]/[CH Down].

### **SCAN B START/STOP KEY**

- Push to start and cancel scanning operation. Scan resumes after a specified time period has passed when scan is cancelled except for this key.
- Push and hold this key for 1 sec. to indicate the scan group, then select the desired group using [CH Up]/[CH Down].

### **SCAN ADD/DEL (TAG) KEY**

- Push to add or delete the selected channel to/from the scan group.
  1. Push to indicate the scan group, then push [CH Up] or [CH Down] to select the desired group.
  2. Push to add or delete the channel to/from the selected scanning group.
  3. Push and hold for 1 sec. to exit the scan group selection mode.
- Push this key while scan is paused (a signal is detected) on a channel (except for priority channel,) the channel is cleared from the scan group.

/// Depending on the setting, the cleared channel is added to the scan group again after the scan is cancelled.

### **PRIO A/B KEYS**

- Push to select Priority A or Priority B channel.
- Push and hold [Prio A (Rewrite)] or [Prio B (Rewrite)] to rewrite the Priority A or Priority B channel.

### **MR-CH 1/2/3/4 KEYS**

Push to select an operating channel 1 to 4 directly.

### **MONI (AUDI) KEY**

- Mute and release the CTCSS (DTCS) or 2-tone squelch mute. Open any squelch/deactivate any mute while pushing and holding this key. (LMR operation only)
- Activates one of (or two of) the following functions on each channel independently: (PMR or BIIS PMR operation only)
  - Push and hold to un-mute the channel (audio is emitted; 'Audible' condition).
  - Push to mute the channel (sets to 'Inaudible' only).
  - Push to un-mute the channel (sets to 'Audible' only).
  - Push after the communication is finished to send a 'reset code'.

/// **NOTE:** The un-mute condition ('Audible' condition) may automatically return to the mute condition ('Inaudible' condition) after a specified period depending on programming.

### **PUBLIC ADDRESS KEY**

Push to activate the Public Address (PA) function for voice amplification. When the PA function is activated, the audio output can be controlled from the transceiver separately with the [VOL] control knob.

- This function is available when the external unit, such as a audio amplifier, speaker, etc. is additionally connected.
- Push this key, then speak into the microphone while pushing and holding [PTT].
- [CH Up]/[CH Down] also allow you to set the audio output level.

### **RX SPEAKER KEY**

The received audio can be heard via the external speaker when this key is pushed.

- This function is available when the external speaker is additionally connected.
- This function is useful when you are out of the vehicle.
- The audio output level is linked to the transceiver's volume control.

### **LIGHT KEY**

Push to turn the transceiver's backlight ON for about 5 sec. when the backlight function is turned OFF in user set mode.

### **LOCK KEY**

Push and hold to electronically lock all programmable keys except the following:

[Moni(Audi)], [Light], [Lock], [Call] (incl. Call A and Call B), [Emergency Single]/[Emergency Repeat] (incl. Silent), [Surveillance] and [OPT 1/2/3].

---

# 1 PANEL DESCRIPTION

## **HIGH/LOW KEY**

Push to select the transmit output power temporarily or permanently, depending on the pre-setting.

- Ask your dealer for the output power level for each selection.

## **C.TONE CHANNEL KEY**

Push to select the continuous tone channel using [CH Up]/ [CH Down] to change the tone frequency/code setting after pushing this key. The selected channel remains set as the continuous tone channel until another channel is designated as such.

## **TALK AROUND KEY**

Push to turn the talk around function ON and OFF.

- The talk around function equalizes the transmit frequency to the receive frequency for transceiver-to-transceiver communication.

## **WIDE/NARROW KEY**

Push to toggle the IF bandwidth between wide and narrow.

- The wide passband width can be selected from 25.0 or 20.0 kHz using the CS-F5060 CLONING SOFTWARE. (PMR or BIIS PMR operation only) Ask your Dealer for details.

## **DTMF AUTODIAL KEY**

Push to enter the DTMF channel selection mode. Then select the desired DTMF channel using [CH Up]/[CH Down].

After selecting the DTMF channel, push again to transmit the selected DTMF code.

## **RE-DIAL KEY**

Push to transmit the last-transmitted DTMF code.

- TX memories are cleared after turning the transceiver OFF.

## **SCRAMBLER FUNCTION**

Push to toggle the voice scrambler function ON and OFF.

## **CALL KEYS**

Push to transmit a 2/5-tone/BIIS ID code.

- Call transmission is necessary before calling another station depending on your signalling system.
- [Call A] and/or [Call B] may be available when your system employs selective 'Individual/Group' calls. Ask your dealer which call is assigned to each key.

## **EMERGENCY KEYS**

- Push and hold to transmit an emergency call.
- When [Emergency Single (Silent)] or [Emergency Repeat (Silent)] is pushed, an emergency call is transmitted without a beep emission and LCD indication change.
  - If you want to cancel the emergency call, push (or push and hold) the key again before transmitting the call.
  - The emergency call is transmitted one time only or repeatedly until receiving a control code depending on the pre-setting.

## **SURVEILLANCE KEY**

Push to turn the surveillance function ON or OFF.

When this function is turned ON, the beep is not emitted and the LCD backlight does not light when a signal is received or a key is pushed, etc.

## **COMPANDER KEY**

Push to toggle the compander function ON and OFF.

The compander function reduces noise components from the transmitted audio to provide clear communication.



**TX CODE ENTER KEY** (PMR or BIIS PMR operation only)

Push to enter the ID code edit mode directly, for both 5-tone and MSK. Then set the desired digit using [CH Up]/[CH Down]. (p. 11)

**TX CODE CHANNEL SELECT KEY**

- Push to enter the ID code channel selection mode directly. Then set the desired channel using [CH Up]/[CH Down]. (p. 10)
- During ID code channel selection mode, push for 1 sec. to enter the ID code edit mode for 5-tone and MSK. Then set the desired digit using [CH Up]/[CH Down]. (p. 11)

**TX CODE CHANNEL UP/DOWN KEYS**

- Push to select a TX code channel directly.
- Push to set the desired digit during the ID code edit mode.

**ID-MR SELECT KEY** (PMR or BIIS PMR operation only)

- Recalls detected ID codes.
  - Push this key, then select the ID code using [CH Up]/[CH Down].
  - Up to 5 ID's are memorized.
- Push and hold for 1 sec. to erase the selected ID's.

**HOOK SCAN KEY**

When the on hook scan function is activated, push this key to disables on fook scan function (stop scanning) temporarily. Push this key again to re-start scanning.

**USER SET MODE KEY**

- Push and hold to enter user set mode.
    - During user set mode, push this key to select an item, and change the value or condition using push [CH Up]/[CH Down].
  - Push and hold this key again to exit user set mode.
- User set mode is also available via the 'Power ON function.' Refer to p. 14 also.

**MR-CH ENT KEYS**

Push to enter the memory channel selection mode, then enter the desired channel number using the 10-keypad of the connected microphone.

**OPT 1/2/3 KEYS**

Push to control the output signal level from the optional unit connector.

---

# 1 PANEL DESCRIPTION

## ◇ For Digital mode operation only

### **TALKGROUP KEY**

- Push to enter the talkgroup ID code selection mode directly. Then select the desired talkgroup ID code using [CH Up]/[CH Down]. (p. 12)
- Push to stop the beep emission when receiving a matched talkgroup ID code.

### **TX STATUS KEY**

Push to enter the Status message selection mode directly. Then select the desired Status message using [CH Up]/[CH Down]. (p. 12)

### **STONE/RAN CH SELECT KEY**

- While in the analog mode operation, push to select the continuous tone channel using [CH Up] or [CH Down] to change the tone frequency/code setting.
- While in the digital mode operation, push to select the RAN channel using [CH Up] or [CH Down] to change the RAN code setting.
- While in the mixed (digital and analog) mode operation, push to select the continuous tone channel using [CH Up] or [CH Down] to change the tone frequency/code setting. Then push this key to enter the setting. After that, the RAN channel selection screen appears. Select the RAN channel using [CH Up] or [CH Down] to change the RAN code setting. Then push this key to enter the setting.

## ■ Turning power ON

- ① Push [**ⓘ**] to turn the power ON.
- ② If the transceiver is programmed for a start up password, input the digit codes as directed by your dealer.

- The keys as below can be used for password input: The transceiver detects numbers in the same block as identical. Therefore “01234” and “56789” are the same.

KEY	<b>P0</b>	<b>P1</b>	<b>P2</b>	<b>P3</b>	<b>P4</b>
NUMBER	0	1	2	3	4
	5	6	7	8	9

- ③ When the “PASSWORD” indication does not clear after inputting 6 digits, the input code number may be incorrect. Turn the power off and start over in this case.

## ■ Channel selection

Several types of channel selections are available. Methods may differ according to your system set up.

### **NON-ZONE TYPE:**

Push [CH Up] or [CH Down], or rotate [CH Up/Down] to select the desired operating channel, in sequence; or, push one of [MR-CH 1] to [MR-CH 4] keys to select a channel directly.

### **ZONE TYPE:**

Push [Zone] then push [CH Up] or [CH Down], or rotate [Zone Up/Down] to select the desired zone.

### **AUTOMATIC SCAN TYPE:**

Channel setting is not necessary for this type. When turning power ON, the transceiver automatically starts scanning. Scanning stops when receiving a call.


## 2 BASIC OPERATION

### ■ Call procedure

When your system employs tone signaling (excluding CTCSS and DTCS), the call procedure may be necessary prior to voice transmission. The tone signalling employed may be a selective calling system which allows you to call specific station(s) only and prevent unwanted stations from contacting you.

- ① Select the desired TX code channel, 2/5-tone code or Talkgroup ID code\* according to your System Operator's instructions.
  - This may not be necessary depending on programming.
  - Refer to pgs. 10–11 for selection.

\*Digital mode operation only.
- ② Push the call key (assigned to one of the dealer programmable keys; except for the Digital mode operation) or [PTT].
- ③ After transmitting, the remainder of your communication can be carried out in the normal fashion.

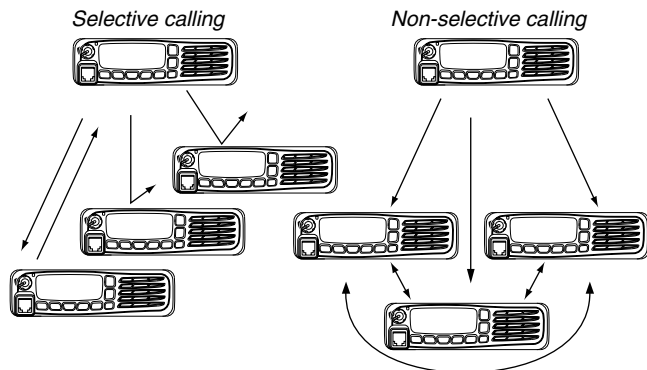

### ■ Receiving and transmitting

#### **Receiving:**

- ① Push [⏻] to turn the power ON.
- ② Push [CH Up] or [CH Down] to select a channel, in sequence.
- ③ When receiving a call, adjust the audio output level to a comfortable listening level.

#### **Transmitting:**

Wait for the channel to become clear to avoid interference.

- ① Take the microphone off hook.
  - 2-tone, 5-tone mute may be released. (The 'audible' condition is selected and BUSY indicator lights green.)
  - A priority channel may be selected automatically.
- ② Wait for the channel to become clear.
  - The channel is busy when BUSY indicator lights green.
- ③ Push [CALL] when initiating a call from your side.
  - Coded audio may be heard from the transceiver, then “◀▶” appears.
  - This operation may not be necessary depending on your signaling system. Ask your dealer for details.
- ④ While pushing and holding [PTT], speak into the microphone at your normal voice level.
- ⑤ Release [PTT] to receive.

- IMPORTANT:** To maximize the readability of your signal;
1. Pause briefly after pushing [PTT].
  2. Hold the microphone 5 to 10 cm (2 to 4 inches) from your mouth, then speak into the microphone at a normal voice level.

## ◇ Transmitting notes

### • Transmit inhibit function

The transceiver has several inhibit functions which restrict transmission under the following conditions:

- The channel is in mute condition ('Inaudible' condition; "🔇" does not appear.)
  - The channel is busy.
  - Un-matched (or matched) CTCSS is received.  
(Depending on the pre-setting)
  - Un-matched (or matched) RAN is received.\*  
(Depending on the pre-setting)
  - The selected channel is a 'receive only' channel.
- \*Digital mode operation only.

### • Time-out timer

After continuous transmission for the pre-programmed time period, the time-out timer is activated, causing the transceiver to stop transmitting.

### • Penalty timer

Once the time-out timer is activated, transmission is further inhibited for a period determined by the penalty timer.

## ◇ TX code channel selection

If the transceiver has [TX Code CH Select] assigned to it, the indication can be toggled between the operating channel number (or name) and TX code channel number (or name). When the TX code channel number (or name) is displayed, [CH Up]/[CH Down] selects the TX code channel.

### **USING [TX CODE CH SELECT] KEY:**

- ① Push [TX Code CH Select]— a TX code channel number (or name) appears.
- ② Push [CH Up] or [CH Down] to select the desired TX code channel.
- ③ Push [Call] (or [PTT] during MSK operation) to transmit the selected TX code.

### **USING [TX CODE CH UP]/[TX CODE CH DOWN] KEY:**

If the transceiver has a [TX Code CH Up] or [TX Code CH Down] key assignment, the programmed TX code channel can be selected directly when pushed.

### **NOTE for PMR or BISS PMR operation:**

- The LCD indication does not change when the operating channel number (or name) is displayed.
- To check the selected TX code, push [TX Code CH Select].

---

## 2 BASIC OPERATION

### ◇ TX code number edit

(PMR or BIIS PMR operation only)

If the transceiver has [TX Code CH Select] or [TX Code Enter] assigned to it, TX code contents can be edited within the allowable digits.

#### **USING [TX CODE CH SELECT] KEY:**

- ① Push [TX Code CH Select] to enter the TX code channel selection mode.
  - Select the desired channel before entering the TX code channel selection mode if necessary.
- ② Push [TX Code CH Select] for 1 sec. to enter the TX code edit mode.
- ③ Push [TX Code CH Select] to select the desired digit to be edited.
  - The digit to be edited blinks.
- ④ Push [CH Up] or [CH Down] to set the desired digit.
- ⑤ Push [TX Code CH Select] to set the digit. The digit to the right will blink automatically.
  - When the 10-keypad\* is used for setting, the digit to the right will blink automatically without pushing [TX Code CH Select].
- ⑥ Repeat ④ and ⑤ to input all allowable digits.
- ⑦ Push [Call] or [PTT] to transmit the edited TX code.

#### **USING [TX CODE ENTER] KEY:**


- ① Select the desired TX code channel via [TX Code CH Select]+[CH Up]/[CH Down], [TX Code CH Up] or [TX Code CH Down].
- ② Push [TX Code Enter] to enter the TX code edit mode.
  - The digit to be edited blinks.
- ③ Push [TX Code Enter] to select the desired digit to be edited.
- ④ Push [CH Up] or [CH Down] to set the desired digit.
- ⑤ Push [TX Code Enter] to set the digit. The digit to the right will blink automatically.
- ⑥ Repeat ④ and ⑤ to input all allowable digits.
- ⑦ Push [Call] or [PTT] to transmit the edited TX code.

### ◇ Talkgroup ID code selection

(Digital mode operation only)

If the transceiver has [Talkgroup] assigned to it, the indication can be toggled between the operating channel name (and the channel number)\* and the Talkgroup ID name (or ID code if the ID name is not programmed.) When the Talkgroup ID name (or ID code) is displayed, [CH Up] or [CH Down] selects the desired Talkgroup ID name (or ID code).

- ① Push [Talkgroup]— Talkgroup ID name (or ID code) appears.

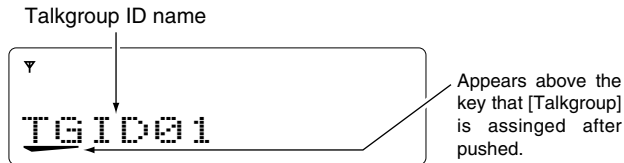

When the 2 lines indication mode is selected and [Talkgroup] is assigned to [P0].


- ② Push [CH Up] or [CH Down] to select the desired Talkgroup ID name (or ID code).
- ③ Push [PTT] to transmit the selected Talkgroup ID.

### ◇ TX Status message selection

(Digital mode operation only)

If the transceiver has [TX Status] assigned to it, the indication can be toggled between the operating channel name (and the channel number)\* and the Status message (and the Status channel.\* When the Status message (and the Status channel)\* is displayed, [CH Up] or [CH Down] selects the desired Status message.

- ① Push [TX Status]— Status message (and Status channel)\* appears.

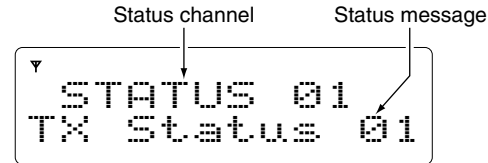

When the 2 lines indication mode is selected.

- ② Push [CH Up] or [CH Down] to select the desired Status message.
- ③ Push [PTT] to transmit the selected Status message.

\* Only when the 2 lines indication mode is selected.

---

## 2 BASIC OPERATION



### ◇ DTMF transmission

If the transceiver has [DTMF Autodial] assigned to it, the automatic DTMF transmission function is available. Up to 8 DTMF channels are available.

- ① Push [DTMF Autodial]— a DTMF channel appears.
- ② Push [CH Up] or [CH Down] to select the desired DTMF channel.
- ③ Push [DTMF Autodial] to transmit the DTMF code in the selected DTMF channel.

### ■ Scrambler function

The voice scrambler function provides private communication between stations. The frequency inversion type is equipped to all versions, moreover, the optional Rolling or Non-rolling type can be available.

- ① Push [Scrambler] to turn the scrambler function ON.
  - “” appears.
- ② Push [Scrambler] again to turn the scrambler function OFF.
  - “” disappears.




## ■ User set mode


User set mode is accessed with [User Set Mode] and allows you to set seldom-changed settings. In this case you can “customize” the transceiver operation to suit your preferences and operating style.

### Entering the user set mode:


- ① While pushing and holding [P1] and [P2], push [⏻] to turn the power ON. Then, push and hold [P0] to enter user set mode.

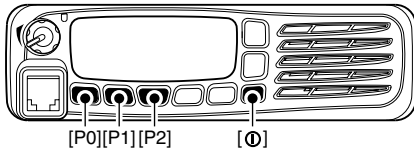

- ② Push [P0] several times to select the appropriate item. Then, push [Up] or [Down] to set the desired level/condition.
  - Available set mode functions are **Backlight**, **LCD Contrast**, **Beep**, **Beep Level**, **Ringer Level**, **SQL Level**, **AF Min Level**, **Mic Gain**, **Horn** and **Signal Moni**.

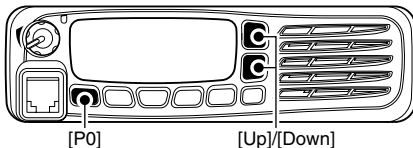


- ③ Push and hold [⏻] to turn power OFF, then ON again to exit set mode.

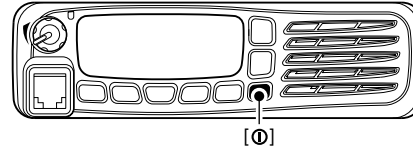


User set mode is also available via a programmable key. Please refer to p. 6 [User Set Mode] section.

## ■ Rear panel connection

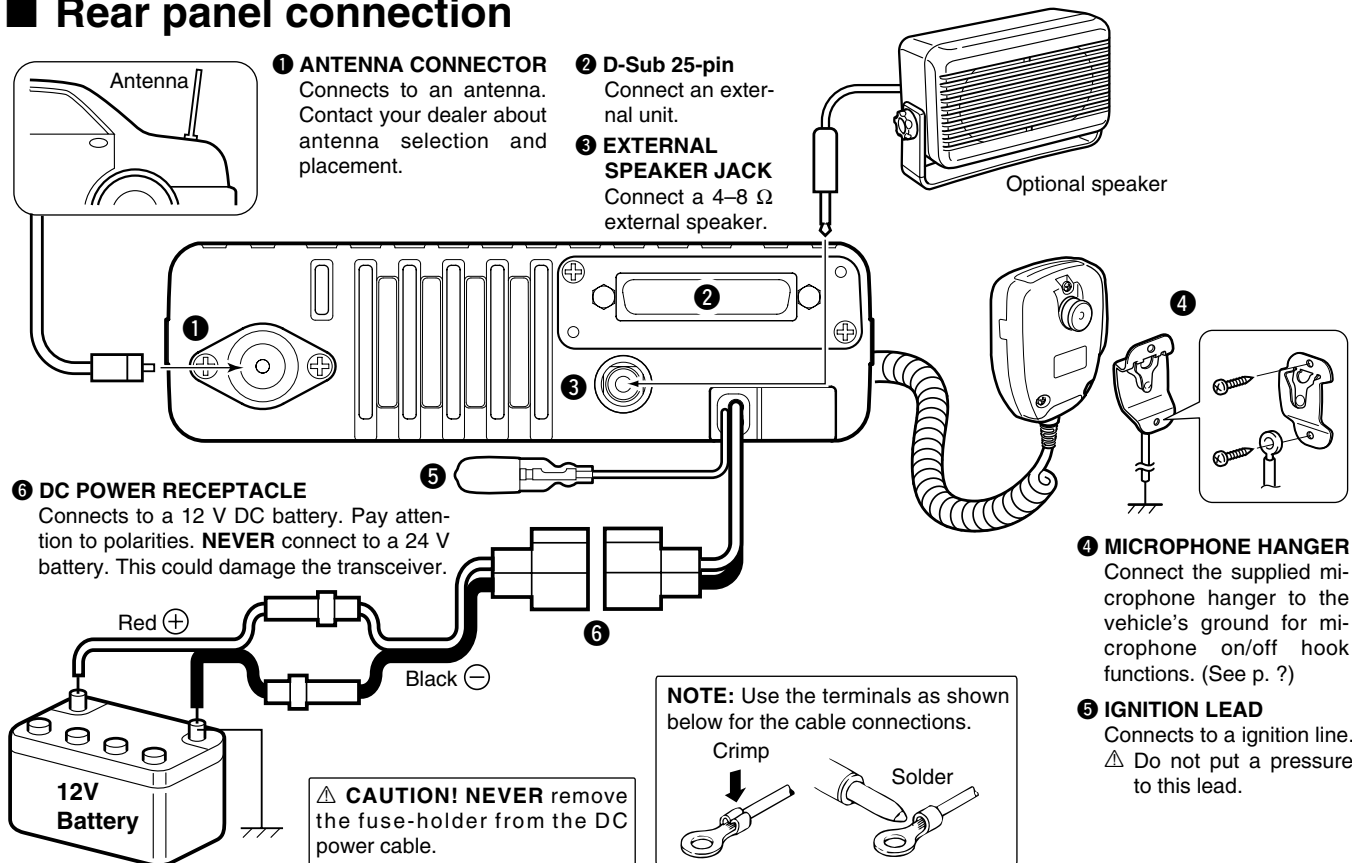


## ■ Supplied Accessories

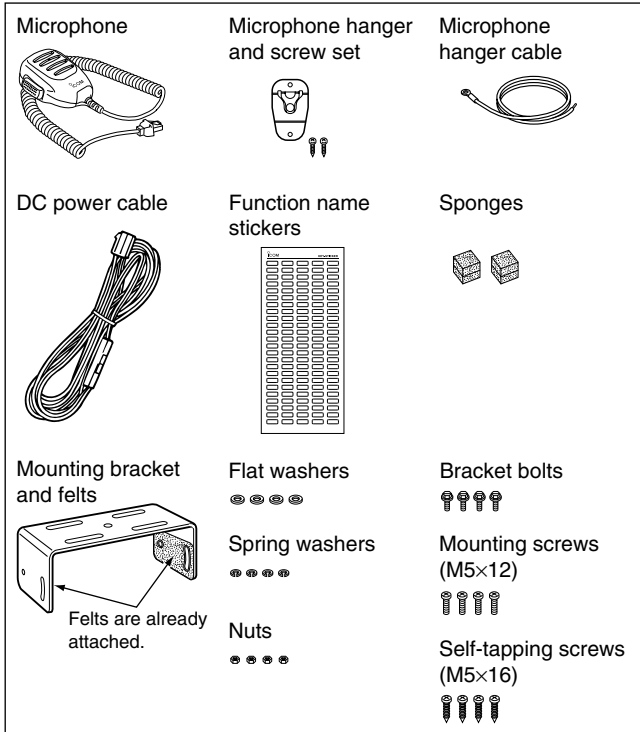

## ■ Mounting the transceiver

The universal mounting bracket supplied with your transceiver allows overhead mounting.

- Mount the transceiver securely with the 4 supplied screws to a thick surface which can support more than 1.5 kg.

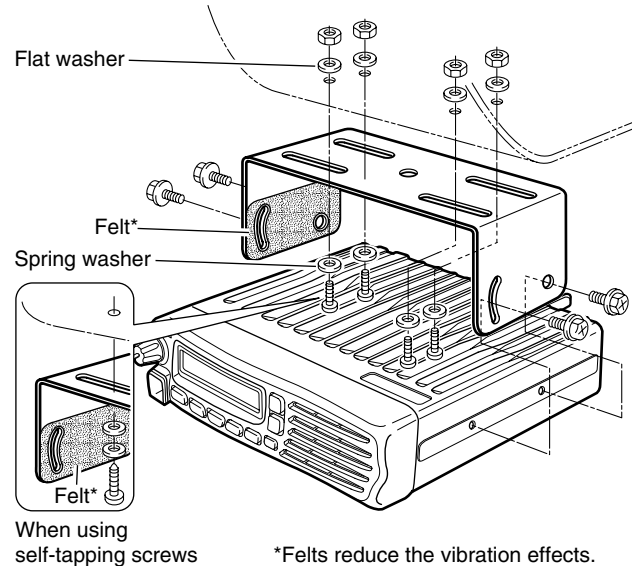

## 3 CONNECTION AND MAINTENANCE

### ■ Antenna


A key element in the performance of any communication system is an antenna. Contact your dealer about antennas and the best places to mount them.

### ■ Fuse replacement

A fuse is installed in the supplied DC power cable. If a fuse blows or the transceiver stops functioning, track down the source of the problem if possible, and replace the damaged fuse with a new rated one.

□ Fuse rating: 20 A

**USE** the 20 A fuse only.

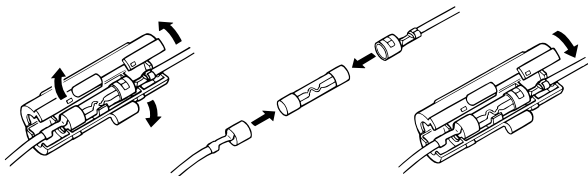

### ■ Cleaning

If the transceiver becomes dusty or dirty, wipe it clean with a soft, dry cloth.



**AVOID** the use of solvents such as benzene or alcohol, as they may damage the transceiver surfaces.

### ■ Options

- **RMK-3** SEPARATION KIT + **OPC-607/OPC-608/OPC-609** SEPARATION CABLE  
Allows you to install the transceiver main unit separately from the front panel for operating convenience.
- **SP-5/SP-10/SP-22** EXTERNAL SPEAKER  
Input impedance : 4  $\Omega$   
Max. input power : 5 W  
SP-5 : Large speaker for good audio quality.  
SP-10 : For all-round mobile operation.  
SP-22 : Compact and easy-to-install. The same as supplied with the transceiver (depending on version.)
- **HM-152/HM-152T/HM-148** HAND MICROPHONE  
HM-152 : Hand microphone  
HM-152T : DTMF microphone  
HM-148 : Heavy duty microphone
- **SM-25** DESKTOP MICROPHONE
- **UT-109R/UT-110R** SCRAMBLER UNITS  
Non-rolling type (UT-109R)/Rolling type (UT-110R) voice scrambler unit provides higher communication security.
- **UT-96R** STONE UNIT
- **UT-119** DIGITAL MODULATOR/DEMODULATOR UNIT  
Provides 6.25/12.5 kHz narrow bandwidth digital mode operation.



WARNING

Your Icom radio generates RF electromagnetic energy during transmit mode. This radio is designed for and classified as “Occupational Use Only”, meaning it must be used only during the course of employment by individuals aware of the hazards, and the ways to minimize such hazards. This radio is **NOT** intended for use by the “General Population” in an uncontrolled environment.

• For compliance with FCC and Industry Canada RF Exposure Requirements, the transmitter antenna installation shall comply with the following two conditions:

1. The transmitter antenna gain shall not exceed 0 dBi.
2. IC-F5061/IC-F5063:

The antenna is required to be located outside of a vehicle and kept at a distance of 1 meter or more between the transmitting antenna of this device and any persons during operation. For small vehicle as worst case, the antenna shall be located on the roof top at any place on the centre line along the vehicle in order to achieve 1 meter separation distance. In order to ensure this distance is met, the installation of the antenna must be mounted at least 1 meter away from the nearest edge of the vehicle in order to protect against exposure to bystanders.



CAUTION

To ensure that your exposure to RF electromagnetic energy is within the FCC allowable limits for occupational use, always adhere to the following guidelines:

- **DO NOT** operate the radio without a proper antenna attached, as this may damage the radio and may also cause you to exceed FCC RF exposure limits. A proper antenna is the antenna supplied with this radio by the manufacturer or an antenna specifically authorized by the manufacturer for use with this radio.
- **DO NOT** transmit for more than 50% of total radio use time (“50% duty cycle”). Transmitting more than 50% of the time can cause FCC RF exposure compliance requirements to be exceeded. The radio is transmitting when the “TX indicator” lights red. You can cause the radio to transmit by pressing the “PTT” switch.

## Electromagnetic Interference/Compatibility

During transmissions, your Icom radio generates RF energy that can possibly cause interference with other devices or systems. To avoid such interference, turn off the radio in areas where signs are posted to do so. **DO NOT** operate the transmitter in areas that are sensitive to electromagnetic radiation such as hospitals, aircraft, and blasting sites.





**Count on us!**

A-6565D-1EX  
Printed in Japan  
© 2006 Icom Inc.

Printed on recycled paper with soy ink.

**Icom Inc.**

1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan





**OPERATING GUIDE**

**GUIDE TO OPERATING  
LAND TRANSCEIVERS  
WITH BIIS/MDC/LTR SYSTEMS**

---

---

**Icom Inc.**

---

---

## IMPORTANT

---

Thank you for purchasing this Icom radio. The BIIS/MDC/LTR system functions are added to your IC-F5060 series radio.

**READ ALL INSTRUCTIONS** carefully and completely before using the transceiver.

**SAVE THIS OPERATING GUIDE**— This operating guide contains important operating instructions for;

- **IC-F5061/F5062/F5063** VHF MOBILE TRANSCEIVERS
- **IC-F6061/F6062/F6063** UHF MOBILE TRANSCEIVERS

/// **NOTE:** In this operating guide, the LCD illustration is described using the 2 lines indication mode.

Icom, Icom Inc. and the ICOM logo are registered trademarks of Icom Incorporated (Japan) in the United States, the United Kingdom, Germany, France, Spain, Russia and/or other countries.

All other products or brands are registered trademarks or trademarks of their respective holders.

---

## TABLE OF CONTENTS

---

<b>IMPORTANT</b> .....	<b>i</b>
<b>TABLE OF CONTENTS</b> .....	<b>i</b>
<b>1 PREPARATION</b> .....	<b>1</b>
■ Programmable function keys .....	1
<b>2 BIIS 1200 OPERATION</b> .....	<b>2-11</b>
■ Default setting .....	2
■ Receiving a call .....	2
■ Transmitting a call .....	4
■ Receiving a message .....	6
■ Transmitting a status .....	8
■ Position data transmission .....	10
■ Printer connection .....	10
■ Digital ANI .....	10
■ Auto emergency transmission .....	10
■ Stun function .....	11
■ BIIS indication .....	11
■ Priority A channel selection .....	11
■ Horn output .....	11
<b>3 MDC 1200 OPERATION</b> .....	<b>12-19</b>
■ MDC 1200 system operation .....	12
■ Receiving a call .....	12
■ Transmitting a call .....	15
<b>4 LTR OPERATION</b> .....	<b>20-21</b>
■ Receiving a call .....	20
■ Transmitting a call .....	21

## ■ Programmable function keys

The following functions for MDC 1200 system operation can be assigned to the programmable function keys;

**[UP], [DOWN], [P0], [P1], [P2], [P3] and [P4]**

Consult your Icom dealer or system operator for details concerning your transceivers programming.

If the programmable function names are bracketed in the following explanations, the specific key is used to activate the function depends on the programming.

### ◇ For BIIS mode operation only

#### **DIGITAL BUTTON KEY**

- Push to select the call ID list, transmit message and standby condition. Toggles between queue channel and received message record indication after queue channel is selected.
- Push and hold to select queue channel indication.

#### **STATUS UP/DOWN KEYS**

- While in the standby condition, push to display the transmit status indication and select a status number.
- When a received SDM is displayed, push to cancel the automatic scroll and scroll the message manually.
- When an SDM that contains more than 12 characters is displayed, push to scroll the message manually.

#### **10 KEY ENTER KEY**

Push to enable the connected microphone's 10-keypad operation.

### ◇ For MDC mode operation only

#### **MDC CALL KEY**

- Push to enter the MDC menu selection mode. Then select the desired MDC menu from "SELCALL," "CALALERT," "STUN," "REVIVE," "RADIOCHK," "STATUS" and "MSG" using [CH Up], [CH Down], [MDC Up] or [MDC Down]. After selection, push this key again to enter the transceiver alias or message channel selection mode.
- While in the transceiver alias or message channel selection mode, push to return to the MDC menu selection mode.

#### **MDC UP AND DOWN KEYS**

- Push to select the MDC menu after entering the MD menu selection mode.
- Push to select the desired transceiver alias or message channel while in the transceiver alias or message channel selection mode.

#### **MDC SELCALL KEY**

Push to enter the transceiver alias selection mode.

- After the desired alias selection, push [PTT] to transmit a SelCall.

#### **MDC CALLALERT KEY**

Push to enter the transceiver alias selection mode.

- After the desired alias selection, push [PTT] to transmit a CallAlert.

### ◇ For LTR mode operation only

#### **PHONE KEY**

Push to connect or disconnect the telephone network connection.

## ■ Default setting

The following functions are assigned to each programmable key as the default. However, the assigned function can be changed by your dealer. Ask your dealer for details.



### NOTE:


- During digital mode operation, BIIS 1200 is not available.
- [TX Code Enter] must be assigned to a key.


[P0]; Call	: Push to transmit a 5-tone/BIIS call when the selected channel is a 5-tone or MSK channel.
[P1]; Digital	: Push to select the call list ID/transmit message, or to display the receive message record for selection.
[P3]; TX Code Enter	: Push to enter the ID code edit mode directly for both 5-tone and MSK.
[P4]; Moni(Audi)	: Push this key after the communication to send a 'Clear down' signal during MSK channel operation.
[P2]; Null	: No function is assigned.
[Up]/[Down]; CH Up/Down	: While in the standby condition, push to select the operating channel. After pushing [Digital] or [TX Code CH Select], push to select call list or TX code channel, respectively.

## ■ Receiving a call


### ◆ Individual call

- ① When an individual call is received;
  - Beeps sound.
  - “” appears and the mute is released.
  - The programmed text message (e.g.“CALLING”) and the calling station ID (or text) is displayed when the indication mode is 2 lines.
  - The programmed text message (e.g.“CALLING”) and the calling station ID (or text) is displayed alternately when the indication mode is 1 line, depending on the setting.
  - “” appears or blinks depending on the setting.

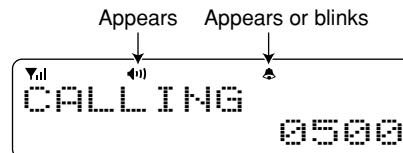


- ② Push and hold [PTT], then speak into the microphone at a normal voice level.
  - TX indicator lights red.
- ③ Release [PTT] to return to receive.
  - BUSY indicator lights green while receiving a signal.
- ④ To finish the conversation, push [P4] (Moni(Audi)) to send the 'Clear down' signal.
  - Either station can send a 'Clear down' signal.
  - “CLR DOWN” is displayed for 2 sec. (approx.).
  - “” disappears and the transceiver returns to the standby condition.

### ◆ Group call

- ① When a group call is received;
  - Beeps sound.
  - “

Appears      Appears or blinks

▼il  
GROUP  
1120


- ② Push and hold [PTT], then speak into the microphone at a normal voice level.
  - TX indicator lights red.
  - ⚡ **NOTE:** Only one station is permitted to speak.
- ③ Release [PTT] to return to receive.
  - BUSY indicator lights green while receiving a signal.
- ④ To finish the conversation, push [MONITOR] (Moni(Audi)) to send the 'Clear down' signal.
  - Either station can send a 'Clear down' signal.
  - “CLR DOWN” is displayed for 2 sec. (approx.)
  - “

### ◆ Displaying the received call record — Queue indication


The transceiver memorizes the calling station ID in the memory. Up to 3 calls can be memorized, and the oldest call record is erased when a 4th call is received. However, once the transceiver is powered OFF, the all records are cleared.

- ① Push [P1] (Digital) for 1 sec.
  - Displays following indication.

#### *When a record is available*



#### *When no record is available*





- ② Push [Up] or [Down], or rotate [DIAL] to select the desired call.
- ③ Push [P1] (Digital) for 1 sec. again to return to the standby condition.
  - When no operation is performed for 30 sec., the transceiver returns to the standby condition automatically.

### ■ Transmitting a call

A total of 3 ways for code selection are available—selecting the call code from memory, entering the call code from the keypad and calling back from the queue channel record.

#### ◇ Using call memory

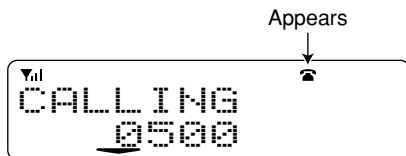
- ① While in the standby condition, push [P1] (Digital) to enter the call code memory channel selection mode.
  - “

The image shows a rectangular LCD display. In the top left corner, there is a small icon of a handset with the letters 'nil' above it. The main display area shows the word 'CALLING' in large, bold, capital letters. Below it, the number '0500' is displayed in a smaller font. In the top right corner, there is a small handset icon. An arrow labeled 'Appears' points to this handset icon.

- ② Push [Up] or [Down], or rotate [DIAL] to select the desired call code.
- ③ Push [P0] (Call) or [PTT]\* to call.
  - \*PTT call can be made only when PTT call capability is permitted.
  - NOTE:** When no answer back is received, the transceiver repeats the call 3 times (default) automatically, and “WAIT” is displayed during each call. However, an error beep sounds and “FAILED” is displayed when no answer back is received after the calls.
- ④ Push [PTT] to transmit; release to receive.
- ⑤ Push [P4] (Moni(Audi)) to send the ‘Clear down’ signal.

#### ◇ Calling back from the queue channel


- ① While in the standby condition, push [P1] (Digital) for 1 sec. to enter the queue memory channel selection mode.
- ② Push [Up] or [Down] or rotate [DIAL] to select the desired record.



- ③ Push [P0] (Call) or [PTT]\* to call.
  - \*PTT call can be made only when PTT call capability is permitted.
  - NOTE:** When no answer back is received, the transceiver repeats the call 3 times (default) automatically, and “WAIT” is displayed during each call. However, an error beep sounds and “FAILED” is displayed when no answer back is received after the calls.
- ④ Push [PTT] to transmit; release to receive.
- ⑤ Push [P4] (Moni(Audi)) to send the ‘Clear down’ signal.

### ◆ Direct code entry

- ① While in the standby condition, push [P3] (TX Code Enter) to enter the TX code edit mode.
  - Code digit for editing blinks.



- ② Push [P3] (TX Code Enter) to select the desired digit to be edited.
  - Digit for editing differs according to the setting.
- ③ Set the desired digit using [CH Up]/[CH Down].
- ④ Push [P3] (TX Code Enter) to set the digit, then the digit to the right will blink automatically.
- ⑤ Repeat ③ and ④ to input all allowable digits.
- ⑥ Push [P0] (Call) or [PTT]\* to call.

\*PTT call can be made only when PTT call capability is permitted.

/// **NOTE:** When no answer back is received, the transceiver repeats the call 3 times (default) automatically, and "WAIT" is displayed during each call. However, an error beep sounds and "FAILED" is displayed when no answer back is received after the calls.

- ⑦ Push [PTT] to transmit; release to receive.
- ⑧ Push [P4] (Moni(Audi)) to send the 'Clear down' signal.

---

#### ***For your information***


When the "UpDate" setting for the call code is enabled, the set code is overwritten into the call code memory.

---

### ■ Receiving a message

#### ◆ Receiving a status message

- ① When a status message is received;
  - Beeps sound.
  - The calling station ID (or text) and the status message is displayed alternately when the indication mode is 1 line, depending on the setting.




- ② Push [P4] (Moni(Audi)) to return to the standby condition.


**NOTE:** Only the calling station ID (or text) is displayed (no message is displayed alternately) when the scroll timer is set to 'OFF.' In this case, push [Status Up]/[Status Down] to display the status message manually.

#### ◆ Receiving an SDM (Short Data Message)

- ① When an SDM is received;
  - Beeps sound.
  - The calling station ID (or text) and the SDM is displayed alternately when the indication mode is 1 line, depending on the setting.
  - “✉” appears

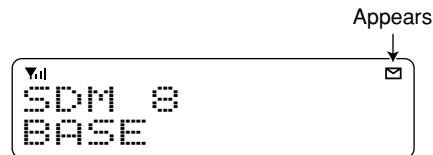

- ② When the received SDM includes more than 12 characters, the message scrolls automatically, when the automatic scroll function is activated.
  - Push [Status Up]/[Status Down] to scroll the message manually.



- ③ Push [P4] (Moni(Audi)) to return to the standby condition.




### ◆ Received message selection


The transceiver memorizes the received message in the memory. Up to 6 messages for status and SDM, or 95 character SDM's can be memorized. The oldest message is erased when the 7th message is received. However, once the transceiver is powered OFF, all messages are cleared.

- ① Push [P1] (Digital) for 1 sec.
  - Displays queue memory.
- ② Push [P1] (Digital) momentarily.
  - Displays message memory.

#### ***When a message is available***



#### ***When no message is available***



- ③ Push [Up] or [Down], or rotate [DIAL] to select the desired message.
  - When selecting the SDM that includes more than 12 characters, the message scrolls automatically when the automatic scroll function is activated.
  - Push [Status Up]/[Status Down] to scroll the message manually.

- ④ Push [P1] (Digital) for 1 sec. again to return to the standby condition.
  - When no operation is performed for 30 sec., the transceiver returns to the standby condition automatically.

### ■ Transmitting a status

#### ◇ General

The status message can be selected with the programmed text, and the message text is also displayed on the function display of the called station.

Up to 24 status types (1 to 24) are available, and the status messages 22 and 24 have designated meanings.

Status 22: Emergency\*

Status 24: GPS request


\*The status 22 can also be used as a normal status message by disabling the designated meaning. However, the status 24 is fixed.

The status call can be sent with both individual and group calls.

#### ◇ Transmitting a status

- ① While in the standby condition, push [P1] (Digital), then push [Up] or [Down], or rotate [DIAL] to select the desired station/group code.
- ② Push [P1] (Digital) again, then push [UP] or [DOWN] to select the desired status message.

Or, you can select the desired status message using [Status Up]/[Status Down] key directly.



Status message is displayed.

- ③ Push [P0] (Call) or [PTT]\* to transmit the status message to the selected station/group.
  - \*PTT call can be made only when PTT call capability is permitted.
  - 2 beeps will sound and the transceiver returns to the standby condition automatically when the transmission is successful.


### ◆ General

The short data message, SDM, can be sent to an individual station or group stations. Also, 8 SDM memory channels are available and the messages can be edited via PC programming.

### ◆ Transmitting an SDM

- ① While in the standby condition, push [P1] (Digital), then push [Up] or [Down] or rotate [DIAL] to select the desired station/group code.
- ② Push [P1] (Digital) again, then push [Up] or [Down] or rotate [DIAL] to select the desired SDM.

Or, you can select the desired SDM using [Status Up]/[Status Down] key directly.

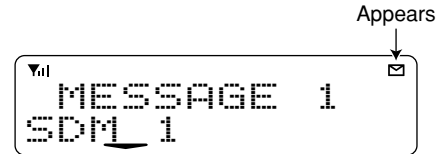

SDM is displayed.

- ③ Push [P0] (Call) or [PTT]\* to transmit the SDM to the selected station/group.
  - \*PTT call can be made only when PTT call capability is permitted.
  - 2 beeps will sound and the transceiver returns to the standby condition automatically when the transmission is successful.

### ■ Position data transmission

When the optional cable and a GPS receiver is connected to the transceiver, the position (longitude and latitude) data can be transmitted automatically.

Ask your dealer or system operator for connection details.

The position data is transmitted when;

- Status 24 message is received  
\*When the status 24 message, GPS request, is received.
- Fully automatic  
When automatic position transmission is enabled, send the position data according to 'Time Marker' and 'Interval Timer' settings.
- PTT is released  
When 'Send with Logoff' is enabled.  
-Set the 'Log-In/Off' item as 'L-OFF.'
- After sending a status message  
When 'Send with Status' is enabled.
- After sending an SDM  
When 'Send with SDM' is enabled.
- After sending status 22 (Emergency)  
When 'Send with Emergency' is enabled.

### ■ Printer connection

When the printer is connected to the D-sub 25-pin of the transceiver, the received SDM content and the ID of the station who sent the message can be printed out. Ask your dealer or system operator for connection details.

### ■ Digital ANI

The own ID can be transmitted each time the PTT is pushed (log-in) or released (log-off) during individual or group call communications.

By receiving the ANI, the communication log can be recorded when using a PC dispatch application.

In addition, when using the ANI with log-in, the PTT side tone function can be used to inform you that the ID is sent and voice communication can be performed.

### ■ Auto emergency transmission

When [Emergency Single (Silent)] or [Emergency Repeat (Silent)] is pushed, an emergency signal is automatically transmitted for the specified time period.

The status 22 (Emergency) is sent to the selected ID station, and the position data is transmitted after the emergency signal when a GPS receiver is connected to the transceiver.

The emergency transmission is performed on the emergency channel, however, when no emergency channel is specified, the signal is transmitted on the previously selected channel.

There is no change in the function display or beep emission during automatic emergency transmission.

## ■ Stun function

When the specified ID, set as a killer ID, is received, the stun function is activated.

When the killer ID is received, the transceiver switches to the password required condition. Entering of the password via the keypad is necessary to operate the transceiver again in this case.

## ■ BIIS indication

The following indications are available for the BIIS operation on an MSK channel.

- CONNECT : Individual/group call is successful.  
 OK : Message (status or SDM) transmission is successful.  
 FAILED : No answer back is received.  
 WAIT : Appears during retry of the call (2nd call).  
 CLR DOWN : End the communication.  
 BUSY : Operating channel is in the busy condition.

## ■ Priority A channel selection

When one of the following operations is performed, the transceiver selects the Priority A channel automatically.

Priority A is selected when;

- Clear down signal is received/transmitted
  - Set the 'Move to PrioA CH' item as 'Clear down.'
- Turning the power ON
  - The Priority A channel is selected each time the transceiver power is turned ON.
- Status call
  - The Priority A channel is selected when transmitting a status call.
  - Enable the 'Send Status on PrioA CH' item in the MSK configuration.

## ■ Horn output

Automatic honking function is available when the horn honk equipment is connected to D-Sub 25-pin of the transceiver. When a status message is received, the transceiver controls the vehicles horn for the specified time period to inform a status message is received.

This function is convenient when the operator away from the transceiver.

Ask your dealer or system operator, or refer to the service manual for connection and setting details.

## ■ MDC 1200 system operation

The MDC 1200 signaling system enhances your transceiver's capabilities. It allows PTT ID, Selective Calling, CallAlert, Radio Check, Stun, Revive, Status, Messaging and Emergency signaling. Also, the dispatcher can stun and revive transceivers on the system.

An additional feature of MDC 1200 found in Icom transceivers is called aliasing. Each transceiver on the system has a unique ID number. Aliasing allows the substitution of an alphanumeric name for this ID number. For transmit, you can use this alias to select a transceiver to call. For receive, the alias of the calling station is displayed instead of the ID.


Please note that your dealer has set one of the programmable keys ([UP], [DOWN], [P0], [P1], [P2], [P3] and [P4]) for MDC 1200 operation.

/// **NOTE:** During digital mode operation, MDC 1200 is not available.

## ■ Receiving a call


### ◆ Receiving a Selective Call


- ① When a selective call is received;
  - Beeps sound.
  - “🔊” appears.
  - “🔔” blinks.
  - The calling station ID (or alias) and “**SELCALL**” are displayed alternately.

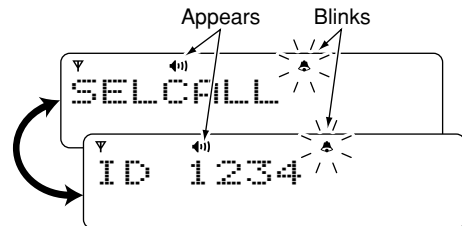

- ② Push and hold [PTT] and speak into the microphone.
- ③ Release [PTT] to receive a response.

### ◆ Receiving a CallAlert


- ① When a CallAlert is received;
  - Beeps sound.
  - “” blinks.
  - The calling station ID (or alias) and “**CALLALRT**” are displayed alternately.

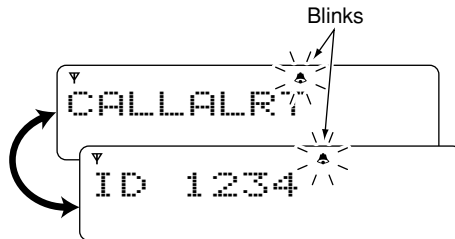

- ② Push and hold **[PTT]** and speak into the microphone.
- ③ Release **[PTT]** to receive a response.

### ◆ Receiving a Emergency Call

- ① When an emergency call is received;
  - Beeps sound.
  - The calling station ID (or alias) and “**EMG EMG**” are displayed alternately until turning power OFF, the channel changing, etc.

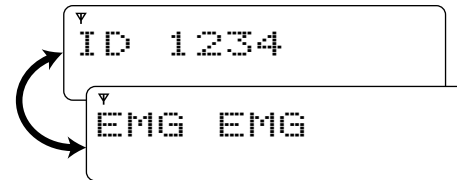


- ② When the automatic acknowledgement function is turned ON, the transceiver automatically transmits an acknowledgement call to the station.
  - The calling station stops calling.
- ③ Turn power OFF, change the channel, etc. to stop the beep and display indication.

### 3 MDC 1200 OPERATION

#### ◆ Receiving a Message


- ① When a Message is received;
  - Beeps sound.
  - The calling station ID (or alias) and the message are displayed alternately.

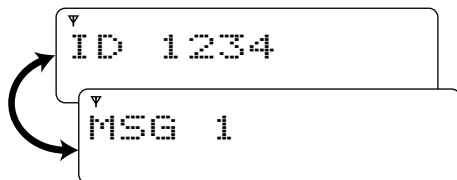

- ② Turn power OFF, push **[PTT]**, change the channel, etc. to stop the display indication.

#### ◆ Receiving a Status Message

- ↳ When a Status Message is received;
  - Beeps sound.
  - The calling station ID (or alias) and the status message are displayed once.

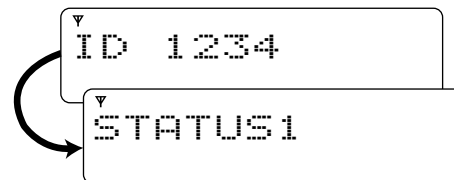

#### ◆ Receiving a Stun or Revive

If a Stun command is received that matches your station ID, the transceiver will display “SORRY” and you can not receive or transmit. When a Revive command is received that matches your station ID, normal operation is restored.




## ■ Transmitting a call

### ◆ Transmitting a Selective Call

Selective calling allows you to make a call to a specific station or to a particular group. Other MDC 1200 transceivers on the channel will not receive a selective call that does not match their station or group ID's.

- ① Push **[MDC Call]** to enter the MDC menu selection mode.
  - Or push **[MDC SelCall]** to enter the transceiver alias selection mode. In this case, skip step ②.



- ② Push **[MDC Call]** again to enter the transceiver alias selection mode.
- ③ Select the desired alias using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.
- ④ Push and hold **[PTT]** to transmit the selective call to the selected station, then speak into the microphone.
  - “**📞**” appears.
- ⑤ Release **[PTT]** to receive.

### ◆ Transmitting a CallAlert

CallAlert allows you to notify another user who may be away from the transceiver that you want to talk.

- ① Push **[MDC Call]** to enter the MDC menu selection mode.
  - Or push **[MDC CallAlert]** to enter the transceiver alias selection mode. In this case, skip steps ② and ③.
- ② Select “**CALALERT**” using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.



- ③ Push **[MDC Call]** again to enter the transceiver alias selection mode.
- ④ Select the desired alias using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.
- ⑤ Push **[PTT]** to transmit the CallAlert to the selected station.
  - “**CA CALL**” is displayed.
- ⑥ Release **[PTT]**.
  - “**CA OK**” is displayed if the targeted station received the alert.
  - “**CA FAIL**” is displayed if the targeted station does not send an acknowledgement.
- ⑦ After a specified time period has passed, the transceiver will return to receive.

---

### 3 MDC 1200 OPERATION

#### ◆ Transmitting a Stun Call

Stun call allows you to send MDC 1200 signal that will stun the targeted station.

- ① Push **[MDC Call]** to enter the MDC menu selection mode.
- ② Select “**STUN**” using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.




- ③ Push **[MDC Call]** again to enter the transceiver alias selection mode.
- ④ Select the desired alias using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.
- ⑤ Push **[PTT]** to transmit the stun call to the selected station.
  - “**STN TX**” is displayed.
- ⑥ Release **[PTT]**.
  - “**STN ACK**” is displayed if the targeted station is turned ON, on channel and within range.
  - “**STN FAIL**” is displayed if the targeted station does not send an acknowledgement.
- ⑦ After a specified time period has passed, the transceiver will return to receive.

#### ◆ Transmitting a Revive Call

Revive call allows you to send MDC 1200 signals that will revive the targeted (stunned) station.

- ① Push **[MDC Call]** to enter the MDC menu selection mode.
- ② Select “**REVIVE**” using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.




- ③ Push **[MDC Call]** again to enter the transceiver alias selection mode.
- ④ Select the desired alias using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.
- ⑤ Push **[PTT]** to transmit the revive call to the selected station.
  - “**REV TX**” is displayed.
- ⑥ Release **[PTT]**.
  - “**REV ACK**” is displayed if the targeted station is turned ON, on channel and within range.
  - “**REV FAIL**” is displayed if the targeted station does not send an acknowledgement.
- ⑦ After a specified time period has passed, the transceiver will return to receive.

### ◆ Transmitting a Radio Check Call

Radio check call allows you to determine whether another transceiver is turned on, within range and on channel without requiring any action from the targeted station user.

- ① Push **[MDC Call]** to enter the MDC menu selection mode.
- ② Select “**RADIOCHK**” using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.



- ③ Push **[MDC Call]** again to enter the transceiver alias selection mode.
- ④ Select the desired alias using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.
- ⑤ Push **[PTT]** to transmit the radio check call to the selected station.
  - “**RDO CHK**” is displayed.
- ⑥ Release **[PTT]**.
  - “**CHK ACK**” is displayed if the targeted station is turned ON, on channel and within range.
  - “**CHK FAIL**” is displayed if the targeted station does not send an acknowledgement.
- ⑦ After a specified time period has passed, the transceiver will return to receive.


### ◆ Transmitting a Status Message

Status Messaging allows you to send a pre-programmed status message. There are 16 status codes that can be sent. In addition, the dispatcher can send an MDC 1200 signal that causes the transceiver to automatically transmit its current status.

- ① Push **[MDC Call]** to enter the MDC menu selection mode.
- ② Select “**STATUS**” using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.



- ③ Push **[MDC Call]** again to enter the status message selection mode.



- ④ Select the desired status message using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.
- ⑤ Push **[PTT]** to transmit the selected status message.
  - “**STAT TX**” is displayed.
- ⑥ Release **[PTT]**.
  - “**STAT OK**” is displayed.
  - “**STA FAIL**” is displayed if there is no acknowledgment from the dispatcher.
- ⑦ After a specified time period has passed, the transceiver will return to receive.

### 3 MDC 1200 OPERATION


#### ◆ Transmitting a Message

The transceiver can send a pre-programmed message. There are 16 messages that can be sent on a channel.

- ① Push **[MDC Call]** to enter the MDC menu selection mode.
- ② Select “MSG” using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.



- ③ Push **[MDC Call]** again to enter the pre-programmed message selection mode.



Pre-programmed message is displayed.

- ④ Select the desired message using **[CH Up]**, **[CH Down]**, **[MDC Up]** or **[MDC Down]**.
- ⑤ Push **[PTT]** to transmit the selected message.
  - “MSG TX” is displayed.

- ⑥ Release **[PTT]**.
  - “MSG OK” is displayed.
  - “MSG FAIL” is displayed if there is no acknowledgment from the dispatcher.
- ⑦ After a specified time period has passed, the transceiver will return to receive.

### ◆ PTTID Calls

The transceiver can send an MDC 1200 signal that includes PTTID when **[PTT]** is pushed (beginning of transmission) and released (end of transmission). If a PTTID call is received, the transceiver will display the calling station ID (or alias) and emit a beep\*.

\*Depends on the setting.

### ◆ Emergency Calls

The MDC 1200 Emergency feature can be accessed using the **[Emergency Single]** or **[Emergency Repeat]** key (described in the instruction manual). The transceiver will repeatedly send an Emergency MDC 1200 command for a programmed length of time until it receives an acknowledgement signal.

The emergency call can be transmitted without a beep emission and LCD indication change depends on the setting.

With MDC 1200 Emergency, the transceiver can also be programmed to keep the microphone open during an emergency call, allowing monitoring of the situation.

Ask your dealer for details.


## ■ Receiving a call

### ◇ Group call

- ① Push [CH Up] or [CH Down] to select the LTR system channel or talk group.
- ② When a call is received;
  - 'BUSY' indicator lights green.
- ③ Push and hold [PTT], then speak into the microphone at a normal voice level.
- ④ Release [PTT] to return to receive.


### ◇ Selective call (DTMF call)

- ① Push [CH Up] or [CH Down] to select the LTR system channel or talk group.
- ② Push [Call] to mute the channel.
- ③ When receiving a call, the calling station name appears and a beep is emitted. Then the mute is released.
  - "📞" appears.

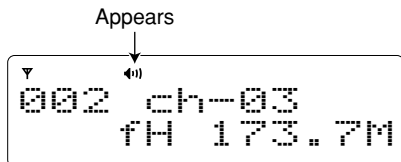

### ◇ Phone call

- ① Push [CH Up] or [CH Down] to select the phone channel of LTR system channel.
  - "📞" appears.
- ② When a phone call is received (transceiver rings), push [Phone] (or push [PTT]).
  - "📞" blinks.

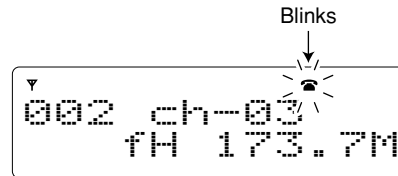

- ③ Push and hold [PTT], then speak into the microphone at a normal voice level. Release [PTT] to return to receive.
- ④ After conversation is finished, push [Phone] to disconnect the phone call.
  - "📞" stops blinking.

## ■ Transmitting a call

### ◇ Group call


- ① Push [CH Up] or [CH Down] to select the LTR system channel or talk group.
- ② While pushing and holding [PTT], speak into the microphone at a normal voice level after a beep is emitted.
  - If an error beep is emitted, release [PTT]. After a while, repeat step ②.
  - The beep can be turned OFF in User set mode.

### ◇ Selective call (DTMF call)

- ① Push [CH Up] or [CH Down] to select the LTR system channel or talk group.
- ② Push [DTMF Autodial]— a DTMF encode channel appears.
- ③ Push [CH Up] or [CH Down] to select the desired DTMF encode channel.
- ④ Push [PTT] to transmit the selected DTMF code in the selected DTMF channel.
  - Push [DTMF Autodial] to cancel the DTMF transmission.

### ◇ Phone call

- ① Select the phone channel of LTR system channel.
  - “☎” appears.
- ② Push [Phone] (or push [PTT]).
  - “☎” blinks.

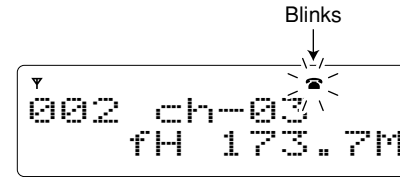

- ③ Push [DTMF Autodial] to make a phone call.
- ④ After conversation is finished, push [Phone] to disconnect the phone call.
  - “☎” stops blinking.

**Count on us!**

A-6565I-2EX  
Printed in Japan  
© 2006 Icom Inc.

Printed on recycled paper with soy ink.

**Icom Inc.**

1-1-32 Kamiminami, Hirano-ku, Osaka 547-0003, Japan