

From the base

- 1) Press corresponding soft key (LAND or MOBILE) on the base to join the conference call.
- 2) To hang up, press **FLASH** on the base. The handset(s) will still be connected to the call.

From a second handset

- 1) Press corresponding soft key (LAND or MOBILE) on the handset to join the call.
- 2) To hang up, return the handset to the cradle, or press end on the handset. The base or other handset will still be connected to the call.

Conferencing with one outside line

To hold a conference call with one outside line, simply have the handsets or base join the call.

Conferencing with telephone line (LAND / MOBILE)

Follow the steps below to allow both outside lines to participate in a conference call:

- 1) During a call, press **BACK/HOLD/INTERCOM** twice to put the first caller on hold.
- 2) Press the line soft key (LAND or MOBILE) for a free line to make or answer a second call.
- 3) When the second call is connected, press **MENU/SELECT** and select **Conference** to initiate a conference call.
- 4) To disconnect a single caller, press the corresponding soft key (LAND or MOBILE) to place the caller you wish to keep speaking to on hold and then press the **END** soft key to hang up the other caller.

For example, to hang up MOBILE line but leave LAND line connected:

- Press **LAND** soft key to put **LAND** line on hold.
- Press **end** to hang up **MOBILE** line.
- Press the **LAND** soft key to take **LAND** line off hold and continue the conversation.

To hang up both lines, press **talk/flash** or **Ⓜ** (or **Ⓜ**)/**flash** on the base).

Mobile Line Transfer

To forward or receive a call from or to **MOBILE** line. Follow the steps below;

From MOBILE line

Press the **MOBILE** soft key during a call, and then the **CONNECT** soft key.

To MOBILE line

Press **menu/select** during a call, and select **Transfer>Mobile**.

Transferred appears and the phone return to standby mode.

Redialing Calls

You can quickly redial the last 20 phone numbers for each handset and 10 numbers for the base.



With the phone in standby mode, press **redial**/ ∇ on the handset (or press the **MENU** soft key, and then select redial on the base). This brings up the redial list. Use up/down key to scroll through the numbers, and select the number you want to dial.

Press **talk/flash** (or \bullet /**flash**) or \bullet on the base to dial the selected number. If you want to call using **Mobile** line, press the **CALL** soft key, then **MOBILE** soft key. Use up/down key to select the cellular phone to use and press **CONNECT** soft key.

You can also display the list for redial number with the phone in talk mode. After select the redial number, press the **DIAL** soft key to redial the number.

Deleting Redial Records

If you want to delete a phone number from the redial list, go to the redial list in standby mode, and select the number you want to delete. Press the **OPTIONS** soft key, and select **Delete Selection**, and then **Yes**. If you want to delete all the redial records, select **Delete All**, and then **Yes**.

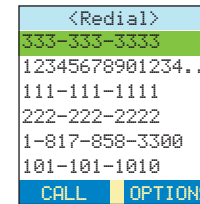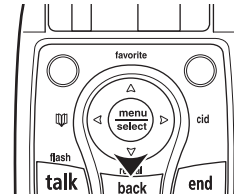


- Each redial record can store up to 32 digits.
- To store redial numbers in the Phonebook, see page 66.

Adjusting the Base Ringer and Speaker

Adjusting the base ringer volume

You can choose from three ringer settings on the base: off, low, and high. When the phone is in standby mode, go to Rings/Volumes menu, and then select **Ringer Volume**. Use up/down key to select the Tel type (LAND or MOBILE), and press **menu/select**. Use up/down key to select the ringer volume, and **menu/select**. You will here a confirmation tone.



Adjusting the base speaker volume


You can adjust the volume of the answering machine speaker while a message is playing. Press **volume** up/down during a message to choose one of the 10 volume levels.

You can also set the speaker volume from the base. Go to Rings/Volumes menu, and then select **Speaker Volume**. Use the up/down key to select the speaker volume, and then **menu/select**. You will here a confirmation tone.

Using the Handset Volume Setting Menu



Ringer: Adjust the handset ringer volume

You can choose from three different ringer volume settings on your handset: off, low, and high. When the phone is in standby mode, go to the Rings/Volumes menu, and then select Ringer Options. Use up/down key to select the Tel type (LAND or MOBILE), and press menu/select. Use up/down key to select the ringer volume, and menu/select. You will here a confirmation tone.

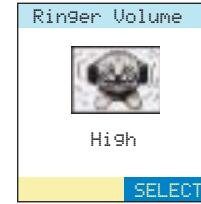

Ear speaker: Adjust the handset earpiece volume During a call.

You can choose from six volume levels for the earpiece speaker. To adjust the earpiece volume, go to Speaker Setup menu, and select Earpiece Volume and select the volume level you want to use.

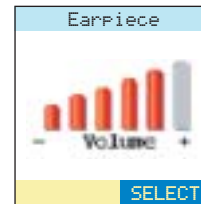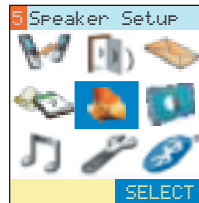


You can also adjust the earpiece volume during a call by pressing volume up/down keys, and then up (to make it louder) or down (to make it softer).

Speaker: Adjust the handset speaker volume

You can choose from six volume levels for the handset speakerphone. To adjust the speaker volume, go to Speaker Setup menu, and select **Speaker volume** select the volume level you want to use.


You can also adjust the handset speaker volume during a call by **Ⓜ** and then **(+)** (to make it louder) or down **(-)** (to make it softer).

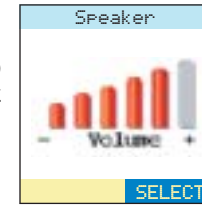


Audio Tone

If you aren't satisfied with the audio quality of your phone, you can adjust the Audio Tone of the earpiece. Your phone gives you three audio tone options: low, Natural or high. Go to Speaker Setup menu, and select **Audio Tone** and select the option that sounds best to you.

(Audio tone adjustments only apply to the earpiece, not the speakerphone.)

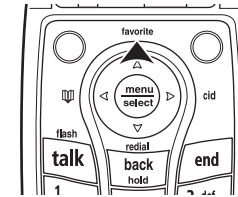

Mute


While the handset is ringing, you can mute the handset ringer for this call by pressing end on the handset. To mute the base ringer press  on the base. The phone will ring again on the next call.

Mute the Handset Microphone

When you're on the phone, press the **OPTIONS** key and select **Mute** to turn off the microphone so the caller can't hear you. The display shows **Mute On** while the microphone is muted. To turn off muting, repeat the above step again.

Tone Dialing Switch Over

If your telephone company uses pulse dialing, you can switch over to tone dialing after the call connects. This feature is useful when you need tone dialing to use any automated menu systems, such as telephone bank tellers, telephone prescription refills, customer support menus, etc.

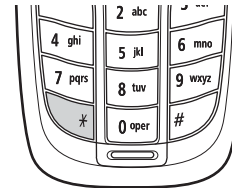


If your phone is set to pulse dialing mode, make your call normally. Once your call connects, press the ***/tone** key. Any digits you enter from then on will be sent as tone digits. When this particular call ends, the phone automatically returns to pulse dialing mode.



You can only mute the handset ringer if the handset is off the base when the phone starts ringing.


Privacy Mode

Privacy mode prevents interruption from other registered handsets or the base. This works only when the phone is in use. While on a call, press the **OPTIONS** soft key on the handset or base. Use up/down key to select call privacy. Privacy mode On and appear in the display. To exit Privacy Mode, Use the same procedure. Privacy Mode Off appears.

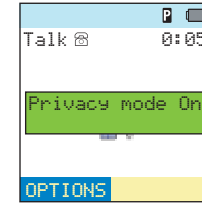

Find Handset


To locate the handset, press **end/find hs** on the base when the phone is in standby mode. Select the handset to page. The handset beep for 60 seconds, and **Paging** appears on the handset display. To cancel paging, press any key on the handset or **end/find hs** on the base.



Reminder (Handset only)

Your phone has a built-in calendar that you can use to schedule reminders and appointments (all the way through December 31, 2099). You can set alarms for up to 30 different events.


A pop-up screen appears and reminder tone sounds when the scheduled time & date comes. To show detailed info on the reminder, press the **VIEW** soft key. To mute the reminder tone, press the **MUTE** key.

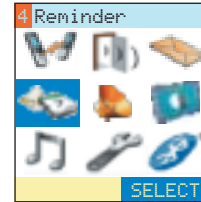


To reset the reminder and clear the screen, press **end** when reminder tone stops. To dismiss Reminder Display press DISMISS appears. Press the DIMISS key. The phone return to standby mode.

Scheduling a reminder

Select the reminder option to show Reminder (Calendar). Today is highlighted. If the reminder is set for the morning, a bar appears lower left of the date number; if the reminder is set for the afternoon or evening, a bar appears lower right of the date number. Use up, down, right or left key to move the cursor to the date.

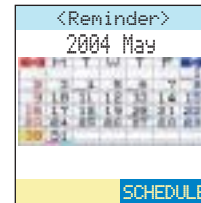

- 1) Press **menu/select** to select day.
- 2) Press the **STORE** soft key to add a reminder.
- 3) Use the number keypad to change the day and time.
- 4) Use the number keypad or * to select the hours and minutes.
Press **menu/select** when you're finished.
- 5) To change the title, select **!** and press **menu/select**.
Use the number keypad, */**tone**, #, left, right key, and the **DELETE** soft key. Press **menu/select** when you're finished.
- 6) If you want to set recurrence, press **Q**, and press **menu/select**. Select frequency (None, Daily, Weekly, Monthly, Yearly) from the list. Press **menu/select** when you're finished.
- 7) If you want your phone to ring when this reminder occurs, move to the line **!** indicated, and press **menu/select**. Select the ringer tone you want the phone to ring. Press **menu/select** when you're finished.
- 8) To enter a reminder text for this reminder, select **!** and press **menu/select**. **Edit Message** appears. You can enter up to 80 digits. Press **menu/select** when you're finished.
- 9) When everything is correct, press the **DONE** soft key.

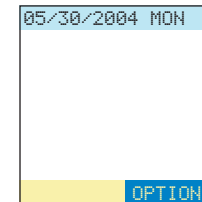

Editing and deleting reminders


You can edit reminders by pressing the **SCHEDULE** soft key and selecting the reminder by pressing the **OPTION** key. Once the reminders is selected, you can edit the date, time, reminder tone, and text the same way you entered them for a new entry.

To delete reminders, select the reminder and press the **OPTION** soft key. Select **Delete Selection**. To delete all reminders, select **Delete All**.

Using the Phonebook

Your phone lets you store up to 100 entries in each handset and base. You can store up to 4 phone numbers for each name in your phonebook (for a total of 400 numbers), and you assign names to groups for easy searching. You can store a distinctive ringer tone, picture display, and backlight color to your each or group.

You can enter your phonebook by Pressing the phonebook key on the handset or base.

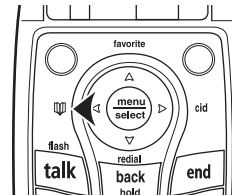

Creating and Editing Phonebook Entries



Go to the phonebook and press the **OPTIONS** soft key. Select **New Entry** to store, or **Edit Selection** to edit the location. Enter as much of the following information as you want. Press **menu/select** to enter each entry and confirm the selection. When you're finished, press the **DONE** soft key to save this phonebook entry.



 note

You can save up to 4 numbers for each phonebook entry. If you try to save more than 4 numbers for a phonebook entry, your phone will display Dial data is full. You'll have to delete one of the existing numbers before you add a new one.







www.uniden.com

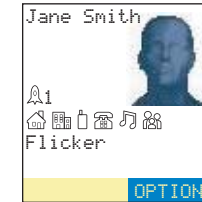Step 1: Name ,

Select ,  and use the keypad to enter the name for this entry. You can enter up to 16 characters. If you don't want to enter a name, your phone will store this entry as No Name. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.





Step 2: Number ,

Select ,  and enter a phone number for this entry. If you need your phone to pause between digits when it's dialing (for example, to enter an extension or an access code), press the **PAUSE** soft key to insert a two-second pause. You'll see a P in the display. You can stack more than one pause together if two seconds isn't long enough. Each pause counts as one digit; you can enter up to 20 digits for the phone number. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry. You can select an icon to remind you which number this is: home , , work , , or general phone number. Press **menu/select** when you're finished.




Step 3: Unique Ring ,

Select ,  to attach a special ring to this phone. Select the ringer tone you want the phone to use when this person calls, or select No Selection to have the phone use its regular ringer tone. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.



Using the Phonebook [64]

Step 4: Unique Display (Handset only)

Select  to attach a special screen display to this entry. Select the display you want the phone to use when this person calls, or select No Selection to have the phone use its regular display. You can press the **VIEW** soft key to see the display choices:

Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.

Step 5: Phonebook Group ,

Select ,  to place this entry into a phonebook group. Select the group (0-9) you want this entry to belong to, or select No Selection to leave the entry outside of any group. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry. See page 68 for information on creating and editing groups. To select a group, see page 68.

Step 6: Speed Dial ,

Select **0-9** to save this number to one of the 10 speed dial numbers or No Selection if you don't want to save it to a speed dial number. If there's already a phone number saved to the speed dial number you select, your phone will ask if you want to overwrite the number. Press **menu/select** when you're finished, and your phone will go back to the current phonebook entry.

Storing Caller ID or Redial Numbers in the Phonebook

You can store Caller ID or redial numbers in your phonebook so you can use them later. Go to the Caller ID list or redial list and select the number you want to store. (If the Caller ID information didn't include the number, then you can't store it.) Press the **OPTIONS** soft key and select *Add to Phonebook*. Your phone will create a phonebook entry so you can enter the additional information shown on page 63. If the number you want to save is already in the phonebook, your phone will display *This data is already stored!*.

Managing the Phonebook

With the **OPTIONS** soft key, you can delete phonebook entries, copy entries to another handset, check how many empty phonebook and speed dial entries you have available, sort your phonebook by groups, and name phonebook groups.

Deleting phonebook entries

Go to the phonebook and select the entry you want to delete. Press the **OPTIONS** soft key and select *Delete*. Use up/down key to select *Delete Selection*. Your phone will ask you to confirm select *Yes*.


To delete all the entries from your phonebook, go to the phonebook and press the **OPTIONS** soft key without selecting an entry. Select *Delete*, and then *Delete All*. Your phone will ask you to confirm select *Yes*.

Copying phonebook entries to another handset

When you copy entries to another handset or base, the group and speed dial information won't be transferred. Your phone will cancel the copying process if any one of the following things occurs:

- If the handset you are copying to doesn't have enough memory (the phone will show "Not enough memory in receiving unit").
- If the handset you are copying to already has that phone number in its phonebook.
- A call comes in during the copying process.


To copy a single entry, go to the Phonebook and select the entry you want to copy. Press the **OPTIONS** soft key and then **COPY Selection**. Select the handset or base you want to copy to the entry to.

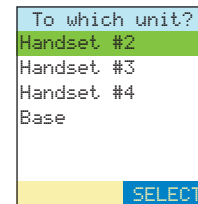

To copy all the phonebook entries, go to the phonebook and press the **OPTIONS** soft key without selecting an entry. Select then **COPY All**. Select the handset or base you want to copy to the entry to.

Checking the number of stored entries

To see how many phonebook entries you have, go to the phonebook and press the **OPTIONS** soft key and select **PhoneBk Capacity**. The phone will show you how many stored names (entries) and how many stored phone numbers (total) you have.

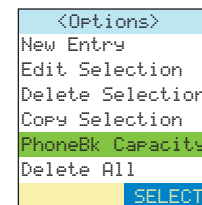

To see your speed dial entries, go to the phonebook and press the **OPTIONS** key and select **Check * Dials**. The phone will show you which speed dial numbers have phone numbers stored in them.



To make a speed dial using the mobile line, press the **MOBILE** soft key.

Changing the sorting order

To change the sorting of your phonebook, go to the phonebook and press the **OPTIONS** soft key and select **Sort**. Select **Alphabetically** to see the list of names in alphabetical order; select **Group** to see the list of groups in alphabetical order. Enter a letter from the keypad to jump to the first entry beginning with that letter.

LCD 83-1

Naming phonebook groups


Your phone comes with 10 groups to organize your phonebook. You can name groups things like "Family" or "Friends" or "Softball team" to let you find entries in your phonebook more quickly.

To name a group, go to the phonebook and press the **OPTIONS** soft key and select **Edit Group Name**. Select the group number (**0-9**) you want to edit, and enter the name you want for this group using the number keypad. Press **menu/select** when you're finished.


To delete the group, go to the phonebook, and view the list of groups (see xx). Press the **OPTIONS** soft key and select **Delete** and then **Delete Groups**. Your phone will ask you to confirm select **Yes**.





Making Calls with the Phonebook

To call someone in your phonebook, go to the phonebook and select that person's phonebook entry. Select the number (one of the four available) that you want to call, and then press the **CALL** soft key. Press the **LAND** or **MOBILE** soft key. The number at the top of the list will dial. You can also dial the number with the phone in talk mode. After select number, press the **DIAL** soft key.


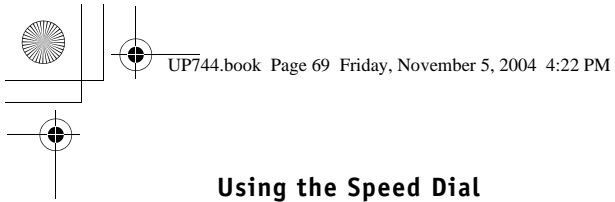


Using the Speed Dial

Flip the top panel up. Press and hold the number of the speed dial entry you want to call until the phonebook location appears. Use up/down key to select a number. Press **talk/flash**, , or the **LAND** soft key

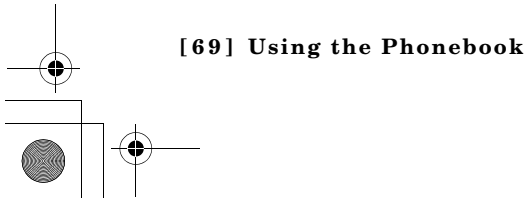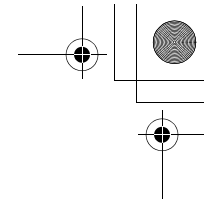

www.uniden.com

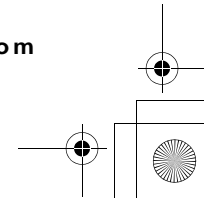

Caller ID Features

If you subscribe to Caller ID from your phone company, your phone will show you the caller's phone number and name (if available) whenever a call comes in:


If you subscribe to both Call Waiting and Caller ID the phone also show you the name and the number of call waiting calls (that is, calls that come in while you're on the line.)

If your cellular phone is a Bluetooth v 1.1 compliant, the phone allow you to register your cellular phone to use them as one of a handset.



Using the Caller ID List

You can store up to 100 Caller ID numbers in each handset or the base. To see the Caller ID list, press the caller id key on the handset or base. The phone will show the Caller ID list. You can use up/down key to scroll through the list, or you enter a letter with the keypad to jump to the first caller ID name that starts with that letter. If anyone in your phonebook has called you, the icon assigned to their number will appear in the Caller ID list.

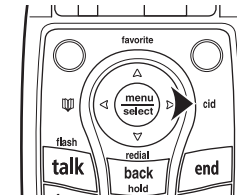

If you want to see how many Caller ID numbers are stored in your phone, Press the caller id key, and then the **OPTIONS** soft key. Select CID Capacity.


Calling someone from the Caller ID list

Go to the Caller ID list and select the number you want to call. If you need to add a "1" to the number for a long distance call, press ***/tone**. If you need to add your saved area code to the number, press **#**. Then press **talk/flash**, **Ⓜ**, or the **LAND** or **MOBILE** soft key to dial the number.

Deleting Caller ID numbers

To delete only one Caller ID number, go to the Caller ID list and select the number you want to delete. Press the **OPTION** soft key, and select Delete Selection. When the phone asks you to confirm, select Yes.

To delete all the Caller ID numbers, go to the Caller ID list and press the **OPTION** soft key. Select Delete All. When the phone asks you to confirm, select Yes.

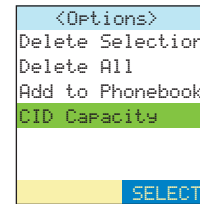

When you delete a Caller ID number, you delete it permanently.



The Answering Machine only works with the land line.

Answering Machine

The phone has a built-in answering machine that answers and records incoming calls. You can also use your answering machine to record a conversation, leave a voice memo message, or announce a special outgoing message to callers when you're away from your phone.

Features

- Digital Tapeless Recording
- Up to 12-15 minutes of Recording Time
- Call Screening
- Personal or prerecorded Outgoing Messages
- Voice Prompts (English, Spanish, or French)
- Time and Day Announcement
- Remote Message Retrieval
- Toll Saver
- Conversation Recording
- Voice Memo
- Message Alert On/Off
- Retrieve Messages using Handset
- Do Not Disturb
- Hands-free Speakerphone

www.uniden.com

Answering Machine [72]


Answering Machine

Setting Up the Answering Machine

To access the answering machine settings, go to the System Setup Menu and select Answer Machine.


Security Code

If you want to call in and get your messages when you're away from, you'll have to set a security code. Go to Answer Machine and select Security Code. Use the keypad to enter a two-digit number (01-99), and press *menu/select* when you're done. A confirmation tone tells you the security code has been saved.

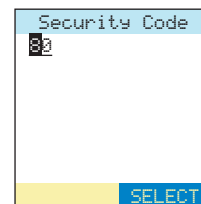


Ring Time

You can set the number of times the phone will ring before the machine answers the call. Go to **Answer Machine** and select **Ring Time**. Then select the number of times you want the phone to ring; choose from 2, 4, or 6 times. The **Toll Saver** feature makes the answering machine answer after two rings if you have new messages and after four rings if you don't. If you call long distance to check your messages, **Toll Saver** lets you hang up after three rings and not get charged for the call.

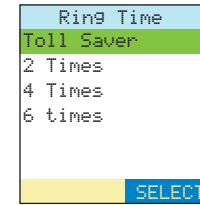

Record Time

You can set how long a caller has to leave a message before the answering machine hangs up. Go to **Answer Machine** and select **Record Time**. Then select the maximum length of messages; choose from 1 minute or 4 minutes. The **Announce Only** feature makes the answering machine answer call but it won't let callers leave a message. When the **Announce Only** feature is on, and **Announce ONLY** will appear on the base.

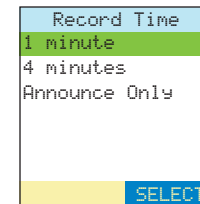

Message Alert

if you want the answering machine to beep every 15 seconds whenever you have unheard messages, turn on the message alert tone. Go to **Answer Machine** and select **Message Alert**. Select **On**. A confirmation tone tells you the setting has been saved.



The message alert turns off automatically after you listen to all your new messages. You can also turn off the message alert by pressing any key on the base.

Language

To change the language of your answering machine's voice prompts and pre-recorded greetings, go to **Answer Machine** and select **Language**. Select **English**, **Français (French)**, or **Español (Spanish)**.

Call Screen

If you want to be able to listen to the caller's message before you answer, turn on the call screen feature. Go to **Answer Machine** and select **Call Screen**. Select **On** to turn on call screening.

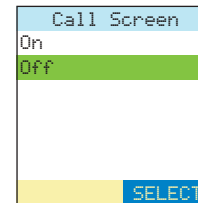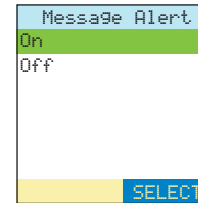

note

- To finish the setting, press **back/hold/intercom**.
- You will hear a beeping tone while you set greetings and play messages from the handset.
- Your own greeting must be more than 2 seconds and less than 30 seconds.

www.uniden.com

Setting Your Outgoing Greeting


Your answering machine comes with a prerecorded greeting: "Hello. No one is available to take your call. Please leave a message after the tone." You can use this greeting, or you can record your own.

Recording a greeting

From the base

To record your own greeting, make sure the phone is in standby mode. Go to **Record Greeting**, and then press **menu/select**. Press the **START** soft key. After the answering machine says, "Record greeting," you can start recording. The message counter displays 30 and then begins to count down. When you're finished, press the **STOP** soft key. The answering machine will play back your greeting so you can hear it.

From the handset

Select , and then **AnsMachine**. The display tells you how many new and old messages you have.

Press **hil/8**. After the answering machine says, *Record greeting*, you can start recording. When you're finished, press **hil/8** key.

Choosing a greeting

From the base


To choose between the two greetings, first make sure the phone is in standby mode. Go to **Answer Machine**, and select **GreetingOptions**. The greeting currently being used will be played. If you want to use the other greeting, press the **CHANGE** soft key.


Answering Machine


Answering Machine [76]

If you want to delete your greeting, press the **DELETE** soft key while the greeting is playing (You can't delete the prerecorded greeting.)

From the handset



Select , and then AnsMachine. The display tells you how many new and old messages you have.

Press /6. The greeting currently being used will be played. If you want to use the other greeting, press the key again.

If you want to delete your greeting, press the  h1|/4 soft key while the greeting is playing (You can't delete the prerecorded greeting.)

Using the Answering Machine


Turning On the Answering Machine

To turn your answering machine on and off, on the handset, go to Answer Machine, and select On/Off setting. Choose On to turn the answering machine on or Off to turn it off. You can also turn on/off the machine using handset remote function. Select , and then AnsMachine. The display tells you how many new and old messages you have. Press /9. Each time the key is pressed the setting switches between On and Off.

For from the base, with the phone in standby mode, press **answer on/off**. MESSAGE ON. If the number is flashed, then there are new messages waiting for you. To do turn your answering machine off, press **answer on/off**.

Reviewing Messages

When you have a new message, the new message LED on the handset blinks and the base LCD rights. The LED and the base LCD will turn off stops blinking when you've listened to all your new messages. The answering machine plays your new messages first. After you play all your new messages, you can then play your old messages. Old messages will be played in the order in which they were received.

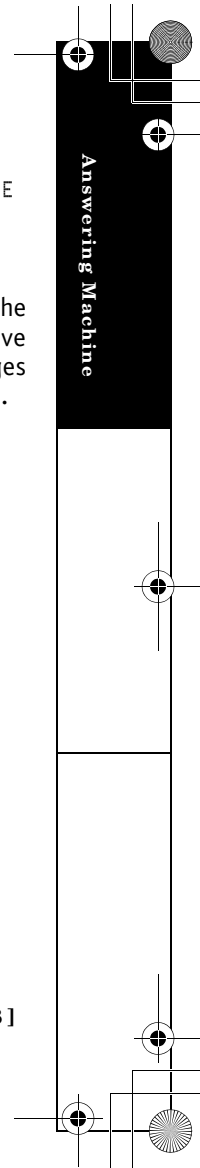

You can review your messages from the base or from the handset:

	From the base	From the handset
Playing your messages	Press ▷/□ . The answering machine tells you how many new and old messages you have. It announces the message number, plays the message, then announces the time and date that message was received.	Select ■ , and then AnsMachine . The display tells you how many new and old messages you have. Press ▶/2 to play your messages. After playing the message, the answering machine announces the time and date that message was received.
Repeating a message	Press ◀ once to repeat to the beginning of the current message. Press ◀ repeatedly to go back to a previous message. Press and hold ◀ to rewind through the current message.	Press ◀/1 once to repeat to the beginning of the current message. Press ◀/1 repeatedly to go back to a previous message.
Skipping a message	Press ▷ to go to the beginning of the next message. Press and hold ▷ to fast forward through the current message.	Press ▶/3 to go to the beginning of the next message. Press and hold ▶/3 to fast forward through the current message.
Delete a message	While a message is playing, press ∅ to delete it. The message is permanently deleted.	While a message is playing, press ∅/4 to delete it. The message is permanently deleted.
Delete all messages	While the phone is in standby, press ∅ to delete all messages. When the answering machine asks you to confirm, press delete again. All messages are permanently deleted.	-
Stop reviewing messages	Press ▷/□ to stop the message playback and return to standby.	Press ■/5 to stop the message playback. Press end to exit the message system and return to standby.



- You can't delete unheard messages. If you try to delete messages before listening to them, the answering machine will beep and say "Please playback all messages."
- If you press **◀** during the first two seconds (or press **◀/1** during the first 4 seconds) of a message, the answering machine goes back to the previous message.

note

- If the recording memory is full, *Unavailable* appears in the display. You can not record a conversation until you clear some messages from the memory.
- Every state has different regulations governing the recording of conversations over the telephone. Make sure to check your local, state and federal laws before using this product to record any telephone conversation in order to determine that your use is in compliance with such laws or guidelines.
- You can not record intercom conversations.
- Only one handset can screen calls at a time. If another handset is screening the call, you'll just hear a beep when you try to screen the call, too.

www.uniden.com

Recording a phone conversation

You can record a phone conversation with your handset or base. The conversation has to last more than two seconds and less than ten minutes. During a conversation, press **menu/select** (for base, then press the **OPTIONS** soft key). Use up/down key to select **Call Record**. The handset or the base sounds a confirmation tone that can be heard by both parties and displays **Recording a call**. When you want to stop recording, press **menu/select** and select **Call Record** again.

Screening Calls

You can screen calls from the base: just let the answering machine answer the call and listen to the caller leave a message. Answer the phone if you want to talk to the caller. To mute the call screen, press **⓪**.

If you turn on the call screen feature (see page 75), you can also screen calls from the handset. Let the answering machine answer the call, then press the volume up key. If you want to talk to the caller, just press **talk/flash**, and the answering machine will stop recording. To mute the call screen, press **end**.

Answering Machine [80]

Answering Machine


Do Not Disturb (DND)



The do not disturb feature (DND) allows you to mute the ringer, the base, and any registered handsets at the same time. The phone must be in standby mode. Press and hold **dnd** on the base. You will hear a confirmation tone, and the dnd LED illuminates. To cancel the DND feature, press **dnd** again. You can also mute the ringer tone while the phone is ringing by pressing dnd on the base.

Activating the DND while the answering system is off will turn the answering system on automatically. The answering system setting will reset to the original setting when you cancel the DND.

Recording a voice memo

The voice memo function allows the user to record messages (more than 2 seconds and less than 4 minutes). To record your own greeting, make sure the phone is in standby mode. Press **menu/select** on the base. Select **Record Memo** and press **menu/select**. Press the **START** soft key. After the answering machine says, "Record greeting," you can start recording. When you're finished, press the **STOP** soft key. The answering machine will play back your greeting so you can hear it.

You can also record a voice memo remotely, select , and then AnsMachine. The display tells you how many new and old messages you have.

Press /7. After the answering machine says, *Record greeting*, you can start recording. When you're finished, press /7 key.

note

- The system will only play back messages for four minutes and then it returns to the command waiting mode.
- To continue playing your messages, press 0 then 2 again within 15 seconds.
- If you enter an incorrect security code three times, you will hear a beep and the system will return to standby.
- For your convenience, a remote operation card is provided for you to use while away from home (refer to page 102).

www.uniden.com

Remote Operation

You can check, play, or delete messages when you are away from home. You can also record, select, or delete your own greeting message. To access your answering machine remotely, you need a touch tone telephone and a two-digit security code (see Setting a Security Code on page 73).

- 1) Call your telephone number and wait for the system to answer. If Toll Saver is enabled, answering machine will answer in 2 rings if you have new messages and 4 rings if you don't. If the answering machine is off, it will answer after about 10 rings and sound a series of beeps.
- 2) During the greeting message (or a series of beeps when the answering machine is off), press **0** and enter your security code within two seconds.
- 3) The answering machine announces the current time and the number of messages stored in memory. You hear "To play incoming messages, press zero-two. For help, press one-zero." Then, you'll hear a beep.
- 4) Enter a command from the following chart within 15 seconds. After the first command, you have two seconds to enter each command.

Answering Machine [82]

Command	Function	Command	Function
0 then 1	Repeat a Message*	0 then 6	answering machine On
0 then 2	Play incoming Messages	0 then 7	Memo Record/Stop**
0 then 3	Skip a Message	0 then 8	Greeting Message Record/Stop**
0 then 4	Delete a Message	0 then 9	answering machine Off
0 then 5	Stop Operation	1 then 0	Help

* For the Repeat a Message function, press **0** then **1** within about 2 seconds to repeat the previous message, or press **0** then **1** after about 2 seconds to repeat the current message.

** The first time you enter the Memo Record or the Greeting Message Record command, the answering machine will start recording. Enter the same command again to stop recording.

5) After the command has finished, you hear intermittent beeps indicating that the system is in the command waiting mode. You can enter another command from the chart, or you can hang up to exit the system.

6) When you hang up, the answering machine automatically returns to standby.

note


- If the party is out of range, **No Signal** appears in the display, and the operation will be canceled.
- While a pair of handsets are in DirectLink Monitor mode, they cannot be used to make or receive calls. Other handsets can still make and receive calls.

Multi-Handset Features

The features in this section require a minimum of two handsets to operate. To add additional handsets to your system, see "Expanding Your Phone" on page 13.

Using DirectLink Mode

In DirectLink Mode, a pair of handsets can function as two-way radios. DirectLink Mode does not interfere with the main base's ability to make or receive telephone calls. You must set both handsets to DirectLink Mode to make a directlink call.

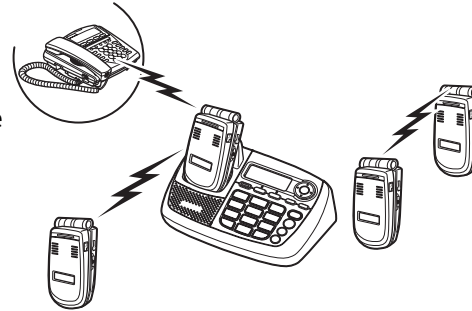

To enter DirectLink mode, Select Direct Link option in the main menu. And then press the **ENTER** soft key. Direct Link Mode Complete appears when you enter the DirectLink Mode mode.



To make a DirectLink call, press the **DirectLink** soft key. Select the handset you want to call. To cancel the call, Press **end**. To answer a DirectLink call, Press **talk/flash**. Press **end** when you want to hang up.

To exit DirectLink mode and be able to receive normal phone calls again, press the **CANCEL** soft key, and then press the **OK** soft key.

Room/Baby Monitor



This feature allows you to monitor sounds in another room. Place a handset or the base in the room you wish to monitor; it will function as a microphone. A second handset or the base can be used as a remote speaker, allowing you to monitor sounds in the room.

Using Room/Baby Monitor

To enter Room Monitor mode, press **menu/select**. Then select the Room Monitor. Select the handset or base you want to monitor. Press **end** or **end/find HS** when you want to stop monitoring.

To prevent the monitoring of a particular handset or the base, simply turn off the Room Monitor feature on that handset or on the base.

To turn off the Room Monitor, go to System Setup, Base/Handset Setup Menu, and then "Room Monitor." Select **Off**. You will hear a confirmation tone.

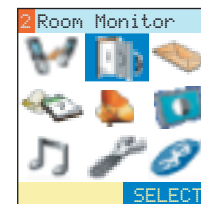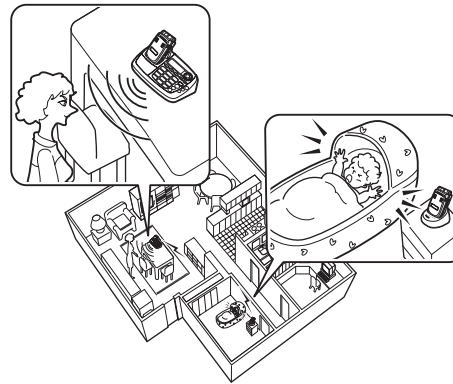

note

- This feature only works when both handsets are within the range of the base.
- If the party is out of range, **No Signal** appears in the display, and the operation will be canceled.
- While a pair of handsets are in Room/Baby Monitor mode, they cannot be used to make or receive calls. Other handsets can still make and receive calls.


note

- If you receive an outside/intercom call or page while selecting the other handset, the operation is canceled.
- If the party does not answer within one minute, the operation is canceled.
- During an intercom call, if you receive a call, you will hear a ringer tone from the ear speaker.
- If all handsets are paged, only the first party to answer the page will connect.
- If you do not select a handset within ten seconds, the operation will be canceled.

www.uniden.com

Intercom

You can use the intercom to talk to another handset without using the phone line. While the phone is in standby mode, press **back/hold/intercom**. Select the handset or base you want to page. If you select **All**, all other handsets will be paged. If the handset or base you're trying to page is busy, the phone displays **System busy**. If the handset you're trying to page is out of range, the phone displays **No Signal**. The page is canceled.

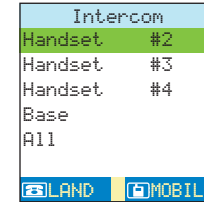


Answering an intercom page

When the handset receives an intercom page, it sounds a tone and shows the ID of the handset that is paging. To answer the page, pick up the handset and press **talk/flash**, speaker, or **back/hold/intercom** on the handset, **Ⓜ** or **back/hold/intercom** on the base.

To hang up an intercom page, press **end** on either handset.

Transferring a Call







You can transfer a call from one handset or the base to another. During a call, press **back/hold/intercom**; this will put the call on hold. Select the handset or base you want to page. If you select **All**, all other handsets and base will be paged. To cancel the page and go back to the caller, press **talk/flash** or **Ⓜ** on the base.

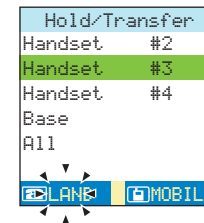



Answering a transfer page

When the handset receives a transfer page, it sounds a tone and shows the ID of the handset that is paging. Pick up the handset and press **talk/flash** or **Ⓜ** or **back/hold/intercom** to answer the page. If you want to accept the transfer and talk to the outside caller, press **talk/flash** or **back/hold/intercom** on the handset, or **Ⓜ** or **back/hold/intercom** on the base.

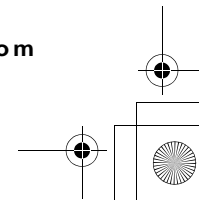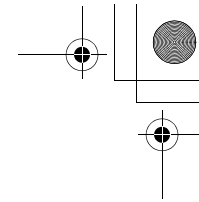

note

- A replacement Uniden adapter or battery may be purchased by calling the Customer Hotline at 1-800-297-1023 (Mon - Fri 7 am to 7 pm, Sat/Sun/holidays--except Thanksgiving and Christmas--9 am to 5 pm, CST).
- Use only the Uniden (BT-0002 and BT446) rechargeable battery pack supplied with your cordless phone.

Note on Power Sources

Power Failure

The phone use the backup battery in the Base. It provides power backup in the event of a power failure or outage. You will be able to make or receive calls with the telephone.

Battery replacement and handling

When the operating time becomes short, even after the battery is recharged, please replace the battery. With normal usage, your battery should last about one year.

Warning

To avoid the risk of personal injury or property damage from fire or electrical shock, use only Uniden AD-0009 AC adapters and Uniden BT-0002 battery back with your phone.

Caution

- Use only the specified Uniden battery pack (BT-0002 and BT-446).
- Do not remove the batteries from the handset to charge them.
- Never throw the battery into a fire, disassemble them, or heat them.
- Do not remove or damage the battery casing.

Troubleshooting

If your phone is not performing to your expectations, please try these simple steps first. If these steps do not solve your problem, please call our Customer Hotline at 1-800-297-1023 (Mon - Fri 7 am to 7 pm, Sat/Sun/holidays [except U.S. Thanksgiving and Christmas] 9 am to 5 pm, CST).

Symptom	Suggestion
The charge LED won't illuminate when the handset is placed in the cradle.	<ul style="list-style-type: none"> • Make sure the AC adapter is plugged into the base or the charger (if you have more than one handset) and wall outlet. • Make sure the handset is properly seated in the cradle. • Make sure the charging contacts on the handset are clean.
The audio sounds weak.	<ul style="list-style-type: none"> • Move the handset and/or base away from metal objects or appliances and try again. • Make sure that you are not too far from the base.
Can't make or receive calls.	<ul style="list-style-type: none"> • Make sure that you are not too far from the base. • Make sure the line is not in use. If an out call is already using a line, you cannot use that line to make another outside call. • Check both ends of the base telephone line cord. • Make sure the AC adapter is plugged into the base and wall outlet. • Disconnect the AC adapter and the backup battery. • Change the Digital Security Code (see page 16).
The handset doesn't ring or receive a page.	<ul style="list-style-type: none"> • Make sure that you are not too far from the base. • Charge the batteries in the handset for 10 hours by placing the handset on the base or charging cradle. • Change the Digital Security Code (see page 16).
Severe noise interference.	<ul style="list-style-type: none"> • Keep the handset away from microwave ovens, computers, remote control toys, wireless microphones, alarm systems, intercoms, room monitors, fluorescent lights, and electrical appliances. • Move to another location or turn off the source of interference.


Symptom	Suggestion
The Caller ID does not display.	<ul style="list-style-type: none"> • The call was placed through a switchboard. • Call your local telephone company to verify your Caller ID service is current. There may be a problem with your Caller ID service.
You cannot register the handset at the base.	<ul style="list-style-type: none"> • Charge the battery pack for 15-20 hours. • Change the Digital Security Code (see page 16).
The handset doesn't communicate with other handsets.	<ul style="list-style-type: none"> • Change the Digital Security Code (see page 16). • Make sure that you have registered all handsets.
An extra handset can't join the conversation.	<ul style="list-style-type: none"> • Make sure there are not 2 handsets already using the conference feature. • Make sure that another handset is not in privacy mode.
Room Monitor feature does not work.	<ul style="list-style-type: none"> • Make sure to place the handset(s) within the range of the base.
The answering machine does not work.	<ul style="list-style-type: none"> • Make sure the base unit is plugged in. • Make sure that the answering machine is turned on. • Make sure that the message record time is not set to Announce only (see page 74).
Messages are incomplete.	<ul style="list-style-type: none"> • The incoming messages may be too long. Remind callers to leave a brief message. • The memory maybe full. Delete some or all of the saved message.
No sound on the base unit or handset speaker during call monitoring or message playback.	<ul style="list-style-type: none"> • Adjust the speaker volume on the base unit or handset. • Make sure the call screen feature is set to on.

Symptom	Suggestion
Cannot access remote call-in features from another touchtone phone.	<ul style="list-style-type: none"> •Make sure you are using the correct PIN number. •Make sure that the touch-tone phone you're using can transmit the tone for at least two seconds. If it cannot, you may have to use another phone to access your phone.
Time stamp cannot be heard.	<ul style="list-style-type: none"> •Make sure you have set the time (see "Setting Day and Time" on page 29).

System Reset


De-register the Handset

- 1) Press and hold **end** and **#** for more than 5 seconds. Select Deregister HS.
- 2) The phone will ask you to confirm the deregistration. Select **Yes**.

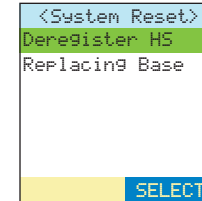


Replacing the Base Setting

- 1) Press and hold **end** and **#** for more than 5 seconds. Select Replacing Base. Replacing Base appears.
- 2) Select **Yes**.
- 3) You will hear a confirmation tone. The base information will be deleted.

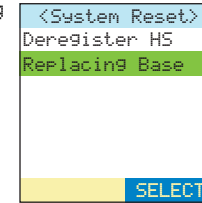

When the base information is deleted, the handset displays **MUST** place the handset in base to register! Models may vary, refer to owner's manual for guidance. Re-register the handset to the base (see page 14).

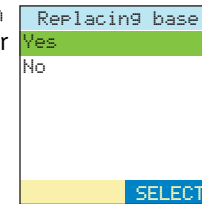

Liquid Damage

Moisture and liquid can damage your cordless phone. Follow the steps below if your phone gets wet:

Case	Action
If the handset or base is exposed to moisture or liquid, but only the exterior plastic housing is affected.	Wipe off the liquid, and use as normal.
If moisture or liquid has entered the plastic-housing (i.e. liquid can be heard in the phone or liquid has entered the handset battery compartment or vent openings on the base).	<p>Handset:</p> <ol style="list-style-type: none">1) Remove the battery cover and leave it off for ventilation.2) Disconnect the battery pack. Leave the battery cover off and the battery pack disconnected for at least 3 days.3) Once the handset is completely dry, reconnect the battery pack and the battery cover.4) Recharge the handset's battery pack for 20 hours before using. <p>Base:</p> <ol style="list-style-type: none">1) Disconnect the AC adapter from the base, cutting off electrical power.2) Disconnect the telephone cord from the base.3) Let dry for at least 3 days. <p>IMPORTANT: You must unplug the telephone line while recharging the battery packs to avoid charge interruption.</p> <p>CAUTION: DO NOT use a microwave oven to speed up the drying process. This will cause permanent damage to the handset, base and the microwave oven. After following these steps, if your cordless telephone does not work, please call our Customer Service Hotline at 1-800-297-1023.</p>

Liquid Damage

Precautions!

Before you read anything else, please observe the following:


Warning!

Uniden America Corporation DOES NOT represent this unit to be waterproof. To reduce the risk of fire, electrical shock, or damage to the unit, DO NOT expose this unit to rain or moisture.

Rechargeable Lithium Ion and Nickel-Metal-Hydrate Battery Warning

- This equipment contains rechargeable Lithium Ion Nickel-Metal-Hydrate battery.
- The rechargeable batteries contained in this equipment may explode if disposed of in a fire.
- Nickel is a chemical known to state of California to cause cancer.
- Do not short-circuit the battery.
- Do not charge the rechargeable battery used in this equipment in any charger other than the one designed to charge this battery as specified in the owner's manual. Using another charger may damage the battery or cause the battery to explode.

Rechargeable Batteries Must Be Recycled or Disposed of Properly

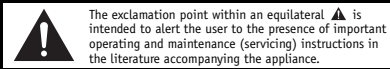

Uniden works to reduce lead content in our PVC coated cords in our products and accessories.

Warning!

The cords on this product and/or accessories contain lead, a chemical known to the State of California to cause birth defects or other reproductive harm. **Wash hands after handling.**

Important Safety Instructions

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
2. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.

3. Do not use the telephone to report a gas leak in the vicinity of the leak.
4. Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible battery disposal instructions.
5. Do not disassemble any component of this product.

SAVE THESE INSTRUCTIONS

CAUTION

Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. Do not open or mutilate the battery, and disconnect the battery before shipping this product.

The FCC Wants You To Know

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the bottom of this equipment is a label that contains, among other information, a product identifier in the format US:AAAEQ##TXXXX. If requested, this number must be provided to the telephone company.

An applicable Universal Service Order Codes (USOC) certification for the jacks used in this equipment is provided (i.e., RJ11C) in the packaging with each piece of approved terminal equipment.

A plug and jack used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant telephone cord and modular plug is provided with this product. It is designed to be connected to a compatible modular jack that is also compliant. See installation instructions for details.

The REN is used to determine the number of devices that may be connected to a telephone line. Excessive RENs on a telephone line may result in the devices not ringing in response to an incoming call. In most but not all areas, the sum of RENs should not exceed five (5.0). To be certain of the number of devices that may be connected to a line, as determined by the total RENs, contact the local telephone company. For products approved after July 23, 2001, the REN for this product is part of the product identifier that has the format US:AAAEQ##TXXXX. The digits represented by ## are the REN without a decimal point (e.g., 03 is a REN of 0.3). For earlier products, the REN is separately shown on the label.

If this equipment causes harm to the telephone network, the telephone company will notify you in advance that temporary discontinuance of service may be required. But if advance notice isn't practical, the telephone company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.

The telephone company may make changes in its facilities, equipment, operations or procedures that could affect the operation of the equipment. If this happens the telephone company will provide advance notice in order for you to make necessary modifications to maintain uninterrupted service.

Please follow instructions for repairing, if any (e.g. battery replacement section); otherwise do not substitute or repair any parts of the device except as specified in this manual. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information. This equipment is hearing aid compatible.

Should you experience trouble with this equipment, please contact Uniden customer service at 800-297-1023. If the equipment is causing harm to the telephone network, the telephone company may request that you disconnect the equipment until the problem is resolved. NOTICE: According to telephone company reports, AC electrical surges, typically resulting from lightning strikes, are very destructive to telephone equipment connected to AC power sources. To minimize damage from these types of surges, a surge arrester is recommended. Changes or modifications to this product not expressly approved by Uniden, or operation of this product in any way other than as detailed by the owner's manual, could void your authority to operate this product.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications, may not be ensured when using this phone. To insure the safety of users, the FCC has established criteria for the amount of radio frequency energy various products may produce depending on their intended usage. This product has been tested and found to comply with the FCC's exposure criteria. For body worn operation, the FCC RF exposure guidelines were also met when used with the Uniden accessories supplied or designed for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines and should be avoided.

Radio Interference

Radio interference may occasionally cause buzzing and humming in your cordless handset, or clicking noises in the base. This interference is caused by external sources such as TV, refrigerator, vacuum cleaner, fluorescent lighting, or electrical storm. Your unit is NOT DEFECTIVE. If these noises continue and are too distracting, please check around your home to see what appliances may be causing the problem. In addition, we recommend that the base not be plugged into a circuit that also powers a major appliance because of the potential for interference. Be certain that the antenna on the unit is fully extended when needed.

In the unlikely event that you consistently hear other voices or distracting transmissions on your phone, you may be receiving radio signals from another cordless telephone or other source of interference. If you cannot eliminate this type of interference, you need to change to a different channel.

Finally, it should be noted that some cordless telephones operate at frequencies that may cause interference to nearby TVs and VCRs. To minimize or prevent such interference, the base of the cordless telephone should not be placed near or on top of a TV or VCR. If interference is experienced, moving the cordless telephone farther away from the TV or VCR will often reduce or eliminate the interference.

Cordless Telephone Privacy

Cordless telephones are radio devices. Communications between the handset and base of your cordless telephone are accomplished by means of radio waves which are broadcast over the open airways. Because of the inherent physical properties of radio waves, your communications can be received by radio receiving devices other than your own cordless telephone unit. Consequently, any communications using your cordless telephone may not be private.

One Year Limited Warranty

Important: Evidence of original purchase is required for warranty service.

WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

www.uniden.com

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:



Uniden America Corporation

Parts and Service Division
4700 Amon Carter Blvd.
Fort Worth, TX 76155

(800) 297-1023, 7:00 a.m. to 7:00 p.m. Monday through Friday; 9:00 a.m. through 5:00 p.m., Saturday, Sunday and Holidays (except Thanksgiving and Christmas); all Central Time,

Precautions & Warranty [96]

Precautions & Warranty

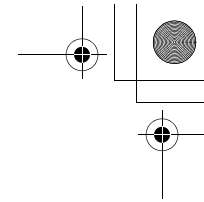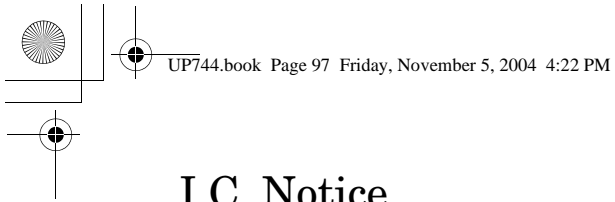


I.C. Notice

TERMINAL EQUIPMENT

NOTICE: This equipment meets the applicable Industry Canada Terminal Equipment Technical Specifications. This is confirmed by the registration number. The abbreviation, IC, before the registration number signifies that registration was performed based on a Declaration of Conformity indicating that Industry Canada technical specifications were met. It does not imply that Industry Canada approved the equipment.





NOTICE: The Ringer Equivalence Number (REN) for this terminal equipment is marked on the equipment itself. The REN assigned to each terminal equipment provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed five.



RADIO EQUIPMENT

The term "IC:" before the radio certification number only signifies that Industry Canada technical specifications were met.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. "Privacy of communications may not be ensured when using this telephone".

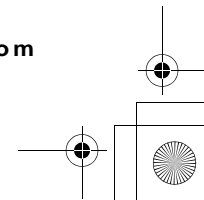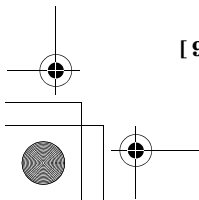

Index

A

Animations	38
Answering Machine	
Answering Mode	72
Call screen	75
Message alert	75
Security code	73
Setting up menu	73
Anykey Answer	27
Area Code	30
Audio Tone	58

B

Backlight Color	37
Battery	
Replacement	9

C

Calendar	61
Call screen	75
Call transfer feature	86
Caller ID	
Call Waiting	51
CIDCW	70
CWDX	51
Conference	52
Customize Handset	31

D

Date & time	29
Delete ringer	36
De-register the Handset	92
Dial mode	31

www.uniden.com

Digital security code	16
DirectLink	84
Distinctive ID	33

E

Earpiece volume	56
Expanding your phone	13

F

Find handset	60
------------------------	----

G

General information	89
Global set	29

H

Handset setup	25
Hands-free conversation	48
Hanging up	50
Headset installation	17
Hold	52
Holster	16

I

I.C. notice	97
Important safety instructions	95
Intercom	86

K

Key touch tone	27
--------------------------	----

L

Language	26, 38, 75
LCD contrast	26
Link handsets	84, 85
Liquid damage	94
Low battery	10

M

Making a call	47
Message Alert	75

Mute

Handset ringer	59
Microphone	59

O

Out going greeting	76
Choosing	76
Recording	76
Out of range	50



P

Phonebook

Capacity	67
Copying entries	66
Group	65
Making calls	68
Name	64
Number	64
Sort order	68
Speed dial	65
Unique display	65
Unique ring	64
Power failure	88
Precautions	95
Privacy mode	26

R

Receiving a call	49
Record ringer	34
Record Time	74
Recording conversation	80
Redialing a call	55



Register the handset 14
 Reminder 61
 Remote operation 82
 Reviewing message 78
 Ring options. 32
 Ring time. 74
 Ringer tone 32
 Ringer volume
 Base 56
 Handset 57
 Room/baby monitor. 85

S






Setting up
 Answering Machine. 73
 base unit 11
 Telephone Line 11
 Soft Key. 21
 Speaker phone 48
 Speaker volume
 Base 56
 Handset 58
 Storing a caller ID or redial number 66
 System Setup 25








T







Tone dial 59
 Transferring a call 86
 Troubleshooting 90

W

Warranty 96

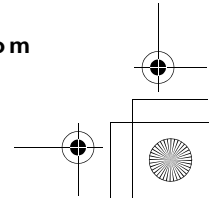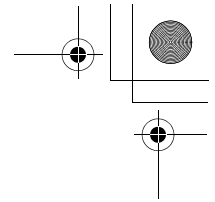

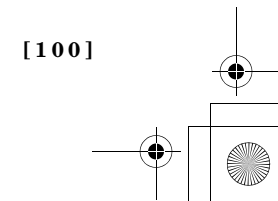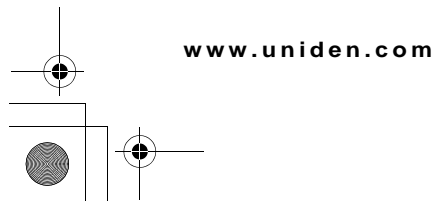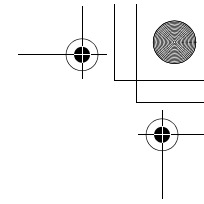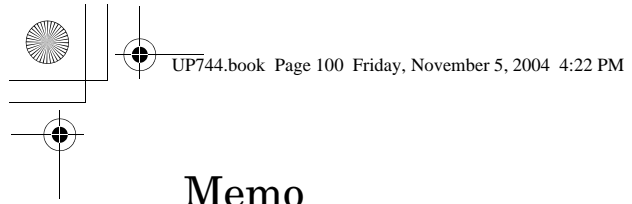

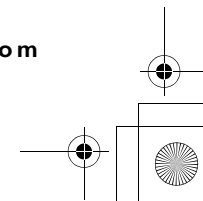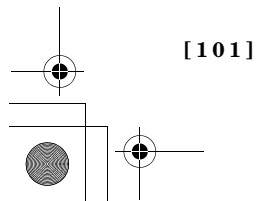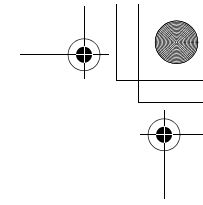

Remote Operation Card

<p>CUT</p> <p>REMOTE OPERATION CARD Uniden®</p> <hr/> <p>Remote access away from home</p> <ol style="list-style-type: none">1. Call your phone number from a touch-tone phone.2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.3. To quit, hang up the phone. <p>Turn on the answering system remotely</p> <ol style="list-style-type: none">1. Call your phone and let it ring 10 times until you hear a beep.2. Press 0 and then enter your PIN code.3. Press 0 then 5 to stop the announcement.4. Press 0 then 6 to turn the answering system on. <p>CUT</p>	<p>CUT</p> <p>REMOTE OPERATION CARD Uniden®</p> <hr/> <p>Remote access away from home</p> <ol style="list-style-type: none">1. Call your phone number from a touch-tone phone.2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.3. To quit, hang up the phone. <p>Turn on the answering system remotely</p> <ol style="list-style-type: none">1. Call your phone and let it ring 10 times until you hear a beep.2. Press 0 and then enter your PIN code.3. Press 0 then 5 to stop the announcement.4. Press 0 then 6 to turn the answering system on. <p>CUT</p>
<p>CUT</p> <p>REMOTE OPERATION CARD Uniden®</p> <hr/> <p>Remote access away from home</p> <ol style="list-style-type: none">1. Call your phone number from a touch-tone phone.2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.3. To quit, hang up the phone. <p>Turn on the answering system remotely</p> <ol style="list-style-type: none">1. Call your phone and let it ring 10 times until you hear a beep.2. Press 0 and then enter your PIN code.3. Press 0 then 5 to stop the announcement.4. Press 0 then 6 to turn the answering system on. <p>CUT</p>	<p>CUT</p> <p>REMOTE OPERATION CARD Uniden®</p> <hr/> <p>Remote access away from home</p> <ol style="list-style-type: none">1. Call your phone number from a touch-tone phone.2. During the outgoing message, press 0 and enter your PIN code. The answering system announces the number of messages stored in memory and the voice prompts.3. To quit, hang up the phone. <p>Turn on the answering system remotely</p> <ol style="list-style-type: none">1. Call your phone and let it ring 10 times until you hear a beep.2. Press 0 and then enter your PIN code.3. Press 0 then 5 to stop the announcement.4. Press 0 then 6 to turn the answering system on. <p>CUT</p>

www.uniden.com

Remote Operation Card [102]

Remote Operation Card

Task	Key
Repeat a Message	0 1
Playing incoming Messages	0 2.ans
Skipping a Message	0 3.def
Deleting a Message	0 4.gn
Stop Operation	0 5.jl
Answering System On	0 6.mno
Memo Record/Stop	0 7.pqr
Greeting Message Record/Stop	0 8.tuv
Answer System Off	0 9.wxyz
Help Guidance	1 0.opa

Task	Key
Repeat a Message	0 1
Playing incoming Messages	0 2.ans
Skipping a Message	0 3.def
Deleting a Message	0 4.gn
Stop Operation	0 5.jl
Answering System On	0 6.mno
Memo Record/Stop	0 7.pqr
Greeting Message Record/Stop	0 8.tuv
Answer System Off	0 9.wxyz
Help Guidance	1 0.opa

Task	Key
Repeat a Message	0 1
Playing incoming Messages	0 2.ans
Skipping a Message	0 3.def
Deleting a Message	0 4.gn
Stop Operation	0 5.jl
Answering System On	0 6.mno
Memo Record/Stop	0 7.pqr
Greeting Message Record/Stop	0 8.tuv
Answer System Off	0 9.wxyz
Help Guidance	1 0.opa

Task	Key
Repeat a Message	0 1
Playing incoming Messages	0 2.ans
Skipping a Message	0 3.def
Deleting a Message	0 4.gn
Stop Operation	0 5.jl
Answering System On	0 6.mno
Memo Record/Stop	0 7.pqr
Greeting Message Record/Stop	0 8.tuv
Answer System Off	0 9.wxyz
Help Guidance	1 0.opa

At Uniden, we'll take care of you!

Thank you for purchasing a Uniden product. If you have any questions or problems,
please do not return this product to the place of purchase.

Having Trouble?

Our customer care specialists are here to help you! Call our Customer Hotline at **1-800-297-1023** Mon - Fri 7 am to 7 pm, Sat/Sun/holidays (except U.S. Thanksgiving and Christmas). 9 am to 5 pm, CST, or visit our website at www.uniden.com.

Need a part?

To order headsets, additional handsets, replacement batteries or other accessories, call our **customer care specialists at the number listed above.**

Mon - Fri 8 am to 5pm, CST or visit our website at www.uniden.com.

Help for our Special Needs Customers

If you need special assistance due to a disability or have questions on the accessibility features of this product, please call **1-800-874-9314 (voice or TTY)**



Uniden®

May be covered under one or more of the following U.S. patents:

4,523,058	4,595,795	4,797,916	5,381,460	5,426,690	5,434,905
5,491,745	5,493,605	5,533,010	5,574,727	5,581,598	5,650,790
5,660,269	5,661,780	5,663,981	5,671,248	5,696,471	5,717,312
5,732,355	5,754,407	5,758,289	5,768,345	5,787,356	5,794,152
5,801,466	5,825,161	5,864,619	5,893,034	5,912,968	5,915,227
5,929,598	5,930,720	5,960,358	5,987,330	6,044,281	6,070,082
6,125,277	6,253,088	6,314,278	6,418,209	6,618,015	6,671,315
6,714,630					

FOR
ACCESSORIES,
GO ONLINE @
WWW.UNIDEN.COM

REGISTER ONLINE TODAY!
THANK YOU FOR BUYING A UNIDEN PRODUCT.

A World Without Wires | **Uniden®**

©2004 Uniden America Corporation, Fort Worth, Texas. Contains additional foreign articles. Custom manufactured in China.

UPZZ01744BZ