



Contents

Our Thanks, The CB Story and Customer Assistance	A1
29 LX Features and FCC Regulations	A2
Installation	
Location	2
Mounting and Connection	2
CB Antenna	4
Operation	
Turning On	5
Setting Channel Selector	5
Calibrate for SWR (Standing Wave Ratio)	6
To Receive	7
Selecting a Channel	7
S-Meter	7
To Transmit	8
Setting Dynamike®	8
Menu Mode	9
Setting the Clock	10
Setting the Alarm	10
Setting the Count Down Timer	11
Key Tones Mode	11
Radio Check Mode	12
Setting Display Color Mode	13
Setting Brightness Mode	14
Setting Contrast Mode	14
Weather Information	15
What You Should Know About Weather	15
Weather Channels	15
Weather Auto Scan	16
Setting Weather Auto Scan	16
Setting Weather Alert Mode	16
Setting Weather Alert Scan	16
Software Version/Factory Settings	17
NB-ANL/Off (Noise Blanker/Automatic Noise Limiter) Button	17
RF Gain Control	17
Program Memory Channels	18
Scan CB Channels	19
Scan Memory Channels	19
Dimmer Control	19
Setting Squelch	19
S/RF Meter	20
External Speaker	20
PA (Public Address)	20
Base Station Operation (From 120V House Current)	22
Temporary Mobile Operation	22
How Your CB Can Serve You	23
A Few Rules You Should Know	23
Set Channel 9 For Emergencies	23
CB Distress Data	23
CB 10-Codes	25
Frequency Ranges	26
29 LX Specifications	27
Limited 2-Year Warranty	28
Need Help?	29
FCC Statement	30



Installation

Location


Plan for the location of the CB transceiver and microphone bracket before starting the installation. Select a location that is convenient for operation, yet does not interfere with the driver or passenger.

The transceiver is usually mounted to the underside of the dash with the microphone bracket beside it.

NOTE: The transceiver is held in the universal mounting bracket by two thumbscrews which allow for adjustment to a convenient angle.


The bracket includes two self-tapping screws and star washers. The mounting must be mechanically strong and conveniently located.

Mounting and Connection

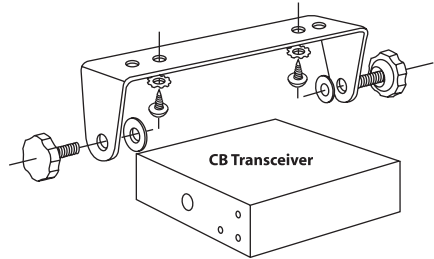

1. Hold the radio with the mounting bracket in the exact desired location. If there is no interference, remove the bracket and use it as a template to mark the location for the mounting screws.

2. Drill the holes and secure the bracket.

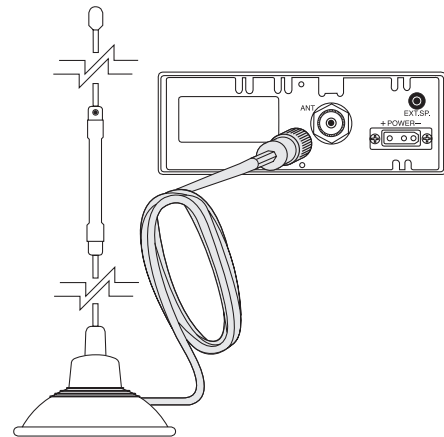


3. Connect the antenna cable plug to the receptacle marked "ANT" on the back of the unit.

2



Installation

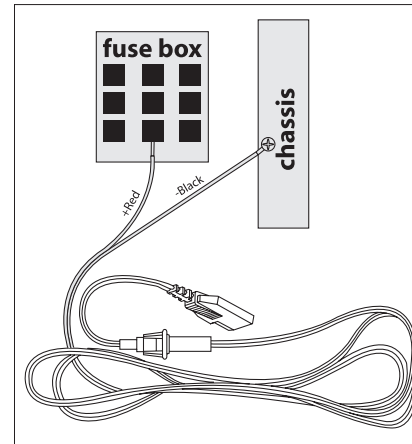


4. Connect the red lead of the DC power cord to an accessory 12 volt fuse or directly to the battery.

NOTE: The transceiver is held in the universal mounting bracket by two thumbscrews which allow for adjustment to a convenient angle. The bracket includes two self-tapping screws and star washers. The mounting must be mechanically strong and conveniently located.


5. Connect the black lead to the negative side of the vehicle electrical system. This is usually the chassis.

Any convenient location with a good electrical contact (remove paint) may be used.


NOTE: Before installing the CB radio, visually check the vehicle's battery connection to determine which terminal is positive or negative. A negatively grounded vehicle has its negative lead grounded to the chassis.

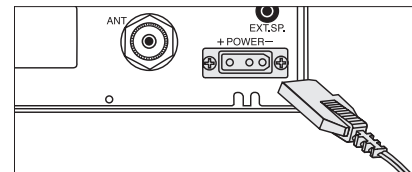

6. Plug power cable into back of unit marked "Power". Be sure to observe polarity markings.

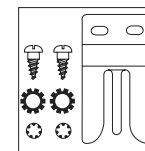

7. The microphone can be mounted to either side of the CB using the supplied screws. Alternatively the microphone can be mounted to the dash or any convenient location.

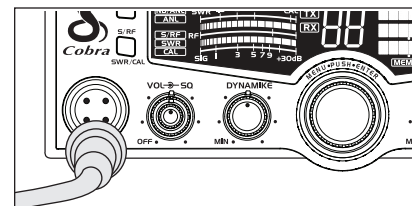

8. Attach the microphone to the front of the CB.

NOTE: If the microphone is not connected, audio will not be heard at the speaker.


3



Antennas

CB Antenna

Since the maximum allowable power output of the transmitter is limited by the FCC, the antenna is critical in affecting transmission distance. Only a properly matched antenna system will allow maximum power output. Cobra loaded type antenna models are highly recommended for most installations. Consult your Cobra dealer for further details, or call 800-543-1608 and speak to a Cobra representative. A standard antenna connector is provided on the transceiver for easy connection.

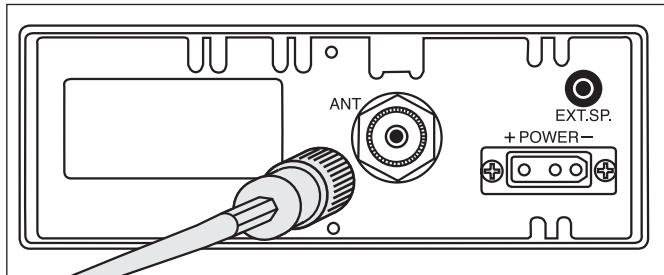

For optimum performance in passenger cars the ideal antenna location is on the center of the roof. Second choice is on the center of the trunk. Because many newer trucks feature fiberglass door skins, the outside mirror must be grounded to the chassis via a ground strap when the antenna is mounted on the mirror bracket.

3-way combination antennas are also available which allow operation of all three bands (AM-FM & CB), using a single antenna. However, this type of antenna usually results in less than normal transmit and receive range when compared to a standard-type "Single Band" CB antenna.




Cobra offers CB antenna and mounting solutions that can be purchased online. Please visit www.cobra.com, or if you'd like to speak with an expert, please call 800-543-1608 and our Customer Care Group can assist.



Operation

Turning On

Make sure the power cord, antenna and microphone are connected to their proper connectors before starting.

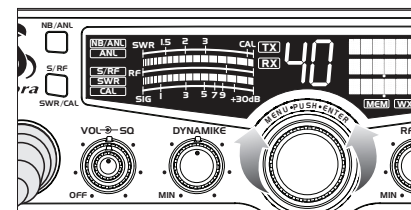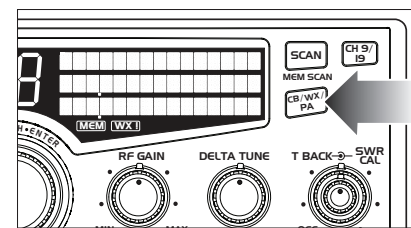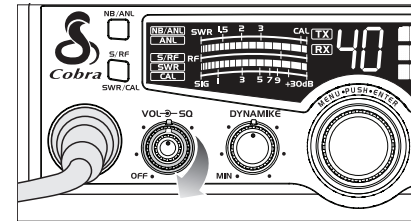

2. Rotate the On/Off Volume knob clockwise to turn unit on and adjust to a normal listening level.

3. Press the CB/PA/WX button to change modes.

Setting Channel Selector

Select one of forty channels and adjust volume. The selected channel (1 through 40) will be indicated by the readout directly above the channel selector knob




Operation


Calibrate for SWR (Standing Wave Ratio)

SWR calibration is done to properly adjust the length of the antenna and to monitor the quality of the coaxial cable and all RF connections.


This calibration is critical in order to achieve optimum performance.

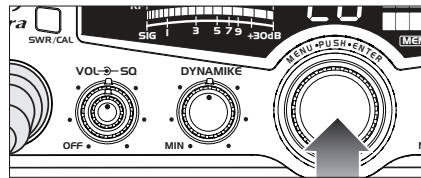


1. Select channel 20.

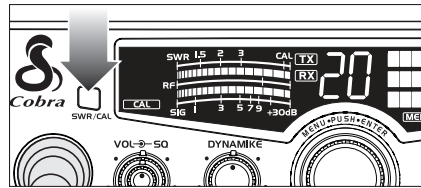

2. Press SWR/CAL button to select CAL.

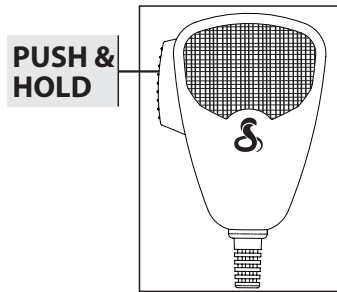

3. Push and hold the mic button.

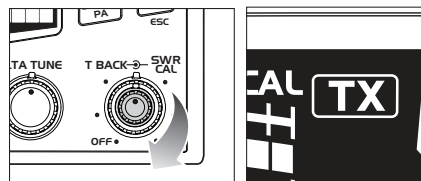


4. While holding mic button adjust the SWR CAL knob so the meter swings to the CAL mark on the meter (located on the right).




Operation

Calibrate for SWR continued

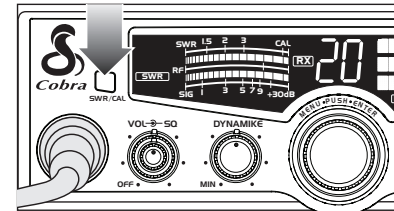


5. Release the PTT button, press and release the S/RF-SWR CAL button to the SWR position. Then press the PTT button to read the SWR reading.

6. Repeat the same steps two through five on Channel 1 and 40. This will check SWR for all channels.

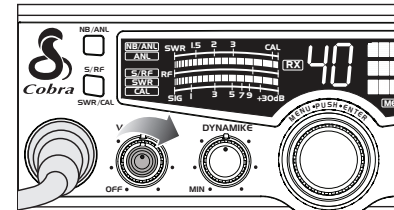


To Receive

Rotate the On/Off Volume knob clockwise. The RX icon will be displayed.

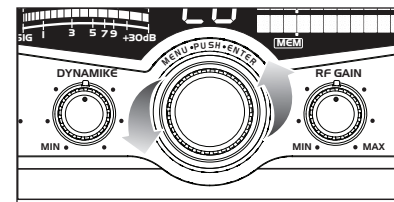

Selecting a Channel

Unit should be in CB mode. Rotate channel selector clockwise or counter-clockwise to select desired channel.

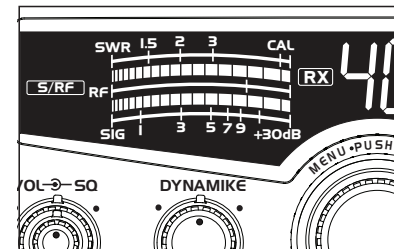


S-Meter

Swings proportionately to strength of incoming signal when receiving.


The S/RF-SWR-CAL switch must be in the S/RF setting to read the meter.



Operation

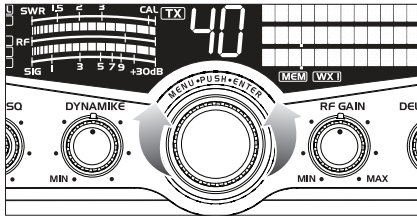

PUSH & HOLD

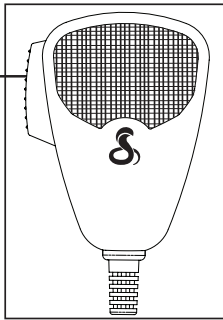


To Transmit

1. Select the desire channel.
2. Push and hold mic button to transmit. Transmitter is now activated. When transmitting, hold the microphone two inches from your mouth and speak in a clear, normal voice. Release to receive.

NOTE: Be sure the antenna is properly connected to the radio before transmitting. Prolonged transmitting without an antenna, or a poorly matched antenna, could cause damage to the transmitter.

Be sure to read the F.C.C. Rules and Regulations included with this unit before transmitting.


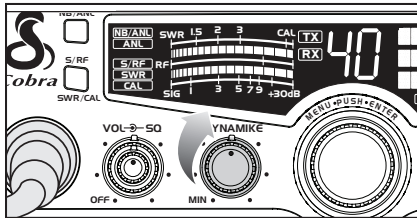


Setting Dynamike®

Initially, set fully clockwise so that maximum voice volume is available. Dynamike may have to be reduced in some conditions.



Operation

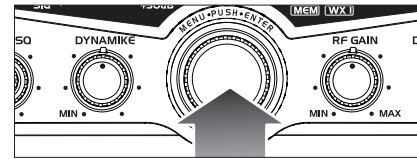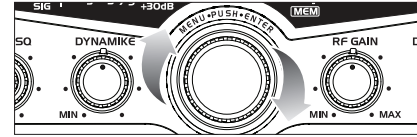


Menu Mode

Used to program special features. Menu/Enter knob is used to move cursor to desired feature to program.


Rotate Menu/Enter knob clockwise to navigate menu levels.

NOTE: Use Dim/Escap button to exit from any routine back to CB standby mode.


Level 1:




Level 2:




Level 3:



Level 4:



Level 5:






Operation



Operation



Setting the Clock

Using the clock, alarm and countdown functions.

To set the clock, press Menu/Enter knob and select Set Clock.



NOTE: Normal display will appear if clock has not yet been set.

12:00 PM will appear in the display and the hours will flash. Rotate Menu/Enter knob clockwise to select desired hour and press to set.

The minutes will then flash. Rotate Menu/Enter knob again to select desired minutes and press to set.

Once the minutes are set, AM or PM will then flash. Rotate Menu/Enter knob again to select AM or PM and press to set or scroll down to EXIT and press to return to main menu.

NOTE: Use Dim/Escapes button to exit from any routine back to CB standby mode.




Setting the Alarm

Your 29 LX can be utilized as an alarm clock. To set the alarm, press Menu/Enter knob and select Set Alarm.

Rotate Menu/Enter knob clockwise to select Set Alarm Time. Follow instructions above for setting the alarm time and AM or PM.

NOTE: The clock should be connected to constant 12V to run continuously.



Once alarm settings are complete, rotate Menu/Enter knob clockwise to Set Snooze and press to select.


Enter desired snooze time (from 1 to 60 minutes). Select Enter to exit, return to Set Snooze or Alarm Length. Select Alarm Length to set alarm duration (from 10 to 300 seconds). Pressing Menu/Enter knob returns unit to exit, Set Snooze or Alarm Length.

To set the clock, press Menu/Enter knob and select Set Clock.

NOTE: Default snooze time length is 10 minutes.

NOTE: Use Dim/Escapes button to exit from any routine back to CB standby mode.

NOTE: Default alarm length is 60 seconds and is set in 10 second increments.



Setting the Count Down Timer

To set the count down timer, press Menu/Enter knob and select Set Count Down.

Follow instructions in Setting the Clock section (page 10) to set count down hour and minutes. Once desired count down time is selected, press Menu/Enter knob again to set and return to the standby menu.

NOTE: The clock should be connected to constant 12V to run continuously.




Key Tones Mode

Press Menu/Enter knob and rotate clockwise to Set Key Tones. Press Menu/Enter to set Key Tones On/Off. Press Menu/Enter knob to select On/Off and exit to main menu.

NOTE: Use Dim/Escapes button to exit from any routine back to CB standby mode.



Operation




Radio Check Mode

Allows testing of important radio functions.


Test 1 - Battery Level: Confirms that battery voltage level is between 10.8 V to 15.8 V. If in that range, it is "PASS". Outside of that range, either "FAIL LOW" or "FAIL HIGH" will be displayed. Press Menu/Enter knob to advance to next test.

NOTE: Press Dim/Escapes button to return to CB standby mode. If 10 seconds pass or if Enter button pressed, unit goes to 2nd test.



Test 2 - RF Power Output: Confirms 3.3 to 4 Watt output level. Once Push-to-Talk button is pressed, Pass or Fail will be displayed if level is outside limits.

NOTE: Press Push-To-Talk within 10 seconds or unit will go to the next test. Press Dim/Escapes button to return to CB standby mode. If 10 seconds pass or if Enter button pressed, go to 3rd test.




Test 3 - Antenna Mismatch Warning: Press Push-to-Talk button to check antenna/radio for proper matching.

NOTE: Press Dim/Escapes button to return to CB standby mode. If 10 seconds pass or if Enter button pressed, testing is complete. Unit will return to CB Standby mode.



Operation

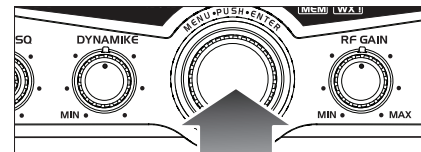


Setting Color Display Mode


1. Press Menu/Enter knob and scroll down to select Display Color.



2. Press and release Menu/Enter to set the color.

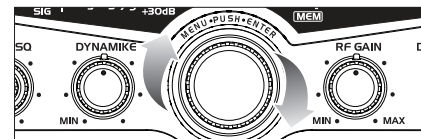

3. Rotating Menu/Enter knob clockwise changes the display color from green to blue to amber to red then back to green.



4. Press Menu/Enter knob or escape button again to exit routine.

NOTE: Select EXIT to return to main menu. Press Dim/Escapes button to return to CB mode.



Operation




Setting Brightness Mode

1. Press Menu/Enter knob to select Set Brightness
2. Rotate Menu/Enter knob clockwise to Select Brightness. Press Menu/Enter knob to select Day-Bright. Turn Menu/Enter knob clockwise to increase brightness and turn counter-clockwise to decrease brightness.

NOTE: If an attempt is made to exceed the highest or lowest brightness levels, 1 error beep will be heard.


Exit will return to menu mode. ESC will exit and return to CB Standby.



1. To set the day bright level, turn the Menu/Enter knob clockwise to a desired setting and then press Menu/Enter. To set the Night-Dim level, repeat instructions above then select Night-Dim.

2. Press Menu/Enter knob again to exit routine.

NOTE: To select day or night levels, press and release Dim/Escape button once levels are set.



Setting Contrast Mode

1. Press Menu/Enter knob and rotate clockwise to select Set Contrast. Press Menu/Enter knob again and rotate clockwise to increase contrast, counter-clockwise to decrease contrast.
2. Press Menu/Enter knob to set contrast.

NOTE: If an attempt is made to exceed the highest or lowest contrast levels, 1 error beep will be heard.



Operation

Weather Information

What You Should Know About Weather

If threatening weather is nearby, the National Weather Service may broadcast a 10 second alert tone. This tone will be heard through the CB, even if the CB/WX Control is in the CB mode or the unit is turned off.

This enables you to monitor CB frequencies and still be warned by the National Weather Service Emergency Alert. When you hear the alert, press the CB/WX/PA button in the WX mode. You will then be able to hear the Weather Warning Broadcast.

Your 29 LX has a special auto squelch circuit for weather transmission which disables your squelch control.

NOTE: If you wish to receive a listing of NOAA 'Weather Radio Transmitter locations, contact your nearest National Weather Service Office.

Service Office, or write to:
National Weather Service
(Attn: W/OM11) NOAA
Silver Springs, MD 20910.

For ideal weather reception use a dual band antenna (center load/baseload).


Weather Channels

What is Weather Radio?

NOAA Weather Radio (NWR) is a service of the National Oceanic and Atmospheric Administration (NOAA), of the U.S. Department of Commerce. 380 NWR stations are in operation by the U.S. Government in addition to several NWR stations that are maintained by private interest groups. The capability is to supplement warnings by sirens and by commercial radio and television. The 10 National Weather Channels provide full coverage to keep you informed of weather conditions, 24 hours a day, 7 days a week.




Operation

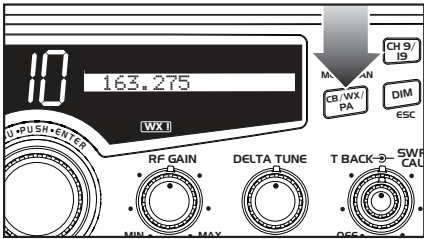


Weather Auto Scan

If active while in CB or PA mode, will determine if the present WX channel is active. If the present WX channel is not active, will search for the strongest WX channel and auto change to that channel. Default is off. Go to Menu mode to choose on/off (see page 9).




Setting Weather Auto Scan

1. Press Menu/Enter knob and rotate clockwise to WX Auto Scan. Press Menu/Enter knob to select On/Off.
2. Press Menu/Enter knob to select On/Off and exit to main menu.



Setting Weather Alert Mode

1. Turns WX Alert On/Off. Default is Off. Press Menu/Enter knob to select Set WX Alert. If Weather is On, WX Alert Icon will be displayed.
2. Press Menu/Enter knob to select On/Off and exit to main menu.



Setting Weather Alert Scan

1. Press Menu/Enter knob and rotate clockwise to WX Alert Scan. Press Menu/Enter knob to select On/Off.
2. Press Menu/Enter knob to select On/Off and exit to main menu.



NOTE: If an alert is detected the unit will activate WX mode on the channel with the alert. Use Menu/Enter knob to select On/Off and press to set.



Operation


Software Version/Factory Settings

Displays current software version and returns unit to original factory settings. To view software version, rotate Menu/Enter knob clockwise to select Settings then Software Version.

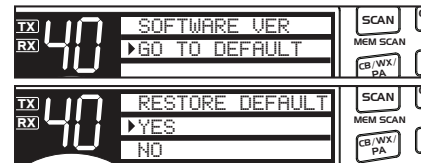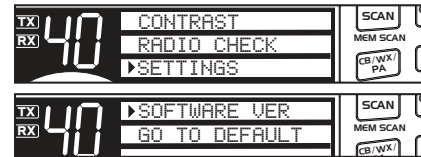

1. To restore default settings, Press Menu/Enter knob again. Rotate Menu/Enter knob clockwise to select Settings then Go To Default.
2. Press Menu/Enter knob to restore default settings. Choose NO to maintain present setting with no change.

NOTE: Default display color is green.

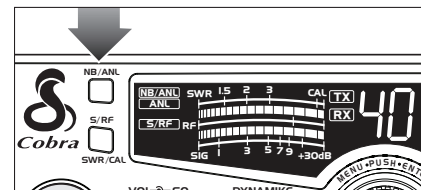


NB-ANL/OFF (Noise Blanker/Automatic Noise Limiter) Button

When switched to ANL the Automatic Noise Limiter is activated. This helps reduce noise created by the vehicle's electronics.

When switched to NB/ANL mode the RF Noise Blanker is also activated, providing increased noise filtration.

When switched to OFF mode all noise filtration will be turned off.

NOTE: The RF noise blanker is very effective in reducing repetitive noises such as ignition interference.

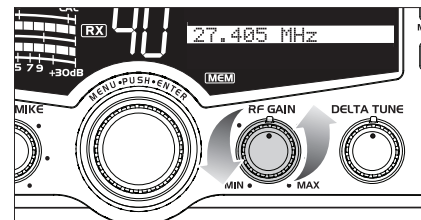

RF Gain Control

The RF Gain is used to optimize reception in strong or weak signal areas.

Rotate the RF Gain knob counterclockwise to reduce gain in strong signal areas. In weak signal areas turn clockwise to increase gain.

NOTE: The RF Gain is used to optimize reception in weak signal areas.




Operation



Operation


Program Memory Channels

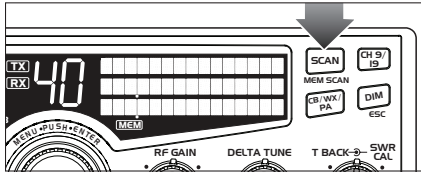


1. Set first channel. Press and hold Scan/MemScan button. Memory icon will appear. Select second channel, press and hold Scan/MemScan button again until Memory icon appears. Repeat above steps to enter up to 10 channels in memory.

NOTE: The radio should be squelched before scan features are activated.

NOTE: Keying the microphone will stop the scan feature.

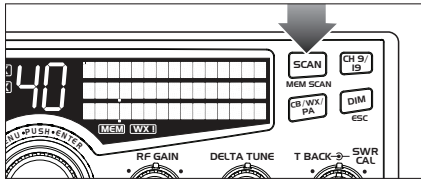

2. Pressing the Scan/Memory Scan button toggles from Off to Scan All Channels to Memory Channel Only Scan and back to Off.

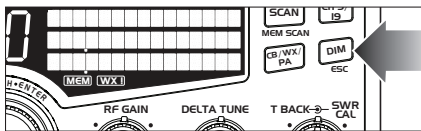


3. Press Dim/Escape button to end Scan and return to CB mode.

NOTE: If more than 10 channels are attempted to be programmed, 3 error beeps will be heard and "Memory Full" will be displayed for 10 seconds or until any button is pushed.

NOTE: To remove a channel from memory, go to the unwanted memory channel then press and hold the scan button until the MEM icon turns off.

NOTE: If in WX mode the unit will scan Weather channels.

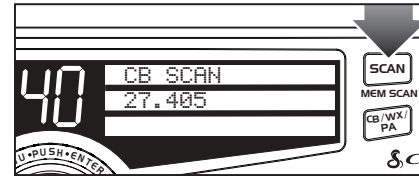


Scan CB Channels

To scan all 40 CB channels, the unit must be squelched. Press and release Scan/Mem Scan button once.



Scan Memory Channels


To scan memory channels, press and release Scan/Mem Scan button twice.

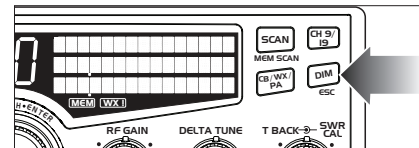

Dimmer Control

Press Dim/Esc button to toggle between day and night settings.


See setting instructions on page 14.

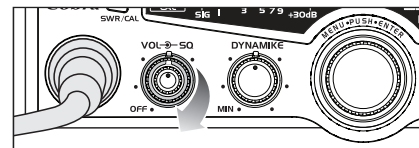


Setting Squelch

Squelch is the "control gate" for incoming signals.

1. Full clockwise rotation closes the gate allowing only very strong signals to enter.
2. Full counterclockwise rotation opens the "gate" allowing all signals in.

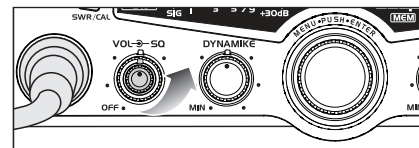


3. To achieve the Desired Squelch Setting (DSS), turn the Squelch control counterclockwise until you hear noise

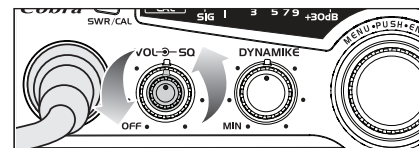

Now turn the control clockwise just until the noise stops. This is the DSS setting.




Operation

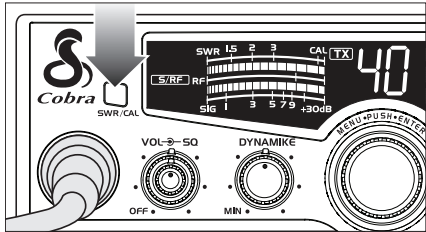

S/R/F Meter

This meter swings proportionately to the RF output (outgoing signal) while transmitting. The S/R/F-SWR-CAL button must be in the S/R/F mode.

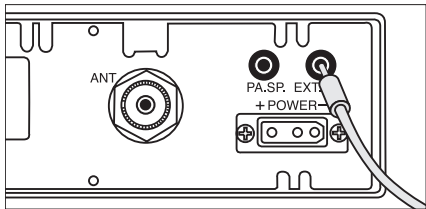


External Speaker

The external speaker jack is used for remote receiver monitoring. Connect an external speaker to the external speaker jack on the rear panel.

NOTE: The external speaker should have 8-ohm impedance and be rated to handle at least 4.0 watts. When the external speaker is plugged in, the internal speaker is automatically disconnected. See accessory page X.

NOTE: Cobra external speakers are rated at 10 watts.

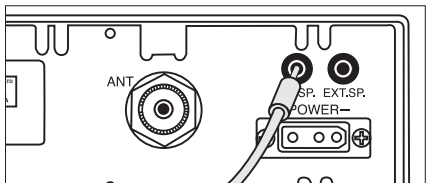

PA (Public Address)

1. Connect an external PA speaker to the PA jack on the rear panel.
2. Press CB/WX/PA button to select PA.


NOTE: The speaker should have 8-ohm impedance and be rated to handle at least 4.0 watts.

NOTE: The speaker should be directed away from the microphone to prevent acoustic feedback.


NOTE: Activity on the CB channel will be heard through the PA speaker. Adjust Volume Control to a normal listening level.



Operation

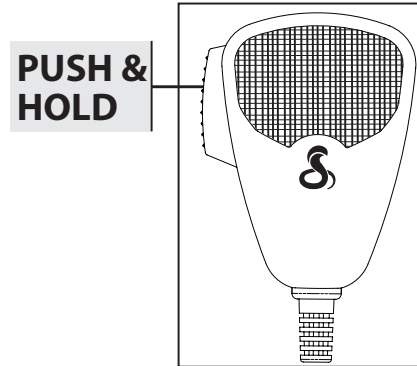

3. Push and hold microphone button and speak in a normal voice. Your voice will now transmit on the PA speaker.

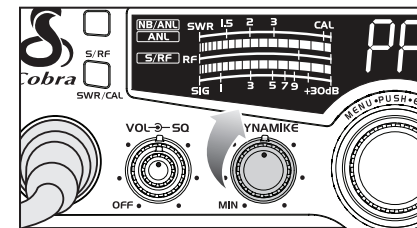


4. Adjust PA speaker volume with the Dynamike® control.



Operation



How Your CB Can Serve You


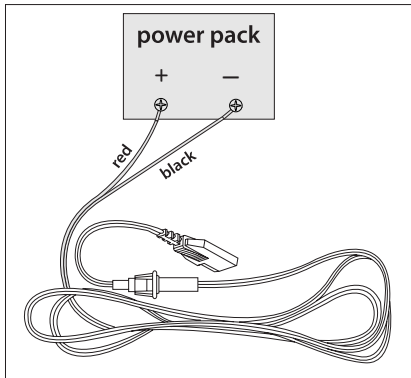


Base Station Operation (From 120V AC House Current)

To operate the transceiver from home or office you will need a **13.8 volt DC Power Pack** rated at a minimum of **2 amps**, and a properly installed base station antenna.

WARNING: Do not attempt to operate this transceiver by connecting it directly to 120VAC.

1. Simply connect the **red (+)** and **black (-)** leads of the transceiver to the corresponding terminals of the power pack.
2. **Plug the power cable** into the back of the unit marked "Power". **Be sure to observe polarity markings.**
3. Connect a properly installed and matched base station antenna.

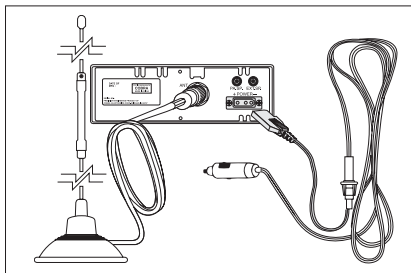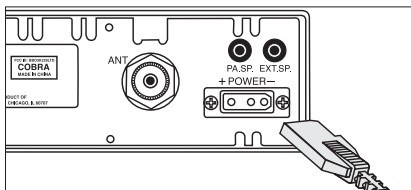

Temporary Mobile Operation

For temporary mobile operation you may want to purchase an optional automobile power adapter from your Cobra dealer. This adapter and a magnetic mount antenna allow you to quickly "install" your transceiver for temporary use.

Your CB Radio Can:

- Warn of traffic problems
- Provide weather and road data
- Provide help in event of an emergency
- Provide direct contact with home or office
- Assist police by reporting erratic drivers
- Get "local information" to find destination
- Communicate with family and friends
- Suggest spots to eat and sleep
- Keep you alert while traveling

A Few Rules You Should Know:

- A. Conversations cannot last more than 5 minutes with another station. A one minute break is required to let others use the channel.
- B. You cannot blast others off the air by use of illegally amplified transmitters or illegally high antennas.
- C. You cannot use CB to promote illegal activities.
- D. Profanity is not allowed.
- E. You may not transmit music with a CB.
- F. Selling of merchandise and/or services is prohibited.

Set Channel 9 For Emergencies

Be sure antenna is properly connected.

CB Distress Data

When transmitting an emergency, you should request a "REACT BASE" and provide the CB distress data (called **CLIP**):

- | | |
|-------------------|-------------------------------|
| C all Sign | Identify yourself. |
| L ocation | Be exact. |
| I n juries | Number. Type. Trapped? |
| P roblem | Give details and help needed. |

Transmit **CLIP** repeatedly so any monitor can assist.

NOTE: If no response on channel 9, try channels 19 or 14.



How Your CB Can Serve You



CB 10-Codes

The FCC gives these examples of permitted and prohibited messages for channel 9. These are only guidelines and not all-inclusive:

Permitted	Example Message
Yes	"Tornado sighted six miles north of town."
No	"Post number 10. No tornado sighted."
Yes	"Out of gas on I-95 at mile marker 211."
No	"Out of gas in my driveway."
Yes	"Four car accident on I-94 at Exit 11. Send police and ambulance."
No	"Traffic moving smoothly on I-94."
Yes	"Weather Bureau has issued thunderstorm warning. Bring sailboat into port."
No	"Attention motorists. Weather Bureau advises snow tomorrow will accumulate 4 to 6 inches."
Yes	"Fire in building at 539 Main, Evanston."
No	"Halloween patrol number 3. All quiet."

Citizen Bands have adopted the "10-CODES" for standard questions and answers. These codes provide quick and easy communication, especially in noisy areas. The following are some of the more common codes and meanings:

Code	Meaning	Code	Meaning
10-1	Receiving poorly	10-34	Trouble at this station
10-2	Receiving well	10-35	Confidential information
10-3	Stop transmitting	10-36	Correct time is
10-4	OK, message received	10-37	Wrecker needed at
10-5	Relay message	10-38	Ambulance needed
10-6	Busy, stand by	10-39	Message delivered
10-7	Out of service, leaving	10-41	Turn to channel
10-8	In service, subject to call	10-42	Traffic accident at
10-9	Repeat message	10-43	Traffic tie up at
10-10	Transmission completed standing by	10-44	Have a message for
10-11	Talking too rapidly	10-45	All units within range please report
10-12	Visitors present	10-50	Break channel
10-13	Advise weather/roads	10-60	What is next message number?
10-16	Make pick up at	10-62	Unable to copy. Use phone
10-17	Urgent business	10-63	Net directed to
10-18	Anything for us?	10-64	Net clear
10-19	Return to base	10-65	Awaiting your next message/assignment
10-20	My location is	10-67	All units comply
10-21	Call by phone	10-70	Fire at
10-22	Report in person to	10-71	Proceed, transmission in sequence
10-23	Stand by	10-77	Negative contact
10-24	Completed last assignment	10-81	Reserve hotel room for
10-25	Can you contact	10-82	Reserve room for
10-26	Disregard last info	10-85	My address is
10-27	Moving to channel	10-91	Talk closer to mic
10-28	Identify your station	10-93	Check my frequency on this channel
10-29	Time is up for contact	10-94	Give me a long count
10-30	Does not conform to FCC rules	10-99	Mission completed, all units secure
10-33	Emergency traffic	10-200	Police needed at



Frequency Ranges



29 LX Specifications

The Cobra 29 LX transceiver represents some of the most advanced AM/FM two-way radios used as a Class D station in the Citizens Band Radio Service. These units feature advanced Phase Lock Loop (PLL) circuitry providing complete coverage of all 40 CB channels.

CB Channel	Channel Freq. In MHz	CB Channel	Channel Freq. In MHz
1	26.965	21	27.215
2	26.975	22	27.225
3	26.985	23	27.255
4	27.005	24	27.235
5	27.015	25	27.245
6	27.025	26	27.265
7	27.035	27	27.275
8	27.055	28	27.285
9	27.065	29	27.295
10	27.075	30	27.305
11	27.085	31	27.315
12	27.105	32	27.325
13	27.115	33	27.335
14	27.125	34	27.345
15	27.135	35	27.355
16	27.155	36	27.365
17	27.165	37	27.375
18	27.175	38	27.385
19	27.185	39	27.395
20	27.205	40	27.405

GENERAL	
CHANNELS	CB - 40 CH
FREQUENCY RANGE	CB - 26.965 TO 27.405 MHZ WX - 162.400 TO 162.775 MHZ
FREQUENCY TOLERANCE	0.005 %
FREQUENCY CONTROL	PLL (PHASE LOCK LOOP) SYNTHESIZER
OPERATING TEMPERATURE RANGE	-30° C TO + 50° C
MICROPHONE	Plug-in dynamic
INPUT VOLTAGE	13.2VDC nom. (positive or negative ground)
Current Drain	Transmit: AM full mod., 1.5A (maximum) Receive: Squelched, 0.3A; full audio output, 1.2A (nominal)
Size	8-5/8" D x 7-9/32" W x 2-13/63" H
Weight	4 lbs.
Antenna Connector	UHF; SO-239 Meter Indicates relative power output received signal strength, and vswr
TRANSMITTER	
Power Output	4 watts
Modulation	AM (Amplitude Modulation)
Frequency Response	300 to 3000 Hz
Output Impedance	50 ohms, unbalanced
RECEIVER	
Sensitivity	Less than 1 µV for 10 dB (S+N) /N
Selectivity	6 dB @ 7 KHz, 60 dB @ 10KHz
Image Rejection	80 dB, typical
Adjacent-Channel Rejection	60 dB, typical
IF Frequencies	Double Conversion: 1st: 10.695 MHz 2nd: 455 KHz
Automatic Gain Control (AGC)	Less than 10 dB change in audio output for inputs from 10 to 50,000 microvolts
RF Gain range	40 db
Noise Blanker	RF type
Squelch	Adjustable; threshold less than 1µV
Audio Output Power	4 watts
Frequency Response	300 to 3000 Hz
Distortion	Less than 7% @3 watts @ 1000 Hz
Built-in Speaker	8 ohms, 5w
External Speaker (Not supplied)	8 ohms; disables internal speaker when connected
PA SYSTEM	
Power Output	4 watts into external speaker
External Speaker for PA (Not Supplied)	8 ohms 4 Watts min. the PA speaker also monitors the receiver; separate jack provided
Maximum antenna gain	0dbi

(SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE)



Limited 2-Year Warranty



Need Help?

Warranty Terms:

Cobra warrants your product against all defects in materials and workmanship for a period of two (2) years from the date of original purchase.

Cobra, at our sole discretion, will repair or replace your product (with the same or comparable product) free of charge.

Cobra will not pay shipping charges that you incur for sending your product to us. Products received COD will be refused.

To make a warranty claim, we will require proof of purchase in the form of an invoice or receipt. No proof of purchase is required for factory direct purchases.

Warranty Exclusions: Warranty does not apply to your product under any of the following conditions: 1. The serial number has been removed or modified. 2. Your product has been subjected to misuse or damage (including water damage, physical abuse, and/or improper installation). 3. Your product has been modified in any way. 4. Your receipt or proof-of-purchase is from a non-authorized dealer or internet auction site including E-bay, U-bid, or other nonauthorized resellers.

LIMITATION OF WARRANTY: EXCEPT AS EXPRESSLY PROVIDED HEREIN, YOU ARE ACQUIRING THE PRODUCT "AS IS" AND "WHERE IS", WITHOUT REPRESENTATION OR WARRANTY. COBRA SPECIFICALLY DISCLAIMS ANY REPRESENTATION OR WARRANTY INCLUDING, BUT NOT LIMITED TO THOSE CONCERNING THE MERCHANTABILITY AND SUITABILITY OF THE PRODUCT FOR A PARTICULAR PURPOSE. COBRA SHALL NOT BE LIABLE FOR CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES ARISING OUT OF THE USE, MISUSE OR MOUNTING OF THE PRODUCT.

The above limitations or exclusions shall be limited to the extent they violate the laws of any particular state. Cobra is not responsible for products lost in shipment between the owner and our service center.

General Warranty Information

Each product we manufacture is covered by our factory warranty. While each product may have unique components and policy, the general guideline below will apply to most Cobra products.

All Cobra products purchased factory-direct or from our Authorized Resellers will come with a full one to three (1-3) year warranty from the date of the original retail purchase (see policy statement above for full warranty details and exclusions).

Standard accessories packaged with each model will have a one-year factory warranty. Accessory items have a one-year factory warranty.

Shipping to our facility is not covered in our warranty. Return shipping is included within the US. This warranty is non-transferrable.

For the sake of clarity, 'repair or replace the Product or its defective part' does not include removal or installation work, costs or expenses which include but are not limited to labor costs or expenses.

Cobra will not be responsible for lost packages.

If you have any questions about operation or installing your new Cobra product, PLEASE CONTACT COBRA FIRST...do not return this product to any retail store.

The contact information for Cobra will vary depending on the country in which you purchased and utilize the product. For the latest contact information, please go to www.cobra.com/support

For products purchased in the U.S.A. you may call 800-543-1608.

For products purchased in the U.S.A., if your product should require factory service, please go to www.cobra.com/support and follow the instructions for returning your product to the Cobra Factory Service Department for service.

Should there be any problems with this product or further information is needed on its features please visit www.cobra.com for support, frequently asked questions, Declarations of Conformity, and full manuals.

For Products Purchased Outside the U.S.A. or Canada

Please contact your local dealer for product service information.



FCC Statement

FCC Part 15.19 Warning Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

FCC Part 15.21 Warning Statement-

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

FCC Part 15.105(b) Warning Statement

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IC RSS-GEN, Sec 8.4 Warning Statement

ENGLISH: This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FRENCH: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



FCC Statement

IC RSS-GEN, Sec 8.3 Warning Statement

ENGLISH: This radio transmitter (identify the device by certification number, or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Immediately following the above notice, the manufacturer shall provide a list of all antenna types approved for use with the transmitter, indicating the maximum permissible antenna gain (in dBi) and required impedance for each.

FRENCH: Le présent émetteur radio (identifier le dispositif par son numéro de certification ou son numéro de modèle s'il fait partie du matériel de catégorie I) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

RF Exposure Statement

ENGLISH: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 36.43cm between the radiator & your body.

The device is in compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance. The minimum distance from body to use the device is 36.43cm.

FRENCH: Cet équipement est conforme aux limites d'exposition aux rayonnements de la FCC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 36.43 cm entre le radiateur et votre corps.

Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et compliance d'acquérir les informations correspondantes. La distance minimale du corps à utiliser le dispositif est de 36.43cm.



NOTES





29 LX

Professional CB Radio

4W / 40 Channels / 4-Color LCD Display



OWNERS MANUAL

For more information or to order any of our products, please visit our website: www.cobra.com

©2022 Cobra Electronics Corporation

Cobra®, Dynamike®, Nothing Comes Close to a Cobra® and the snake design are registered trademarks of Cobra Electronics Corporation, USA.

Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA.

Pat. www.cobra.com/patent

814-ML8501-001



Our Thanks, The CB Story and Customer Assistance

Thank you for purchasing the Cobra 29 LX Professional CB Radio Transceiver. Properly used, this Cobra product will give you many years of reliable service.

Citizens Band Radio History

Invented by Al Gross in 1945, the CB radio originally served as a method of communication for troops during World War II. After the war, Gross worked to make two-way radios a way of communication for personal use and the CB radio service was established by law in the U.S. in 1949. It wasn't until the 1970s that technology advanced and the CB market caught on as a method of communication between drivers to report police speed traps and road hazards.

The Citizens Band Radio Service consists of 40 channel frequencies that are mostly 10 kHz apart. Transmitter power is limited to 4 watts in the US, and range can vary depending on the terrain and quality of the product.

Currently, the Citizens Band service does not require a license for operation, regardless of age, as long as the rules of operation established by the Federal Communication Commission (FCC) are followed.

Petition For FCC Part 95 Rule Changes

In 2016, Cobra petitioned the FCC to revise Part 95 rules to allow CB radios to use frequency modulation (FM). Cobra contended that FM offers improved speech quality and lower noise interference, which improves the standard of two-way radios and is a benefit to the customer.

Through the direct efforts of Cobra Electronics and the enthusiastic support from loyal customers and the distribution network the FCC granted the request. In 2021, Part 95 officially was updated to include FM as an option for two-way radio use.

Today, thanks to Cobra Electronics' petitions to improve the quality of the Citizens Band Radio Service, users can enjoy the benefits of CB radio communication in a range of industries.



Customer Support

Should you encounter any problems with this product, not understand its features, menu or installation, please refer to the this owner's manual. If you require further assistance, after reading this manual, we are here to help:

Service, Orders & Product Questions

For service, product questions and service hours call 800-543-1608 or go to www.cobra.com

For Assistance Outside the U.S.A.



Contact Your Local Dealer



29 LX Features



29 LX Features and FCC Regulations

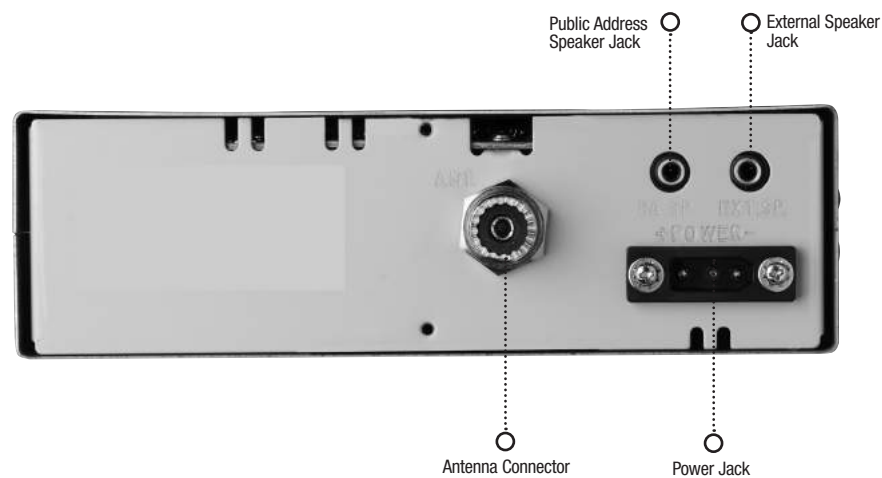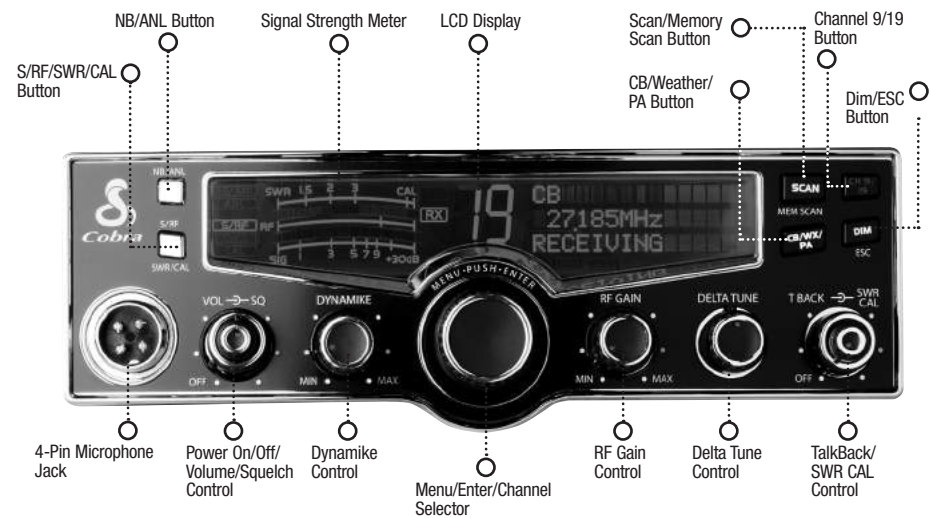

NOTE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two (2) conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or tv interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.