

Model XFR102 Two-Way Communicator

Please log on to www.xactcommunication.com for accessory & product information.

instruction manual

SPECIAL FEATURES

CONGRATULATIONS!

You now own a quality XACT™ Communication product. If you follow the set-up, operation, and care instructions in this Owner's Manual, this unit will provide you with years of trouble-free service.

XACT is committed to providing quality products that fit your needs. Please send us your comments and suggestions. Mail them to:

XACT Communication, LLC
105 Madison Avenue
New York, NY 10016

PRODUCT DESCRIPTION

The COMMUNICATOR is the newest generation in personal two-way communications. The COMMUNICATOR operates in a license-free radio band on the FRS channels 1 - 14 (no FCC license is needed for its operation), and on licensed GMRS channels 15 - 22 (see page 22 regarding licensing information).

The COMMUNICATOR is a lightweight, compact two-way communication device that can be used to communicate with family or friends at parks, shopping malls, sporting events, concerts -- any indoor or outdoor activity!

The COMMUNICATOR is compatible with other brands utilizing the same FRS frequency band (operating in the frequency range from 462.5625 MHz to 467.7125MHz) or same GMRS frequency band (operating in 462.5750 MHz to 462.7250MHz).

The COMMUNICATOR has 22 CHANNELS, including 14 FRS channels and 8 GMRS channels (For details, refer to page 18 Channel and Frequency (MHz) Chart).

Other features include ELECTRONIC VOLUME CONTROL and BATTERY SAVE CIRCUITRY.

Read this Owner's Manual carefully and you'll get the most out of your TWO-WAY COMMUNICATOR.

NOTE:

Maximum range varies based on terrain and environment. It will generally be greater in open fields and shorter within and around buildings or large structures. Bear in mind, this unit may not ensure your privacy of communication.

PREPARATION

Communicator Controls - Location & Function.....	3
FCC Notice.....	5

GETTING STARTED


Removing the Belt Clip.....	7
Installing the Belt Clip.....	7
Battery Installation.....	8
LCD Screen.....	9
Turning the Unit ON.....	10
Turning the Unit OFF.....	10
Adjusting Speaker Volume.....	10
Receiving a Signal.....	10
Transmitting a Signal.....	10

OPERATION

Changing Channels.....	11
Monitor.....	11
Lamp+(Lamp/Lock Button).....	11
Channel Scan.....	12
Battery Level Indicator.....	12
Sending Call Tones.....	13
Battery Charge Indication.....	13
Connecting an Adapter.....	13
VOX Function.....	14

OTHER INFORMATION

Troubleshooting.....	15
Care and Maintenance.....	16
Specifications.....	18
Warranty.....	19
FCC Licensing Information.....	22
GMRS Licensing Information.....	22

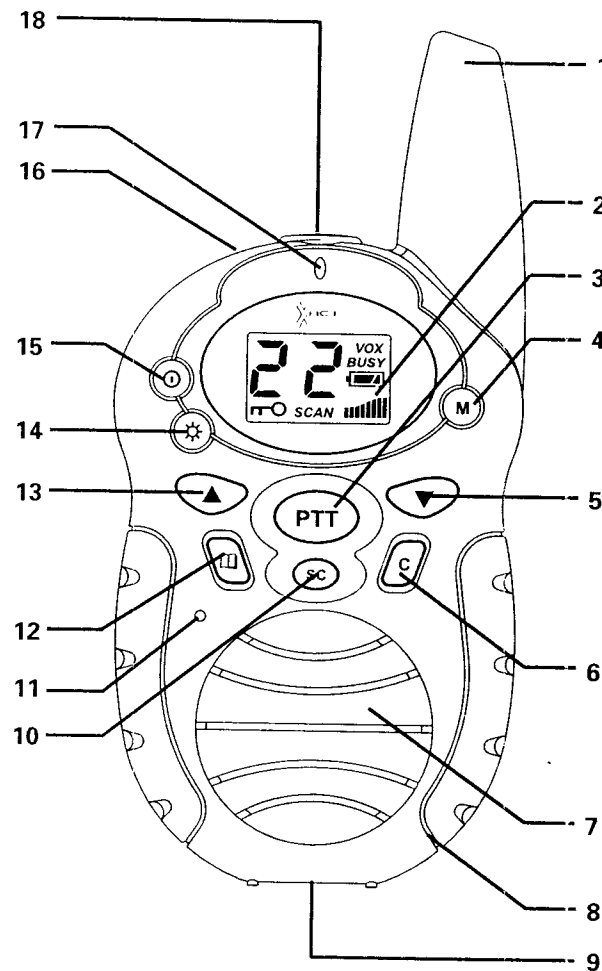

1. **ANTENNA** (Pgs. 6, 17, 18)
2. **LCD Screen:** Displays current channel selection and other radio status symbols. (Pgs. 9-12, 14, 16)
3. **PTT** (PUSH TO TALK) **button:** Press to transmit. (Pgs. 6, 10-12, 15)
4. **MONITOR** **M** **button:** Press to tune in and hold onto weak signals. (Pgs. 10-12, 16)
5. **DOWN** **▼** **button** (VOLUME/CHANNEL): Press to adjust volume level and change channels. (Pgs. 10, 11, 15, 16)
6. **CALL** **C** **button:** Press to transmit CALL TONES. (Pgs. 11, 12, 13)
7. **SPEAKER** (Pg. 10)
8. **BATTERY COMPARTMENT** (LOCATED ON THE REAR): Houses 3 x 1.5V "AAA" alkaline or Ni-MH rechargeable batteries (not included). (Pgs. 8, 18)
9. **BATTERY COMPARTMENT COVER LATCH** (LOCATED ON THE REAR): Secures BATTERY COMPARTMENT COVER. (Pg. 8)
10. **SCAN** **SC** **button:** Used to activate/deactivate CHANNEL SCAN. (Pg. 12)
11. **MIC:** Microphone. (Pgs. 10, 15, 16, 18)
12. **MENU** **≡** **button:** Allows you to change channels. (Pgs. 11, 15, 16)
13. **UP** **▲** **button** (VOLUME/CHANNEL): Press to adjust volume level and change channels. (Pgs. 10, 11, 15, 16)
14. **LAMP+ / LOCK** **⊞** **button:** Used to turn LCD Screen LAMP ON/OFF. Buttons are locked when pressed and held. (Pgs. 9, 10, 11, 16)
15. **POWER ON/OFF** **⏻** **button:** Press and hold the button to turn your unit ON/OFF. (Pgs. 8, 10)
16. **BELT CLIP** (LOCATED ON THE REAR) (Pg. 7)
17. **TX** (Transmission) **LED indicator:** Illuminates red when transmitting. (Pgs. 10, 13, 15)
18. **SP. / MIC. / BATTERY CHARGE JACK** (Pgs. 14, 15)

Warning:

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Warning:

Adjustment to this unit or replacement of any transmitter component (crystal, semiconductor, etc.) to this unit that could result in a violation of the rules.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC NOTICE

Safety Information

Your wireless hand-held portable transceiver contains a low power transmitter. When the Push-to-Talk PTT button is pushed it sends out radio frequency (RF) signals. In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless devices.

Important:

To maintain compliance with the FCC's RF exposure guidelines, hold the transmitter and ANTENNA at least 1 inch (2.5 centimeters) from your face and speak in a normal voice, with the ANTENNA pointed up and away from the face. If you wear the headset on your body while using the headset accessory, use only the supplied BELT CLIP for this product and when transmitting, take it out of the belt to ensure that the ANTENNA is at least 1 inch (2.5 centimeters) from your body.

Use only the supplied ANTENNA. Unauthorized antennas, modifications, or attachments could damage the transmitter and may violate FCC regulations.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

GETTING STARTED

Carefully remove your COMMUNICATOR from its Blister Pack. If there is any visible damage, do not attempt to operate this COMMUNICATOR. Return it to the place of purchase.

Removing the BELT CLIP:

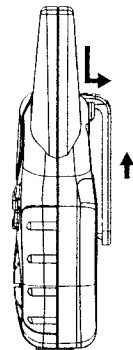


Figure 1.

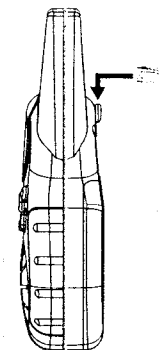


Figure 2.

1. Press the BELT CLIP SPRING LOCK.
2. While pressing the BELT CLIP SPRING LOCK, pull out the BELT CLIP to remove it from the unit, as shown in Figure 1.

Installing the Belt Clip

1. Press the BELT CLIP SPRING LOCK.
2. While pressing the BELT CLIP SPRING LOCK, insert the BELT CLIP LOCK into the unit, as shown in Figure 2.
3. Release the BELT CLIP SPRING LOCK and check the BELT CLIP to determine if it is locked into position.

GETTING STARTED

Battery Installation:

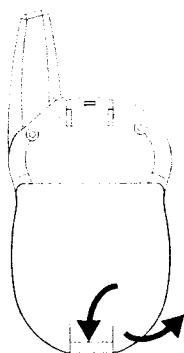


Figure 3.

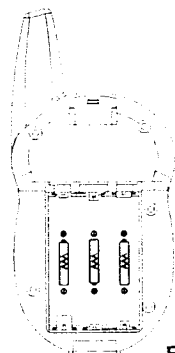



Figure 4.

1. Release the BATTERY COMPARTMENT COVER LATCH located on the rear side of the unit (see Figure 3) and remove the BATTERY COMPARTMENT COVER from the BATTERY COMPARTMENT (See Figure 4).
2. Install 3x1.5V "AAA" alkaline batteries or Ni-MH rechargeable batteries (not included) as shown.
3. Reinstall the BATTERY COMPARTMENT COVER and lock the BATTERY COMPARTMENT COVER LATCH into position.

The **COMMUNICATOR** has a built in **POWER SAVER** feature for maximum battery life. But when the **COMMUNICATOR** is not being used, conserve battery power by pressing the **⓪** button to OFF. Remove the batteries if the unit will not be used for a long period of time.

GETTING STARTED

LCD Screen:

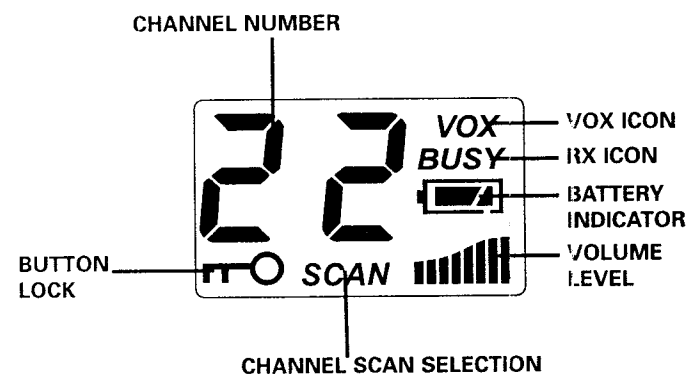

SCAN	Displayed during CHANNEL SCAN mode.
⓪	Press and hold the LAMP+ button until the BUTTON LOCK symbol is displayed.
22	Channel numbers change from 1 to 22 as selected by user.
	Displays current BATTERY LEVEL.
	Displays current VOLUME LEVEL.
BUSY	Displayed when receiving a signal.
VOX	Displayed during VOX mode.

GETTING STARTED

Turning the Unit ON:

Press and hold the **[P]** button. The unit will "beep" with a dual tone and the LCD SCREEN will briefly display a SELF-TEST Screen.

Turning the Unit OFF:

Press and hold the **[P]** button. The unit will "beep" with a signal tone and the LCD Screen will turn blank.

Adjusting Speaker Volume:

1. Press the UP **[▲]** button to increase the Speaker Volume.
2. Press the DOWN **[▼]** button to decrease the Speaker Volume.
3. The Speaker Volume level is indicated by the number of bars displayed in the lower right corner of the LCD Screen.

NOTE: Volume UP **[▲]** and DOWN **[▼]** buttons are disabled during **BUTTON LOCK** mode.

Receiving a Signal:

The unit is continuously in the RECEIVE mode when the unit is ON and not Transmitting. When you receive a signal on the current channel, the RX icon (BUSY) is displayed (See "LCD Screen" for details).

Transmitting a Signal:

1. Check the channel activity by pressing and holding the MONITOR **[M]** button. You'll hear static if the channel is unoccupied. Don't TRANSMIT if someone is talking on the channel. Press and hold the PTT button to TRANSMIT. The TX LED Indicator will light up in red. Hold the unit in a vertical position with the MICROPHONE 2 to 3 inches from the mouth.
2. While holding the PTT button, speak into the unit using a normal tone of voice. For left hand users, please take care not to block the MIC. (underneath MENU button) which may affect transmit level.
3. Release the PTT button when you have finished transmitting.

NOTE:

In order for other people to receive your transmission, they must also be on the same channel you are currently using. Refer to the "Changing Channels" section for more information.

OPERATION

Changing Channels:

The unit has 22 channels that include 14 FRS channels and 8 GMRS channels. In addition, channels 1 - 7 are shared FRS /GMRS channels.

1. Press the MENU **[M]** button once to enter the FRS/GMRS CHANNEL SELECTION mode. The current channel number flashes on the LCD Screen.
2. While the channel number is flashing:
 - Press the UP **[▲]** button to move to a higher channel.
 - Press the DOWN **[▼]** button to move to a lower channel.
 - Press the PTT button to confirm the channel or wait 10 seconds for the channel to be selected automatically.
3. Press the MENU **[M]** button or PTT button to select the desired channel and return to the NORMAL mode, or press the CALL **[C]** button to confirm the channel and TRANSMIT.
4. Channel change operations are disabled during **BUTTON LOCK** mode.

NOTE: Refer to the "Channel and Frequency (MHz) Chart" section of this Owner's Manual for detailed frequency listings.

Monitor:

You can use the **MONITOR** feature to check for weak signals in the current channel.

1. Press the MONITOR **[M]** button for normal monitoring.
2. Press and hold the MONITOR **[M]** button until it beeps for continuous monitoring. (The RX BUSY icon will display on the LCD Screen while this function is activated.)
3. Press the MONITOR **[M]** button again to deactivate the function.

Lamp+ (LAMP/LOCK button):

1. Press and immediately release the LAMP+ **[⚙]** button to light up the LCD Screen. The BACKLIGHT will automatically shut off after 4 seconds if no other buttons have been pressed.
2. Press and hold the LAMP+ **[⚙]** button until the **BUTTON LOCK** icon is displayed on the LCD Screen.

NOTE: Volume and Channel Change Operations are disabled during **BUTTON LOCK** mode. Press and hold the LAMP+ **[⚙]** button again to deactivate **BUTTON LOCK** mode.

OPERATION

Channel Scan:

CHANNEL SCAN performs searches for active signals in an endless loop from 1 to 22.

1. Press and release the SCAN SC button to activate CHANNEL SCAN. The channel number on the LCD Screen changes rapidly until an active signal is detected.
During CHANNEL SCAN mode:
 - Press the SCAN SC button and the channel will return to the original default channel automatically.
 - Press the CALL C button to change to CALL function and to send a CALL TONE on that active channel.
2. When an active signal (one of 22 channels) is detected, CHANNEL SCAN pauses keeping the active signal broadcasted.
3. Press the PTT button to communicate through the active signal channel and CHANNEL SCAN is deactivated.
 - If the active signal is the original default channel (e.g. CH-5), when the PTT button is pressed, channel (CH-5) will remain the default channel.
 - If the active signal is not the original default channel (e.g. CH-1), after the PTT button is pressed, the default channel (e.g. CH-5) will automatically change to channel (CH-1).
4. When an active signal (one of 22 channels) is detected, but another channel is desired, press the MONITOR M button to bypass the current channel and continue to search for another active channel.
5. Press the SCAN SC button to deactivate CHANNEL SCAN mode.

Battery Level Indicator:

1. The BATTERY LEVEL is indicated by the number of squares present inside the BATTERY icon on the LCD Screen.
2. When the BATTERY LEVEL is low, the BATTERY icon will flash to indicate that the batteries need to be replaced.
3. Do not charge this unit using an AC/DC adapter with regular "AAA" alkaline batteries installed. Only use an optional AC/DC adapter with "AAA" Ni-MH rechargeable batteries (not included).

OPERATION

Sending Call Tones:

You can use CALL TONES to alert the other user when you are attempting to contact them. You can also use CALL TONES to signal the beginning or the end of a transmission.

1. Press the CALL C button, the red TX LED indicator will light up and the CALL TONE continues for 3 seconds.
2. Release the CALL C button, your CALL TONES will transmit to nearby receivers set to the same channel.

Battery Charge Indication:

During BATTERY CHARGE mode, the BATTERY indicator will keep flashing.

NOTE: Please ensure that the unit is turned OFF during BATTERY CHARGE mode.

Connecting an Adapter:

In the event you wish to use the unit with rechargeable batteries (not included) you will be required to use an AC/DC Adapter - Input 120 VAC 60 Hz - Output 4.5 VDC 100MA (not included)

- Insert 3 "AAA" Ni-MH rechargeable batteries (not included)
- Turn the unit OFF.
- Plug the Adapter into the wall and insert the round end into the CHARGE JACK marked CHG on the top of the COMMUNICATOR.
- Unplug the Adapter. Turn the unit ON. The BATTERY LEVEL INDICATOR on the LCD Screen will display the new BATTERY LEVEL.

CAUTION: Your COMMUNICATOR must have rechargeable "AAA" batteries installed before using the external DC Adapter.

Note: It takes approximately 14 hours to fully charge the batteries if they are at their lowest level.





You may order the Adapter and/or batteries by calling 1-866-466-XACT (9228).

OPERATION

VOX Function:



The COMMUNICATOR has a built-in Voice Activated Transmission (VOX) capability. While in the VOX mode, the COMMUNICATOR will automatically transmit and receive signals without any button being pressed. VOX operation is not recommended if you plan to use your radio in a noisy or windy environment.

To turn on the VOX mode:

1. Press the MENU  button two times to enter the VOX mode;
2. While the VOX icon is flashing;
3. Press the UP  button to select a higher VOX sensitivity;
4. Press the DOWN  button to select a lower VOX sensitivity;
5. Press the MENU  button to confirm the selected mode.

Note: The VOX sensitivity is indicated by the number of bars displayed in the lower right corner of the LCD Screen. When in a quiet environment we recommend setting the sensitivity to maximum (high) and when in a noisy environment, reduce the sensitivity as needed.

To turn OFF the VOX mode:






1. While the VOX icon is flashing press the DOWN  button until the number of bars disappear.
2. Press the MENU  button to confirm the VOX OFF mode.

To use the VOX feature:

1. While in VOX mode, plug the connector of the headset (not included) into SPK/MIC jack of the COMMUNICATOR and then speak through the microphone of the headset to activate TRANSMIT mode.
2. When in the VOX mode, speaking into the headset (or loud noises in the environment) will automatically switch the COMMUNICATOR from STANDBY mode to TRANSMIT mode.
3. The TX LED indicator illuminates red when transmitting.

Note: The VOX mode and sensitivity are automatically activated once the connector of the headset (not included) is inserted into the SPK/MIC jack of the COMMUNICATOR. Now the PTT button of the COMMUNICATOR will not have to be pressed to transmit signals.

TROUBLESHOOTING

PROBLEM	SOLUTION
No power	<ul style="list-style-type: none"> • Check batteries. Ensure that the batteries are installed properly. • The batteries may be weak. • Replace old batteries with three (3) new "AAA" alkaline batteries or Ni-MH rechargeable batteries.
Weak Reception	<ul style="list-style-type: none"> • Press the UP  button to increase VOLUME. • The receiving signal may be weak and/or out of range. • If this happens, press the MONITOR  button.
Cannot change channels	<ul style="list-style-type: none"> • To change channels, press the MENU  button until the channel number flashes on the LCD Screen. • Press the UP  or DOWN  buttons to change channels. • Batteries may be weak. • BUTTON LOCK mode must be deactivated.
Range is limited	<ul style="list-style-type: none"> • BATTERIES may be weak. • Replace with new batteries if the BATTERY LEVEL indicator is low. • The maximum range will vary depending on terrain and environment. • Open fields provide the maximum range, while steel/concrete structures, heavy foliage, and use in buildings and in vehicles may limit the range significantly. • Wearing the radio close to the body, such as in a pocket or on a belt, will decrease range; change the location of the radio.
Sound distortion	<ul style="list-style-type: none"> • If you are transmitting, speak in a normal tone of voice, 2 to 3 inches away from the MICROPHONE. • If you are receiving, lower the volume to a comfortable level. • Radios too close. Radios must be at least 5 feet apart; increase your distance. • Radios too far apart. Obstacles interfere with transmission. Talk range is up to 2 miles in clear unobstructed conditions.

CARE AND MAINTENANCE

CAUTION !

Damaged ANTENNA:

Do not use any COMMUNICATOR that has a damaged ANTENNA. If a damaged ANTENNA comes in contact with the skin, a minor burn may result.

Batteries:

All batteries can cause property damage and/or bodily injury such as burns if conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

WARNING !

For Vehicles with an Air Bag:

Do not place your COMMUNICATOR in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a COMMUNICATOR is placed in the air bag deployment area and the air bag inflates, the COMMUNICATOR may be propelled with great force and cause serious injury to the occupants of vehicle.

Potentially Explosive Atmospheres:

Turn your COMMUNICATOR OFF when in any area with a potentially explosive atmosphere, unless it is a type specifically qualified for such use (for example, Factory Mutual Approved). Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Batteries:

Do not replace or charge batteries in a potentially explosive atmosphere. Contact sparking may occur while installing or removing batteries and cause an explosion.

Blasting Caps and Areas:

To avoid possible interference with blasting operations, turn your COMMUNICATOR OFF near electrical blasting caps or in a "blasting area" or in areas posted: "Turn off two-way radio". Obey all signs and instructions.

NOTE: Areas with potentially explosive atmospheres are often, but not always, clearly marked. They include fueling areas such as below deck on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle engine.

CARE AND MAINTENANCE

Care and Maintenance

To clean the unit, wipe with a soft cloth dampened with water. Don't use a cleaner or solvents on the unit; they can harm the case and leak inside, causing permanent damage. Battery contacts may be wiped with a dry, lint-free cloth.

If the unit gets wet, turn it OFF and remove the batteries immediately. Dry the BATTERY COMPARTMENT with a soft cloth to minimize potential water damage. Leave the cover off the BATTERY COMPARTMENT overnight or until completely dry. Do not use the unit until completely dry.

Exposure to Radio Frequency Energy:

The design of your COMMUNICATOR, which generates radio frequency (RF) electromagnetic energy (EME), complies with the following national and international standards and guidelines.

The Relevant Guidelines and Standard Are:

- FCC Report and Order FCC 96-326 (August, 1996)
- American National Standards Institute (C95-1-1992)
- National Council on Radiation Protection and Measurements (NCRP-1986)
- International Commission on Non-Ionizing Radiation Protection (ICNRP -1986)

To ensure optimal unit performance and to ensure that exposure to RF energy is within the guidelines in the above standards, the following operating procedures should be observed:

For Portable Two-way Communicators:

- When transmitting with a COMMUNICATOR, hold the COMMUNICATOR in a vertical position with its MICROPHONE 1 to 2 inches (2.5 to 5.0 cm) away from your mouth. Keep the ANTENNA at least 1 inch (2.5 cm) from your head and body.
- If you wear a COMMUNICATOR on your body, ensure that the ANTENNA is at least one inch (2.5 cm) from your body when transmitting.

Electromagnetic Interference/Compatibility:

Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

- Turn your unit OFF in any facilities where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.
- Turn your unit OFF when on board an aircraft when instructed to do so. Any use of the unit must be accordance with airline regulations or crew instructions.

SPECIFICATIONS

Channels Available	22 FRS/GMRS Channels
Operating Frequency	UHF 462.5500 - 467.7125 MHz
Power Source	3 AAA size Alkaline batteries or 3 AAA Ni-MH rechargeable batteries (not included)
Output Power (TX)	0.06W (GMRS) 0.05W (FRS)
Battery Life	30 Hours (typical)
Range	About 2.0 Miles

Channel and Frequency (MHz) Chart

Channels 1 thru 14 transmit on FRS frequencies.

Channels 1 thru 7 and Channels 15 thru 22 transmit on GMRS frequencies.

Ch.	Frequency	Ch.	Frequency	Ch.	Frequency	Ch.	Frequency
1	462.5625	7	462.7125	13	467.6875	19	462.6000
2	462.5875	8	467.5625	14	467.7125	20	462.6500
3	462.6125	9	467.5875	15	462.5750	21	462.7000
4	462.6375	10	467.6125	16	462.6250	22	462.7250
5	462.6625	11	467.6375	17*	462.6750		
6	462.6875	12	467.6625	18	462.5500		

Note:

- * GMRS emergency channel 462.6750MHz.
- The maximum transmission range will vary depending on the terrain and environment.

XACT 22 Channel Models	Other Brands 22 Channel Models	All Brands 15 Channel Models
Ch. 1~7	Ch. 1~7	Ch. 1~7
Ch. 8~14	Ch. 8~14	NA
Ch. 15	Ch. 16	Ch. 8
Ch. 16	Ch. 18	Ch. 9
Ch. 17	Ch. 20	Ch. 10
Ch. 18	Ch. 15	Ch. 11
Ch. 19	Ch. 17	Ch. 12
Ch. 20	Ch. 19	Ch. 13
Ch. 21	Ch. 21	Ch. 14
Ch. 22	Ch. 22	Ch. 15

* All 15 Channel GMRS units including XACT use the same channels.

NOTE: For your convenience it is suggested that you use Channels 1 thru 14. Operation of this model on GMRS frequencies (Channels 15 thru 22) requires a license from the Federal Communications Commission (FCC).

WARRANTY

XACT Communication

One-year Limited Warranty

This limited warranty sets forth all **XACT Communication** responsibilities as they apply to your **COMMUNICATOR**. There are no other expressed or implied warranties from **XACT Communication**.

Warranty Service Provided

If you purchased the **COMMUNICATOR** unit new from a retail vendor, **XACT Communication** warrants the equipment against defects in material and workmanship for a period of one (1) year from the original date of purchase. This warranty is in lieu of all other expressed warranties. This warranty takes effect when you purchase the **COMMUNICATOR** unit and continues for one (1) year unless you sell or rent the unit, in which case the warranty ends.

XACT Communication disclaims any implied warranty, including the warranty of merchantability and the warranty of fitness for a particular purpose, as of the date of one (1) year from your original purchase of the **COMMUNICATOR** unit. **XACT Communication** assumes no responsibility for any special, incidental, or consequential damages.

This warranty gives you specific legal rights and you may have other rights that vary from state to state. Some states do not allow the exclusion or limitation of special, incidental or consequential damages or limitation on how long a warranty lasts, so the above exclusion or limitation may not apply to you.

Warranty Service Not Provided

This warranty does not cover damages resulting from accident, misuse, abuse, improper installation or operation, lack of reasonable care, unauthorized modification, or the affixing of any attachment not provided by **XACT Communication** with the **COMMUNICATOR** unit, and/or loss of parts. This warranty is voided in the event any unauthorized person opens, alters, or repairs the unit.

All **XACT Communication** equipment being returned for repair must be suitably packaged.

XACT Communication does not warrant that this equipment is compatible with the type of accessory of any particular communicator company or the service provided by it.

www.xactcommunication.com

SPECIFICATIONS

Channels Available	22 FRS/GMRS Channels
Operating Frequency	UHF 462.5500 - 467.7125 MHz
Power Source	3 AAA size Alkaline batteries or 3 AAA Ni-MH rechargeable batteries (not included)
Output Power (TX)	0.06W (GMRS) 0.05W (FRS)
Battery Life	30 Hours (typical)
Range	About 2.0 Miles

Channel and Frequency (MHz) Chart

Channels 1 thru 14 transmit on FRS frequencies.

Channels 1 thru 7 and Channels 15 thru 22 transmit on GMRS frequencies.

Ch.	Frequency	Ch.	Frequency	Ch.	Frequency	Ch.	Frequency
1	462.5625	7	462.7125	13	467.6875	19	462.6000
2	462.5875	8	467.5625	14	467.7125	20	462.6500
3	462.6125	9	467.5875	15	462.5750	21	462.7000
4	462.6375	10	467.6125	16	462.6250	22	462.7250
5	462.6625	11	467.6375	17*	462.6750		
6	462.6875	12	467.6625	18	462.6500		

Note:

- * GMRS emergency channel 462.6750MHz.
- The maximum transmission range will vary depending on the terrain and environment.

XACT 22 Channel Models	Other Brands 22 Channel Models	All Brands 15 Channel Models	* All 15 Channel GMRS units including XACT use the same channels.
Ch. 1-7	Ch. 1-7	Ch. 1-7	NOTE: For your convenience it is suggested that you use Channels 1 thru 14. Operation of this model on GMRS frequencies (Channels 15 thru 22) requires a license from the Federal Communications Commission (FCC).
Ch. 8-14	Ch. 8-14	NA	
Ch. 15	Ch. 16	Ch. 8	
Ch. 16	Ch. 18	Ch. 9	
Ch. 17	Ch. 20	Ch. 10	
Ch. 18	Ch. 15	Ch. 11	
Ch. 19	Ch. 17	Ch. 12	
Ch. 20	Ch. 19	Ch. 13	
Ch. 21	Ch. 21	Ch. 14	
Ch. 22	Ch. 22	Ch. 15	

WARRANTY

What To Do For Warranty Service

During the first thirty (30) days, a defective product is eligible for over-the-counter exchange at the retailer from whom it was purchased. After thirty (30) days, the defective product should be returned to the authorized service center. The shipping address of the authorized service center is:

XACT Communication CONSUMER CENTER
C/O Southern Bonded Warehouse
7137 Southlake Parkway
Morrow, GA 30260

Web site – www.xactcommunication.com

Your unit will be repaired or replaced (at our discretion) if examination by the service center determines that the unit is defective.

A COMMUNICATOR unit received damaged as a result of shipping will require that you file a claim with the carrier to cover repair costs.

A COMMUNICATOR unit received with missing parts or with damage due to abuse, inadequate packing, or some other noncompliance with this limited warranty will be returned to you C.O.D., freight collect.

NOTE: Any unit received that was not made for XACT Communication or which is not defective as determined by our test procedures will not be repaired and will be returned to you C.O.D., freight collect.

To Obtain Warranty Service

- Include proof of the date of purchase within the package.
- Prepay all shipping costs to the authorized service center.
- Include a return shipping address within the package.

Please retain your sales receipt, the carton, the packaging materials, and the printed materials. Should you need to return your COMMUNICATOR, the original carton is the best shipping container for the unit.

www.xactcommunication.com

WARRANTY

For your reference:

Model Number _____

Date of Purchase _____

Name of Dealer _____

Toll Free Customer Service Telephone Number 1-866-466-XACT (9228)

WARRANTY

FCC Licensing Information:

Channels 1 thru 14 transmit on FRS frequencies.

Channels 1 thru 7 and Channels 15 thru 22 transmit on GMRS frequencies.

Operation on GMRS frequencies requires a license from the Federal Communications Commission (FCC).

If you intend to use GMRS channels, information regarding an application for your license can be obtained as follows:

Web site – <http://wireless.fcc.gov/prs/genmb1.html>

Tel.: 1-800-418-3676

GMRS LICENSING INFORMATION

Before any station transmits on any channel authorized in the GMRS from any point within or over the territorial limits of any area where radio services are regulated by the FCC, the responsible party must obtain a license for a GMRS system. An individual 18 years of age or older, who is not a representative of a foreign government is eligible to apply for a GMRS license. Application for a GMRS system license is made on FCC Form 605 and you can obtain a copy from the FCC's Web site: <http://www.fcc.gov/formpage.html> or by calling the FCC's Forms Distribution Center 1-800-418-FORM (3676), or from the fax-on-demand by dialing (202) 418-0177. There is a filing fee. For information on fees, see the FCC's Web site: <http://www.fcc.gov/csinfo/fccinfo.html>