

Exhibit E

User's Manual

RHINE ELECTRONIC CO., LTD.

FCC ID.:CHQ8BT7067R

Receiver of Remote Control

NOTE :

This FCC ID. application is for " RECEIVER ".

The TRANSMITTER use for RECEIVER which had certified by


FCC and got an FCC ID. " **CHQ8BT7030T** "

INSTRUCTIONS FOR OPERATION

SETTING THE OPERATING CONTROLS

page : 2-1

1. This unit operates on a 9 volts battery .
To prevent possible damage if the battery should leak, be sure to remove the battery when the unit is not use.
2. Store the controller away from excess heat or humidity.
3. This remote control unit is reequipped with 16 code combinations. To prevent possible interference from Or to other remote units such as garage door openers, car alarm or security system. If you find that your fan and light kit go on and off without using your control, simply change the combination code in your transmitter and receiver.
4. Operation buttons on the panel of transmitter.
HI key - For fan High speed.
MED key - For fan Medium speed.
LOW key - For fan Low speed.
OFF key - For fan speed Off.
💡 key - For light brightness and ON/OFF control.
5. Start the fan :
Press the selected speed button to run the fan at the desired.
6. Turn off the fan :
Press the OFF button.
7. Light control :
Turn the light on or off by only touching the 💡 button.
Keep pressing the button in excess of 0.7 second it becomes a dimmer, the light varies cyclically in 0.8 second.
One of the important feature of this control is AUTO-RESUME. After power on, it allows the light return to where it was off.

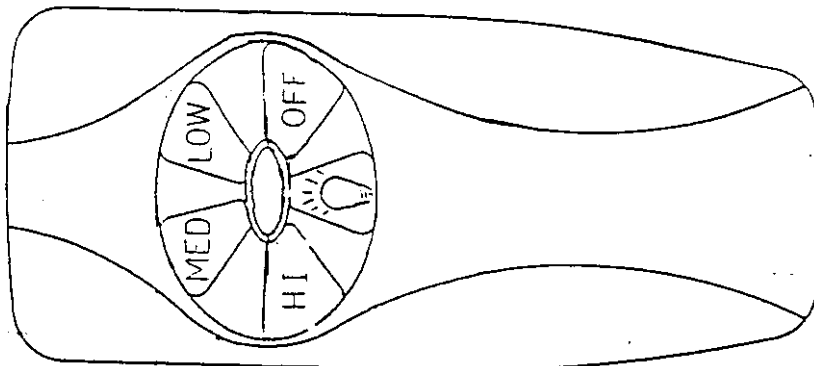

INSTRUCTIONS FOR OPERATION

SETTING THE OPERATING CONTROLS

This receiver must combine with the transmission signal of the transmitter, so that it can control the ceiling fan's speed, and the light brightness .

INSTRUCTIONS FOR INSTALLATION AND OPERATION OF FAN SPEED CONTROLLER

A. Setting the code on your new transmitter.


1. Slide code switches to your choice of UP and DOWN position. Factory setting is all UP. Do not use this setting. Use ball point pen or small screwdriver. Slide firmly up or down.

B. Setting the code on your new Receiver unit.

1. Slide code switches to the same positions as set on your transmitter. They must be set to same positions to work.
2. Make sure the code switches are on the right positions.

NOTICE :

The changes or modifications not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

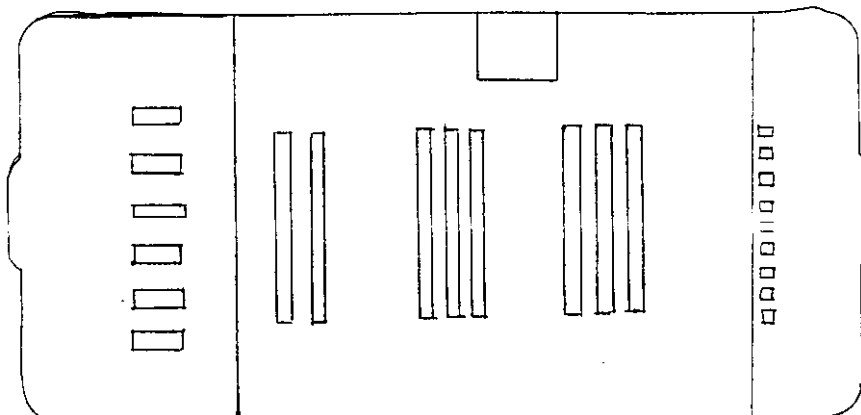

GENERAL INFORMATION

This remote control is designed to separately control your ceiling fan speed and light brightness. There are four buttons (Hi, Med, Low, Off) to control the fan speed and off. The light dimmer button will control the light brightness dimmer and off. The red indicator on the transmitter will light when the button is pressed.

INSTALLATION AND OPERATING INSTRUCTION

1. SETTING THE CODE


This unit has 16 different code combinations. To set the code, perform these steps:

A. Setting the code on the transmitter:

- a. Remove battery cover. Press firmly below arrow and slide battery cover off.
- b. Slide code switches to your choice of up or down position. (Factory setting is all up. Do not use this position. Use a small screwdriver or ball point pen to slide firmly up or down (Figure 1).

B. Setting the code on the receiver:

- a. Slide code switches to the same positions as set on your transmitter (Figure 2).
- b. Replace battery cover on transmitter.

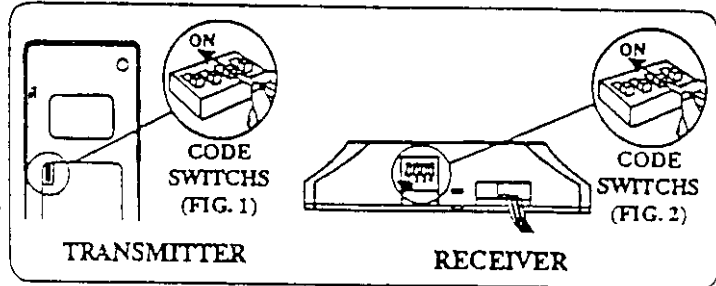


2. INSTALLING RECEIVER IN CEILING FAN

A. Safety precautions:

- **WARNING: HIGH VOLTAGE!** Disconnect source of electrical power by removing fuse or switching off circuit breaker.
- Do not use with solid state fans.
- Electrical wiring must meet all local and national electrical code requirements.
- Electrical source and fan must be 115/120 volt, 60 Hz. Maximum fan motor amps: 1.0. Maximum light watts: 250 - incandescent only.
- Household electrical power can cause serious injury or death!

B. Installing receiver in fan:

- a. Remove electrical power from the circuit.
- b. Remove ceiling fan canopy from the mounting bracket.
- c. Disconnection existing wiring between ceiling fan and supply at electrical junction box.
- d. Make connections as follows, using the wire nuts supplied:
 Connect GREEN/YELLOW fan wire to BARE (ground) wire.
 Connect BLACK Control Unit wire to BLACK supply wire (ACL).
 Connect WHITE Control Unit wire WHITE wire of supply (ACN).
 Connect WHITE Control Unit wire (MOTOR N) to WHITE fan wire.
 Connect BLACK/RED Control Unit wire (MOTOR L) to BLACK/RED fan wire.
 Connect BLUE Control Unit wire (FOR LIGHT) to BLUE light wire.

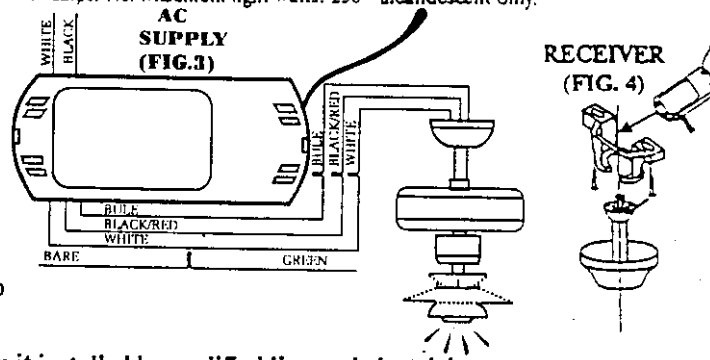

If other fan or supply wires are different color, have this unit installed by qualified licensed electrician.

- e. Push all connected wires up into junction box.
- f. Lay the black antenna wire on top of the receiver, and put the receiver in the mounting bracket.
- g. Reinstall the canopy on the mounting bracket.
- h. Restore electrical power.


3. OPERATING TRANSMITTER:

- A. Install 9 volt battery (not included). (To prevent damage to transmitter, remove the battery if not use for long periods).
- B. Store the transmitter away from excess heat or humidity.
- C. This remote control unit is equipped with 16 code combinations. To prevent possible interference from or to other remote units such as garage door openers, car alarm or security system. If you find that your fan and light kit go on and off without using your remote control, simply change the combination code in your transmitter and receiver.
- D. Operation buttons on the panel of the transmitter:
 HI key - for fan high speed.
 MED key - for fan medium speed.
 LOW key - for fan low speed.
 OFF key - for fan speed off.
 ⚡ key - for light brightness and off.
 • The light function is controlled by pressing the ⚡ key. Hold key down to increase or decrease light. Tap key quickly to turn light off or on.
 • Keep pressing the button in excess of 0.7 second it becomes a dimmer, the light varies cyclically in 0.8 second.
 • The light key has auto resume, so will stay at the same brightness as the last time it was turned off.

YOUR REMOTE NOW HAS FULL CONTROL OF THE FAN AND LIGHT.

4. TROUBLE SHOOTING GUIDE

1. Fails to operate:
 - a. Power to receiver?
 - b. Receiver wired correctly?
 - c. Fan manual speed control in highest position?
 - d. Light kit switch turned on?
 - e. Good battery in the transmitter?
 - f. Code set at exact same positions in both transmitter and receiver?
2. Won't operate at distance:
 - If transmitter operates fan/light kit when up close, but not at 40 feet away, try placing the black antenna wire higher, up through ceiling/outside the junction box.

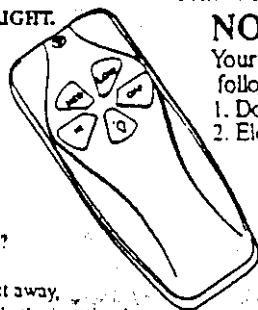

NOTICE!

Your ceiling fan and light kit assembly must meet the following requirements:

1. Do not use with solid state fans.
2. Electrical rating: 120V 60Hz 3.5A
 MAX motor amps: 1.0
 MAX light watts: 250 - (incandescent only)

CAUTION:

Not for use in applications where the fan's canopy is to be mounted to an angle or vaulted ceiling.
 Do not use fan speed control in canopies where the mounting is not as described in Fig. 4

