

Transmitter Model T36, 72-76 MHz

Instructions For Use and Care

Thank you for purchasing the T36 transmitter from Williams Sound. The T36 is designed to operate with a wideband FM, 72–76 MHz receiver. For more information on available receivers, contact Williams Sound at 800-843-3544 or 952-943-2252

PACEMAKER SAFETY



CAUTION!

1. Before using this product with a pacemaker or other medical device, consult your physician or the manufacturer of your pacemaker or other medical device.
2. If you have a pacemaker or other medical device, make sure that you are using this product in accordance with safety guidelines established by your physician or the pacemaker manufacturer.

BATTERY SAFETY & DISPOSAL



CAUTION!

Do not attempt to recharge disposable batteries, which may explode, release dangerous chemicals, cause burns, or other serious harm to the user or product.

RECYCLING INSTRUCTIONS



Help Williams Sound protect the environment! Please take the time to dispose of your equipment properly.

Product Recycling:

Please do NOT dispose of your Williams Sound equipment in the household trash. Please take the equipment to an electronics recycling center; OR, return the product to the factory for proper disposal.

Battery Recycling:

Please do NOT dispose of used batteries in the household trash. Please take the batteries to a retail or community collection point for recycling.

05/22/08

OPERATING INSTRUCTIONS

IMPORTANT: If Alkaline (non-rechargeable) batteries are being installed, slide the battery selection switch in the battery compartment to the “Alkaline” position. See FIG. A below. If installing NiMH (or rechargeable) batteries, slide the battery selection switch to the “NiMH” position.

1. Install AA batteries: Open the battery compartment by lifting the tab on the back of the transmitter with your finger. To remove depleted batteries, pull up on the fabric strip.

Press the batteries into place over the fabric strip. Be sure to observe proper polarity (+/-). Damage due to improper battery installation may void the warranty on the product. Close the battery door. LED will flash when the batteries are getting low; continue to use until the unit quits operating, then replace or recharge batteries.

FIG. A: Battery Selection Switch


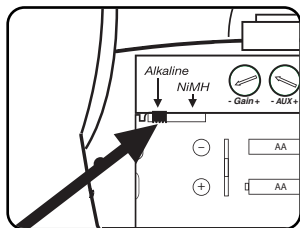


FIG. B: T36 User Controls

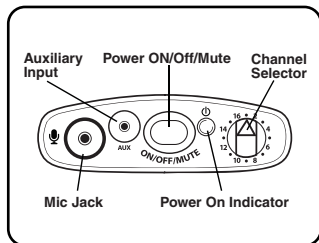

2. Plug the microphone cord (sold separately) into the “Mic Jack” on top of the transmitter (FIG. B). Alternatively, plug in a desired audio source such as a CD or MP3 player using the “Auxiliary Input” jack (WCA 087 auxiliary input cable included). If mic and auxiliary sources are used together, the audio will be mixed.
3. Turn the unit on: press and hold the “ON/OFF/MUTE” button for three seconds. The “Power ON Indicator” should illuminate Green.
4. Select the desired operating frequency. Use the “Channel Selector” knob to select any of the 16 available channels on 72-76 MHz. Refer to the channel selection chart, FIG C.

IMPORTANT: Make sure the receiver being used is operating on the same frequency as the T36 transmitter!


FIG. C: Channel Selection Chart

CH	Freq.	CH	Freq.
1	72.1 MHz	9	72.9 MHz
2	72.2 MHz	10	74.7 MHz
3	72.3 MHz	11	75.3 MHz
4	72.4 MHz	12	75.4 MHz
5	72.5 MHz	13	75.6 MHz
6	72.6 MHz	14	75.7 MHz
7	72.7 MHz	15	75.8 MHz
8	72.8 MHz	16	75.9 MHz

- Position the headset microphone boom as close to the speaker's mouth as possible without actually touching. Lapel clip microphones should be attached to a collar or lapel, as close to the speaker's mouth as possible. The transmitter can be placed in a pocket, or clipped onto a belt or waistband.
- When you pause from speaking, mute the microphone by pressing the "ON/OFF/MUTE" button once momentarily. The ON/OFF/MUTE button will flash RED. To unmute the mic, press the ON/OFF/MUTE button once momentarily again.

IMPORTANT: When the T36 transmitter is not being used, remember to turn the unit OFF by pressing and holding the ON/OFF/MUTE button for three seconds. The Power ON Indicator should not be lit.

FIG. D: Configuration Controls

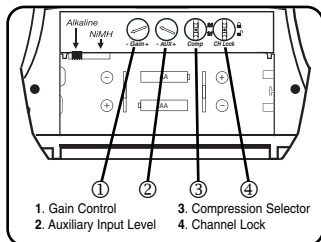

GAIN CONTROL

The gain control can be used to adjust the volume level on both the microphone and auxiliary input.

To adjust the volume level, open the battery door and locate the Gain Control (FIG. D). To increase the volume, use a plastic tuning wand and turn the "Gain" control clockwise. To decrease the volume, turn the "Gain" control counterclockwise. Close the battery door after adjustments have been made.

AUXILIARY INPUT LEVEL

The auxiliary input level can be used to adjust the auxiliary input level only.

To adjust, open the battery door and locate the Auxiliary Input Level (FIG. D). To increase the input level, use a plastic tuning wand and turn the "AUX" control clockwise. To decrease the auxiliary input level, turn the AUX control counterclockwise. Close the battery door after adjustments have been made.

COMPRESSION SELECTOR



By default, the T36 transmitter is set to “Off” for normal operation, or 1:1 compression. For hearing assistance applications, the compression selector can be set to “On” for 2:1 compression.

To change this setting, open the battery door and locate the Compression Selector (FIG. D).

To turn on compression (2:1), use a plastic tuning wand and slide the “Compress” switch to the position marked “2:1.” To turn off compression, slide the “Compress” switch to the position marked “1:1.” Close the battery door after adjustments have been made.

CHANNEL LOCK

By default, the T36 channels are *unlocked* to allow the user to change frequencies as needed. If desired, channels can be locked to prevent users from changing the channels.

To lock or unlock channels, open the battery door and locate the Channel Lock (FIG. D). To *lock* the channels, slide the “CH Lock” switch to the position marked “”. Close the battery door after adjustments have been made. To *unlock* the channels, use a tuning wand and slide the “CH Lock” switch to the position marked “”.

BATTERY INFORMATION

The T36 transmitter can use two (2) disposable AA batteries (BAT 001) or two (2) AA rechargeable batteries (BAT 026). Note: The BAT 026 provides longer life than other rechargeable batteries. Do not substitute other rechargeable batteries and chargers.

LOW BATTERY INDICATOR

The Power ON Indicator (FIG. B) will flash to indicate low battery.



EXPECTED BATTERY LIFE

Alkaline batteries
(BAT 001): N/A

Rechargeable NiMH Batteries
(BAT 026): 20 hrs. per charge.
Min. 14 hour recharge time.

If the T36 transmitter is equipped with rechargeable batteries, up to 12 units can be charged at one time in the optional CHG 3512 multi-charger, or up to two units in the CHG 3502 dual bay charger. For ordering information, please contact Williams Sound at 800-843-3544.

BELT CLIP INSTALLATION

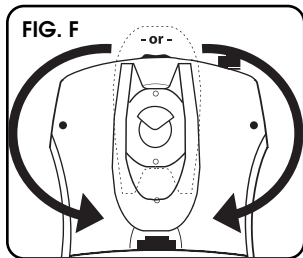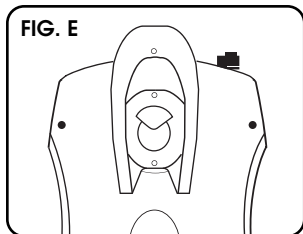

To Install: Position the belt clip on the rear of the T36 transmitter as shown in FIG. E. Turn the belt clip 180° left or right as shown in FIG. F. The belt clip is now installed and ready for use.

To Remove: Turn the belt clip 180° so the open end of the clip points to the top of the unit as shown in FIG. E. Gently pull the belt clip away from the unit to remove.

LIMITED WARRANTY

Williams Sound products are engineered, designed and manufactured under carefully controlled conditions to provide you with many years of reliable service. Williams Sound warrants the T36 transmitter against defects in materials and workmanship for FIVE (5) years. During the first three years from the purchase date, we will promptly repair or replace the T36 transmitter.

Earphones, headphones, batteries, cables, carry cases, and all other accessory products carry a 90-day warranty. Chargers carry a one year warranty.

WILLIAMS SOUND HAS NO CONTROL OVER THE CONDITIONS UNDER WHICH THIS PRODUCT IS USED. WILLIAMS SOUND, THEREFORE, DISCLAIMS ALL WARRANTIES NOT SET FORTH ABOVE, BOTH EXPRESS AND IMPLIED, WITH RESPECT TO THE T36 TRANSMITTER, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. WILLIAMS SOUND SHALL NOT BE LIABLE TO ANY PERSON OR ENTITY FOR ANY MEDICAL EXPENSES OR ANY DIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY ANY USE, DEFECT, FAILURE OR MALFUNCTION OF THE PRODUCT, WHETHER A CLAIM FOR

SUCH DAMAGES IS BASED UPON WARRANTY, CONTRACT, TORT OR OTHERWISE. THE SOLE REMEDY FOR ANY DEFECT, FAILURE OR MALFUNCTION OF THE PRODUCT IS REPLACEMENT OF THE PRODUCT. NO PERSON HAS ANY AUTHORITY TO BIND WILLIAMS SOUND TO ANY REPRESENTATION OR WARRANTY WITH RESPECT TO THE T36 TRANSMITTER. UNAUTHORIZED REPAIRS OR MODIFICATIONS WILL VOID THE WARRANTY.

The exclusions and limitations set out above are not intended to, and should not be construed so as to contravene mandatory provisions of applicable law. If any part or term of this Disclaimer of Warranty is held to be illegal, unenforceable or in conflict with applicable law by a court of competent jurisdiction, the validity of the remaining portions of this Disclaimer of Warranty shall not be affected, and all rights and obligations shall be construed and enforced as if this Limited Warranty did not contain the particular part or term held to be invalid.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

If you experience difficulty with your system, call Toll-Free for Customer Assistance:

**1-800-843-3544 (U.S.A.) or
+1 952 943 2252 (Outside the U.S.A.)**

If it is necessary to return the system for service, your Customer Service Representative will give you a Return Authorization Number (RA) and shipping instructions.

Pack the system carefully and send it to:

**Williams Sound Corp.
Attn: Repair Dept.
10321 West 70th Street
Eden Prairie, MN 55344**