



Trantec S5 Wireless Microphone Series

Trantec S5 Wireless Microphone Series

QUICK INSTALLATION GUIDE





CONTENTS

Page

1. Introduction and system overview
2. Important safety instructions and getting started
3. Receiver set-up
4. Receiver frequency selection
5. Handheld transmitter set-up
6. Beltpack transmitter set-up
7. Operating hints and troubleshooting guide
8. Receiver rack mount kit
9. Technical specifications
10. WEEE statement and warranty

INTRODUCTION

The Trantec S5 series represents our commitment to our customers by providing high-quality, reliable wireless audio links using our considerable design expertise gained over many years as a leading edge manufacturer.

We would like to thank you for purchasing this product and would like you to spend a few moments studying this *Quick Installation Guide*, especially the safety instructions, before going on to 'read' the full manual supplied on the CD Rom with this equipment.

S5 SERIES SYSTEM OVERVIEW

The S5 series is a professional UHF wireless microphone system with features including:

- 24 channel simultaneous operation (12 channel S5.3)
- 10 preset banks including 1 custom user. (9 Banks S5.3)
- True "dual receiver" diversity – to minimise drop-outs
- Intuitive LCD and operating system on both receiver and transmitter
- Infra-red programming for fast system set-up
- Software transmitter function locks
- Headphone monitoring as standard
- Both XLR (switchable mic and line) and 1/4" jack AF outputs
- AF processing menu (S5.5 only)
- Over 1400 customer selectable channels
- Fully integrated PC software monitoring facility via USB port
- All metal construction of receiver and transmitters
- Rack kit and front mounting antenna adaptors included (S5.5 only)





SAFETY

Our aim is to supply you with a product that provides you with countless hours of trouble free use. In order to achieve these goals we recommend the following:

- Keep the system away from direct sources of heat e.g. central heating radiators, heaters and direct sunlight.
- Do not expose the unit to an environment where it could be splashed with liquids as this may result in fire or electric shocks.
- Should the transmitters not be used for extended periods of time we recommend that the batteries are removed to avoid any potential leakage.
- Keep the system clean by using a slightly damp cloth. Never use household cleaning agents or solvents.
- Avoid using or storing the system in damp conditions.
- Always use the AC power adaptor supplied with the receiver and always disconnect from the AC outlet when not in use. And never remove the external covers of the equipment, so as to expose the electronics, or modify the unit in any way.

Should the covers be removed, or any other breach of the above instruction, the warranty becomes null and void in addition to personal risk from burns and/or electric shock.

When using the unit should any of the following conditions occur, switch off the unit and remove AC adaptor from AC outlet immediately and contact your nearest dealer.

- Smoke or unusual smell
- Water or foreign metallic object inside unit
- Damaged housings caused by physical damage

Never pull cord of AC adaptor, always grasp main body of unit when connecting/disconnecting to AC power outlet

Never touch any part of the system during a thunderstorm, as this may result in severe electric shock



GETTING STARTED

The S5 series is a high quality, fully featured wireless microphone system with many features including an intuitive operating system. To enable you to get started we recommend you initially set up the system as outlined in the next few pages.





RECEIVER SET-UP

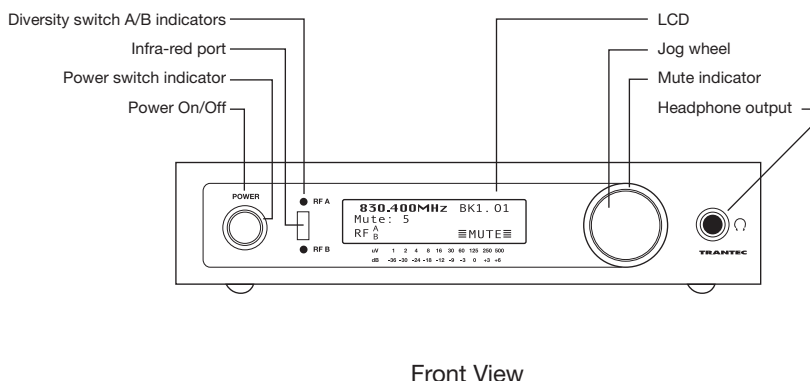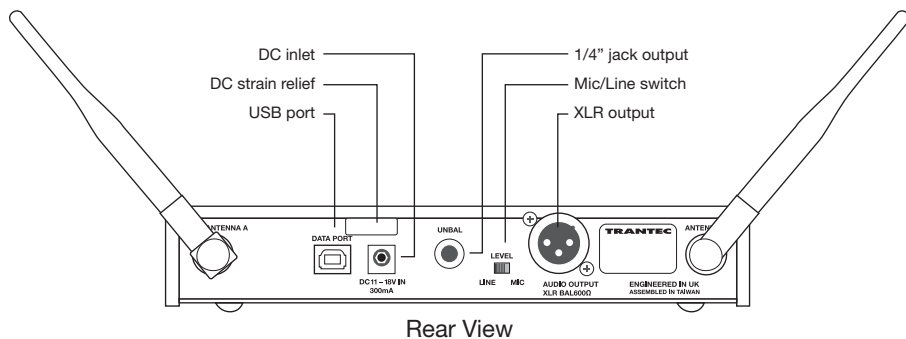

1. Attach the supplied antennae (2) to the rear panel TNC antenna connectors as shown in above illustration.
2. Connect the AC/DC adaptor into the DC inlet as marked on the rear panel using the attached cable strain relief. Observe the front panel on-off switch surround is illuminated red.
3. Connect the rear panel AF output from either the 1/4" Jack or XLR to your mixing console or amplifier. Note: the XLR balanced output can be switched for either mic or line. The system can be also monitored from the headphone socket using the "Jog-Wheel" to adjust Volume level.
4. Switch On-Off switch to "On" position and the receiver will default to initial setting as per illustration above. (BK1.01)

The system is now ready for use.





RECEIVER FREQUENCY SELECTION

5. Frequency selection options

- To change selected channel in BANK1:

Press “Jog-wheel” for 3 secs and enter the **MAIN MENU**. Press **FREQ SELECT** and go to **BANK** setting, then select **BANK1** and rotate jog wheel to select new channel, finally press to **ACCEPT** to select new frequency. See attached frequency table.

- To change selected Bank:

Press “Jog-wheel” for 3 secs and enter the **MAIN MENU**. Press **FREQ SELECT** and go to **BANK** setting, then select required BANK by rotating and pressing “Jog-Wheel” Select new channel, finally press **ACCEPT** to select new frequency. Go to step 6 to program transmitter via the Receiver Infra-red port.

- To change selected channel to a Custom single frequency. This option allows the customer to select 1 of over 1400 available channels:

Press “Jog-wheel” for 3 secs and enter the **MAIN MENU**. Press **FREQ SELECT** and go to **SINGLE** press **EDIT** and rotate and press “Jog-Wheel” to Select new frequency and User Name. Press “Jog-Wheel” for 3 secs to **EXIT** then **ACCEPT** to select new custom frequency. Go to step 6 to program transmitter via the Receiver infra-red port.

Please note: For S5.3 product the single user frequency will be added to Transmitter with receiver Bank1. In the case of the S5.5 it will be added to the Custom “USER” bank. See CD-ROM for more information.

6. Program Transmitter with Bank information via Receiver Infra-red port

Press “Jog-Wheel “ for 3 secs and enter **MAIN MENU** Press **TX SET** to enter **TX SETTINGS** press **FREQUENCY** and align the Transmitter and Receiver Infra-red windows at a distance of less than 15cm, press **SEND** and wait a few seconds. The Transmitter should now be programmed and the Receiver will return to main display.

MISC SETTINGS

Mute/Squelch settings

- The S5 series uses sophisticated internal Mute functions including Pilot tone, Noise and RSSI to prevent noise break through from external sources when the transmitter is in the “OFF” position. The RSSI (Received signal strength) portion is user adjustable via the **RX SETTINGS MENU**. To Access press “Jog-Wheel” for 3 secs and enter **MAIN MENU** select and press **RX SET** then press **MUTE** and rotate “Jog-Wheel” to adjust between 1-10 then press. Please note high mute settings will decrease range and low mute settings increase the interference potential. We recommend a setting of between 4-6.

Pilot Tone


The S5 series has the ability to disable the pilot tone as a means of either identifying outside interference or allowing compatibility with non-pilot tone devices. To disable Pilot Tone go to **RX SETTINGS** menu and select **PILOT** and remove “Dot” from the “Box” then Exit menu.





TRANSMITTER SET-UP

HANDHELD

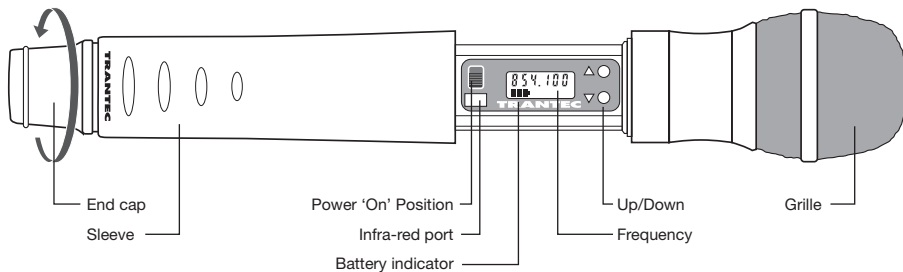



1. Undo handheld sleeve by unscrewing the end cap anti-clockwise and then gently sliding the sleeve to expose the LCD and Battery compartment. Place alkaline "AA" cell into battery compartment noting the correct polarity.
2. Slide the On-Off switch to the "On" position and observe the display is on and the battery LED located in the end cap is illuminated. Check display indicates same channel as receiver.
3. The receiver should now show received signal on its RF bargraphs and after 20 seconds the transmitter battery status.
4. Handheld Gain adjust
Turn on Transmitter and wait for the flashing "decimal point" on the LCD to stop flashing. Press "Up" or "Down" buttons to increase or decrease head sensitivity in 3 stages. (0-2) "0" gain being for max SPL.
5. Frequency adjust
Turn on Transmitter and adjust frequency whilst "decimal point" is flashing (approx 6 secs) via the "Up" or "Down" buttons. When correct frequency is selected Turn transmitter "Off" then "On" to activate new selected channel.
6. Microphone Mute Switch
Incorporated in the Handheld end-cap is a Power ON LED and Audio Mute switch. To mute the audio place switch towards LED.





TRANSMITTER SET-UP

BELTPACK

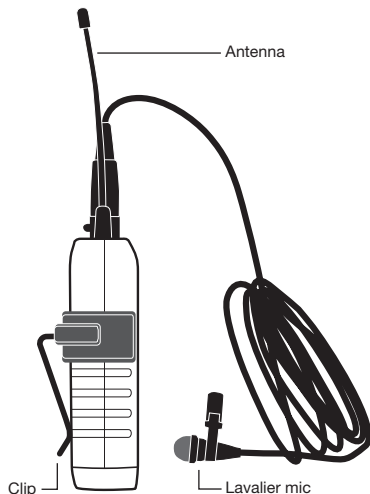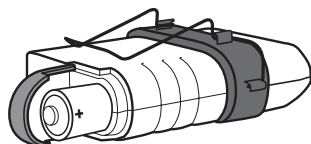

1. Insert battery into compartment by sliding end cap forward and up. Ensure battery is inserted with the correct polarity as shown.

2. Screw antenna into antenna socket as illustrated.

3. Plug Lavalier mic into Mini-XLR socket.



4. Place on-off switch to "On" position and observe the display is on and the battery LED is illuminated. Check display indicates same channel as receiver.

5. The receiver should now show received signal on its RF bar graphs and after 20 seconds the transmitter battery status.

6. Beltpack AF gain adjust. Turn on transmitter and wait for the flashing "decimal point" on the LCD to stop flashing (approx 6 secs) via the "Up" or "Down" buttons firmly to increase or decrease AF gain with 10 steps with "0" being minimum.

7. Frequency adjust

Turn on Transmitter and adjust frequency whilst "decimal point" is flashing (approx 6 secs) via the "Up" or "Down" buttons. When correct frequency is selected turn transmitter "Off" then "On" to activate new selected channel.

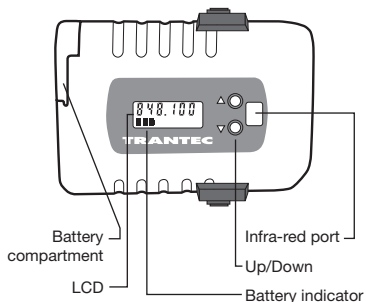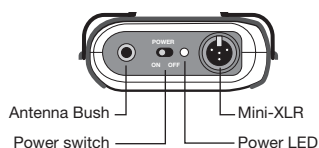



OPERATING HINTS

To maximise operating performance Trantec recommend the following:

- Ensure good line of sight between receiver antenna and transmitter, avoid obstructions e.g. Concrete walls and metal structures.
- Always ensure the receiver antenna is at least 3m (10 feet) away from the transmitters at all times
- Always ensure transmitters are separated by at least 20cm.
- Never position the transmitter antenna directly against the body or the hand. This will reduce the operating range.
- Ensure correct setting of Mute control for effective control of interference whilst the transmitter is turned off. Default is normally 4-5 but may need to increase with multi-channel set-ups.
- Do not mix separate Banks in multi-channel set-ups.
- Use SCAN function to check for external interference. (See CD-ROM for more information)
- Set transmitter AF gain so as the receiver VU indicates 0db with occasional peaks to +6dB.
- Keep Microphone/Instrument lead away from the antenna on the beltpack.
- Do not mix other brands of wireless microphone as Trantec cannot guarantee multichannel compatibility.

TROUBLESHOOTING

- **No operation of Transmitter**

Replace current battery with fresh correct Alkaline 'AA' type.

- **No RF signal on receiver**

Check transmitter and receiver are "Tuned" to the same channel

- **Poor range**

Check mute level setting. For normal range we recommend a Mute setting of 4-5.

- **AF Signal distorted**

Check Receiver XLR mic-line switch for correct match to Mixer/Amplifier. Reduce gain of Transmitter if VU meter shows over 6dB.

- **AF Signal low level with high background noise**

Adjust Transmitter gain so as VU bar graph shows 0dB with 6dB peaks.

- **External Head amplifiers not operating**

*Check for shorts in the Leads and ensure Receiver **PHANTOM PWR** is switched on via **RX SETTINGS** Menu.*

- **Receiver LCD contrast poor**

*Enter receiver **RX SETTINGS** Menu, select **LCD** and press then rotate "Jog-Wheel" to adjust contrast. The receiver will automatically exit after a few seconds.*






S5 SERIES RACK MOUNT KIT


The rackmounting kit is supplied as standard with S5.5 systems, or is available as an accessory for S5.3 systems.




19" Rack 2 x S5 series Receivers

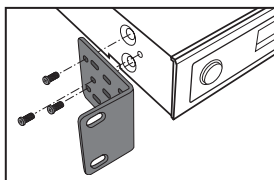

1. Unscrew 3 x lid retaining screws M3x6 from opposite sides of each receiver case and fit angled brackets as per illustration using supplied screws.

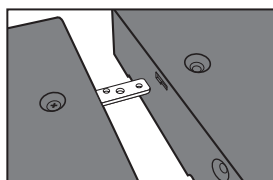


2. Remove plastic plugs from top of the Receiver lid and place metal joining strip in lid slots and carefully fit M3x6 screws (coloured black) as per illustration.

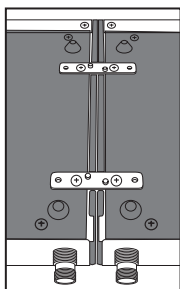

3. Place remaining joining strips x 2 on the bottom side of the receiver chassis using M3x6 CSK screw as per illustration.

19" rack 1 x S5 Series receiver with front mount antennae

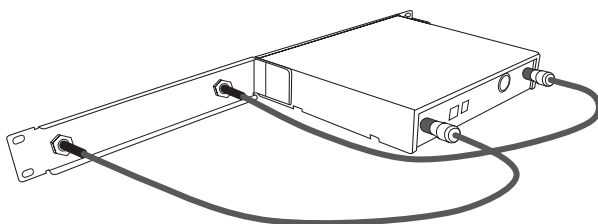

4. Unscrew 3 x lid retaining screws M3x6 from the left hand side of the chassis. (viewed from front) and fit angled bracket as per illustration 1 using the supplied screws.

5. Unscrew 3 x lid retaining screw M3x6 from the right hand side of the chassis and fit supplied long bracket using the supplied screws.

6. Fit extension cables as per illustration into front panel long bracket and tighten TNC nut. Should front mount antennae not be required fit plastic blanking plug (supplied) into spare holes.





TECHNICAL SPECIFICATIONS

Overall System

Frequency Bands available:	D1 863-865MHz	D2 854-865MHz (S5.3 only)
	D3 830-865MHz	C1 794-830MHz
	B1 722-752MHz	A1 692-722MHz
	E1 668-700MHz	F1 636-668MHz
RF Switching BW:	36MHz typical	
RF grid spacing:	25kHz	
RF Bandwidth:	< 200kHz	
AF Frequency response:	60Hz – 20kHz	
AF Distortion:	< 0.8% at nom deviation 22kHz	
AF Dynamic range :	>110dBA	
AF Noise reduction:	Trantec proprietary	
Temperature range :	-10°C to +55°C	

Receiver Specification

Type:	Dual Diversity featuring PLL Dual conversion receivers.
IF Freq:	1st IF 55.875MHz 2nd IF 10.7MHz
Sensitivity:	< 1uV/12dB SINAD
Ist Image:	>70dB
RSSI range:	10 steps 30dB range.
Antenna Inputs:	TNC 50 Ohm
AF switches:	Low Cut – High Boost – Phase Reversal (S5.5 only)
AF Output level:	XLR Line +15dBm max. XLR Mic -25dBm max. Unbal 1/4" jack socket +9dBm max.
Antenna Phantom:	9V @ 60mA short circuit protected on each RF port
Bank Specification:	10 Banks x 24 Channels (S5.5) 9 Banks x 12 Channels (S5.3)
Infra-Red Link:	Range 15cm max.
Computer Interface:	Computer monitoring via rear panel USB interface
Power Consumption:	300mA @ 12Vdc nominal

Transmitter Specification

Power Supply:	Single Alkaline "AA" cell 1.5V nom
Power consumption:	Typically 120mA
Operating time:	Typically 8-10hrs minimum
Controls:	On-Off, AF Gain Adjust, Frequency adjust AF Mute (Handheld)
Gain Range:	Beltpack +2dBm to -20dBm in 10 steps Handheld 3 steps 6dB
Handheld dimensions:	32mm x 250mm. Grille diameter 51mm. Weight 350g
Beltpack dimensions:	55mm x 80mm x 20mm. Weight 110g

Please note: The design and specifications are subject to change without prior notice.





WARRANTY

All Trantec products are guaranteed for a period of 12 months from the date of purchase against defects in materials and workmanship. In the event of a claim under guarantee the product should be returned in its original packaging to an Authorised Service Centre or BBM Electronics together with proof of purchase i.e. sales purchase receipt from an authorised dealer.

BBM will repair or replace the device at its discretion. BBM offers no warranty whatsoever under the following circumstances: mechanical damage, incorrect operation, incorrect voltage, wear and tear, and defects that were known at the time of purchase. In addition, the warranty will be null and void in the event of unauthorised repair or modification, including removal of any of its covers.

E&OE. Due to our continual policy of research and development we reserve the right to alter specifications without prior notice.

CE DECLARATION OF CONFORMITY 0891

This equipment is in compliance with the essential requirements and other relevant provisions of Directives 1999/5/EC, 89/336/EC or 73/23/EC.

More information is available from www.trantec.co.uk

IMPORTANT NOTICE. Before using this wireless microphone system please observe the requirements of each country with respect to frequency allocations and individual licensing requirements.

WEEE DECLARATION



This symbol indicates that this piece of electrical/electronic equipment must be disposed of separately from normal waste at the end of its operational life. Please dispose of this product by taking it to your local recycling or collection point.





BBM Electronics Group Ltd

www.trantec.co.uk

Subsidiary of TOA Corporation

TRANTEC SYSTEMS Manual Pt no. S5manUK Printed in Taiwan

