



Bundesrepublik Deutschland
Federal Republic of Germany

Bundesamt für Seeschifffahrt und Hydrographie
Federal Maritime and Hydrographic Agency



Conformance test report of an
AIS system

Equipment under test: L3 communications AIS
Type: Protec AIS A1

Applying test standards:

IEC 61993-2 (2001) Sections 14, 16-21

Test Report No.: 734.2/0050/2003/S3220

Applicant: L3 Communications, Aviation Recorders
6000 Fruitville Roadstreet
Sarasote, FL34232
USA

Hamburg, 02. October 2003
Federal Maritime and
Hydrographic Agency

on behalf

Bartels
Test engineer

on behalf

Preuss
head of
laboratory

nach DIN EN 45001
akkreditiertes Prüflaboratorium

Federal Maritime and Hydrographic Agency
Bernhard-Nocht-Str. 78

D-20359 Hamburg
Germany



DAT-P-086/98-00

Translation

Deutsche Akkreditierungsstelle Technik (DATech) e.V.

represented in the

Deutschen AkkreditierungsRat



Akkreditierung

The German Accreditation Body Technology (DATech) e.V. certifies that the Testing Laboratories

Bundesamtes für Seeschifffahrt und Hydrographie (BSH)
Abteilung Schiffahrt
Laboratorium für Baumusterprüfungen
Bernhard-Nocht-Straße 78
D-20359 Hamburg

is competent under the terms of DIN EN ISO/IEC 17025 to carry out testing in the fields


**Marine Equipment
(Navigation Equipment, Radio-Communication Equipment,
Life-Saving Appliances)**

The accreditation is valid until: December 22th, 2003

The annex is deemed part of this certificate and comprises 16 pages.

DAR-Registration No.: DAT-P-086/98-10

Frankfurt/Main, April 19th, 2002



I.V. Dipl.-Ing. (FH) R. Egner
Head of the Accreditation Body

DATech - Accreditation Body in the TGA - Trägergemeinschaft für Akkreditierung GmbH

Translation for information purposes only. The German Accreditation Certificate is authoritative.

See notes overleaf

General

Applicant: L3 Communications, Aviation Recorders
6000 Fruitville Road, Sarasota, FL34232, USA

Equipment under test:

Type: Protec AIS A1
Manufacturer: L3 Communications, Aviation Recorders
6000 Fruitville Road, Sarasota, FL34232, USA
Place of test: BSH test laboratory Hamburg, Room 916
Start of test: 10 June, 2003
End of test: 02 October, 2003

Test standards¹:

IEC 61993-2 (2001)

Maritime navigation and radiocommunication equipment and systems-
Automatic Identification Systems

Part 2: Class A shipborne equipment of the Universal Automatic Identification System (AIS) – Operational and performance requirements, Methods of testing and required test results

IEC 61162-1/ -2

Maritime navigation and radiocommunication equipment and systems Digital Interfaces

Part 1: single talker and multiple listeners (2000)

Part 2: single talker and multiple listeners, high speed transmission (1998)

Summary

Test No.	Reference	Section	Result (passed/ not passed / not applicable / not tested)
2	IEC 61993-2	14 Operational tests	Passed
3	IEC 61993-2	15 Physical tests	Not included
4	IEC 61993-2	16 Specific tests of link layer	Passed
5	IEC 61993-2	17 Specific tests of network layer	Passed
6	IEC 61993-2	18 Specific tests of transport layer	Passed
7	IEC 61993-2	19 Specific presentation interface tests	Passed
8	IEC 61993-2	20 DSC functionality tests	Passed
9	IEC 61993-2	21 Long range functionality tests	Passed

¹ Numbers listed in the titles of the test sections of this report refer to the respective sections of IEC 61993-2 if not stated otherwise.

GENERAL.....	3
SUMMARY.....	3
1 GENERAL.....	8
1.1 EQUIPMENT HISTORY.....	8
1.1.1 <i>EUT system no 1</i>	8
1.1.2 <i>EUT system no 2</i>	8
1.1.3 <i>EUT system no 3</i>	10
1.2 TEST ENVIRONMENT	12
1.2.1 <i>Test environment no 1</i>	12
1.2.2 <i>Test environment no 2</i>	12
1.3 COMPOSITION	13
1.4 REMARKS.....	14
1.5 TEST NOTES	14
1.5.1 <i>General problems</i>	15
1.6 4.3 MANUALS	18
1.6.1 <i>Operating and Installation</i>	18
1.6.2 <i>Interface documentation</i>	20
2 14 OPERATIONAL TESTS	23
2.1 14.1 OPERATING MODES / CAPABILITY	23
2.1.1 <i>14.1.1 Autonomous mode</i>	23
2.1.1.1 <i>Transmit Position reports</i>	23
2.1.1.2 <i>Receive Position reports</i>	24
2.1.2 <i>14.1.2 Assigned mode</i>	25
2.1.3 <i>14.1.3 Polled mode</i>	25
2.1.3.1 <i>Transmit an interrogation</i>	25
2.1.3.2 <i>Interrogation response</i>	28
2.1.4 <i>14.1.4 Addressed operation</i>	30
2.1.4.1 <i>Transmit an addressed message</i>	30
2.1.4.2 <i>Receive addressed message</i>	32
2.2 14.2 MULTIPLE SLOT MESSAGES.....	33
2.2.1 <i>14.2.1 5 slot messages</i>	33
2.2.2 <i>14.2.2 Longer messages</i>	36
2.3 14.3 INFORMATION CONTENT	37
2.3.1 <i>Information content of msg 1</i>	38
2.3.2 <i>Information content of msg 5</i>	39
2.4 14.4 REPORTING RATES	40
2.4.1 <i>14.4.1 Speed and course change</i>	40
2.4.2 <i>14.4.2 Change of navigational status</i>	46
2.4.3 <i>14.4.3 Assigned reporting rates</i>	49
2.4.4 <i>14.4.4 Static data reporting rates</i>	53
2.5 14.5 SECURITY.....	54
2.6 14.6 INITIALISATION PERIOD.....	54
2.7 14.7 CHANNEL SELECTION.....	55
2.8 14.8 TRANSCEIVER PROTECTION	56
2.9 14.9 ALARMS AND INDICATORS, FALL-BACK ARRANGEMENTS.....	57
2.9.1 <i>14.9.1 Loss of power supply</i>	57
2.9.2 <i>14.9.2 Monitoring of functions and integrity</i>	58
2.9.2.1 <i>14.9.2.1 Tx malfunction</i>	58
2.9.2.2 <i>14.9.2.2 Antenna VSWR</i>	59
2.9.2.3 <i>14.9.2.3 Rx malfunction</i>	59
2.9.2.4 <i>14.9.2.4 Loss of UTC</i>	60
2.9.2.5 <i>14.9.2.5 Remote MKD disconnection, when so configured</i>	61
2.9.3 <i>14.9.3 Monitoring of sensor data</i>	62
2.9.3.1 <i>14.9.3.1 Priority of position sensors</i>	62

2.9.3.2	14.9.4 Heading sensor	69
2.9.3.3	14.9.5 Speed sensors	72
2.10	14.10 DISPLAY AND CONTROL.....	75
2.10.1	14.10.1 <i>Data input/output facilities</i>	75
2.10.2	14.10.2 <i>Initiate message transmission</i>	80
2.10.3	14.10.3 <i>System control</i>	82
2.10.4	14.10.4 <i>Ergonomic aspects</i>	85
3	15 PHYSICAL TESTS	86
4	16 SPECIFIC TESTS OF LINK LAYER	87
4.1	16.1 TDMA SYNCHRONISATION.....	87
4.1.1	16.1.1 <i>Synchronisation test using UTC</i>	87
4.1.2	16.1.2 <i>Synchronisation test without UTC, semaphore</i>	89
4.1.3	16.1.3 <i>Synchronisation test without UTC</i>	89
4.2	16.2 TIME DIVISION (FRAME FORMAT).....	90
4.3	16.3 SYNCHRONISATION JITTER.....	91
4.4	16.4 DATA ENCODING (BIT STUFFING).....	92
4.5	16.5 FRAME CHECK SEQUENCE.....	93
4.6	16.6 SLOT ALLOCATION (CHANNEL ACCESS PROTOCOLS).....	93
4.6.1	16.6.1 <i>Network entry</i>	93
4.6.2	16.6.2 <i>Autonomous scheduled transmissions (SOTDMA)</i>	95
4.6.3	16.6.3 <i>Single message transmission (RATDMA)</i>	96
4.6.4	16.6.4 <i>Assigned operation</i>	97
4.6.4.1	16.6.4.1 <i>Assigned mode using reporting rates</i>	98
4.6.4.2	16.6.4.2 <i>Receiving test</i>	98
4.6.4.3	16.6.4.3 <i>Assignment selectivity</i>	104
4.6.4.4	16.6.4.4 <i>Slot assignment to FATDMA reserved slots</i>	104
4.6.5	16.6.5 <i>Fixed allocated transmissions (FATDMA)</i>	105
4.7	16.7 MESSAGE FORMATS	107
4.7.1	16.7.1 <i>Received messages</i>	107
4.7.2	16.7.2 <i>Transmitted messages</i>	122
5	17 SPECIFIC TESTS OF NETWORK LAYER.....	130
5.1	17.1 DUAL CHANNEL OPERATION	130
5.1.1	17.1.1 <i>Alternate transmissions</i>	130
5.2	17.2 REGIONAL AREA DESIGNATION BY VDL MESSAGE	130
5.3	17.3 REGIONAL AREA DESIGNATION BY SERIAL MESSAGE	135
5.4	17.4 POWER SETTING	138
5.5	17.5 MESSAGE PRIORITY HANDLING.....	139
5.6	17.6 SLOT REUSE (LINK CONGESTION).....	140
5.7	17.7 MANAGEMENT OF RECEIVED REGIONAL OPERATING SETTINGS.....	143
5.7.1	17.7.1 <i>Test for replacement or erasure of dated or remote regional operating settings</i>	143
5.7.2	17.7.2 <i>Test of correct input via Presentation Interface or MKD</i>	144
5.7.3	17.7.3 <i>Test of addressed telecommand</i>	147
5.7.4	17.7.4 <i>Test for invalid regional operating areas (3 areas with same corner)</i>	148
5.7.5	17.7.5 <i>Self-Certification of other conditions</i>	149
5.8	17.8 CONTINUATION OF AUTONOMOUS MODE REPORTING RATE	149
6	18 SPECIFIC TESTS OF TRANSPORT LAYER	151
6.1	18.1 ADDRESSED MESSAGES.....	151
6.1.1	18.1.1 <i>Transmission</i>	151
6.1.2	18.1.2 <i>Acknowledgement</i>	153
6.1.3	18.1.3 <i>Transmission Retry</i>	154
6.2	18.1.4 <i>ACKNOWLEDGEMENT OF ADDRESSED SAFETY RELATED MESSAGES</i>	155
6.3	18.2 (M.1371 A1/5.3) INTERROGATION RESPONSES	156
6.4	18.3 BROADCAST MESSAGES	158

7	19	SPECIFIC PRESENTATION INTERFACE TESTS	160
7.1	19.1	GENERAL	160
7.2	19.2	CHECK OF THE MANUFACTURER'S DOCUMENTATION	160
7.3	19.3	ELECTRICAL TEST	161
7.4	19.4	TEST OF INPUT SENSOR INTERFACE PERFORMANCE	162
7.5	19.5	TEST OF SENSOR INPUT	163
7.5.1		<i>GLL sentence</i>	164
7.5.2		<i>GGA sentence</i>	165
7.5.3		<i>GNS sentence</i>	166
7.5.4		<i>RMC sentence</i>	167
7.5.5		<i>DTM sentence</i>	167
7.5.6		<i>GBS sentence</i>	168
7.5.7		<i>VTG sentence</i>	169
7.5.8		<i>VBW sentence</i>	170
7.5.9		<i>OSD sentence</i>	174
7.5.10		<i>HDT sentence</i>	175
7.5.11		<i>ROT sentence</i>	176
7.5.12		Additional Tests	177
7.5.13		Compatibility check	178
7.5.14		Check of different inputs	179
7.5.15		Sensor sentences overview	180
7.6	19.6	TEST OF HIGH SPEED OUTPUT	180
7.6.1		<i>VDM – Received message</i>	181
7.6.2		<i>VDO Transmitted messages</i>	182
7.7	19.7	HIGH SPEED OUTPUT INTERFACE PERFORMANCE	183
7.8	19.8	TEST OF HIGH SPEED INPUT	183
8	20	DSC FUNCTIONALITY TESTS	186
8.1	20.1	GENERAL	186
8.2	20.2	REGIONAL AREA DESIGNATION	188
8.3	20.3	SCHEDULING	190
8.4	20.4	POLLING	191
9	21	LONG RANGE FUNCTIONALITY TESTS	196
9.1	21.1	LR INTERROGATION	196
9.2	21.2	LR "ALL SHIPS" INTERROGATIONS	199
9.3	21.3	CONSECUTIVE LR "ALL SHIPS" INTERROGATIONS	201
ANNEX A TEST EQUIPMENT			
A.1		TEST EQUIPMENT SUMMARY	202
A.1.1		<i>VDL analyser / generator</i>	202
A.1.2		<i>Target simulator</i>	202
A.1.3		<i>Presentation Interface Monitor</i>	203
A.1.4		<i>DSC Testbox</i>	203
A.2		TEST ENVIRONMENT OVERVIEW	204
ANNEX B TEST SENTENCES			
B.1		IEC 61162 TEST SENTENCES	205
B.1.1		<i>Sensor input</i>	205
B.1.2		<i>Settings (VSD,SSD)</i>	207
B.1.3		<i>Messages (ABM,BBM)</i>	207
B.1.4		<i>Regional operational settings (ACA)</i>	209
B.1.5		<i>Long range requests</i>	210
B.2		DSC SENTENCES	211
TEST DIAGRAMS			
214			

C.1	GMSK MODULATION 12.5 AND 25 KHZ BANDWIDTH.....	214
C.2	NETWORK ENTRY PHASE	215
C.3	REPORTING RATE BY SPEED	216
C.4	REPORT RATE BY HEADING.....	217
C.5	ASSIGNED MODE / RATE ASSIGNMENT.....	219
C.6	ASSIGNED MODE / SLOT ASSIGNMENT.....	220
	AREA ENTRY THROUGH TRANSITIONAL ZONE	221
C.8	HIGH SPEED OUTPUT PERFORMANCE	223
C.9	DSC RESPONSE TIME	224
	SYNC JITTER.....	225
C.10.1	<i>Sync jitter UTC direct</i>	225
C.10.2	<i>Sync jitter UTC indirect</i>	226
	ANNEX D PHOTOS OF EQUIPMENT UNDER TEST.....	227
	TRANSPONDER UNIT.....	227
	INSIDE UNIT	228
D.3	CONNECTION BOX.....	229
D.4	TYPE LABEL	229

1 General

1.1 Equipment history

For each Transponder unit under test an numbered entry is provided here. For the two test environment it is recorded which EUT system is under test in that environment

1.1.1 EUT system no 1

Transponder				
Type			Part No.:	AISA1-000-00
Delivery date	22.04.2003		Serial number	000210450
HW Version:	Delivery date	22.04.2003	Version no	
	Installation date	05.05.2003		
SW Version:	Delivery date	01.05.2003	Version no	
	Installation date	09.05.2003		
SW Version:	Delivery date		Version no	
	Installation date			

MKD				
Type	internal		Part No.:	

GPS antenna				
Type			Part No.:	
Delivery date			Serial number	
HW Version:	Delivery date		Version no	
	Installation date			

1.1.2 EUT system no 2

Transponder				
Type			Part No.:	AISA1-000-00
Delivery date	15.07.2003		Serial number	000224741
HW Version:	Delivery date	15.07.2003	Version no	???
	Installation date	15.07.2003		
SW Version:	Delivery date		Version no	
	Installation date			

MKD

Type	internal	Part No.:	
------	----------	-----------	--

GPS antenna

Type		Part No.:	
Delivery date		Serial number	
HW Version:	Delivery date		Version no
	Installation date		

1.1.3 EUT system no 3

Transponder				
Type			Part No.:	AISA1-000-00
Delivery date	23.07.2003		Serial number	000224759
HW Version:	Delivery date	23.07.2003	Version no	01EEI EBD5V
	Installation date	23.07.2003		
SW Version:	Delivery date	24.07.2003	Version no	6788I 211FV
	Installation date	24.07.2003		
SW Version:	Delivery date	25.07.2003	Version no	4BA4I 0C32V
	Installation date	25.07.2003		
SW Version:	Delivery date	30.07.2003	Version no	31DIE 8FB1V
	Installation date	30.07.2003		
SW Version:	Delivery date	31.07.2003	Version no	9778I CAF4V (referenced as 31.07.2003 b)
	Installation date	31.07.2003		
SW Version:	Delivery date	18.08.2003	Version no	19F6I FEC0V 30DBF (Tests with this version get the date 19.08.03 or later)
	Installation date	18.08.2003		
SW Version:	Delivery date	21.08.2003	Version no	7699I 625CV 30DBF
	Installation date	21.08.2003		
SW Version:	Delivery date	25.08.2003	Version no	CD22I 2E10V 30DBF
	Installation date	25.08.2003		
SW Version:	Delivery date	28.08.2003	Version no	Checksum: D03FI D6E8V 30DBF SW rev. 1.1
	Installation date	28.08.2003		
SW Version:	Delivery date	02.09.2003	Version no	Checksum: D03FI EDD3V 30DBF SW rev. 1.1
	Installation date	02.09.2003		
SW Version:	Delivery date	02.09.2003	Version no	Checksum: C32CI EDD3V 30DBF SW rev. 1.1
	Installation date	03.09.2003		
SW Version:	Delivery date		Version no	
	Installation date			

MKD			
Type	internal	Part No.:	

GPS antenna

Type	Not delivered	Part No.:	
Delivery date		Serial number	
<hr/>			
HW Version:	Delivery date		Version no
	Installation date		

1.2 Test environment

Here it is intended to record for which time which EUT system is under test.

1.2.1 Test environment no 1

This Test environment is completely equipped as described in Annex A. Normally mainly VDL related tests and DSC tests are done in this environment

Room	BSH Room 916 (9 th floor)
Test engineer	H. Bartels
Location	9° 59,103 E 53° 32,822 N

Equipment no	Start of test	End of test	Test engineer
1	11.06.03	20.06.03	Bartels
2	21.07.03	22.07.03	Bartels
3	23.07.03	31.07.03	Bartels
3	18.07.03	25.08.03	Bartels
3	28.08.03	02.10.03	Bartels

1.2.2 Test environment no 2

This Test environment is completely equipped as described in Annex A except the DSC testbox. Mainly operational and interface related tests are done in this environment

Room	BSH Room 632 (6 th floor)
Test engineer	K.H. Warnstedt
Location	9° 59,103 E 53° 32,822 N

Equipment no	Start of test	End of test	Test engineer
1	10.05.2003	26.05.2003	K.-H. Warnstedt
2	15.07.2003	18.07.2003	K.-H. Warnstedt
3	26.08.2003	26.08.2003	K.-H. Warnstedt

1.3 Composition

Minimum Keyboard and display (MKD)

Internal Remote external

Internal GNSS

sync only backup pos. sensor

1.4 Remarks

Result marking:

Ok	Item is Ok, test was successful No colour marking
Dev	slight deviation, no change required No colour marking
Nok	Test of a required item was not successful, change required Colour marking: yellow
Rec	It is recommended to make a change. Colour marking: green
???	temporarily, has to be clarified or discussed Colour marking: yellow

Not yet tested items are marked with a **blue** background.

This table is a template for more general remarks for some test items and should be copied if required

Date	Result	Status

Issue of this template: 15.04.2003

1.5 Test notes

Here are some effects noted which are observed during the normal test but independent of the actual test items.

1.5.1 General problems

Here are general problems found in the operation of the EUT, not specific to the actual test point.

General problems			
Date	Item	Remark	Result
12.06.03	ACA output	<p>The ACA output sentences are too long. According to IEC 61162-1 the maximum length of a sentence including <cr> and <lf> is 82 characters. The length of the ACA output sentences is 89 characters.</p> <p>The length can be reduced by:</p> <ul style="list-style-type: none"> Only 1 character after decimal point in lat and lon of corner points (resolution 1/10 of minutes). The resolution in VDL messages is 1/10 of minutes too. Saves 4 characters in total. Time of last change of in use flag in units of seconds. Saves 1 decimal point and 2 numbers: in total 3 characters. <p>89 characters – 7 characters = 82 characters as required.</p> <p><u>Retest 22.07.03:</u> Length of ACA output is Ok now</p>	Ok
12.06.03	Position in area	<p>When the position is inside an area, this area is indicated on MKD as active, and the ACA output when moving into the area also indicates that the area is in use.</p> <p>The channels of the area are not used but the standard AIS frequencies are in use</p> <p><u>Retest 22.07.03:</u> The channels defined in an area setting are used now</p>	Ok
12.06.03	ACA output request	<p>The output of the stored areas cannot be requested using a request sentence "xxAIQ,ACA".</p> <p>This is not really required by the standard but it is very helpful for us during the test phase.</p> <p>But the main reason is that for an external equipment like ECDIS a reasonable channel management is not possible without this function. It is not possible to display the stored areas for editing. Until now every manufacturer has implemented this function, and the manufacturer of ECDIS and Radar systems rely on this function.</p> <p>So we strongly recommend to implement this function.</p> <p><u>Retest 22.07.03:</u> The stored area can be requested using a request sentence "xxAIQ,ACA".</p>	Ok
12.06.03	Stop of PI port output	<p>The output of PI port stops if sensor data are applied to sensor port 1. Applying sensor data to sensor port 2 is no problem.</p> <p>If the baudrate of the sensor data applied to sensor port 1 the PI port output does not stop but the sensor</p>	

		<p>data are not used in any case.</p> <p>Retest 18.07.03 still problems with Sensor Port 1 System stops operation needs to restart by power off This problem only happens if sensor data are applied using RS232. It is Ok with RS 422.</p>	Ok
13.06.03	Rx on channel B	<p>The EUT does generally not receive on channel B (2088). Either the VDL analyser nor other AIS transponders in the lab nor AIS transponders on ships in the Hamburg port are received on channel B but are received on channel A.</p> <p>The transmission of the EUT on channel B are received by the VDL analyser and by other transponders in the lab</p> <p><u>Retest 22.07.03:</u> The EUT can now receive on channels A and B</p>	Ok
13.06.03	Tx of msg 15	<p>After Rx of certain messages from the VDL analyser the EUT automatically transmits a interrogation message 15 requesting for msg 5 to the address of the VDL analyser. (see log file)</p> <p>Retest 31.07.03: The EUT transmits a msg 15 requesting msg 5 at the first time it receives a position report from another AIS to get the static data immediately</p>	Ok
22.07.03	Startup with external sensor data:	<p>EUT does not start operation if external sensor data are applied during switch on. Starts operation immediately after stop of external sensor data (GPS was disconnected)</p> <p>If GPS is connected the EUT has no problem with startup</p> <p>A new unit (EUT system 3) does not have this problem.</p>	Ok
22.07.03	PI port output with external sensor data	<p>EUT stops output or output is irregular when external sensor data are applied</p> <p>A new unit (EUT system 3) does not have this problem.</p> <p><u>Retest 01.09.03 Ba:</u> This problem was caused by applying RS 232 signal instead of RS422 signal causing invalid characters. With RS422 signals it is Ok</p>	Ok
22.07.03	No modulation	<p>The transmissions are without modulation, checked for TDMA with VDL analyser.</p> <p>During the time of a DSC transmission the input noise of a receiver is blancked, it is silent during time of DSC transmission</p> <p>A new unit (EUT system 3) does not have this problem.</p>	Ok
22.07.03	Msg 17	<p>Msg 17 is received (PI port) but does not change PA flag to 1</p> <ul style="list-style-type: none"> - not yet implemented - Not required if internal GPS receiver is not used 	Ok

		as a position backup	
23.07.03	Rx unsyncronised stations	<p>EUT seems not to be able to receive stations which are not synchronised</p> <p><u>Retest 31.07.03:</u> Receives also stations which are not synchronised</p>	Ok
23.07.03	TX on channel B	<p>At a reporting rate of 2 s sometimes the transmission on channel B is stopped for 1 frame</p> <p><u>Retest 31.07.03:</u> seems to be Ok now, not found during testing</p>	Ok
18.08.03	GPS UTC lost	<p>After start EUT did not have UTC from GPS. After restart UTC was Ok.</p> <p>It seems that the EUT if it doesn't have UTC cannot recover UTC without restart</p> <p><u>Retest 01.09.03 Ba:</u> In the latest versions this problem was not found.</p>	Ok
21.08.03	Stop of DSC operation	<p>It happend 3 times that the DSC operation completely stopped.</p> <ul style="list-style-type: none"> - 1 time after area call with not matching course - 1 time when automatic position report stopped when acknowledged with a call including transmitted position - 1 time after a call with symbols 102+01+12 <p>In both cases it worked again after restart</p> <p><u>Retest 01.09.03 Ba:</u> In the latest versions this problem was not found.</p>	Ok
22.08.03	End of at anchor status	<p>After end of nav status at anchor (speed 2kn) the EUT transmitted only on channel A, not on B. The network entry was also only on channel A.</p> <p>At beginning of at anchor status there was an slot assignment transmitted on channel A. During this assigned mode the EUT transmitted only on channel A</p> <p><u>Retest 01.09.03 Ba:</u> This problem was caused by a failure in assigned mode and has been fixed (see assigned mode test).</p>	Ok
01.09.03	Jump from area to high sea	<p>After a jump from an area into high see the default AIS channels are reversed</p> <p><u>Retest 02.09.03 Ba:</u> Channel use in this situation is Ok now.</p>	Ok
02.09.03	Rx of msg 9	<p>After rx of msg 9 a msg 15 is transmitted to request a msg 5 from the SAR aircraft. This does not make sense because the SAR aircraft should not transmit msg 5 (see ITU-R M.1371 §3.3.8.2.3: msg 5 "should only be used by class A shipborne mobile equipment...")</p> <p><u>Retest 03.09.03 Ba:</u> No Tx of msg 15 after Rx of msg 9</p>	Ok

1.6 4.3 Manuals

1.6.1 Operating and Installation

60945) Adequate information shall be provided to enable the equipment to be properly operated and maintained by suitable qualified members of a ship's crew:

(60945) Moreover adequate information shall be provided to allow equipment to be installed so that it operates in accordance with the requirements of the relevant equipment standard, taking into account limitations imposed by the operation of other equipment also required to be installed on the bridge.

(61993-2) In addition to the requirements of IEC 60945 clause 14, the manuals shall include:

- *The type of external connector required for connection of the external display as referred to in 7.6.3.2*
- *The needed information for correct siting of the antennas; and*
- *The requirements for external illumination, as appropriate*

It is checked that the required documentation items are available.

Test details – General documentation			
Test item	Check	Remark	Result
Description of AIS	Check that an general function description of AIS as a new system is included. This is not required but recommended in the introduction phase of a new system.	A rather short introduction	Ok
Operating information	Check that an operating manual is included	Operating information, technical information and installation information are in one Manual	Ok
Technical information	Check that an technical manual is included		Ok
Installation information	Check that an installation manual is included		Ok
Language	Check that the documentation is written in English		Ok
Some details of installation information			
System overview	Check that an AIS system overview diagram is available		Ok
Mechanical dimensions	Check that mechanical dimension drawings of transponder are available		Ok
	Check that mechanical dimension drawings of MKD are available	Not applicable, MKD is included in the Transponder	Ok

Test details – Requirements of IEC 61993-2			
Test item	Check	Remark	Result
Connector of external display	Check that type of connector of external Display is included	There is a common connector including all interfaces	Ok
Siting of antennas	Check that information about siting the GPS antenna is included		Ok
	Check that information about siting the VHF antenna is included		Ok
RF cable requirements	Check that information about cable requirements for GPS antenna is included		Ok
	Check that information about cable requirements for the VHF antenna is included		Ok
Illumination	Check that information about external illumination is included if required	Not required because keyboard and display are internally illuminated	Ok

1.6.2 Interface documentation

(61993-2) The manufacturer shall provide sufficient technical documentation of the EUT and its interfaces in particular (see 7.219.2 *Check of the manufacturer's documentation*”)

(61162-1; -2) Operator manuals or other appropriate literature provided for equipment that is intended to meet the requirements of this standard shall contain the following information:

- a) identification of the A and B signal lines
- b) the output drive capability as a talker
- c) a list of approved sentences, noting unused fields, proprietary sentences transmitted as a talker and transmission interval for each sentence
- d) the load requirements as a listener
- e) a list of sentences and associated data fields that are required as a listener
- f) the current software and hardware revision if this is relevant to the interface
- g) an electrical description of schematic of the listener/talker input/output circuits citing actual components and devices used, including connector type and part number
- h) the version number and data of update of the standard for which compliance is sought.

02.09.03 Ba Test details – Requirements of Interface documentation			
Test item	Check	Remark	Result
a) A and B signal lines	Check that identification of A and B signal lines is included		Ok
b) Output driver	Check that the output drive capability is included	Not found <u>Retest 02.10.03 Ba:</u> Max. output current is 110 mA, min. output voltage is 4 Volt	Ok
c) Talker sentences of PI ports	Check that list of sentences is included		Ok
	Check that unused fields are noted	No information about unused field. Because it is required to supply all fields this is acceptable <u>Retest 02.10.03 Ba:</u> List of usage of all fields is provided	Ok
	Check if proprietary sentences are included if available	No proprietary sentences available	Ok
c) Talker sentences of long range port	Check that list of sentences is included		Ok
	Check that unused fields are noted	The used fields are listed	Ok
	Check if proprietary sentences are included if available	No proprietary sentences available	Ok
d) Input load	Check that the input load is included	No information about input load <u>Retest 02.10.03 Ba:</u> Input load between A and B lines is 4.9 kOhm	Ok
e) Input sentences of PI ports	Check that list of sentences is included		Ok
	Check that required and unused fields are noted	No information about unused field. Because it is required to use all fields this is acceptable <u>Retest 02.10.03 Ba:</u> List of usage of all fields is provided	Ok
	Check if proprietary sentences are included if available	No proprietary sentences used	Ok
e) Input sentences of long range port	Check that list of sentences is included		Ok
	Check that required and unused fields are noted	List of used fields	Ok
	Check if proprietary sentences are included if available	No proprietary sentences used	Ok

e) Input sentences of sensor inputs	Check that list of sentences is included		Ok
	Check that a list is included for each sensor input if different for the ports	Not required. All sensor inputs are identical and support all sentences	Ok
	Check that required and unused fields are noted	No complete list of used or unused fields available <u>Retest 02.10.03 Ba:</u> List of usage of all fields is provided	ok
	Check if proprietary sentences are included if available	No proprietary sentences used	Ok
Proprietary sentences	Check that proprietary sentences are listed and described	No proprietary sentences used	Ok
f) Software version	Check that the relevant software version is included	Not relevant	Ok
f) Hardware version	Check that the relevant hardware version is included	Not relevant	Ok
g) Hardware input/output circuit	Check that information about hardware interface components is included	In a separate "Alarm and Schematic package" manual	Ok
h) Standards	Check that the version number and date of update of the relevant standard is included	No information about the version of the standards found. <u>Retest 02.10.03 Ba:</u> Version of standards has been added	ok

2 14 Operational tests

2.1 14.1 Operating modes / Capability

(4.2)

2.1.1 14.1.1 Autonomous mode

(4.2.1, M.1371 A2/3.3.5)

2.1.1.1 14.1.1.1 Transmit Position reports

Method of measurement

Set up a test environment of at least 5 test targets. Record the VDL communication and check for messages of the EUT.

Required results

Confirm that the EUT transmits continuously and that the transmitted data complies with sensor inputs.

This is a first more general check that the EUT is continuously transmitting a position report. Special tests regarding

- Reporting rate
- Message contents
- Slot use

are done in special test items.

Test details – Transmission of Position reports			
Test item	Check	Remark	Result
Navigation status is set to 0 (travelling using engine) Internal GNSS is in use			
MMSI	Check MMSI		Ok
Transmission rate	Check that the message 1 is transmitted continuously		Ok
Position	Check the values of lat and lon		Ok
Speed	Check the values of SOG and COG		Ok
Heading/ROT	Check that the values of heading and ROT are default		Ok

2.1.1.2 14.1.1.2 Receive Position reports

Method of measurement

Set up a test environment of at least 5 test targets.

- a) *Switch on Test targets, then start operation of the EUT*
- b) *Start operation of the EUT, then switch on Test targets*

Check the VDL communication and Presentation Interface outputs of the EUT.

Required results

Confirm that EUT receives continuously under conditions a) and b) and outputs the received messages via the PI.

11.05.03 Test details a)– Receive Position reports, Target started first			
Test item	Check	Remark	Result
Switch on Test targets, then start operation of the EUT			
Check the following items on VDM output at PI compared with the transmitted values			
MMSI	Check MMSI		Ok
Transmission rate	Check that the message 1 is received continuously		Ok
Position	Check the values of lat and lon		Ok
Speed	Check the values of SOG and COG		Ok
Heading/ROT	Check the values of heading and ROT		Ok

11.05.03 Test details b)– Receive Position reports, EUT first started			
Test item	Check	Remark	Result
Start operation of the EUT, then switch on Test targets			
Check the following items on VDM output at PI compared with the transmitted values			
MMSI	Check MMSI		Ok
Transmission rate	Check that the message 1 is received continuously		Ok
Position	Check the values of lat and lon		Ok
Speed	Check the values of SOG and COG		Ok
Heading/ROT	Check the values of heading and ROT		Ok

2.1.2 14.1.2 Assigned mode

(4.2.1 M.1371A2/3.3.6)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit an Assigned mode command msg 16 to the EUT with:

- a) Slot offset and increment
- b) Designated reporting rate.

Record transmitted messages..

Required results

Confirm that the EUT transmits position reports msg 2 according to defined parameters and reverts to SOTDMA msg 1 with standard reporting rate after 4 to 8 min.

This is a test on operational basis. The details of slot allocation are checked in a special test on link layer (see 4.6.4 16.6.4 Assigned operation). A record of this test can be used for evaluation of this slot allocation test point.

A test if the assigned reporting rate depends on course, speed and navigation status is done in 2.4.3 14.4.3 Assigned reporting rates.

This test is completely covered by test 4.6.4 16.6.4 Assigned operation.

2.1.3 14.1.3 Polled mode

(4.2.1 M.1371A2/3.3.2)

2.1.3.1 14.1.3.1 Transmit an interrogation

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of an interrogation message (msg 15) by the EUT addressing 1 or 2 destinations according to message table (M.1371 table 13) requesting the following responses:

- msg 3, msg 5 from mobile stations
- msg 4, msg 20, msg 22. from base stations

Record transmitted messages.

Required results

Check that EUT transmits the interrogation message (msg 15) as appropriate.

11.05.03	Test details - Interrogation of msg 3		
Test item	Check	Remark	Result
Transmit an interrogation message 15 by sending an ACA sentence to the PI. Interrogation sentence: File AIAIR_5.sst: \$AIAIR,00000xxxx,3,,,,,, Change type from 5 to 3 A response is automatically transmitted by the addressed transponder			
VDO output of EUT	Check the VDO output on PI		Ok
AIABK acknowledgement	Record and check the AIABK acknowledgement	\$AIABK,1007,,15,0,3*6D The message sequence number field shall be a null (=empty) field <u>Retest 31.07.03:</u> \$AIABK,1005,,15,,3 ABK is Ok	Ok
RX of request	Check that message is received by addressed transponder (VDM)		Ok
Received by VDL Analyser	Check request on VDL analyser		Ok
TX of response (VDO)	Check that response is transmitted by addressed transponder (VDO)		Ok
RX of response (VDM)	Check that the response message 3 is received by EUT (VDM)		Ok

11.05.03	Test details - Interrogation of msg 5		
Test item	Check	Remark	Result
Transmit an interrogation message 15 by sending an ACA sentence to the PI. Interrogation sentence: File AIAIR_5.sst: \$AIAIR,00000xxxx,5,,,,,, A response is automatically transmitted by the addressed transponder			
VDO output of EUT	Check the VDO output on PI		Ok
AIABK acknowledgement	Record and check the AIABK acknowledgement	\$AIABK,1007,,15,0,3*6D The message sequence number field shall be a null (=empty) field <u>Retest 31.07.03:</u> \$AIABK,1005,,15,,3 ABK is Ok	Ok
RX of request	Check that message is received by addressed transponder (VDM)		Ok
Received by VDL Analyser	Check request on VDL analyser		Ok
TX of response (VDO)	Check that response is transmitted by addressed transponder (VDO)		Ok
RX of response (VDM)	Check that the response message 5 is received by EUT (VDM)		Ok

20.06.03 Test details - Interrogation of msg from base stations			
Test item	Check	Remark	Result
Transmit an interrogation message 15 by sending an ACA sentence to the PI. Interrogation sentence: File AIAIR_5.sst: \$AIAIR,00000xxxx,4/20/22,,,,, Change type to 4, 20, 22 The response from the base station is not checked			
Request msg 4	Check the VDO output on PI		Ok
	Record and check the AIABK acknowledgement	\$AIABK, 1005,,15,0,3 the message sequence number field shall be a null (=empty) field <u>Retest 31.07.03:</u> \$AIABK,1005,,15,,3 ABK is Ok	Ok
Request msg 20	Check the VDO output on PI		Ok
	Record and check the AIABK acknowledgement	\$AIABK, 1005,,15,0,3 the message sequence number field shall be a null (=empty) field <u>Retest 31.07.03:</u> \$AIABK,1005,,15,,3 ABK is Ok	Ok
Request msg 22	Check the VDO output on PI		Ok
	Record and check the AIABK acknowledgement	\$AIABK, 1005,,15,0,3 The message sequence number field shall be a null (=empty) field <u>Retest 31.07.03:</u> \$AIABK,1005,,15,,3 ABK is Ok	Ok

11.05.03 Test details - Interrogation with 2 requests			
Test item	Check	Remark	Result
Transmit an interrogation message 15 by sending an ACA sentence to the PI. Interrogation sentence: File AIAIR_35_5.sst: \$AIAIR,00000xxxx,3,,5,,000007001,5,, A response is automatically transmitted by one of the addressed transponder			
VDO output of EUT	Check the VDO output on PI		Ok
AIABK acknowledgement	Record and check the AIABK acknowledgement	\$AIABK,5002,,15,0,3*6C The message sequence number field shall be a null (=empty) field <u>Retest 31.07.03:</u> \$AIABK,1005,,15,,3 ABK is Ok	Ok
RX of request	Check that message is received by one of the addressed transponders (VDM)		Ok
Received by VDL Analyser	Check request on VDL analyser		Ok
TX of response (VDO)	Check that response is transmitted by addressed transponder (VDO)		Ok
RX of response (VDM)	Check that the response message 5 is received by EUT (VDM)		Ok

2.1.3.2 14.1.3.2 Interrogation response

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply an interrogation message (msg 15; EUT as destination) to the VDL according to message table (M.1371 table13) for responses with msg 3, msg 5 and slot offset set to defined value.

Record transmitted messages and frame structure.

Required results

Check that the EUT transmits the appropriate interrogation response message as requested after defined slot offset. Confirm that the EUT transmits the response on the same channel as where interrogation was received.

The requests with offset > 0 have to be made by the VDL generator, because a mobile transponder cannot generate requests with slot offset.

Test details - Interrogation of msg 5			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 5, slot offset = 0 (auto select) A response shall automatically be transmitted by the EUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok
TX of response (VDO)	Check that response is transmitted by EUT (VDO)		Ok
Response on VDL	Check the response on VDL with the VDL analyser, note slot offset		Ok
Response channel	Check that the response is transmitted on the request channel		Ok

Test details - Interrogation of msg 3			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 3 with given slot offset = 100 A response shall automatically be transmitted by the EUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok
TX of response (VDO)	Check that response is transmitted by EUT (VDO)	No response Remark: a request with slot offset = 0 is responded correctly <u>Retest 31.07.03:</u> Response is Ok	Ok
Response on VDL	Check the response on VDL with the VDL analyser	<u>Retest 31.07.03:</u>	Ok
Slot selection	Check that the slot offset defined in the request is used	<u>Retest 31.07.03:</u>	Ok
Note	<ul style="list-style-type: none"> In the first test it responded to an interrogation with offset = 0. After an interrogation with offset = 100 it did not respond to interrogations with offset = 0: After restart it responded again to an interrogation with offset = 0. In a second test after restart it responded to an interrogation with offset = 0 also after an interrogation with offset = 100. In never responded to an interrogation with offset = 100. <u>Retest 31.07.03:</u> Response with offset 0 and offset 100 Ok		Ok

More detailed interrogation tests are made in 6.3 “18.2 (M.1371 A1/5.3) Interrogation responses”

2.1.4 14.1.4 Addressed operation

(6.1 M1371 A2/3.3.8)

2.1.4.1 14.1.4.1 Transmit an addressed message

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of an addressed binary message (msg 6; EUT as source) according to message table (M.1371 table 13) by the EUT.

Record the transmitted messages.

Required results

Check that the EUT transmits the msg 6 as appropriate. Repeat test with the addressed safety related message (msg 12).

More detailed tests of addressed message including channel use and transmission retry are made in 6.1 “”.

Test details - Addressed binary message 6			
Test item	Check	Remark	Result
Transmit an addressed binary message 6 by sending an ABM sentence to the PI or alternatively using the MKD			
PI sentence: File AIABM_bin.sst: !AIABM,1,1,2,00000xxxx,1,6,06P0test,0 A response is automatically transmitted by the addressed transponder .			
VDO output of EUT	Check the VDO output on PI		Ok
Channel	Check Tx channel		Ok
Message sequence number	Check that sequence number in VDL msg = Sequential message identifier of ABM sentence		Ok
RX of request	Check that message is received by addressed transponder (VDM)		Ok
Received by VDL Analyser	Check msg on VDL analyser		Ok
TX of ackn. msg 7 (VDO)	Check that ackn msg 7 is transmitted by addressed transponder (VDO)		Ok
Use of Appl. ID	Check for proper use of DAC and FI for text messages when using MKD	Not implemented in MKD	Ok
RX of msg 7 (VDM)	Check that the ackn. msg 7 is received by EUT (VDM)		Ok
AIABK acknowledgement			Ok
Add invalid character to encapsulated data, e.g. x,y,z			
Transmission	Check that message is not transmitted		Ok
ABK sentence	Check that ABK message with ackn. type 2 (could not be broadcast) is output on PI		Ok
acknowledgement	Check AIABK or MKD for corresponding pos. and neg. ack.		Ok

12.05.03	Test details - Addressed safety related message 12		
Test item	Check	Remark	Result
Transmit an addressed safety related message 12 by sending an ABM sentence to the PI or alternatively using the MKD . PI sentence: File AIABM_safety.sst: !AIABM,1,1,2,00000xxxx,1,12,D5CD,0 (D5CD = „TEST“). A response is automatically transmitted by the addressed transponder .			
VDO output of EUT	Check the VDO output on PI		Ok
Channel	Check Tx on channel A		Ok
Message sequence number	Check that sequence number in VDL msg = Sequential message identifier of ABM sentence		Ok
Received by VDL Analyser	Check msg on VDL analyser		Ok
RX of msg 13 (VDM)	Check that the ackn. msg 13 is received by EUT (VDM)		Ok
acknowledgement	Check AIABK or MKD for corresponding pos. and neg. ack.	Not found or implemented Retest 22.05.03	Ok

2.1.4.2 14.1.4.2 Receive addressed message

(4.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- Apply an addressed binary message (msg 6; EUT as destination) to the VDL.*
- Apply an addressed binary message (msg 6; other station as destination) to the VDL.*

Record transmitted messages and frame structure.

Required results

Check that EUT transmits the appropriate acknowledgement message. Confirm that

- EUT outputs the received message via the Presentation Interface.*
- EUT does not output the received message via the Presentation Interface.*

Further tests of received addressed messages including acknowledgement see 6.1.2 .

11.05.03	Test details - Addressed binary message 6		
Test item	Check	Remark	Result
Transmit an addressed binary message by VDL generator or other Transponder verified by VDL analyser			
Addressed to EUT	Check that VDM output on PI of EUT		Ok
	Check DAC		Ok
	Check FI		Ok
	Check binary data		Ok
Addressed to other AIS transponder	Check that no VDM output on PI or on display of EUT		Ok

11.05.03	Test details - Addressed safety related message 12		
Test item	Check	Remark	Result
transmit an addressed safety related message by VDL generator or other Transponder verified by VDL analyser			
Addressed to EUT	Check that VDM output on PI of EUT		Ok
	Check message text		Ok
Addressed to other AIS transponder	Check that no VDM output on PI or on display of EUT		Ok

2.2 14.2 Multiple slot messages

(4.2 M.1371 A2/5.2.1)

2.2.1 14.2.1 5 slot messages

(M.1371 A2 / 5.2.1)

Method of measurement

Apply a BBM sentence to the PI of EUT with a max. of 121 data bytes of binary data in order to initiate transmission of a binary message (msg 8).

Required results

Check that the message is transmitted in up to 5 slots accordingly.

Single slot binary and safety related messages broadcast messages are tested in 6.4
 18.3 Broadcast messages

Test details - Binary broadcast message 8			
Test item	Check	Remark	Result
Transmit a binary broadcast messages 8 with 121 data bytes of binary data by sending 4 BBM sentences to the PI. PI sentence: File AIBBM_multi_bin.sst: AIS channel for broadcast is 1: (ch A) The file contains 4 BBM sentences with in total 121 data bytes or 162 characters			
VDO output of EUT	Check the VDO output on PI	Not found or implemented Retest 22.05.03 still no response from AIS Retest 18.07.03 same problem Retest 26.08.03	Ok
AIABK acknowledgement	Record and check the AIABK acknowledgements	\$AIABK,,,8,6,3	Ok
Sequential message identifier in VDO	Check that message sequence number in ABK = Sequential message identifier of BBM sentence		Ok
Message on VDL	Check the broadcast message on VDL analyser		Ok
Rx on other transponder (VDM)	Check the VDM output of an other transponder		Ok

Test details - Safety related broadcast message 14			
Test item	Check	Remark	Result
Transmit a safety related broadcast messages 14 with 120 data bytes of binary data by sending 4 BBM sentences to the PI. PI sentence: File AIBBM_multi_safety.sst: AIS channel for broadcast is 2: (ch B) The file contains 4 BBM sentences with in total 120 data bytes or 160 characters			
VDO output of EUT	Check the VDO output on PI	Not found or implemented Retest 22.05.03 still no response from AIS Retest 18.07.03 same problem Retest 26.08.03	Ok
AIABK acknowledgement	Record and check the AIABK acknowledgements	\$AIABK,,,14,6,3	Ok
Sequential message identifier in VDO	Check that message sequence number in ABK = Sequential message identifier of BBM sentence		Ok
Message on VDL	Check the broadcast message on VDL analyser		Ok
Rx on other transponder (VDM)	Check the VDM output of an other transponder		Ok

2.2.2 14.2.2 Longer messages

(M.1371 A2 / 5.2.1)

Method of measurement

Apply a BBM sentence to the PI of the EUT Presentation Interface with an information content not fitting in 5 slots (i.e. more than 121 data bytes of binary data containing only binary 1's).

Required results

Check that the message is not transmitted. Check that a negative acknowledgement is given on the presentation interface.

12.05.03 Test details - Binary broadcast message 8			
Test item	Check	Remark	Result
Transmit a binary broadcast messages 8 with 122 data bytes of binary data, all bits "1", by sending 4 BBM sentences to the PI. PI sentence: File AIBBM_multi_bin_1.sst: AIS channel for broadcast is 1: (ch A) The file contains 4 BBM sentences with in total 121 data bytes or 162 characters			
VDO output of EUT	Check that no VDO is output on PI	Not found or implemented Retest 18.07.03	Ok
Message on VDL	Check that no message is received by VDL analyser		Ok
AIABK acknowledgement	Record the AIABK output, check that type = 2 (could not be broadcast)		Ok

This test evaluates if the transponder takes into account the actually required amount of bit stuffing and can so transmit longer messages in 5 slots. This is not required.

02.09.03 Ba Test details - Binary broadcast message 8			
Test item	Check	Remark	Result
Transmit a binary broadcast messages 8 with 123 databytes of binary data, not all "1", by sending 4 BBM sentences to the PI.			
PI sentence: File AIBBM_multi_bin_long.sst: AIS channel for broadcast is 1: (ch A) The file contains 4 BBM sentences with in total 123 data bytes or 164 characters			
VDO output of EUT	Check the VDO output on PI	No transmission	Ok
AIABK acknowledgement	Record and check the AIABK acknowledgements, type should be 3	\$AIABK,,,8,6,2 Type = 2 (could not be broadcast)	Ok
Sequential message identifier in VDO	Check that message sequence number in ABK = Sequential message identifier of BBM sentence	Not applicable	
Message on VDL	Check the broadcast message on VDL analyser	Not applicable	
Rx on other transponder (VDM)	Check the VDM output of an other transponder	Not applicable	

2.3 14.3 Information content

(6.5.1 M.1371 A2/3.3.8)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

Apply all static, dynamic and voyage related data to the EUT.

Record all messages on VDL and check the contents of position report msg 1 and static data report msg 5.

Required results

Confirm that data transmitted by the EUT complies with manual and sensor inputs.

2.3.1 Information content of msg 1

The dynamic information content of msg 1,2,3 provided by external sensors is checked in detail in 7.5 “19.5 Test of sensor input” depending on the content and status of the different sensor input sentences. 2.1.1.1

Information content provided by internal GNSS receiver – if used as backup position source – and manual MKD inputs are tested here.

Test details – content of msg 1			
Test item	Check	Remark	Result
Internal GNSS is in use, no external sensor inputs			
MMSI	Check MMSI and compare with MKD display		Ok
Navigational status	See below		Ok
Position	Check the values of lat and lon and compare with MKD display		Ok
Speed	Check the values of SOG and COG and compare with MKD display		Ok
Heading/ROT	Check that the values of heading and ROT are default		Ok
Position accuracy flag	Check flag with and without differential corrections by msg 17		Ok
Time stamp	Check time stamp		Ok
Comm state	Check for availability, detailed test in 5		Ok
Default values	Check that default values for LAT, LON, SOG, COG are transmitted if internal GNSS is unavailable		Ok

Test details – Navigational status			
Test item	Check	Remark	Result
Test of navigational status on VDL message. Check some different navigational status values. Change the navigational status using MKD or VSD input			
Status = 0 (under way using engine)	Check Status in VDL message 1		Ok
Status = 1 (at anchor)	Check Status in VDL message 1		Ok
Status = 7 (fisching)	Check Status in VDL message 1		Ok
Status = 15 (undefined)	Check Status in VDL message 1		Ok
Other status values	Check some other values		Ok

2.3.2 Information content of msg 5

Test details – Content of msg 5			
Test item	Check	Remark	Result
Check of the contents of msg 5 (static and voyage related data)			
Data can be changed using MKD or VSD/SSD input at PI			
MMSI	Check value in msg 5		Ok
AIS version indicator	Check that version is 0		Ok
IMO number	Check value in msg 5		Ok
Call sign	Check value in msg 5		Ok
Name of ship	Check value in msg 5		Ok
Type of ship and cargo type	Check value in msg 5		Ok
Reference point for internal GPS			
Reference point A	Check value in msg 5		Ok
Reference point B	Check value in msg 5		Ok
Reference point C	Check value in msg 5		Ok
Reference point D	Check value in msg 5		Ok
Reference point for EPFS			
Reference point A	Check value in msg 5		Ok
Reference point B	Check value in msg 5		Ok
Reference point C	Check value in msg 5		Ok
Reference point D	Check value in msg 5		Ok
Tx of msg 5	Check if msg 5 is transmitted at change of position source		Ok
Voyage related data			
ETA	Check value in msg 5	Input of 30 th of february and a time of 24:xx is possible Retest 18.07.03	Ok
Maximum present static draught	Check value in msg 5		Ok
Destination	Check value in msg 5		Ok
DTE flag can be checked in connection with 2.9.2.5 “14.9.2.5 Remote MKD disconnection, when so configured”. Check the flag during that test and enter result here			
DTE on	Check that DTE flag = 0		Ok
DTE off	Check that DTE flag = 1	Not applicable, internal MKD	
Type of EPFS			
Apply simulated GLL,VTG, GDT and ROT sentence to the sensor input File name is ais01_gll_vtg_hdt_rot.sst.			
Change talker according to test item			
Talker = GP	Check type of EPFS = 1	Always EPFS = 0 Retest 18.07.03	Ok
Talker = GL	Check type of EPFS = 2		Ok
Talker = GN	Check type of EPFS = 3		Ok
Talker = LC	Check type of EPFS = 4		Ok

Talker = IN	Check type of EPFS = 6		Ok
Talker = other	Check type of EPFS = 0		Ok

2.4 14.4 Reporting rates

(6.5.2)

2.4.1 14.4.1 Speed and course change

(6.5.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- a) *start with own speed of 10kn; record all messages on VDL for 10min and evaluate reporting rate for position report of EUT by calculating average slot offset over test period.*
- b) *Increase speed and change course (ROT > 10°/min, derived from heading) in accordance with 6.5.2 Table 1 and ITU-R M.1371 A2/4.3.*
- c) *Reduce speed and rotation rate to values below those given in Table 1.*
- d) *Make speed and/or heading sensor unavailable.*

For b), c), d) record all messages on VDL and check slot offset between two consecutive transmissions.

Required results

- a) *Reporting rate shall comply to Table 1 (10sec ±10%).*
- b) *Confirm that the new reporting rate has been established (after 2 transmissions ±20%).*
- c) *Confirm that the reporting rate is reduced after 4min (speed reduction) or 20sec (ROT reduction).*
- d) *Check that with unavailable sensors the reporting rate reverts to default values (10sec if no sensor connected).*

Record the VDL data of the procedure according to the following test items, generate a table and diagram from that data and check the items using the recorded data.

Test details – Change of reporting rate by speed			
Test item	Check	Remark	Result
Apply simulated GLL sentence to the sensor input. Set Navigation status to 0 (under way) File name is ais01_gll_vtg_hdt_rot.sst Record the VDL data of the procedure according to the following test items, generate a table and diagram from that data and check the items using the recorded data. Change speed according to the test items and record VDL data. After each change wait until new reporting rate is clearly established. Lines are related to Excel table repreate_speed.xls			
Speed = 10 kn	Check that reporting rate is 10 s		Ok
Speed = 15 kn	Check slot allocation using msg 3 for new reporting rate	See note 1 <u>Retest 31.07.03:</u> Ok	Ok
	Check that slot allocation for the new reporting rate has started after 2 transmissions	Slot allocation for new reporting rate starts immediately	Ok
	Check that new rate is established within 1 minute		Ok
	Check that new reporting rate is 6 s		Ok
Speed = 25 kn	Check slot allocation using msg 3 for new reporting rate	See note 1 <u>Retest 31.07.03:</u> Ok	Ok
	Check that slot allocation for the new reporting rate has started after 2 transmissions	Slot allocation for new reporting rate starts immediately	Ok
	Check that new rate is established within 1 minute		Ok
	Check that new reporting rate is 2 s		Ok
Reduction of speed to Speed = 15 kn	Check slot allocation by deallocation of slots, Msg 3 not required for new reporting rate	The slots with are not used for the new lower reporting rate are not released. They have to be released by time-out=0 and Slot offset=0. So they are free for use by other stations in the next frame. <u>Retest 31.07.03:</u> Reduction of reporting rate is done by deallocation of slots.	Ok
	Check that new rate starts after 3 min and is established within 4 minutes	Start of releasing slots should be 3 min after speed reduction. After 4 min the reporting rate is really reduced <u>Retest 31.07.03:</u> Ok	Ok
	Check that new reporting rate is 6 s		Ok
Reduction of speed to Speed = 10 kn	Check slot allocation using msg 3 for new reporting rate	Same or similar failure as described in note 1 <u>Retest 31.07.03:</u> Slot allocatin is Ok	Ok

	<p>Check that new rate starts after 3 min and is established within 4 minutes</p>	<p>The rescheduling for the new reporting rate starts after 1 min The rescheduling should start 3 min after reduction of speed and should be finished 4 min after speed reduction. <u>Retest 31.07.03: no change</u> <u>Retest 19.08.03:</u> Rescheduling starts 3 min after speed change</p>	Ok
	Check that new reporting rate is 10 s		Ok

Date	Result	Status
12.06.03 Note 1	<p>See Excel sheet “RepRate_speed_1.xls</p> <ul style="list-style-type: none"> • Msg 3 are used but the slot allocation value is always 0. That means that there are no slots allocated for the next msg 3. • For the first msg 3 a msg 1 slot should be used to avoid unannounced use of slots as far as possible. This is done by changing the msg type from 1 to 3. This msg 3 should allocate a slot for the next msg 3, and so on. • 2 frames with msg 3 are used. Only 1 frame with msg 3 is required, like the network entry procedure. Because of the missing slot allocation values I can not recognize the sense or purpose of this second frame with msg 3. • In line 25 and 35 there is a msg 1 with a time-out which is not decremented. The same in line 73 and 99 at increasing rep rate from 6 s to 2 s. • In line 11 of the table there is a slot 903 allocated which is never used. 	
31.07.03	Retest Ba: above items are Ok	Ok
1.08.03	<p>Comment to Excel table (RepRate_speed_4.xls): In line 14 a slot is used which is allocated for the next frame in line 15. Retest 19.08.03 Ba: No such case found in retest</p>	Ok

Test details – Change of reporting rate by heading			
Test item	Check	Remark	Result
Apply simulated GLL sentence to the sensor input. Set Navigation status to 0 (under way) File name is ais01_gll_vtg_hdt_rot.sst Record the VDL data of the procedure according to the following test items, generate a table and diagram from that data and check the items using the recorded data. Change speed according to the test items and record VDL data. After each change wait until new reporting rate is clearly established. Lines are related to Excel table repreate_speed.xls			
Speed = 10 kn Heading = 0	Check that reporting rate is 10 s	Remark: This test is done by changing the ROT value, not heading (see note 2)	Ok
Speed = 10 kn Increase heading by 10 degr. steps sometimes	Check slot allocation by inserting ITDMA slots (msg 3) for new reporting rate	It seems that the increasing of the reporting rate is done by a complete rescheduling. There are the same failures as described at reporting rate by speed The slots of the basic reporting rate are not used <u>Retest 31.07.03:</u> slot allocation is now done by inserting ITDMA slots (msg 3) for new reporting rate	Ok
	Check that new rate is established immediately		Ok
	Check that new reporting rate is 3 1/3 s		Ok
Speed = 10 kn Stop Increasing heading	Check slot allocation by stopping insertion of ITDMA slots (msg 3)	It seems that the use of allocated slots (msg type 1) is stopped. <u>Retest 31.07.03:</u> Reducing reporting rate to the basic reporting rate is done by stopping insertion of ITDMA slots (msg 3)	Ok
	Check that new rate is established within (30 s averaging+20 s delay =) 50 s after stop of heading change	The reporting rate is reduced 1min40s after end of heading change <u>Retest 31.07.03:</u> Reporting rate is reduced about 50 s after end of heading change	Ok
	Check that new reporting rate is 10 s again		Ok
Speed = 15 kn	Wait until speed is 6 s with msg type 1		Ok
Speed = 15 kn Decrease heading by 10 degr. steps sometimes	Check slot allocation by inserting ITDMA slots (msg 3) for new reporting rate	See at 10 kn <u>Retest 31.07.03:</u>	Ok
	Check that new rate is established immediately		Ok
Test Report No. 734.2/0050/2003 / S3220	print date: 07.10.03	page 43	of 229

	Check that new reporting rate is 2 s		Ok
Speed = 15 kn Stop decreasing heading	Check slot allocation by stopping insertion of ITDMA slots (msg 3)	See at 10 kn <u>Retest 31.07.03:</u>	Ok
	Check that new rate is established within (30 s averaging+20 s delay =) 50 s after stop of heading change	The reporting rate is reduced 1min40s after end of heading change <u>Retest 31.07.03:</u> Reporting rate is reduced about 50 s after end of heading change	Ok
	Check that new reporting rate is 6 s again		Ok
Speed = 25 kn	Wait until speed is 2 s with msg type 1		Ok
Speed = 25 kn Increase heading by 10 degr. steps sometimes	Check that no change		Ok
Speed = 25 kn Stop Increasing heading	Check that no change		Ok

Date	Result	Status
12.06.03 Note 2	<p>The increase of reporting rate is not derived from the heading but from the ROT value.</p> <p>In ITU-R M.1371 §4.3.1.2 it is exactly described that and how the heading information has to be evaluated for the increase of reporting rate.</p>	
31.07.03	<p>The increasing of reporting rate is derived from change of heading value</p>	Ok
12.06.03	<p>It seems that the increasing of the reporting rate is done by a complete rescheduling.</p> <p>The increasing of the reporting rate cause by heading change should be done by insertion of additional msg 3 in the following way:</p> <ul style="list-style-type: none"> • The slots of the basic reporting rate should be used further on • Between 2 of these basic slots 2 additional msg (type 3) should be inserted. • The keep flag of these additional messages is 0 • At beginning a msg 1 is changed to msg 3 to start the allocation chain • Each msg 3 allocates a slot for the next msg 3 on this channel. • When the increase of reporting rate has to be finished the last msg 3 on each channel has a slot allocation value of 0 indicating that it is the last msg 3 on this channel. 	
31.07.03	<p>The increasing of the reporting rate caused by heading change is done by insertion of additional msg 3</p>	Ok
1.08.03	<p>Comment to Excel table (RepRate_course_3.xls): Line 30/31 and 109/111: The last 2 msg 3 allocate slots which are not used. The last msg 3 should get a slot allocation value of 0 (not allocating a new slot)</p>	rec

Test details – Reporting rate - Sensor unavailable			
Test item	Check	Remark	Result
Apply simulated GLL sentence to the sensor input. Set Navigation status to 0 (under way) File name is ais01_gll_vtg_hdt_rot.sst Change speed according to the test items and record VDL data.			
Speed = 10 kn	Check that reporting rate is 10 s		Ok
Speed = 15 kn	Check that reporting rate is 6 s		Ok
Speed sensor unavailable (internal source made unavailable)	Record time from stopping speed input to reverting report rate	EUT starts reverting to 10 s after 3 min, according to the time use in case of reducing speed	Ok
	Check that new reporting rate is 10 s	This is according to IEC 61993	Ok

Note: 61993 differs to 1371 clarifications with regard to behaviour when speed sensor unavailable

2.4.2 14.4.2 Change of navigational status

(6.5.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Change Navigational status by applying voyage data message to the Presentation Interface of the EUT.

- set NavStatus to "at anchor" and speed <3 kn
- set NavStatus to "at anchor" and speed >3 kn
- set NavStatus to other values

Record all messages on VDL and evaluate reporting rate of position report of EUT.

Required results

- Reporting rate shall be 3 min.
- Reporting rate shall be 10 s.
- Reporting rate shall be adjusted according to speed and course (see 14.4.1)

Test details – Reporting rate			
Test item	Check	Remark	Result
Apply simulated sensor data to the sensor input. File name is ais01_gll_vtg_hdt_rot.sst Change Navigation status and speed according to test items			
Navigation status = 0 (under way using engine Speed = 2 kn	Check that reporting rate is 10 s		Ok
Nav. status = 1 (at anchor) Speed = 2 kn	Check that reporting rate is 3 min	Reporting rate is 1 min, should be 3 min All transmission are on channel A, should be alternating. <u>Retest 19.08.03 Ba:</u> Reporting rate is 3 min, using msg 3, alternating on channel A and B	Ok
	Check that the position report is interleaved with the msg 5	<u>Retest 19.08.03 Ba:</u> Msg 5 is completely stopped during at anchor mode <u>Retest 22.08.03 Ba:</u> Msg 5 is transmitted correctly, interleaved with msg 3 as requiered	Ok
Nav. status = 1 Speed = 4 kn	Check that reporting rate is 10 s		Ok
Nav. status = 5 (moored) Speed = 2 kn	Check that reporting rate is 3 min	Reporting rate is 10s , should be 3 min (First nav status has been changed from 1 to 5, then speed has been reduced from 4 to 2 kn) the report rate has been checked for 10 min. <u>Retest 19.08.03 Ba:</u> Reporting rate is 3 min	Ok
Nav. status = 2 (not under command) Speed = 2 kn	Check that reporting rate is 3 min	Rep rate is 10 s See note:	acc
Nav. status = 6 (Aground) Speed = 2 kn	Check that reporting rate is 3 min	Rep rate is 10 s See note:	acc
Nav. status = 3 or other Speed = 2 kn	Check that reporting rate is 10 s		Ok

Change of navigational status from at anchor to under way	<p><u>Retest 25.08.03 Ba:</u> After change of navigational status from at anchor to under way and increasing speed from 2 to 10 kn the network entry for 10 s reporting rate was not Ok. The transmissions on channel A and B are not interleaved but are nearly at the same time. During the at anchor mode 2 assignment command have been executed In a repetition the network entry was Ok.</p> <p><u>Retest 29.08.03 Ba:</u> Network entry after change of navigational status is Ok</p>	Ok

Note: According to ITU-R M.1371 §4.3.1. "When the vessel is at anchor, moored, not under command or aground which is indicated by the navigational status, ... Message 3 should be used with a reporting rate of 3 minutes.

According to this in case of Nav status "not under command" and "aground" the reporting rate should be 3 min.

In §4.2.1 Table 1A only "at anchor or moored" is mentioned for the 3 min. reporting rate. Same in §3.3.1.2 Candidate slots: only "At anchor" or "moored" is mentioned in connection with the 3 min reporting rate.

So it seems the M.1371 is inconsistent in this item.

Test details – Check of slot handling			
Test item	Check	Remark	Result
Apply simulated sensor data to the sensor input. File name is ais01_gll_vtg_hdt_rot.sst Change Navigation status according to test items			
Navigation status = 0 (under way using engine Speed = 2 kn)	Check that reporting rate is 10 s		Ok
Change Nav status to "at anchor"	Check that the used slots are release by time-out 0 and slot offset = 0	Slots are not released by time-out 0 and slot offset = 0. The transmission is immediately stopped <u>Retest 19.08.03 Ba:</u> Slots are released by time-out 0	Ok
	Record if the slots are forced to time-out 0 or if they are released after count down to 0	Slot are forced to time-out 0	Ok
	Check that the position reports are transmitted in RATDMA mode using msg 3	Msg type 1 (SOTDMA) are used with a reporting rate of 1 min. <u>Retest 19.08.03 Ba:</u> Msg 3 is used	Ok
Change Nav status back to 0	Check that a procedure like network entry is performed		Ok

2.4.3 14.4.3 Assigned reporting rates

(6.5.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit an Assigned mode command msg 16 to the EUT with:

- a) *initial slot offset and increment;*
- b) *designated reporting rate.*

Change course, speed and NavStatus. Record transmitted messages.

Required results

Confirm that the EUT transmits position reports msg 2 according to the parameters defined by msg 16; the reporting rate shall not be affected by course, speed or NavStatus. The EUT shall revert to msg 1 or 3 in autonomous mode with standard reporting rate after 4 to 8 min.

If the autonomous mode requires a higher reporting rate than that directed by Message 16, the Class A shipborne mobile AIS station should use the autonomous mode.

More detailed tests are made in 4.6.4 16.6.4 Assigned operation

In this test it is only checked if the assigned reporting rate depends on course, speed and navigation status.

Only if the speed or course change requires an higher report rate the EUT has the revert to autonomous mode and obtain the higher report rate.

22.08.03 Ba Test details a) – Slot offset and increment			
Test item	Check	Remark	Result
Send an assignment message 16 with offset A = 40 (offset to first assigned slot = 40) and slot increment parameter = 3 (increment = 225 = 6 s)			
NavStatus = 0 (under way using engine), Speed = 10 kn • Send assignment cmd	Check that slot offset = 225 and reporting rate is 6 s And msg type = 2	Will be tested when slot assignment is Ok	Ok
In assigned mode • change NavStatus to 1 (at anchor)	Check that Navstatus has no effect: EUT maintains assigned mode		Ok
In autonomous mode: NavStatus = 1 (at anchor), speed = 2 kn • Send assignment cmd	Check that the assignment command is accepted	Assignment command is accepted Transmission in assigned mode only on channel A <u>Retest 25.08.03 Ba:</u> <ul style="list-style-type: none"> In a first test the slot assignment was handled as a rate assignment. The reporting rate was according to the assigned slot offset. In a second test the slot assignment was handled as a slot assignment. At the end of the assigned mode there are 2 transmissions of msg 3 allocating new slots which are never used <u>Retest 29.08.03 Ba:</u> <ol style="list-style-type: none"> Test: Slot assignment is Ok Test: Ok At the end of assigned mode there are no msg 3	Ok <u>Retest 25.08.03 Ba:</u> <ul style="list-style-type: none"> In a first test the slot assignment was handled as a rate assignment. The reporting rate was according to the assigned slot offset. In a second test the slot assignment was handled as a slot assignment. At the end of the assigned mode there are 2 transmissions of msg 3 allocating new slots which are never used <u>Retest 29.08.03 Ba:</u> <ol style="list-style-type: none"> Test: Slot assignment is Ok Test: Ok At the end of assigned mode there are no msg 3
Nav Status = 0, speed = 10 kn • Send assignment	Check that assignment command is executed		Ok
• Increase speed to 15 kn	Check that EUT maintains assignment mode		Ok

• Increase speed to 25 kn	Check that EUT reverts to autonomous mode: Reporting rate = 2 s and Msg type = 2 (change with msg 3)	Changed reporting rate to 2 s, using msg 3 for allocation and msg 2 for the new rep. rate. After end of time-out a new rescheduling has been done.	Ok
NavStatus = 0, Speed = 15 kn: • Send assignment cmd	Check that EUT changes to assigned mode	<u>Test 29.08.03 Ba</u>	Ok
In assigned mode: • Change heading	Check that reporting rate = 2 s and Msg type = 2/3 (msg 3 inserted between msg 2)	<u>Test 29.08.03 Ba</u>	Ok

Test details b) – Rate assignment			
Test item	Check	Remark	Result
Send an assignment message 16 with offset = 100 (reporting rate = 100 msg/10 min), increment=0			
NavStatus = 0 (under way using engine), Speed = 10 kn <ul style="list-style-type: none"> Send assignment cmd 	Check that slot offset = 225 and reporting rate is 6 s And msg type = 2		Ok
In assigned mode <ul style="list-style-type: none"> change NavStatus to 1 (at anchor) 	Check that Navstatus has no effect: EUT maintains assigned mode		Ok
In autonomous mode: NavStatus = 1 (at anchor), speed = 2 kn <ul style="list-style-type: none"> Send assignment cmd 	Check that the assignment command is accepted		Ok
Nav Status = 0, speed = 10 kn <ul style="list-style-type: none"> Send assignment 	Check that assignment command is executed		Ok
• Increase speed to 15 kn	Check that EUT maintains assignment mode		Ok
• Increase speed to 25 kn	Check that EUT reverts to autonomous mode: reporting rate = 2 s and Msg type = 1 (change with msg 3)	Msg type is 2 after increasing the reporting rate According to clarification to M.1371, Ed 1.3, § 2.45 msg type 2 is Ok in this case At the assigned mode time-out all slots are released in 1 frame and in the next frame a rescheduling like network entry is performed.	Ok
NavStatus = 0, Speed = 15 kn: <ul style="list-style-type: none"> Send assignment cmd 	Check that EUT changes to assigned mode	The assigned mode command is executed. 1 message of type 2 and time-out 0 is transmitted. Then all slots are released and a complete rescheduling is done. The new reporting rate is 6 s The message type is 1, so the EUT has not entered assigned mode <u>Retest 29.08.03 Ba:</u> Msg type is changed to 2 (assigned mode) but no rescheduling because the reporting rate has not to be changed.	Ok

In assigned mode: <ul style="list-style-type: none"> Change heading 	Check that reporting rate = 2 s and Msg type = 1/3 (msg 3 inserted between msg 1 or 2)	Msg types are 2 and msg 3 inserted between msg 2	Ok

2.4.4 14.4.4 Static data reporting rates

(6.5.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- Record the transmitted messages and check for static and voyage related data (msg 5).
- Change static and/or voyage related station data. Record the transmitted messages and check for static and voyage related data (msg 5).

Required results

- Confirm that the EUT transmits msg 5 with a reporting rate of 6 min.
- Confirm that the EUT transmits msg 5 within 1 min reverting to a reporting rate of 6 min.

Test details - Static data reporting rates			
Test item	Check	Remark	Result
Record msg 5 and check repetition rate			
a) Default update rate	Check that update rate is 6 min		Ok
b) Change static data using SSD sentence short time after regular msg 5	Check that msg 5 is transmitted within 1 min	Msg 5 is transmitted immediately	Ok
Wait for next msg 5	Record if the next msg 5 is transmitted: <ul style="list-style-type: none"> 6 min after regular msg 5 or 6 min after additional msg 5 	The next msg 5 is transmitted 6 minutes after SSD input – the 6 minutes timer is restarted	Ok
Change voyage related data using VSD sentence	Check that msg 5 is transmitted within 1 min		Ok
Change static data using MKD	Check that msg 5 is transmitted within 1 min		Ok
Change position source with different ref. point data (see 61993 6.10.3.4)	Check that msg 5 with ref point of new source is transmitted before next transmission of pos. report	If this is not done before next transmission of position report there will be a position jump on the display system of near targets.	Ok

2.5 14.5 Security

(6.6)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Switch the EUT off for more than 15 min and on again at least ten times. Recover and readout recorded data.

Required results

Confirm that the EUT records and displays times and events correctly.

Test details - Security			
Test item	Check	Remark	
Switch EUT off for 16 minutes and on again			
Read out means	Check that there are means to readout recorded data	Screen found but always the message 'Down-Time Log is Empty' Retest 18.07.03	Ok
Read out recorded data	Check that all switch off times > 15min are correctly recorded		Ok
If the EUT supplies a "silent mode" (no transmission)	Check that all silent mode times > 15min are correctly recorded	Not applicable, EUT has no silent mode	Ok

2.6 14.6 Initialisation period

(6.7 M.1371 A2/3.3.3)

Method of measurement

Set up standard test environment with all sensors available.

- Switch on EUT with EUT operating in autonomous mode.
- Switch off EUT for approx. 0.5 s. Record transmitted messages.

Required results

Confirm that the EUT starts transmissions within 2 min after switch on.

Test details - Initialisation period			
Test item	Check	Remark	Result
Set up standard test environment with all sensors available			
a) Switch on of EUT	Check that EUT starts transmission within 2 min		Ok
b) Switch off EUT for approx. 0.5 s	Check that EUT starts transmission within 2 min		Ok

2.7 14.7 Channel selection

(6.9)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Switch the EUT to different channels randomly selected from the maritime mobile band as specified by ITU-R M.1084-4, Annex 4 using both 25kHz and 12.5kHz channel spacing (incl. 12.5kHz emission on a 25kHz channel):

- a) manually,
- b) by transmission of channel management message (msg 22) broadcast and addressed to EUT,
- c) by application of ACA sentence to the presentation interface.
- d) By transmission of DSC telecommand to EUT

Record the VDL messages.

Required results

Confirm that the EUT switches to Channel / bandwidth and duplex / simplex channels accordingly.

Confirm that the EUT delivers a TXT-sentence with ID 036, followed by the ACA-sentences needed to inform of changes in the AIS use of regional operating settings.

Test details - Channel selection			
Test item	Check	Remark	Result
Select channels and bandwidth according to the test items in a regional area around the actual position so that is in use.			
The VDL analyser has to be switched to the selected channels			
a) Enter <u>manually</u> :	Check that channels are used		Ok
2 simplex channels	Check bandwidth		Ok
25 kHz spacing	Check TXT output at PI		Ok
25 kHz bandwidth	Check ACA output at PI		Ok
b) Enter by using <u>msg 22</u> :	Check that channels are used		Ok
1 duplex channel	Check bandwidth		Ok
25 kHz spacing	Check TXT output at PI		Ok
25 kHz bandwidth	Check ACA output at PI		Ok
c) Enter by <u>ACA sentence</u> :	Check that channels are used		Ok
1 duplex channel	Check bandwidth	Bandwidth seems to be 25 kHz <u>Retest 22.08.03 Ba:</u> bandwidth is Ok	Ok
25 kHz spacing			
12.5 kHz bandwidth	Check TXT output at PI		Ok
	Check ACA output at PI		Ok
d) Enter by <u>DSC</u>	Check that channels are used		Ok
2 simplex channels	Check bandwidth	Bandwidth seems to be 25 kHz <u>Retest 22.08.03 Ba:</u> bandwidth is Ok	Ok
12.5 kHz spacing			
12.5 kHz bandwidth	Check TXT output at PI		Ok
	Check ACA output at PI		Ok

2.8 14.8 Transceiver protection

(6.9 ; M.1371 A2/2.14, 2.15)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Open circuit and short circuit VHF-antenna terminals of the EUT for at least 60 s each.

Required results

The EUT shall be operative again within 2 min after refitting the antenna without damage to the transceiver.

This test should be done as the last test to be able to do all other tests in case of transmitter damage.

Test details - Transceiver protection			
Test item	Check	Remark	Result
Open circuit of VHF antenna terminal	Check that EUT starts transmission within 2 min after refitting the antenna	Continues transmission with the next scheduled TX	Ok
Short circuit of VHF antenna terminal	Check that EUT starts transmission within 2 min after refitting the antenna	Continues transmission with the next scheduled TX	Ok

2.9 14.9 Alarms and indicators, fall-back arrangements

(6.10)

It is recommended that an empty alarm sentence is send in case of no alarm pending . EUT may have two differend modes empty sentence or complete set of alarm msg. with status V,V .

alr sentence with nul-fields implemented every minute

Test details - General alarm tests			
Test item	Check	Remark	Result
No alarm pending			
Alarm output repetition	Check that ALR sentences are not output with a repetition rate < 1 min		Ok
General Failure Alarm		This alarm is not generated according to "Alarm and Schematic package" manual	Ok
MKD connectionlost		This alarm is not generated because the MKD is internal	Ok

2.9.1 14.9.1 Loss of power supply

(6.10.1.2)

Method of measurement

Disconnect power supplies of the EUT.

Required result

Verify that the relay output is "active" when the power is "off".

12.05.03	Test details - Loss of power supply		
Test item	Check	Remark	Result
Switch off power supply	Check that alarm relay output is active.	Retest 18.07.03	Ok

2.9.2 14.9.2 Monitoring of functions and integrity

(6.10.2)

2.9.2.1 14.9.2.1 Tx malfunction

Method of measurement

Disable the transmitter by disconnecting the antenna.

Required result

Verify that an alarm sentence ALR with alarm ID 001 is sent and the relay output signals the failure state.

Verify that relay deactivates when the EUT receives an ACK and that the status field in the ALR sentence is updated.

Alternatively an ALR 001 when TX active between TX-slots is accepted; disconnecting antenna is also alarmed by ALR 002.

23.05.03	Test details - Tx malfunction		
Test item	Check	Remark	Result
Disconnect VHF antenna or: make TX active between scheduled slots (e.g. CW carrier)			
Stop of transmission	Check if transmission is stopped	Not stopped	Acc.
ALR output	Check that ALR sentence ID 001 is output at PI	Also 002 is found	Ok
ALR output repetition	Check that the ALR sentence is repeated with a rate of 30 s		Ok
Alarm relay	Check that alarm relay is activated		Ok
MKD display	Check that the alarm is displayed on the MKD		Ok
Send an ACK sentence	Check that alarm relay deactivated		Ok
	Check that ALR sentence is updated		Ok
	Check that alarm display on the MKD is updated		Ok
Reconnect VHF antenna	Check that ALR sentence is updated		Ok
	Check that alarm display on the MKD is updated		Ok

2.9.2.2 14.9.2.2 Antenna VSWR

Method of measurement

Prevent the EUT from radiating with full power by mismatching the antenna for a VSWR of 3:1. During the mismatch the output power is not required to be at the rated output power.

Required result

Verify that the EUT continues transmitting. Verify that an alarm sentence ALR with alarm ID 002 is sent and the relay output signals the failure state.

Verify that relay deactivates when the EUT receives an ACK and that the status field in the ALR sentence is updated.

Test details - Antenna VSWR			
Test item	Check	Remark	Result
Connect a mismatched dummy load with a VSWR of 3:1 to the VHF antenna terminal			
Continuation of Tx	Check that transmission continues		Ok
ALR output	Check that ALR sentence ID 002 is output at PI		Ok
MKD display	Check that the alarm is displayed on the MKD		Ok
Alarm relay	Check that alarm relay is activated		Ok
Send an ACK sentence	Check that alarm relay deactivated		Ok
	Check that ALR sentence is updated		Ok
	Check that alarm display on the MKD is updated		Ok
Generate a new alarm by connection the VHF antenna and again connect the mismatched dummy load			
Acknowledge the alarm on MKD (applies to all alarms) note: NEW	Check that alarm relay deactivated		Ok
	Check that ALR sentence is updated		Ok
	Check that alarm display on the MKD is updated (the alarm indication is cleared)		Ok
Connect VHF antenna	Check that ALR sentence is updated		Ok

2.9.2.3 14.9.2.3 Rx malfunction

Manufactures shall provide documentation describing how the AIS detects Rx malfunction and that an ALR sentence with alarm ID as appropriate is sent.

02.09.03 Ba		Test details - Rx malfunction		
Test item	Check	Remark	Result	
Check the documentation				
Detection of RX malfunction	Check that documentation describes how the AIS detects Rx malfunction	Rx malfunction is detected by check of synthesizer lock There is no supervision of DSC rx	Ok	acc
ALR output	Check that documentation describes that an ALR sentence with ID 003 (RX1), ID 004 (RX2) and ID 005 (DSC) is sent.	There is no information about the Alarm ID, only the Alarm text	acc	

2.9.2.4 14.9.2.4 Loss of UTC

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Disconnect the GNSS antenna (UTC clock lost).

Required result

Verify that the system continues to operate but changes to indirect synchronisation and that an TXT-sentence with ID 007 is sent and the relay output is not activated.

23.05.03		Test details - UTC clock lost		
Test item	Check	Remark	Result	
Disconnect GNSS antenna				
Continuation of operation	Check that transmission of position report continues	After TXT output EUT stops transmission for 15 sec. Retest 18.07.03	Ok	
Synchronisation	Check that EUT switches to indirect synchronisation		Ok	
TXT output	Check that a TXT sentence with ID 007 is output at PI		Ok	
Alarm relay	Check that the alarm relay output is not activated		Ok	
MKD display	Check that the status display of the MKD is updated	Not found Retest 18.07.03 still not found. A good place may be the 'General Status' screen Retest 26.08.03 WA	Ok	

2.9.2.5 14.9.2.5 Remote MKD disconnection, when so configured

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- Disconnect the connection to the remote MKD.*
- Provide an alarm acknowledgement, ACK sentence with ID 008, to the PI.*

Required result

- Verify that an alarm sentence, alarm ID 008, is sent and the relay output signals the failure. Verify that the AIS continues operation, with the DTE value “1” in msg 5.*
- Verify that the relay deactivates when the EUT receives an ACK and that the status field in the ALR sentence is updated.*

13.06.03 Test details - Remote MKD disconnection			
Test item	Check	Remark	Result
Disconnect the connection to the remote MKD.			
Continuation of Tx	Check that transmission continues	Not applicable because it is an internal MKD	Ok
DTE flag	Check that the DTE flag in msg 5 is set to 1		
ALR output	Check that ALR sentence ID 008 is output at PI		
Alarm relay	Check that alarm relay is activated		
MKD display	Check that loss of connection to the transponder is displayed on the MKD		
Send an ACK sentence	Check that alarm relay deactivated		
	Check that ALR sentence is updated		
Reconnect MKD	Check that ALR sentence is updated		
MKD display	Check that the MKD display is updated		

2.9.3 14.9.3 Monitoring of sensor data

(6.10.3)

2.9.3.1 14.9.3.1 Priority of position sensors

(6.1.1.3, 6.10.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Verify the manufacturer's documentation to ascertain the configuration implemented on the EUT for position sensors (see 6.2).

Apply position sensor data in a way that the EUT operates in the states defined below :

- a) external DGNSS in use (corrected)
- b) internal DGNSS in use (corrected; msg 17) if implemented
- c) internal DGNSS in use (corrected; beacon) if implemented
- d) external EPFS in use (uncorrected)
- e) internal GNSS in use (uncorrected) if implemented
- f) no sensor position in use

Check the ALR sentence and the position accuracy flag in the VDL msg 1.

Required result

Verify that the use of position source, position accuracy flag, RAIM flag and position information complies to Table 4.

Verify that when the status is changed, an ALR (025, 026, 029, 030), or TXT (021, 022, 023, 024, 025, 027, 028) sentence is sent according to table 2 or table 3 respectively.

Verify that the status is changed after 5 s when switching downwards and 30 s when switching upwards.

29.08.03 Test details - Position priority – Basic test without internal DGNSS			
Test item	Check	Remark	Result
Connect sensor inputs and correction data according to the test items. Sensor input file name: AIS01g_gll_vtg_gbs_hdt_rot.sst Internal GPS: no RAIM, external: RAIM active.			
No sensor data: Changing upwards			
f) Start with: <ul style="list-style-type: none"> • No external GNSS input • No Internal GNSS 	Check that default position is used		Ok
	Check that position accuracy flag = 0		Ok
	Check that RAIM flag = 0		Ok
	Check that ALR message with ID 026 (No sensor position) is output on PI every 30 s		Ok

e) Change from f: <ul style="list-style-type: none"> • No external GNSS input • Activate internal GNSS 	Check that internal position is used	Internal GNSS is not used as an position source by intention	Ok
	Check that position accuracy flag = 0		
	Check that RAIM flag is according to internal sensor (= 0)		
	Check that msg 5 is output with new (internal) ref. point		
	Check that ALR message with ID 026 is updated		
	Check that TXT sentence with ID 025 (position) and ID 028 (SOG/COG) is output on PI		
	Check that the alarm on MKD according to ALR ID 026 is updated		
	Check that status display of MKD is updated according to TXT ID 025 and ID 028		
d) Change from e: <ul style="list-style-type: none"> • Internal GNSS is available • Apply external GNSS input 	Check that external position is used	Internal GNSS is not used as a position source by intention, so this test is done without internal position	Ok
	Check that position accuracy flag = 0		
	Check that RAIM flag is according external sensor (=1)		
	Check that msg 5 is output with new (external) ref. point		
	Check that ALR message with ID 025 is updated		
	Check that TXT sentence with ID 022 (position) and ID 027 (SOG/COG) is output on PI		
	Check that the alarm on MKD according to ALR ID 025 is updated		
	Check that status display of MKD is updated according to TXT ID 022 and ID 027		
a) Change from d: <ul style="list-style-type: none"> • Internal GNSS • Change external mode to DGNSS 	Check that external position is used		Ok
	Check that position accuracy flag = 1		Ok
	After activation of external DGNSS mode the EUT generates the Alarm ID 025 (external EPFS lost) and switches to internal GNSS for about 25 s.		
	Then it switches correctly to external DGNSS		
	Retest 18.07.03		Ok
	Check that TXT sentence with ID 021 is output on PI		Ok
	Check that status display of MKD is updated according to TXT ID 021		Ok

Status change time	Check that status has been changed after 5 s	Time of switching to external EPFS is about 3 s	Ok
Highest Level: Changing downwards			
d) Change from a: <ul style="list-style-type: none"> Internal GNSS available Change external sensor mode to GNSS 	<p>Check that external position is used</p> <p>Check that position accuracy flag = 0</p> <p>Check that TXT sentence with ID 022 is output on PI</p> <p>Check that status display of MKD is updated according to TXT sentence</p>	<p>Internal GNSS is not used as an position source by intention, so this test is done without internal position</p>	Ok
e) Change from d: <ul style="list-style-type: none"> Internal GNSS available Remove external GNSS input 	<p>Check that internal position is used</p> <p>Check that position accuracy flag = 0</p> <p>Check that RAIM flag is set according to documentation of internal GPS (=0)</p> <p>Check that msg 5 is output with new ref. point</p> <p>Check that ALR message with ID 025 (external EPFS lost) is output on PI</p> <p>Check that TXT sentence with ID 025 (position) and ID 028 (SOG/COG) is output on PI</p> <p>Check that an alarm according to ALR message is displayed on MKD</p> <p>Check that status display of MKD is updated according to TXT sentence</p>	<p>Internal GNSS is not used as an position source by intention, so internal position is not available</p>	Ok
f) Change from e: <ul style="list-style-type: none"> No external GNSS input Disable internal GNSS 	<p>Check that default position is used</p> <p>Check that position accuracy flag = 0</p> <p>Check that RAIM flag = 0</p> <p>Check that ALR message with ID 026 (No sensor position) is output on PI</p> <p>Check that an alarm according to ALR message is displayed on MKD</p>		Ok
Status change time	Check that status has been changed after 30 s		Ok

Test details - Position priority -DGNSS test Msg 17			
Test item	Check	Remark	Result
Connect sensor inputs and correction data according to the test items. Sensor input file name: AIS01g_gll_vtg_gbs_hdt_rot.sst Internal GPS: no RAIM, external: RAIM active.			
No correction data: Changing upwards			
d) Start with: <ul style="list-style-type: none"> Internal GNSS is available External GNSS input 	Check that external position is used	Internal GNSS is not used as an position source by intention, so this test is has not to be done	Ok
	Check that position accuracy flag = 0		
	Check that RAIM flag = 1		
b) Change from d: <ul style="list-style-type: none"> External mode is GNSS Apply correction data by msg 17 	Check that internal position is used		
	Check that position accuracy flag = 1		
	Check that RAIM flag is set according to internal GNSS (=0)		
	Check that msg 5 is output with new (internal) ref. point		
	Check that TXT sentence with ID 024 (position) and ID 028 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT ID 024 and 028		
a) Change from b: <ul style="list-style-type: none"> Change external mode to DGNSS Internal DGNSS (msg 17) 	Check that external position is used		
	Check that position accuracy flag = 1		
	Check that RAIM flag is set according to external GNSS (=1)		
	Check that msg 5 is output with new (external) ref. point		
	Check that TXT sentence with ID 021 (position) and ID 027 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT ID 021 and ID 027		
Status change time	Check that status is changed after 5 s		
Highest Level: Changing downwards			
c) Change from a: <ul style="list-style-type: none"> Internal DGNSS by msg 17 Change external sensor mode to GNSS 	Check that internal position is used		
	Check that position accuracy flag = 1		
	Check that TXT sentence with ID 024 (position) and ID 028 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT sentences		
d) Change from c: <ul style="list-style-type: none"> External GNSS input Remove msg 17 (correction data for Internal GNSS) 	Check that external position is used		
	Check that position accuracy flag = 0		
	Check that RAIM flag is set according to external sensor input data		

	Check that msg 5 is output with new ref. point		
	Check that TXT sentence with ID 022 (position) and ID 027 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT sentence		
Status change time	Check that status is changed after 5 s		

29.08.03 Ba Test details - Position priority -DGNSS test beacon			
Test item	Check	Remark	Result
Connect sensor inputs and correction data according to the test items. Sensor input file name: AIS01g_gll_vtg_gbs_hdt_rot.sst Internal GPS: no RAIM, external: RAIM active.			
No correction data: Changing upwards			
d) Start with: <ul style="list-style-type: none"> Internal GNSS is available External GNSS input 	Check that external position is used	Internal GNSS is not used as an position source by intention, so this test is has not to be done	Ok
	Check that position accuracy flag = 0		
	Check that RAIM flag = 1		
c) Change from d: <ul style="list-style-type: none"> External mode is GNSS Apply correction data for DGNSS by beacon 	Check that internal position is used		
	Check that position accuracy flag = 1		
	Check that msg 5 is output with new (internal) ref. point		
	Check that TXT sentence with ID 023 (position) and ID 028 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT ID 023 and 028		
a) Change from C: <ul style="list-style-type: none"> Change external mode to DGNSS Internal DGNSS (beacon) 	Check that external position is used		
	Check that position accuracy flag = 1		
	Check that msg 5 is output with new (external) ref. point		
	Check that TXT sentence with ID 021 (position) and ID 028 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT ID 021		
Status change time	Check that status is changed after 5 s		
Highest Level: Changing downwards			
c) Change from a: <ul style="list-style-type: none"> Internal DGNSS by beacon Change external sensor mode to GNSS 	Check that internal position is used		
	Check that position accuracy flag = 1		
	Check that TXT sentence with ID 023 (position) and ID 028 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT sentence		
d) Change from c: <ul style="list-style-type: none"> External GNSS input Remove beacon correction data for Internal GNSS 	Check that external position is used		
	Check that position accuracy flag = 0		
	Check that RAIM flag is set according to sensor input data		
	Check that msg 5 is output with new ref. point		

	Check that TXT sentence with ID 022 (position) and ID 027 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT sentence		
Status change time	Check that status is changed after 30 s		

29.08.03 Ba Test details - Position priority –DGNSS test beacon + Msg 17			
Test item	Check	Remark	Result
Connect sensor inputs and correction data according to the test items. Sensor input file name: AIS01g_gll_vtg_gbs_hdt_rot.sst Internal GPS: no RAIM, external: RAIM active.			
No correction data: Changing upwards			
d) Start with: <ul style="list-style-type: none"> Internal GNSS is available External GNSS input 	Check that external position is used	Internal GNSS is not used as an position source by intention, so this test is has not to be done	Ok
	Check that position accuracy flag = 0		
	Check that RAIM flag = 1		
c) Change from d: <ul style="list-style-type: none"> External mode is GNSS Apply correction data for DGNSS by beacon 	Check that internal position is used		
	Check that position accuracy flag = 1		
	Check that msg 5 is output with new (internal) ref. point		
	Check that TXT sentence with ID 023 (position) and ID 028 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT ID 023		
b) Change from c: <ul style="list-style-type: none"> External mode is GNSS Correction data for DGNSS by beacon Apply msg 17 with correction data 	Check that internal position is used		
	Check that position accuracy flag = 1		
	Check that TXT sentence with ID 024 is output on PI		
	Check that status display of MKD is updated according to TXT ID 023		
a) Change from b: <ul style="list-style-type: none"> Change external mode to DGNSS Internal DGNSS (beacon) 	Check that external position is used		
	Check that position accuracy flag = 1		
	Check that msg 5 is output with new (external) ref. point		
	Check that TXT sentence with ID 021 (position) and ID 027 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT ID 021		
Status change time	Check that status is changed after 5 s		

Highest Level: Changing downwards			
b) Change from a:	Check that internal position is used		
• Msg 17 for internal DGNSS	Check that position accuracy flag = 1		
• Internal DGNSS by beacon	Check that TXT sentence with ID 024 (position) and ID 028 (SOG/COG) is output on PI		
• Change external sensor mode to GNSS	Check that status display of MKD is updated according to TXT sentence		
c) Change from b:	Check that internal position is used		
• External sensor mode is GNSS	Check that position accuracy flag = 1		
• Internal DGNSS by beacon	Check that TXT sentence with ID 023 is output on PI		
• Stop msg 17	Check that status display of MKD is updated according to TXT sentence		
d) Change from c:	Check that external position is used		
• External GNSS input	Check that position accuracy flag = 0		
• Remove beacon correction data for internal GNSS	Check that RAIM flag is set according to sensor input data		
	Check that msg 5 is output with new ref. point		
	Check that TXT sentence with ID 022 (position) and ID 027 (SOG/COG) is output on PI		
	Check that status display of MKD is updated according to TXT sentence		
Status change time	Check that status is changed after 30 s		

2.9.3.2 14.9.4 Heading sensor

(6.10.3.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- a) *Disconnect the inputs for HDG and ROT or set their data to invalid (e.g. by wrong checksum, "valid/invalid" flag).*
- b) *Reconnect the inputs for HDG and ROT*
- c) *Disconnect the input for ROT or set the data to invalid (e.g. by wrong checksum, "valid/invalid" flag). Establish a rate of heading change that is greater than 5 degrees in 30 seconds*
- d) *Reconnect the ROT input*

Required Result

- a) Check that an alarm sentence ALR with alarm ID 032 for invalid HDG and an alarm sentence ID 035 for invalid ROT are sent to the PI and the "default" data is sent in VDL msg 1,2 or 3.
- b) Check that an alarm sentence ALR with alarm ID 031 for valid HDG and ID 033 for valid ROT is sent to the PI. Verify that, in the alarm sentences, the alarm condition flag is set to "V" and that the relay output is not activated. Check that TXT-sentences with ID 031 for valid HDG and ID 033 for ROT indicator in use are sent to the PI
- c) Check that TXT-sentence with ID 034 for "other ROT source in use" is sent to the PI and that the contents of the message's ROT field is the correct "direction of turn" (table 5 "ROT sensor fallback conditions," Priority 2).
- d) Check that a TXT-sentence with ID 033 for ROT indicator in use is sent to the PI.

12.05.03 Test details - Heading and ROT			
Test item	Check	Remark	Result
Connect Heading and ROT input according to test items			
Start with: <ul style="list-style-type: none"> • Valid heading • Valid ROT 	Check that heading and ROT are used in VDL message		Ok
	Check that alarm relay is inactive	Retest 26.08.03	Ok
	Check that no ALR output is active		Ok
a) Disconnect heading and ROT <ul style="list-style-type: none"> • No heading • No ROT 	Check that heading in VDL = default		Ok
	Check that ROT in VDL = default		Ok
	Check that ALR message with ID 032 (heading invalid) is output on PI		Ok
	Check that ALR message with ID 035 (ROT invalid) is output on PI		Ok
	Check that alarm relay is active	Retest 26.08.03	Ok
	Check that an alarm according to ID 032 is displayed on MKD		Ok
	Check that an alarm according to ID 035 is displayed on MKD		Ok
b) Reconnect heading and ROT <ul style="list-style-type: none"> • Valid heading • Valid ROT 	Check that heading in VDL Ok		Ok
	Check that ROT in VDL Ok		Ok
	Check that ALR message with ID 032 (heading valid) and status V is output on PI		Ok
	Check that ALR message with ID 035 (ROT valid) and status V is output on PI		Ok
	Check that TXT message with ID 031 (Heading valid) is output on PI	Retest 26.08.03	Ok
	Check that TXT message with ID 033 (ROT in use) is output on PI	Not found Retest 23.05.03	Ok
	Check that alarm relay is inactive	Retest 26.08.03	Ok

	Check that the alarm display on MKD is updated	Not found Retest 23.05.03	Ok
	Check that the status display on MKD is updated (heading and ROT valid)	Retest 26.08.03	Ok
c) Change ROT talker • Valid heading • ROT, talker not TI	Check that ROT in VDL is + 127 for ROT > 10 °/min, turning right Check that ROT in VDL is + 127 for ROT < -10 °/min, turning left Check that TXT message with ID 034 (other ROT in use) is output on PI Check that the status display on MKD is updated (other ROT)	Still valid rot value Retest 23.05.03 Retest 9° is shown as 3.6 on PI and VDL as 9° on MKD Retest 26.08.03 WA See above Retest 26.08.03 WA Not found Retest 26.08.03 Not found Retest 26.08.03	Ok Ok Ok Ok Ok
d) Change ROT talker to TI • Valid heading • ROT, talker TI	Check that ROT in VDL Ok Check that TXT message with ID 033 (ROT in use) is output on PI Check that the status display on MKD is updated (ROT in use)	Ok Ok Not found Retest 26.08.03	Ok Ok Ok
a) Disconnect ROT • Valid heading • No ROT Change heading > 5 °/30s	Check that ROT in VDL is + 127 for increasing heading Check that ROT in VDL is - 127 for decreasing heading Check that TXT message with ID 034 (other ROT in use) is output on PI	Not required See above ---	---
b) Reconnect ROT • Valid heading • Valid ROT from TI	Check that ROT in VDL Ok Check that TXT message with ID 033 (ROT in use) is output on PI	Ok Ok	Ok

2.9.3.3 14.9.5 Speed sensors

(6.10.3.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Verify the manufacturer's documentation to ascertain the configuration implemented on the EUT for position sensors (see 6.10).

- apply valid external DGNSS position and external speed data.
- disconnect external DGNSS position, disconnect the inputs for SOG, COG or set their data to invalid (e.g. by wrong checksum, "valid/invalid" flag).

NOTE: Test b) is applicable only if the internal GNSS is used as position source.

Required Result

- Check that an alarm sentence ALR with alarm ID 027 is sent to the PI and the external data for SOG / COG is sent in VDL msg 1, 2 or 3. Verify that the system continues to operate and that the relay output is not activated.
- Check that an alarm sentence ALR with alarm ID 028 is sent to the PI and the internal data for SOG / COG is sent in VDL msg 1, 2 or 3. Verify that the system continues to operate and that the relay output is not activated.

Test details - Speed sensor			
Test item	Check	Remark	Result
Connect external speed sensor input according to test items.			
Internal GPS is not available			
Changing upwards			
b) Connect external speed <ul style="list-style-type: none"> • No external Position • External speed 	Check that SOG from external Sensor is used in VDL message 1,2,3		Ok
	Check that COG from external Sensor is used in VDL message 1,2,3		Ok
	Check that TXT message with ID 027 (external speed in use) is output on PI		Ok
	Check that ALR message with ID 29 and 30 (No valid SOG/COG information) with status V is output on PI		Ok
	Check that the alarm status according to ID 29 and 30 is updated	Alarm is deleted	Ok
	Check that the status according to TXT msg ID 027 is displayed on MKD		Ok
a) from c) Connect external position and speed <ul style="list-style-type: none"> • External Position • External speed 	Check that SOG from external Sensor is used in VDL message 1,2,3		Ok
	Check that COG from external Sensor is used in VDL message 1,2,3		Ok
	Check that TXT message with ID 027 (external speed in use) is output on PI		Ok

	Check that ALR message with ID 29 and 30 (No valid SOG/COG information) with status V is output on PI		Ok
	Check that the alarm relay is inactive		Ok
	Check that the alarm status according to ID 29 and 30 is updated	Alarm is deleted	Ok
Changing downwards			
a) Connect external position and speed <ul style="list-style-type: none"> • External Position • External speed 	Check that external SOG is used in VDL message 1,2,3		Ok
	Check that external COG is used in VDL message 1,2,3		Ok
	Check that alarm relay is inactive	Retest 18.07.03	Ok
b) Disconnect external position <ul style="list-style-type: none"> • No external Position • External speed 	Check that SOG from external sensor is used in VDL message 1,2,3		Ok
	Check that COG from external sensor is used in VDL message 1,2,3		Ok
c) From a: Disconnect external position and speed <ul style="list-style-type: none"> • No external Position • No external speed 	Check that SOG = default		Ok
	Check that COG = default		Ok
	Check that ALR message with ID 029 (No valid SOG information) is output on PI		Ok
	Check that ALR message with ID 030 (No valid COG information) is output on PI		Ok
	Check that alarm relay is active	Retest 18.07.03	Ok
	Check that the status according to ALR msg ID 029/30 is displayed on MKD	Is displayed in the "Alarm status" field	Ok

12.05.03	Test details - Speed sensor		
Test item	Check	Remark	Result
Connect external speed sensor input according to test items. Internal GPS is available			
No sensor data: Changing upwards			
a) Start with <ul style="list-style-type: none"> • No external Position • No external speed • No internal Position • No internal speed 	Check that SOG = default	Not applicable because the internal GPS receiver is not used for position and speed	
	Check that COG = default		
	Check that alarm relay is active		
	Check that the status according to ALR msg ID 029/30 is displayed on MKD		
b) Activate internal GPS <ul style="list-style-type: none"> • Internal position • Internal speed 	Check that SOG from internal GPS is used in VDL message 1,2,3		

	Check that COG from internal GPS is used in VDL message 1,2,3		
	Check that TXT message with ID 028 (internal speed in use) is output on PI		
	Check that ALR message with ID 29 and 30 (No valid SOG/COG information) with status V is output on PI		
	Check that alarm relay is inactive		
	Check that the status according to TXT 28 is updated on MKD (internal SOG/COG in use)		
	Check that the alarm ID 29/30 is deleted from MKD		
c) Connect external speed <ul style="list-style-type: none"> • No external Position • External speed 	Check that SOG from internal Sensor is used in VDL message 1,2,3		
	Check that COG from internal Sensor is used in VDL message 1,2,3		
d) Connect position (and speed) <ul style="list-style-type: none"> • External Position • External speed 	Check that SOG from external Sensor is used in VDL message 1,2,3		
	Check that COG from external Sensor is used in VDL message 1,2,3		
	Check that TXT message with ID 027 (external COG/SOG in use) is output on PI		
	Check that the status according to TXT msg ID 027 is displayed on MKD (external COG/SOG in use)		
Changing downwards			
c) Disconnect external position <ul style="list-style-type: none"> • No external Position • External speed 	Check that SOG from internal GPS is used in VDL message 1,2,3		
	Check that COG from internal GPS is used in VDL message 1,2,3		
	Check that TXT message with ID 028 (internal speed in use) is output on PI		
	Check that the status according to TXT msg ID 028 is displayed on MKD (internal COG/SOG in use)		
b) Disconnect external speed <ul style="list-style-type: none"> • No external Position • No external speed 	Check that SOG from internal GPS is used in VDL message 1,2,3		
	Check that COG from internal GPS is used in VDL message 1,2,3		
a) Disable internal GPS <ul style="list-style-type: none"> • No external Position • No external speed • No internal Position • No internal speed 	Check that SOG = default		
	Check that COG = default		
	Check that ALR message with ID 029 (No valid SOG information) is output on PI		

	Check that ALR message with ID 030 (No valid COG information) is output on PI		
	Check that alarm relay is active		
	Check that the status according to ALR msg ID 029/30 is displayed on MKD		

2.10 14.10 Display and control

(6.11)

2.10.1 14.10.1 Data input/output facilities

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- Check size of minimum display
- Record received messages and check contents of minimum display.
- Input static and voyage related data via the minimum display

Required results

- The minimum display shall contain at least three lines of data, with no horizontal scrolling of the range and bearing data display..
- Confirm that all messages including binary and safety related and Long Range messages received can be displayed and that means to select messages and data fields to be displayed are available.
- Confirm that all necessary data can be input.

At least bearing, range and name of ship shall be displayed without horizontal scrolling

Test details a) - MKD size of display			
Test item	Check	Remark	Result
a) Size of display	Check that at minimum 3 lines of data are available		Ok
	Check that range and bearing of AIS targets can be displayed without horizontal scrolling		Ok

23.05.03	Test details b) - MKD display of received messages		
Test item	Check	Remark	Result
Receive messages and check display of data			
MSG 1,2,3 Display of dynamic ship data - required -	Check that received target is displayed		Ok
	MMSI	Recommended	Ok
	Position (RNG, BRG); Detailed check of values in next table	required	Ok
	Position (Lat,Lon)	Recommended	--
	Time	Not required	--
	PA (Position accuracy) flag	Not required	--
	SOG and COG	Recommended	--
	True heading	Recommended	--
	Navigational status	Recommended	--
	RAIM flag	Not required	--
MSG 5 Display of static and voyage related ship data - required -	MMSI	recommended	Ok
	IMO number	Not required	--
	Call sign	Recommended	--
	Name of ship	Required	Ok
	Type of ship and cargo	Recommended	--
	Dimension/Reference for position	Length recommended	--
	Type of EPFD	Not required	--
	Estimated time of arrival	Not required	--
	Maximum present static draught	Not required	--
	Destination	Not required	--
MSG 4 Base station report - Recommended -	MMSI		Ok
		There is no indication that it is a base station and not a class A ship	Rec
	Position (Lat,Lon)	recommended	---
	Position (RNG, BRG); Check values	recommended	Ok
	Time	Not required	---
	PA flag	Not required	---
	RAIM flag	Not required	---
MSG 9 SAR aircraft position report - optional -	MMSI	Recommended	Ok
		There is no indication that it is a SAR aircraft and not a class A ship	
	Position (RNG, BRG); Check values	Recommended	Ok
	Position (Lat,Lon)	Recommended	---
	Time	Not required	---
	PA flag	Not required	---
	SOG and COG	Recommended	---

	RAIM flag	Not required	---
	DTE flag	Not required	---
MSG 12/14 Safety related text message - Required -	MMSI	Required	Ok
	Text content	Required	Ok
	Broadcast or selective	Recommended	Ok
MSG 18,19 Class B position report - required -	MMSI	Recommended	Ok
	Position (RNG, BRG); Check values	required	Ok
	Position (Lat,Lon)	recommended	---
	Time	Not required	---
	PA flag	Not required	---
	SOG and COG	Recommended	---
	True heading	Recommended	---
	RAIM flag	Not required	---
	Name	Recommended,	Ok
	Type of ship and cargo	Recommended	---
	Dimension/Reference for position	Length recommended	---
	Type of EPFD	Not required	---
	DTE flag	Not required	---
MSG 21 Aids to navigation report - recommended -	MMSI	Recommended	---
	Type of Aids to navigation	Recommended	---
	Name of Aids to navigation	Recommended	Ok
		There is no indication that it is a aids to navigation and not a class A ship	Rec
	Position (RNG, BRG); Check values	Recommended	Ok
	Position (Lat,Lon)	Recommended	---
	PA flag	Not required	---
	RAIM flag	Not required	---
		Recommended	---
	Dimension/Reference for position	Length recommended	---
	Type of EPFD	Not required	---
	Off position indicator	Recommended	---
	SOG, COG are not displayed or show default values		---
Means to select messages	Check that means to select received messages are available	Not available, there is no display of more details	acc
Means to select data fields	Check that means to select data fields are available	Not available, only MMSI/Name and range/bearing can be displayed	acc

12.05.03	Test details – Range and bearing values		
Test item	Check	Remark	Result
Receive position report from special positions and check displayed range and bearing data			
Own ship position on standard position in NE quadrant			
Target in NE direction	Check range	Retest 18.07.03	Ok
	Check bearing		Ok
Target in N direction	Check range		Ok
	Check bearing		Ok
Target in NW direction	Check range		Ok
	Check bearing		Ok
Target in W direction	Check range		Ok
	Check bearing		Ok
Target in SW direction	Check range		Ok
	Check bearing		Ok
Target in S direction	Check range		Ok
	Check bearing		Ok
Target in SE direction	Check range		Ok
	Check bearing		Ok
Target in E direction	Check range		Ok
	Check bearing		Ok
Own ship position on a position near Lon. of 180°			
Target on same side of 180 °	Check range		Ok
	Check bearing		Ok
Target on the other side of 180°	Check range		Ok
	Check bearing		Ok
Own ship position on a position near Lon. of 0°			
Target on the other side of 0°	Check range		Ok
	Check bearing		Ok
Own ship position on a position near Lat of 0°			
Target on same side of 0 °	Check range		Ok
	Check bearing		Ok
Target on the other side of 0°	Check range		Ok
	Check bearing		Ok

12.05.03 Test details – Display of own ship position			
Test item	Check	Remark	Result
Internal Position	Check that the own ship position is displayed continuously		Ok
	Describe how it is displayed (in which menu/screen) and how this screen is activated	<NAV> or <FNC> <ENT> button for own ship data screen	Ok
	Check that the actual source is indicated (external/internal)		Ok
External Position	Check that the own ship position is displayed continuously		Ok
	Check that the actual source is indicated (external/internal)		Ok

23.05.03	Test details d) – Input of data		
Test item	Check	Remark	Result
MMSI number	Check that number can be input		Ok
	Check that input is protected	Not protected Retest 18.07.03	Ok
IMO number	Check that number can be input		Ok
	Check that input is protected	Not protected Retest 18.07.03	Ok
Call sign	Check that Call sign can be input		Ok
	Check that input is protected	Not protected Retest 18.07.03	Ok
Name of ship	Check that name can be input		Ok
	Check that input is protected	Not protected Retest 18.07.03	Ok
Navigational status	Check that data can be input		Ok
	Check if input by number or by selection of items	By selection	Ok
Type of ship and cargo	Check that data can be input		Ok
	Check if input by number or by selection of items		Ok
Dimension/Reference for position	Check that data for internal GPS antenna position can be input		Ok
	Check that data for external EPFSD position can be input		Ok
Maximum static draught	Check that data can be input		Ok
Destination	Check that name of destination can be input		Ok
	Check that estimated time of arrival can be input	Check for data and time needed 30 th of february is possible Retest 18.07.03	Ok

2.10.2 14.10.2 Initiate message transmission

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of non scheduled messages and interrogations as provided by the EUT.

Required results

Confirm that at least the transmission of safety related addressed and broadcast messages (msg 12 and msg 14) can be initiated by means of the minimum display. Confirm that transmission of messages 4, 16, 17, 18, 19, 20, 21, 22 is not possible.

NOTE: Use of messages 4, 16, 17, 18, 19, 20, 21, 22 is restricted to base stations or class B AIS.

23.05.03 Test details) – Message transmission			
Test item	Check	Remark	Result
Transmission of safety related broadcast message	Check selection between broadcast and addressed message		Ok
	Check selection of TX channel	Not found Retest 18.07.03	Ok
	Check data input		Ok
	Check if prepared text blocks are available	Not available Predifined text: "msg form xxxx", xxxx = own MMSI	ok
	Check if input of invalid characters (e.g. lower case letters) are inhibited	Only upper case possible	Ok
	Check display of transmission status (indication that message is transmitted)		Ok
Transmission of addressed safety related message	Check selection of TX channel	Not found Retest 18.07.03	Ok
	Check data input		Ok
	Check input of MMSI		Ok
	Check if selection of MMSI from received message (e.g. position report) is possible	Not required, Not possible	--
	Check display of transmission status (indication that message is transmitted and acknowledged)	Not clear documentation needed Retest 18.07.03	Ok
Repetition	Check if repetition of transmission is possible without entering the data again.	Not required, Not possible,	--
Transmission of other messages	Check for a sample of msg 4, 16, 17, 18, 19, 20, 21, 22 that a transmission is not possible.		Ok

2.10.3 14.10.3 System control

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Perform system control / configuration commands as specified. Check indication of system status / alarms.

Required results

At least initiation of channel switching shall be possible with the minimum display. Output power may not be switched manually. Confirm that the configuration level and other functions, not intended for use by the operator, are protected by password or adequate means.

Test details - Regional area entry			
Test item	Check	Remark	Result
Presentation of the existing areas	Check that the 8 existing areas can be selected and displayed		Ok
	Check display of Channel A and B		Ok
	Check display of RX/TX mode		Ok
	Check display transmission power		Ok
	Check display of bandwidth		Ok
	Check display of NE point of area		Ok
	Check display of SW point of area		Ok
	Check display of transitional zone		Ok
Entry of a new area	Check selection between changing an existing area and creating a new regional area entry	A new area is entered by changing an existing area so that it is not overlapping	Ok
	Check input of Channel A and B		Ok
	Check input of RX/TX mode		Ok
	Check input transmission power		Ok
	Check input of NE point of area		Ok
	Check input of SW point of area		Ok
	Check input of transitional zone		Ok
	Check that the user has to confirm a second time that the new data shall be stored		Ok
Enter invalid channel	Check that entry is refused	Invalid channels 500 and 3000 are accepted <u>Retest 25.08.03 Ba:</u> There seems to be only a very rough check if the channel number is > 4500 for invalid number <u>Retest 01.09.03 Ba:</u> Channels are checked more detailed now but not in all details. We recommend to check it in all details <u>Retest 03.09.03 Ba:</u> Channels are completely checked	Ok
Enter too small area (<20 nm)	Check that entry is refused	Area is refused There is no indication that and why the area is refused. We recommend to give a neg. feedback.	Ok Rec
Enter too large area (> 200 nm)	Check that entry is refused	No indication (see above)	Ok
Enter a region according to M.1371-1 A2/4.1 figure 4.1.5A (4 adjacent areas)	Check that entry is refused		Ok

Changing an existing area	Check that existing area for changes can be selected		Ok
	Check change of Channel A and B		Ok
	Check change of RX/TX mode		Ok
	Check change transmission power		Ok
	Check change of NE point of area	Could not change area points, changes were not accepted <u>Retest 25.08.03 Ba:</u> Changing of NE point is Ok	Ok
	Check change of SW point of area	<u>Retest 25.08.03 Ba:</u> Changing of SW point is Ok	Ok
	Check change of transitional zone		Ok
	Check that the user has to confirm a second time that the new data shall be stored		Ok
Changing of default values	Check change of Channel A and B	Default values cannot be changed	Ok
	Check change of RX/TX mode	Default values cannot be changed	Ok
	Check change transmission power	Default values cannot be changed	Ok

02.09.03 Ba		Test details - Alarms and status display		
ID	Test item	Check	Remark	Result
001	Tx malfunction	Check is done in 2.9.2.1		
002	Antenna VSWR exceeds limit	Check is done in 2.9.2.2		
003	Rx cannel 1 malfunction	Check documentation		Ok
004	Rx cannel 2 malfunction	Check documentation		Ok
005	Rx cannel 70 malfunction	Check documentation	Not supported, no supervision of DSC Rx	acc
006	General AIS failure	Check documentation	Not supported	Ok
008	MKD connection lost	Check is done in 2.9.2.5		
025	External EPFS lost	Check is done in 2.9.3.1		
029	No valid SOG information	Check is done in 2.9.3.3		
030	No valid COG information	Check is done in 2.9.3.3		
032	Heading lost/invalid	Check is done in 2.9.3.2		
035	No valid ROT information	Check is done in 2.9.3.2		

02.09.03 Ba		Test details - Status display		
ID	Test item	Check	Remark	Result
007	UTC clock lost			Ok
021	External DGNSS in use	Check is done in 2.9.3.1		
022	External GNSS in use	Check is done in 2.9.3.1		
023	Internal DGNSS in use (beacon)	Check is done in 2.9.3.1		
024	Internal DGNSS in use (msg 17)	Check is done in 2.9.3.1		
025	internal GNSS in use	Check is done in 2.9.3.1		
027	External SOG/COG in use	Check is done in 2.9.3.3		
028	Internal SOG/COG in use	Check is done in 2.9.3.3		
031	Heading valid	Check is done in 2.9.3.2		
033	Rate of Turn indicator in use	Check is done in 2.9.3.2		
034	Other ROT source in use	Check is done in 2.9.3.2		
036	Channel management parameters changed	Check that status change is displayed if channel management parameters are changed.	Actual channel setting is displayed on a separate screen	Ok

2.10.4 Ergonomic aspects

This are some ergonomic aspects from user view (Recommendation).

Topic	Description
Display	The contrast and illumination of the display could be better.
Display of names	Displaying names of targets the character "@" which indicates the end of the name is displayed. This may confuse the operator and reduces the readability of the names. Therefore we recommend to replace "@" by "space".

3 15 Physical tests

Physical test are not part of this test document.

Physical tests are done in a separate test.

4 16 Specific tests of Link Layer

(7.3)

4.1 16.1 TDMA Synchronisation

(M.1371 A1/3.1.1)

4.1.1 16.1.1 Synchronisation test using UTC

(M.1371 A1/3.1.3.4.1)

Method of measurement

Set up standard test environment; chose test conditions in a way that the EUT operates in following synchronisation modes:

- *UTC direct*
- *UTC indirect (internal GNSS receiver disabled; at least one other station UTC direct synchronised)*
- *BASE direct (internal GNSS disabled; base station with UTC direct synchronisation within range)*

Check CommState Parameter SyncState in position Report and reporting rate

Required result

Transmitted Communication state shall fit the Synchronisation mode

Test details - TDMA Syncronisation			
Test item	Check	Remark	Result
Operate the EUT in an environment according to the test items and check the synchronisation state. Speed = 10 kn			
• Operate with GPS	Check that sync state is 0 (UTD direct)		Ok
	Check that report rate is 10 s		Ok
• Disable GPS by disconnection of GPS antenna,	Check that sync state is 1 (UTC indirect)		Ok
• at least one other AIS transponder with UTC direct	Check that report rate is 10 s		Ok
• GPS disabled • Remove other AIS	Check that sync state is 3 (no UTC source)	<u>Retest 21.07.03:</u> sync state is 1 (tested for about 5 min) Also after start without GPS and no other AIS sync state was 1 <u>Retest 23.07.03:</u> After start without GPS, but receiveing other unit with sync mode 3 the sync mode is 3 <u>Retest 30.07.03:</u> no change <u>Retest 31.07.03:</u> Sync state is now 3	Ok
• GPS disabled, • One base station with UTC direct within range	Check that sync state is 1 (UTC indirect)		Ok
	Check that report rate is 10 s		Ok
• GPS disabled • Remove Base station	Check that sync state is 3 (no UTC source)	<u>Retest 23.07.03:</u> Does not switch back to sync mode 3 <u>Retest 31.07.03:</u> After about 30 s EUT switches to sync mode 2, after about 3 min it switches to sync mode 3 (as required) <u>Retest 31.07.03 b:</u> switches to sync mode 3 after about 30s and back to sync mode 2 after about 1min. Then it toggles between sync mode 2 and 3 every 30 s <u>Retest 19.08.03:</u> Sync state changes to 3 about 30s after ent of msg4 (rep. rate 2s).	Ok

4.1.2 16.1.2 Synchronisation test without UTC, semaphore

(M.1371 A1/3.1.1.4)

Method of measurement

Set up standard test environment without UTC available. Let EUT operate as a sync source (semaphore) for other stations. Check CommState Parameter SyncState in position Report and reporting rate.

Required results

Transmitted CommState shall fit the Synchronisation mode.

The EUT shall increase reporting rate to 2 s when acting as a semaphore.

Test details - TDMA Syncronisation			
Test item	Check	Remark	Result
Operate the EUT in an environment according to the test items and check the synchronisation state. Speed = 10 kn			
• Operate without GPS	Check that sync state is 3		Ok
• Other Transponders all without GPS, • Semaphore 1)	Check that report rate is 2 s	Retest 30.07.03: Reporting rate is 2 s, EUT becomes semaphore	Ok

Note 1) An AIS transponder becomes semaphore, if it has the highest number of received stations. If there are more than one station with the highest number of received stations the transponder with the lowest MMSI number becomes semaphore.

4.1.3 16.1.3 Synchronisation test without UTC

(M.1371 A1/3.1.1)

Method of measurement

Set up standard test environment; chose test conditions in a way that EUT operates in following sync modes:

- BASE indirect (internal GNSS disabled; no station with UTC direct synchronisation or Base station within range,)
- Mobile indirect (internal GNSS disabled; other station with UTC direct synchronisation or Base station without range,)
- Enable internal GNSS in synchronisation modes other than UTC direct

Check CommState Parameter SyncState in position Report and reporting rate.

Required results

- Transmitted Communication state shall fit the Synchronisation mod
- Transmitted Communication state shall fit the Synchronisation mod
- Synchronisation mode shall revert to UTC direct

Test details - TDMA Syncronisation			
Test item	Check	Remark	Result
Operate the EUT in an environment according to the test items and check the synchronisation state. Speed = 10 kn			
<ul style="list-style-type: none"> • Disable GPS, • One base station without GPS within range 	Check that sync state is 2 (Base station indirect)		Ok
	Check that report rate is 10 s		Ok
<ul style="list-style-type: none"> • GPS disabled • Remove Base station 	Check that sync state is 3 (no UTC source)	Doesn't switch back to sync state 3 <u>Retest 31.07.03:</u> After 3 min EUT switches back to sync mode 3	Ok
<ul style="list-style-type: none"> • Operate without GPS • Other Transponders all without GPS, • Not semaphore 1) 	Check that sync state is 3	<u>Retest 31.07.03:</u> Doing this test after above test (base station without GPS) the EUT switched to sync mode 2 after start of other transponder using sync mode 3 <u>Retest 19.08.03 Ba:</u> EUT switch to sync state 3	Ok
	Check that report rate is 10 s		Ok
<ul style="list-style-type: none"> • Enable GPS • Other Transponders all without GPS, 	Check that sync state is 0		Ok
	Check that report rate is 10 s	Reporting rate is 2s, EUT becomes semaphore <u>Retest 31.07.03:</u> Reporting rate is 10 s, does not become semaphore	Ok

4.2 16.2 Time division (Frame format)

(M.1371 A1/3.1.2)

Method of measurement

Set the EUT to max reporting rate of 2 sec by applying a speed of >23kn and a ROT of >20%/sec. Record VDL messages and check for used slots. Check parameter slot number in CommState of position report. Check slot length (transmission time)

Required results

Slot number used and slot number indicated in CommState shall match. Slot number shall not exceed 2249. Slot length shall not exceed 26,67msec.

Test details - TDMA Syncronisation			
Test item	Check	Remark	Result
Check the data recorded in 2.4.1 “14.4.1 Speed and course change” according to the test items. Check the frames with 2 s reporting rate			
Slot number	Check that slot number used and slot number indicated in CommState match		Ok
Slot count	Check that Slot number does not exceed 2249		Ok
Slot length	Check that Slot length does not exceed 26,67 ms	End flag of position reports is at 24.4 ms	Ok

4.3 16.3 Synchronisation jitter

(M.1371 A1/3.2.2.8.4)

Definition

Synchronisation jitter (transmission timing error) is the time between nominal slot start as determined by the UTC synchronisation source and the initiation of the "transmitter on" function (T_0 see figure 3.2.2.10 in Rec. ITU-R M.1371-1).

Method of measurement

Set-up standard test environment. Set the EUT to 25 kHz bandwidth, max reporting rate of 2 sec and using

- a) UTC direct synchronisation
- b) UTC indirect synchronisation by disconnecting the GNSS antenna of the EUT.

Record VDL messages and measure the time between the nominal beginning of the slot interval and the initiation of the "transmitter on" function. Alternative methods, e.g. by evaluating the start flag and calculating back to T_0 are allowed.

Repeat the test for 12.5 kHz bandwidth.

Required results

The synchronisation jitter shall not exceed

- a) $\pm 104 \mu s$ using UTC direct synchronisation
- b) $\pm 312 \mu s$ using UTC indirect synchronisation .

Test details - Synchronisation jitter			
Test item	Check	Remark	Result
Operate device at 25 kHz bandwidth at a reporting rate of 2 s (speed = 25 kn). Check the slot start time T2 using the VDL analyser.			
UTC direct	<p>Check that T2 is in the range of 3.328 ms +/- 0.108 ms</p> <p>The measured value of the VDL analyser (in units of 10 μs) should be in the range of 330 ... 360 (RMS, inc. Tolerance of VDL analyser)</p>	<p>T2 value is in the range of 348 ... 352</p> <p>The diagram shows that the T2 value is drifting until it reaches a limit and is then adjusted to the opposite side of the 100 μs range</p>	Ok
UTC indirect	<p>Check that T2 is in the range of +/- 0.312 ms compared to the T2 value of the sync source</p> <p>The measured value of the VDL analyser (in units of 10 μs) should be in the range of +/- 31 of the measured values of the sync source</p>	T2 value is about 10 units or 100 μ s later than the T2 of the unit it is synchronised to	Ok

4.4 16.4 Data encoding (bit stuffing)

Method of measurement

Setup standard test environment.

- apply a binary broadcast message (msg 8) to the VDL containing the HEX-values "7E 3B 3C 3E 7E" in the data portion and check Presentation Interface output of EUT
- apply a BBM message to the EUT initiating the transmission of msg 8 containing the HEX-values as above in the data portion and check the VDL

Required results

Confirm that

- Data output on the presentation interface conforms to transmitted data
- transmitted VDL message conforms to data input on the Presentation Interface

The data sequence 7E 3B 3C 3E 7E is appended to an application identifier of 16 bit with the value 00 68 h (DAC = 001, FI=40). So the complete sequence is:

Data in Hex	7E 3B 3C 3E 7E
Data in 6 bit ASCII text (Table 14 of 1371)	_#,<O'
Hex including DAC/FI	00 68 7E 3B 3C 3E 7E
Coded in 6 bit ASCII (Table B-1)	06Qv>khvOP,4
Content of VDO/VDM (incl. 40 bit header)	80003sh0J7ps?3qv,0

Test details - Data encoding (bit stuffing)			
Test item	Check	Remark	Result
File name for BBM sentence is AIBBM_bin_stuffing.sst			
<u>RX of BBM message</u> Transmit msg 8 from VDL generator	Check that VDM is according transmitted data		Ok
<u>TX of BBM message</u> Apply BBM sentence to the PI	Check that VDO output of PI is according to BBM sentence		Ok
	Check with VDL analyser that VDL message is according to BBM		Ok
	Check that VDM sentence of RX is according to VDO of TX		Ok

4.5 16.5 Frame check sequence

(M.1371 A1/3.2.3)

Method of measurement

Apply a simulated position report message with wrong CRC bit sequence to the VDL.

Required results

Confirm that this message is not forwarded to the PI by the EUT.

Test details - Frame check sequence			
Test item	Check	Remark	Result
Transmit position report message from VDL generator			
Set CRC bit sequence to Ok	Check that position report is received from EUT (VDO output)		Ok
Set CRC bit sequence to false	Check that position report is not received from EUT (VDO output)		Ok

4.6 16.6 Slot allocation (Channel access protocols)

(M.1371 A1/3.3.1)

4.6.1 16.6.1 Network entry

Method of measurement

Set up standard test environment; switch on EUT. Record transmitted scheduled position reports for the first 3 frames after initialisation period. Check CommState for channel access mode

Required results

EUT shall start autonomous transmissions of msg 3 (position report) with ITDMA CommState with KeepFlag set true for first frame and msg 1 with SOTDMA CommState for consecutive frames.

Record the VDL data of the first 12 frames after switching on the EUT, 3 frames for this test and 8 frames for test 4.6.2. Generate a table and diagram from that data and check the following test items using the recorded data.

Test details – Channel access protocol			
Test item	Check	Remark	Result
Switch on EUT and record data with VDL analyser. Note the switch on time in UTC			
Transmission time	Check that first transmission of position report is within 2 min after switch on	First TX after 1min10s	Ok
Initial message type	Check that the network entry is done with msg 3		Ok
Keep flag	Check that the keep flag is set in msg 3		Ok
Slot offsets	Check that the slot offsets of msg 3 are in the range 750 +/- 75= 675 ... 825	Slot offsets are in a range of 1 ... 13 <u>Retest 23.07.03:</u> Slot offsets are in the range of 742-760	Ok
Slot use	Check that the allocated slots are used in the next frame	The allocated slots are not used. The used slots are in the correct selection interval <u>Retest 23.07.03:</u> The allocated slots are used	Ok Ok
Message type	Check that the message type is changed to 1 after initial frame		Ok
Timeout	Check that the time-out in the 2 nd frame is between 2 and 6 (decremented from initial 3..7)	Timout is between 3... 7 <u>Retest 23.07.03:</u> time-out is in the range of 25	Ok

Test details – Channel access at increased reporting rate			
Test item	Check	Remark	Result
Supply external speed data of 15 kn Switch on EUT and record data with VDL analyser.			
Initial reporting rate	Check that the EUT performs network entry with a reporting rate of 6s		Ok
Slot offsets	Check that the slot offsets of msg 3 are in the range $450 \pm 45 = 405 \dots 495$	Slot offsets are in the range of 0...15 <u>Retest 27.07.04:</u> Slot offset is Ok	Ok
Supply external speed data of 25 kn Switch on EUT and record data with VDL analyser.			
Initial reporting rate	Check that the EUT performs network entry with a reporting rate of 2 s		Ok
Slot offsets	Check that the slot offsets of msg 3 are in the range $150 \pm 15 = 135 \dots 165$	Slot offsets are in the range of 0...15 <u>Retest 27.07.04:</u> Slot offset is Ok	Ok

4.6.2 16.6.2 Autonomous scheduled transmissions (SOTDMA)

(M.1371 A1/3.3.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Record transmitted scheduled position reports msg 1 and check frame structure. Check CommState of transmitted messages for channel access mode and parameters slot timeout, slot number and slot offset

Required results

Check that nominal reporting rate is achieved $\pm 20\%$ (allocating slots in selection interval SI). Confirm that the EUT allocates new slots NTS within SI after 3 to 8min. Check that slot offset indicated in CommState matches slots used for transmission.

Test details – Autonomous scheduled transmissions (SOTDMA)			
Test item	Check	Remark	Result
Record the VDL data of 8 frames operating with autonomously scheduled transmissions. Generate a table and diagram from that data and check the following test items using the recorded data. Set the condition so that the reporting rate is 10 s.			
Reporting rate	Check that the reporting rate is 10 s, 6 msg per frame		Ok
Nominal increment and selection interval	Check that the allocated slots match the nominal and selection interval of 10 s reporting rate		Ok

Slot interval	Check that the slot intervals are in the range 375 +/- 75 = 300 ... 450		Ok
Timeout	Check that the time-out is counting from 3...7 to 0		Ok
Slots used	Check that the slots indicated in CommState match the slots used		Ok
Slots allocated at time-out 0	Check that the slots are used in the next frame Check the slot offset is 2250 +/- Selection Interval (2175...2325)		Ok
CommState sub message	Check that for time-out 3,5,7 the number of received stations is indicated		Ok
	Check that for time-out 2,4,6 the slot number is indicated		Ok
	Check that for time-out 1 the correct value of UTC is indicated	Time value is 0:0 (GPS/UTC is available) Retest 27.07.03: no change Retest 19.08.03: UTC is Ok	Ok
	Check that for time-out 0 the slot increment is indicated		Ok
Alternating channels	Check that the position reports are transmitted on alternating channels		Ok
Msg 5	Check that the channel alternating of position report is not impaired by msg 5		Ok
Others	Check the recorded data for other possibly incorrect items	In 3 successive frames the msg in the same slot has not been received	acc

4.6.3 16.6.3 Single message transmission (RATDMA)

(M.1371 A1/3.3.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode.

- Apply a 1 slot Binary Broadcast message (msg 8) to the PI of the EUT. Record transmitted messages.
- Apply combinations of Binary Broadcast message (msg 8), Addressed Binary message (msg 14), Broadcast Safety Related message (msg 6) and Addressed Safety Related message (msg 12) to the PI of the EUT. Record transmitted messages and output of the PI of the EUT.

Required results

- a) Confirm that EUT transmits this msg 8 within max. 4sec. Retry with 90% channel load.
- b) Confirm that maximum 20 slots can be used per frame for unannounced messages using RATDMA access scheme and that messages using the twenty first slot and above are rejected. Confirm that message ABK is sent with acknowledge type 2 (Message could not be broadcast) when the message is rejected.

31.07.03 Ba Test details – RATDMA transmission			
Test item	Check	Remark	Result
Apply an binary broadcast message 8 to the PI port of the EUT. File name is: AIBBM_bin.sst			
Standard test environment	Check that msg 8 is transmitted within 4 s		Ok
90 % channel load Generate channel load as described below 1.	Check that msg 8 is transmitted within 4 s	In one case the message was transmitted 3 s after the BBM command, in all other case it did not transmit. The ABK was correct, it indicated type 2 (could not transmit) in that cases when it did not transmit <u>Retest 19.08.03 Ba: Msg 4 was transmitted within 2 s</u>	Ok

19.08.03 Ba Test details – Multi RATDMA transmissions			
Test item	Check	Remark	Result
Apply more than 20 msg 6,8,12,14 to the PI port of the EUT within one frame. File name is: AIBBM_25.sst. Delay = 2 s			
Maximum transmissions per frame	Check that only 20 msg are transmitted in one frame. Msg 21 ... have to be rejected		Ok
ABK output	Check that ABK sentence is output with acknowledgement type = 2 for the rejected sentences.		Ok

4.6.4 16.6.4 Assigned operation

(M.1371 A2/3.3.6)

A fast and simple test of assigned operation has been made in paragraph 2.1.2 14.1.2 Assigned mode).

A record of the complete operation from assignment message until end of switch back to SOTDMA should be made and evaluated.

4.6.4.1 16.6.4.1 Assigned mode using reporting rates

Method of measurement

Operate standard test environment and EUT in autonomous mode. Transmit an Assigned mode command msg 16 to the EUT with:

- a) the number of reports per 10 min which is not a multiple of 20
- b) the number of reports per 10 min which is higher than 600

Required results

- a) Confirm that EUT transmits position reports message msg 2 at a report rate that corresponds to the next highest multiple of 20
- b) Confirm that EUT transmits position reports message msg 2 at a report rate of one report per second.

20.08.03 Ba Test details – Assigned Mode			
Test item	Check	Remark	Result
Send a msg 16 rate assignment with invalid offset values			
Offset value = 110 (not a multiple of 20)	Check that the reporting rate is $120/10\text{min} = 12/\text{min} = 5\text{s}$		Ok
Offset value = 1000 (> 600 msg/10 min)	Check that the reporting rate is $600/10\text{min} = 60/\text{min} = 1\text{s}$		Ok
Send a msg 16 rate assignment with EUT as second transponder in the message			
Dest. A: rate = 600 msg/10min Dest. B: rate = 120 msg/10min	Check that the EUT does reschedule to the assigned reporting rate of 120 msg/10 min = 12 msg/min = 5s		Ok
Check, that the reporting rate is increased if speed requires a higher reporting rate than that directed by the message 16.			
Apply a sensor speed input of 10 kn.			
Send a msg 16 with slot increment = 3 (225 = 6 s)	Check that slot offset is 225 slot and reporting rate is 6 s		Ok
Increase speed to 15 kn	Check that reporting rate is not changed		Ok
Increase speed to 25 kn	Check that the reporting rate is changed to 2 s	Msg type is 1, and the assigned slots are used further	Ok

4.6.4.2 16.6.4.2 Receiving test

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit an Assigned mode command (msg 16) to the EUT with:

- *slot offset and increment*
- *designated reporting rate.*

Record transmitted messages.

Required results

Confirm that EUT transmits position report msg 2 according to defined parameters and reverts to SOTDMA msg 1 with standard reporting rate after 4 to 8 min (ITU-R M.1371 A2/3.3.8.2.12).

Test details a)– Slot offset and increment			
Test item	Check	Remark	Result
Send an assignment message 16 with offset A = offset to first assigned slot = 40 and slot increment parameter = 4 (increment = 125) Within the time-out time repeat the message 16 Record VDL messages and evaluate record			
VDM output	Check VDM output of msg 16		Ok
First message	Check that first message is sent after 40 slots	There is no change of reporting rate. EUT does not switch to assigned mode <u>Retest 27.07.04:</u> no change <u>Retest 30.07.04:</u> Transmissions on channel A (channel of msg 16) is Ok, but there is no transmission on channel B. After timeout the msg type is changed back to 1, but the reporting rate is not changed back. The same slots are used further <u>Retest 31.07.04:</u> Transmission on channel B is Ok	Ok
Message type	Check that message type of position report is 2		Ok
Initialisation phase	Check that EUT starts immediately (after offset slots) with message 2		Ok
Deallocation of previously used slots	Check that the slot used before assignment are deallocated using timeout value = 0 and slot offset = 0	25.08.03 Retest Ba: The slots are not released but a new slot is allocated for the next frame but not used in that frame. The slot allocation value should be set to 0 to release the slot (see Excel sheet "SlotAssignment_4.xls") <u>Retest 29.08.03 Ba:</u> Slots are released	Ok

Alternating channels	<p>Check that position report is sent alternating on channel A and B</p> <p>Is only transmitted on channel A (channel of msg 16)</p> <p><u>Retest 19.08.03 Ba:</u> There are only 2 transmissions on channel B in the first frame after msg 16, in the following frames there are no TX on channel B</p> <p><u>Retest 25.08.03 Ba:</u> In 2 tests the usage of channel B was Ok</p> <p>Has to be confirmed by further test repetitions</p> <p><u>Retest 29.08.03 Ba:</u> In further repetitions of the test in all cases channel usage was Ok</p>	Ok
Increment	<p>Check that the increment is 125 slots</p> <p>The increment on channel A is 250</p>	Ok
Timeout	<p>Check that all slots of the first msg2 frame have the same timeout</p> <p>Different timeouts are used for the slots</p> <p><u>Retest 31.07.03:</u> Same timeout is used for all slots, in this test time-out value is 4</p>	Ok
	<p>Check that the timeout is between 3 and 7</p>	Ok
	<p>Check that the timeout is decremented after 1 min</p>	Ok
Comstate	<p>Check that the ComState is like the ComState of msg 1</p>	Ok
Switch back to autonomous mode	<p>Check that the EUT deallocates all msg 2 slots with timeout 0</p> <p>Continues using the assigned slots</p> <p><u>Retest 31.07.03:</u> Slots in the selection intervals not used for the autonomous mode are released</p> <p>The other slot are set to timeout 1</p> <p><u>Retest 25.08.03 Ba:</u> on channel 2 the slots in selection intervals required for the new reporting rate are kept for 1 further frame by keeping time-out at 1.</p> <p>The slots on channel 1 are all released.</p>	acc

<p>Check that the EUT changes slots with timeout 0 on each channel to ITDMA slot msg 3 to start autonomous mode</p>	<p><u>Retest 29.08.03 Ba:</u> Unallocated slots are used to start the new rescheduling. The last messages of the assigned mode could better be used to start the rescheduling</p>	<p>Rec</p>
<p>Check that EUT initialises autonomous mode like network entry</p>	<p>On channel 1 the autonomous mode is initialised like network entry. On channel 2 there are 3 slots kept from the previous frame and allocate new slots using msg 1 and an appropriate slot offset</p>	<p>Ok acc</p>
<p>Use of channels after switching back to autonomous mode</p>	<p><u>Retest 19.08.03 Ba:</u> In the autonomous mode there are only transmissions on Channel A, rep rate = 20 s (Ok for channel A) <u>Retest 25.08.03 Ba:</u> In all tests with assigned mode transmissions on both channels the usage of channel B in autonomous mode is Ok</p>	<p>Ok</p>

Test details b)– Rate assignment			
Test item	Check	Remark	Result
Send an assignment message 16 with offset=reporting rate of 300msg/10 min, increment=0 Within the timeout time repeat the message 16 Record VDL messages and evaluate record			
VDM output	Check VDM output of msg 16		Ok
Initialisation phase	Check that EUT starts immediately with rescheduling to the new reporting rate	There is no change of reporting rate. EUT does not switch to assigned mode <u>Retest 27.07.04:</u> message type is changed to 2 but reporting rate is not increased <u>Retest 30.07.04:</u> Ok	Ok
Message type	Check that message type of position report is 2 instead of msg 1		Ok
Reporting rate	Check that the reporting is 300 msg/10 min = 30msg/frame = 2 s		Ok
Alternating channels	Check that position report is sent alternating on channel A and B		Ok
Initialisation	Check that the Initialisation is according to changing reporting rate using msg 3 to allocate new slots		Ok
Timeout	Check that the assigned timeout is between 2 and 6	Is in the range of 3....7 <u>Retest 31.07.03:</u> Values 4 and 5 are used	Ok
Assignment repetition	Check that the timeout is extended by repetition of msg 16: Switch back is between 3 and 7 minutes after last repetition	<u>Retest 19.08.03 Ba:</u> When receiving the repetition of msg 16 the time-out of all slots of the following frame is reset to a new value. So it never reaches 0 during the assigned mode, and no reselection is possible. Therefore a slot collision would not be solved. <u>Retest 29.08.03 Ba:</u> Rate assigned mode is performed like the normal autonomous mode, except usage of msg type 2, use of assigned reporting rate and limited time Assigned mode was finished 5 minutes after last repetition	Ok
Switch back to autonomous mode	Check that the EUT reverts to normal reporting rate between 4 and 8 minutes after last msg 16	Reverts to autonomous mode about 4 minutes after last msg 16	Ok

End of assigned mode		Assigned mode is finished before first slot is decremented to 0 <u>31.07.03 Retest:</u> end of assigned mode is done like in slot assigned mode <u>Retest 19.08.03 Ba:</u> End of assigned mode is done by releasing all slots of the assigned mode when time-out reaches 0 and the autonomous mode is entered like network entry	Ok

4.6.4.3 16.6.4.3 Assignment selectivity

(M.1371 A1/3.3.6)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Check frame structure. Transmit an Assigned mode command (msg 16) to another AIS with a slot offset and increment pointing to a slot used by the EUT. Record transmitted messages.

Required results

Confirm that EUT does not allocate slots on a msg16 addressed to other stations.

30.07.03 Ba Test details)– assignment selectivity			
Test item	Check	Remark	Result
Send a message to another MMSI			
VDM output	Check that there is no VDM output of msg 16		Ok
Wrong MMSI	Check that the EUT does not change the reporting rate		Ok

4.6.4.4 16.6.4.4 Slot assignment to FATDMA reserved slots

(M.1371 A1/3.3.6)

A test to check the combined operation of msg 16 assignment to slots reserved by msg 20.

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit a Data Link Management message (msg 20) to the EUT with slot offset and increment. Transmit an Assigned Mode Command (msg 16) to the EUT and command it to use one or more of those FATDMA allocated slots. Record transmitted messages.

Required results

Confirm that EUT uses the slots commanded by msg 16 for own transmissions.

20.08.03 Ba Test details – Slot assignment to FATDMA reserved slots			
Test item	Check	Remark	Result
Send a message 20 from VDL Generator with slot offset and increment for slot reservation: Offset = 23, slots = 5, time-out = 7, incr. = 25			
Send a message 16 from VDL Generator assigning one or more of these reserved slots Offset = 25, incr. = 5 (= 75 slots)			
Rx of msg 20	Check that msg 20 has been received by EUT (VDM output)		Ok
Slot use	Check that slots assigned by the msg 16 are used by the EUT		Ok

4.6.5 16.6.5 Fixed allocated transmissions (FATDMA)

(M.1371 A1/3.3.6)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit a Data Link Management message (msg 20) to the EUT with slot offset and increment. Record transmitted messages.

Required results

Confirm that EUT does not use slots allocated by msg 20 for own transmissions until timeout of 4 to 8 min.

19.06.03 Test details – Slot assignment to FATDMA reserved slots			
Test item	Check	Remark	Result
Send a message 20 from VDL Generator with slot offset and increment for slot reservation according to the description below.			
Record VDL messages	Check that the reserved slots are not used by the EUT within a time-out of 4-8 minutes	<p>All slots are used <u>Retest: 23.07.03:</u> no change <u>Retest: 30.07.03:</u> In the first frame after msg 20 all slots are used for new allocation. In the following frames only free slots are used for allocation <u>Retest 20.08.03 Ba:</u> In the first frame after msg 20 reserved slots are also used for new allocation. Msg 5 is transmitted in a reserved slot Msg 12 is transmitted only in unreserved slots <u>Retest 25.08.03 Ba:</u> Tx of msg 5 in an free slot</p>	Acc
End of reservation	Check that after end of reservation all slots are used again.	<p>After end of reservation (time-out) only free slots are used for allocation <u>Retest 28.08.03 Ba:</u> After time-out all slots are used for allocation</p>	Ok


Test scenario: Msg 20 transmission by test system.

Msg 20 reserves slots which should not be used by mobile stations.

Msg 20 parameters:

- Msg 20 is transmitted in slot 0 in each frame
- Offset number 1: 25
- Time out 1: 3
- Number of slots: 5
- Increment: 10

FATDMA reservation

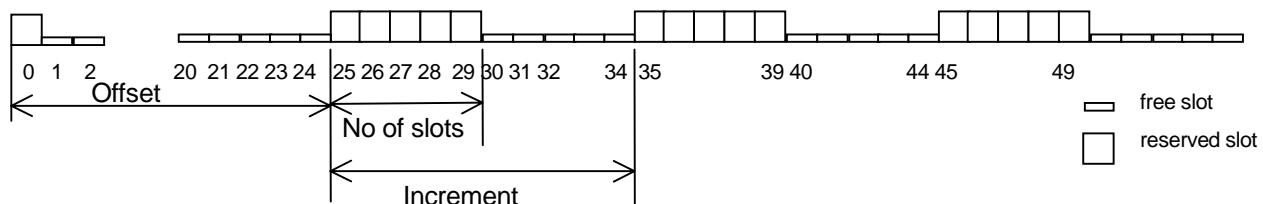

4.7 16.7 Message Formats

(M.1371 A1/3.3.7)

4.7.1 16.7.1 Received messages

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply messages according to Table 7 to the VDL. Record messages output by the PI of EUT.

Required results

Confirm that EUT outputs corresponding message with correct field contents and format via the PI or responds as appropriate.

Test details – Content of msg 1,2,3 Position report			
Test item	Check	Remark	Result
Transmit a message 1,2 or 3 from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output	Channel B could not be checked because EUT did not receive on channel B. Channel A was Ok	Ok
Fill bits	Check that value = 0		Ok
Message id	Check the field content		Ok
Repeat indicator	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
Navigational status	Check the field content		Ok
Rate of Turn	Check the field content		Ok
SOG	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
COG	Check the field content		Ok
True heading	Check the field content		Ok
Time stamp	Check the field content		Ok
RAIM flag	Check the field content		Ok
Communication state	Check the field content		
	The communication state is checked in 4.6.2 16.6.2 Autonomous scheduled transmissions (SOTDMA)		

13.06.03 Test details – Content of msg 4 Base station report			
Test item	Check	Remark	Result
Transmit a msg 4 from VDL generator.	Check the field content of the fields listed under Test item.		
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
UTC year, month, day, hour, minute, second	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Type of EPFD	Check the field content		Ok
RAIM flag	Check the field content		Ok
Communication state	Check the field content		
	The communication state is checked in 4.6.2 16.6.2 Autonomous scheduled transmissions (SOTDMA)		

Test details – Content of msg 5 Static data			
Test item	Check	Remark	Result
Transmit a message 5 from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1,2		Ok
Sequential message ident.	Check that counting from 0...9 modulo 10		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 2		Ok
Message ID	Check the field content		Ok
MMSI	Check the field content		Ok
AIS version indicator	Check the field content		Ok
IMO number	Check the field content		Ok
Call sign	Check the field content		Ok
Name of ship	Check the field content		Ok
Type of ship and cargo type	Check the field content		Ok
Reference point A,B,C,D	Check the field content		Ok
Type of EPFS	Check the field content		Ok
ETA	Check the field content		Ok
Maximum present static draught	Check the field content		Ok
Destination	Check the field content		Ok
DTE flag	Check the field content		Ok

13.06.03 Test details – Content of msg 6 Addressed binary message			
Test item	Check	Remark	Result
Transmit a message 6 from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 2 (msg length = 112 bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Sequence number	Check the field content		Ok
Destination ID (MMSI)	Check the field content		Ok
Retransmit flag	Check the field content		Ok
DAC	Check the field content		Ok
FI	Check the field content		Ok
Binary data	Check the field content		Ok

13.06.03 Test details – Content of msg 7 Binary acknowledge			
Test item	Check	Remark	Result
Transmit a message 7 from VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Sequence number 1	Check the field content		Ok
Destination ID 2 (MMSI)	Check the field content		Ok
Sequence number 2	Check the field content		Ok
Destination ID 3 (MMSI)	Check the field content		Ok
Sequence number 3	Check the field content		Ok
Destination ID 4 (MMSI)	Check the field content		Ok
Sequence number 4	Check the field content		Ok

Test details – Content of msg 8 Binary broadcast message			
Test item	Check	Remark	Result
Transmit a message 8 from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 4 (msg length = 80 bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
DAC	Check the field content		Ok
Fl	Check the field content		Ok
Binary data	Check the field content		Ok

13.06.03 Test details – Content of msg 9 SAR aircraft position report			
Test item	Check	Remark	Result
Transmit a message 9 from VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message id	Check the field content		Ok
Repeat indicator	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
Altitude	Check the field content		Ok
SOG	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
COG	Check the field content		Ok
Time stamp	Check the field content		Ok
DTE flag	Check the field content		Ok
RAIM flag	Check the field content		Ok
Communication state			
Sync state	Check the field content		Ok
Slot time-out	Check the field content		Ok
Submessage: received stations	Check the field content		Ok
Submessage: Slot number	Check the field content		Ok
Submessage: UTC	Check the field content		Ok
Submessage: Slot offset	Check the field content		Ok

13.06.03 Test details – Content of msg 10 UTC and data inquiry			
Test item	Check	Remark	Result
Transmit a message 10 from VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Msg11 response	Check for response with msg 11 if EUT is addressed		Ok
Msg11 response	No response if addressed to other station		Ok

13.06.03 Test details – Content of msg 11 UTC date response			
Test item	Check	Remark	Result
Transmit a msg 11 from VDL generator Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
UTC year, month, day, hour, minute, second	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Type of EPFD	Check the field content		Ok
RAIM flag	Check the field content		Ok

13.06.03 Test details – Content of msg 12 Addressed safety related message			
Test item	Check	Remark	Result
Transmit a message 12 from other AIS transponder or VDL generator addressed to EUT. Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0 (msg length = 138 bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Sequence number	Check the field content		Ok
Destination ID (MMSI)	Check the field content		Ok
Retransmit flag	Check the field content		Ok
Safety related text	Check the field content		Ok
Transmit a message 12 from other AIS transponder or VDL generator addressed to other AIS. Message shall not be on PI.			
Msg12 to other AIS	Check PI , no VDM		

13.06.03 Test details – Content of msg 13 Safety related acknowledge			
Test item	Check	Remark	Result
Transmit a message 13 from VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Sequence number 1	Check the field content		Ok
Destination ID 2 (MMSI)	Check the field content		Ok
Sequence number 2	Check the field content		Ok
Destination ID 3 (MMSI)	Check the field content		Ok
Sequence number 3	Check the field content		Ok
Destination ID 4 (MMSI)	Check the field content		Ok
Sequence number 4	Check the field content		Ok

13.06.03 Test details – Content of msg 14 Safety related broadcast message			
Test item	Check	Remark	Result
Transmit a message 8 from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0 (length = 144 bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Safety related text	Check the field content		Ok

13.06.03 Test details – Content of msg 15 Interrogation			
Test item	Check	Remark	Result
Transmit a message 15 from other AIS transponder or VDL generator . Response on this msg is tested under 6.3 18.2 (M.1371 A1/5.3) Interrogation responses			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 2		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Message ID 1.1	Check the field content		Ok
Slot offset 1.1	Check the field content		Ok
Message ID 1.2	Check the field content		Ok
Slot offset 1.2	Check the field content		Ok
Destination ID 2 (MMSI)	Check the field content		Ok
Message ID 2.1	Check the field content		Ok
Slot offset 2.1	Check the field content		Ok

13.06.03 Test details – Content of msg 16 Assigned mode command			
Test item	Check	Remark	Result
Transmit a message 16 from VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0 (msg length = 96 bit (1 dest.))		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID A (MMSI)	Check the field content		Ok
Offset A	Check the field content		Ok
Increment A	Check the field content		Ok
Destination ID B (MMSI)	Check the field content		Ok
Offset B	Check the field content		Ok
Increment B	Check the field content		Ok

13.06.03 Test details – Content of msg 17 GNSS binary broadcast message			
Test item	Check	Remark	Result
Transmit a msg 17 from VDL generator Check the field content of the fields listed under Test item in the respective VDM sentence.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0 (msg length = 192 bit)		Ok
Message id	Check the field content		Ok
Skource ID (MMSI)	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Message type	Check the field content		Ok
StationId	Check the field content		Ok
Zcount	Check the field content		Ok
Sequence number	Check the field content		Ok
N	Check the field content		Ok
Health	Check the field content		Ok
Correction data	Check the field content		Ok

Note that msg17 is not processed and used to correct internal position in AIS version A1 as tested.

13.06.03 Test details – Content of msg 18 Standard Class B position report			
Test item	Check	Remark	Result
Transmit a msg 18 from VDL generator. Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
SOG	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
COG	Check the field content		Ok
True Heading	Check the field content		Ok
Time stamp	Check the field content		Ok
Assigned mode flag	Check the field content		Ok
RAIM flag	Check the field content		Ok
CommState selector	Check the field content		Ok
Communication state - Selector = 0 (SOTDMA)			
Sync state	Check the field content		Ok
Slot time-out	Check the field content		Ok
Submessage: received stations	Check the field content		Ok
Submessage: Slot number	Check the field content		Ok
Submessage: UTC	Check the field content		Ok
Submessage: Slot offset	Check the field content		Ok
Communication state - Selector = 1 (ITDMA)			
Sync state	Check the field content		Ok
Slot increment	Check the field content		Ok
Number of slots	Check the field content		Ok
Keep flag	Check the field content		Ok

13.06.03 Test details – Content of msg 19 Extended Class B position report			
Test item	Check	Remark	Result
Transmit a msg 19 from VDL generator. Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
SOG	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
COG	Check the field content		Ok
True Heading	Check the field content		Ok
Time stamp	Check the field content		Ok
Name of ship	Check the field content		Ok
Type of ship and cargo	Check the field content		Ok
Dimension of ship/Refpoint A,B,C,D	Check the field content		Ok
Type of EPFD	Check the field content		Ok
RAIM flag	Check the field content		Ok
DTE flag	Check the field content		Ok
Assigned mode flag	Check the field content		Ok

13.06.03 Test details – Content of msg 20 Data link management message			
Test item	Check	Remark	Result
Transmit a message 20 from VDL generator . Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 2 (msg length = 160 bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Offset number 1	Check the field content		Ok
Number of slots 1	Check the field content		Ok
Time-out 1	Check the field content		Ok
Increment 1	Check the field content		Ok
Offset number 2	Check the field content		Ok
Number of slots 2	Check the field content		Ok
Time-out 2	Check the field content		Ok
Increment 2	Check the field content		Ok
Offset number 3	Check the field content		Ok
Number of slots 3	Check the field content		Ok
Time-out 3	Check the field content		Ok
Increment 3	Check the field content		Ok
Offset number 4	Check the field content		Ok
Number of slots 4	Check the field content		Ok
Time-out 4	Check the field content		Ok
Increment 4	Check the field content		Ok

Test details – Content of msg 21 ATON report			
Test item	Check	Remark	Result
Transmit a msg 21 from VDL generator. Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
Type of aids to navigation	Check the field content		Ok
Name of aids to navigation	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Dimension of ship/Refpoint A,B,C,D	Check the field content		Ok
Type of EPFD	Check the field content		Ok
Time stamp	Check the field content		Ok
Off position indicator	Check the field content		Ok
RAIM flag	Check the field content		Ok
Virtual/Pseudo AtoN flag	Check the field content		Ok
Assigned mode flag	Check the field content		Ok
Name of AtoN extension	Check the field content		Ok

13.06.03 Test details – Content of msg 22 Channel management			
Test item	Check	Remark	Result
Transmit a msg 22 from VDL generator. Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
Channel A	Check the field content		Ok
Channel B	Check the field content		Ok
Tx/Rx mode	Check the field content		Ok
Power flag	Check the field content		Ok
Area addressed			
Longitude of NE corner	Check the field content		Ok
Latitude of NE corner	Check the field content		Ok
Longitude of SW corner	Check the field content		Ok
Latitude of SW corner	Check the field content		Ok
Addressed or broadcast flag	Check that flag = 0		Ok
Selective addressed			
Station ID 1 (MMSI)	Check the field content		Ok
Station ID 2 (MMSI)	Check the field content		Ok
Addressed or broadcast flag	Check that flag = 1		Ok
Channel A bandwidth	Check the field content		Ok
Channel B bandwidth	Check the field content		Ok
Transitional zone	Check the field content		Ok

Message content result overview

The PI output results are an overview of the above tables of the various received messages. Response results can be derived from other tests as mentioned in the “response result” column

Message type	PI out Yes/no	PI output Result	Response required (in addition to PI output)	Response result
Msg1,2,3			No	
Msg 4			No	
Msg 5			No	
Msg 6			Tx of ackn. msg 7	(6.1.2)
Msg 7			ABK output, no further repetitions	(2.1.4.1)
Msg 8			No	
Msg 9			No	
Msg 10			Tx of msg 11 UTC/date response	Ok
Msg 11			No	
Msg 12			Tx of ackn. msg 13, Display on MKD	(6.2)
Msg 13			ABK output, no further repetitions	(2.1.4.1)
Msg 14			Display on MKD	(2.10.1)
Msg 15			Tx of requested message 3, 5	(6.3)
Msg 16			Change of TDMA mode, position report using msg 2	(4.6.4)
Msg 17			Internal GNSS receiver shall switch to differential mode (Internal GNSS receiver is not used for positioning)	N/A
Msg 18			No	
Msg 19			No	
Msg 20			Has to avoid using reserved slots	4.6.5
Msg 21			no	
Msg 22			Addition of new area to the regional area table	5.2

4.7.2 16.7.2 Transmitted messages

(M.1371 A1/3.3.7)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of messages relevant for a mobile station according to Table 7 by the EUT.

Record transmitted messages.

Required results

Confirm that EUT transmits messages with correct field contents and format or responses as appropriate.
 Confirm that messages 4, 9, 16, 17, 18, 19, 20, 21, 22 are NOT being transmitted by the EUT.

The message contents are checked using the VDL analyser

16.06.03	Test details – Message 1,2,3 Position report		
Test item	Check	Remark	Result
The message content of message 1,2,3 is checked in 2.3.1 Information content of msg 1			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
	Check that the channel field is empty (NULL) if not TX		Ok
Fill bits	Check that value = 0		Ok

16.06.03	Test details – Message 5 Static data		
Test item	Check	Remark	Result
The message content of message 5 is checked in 2.3.2 Information content of msg 5.			
Number of sentences	Check that value = 2		Ok
Check sentence number	Check that value = 1,2		Ok
Sequential message ident.	Check that counting from 0...9 modulo 10		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 2		Ok

16.06.03 Test details – Content of msg 6 Addressed binary message			
Test item	Check	Remark	Result
This test can be done in combination with test 2.1.4.1 14.1.4.1 Transmit an addressed message Apply PI sentence: File AIABM_bin.sst Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 2 (msg length = 112 bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Sequence number	Check the field content	The sequence number is incremented when a ABM command is repeated with the same sequence number. It should be always taken from the ABM sentence <u>Retest 22.07.03:</u> The sequence number is taken from the ABM sentence.	Ok
Destination ID (MMSI)	Check the field content		Ok
Retransmit flag	Check the field content		Ok
DAC	Check the field content		Ok
FI	Check the field content		Ok
Binary data	Check the field content		Ok

19.06.03 Test details – Content of msg 7 Binary acknowledge			
Test item	Check	Remark	Result
This test can be done in combination with test 6.1.2 18.1.2 Acknowledgement			
Message 6 has to be transmitted by other AIS or VDL generator			
Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Sequence number 1	Check the field content		Ok
Destination ID 2 (MMSI)	Omitted		
Sequence number 2	Omitted		
Destination ID 3 (MMSI)	Omitted		
Sequence number 3	Omitted		
Destination ID 4 (MMSI)	Omitted		
Sequence number 4	Omitted		

19.06.03 Test details – Content of msg 8 Binary broadcast message			
Test item	Check	Remark	Result
This test can be done in combination with 6.4 18.3 Broadcast messages			
Apply PI sentence: File AIBBM_bin.sst			
Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1	Does not transmit broadcast message <u>Retest 23.07.03:</u> Broadcast is transmitted now	Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 4 (msg length = 80 bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
DAC	Check the field content		Ok
FI	Check the field content		Ok
Binary data	Check the field content		Ok

19.06.03 Test details – Content of msg 10 UTC and date inquiry			
Test item	Check	Remark	Result
activate transmission of msg 10 if implemented (not required)			
		Not required Not implemented	

19.06.03 Test details – Content of msg 11 UTC date response			
Test item	Check	Remark	Result
Transmit a msg 10 from VDL generator to request transmission of msg 11 by EUT Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message id	Check the field content		Ok
User ID (MMSI)	Check the field content		Ok
UTC year, month, day, hour, minute, second	Check the field content		Ok
Position accuracy flag	Check the field content		Ok
Longitude	Check the field content		Ok
Latitude	Check the field content		Ok
Type of EPFD	Check the field content	Type of EPFD is always 0. Should be 1 according to the Talker ID "GP" Retest 24.07.03: Type of EPFD is Ok now	Ok
RAIM flag	Check the field content		Ok

19.06.03 Test details – Content of msg 12 Addressed safety related message			
Test item	Check	Remark	Result
This test can be done in combination with test 2.1.4.1 14.1.4.1 Transmit an addressed message Apply PI sentence: File AIABM_safety.sst Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1	Does not transmit msg 12. An ABK sentence is output indicating type 2 (message could not be broadcast) After restart of EUT the message has been transmitted	Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0 (msg length = 96bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Sequence number	Check the field content		Ok
Destination ID (MMSI)	Check the field content		Ok
Retransmit flag	Check the field content		Ok
Safety related text	Check the field content		Ok

19.06.03 Test details – Content of msg 13 Safety related acknowledge			
Test item	Check	Remark	Result
This test can be done in combination with test 6.1.2 18.1.2 Acknowledgement Send message 12 from other transponder or VDL generator Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1		Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Sequence number 1	Check the field content		Ok
Destination ID 2 (MMSI)	Ommitted		
Sequence number 2	Ommitted		
Destination ID 3 (MMSI)	Ommitted		
Sequence number 3	Ommitted		
Destination ID 4 (MMSI)	Ommitted		
Sequence number 4	Ommitted		

19.06.03 Test details – Content of msg 14 Safety related broadcast message			
Test item	Check	Remark	Result
This test can be done in combination with 6.4 18.3 Broadcast messages Apply PI sentence: File AIBBM_safety..sst Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1	No transmission and no ABK output <u>Retest 23.07.03: Ok</u>	Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 2 (length = 64 bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Safety related text	Check the field content		Ok

Test details – Content of msg 15 Interrogation			
Test item	Check	Remark	Result
This test can be done in combination with 6.3 18.2 (M.1371 A1/5.3) Interrogation responses Apply PI sentence: File AIAIR_35_5_bin.sst Check the field content of the fields listed under Test item.			
Number of sentences	Check that value = 1	Does not transmit msg 15. An ABK sentence is output indicating type 2 (message could not be broadcast) After restart it transmitted the message 15	Ok
Check sentence number	Check that value = 1		Ok
Sequential message ident.	Check that field is empty (NULL)		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 2 (msg length = 160 bit)		Ok
Message ID	Check the field content		Ok
Source ID (MMSI)	Check the field content		Ok
Destination ID 1 (MMSI)	Check the field content		Ok
Message ID 1.1	Check the field content		Ok
Slot offset 1.1	Check the field content = 0		Ok
Message ID 1.2	Check the field content		Ok
Slot offset 1.2	Check the field content = 0		Ok
Destination ID 2 (MMSI)	Check the field content		Ok
Message ID 2.1	Check the field content		Ok
Slot offset 2.1	Check the field content = 0		Ok

5 17 Specific tests of Network Layer

(7.4)

5.1 17.1 Dual channel operation

(M.1371 A1/4.1)

5.1.1 17.1.1 Alternate transmissions

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode on default channels AIS1, AIS2. Record transmitted scheduled position reports on both channels. Check CommState for slot allocation.

Required results

Confirm that EUT allocates slots in both channels alternating. Repeat check for data link access period.

Test details – Alternate transmissions			
Test item	Check	Remark	Result
Set-up EUT in autonomous mode, set report rate to 10sec with external sensor input. Record transmitted scheduled position reports on both channels. Check Comm State for slot allocation.			
Alternate transmissions	Check that the EUT transmission is alternating		Ok
Comm state	Check that the slots of each channel are allocated on the same channel		Ok
Same test on network entry (data link access period)			
Alternate transmissions	Check that the EUT transmission is alternating		Ok
Comm state	Check that the slots of each channel are allocated on the same channel	Slot allocation value in msg 3 is not correct <u>Retest 23.07.03:</u> Slot allocation value in msg 3 is correct now	Ok

5.2 17.2 Regional area designation by VDL message

(M.1371 A1/4.1))

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply Channel management messages (msg 22) to the VDL defining two adjacent regional areas 1 and 2 with different channel assignments for both regions and a transitional zone extending 4nm either side of the regional boundary. At least one channel shall be 12.5kHz channel. Let the EUT approach region 1 from outside region 2 more than 5 nm away from region boundary transmitting on default channels. Record transmitted messages on all 6 channels.

Region	Primary channel	Secondary channel
Region 1	CH A1	CH B1
Region 2	CH A2	CH B2
Default region	AIS 1	AIS 2

Required results

Check that the EUT transmits and receives on the primary channels assigned for each region alternating channels and doubling reporting rate when passing through the transitional zones. EUT shall revert to default autonomous operation on the regional channels after leaving the transitional zones.

Item	Area	Channels in use
1	default region	AIS1, AIS2
2	first transitional zone	AIS1, CH A 2
3	region 2	CH A 2, CH B 2
4	second transitional zone	CH A 2, CH A 1
5	region 1	CH A 1, CH B 1

This Test is devided in 2 parts:

- The first part checks the general behaviour including check of ACA and TXT output, check of the borders of area an transitional zone, check of the correct frequency use.
- The second part concentrates on the slot allocation and use during a transition from one area (high sea) into another.

25.07.03 Ba Test details part 1 – Channel management by VDL msg 22			
Test item	Check	Remark	Result
Set-up EUT in autonomous mode transmitting on channel AIS1/AIS2, send 2 Msg 22 by VDL generator, defining 2 adjacent areas with channels A1, B1 and A2, B2. Use external sensor input to simulate a voyage through both areas. Set transitional zone to 4nm. Set the position outside the areas. "TZ" is used for "transitional zone"			
Set the positions near the limits of the transitional zones to check the dimensions			
PI output	Check that the msg 22 are output on PI		Ok
Display of defined area	Check that the defined area is correctly stored (displayed on MKD)	Areas are not stored Test is done by areas defined by ACA message Retest 25.07.03: Areas by msg 22 are stored now	Ok
	Check ACA and TXT output on PI (not required but recommended.)	TXT output Ok., ACA of the actually used area is output. We recommend to output (also) the area which is supplied by msg 22	rec
Test Report No.. 734.2/0050/2003 / S3220	print date: 07.10.03	page 131	of 229

	ACA: check in use flag and time of in use flag		Ok
<u>Item 1:</u> In high sea area	Check that channels AIS1 and AIS2 are in use		Ok
<u>Item 2:</u> Move position into outer TZ of region 2	Check ACA and TXT output (No required)	TXT output and ACA output of the area ,	Ok
	If ACA output: check in use flags and time of in use flag	Use flag is set to 1 and time is Ok	Ok
	Check the limit of the TZ (5 nm = 8.8 minutes)		Ok
	Check that channel AIS 1 and A2 are used		Ok
	Check that reporting rate is doubled		Ok
<u>Item 3:</u> Move position into inner TZ of region 2 (crossing the area border)	Check ACA and TXT output (Required)	TXT and 2 ACA outputs (High sea and R2)	Ok
	ACA: check in use flags and time of in use flag	In use flag of High sea and area 2 are set, time is Ok	Ok
	Check the border of area		Ok
<u>Item 4:</u> Move position into region 2 (out of TZ)	Check ACA and TXT output (not required)	TXT output and ACA of High sea area, in use flag set to 0	Ok
	Check the limit of the TZ (4 nm = 7 minutes)		Ok
	Check that channel A2 and B2 are used		Ok
	Check that reporting rate is changed back to normal reporting rate		Ok
<u>Item 5:</u> Move position into TZ between region 1 and 2, inside area 2	Check that channels A2 and A1 are used	There is an ACA output of R1 with in use flag set	Ok
	Check that reporting rate is doubled		Ok
<u>Item 6:</u> Move position into area 1 (inside the TZ) (crossing the area border)	Check ACA and TXT output (Required)	2 ACA messages are output, R1 and R4 with in use flag set	Ok
	Check the border of area		Ok
<u>Item 7:</u> Move position into region 1 (out of TZ)	Check that channels A1 and B1 are used		Ok
	Check the limit of the TZ (4 nm = 7 minutes)		Ok
	Check that reporting rate is changed back to normal reporting rate		Ok
<u>Item 8:</u> Move position into TZ of region 1 to high sea	Check that channels A1 and AIS1 are used		Ok
	Check that reporting rate is doubled		Ok
Move position out of the TZ of region 1, into high sea	Check that channels AIS1 and AIS2 are used		Ok

	ACA: check in use flags and time of in use flag		Ok
	Check that reporting rate is changed back to normal reporting rate		Ok

Because the VDL analyser can receive on 2 channels only the test is done 2 times,

- 1 test with receivers set to the old frequencies
- 1 test with receivers set to the new frequencies

The results are logged and shown in 2 diagrams for evaluation. Main scope of this test is the correct slot allocation and use on the different channels.

30.07.03 Ba Test details part 2 – Channel management by VDL msg 22			
Test item	Check	Remark	Result
The same area and movement is used as in test part 1.			
Set the RX channels in the first test to the channels as indicated at the test items (run 1)			
Set the Rx channels in the second test to the channels as indicated at the test items (run 2)			
The test results should be evaluated from both recordings			
<u>Item 1:</u> In high sea area (run 2: channel A = AIS1, change channel B to A2)	Record 1 frame in run 1 and 2 frames in run 2 (1 on the old channels and 1 on the new channels)		
	Check that channels AIS1 and AIS2 are in use		Ok
<u>Item 2:</u> Move position into transitional area of region 2, first frame after transition	Check that EUT continues TX on AIS1 and AIS2 for 1 frame		Ok
	Check that EUT releases the slots on AIS2 by msg 1 with time-out 0 and no slot offset		Ok
	Check that channel AIS 1 and A2 are used for Rx		Ok
<u>Item 3:</u> In outer transitional area of region 2, next frames after transition (run 1: channel A = AIS1, change channel B to A2)	Check allocation of additional slots on channel A (AIS1) using msg 3		Ok
	Check complete slot allocation on channel B (A2) using msg 3		Ok
	Check that channel AIS 1 and A2 are used for Tx		Ok
	Check that channel AIS 1 and A2 are used for Rx		Ok
	Check that reporting rate is doubled		Ok
	Check that msg on AIS1 are output on PI (VDM/VDO) as channel A and A2 as channel B		Ok

<u>Item 4:</u> Move into inner transitional area of region 2, crossing the area border, (run 2: change channel A to A2 and channel B to B2)	Check that msg on AIS1 are output on PI (VDM/VDO) as channel B and A2 as channel A (channels reverted)		Ok
<u>Item 5:</u> Move position into the area of region 2 (out of TZ), first frame after transition	<p>Check that EUT continues TX on AIS1 and A2 for 1 frame</p> <p>Check that EUT releases all slots on AIS1 by msg 1 with time-out 0 and no slot offset</p> <p>Check that EUT releases every second slot on channel A2 by msg 1 with time-out 0 and no slot offset (for reversion to normal reporting rate)</p>	<p>Retest 20.08.03 Ba: Releasing the slots is done with a delay of 1 frame</p> <p>Retest 20.08.03 Ba: Slots are released on channel B2, not on A2</p> <p>Retest 25.08.03 Ba: Every 2nd slot is released on channel A2</p>	Ok acc
	Check that channel A2 and B2 are used for Rx	<p>Retest 20.08.03 Ba: For each Rx on channel A there are 2 VDM outputs, with channel A and B, same for each Rx on channel B</p> <p>Retest 25.08.03 Ba: No change</p> <p>Retest 01.09.03 Ba: PI output of Rx on channel A and B is Ok</p>	Ok
<u>Item 6:</u> Inside area of region 2, next frames after transition (run 1: change channel A to A2 and channel B to B2)	<p>Check allocation of Slots on channel B (B2) using msg 3</p> <p>Check that channels A2 and B2 are used for Tx</p>	<p>It seems that the channel usage at leaving TZ and entry into the area is incorrect, has to be rechecked</p> <p>Retest 20.08.03 Ba: Slots are allocated on channel A2 only</p> <p>Retest 25.08.03 Ba: Slots are allocated on channel B2</p>	Ok

	<p>Check that channel A2 and B2 are used for Rx</p>	<p><u>Retest 20.08.03 Ba:</u> For each Rx on channel A there are 2 VDM outputs, with channel A and B, same for each Rx on channel B After a restart at the same position it was Ok, on VDM for each RX with the correct channel. So it seem not to be a RF problem (crosstalk ...). <u>Retest 25.08.03 Ba:</u> No change <u>Retest 01.09.03 Ba:</u> PI output of Rx on channel A and B is Ok</p>	
	<p>Check that reporting rate is back to normal reporting rate</p>		Ok
	<p>Check that msg on A2 are ouput on PI (VDM/VDO) as channel A and B2 as channel B</p>		Ok

5.3 17.3 Regional area designation by serial message

(M.1371 A1/4.1.3)

Repeat test 17.2 using ACA serial message for channel assignment.

Test details – Channel management by ACA sentence on PI			
Test item	Check	Remark	Result
Set-up EUT in autonomous mode transmitting on channel AIS1/AIS2, send 2 ACA sentences to the PI , defining 2 adjacent areas with channels A1, B1 and A2, B2. Use external sensor input to simulate a voyage through both areas. Set transitional zone to 1nm. Set the position outside the areas.	Areas are in SW quadrant. File name is AIACA_Region_17_3_SW.sst Set the positions near the limits of the transitional zones to check the dimensions		
Display of defined area	<p>Check that the defined area is correctly stored (displayed on MKD)</p> <p>Check ACA and TXT output on PI (not required but recommended).</p>	<p>TXT output Ok., ACA of the actually used area is output. We recommend to output (also) the area which is supplied by msg 22</p>	Ok rec
<u>Item 1:</u> In high sea area	Check that channels AIS1 and AIS2 are in use		Ok

<u>Item 2:</u> Move position into outer TZ of region 2	Check ACA and TXT output (No required)	Output of TXT and ACA of area	Ok
	Check the limit of the TZ (5 nm = 8.8 minutes)	The limit of the area is used, not the limit of the default area. See note) <u>Retest 25.08.03 Ba:</u> A TZ size of 5 nm miles is used	Ok
	Check that channel AIS 1 and A2 are used		Ok
	Check that reporting rate is doubled		Ok
<u>Item 3:</u> Move position into inner TZ of region 2 (crossing the area border)	Check ACA and TXT output (Required)	TXT and ACA output	Ok
	Check the border of area		Ok
<u>Item 4:</u> Move position into region 2 (out of TZ)	Check ACA and TXT output (not required)	TXT and ACA output of High see (in use flag = 0)	Ok
	Check the limit of the TZ (2 nm = 2.3 minutes)		Ok
	Check that channel A2 and B2 are used		Ok
	Check that reporting rate is changed back to normal reporting rate		Ok
<u>Item 5:</u> Move position into TZ between region 1 and 2, inside area 2	Check that channels A2 and A1 are used	At a 30°30S and between 11°57.8 W and 1158.8 the channels A2 (Ok) and AIS1 (nok) are used That means: in the range between the TZ size of area 2 (2nm) and the TZ size of area 1 (1 nm) the default channel AIS1 is used <u>Retest 25.08.03 Ba:</u> Channel A1 and A2 are used	Ok
	Check that reporting rate is doubled		Ok
<u>Item 6:</u> Move position into area 1 (inside the TZ) (crossing the area border)	Check ACA and TXT output (Required)		Ok
	Check the border of area		Ok
<u>Item 7:</u> Move position into region 1 (out of TZ)	Check that channels A1 and B1 are used		Ok
	Check the limit of the TZ 1 nm = 1.15 minutes)	The TZ of area 2 (2 nm) is used instead the TZ of area 1 (1 nm) as required <u>Retest 25.08.03 Ba:</u> The TZ size of area 1 (1 nm) is used	Ok
	Check that reporting rate is changed back to normal reporting rate		Ok

<u>Item 8:</u> Move position into TZ of region 1 to high sea	Check that channels A1 and AIS1 are used		Ok
	Check that reporting rate is doubled		Ok
Move position out of the TZ of region 1, into high sea	Check that channels AIS1 and AIS2 are used		Ok
	Check the limit of the TZ (5 nm = 8.8 minutes)	The limit of the area is used, not the limit of the default area. See note) <u>Retest 25.08.03 Ba:</u> A TZ size of 5 nm miles is used	Ok
	Check that reporting rate is changed back to normal reporting rate		Ok

Note) In the Rec. M.1371 it is not very clearly defined which transitional zone size should be used outside an area.

In the “IALA guidelines on the Universal Automatic Identification System (AIS)”, Ed. 1.1 it is shown in §18.1.4, Figure 19.2 that outside the area the default value of 5 nm transitional zone size should be used.

The TZ size of an area is valid only inside this area.

5.4 17.4 Power setting

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit channel management message (msg 22) defining output power high/low.

Repeat test using ACA and manual input.

Required result

Check that EUT sets output power as defined.

Test details – Power setting by msg 22			
Test item	Check	Remark	Result
The EUT has to be in an area with regional operating settings and the channels as used in the following msg 22. Transmit a msg 22 from VDL generator like the following: 22,0,2345,0,2086,1086,0,1,[MMSI(MSB)], [MMSI(LSB)],1,0,0,,0			
Channel switch	Check that the EUT doesn't switch channels		Ok
Power low	Check that the transmitting power is changed from high to low	The evaluation of the power flag in msg 22 is reversed: Power flag = 0: low power Power flag = 1: high power ITU-R M1371 §3.3.8.1.18 (msg 22) requires: Power flag = 0: default (high) Power flag = 1: low power <u>21.08.03 Retest Ba</u> : power level is Ok	Ok
MKD	Check the low power settings are displayed on MKD	Power display is according to the actually used power	Ok
Transmitt the same message 22, but power setting to 0 = high power			
Power high	Check that EUT reverts to high power	Power level is reversed <u>21.08.03 Retest Ba</u> : power level is Ok	Ok

22.07.03 Ba Test details – Power setting by ACA			
Test item	Check	Remark	Result
Apply the following message at PI: File name = AIACA_region_in_ch86.sst. Set power flag to 1 = low power and channels to actually used channels			
Power low	Check that the transmitting power is changed from high to low		Ok
MKD	Check the low power settings are displayed on MKD		Ok
Transmitt the same ACA sentence, but power setting to 0 = high power			
Power high	Check that EUT reverts to high power		Ok

21.08.03 Ba Test details – Power setting by manual input			
Test item	Check	Remark	Result
Set the power level of the region in use to low power, Don't change the channels			
Power low	Check that the transmitting power is changed from high to low		Ok
Set power level back to high power.			
Power high	Check that EUT reverts to high power		Ok

5.5 17.5 Message priority handling

(M.1371 A1/4.1.8)

Method of measurement

Set-up standard test environment and operate test equipment with 90% channel load. Set the EUT to max reporting rate of 2 sec by applying a speed of >23kn and a ROT of >20°/sec. Record VDL messages and check for used slots. Initiate the transmission of two 5 slot messages (msg 12 and msg 8) by the EUT. Record transmitted messages on both channels.

Required results

Check that EUT transmits the messages in correct order according to their priority (ITU-R M.1371 A/3.3.8.1 table 13).

This test is modified in that way that first a BBM sentence is sent to make the EUT busy with a transmission process. Then the 2 test sentences with msg 8 and msg 12 are applied.

Otherwise the EUT has already started the transmission process of the first msg, has allocated slots or even has already transmitted the msg before the input of the ABM sentence with the msg 12 has been completed. In this case it would not be possible to transmit the msg 12 first.

Test details – Message priority handling			
Test item	Check	Remark	Result
Simulate a channel load of 90% on both channels, set reporting rate to 2 s Apply an BBM sentence with msg 8 and immediately following an ABM sentences with msg 12 to the PI port. File name is AIBBM_ABMM_17_5.sst Check transmissions by VDL analyser.			
Transmission order	Check that msg 12 is transmitted first because of higher priority	The msg12 is transmitted before the first of the 2 msg 8	Ok

5.6 17.6 Slot reuse (link congestion)

(M.1371 A1/4.4)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Transmit a Data Link Management message (msg 20) to the EUT with slot offset and increment to allocate slots for a base station. Assure that at test receiver location the signal level received from EUT exceeds the signal level received from test transmitter. Record transmitted messages and check frame structure. Set up additional test targets to simulate a VDL load of >90% until slot reuse by EUT is observed.

Required results

Check that the nominal reporting rate for Position Report msg 1 is achieved $\pm 10\%$ (allocating slots in selection interval SI) under link congestion conditions. Confirm that the slot occupied by the most distant station (within selection interval) is used by the slot reuse algorithm.

Check that a station is not subject to slot reuse more than once a frame. Check that slots allocated by a local base station are not subject to slot reuse.

Used test procedure:

In one frame 2 blocks of 60 targets in consecutive slot are transmitted. To avoid problems by system overloading every 10th slot is not used. One block is transmitted at the beginning of the frame and one at the middle.

The EUT is set to 2 s reporting rate. So the 1st and the 15th selection interval is covered by these transmissions of the same targets.



The gray area is covered by targets, the red area is the selection interval.

The targets are numbered from 1 to 60 and transmitted in the order of the IDs. They are divided into 2 groups:

- The even numbered targets have a low distance,
- the odd numbered targets have a high distance to the EUT

In addition 4 slots within the selection intervals are reserved by a message 20.

This test has to be run for at least 30 minutes to observe a sufficient number of slot allocations (every 3-8 min). The selected slots of selection interval 1 and 15 at timeout have to be checked.

Test details – Slot reuse			
Test item	Check	Remark	Result
This test can be done as described before.			
Reporting rate, use of selection interval	Check that the slots are selected within the SI		Ok
Slot reuse	<p>Check that only the slots of odd numbered targets are used</p> <p>The EUT uses the same slots all the time. The slots should be randomly selected out of a group of at minimum 4 candidate slots</p> <p>In addition the slot of 1 near target is used. The reason may be that the slot has been selected before the target has been received (free slot) and did not change in the following slot reuse condition</p> <p><u>Retest 30.07.03:</u> no change</p> <p><u>21.08.03 Retest Ba:</u> Slots of near and distant targets are used.</p> <p>(14 selections of distant and 9 selections of near targets)</p> <p><u>25.08.03 Retest Ba:</u> Slots of near and distant targets are used.</p> <p>(14 selections of distant and 5 (6) selections of near targets)</p> <p><u>Retest 28.08.03 Ba:</u></p> <p>Only selections of distant targets</p>		Ok
	<p>Check that a the slot of a target is not used twice in a frame</p> <p>Could not be tested because slots did not change</p> <p><u>21.08.03 Retest Ba:</u> In 2 of 4 cases a target is selected 2 times for slot reuse in 1 frame</p> <p><u>25.08.03 Retest Ba:</u> In 3 of 6 cases a target is selected 2 times in 1 frame for slot reuse</p> <p><u>Retest 28.08.03 Ba:</u></p> <p>No slots used more than once in a frame</p>		Ok
Reserved Slot	Check that slots reserved by msg 20 are not used	The test of use of reserved slots is done in 16.6.5 Fixed allocated transmissions (FATDMA)	

5.7 17.7 Management of received regional operating settings

(7.4.1)

5.7.1 17.7.1 Test for replacement or erasure of dated or remote regional operating settings

(7.4.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Send a valid regional operating setting to the EUT by msg 22 with the regional operating area including the own position of the EUT. Consecutively send a total of seven (7) valid regional operation settings to EUT, using both msgs 22 and DSC telecommands, with regional operating areas not overlapping to the first and to each other. Perform the following in the order shown:

- a) Send a ninth msg 22 to the EUT with valid regional operating areas not overlapping with the previous eight regional operating areas.
- b) Step 1: Set own position of EUT into any of the regional operating areas defined by the second to the ninth telecommands sent to the EUT previously.
Step 2: Send a tenth telecommand to the EUT, with a regional operating area which partly overlaps the regional operating area to which the EUT was set by Step 1 but which does not include the own position of the EUT.
- c) Step 1: Move own position of EUT to a distance of more than 500 miles from all regions defined by previous commands.
Step 2: Consecutively set own position of EUT to within all regions defined by the previous telecommands.

Required results

After the initialization, the EUT should operate according to the regional operating settings defined by the first msg 22 sent.

- a) The EUT shall return to the default operating settings.
- b) Step 1: Check that the EUT changes its operating settings to those of that region which includes own position of the EUT.
Step 2: Check that the EUT reverts to the default operating settings.
Note: Since the regional operating settings to which the EUT was set in Step 1 shall be erased due to Step 2, and since there is no other regional operating setting due to their non-overlapping definition, the EUT shall return to default.
- c) Step 1: Check that the EUT operates with the default settings.
Step 2: Check that the EUT operates with the default settings.

18.08.03 Ba Test details – Test of replacement or erasure of dated or remote regional operating settings			
Test item	Check	Remark	Result
The following check of area entries can be done by MKD or by request of ACA			
Send by ACA <ul style="list-style-type: none"> • 1 area including own position • 7 areas not overlapping, not including own position File name: AIACA_8_regions_17_7_1.sst	Check that area 1...7 are displayed on MKD		Ok
	Check that all 8 areas are output on PI after request by sentence xxAIQ,ACA		Ok
a) Send a 9. msg 22 to the EUT	Check that the first area is deleted		Ok
	Check that the EUT returns to the default operating settings		Ok
b) step 1: Set own position to one of the 7 areas	Check that the EUT changes its operating settings according to that region		Ok
b) step 2: Send an area overlapping the area of step 1 not including own position	Check the overlapped area is deleted and replaced by the new one		Ok
	Check that the EUT reverts to the default operating settings		Ok
d) <u>Erasure by distance:</u> Move own position of EUT to a distance of more than 500 miles from all regions defined by previous commands	Check that all areas are deleted		Ok
<u>Check of erasure:</u> Set own position of EUT to within all regions defined by the previous telecommands.	Check that the EUT operates with the default settings because the areas are deleted		Ok

5.7.2 17.7.2 Test of correct input via Presentation Interface or MKD

(7.4.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Perform the following tests in the following order:

- a) *Send msg 22 or a DSC telecommand with valid regional operating settings to the EUT with a regional operating area, which contains the current position of own station.*
- b) *Input a different, valid regional operating setting via the MKD.*

- c) Send a different regional operating setting with a regional operating area which partly overlaps the regional operating area input via the MKD to the EUT via the Presentation Interface in the previous step, and which contains the present position of own station.
- d) Input the default operating settings via the MKD for the regional operating area, which was received by the previous command via the Presentation Interface.
- e) Send msg 22 or a DSC telecommand with a different regional operating setting to the EUT with a regional operating area, which contains current position of own station.
- f) Within two hours, after e), send a different regional operating setting to the EUT via Presentation Interface with a valid regional operating area overlapping the regional operating area sent to the EUT by msg 22 or a DSC telecommand.

Required results

- a) Confirm that the EUT uses the regional operating settings commanded by msg 22 or DSC telecommand.
- b) Step 1: Confirm that the regional operating settings of the previous msg 22 or DSC telecommand are displayed to the user on the MKD for editing.

Step 2: Check, that the EUT allows the user to edit the displayed regional operating settings. Check, that the EUT does not accept incomplete or invalid regional operating settings. Check, that the EUT accepts a complete and valid regional operating setting.

Step 3: Check, that the EUT prompt the user to confirm the intended change of regional operating settings. Check, that the EUT allows the user to return to the editing menu or to abort the change of the regional operating settings.

Step 4: Check, that the EUT uses the regional operating settings input via the MKD.

- c) Check, that the EUT uses the regional operating settings received via the Presentation Interface.
- d) Check, that the EUT accepts the default operating settings for the regional operating area received in c). Check, that the EUT uses the default operating settings.
- e) Check, that the EUT uses the regional operating settings commanded to it by msg 22 or DSC telecommand.
- f) Check, that the EUT does not use the regional operating setting commanded to it via the Presentation Interface.

18.08.03 Ba Test details – Correct input via Presentation Interface or MKD			
Test item	Check	Remark	Result
Send msg 22 with same settings as in 17.2 Channel management, set position of own ship into this area			
a) Use of settings	Confirm that the EUT uses the regional operating settings commanded by msg 22		Ok
b) MKD input	Step 1: Confirm that the regional operating settings of the previous msg 22 is displayed to the user on the MKD for editing.		Ok
Entering new area by MKD			

	<u>Step 2:</u> Check, that the EUT allows the user to edit the displayed regional operating settings.		Ok
	Check, that the EUT does not accept incomplete or invalid regional operating settings.		Ok
	Check, that the EUT accepts a complete and valid new regional operating setting.		Ok
	<u>Step 3:</u> Check, that the EUT prompt the user to confirm the intended change of regional operating settings		Ok
	Check, that the EUT allows the user to return to the editing menu or to abort the change of the regional operating settings.	If the user doesn't confirm the new setting it jumps to the display of the actually active area, and all changes are lost. We recommend to go back to the area being edited to be able to continue editing	rec
Move position inside the new area	<u>Step 4:</u> Check, that the EUT uses the regional operating settings input via the MKD.		Ok
c) New area by ACA Input a new area via PI (ACA sentence) overlapping area of b), position inside	Check, that the EUT uses the regional operating settings received via PI	The area entered by MKD is not deleted, and 1 channel of the manual area and 1 channel of the area entered by PI are used. <u>Retest 25.08.03 Ba:</u> The area of item c) is deleted and replaced by the new area entered using ACA sentence.	Ok
d) Default settings via MKD Input the default operating settings via the MKD for the regional operating area of c)	Check, that the EUT accepts the default operating settings for the regional operating area		Ok
	Check, that the EUT uses the default operating settings		Ok
e) Area setting by VDL Send message 22 with a different regional operating setting to the EUT with a regional operating area, which contains current position of own station	Check, that the EUT uses the regional operating settings commanded to it by message 22		Ok
f) Priority of VDL msg Rejection of a shipborne (ACA) regional operating setting when overlapping a setting from base station not older than 2 hours (Clarifications to 1371, 2.54 paragraph 4	Check, that the EUT does not accept the regional operating setting commanded to it via the Presentation Interface.	The new area applied by ACA is accepted and stored in addition to the msg sent by VDL msg 22. So 2 overlapping areas are stored <u>Retest 25.08.03 Ba:</u> Area applied by ACA is not accepted	Ok

5.7.3 17.7.3 Test of addressed telecommand

(7.4.1)

Method of measurement

Set-up a standard test environment and operate EUT in autonomous mode. Perform the following tests in the following order:

- a) Send msg 22 or a DSC telecommand with valid regional operating settings, that are different from the default operating settings, to the EUT with a regional operating area, which contains the current position of own station.
- b) Send an addressed msg 22 or an addressed DSC telecommand to the EUT with different regional operating settings than the previous command.
- c) Move the EUT out of the regional operating area defined by the previous addressed telecommand into an area without regional operating settings.

Required results

- a) Check, that the EUT uses the regional operating settings commanded to it in a).
- b) Check, that the EUT uses the regional operating settings commanded to it in b).
- c) Check, that the EUT reverts to default.

Test details – Test of addressed telecommand			
Test item	Check	Remark	Result
a) Send msg 22 with valid regional operating settings, with a regional operating area, which contains the current position of own station.	Check, that the EUT uses the regional operating settings commanded to it		Ok
b) Send an addressed DSC msg to the EUT with different regional operating settings	Check, that the EUT uses the regional operating settings commanded to it	The channels of the DSC message are used, but not stored in the area definition <u>Retest 25.08.03 Ba: New channel setting is stored in the area setting list.</u>	Ok
b) Send an addressed msg 22, addressed as ID 2 , to the EUT with different regional operating settings	Check, that the EUT uses the regional operating settings commanded to it	The channels of the msg 22 are used, but not stored in the area definition <u>Retest 25.08.03 Ba: New channel setting is stored in the area setting list.</u>	Ok
c) Move the EUT out of the regional operating area defined by the previous addressed telecommand	Check, that the EUT reverts to default		Ok

5.7.4 17.7.4 Test for invalid regional operating areas (3 areas with same corner)

(7.4.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Perform the following tests in the following order after completion of all other tests related to change of regional operating settings:

- Send three different valid regional operating settings with adjacent regional operating areas, their corners within eight miles of each other, to the EUT by msg 22 or DSC telecommand, Presentation Interface input and manual input via MKD. The current own position of the EUT shall be within the regional operating area of the third regional operating setting.*
- Move current own position of the EUT consecutively to the regional operating areas of the first two valid regional operating settings.*

Required test results

- Check, that the EUT uses the operating settings that were in use prior to receiving the third regional operating setting.*
- Check, that the EUT consecutively uses the regional operating settings of the first two received regional operating areas.*

18.08.03 Ba	Test details – Test for invalid regional operating areas (three regional operating areas with same corner)		
Test item	Check	Remark	Result
a) Send three different valid regional with adjacent corners by ACA, File name: AIACA_region_17_7_4.sst Position inside 3 rd area.	Check, that the 3 rd area is refused and settings are not used		Ok
b) Move own position to the first 2 areas	Check, that the EUT uses the operational settings of these areas		Ok

5.7.5 17.7.5 Self-Certification of other conditions

(7.4.1)

The fulfilment of all other conditions of 7.4.1 shall be self-certified by the manufacturer.

Date	Result	Status
18.08.03 Ba	No Self-Certification required	Ok

5.8 17.8 Continuation of autonomous mode reporting rate

(M.1371- 1 A2/3.3.6, IALA Technical clarifications to recommendation ITU- R M.1371- 1)

Method of test

When in the presence of an assigned mode command and in a transition zone, check that the EUT continues to report at the autonomous mode-reporting rate.

Required result

Ensure that the autonomous reporting rate is maintained.

31.07.03 Ba Test details – Continuation of autonomous mode reporting rate			
Test item	Check	Remark	Result
Set the EUT into a transitional zone			
Send assignment commands msg 16 with an higher update rate to the EUT			
Rate assignment command in a transitional zone	Check that an rate assignment command is ignored in a transitional zone		Ok
Slot assignment command in a transitional zone	Check that an slot assignment command is ignored in a transitional zone		Ok

6 18 Specific tests of Transport Layer

(7.5)

6.1 18.1 Addressed messages

(M.1371 A1/5.3.1)

6.1.1 18.1.1 Transmission

(M.1371 A1/5.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Set up a test target for scheduled transmissions on channel AIS1 only. Initiate the transmission of an addressed binary message (msg 6) by the EUT (test target as destination). Record transmitted messages on both channels.

Required results

Check that the EUT transmits msg 6 on channel AIS1. Repeat test for AIS2.

Basic test of addressed message is made in **2.1.4.1 “14.1.4.1 Transmit an addressed message”**

The test procedure is modified in that way that the test target is transmitting on both channels, and in case of channel = 0 it is checked that the transmission is always on that channel on that the target transponder was last received.

19.06.03 Test details - Addressed binary message 6			
Test item	Check	Remark	Result
Transmit an addressed binary message 6 by sending an ACA sentence to the PI. PI sentence: File AIABM_bin.sst: !AIABM,1,1,2,000005002,x,6,06P0test,0 Change transmission channel x according to test item Transmit some messages for each test item and check the used channel.			
Channel = 0 (autoselect)	Check tx on last received channel	Could not be tested because EUT does receive only on channel A Retest 20.08.03 Ba: Tx on last received channel	Ok
Channel = 1 (A)	Check Tx on channel A		Ok
Channel = 2 (ch. B)	Check Tx on channel B		Ok
Channel = 3 (ch. A+B)	Check Tx on channel A+B		Ok

20.08.03 Ba Test details - Addressed safety related message 12			
Test item	Check	Remark	Result
Transmit an addressed safety related message 12 by sending an ACA sentence to the PI. PI sentence: File AIABM_safety.sst: !AIABM,1,1,2,000005002,x,12,D5CD,0 (D5CD = „TEST“. Change transmission channel x according to test item Transmit some messages for each test item and check the used channel.			
Channel = 0 (autoselect)	Check tx on last received channel		
Channel = 1 (ch. A)	Check Tx on channel A		
Channel = 2 (ch. B)	Check Tx on channel B		
Channel = 3 (ch. A+B)	Check Tx on channel A+B		

20.08.03 Ba Test details - 4 addressed binary messages 6			
Test item	Check	Remark	Result
Transmit an set of 4 addressed binary messages 6 by sending 4 ABM sentences to the PI. Transmission channel is alternating on channel A and B as indicated int the ABM sentences. PI sentence: File AIABM_4_bin.sst: A response is automatically transmitted by the addressed transponder ID 1011			
VDO output of EUT	Check that the 4 messages are transmitted directly without waiting for ackn.		
Channel	Check Tx on channel A and B as indicated in the ABM sentence		
Message sequence number	Check that sequence number in VDL msg = Sequential message identifier of ABM sentences	The sequence number in msg 6 is always 0, independend of the sequential message identifier of the ABM sentence. How can the received msg 7 correctly be assigned to the transmitted msg 6 without using the sequence number? <u>Retest 22.08.03 Ba:</u> sequence number is correct	
RX of request	Check that message is received by addressed transponder (VDM)		
Received by VDL Analyser	Check msg on VDL analyser		
TX of ackn. msg 7 (VDO)	Check that ackn msg 7 is transmitted by addressed transponder (VDO)		
RX of msg 7 (VDM)	Check that the ackn. msg 7 is received by EUT (VDM)		
AIABK acknowledgement	Record and check the AIABK acknowledgements	\$AIABK,1011,A,6,3,0 \$AIABK,1011,B,6,0,0 \$AIABK,1011,B,6,2,0 \$AIABK,1011,A,6,1,0	Ok

6.1.2 18.1.2 Acknowledgement

Method of measurement

Operate standard test environment and EUT in autonomous mode. Apply up to 4 addressed binary messages (msg 6; EUT as destination) to the VDL on Channel AIS 1. Record transmitted messages on both channels. Repeat with AIS2.

Required results

Confirm that EUT transmits a binary acknowledge message (msg 7) with the appropriate sequence numbers within 4 sec on the channel where the msg 6 was received. Confirm that EUT transmit the result with an appropriate message to PI.

A basic receive test is made in 2.1.4.2 14.1.4.2 Receive addressed message.

Test details - Acknowledgement of binary message 6			
Test item	Check	Remark	Result
Transmit 4 addressed binary message with consecutive Sequential message identifiers from other Transponder File name: AIABM_4_bin.sst			
Rx of messages (VDM)	Check that the messages are received by VDM output on PI of EUT		Ok
Transmission of acknowledgement msg 7	Check transmission of ackn. by VDO output of EUT	It seems that only every 2 nd message is acknowledged. The acknowledgement then contains 2 ackn destinations <u>Retest 19.06.03</u> , after Restart: acknowledgement is transmitted within 1 s	Ok
Sequence numbers	Check that sequence number in ackn = sequence number of Rx message		Ok
Ackn. channel	Check that ackn Tx channel = Rx channel		Ok
RX of ackn. msg 7	Check that the ackn. msg are received by Transmitter (VDM/ABK)		Ok

6.1.3 18.1.3 Transmission Retry

(M.1371 A1/5.3.1)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of up to 4 addressed binary messages by the EUT which will not be acknowledged (i.e. destination not available). Record transmitted messages.

Required results

Confirm that EUT retries the transmission up to 3 times (configurable) for each addressed binary message. Confirm that the time between transmissions is 4 to 8 sec. Confirm that EUT transmit the overall result with an appropriate message to PI.

Basic test of addressed message is made in **2.1.4.1 “14.1.4.1 Transmit an addressed message”**

Test details - Addressed binary message 6			
Test item	Check	Remark	Result
Transmit an addressed binary message 6 by sending an ABM sentence to the PI. PI sentence: File AIABM_bin.sst: The message is addressed to a not available transponder. So no acknowledgement is received. Record the VDO output of VDE with time stamp.			
VDO output of EUT	Check the transmission by VDO		Ok
Number of repetitions	Note and check the number of repetitions	3 repetitions, 4 transmissions	Ok
Repetition timing	Record the repetition timing. Note the time between repetitions and check that it is 4...8 s	Time is 4...5 s	Ok
ABK sentence	Note and check the ABK sentence Confirm the type = 1 (broadcast but no acknowledgement)		Ok
Message sequence numbers	Check message sequence numbers of transmissions and ABK	In the first transmission sequence number was Ok, in a second test the sequence number of the transmission was counted up (=3), in the ABK not (=). The sequence number in the transmission should always be the same as in the ABM and ABK <u>Retest 20.08.03 Ba:</u> The sequence number in msg 6 is always 0, independent of the sequential message identifier of the ABM sentence <u>Retest 22.08.03 Ba:</u> sequence number is correct	
			Ok

19.06.03	Test details - Addressed safety related message 12		
Test item	Check	Remark	Result
Transmit an addressed safety related message 12 by sending an ABM sentence to the PI. PI sentence: File AIABM_safety.sst:	The message is addressed to a not available transponder. So no acknowledgement is received. Record the VDO output of VDE with time stamp.		
VDO output of EUT	Check the transmission by VDO		Ok
Number of repetitions	Note the number of repetitions	3 repetitions, 4 transmissions	Ok
Repetition timing	Record the repetition timing. Note the time between repetitions and check that it is 4...8 s	Time is 4...5 s	Ok
ABK sentence	Note and check the ABK sentence Confirm the type = 1 (broadcast but no acknowledgement)		Ok
Message sequence numbers	Check message sequence numbers of transmissions and ABK	See msg 6 <u>Retest 22.08.03 Ba:</u> sequence number is correct	Ok

6.2 18.1.4 Acknowledgement of Addressed safety related messages

Repeat test under 18.1.2 with addressed safety related message.

19.06.03	Test details - Acknowledgement of safety related text message 12		
Test item	Check	Remark	Result
Transmit 4 safety related text messages 12 with consecutive sequential message identifiers from other Transponder			
Rx of messages (VDM)	Check that the messages are received by VDM output on PI of EUT		Ok
Transmission of acknowledgement msg 13	Check transmission of ackn. by VDO output of EUT		Ok
Sequence numbers	Check that sequence number in ackn = sequence number of Rx message		Ok
Ackn. channel	Check that ackn Tx channel = Rx channel		Ok
RX of ackn. msg 13	Check that the ackn. msg are received by Transmitter (VDM/ABK)		Ok

6.3 18.2 (M.1371 A1/5.3) Interrogation responses

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply an interrogation message (msg 15; EUT as destination) to the VDL according to message table 7 for responses with msg 5 and slot offset set to defined value on channel AIS 1. Record transmitted messages on both channels.

Required results

Check that EUT transmits the appropriate interrogation response message as requested on channel AIS1. Repeat test for AIS2.

A simple operational test is made in 2.1.3.2 14.1.3.2 Interrogation response

The test cases “case 1” to “case 4” are the four cases as defined in ITU-R M1371, “3.3.8.2.11 Message 15 Interrogation”

The requests have to be made by the VDL generator, because a mobile transponder cannot generate requests with slot offset.

22.08.03 Ba		Test details - case 1- Interrogation of msg 5, Ch 1		
Test item	Check	Remark	Result	
Transmit an interrogation message 15 requesting msg 5 with given slot offset				
A response shall automatically be transmitted by the EUT				
Request is transmitted on channel 1				
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok	
TX of response (VDO)	Check that response is transmitted by EUT (VDO)		Ok	
Response on VDL	Check the response on VDL with the VDL analyser, note slot offset	Slot offset = 100	Ok	
Response channel	Check that the response is transmitted on the request channel		Ok	

22.08.03 Ba Test details - case 1 - Interrogation of msg 5, Ch 2			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 5 with given slot offset A response shall automatically be transmitted by the EUT Request is transmitted on channel 2			
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok
TX of response (VDO)	Check that response is transmitted by EUT (VDO)		Ok
Response on VDL	Check the response on VDL with the VDL analyser, note slot offset	Slot offset = 100	Ok
Response channel	Check that the response is transmitted on the request channel		Ok

22.08.03 Ba Test details - case 2 - Interrogation of msg 3 and 5			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 3 and 5 from EUT with given slot offsets A response shall automatically be transmitted by the EUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok
TX of response 1 (VDO)	Check that response is transmitted by EUT (VDO)		Ok
Response 1 on VDL	Check the response on VDL with the VDL analyser		Ok
Slot selection	Check that the slot offset 1 defined in the request is used		Ok
TX of response 2 (VDO)	Check that response is transmitted by EUT (VDO)		Ok
Response 2 on VDL	Check the response on VDL with the VDL analyser		Ok
Slot selection	Check that the slot offset 2 defined in the request is used		Ok

22.08.03 Ba Test details - case 3 Interrogation of msg 5			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 3 from other AIS and msg 5 from EUT with given slot offsets			
A response shall automatically be transmitted by the EUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok
TX of response (VDO)	Check that response msg 5 is transmitted by EUT (VDO)		Ok
Response on VDL	Check the response on VDL with the VDL analyser		Ok
Slot selection	Check that the slot offset defined in the request 2.1 is used		Ok

22.08.03 Ba Test details - case 4 - Interrogation of msg 3			
Test item	Check	Remark	Result
Transmit an interrogation message 15 requesting msg 3,5 from other AIS and msg 5 from EUT with given slot offsets			
A response shall automatically be transmitted by the EUT			
RX of request by EUT	Check that the request message is received by the EUT (VDM)		Ok
TX of response (VDO)	Check that response msg 5 is transmitted by EUT (VDO)		Ok
Response on VDL	Check the response on VDL with the VDL analyser		Ok
Slot selection	Check that the slot offset defined in the request 2.1 is used		Ok

6.4 18.3 Broadcast messages

(M.1371 A1/5.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Initiate the transmission of 5 binary broadcast messages (msg 8) by the EUT. Record transmitted messages on both channels.

Required results

Check that EUT transmits the msg 8 messages on channels A and B alternating.

Test of multislots broadcast messages is done in 2.2 14.2 Multiple slot messages

20.08.03 Ba Test details - Binary broadcast message 8			
Test item	Check	Remark	Result
Transmit 5 binary broadcast messages 8 by sending 5 BBM sentences to the PI. PI sentence: File AIBBM_5_bin.sst: !AIBBM,1,1,[7;8;9;0;1],0,8,06P0test1,0 AIS channel for broadcast is 0: autoselect The file contains 5 BBM sentences with consecutive sequential message identifiers.			
VDO output of EUT	Check the VDO output on PI		Ok
Channel	Check Tx alternating channels A and B		Ok
AIABK acknowledgement	Record and check the AIABK acknowledgements	\$AIABK,,,8,7,3 \$AIABK,,,8,8,3 \$AIABK,,,8,9,3 \$AIABK,,,8,0,3 \$AIABK,,,8,1,3	Ok
Message sequence number	Check that message sequence number in ABK = Sequential message identifier of BBM sentence		Ok
MMSI	Check Transmitter MMSI		Ok

20.08.03 Ba Test details - Safety related broadcast message 14			
Test item	Check	Remark	Result
Transmit 5 safety related broadcast messages 14 by sending 5 BBM sentences to the PI. PI sentence: File AIBBM_5_safety.sst: !AIBBM,1,1,[6;7;8;9;0],0,8,D5CDi,0 AIS channel for broadcast is 0: autoselect The file contains 5 BBM sentences with consecutive sequential message identifiers.			
VDO output of EUT	Check the VDO output on PI		Ok
Channel	Check Tx alternating channels A and B	The channels are alternating according to the order of input and Sequential message identifier. The transmission order is different	Ok
AIABK acknowledgement	Record and check the AIABK acknowledgements	\$AIABK,,,14,6,3 \$AIABK,,,14,7,3 \$AIABK,,,14,8,3 \$AIABK,,,14,9,3 \$AIABK,,,14,0,3	Ok
Message sequence number	Check that message sequence number in ABK = Sequential message identifier of BBM sentence		Ok
MMSI	Check Transmitter MMSI		Ok

7 19 Specific Presentation Interface Tests

(7.6)

7.1 19.1 General

The EUT (Equipment Under Test) including all necessary test equipment shall be set-up and checked that it is operational before testing commences.

The manufacturer shall provide sufficient technical documentation of the EUT and its interfaces in particular.

The following tests shall be carried out under "Normal" environmental conditions as defined in IEC 60945.

Where appropriate, tests against different clauses of this and other chapters may be carried out simultaneously.

Test details - General interface tests			
Test item	Check	Remark	Result
Checksum	Check that the output sentences include a checksum		Ok
	Check that the checksum is correct		Ok

7.2 19.2 Check of the manufacturer's documentation

(7.6.1)

The following checks for formal consistency and compliance shall be made for all ports

- *approved sentences against IEC 61162*
- *proprietary sentences against IEC 61162*
- *usage of fields as required for different functions including provided default values or settings*
- *transmission intervals against IEC 61162*
- *configuration of hardware and software if this is relevant to the interface performance and port selection*

The following checks for compliance with IEC 61162

- *output drive capability*
- *load on the line of inputs*
- *electrical isolation of input circuits*

This Test does not check the documentation, this is done in 1.6 4.3 Manuals.
 Here the function of the EUT is checked using the documentation information, the content of the documentation is checked if the EUT complies with the requirements.

02.09.03 Ba Test details - Check of manufacturers documentation			
Test item	Check	Remark	Result
Approved sentences	Check approved sentences against IEC 61162	There is no description of IEC 61162 sentences, only a link to the standard	Ok
Proprietary sentences	Check proprietary sentences against IEC 61162	Not applicable, no proprietary sentences used	Ok
Usage of Fields	Check usage of fields	All required fields are used	Ok
Transmission intervals	Check transmission intervals	Not applicable	Ok
Hardware configuration	Check hardware configuration		Ok
Output drive capability	Check output drive capability	No information about drive capability According to electrical test Ok	Ok
Input load	Check input load	No information about input load According to electrical test Ok	Ok.
Electrical Isolation	Check electrical isolation		Ok

7.3 19.3 Electrical test

(7.6.1)

Method of test

Input / Output Ports configured as IEC 61162-1 or IEC 61162-2 shall be tested according to the relevant standard with regard to minimum and maximum voltage and current at the input terminals.

Required results

The interfaces shall fulfil the requirements of the relevant standards.

Test details - Electrical test of inputs			
Test item	Check	Remark	Result
Minimum voltage	Check that input works with minimum input voltage	PI, Pilot, Ok Sensor 2 and Sensor 3 Ok Long range and Sensor 1 could not be tested because of other problems Retest 25.07.03: Long range and Sensor 1 port are Ok to	Ok
Maximum voltage	Check that input is not damaged by maximum input voltage		Ok
Input current	Check the input current against the IEC 61162-1 or IEC 61162-2	Input current 5V: +/- 1.03 mA 10V: +/- 2.06 mA 15 V +/- 3.07 mA	Ok
Check that inputs are electricaly isolated			Ok

7.4 19.4 Test of input sensor interface performance

(7.6.2)

Method of measurement

Connect all inputs and outputs of the EUT as specified by the manufacturer and simulate VDL-messages using test system. Operate inputs with simulated sensor data that are both the relevant data and additional data with formatters not provided for the relevant input. Each sensor input shall be loaded with 70 to 80 percent of the interface's capacity. Record the VDL and output from the EUT's high speed port.

Required results

Verify that the output on the VDL and the presentation interface agree with simulated input and all output data is transmitted without loss or additional delay

25.07.03 Ba Test details - Test of input sensor interface performance			
Test item	Check	Remark	Result
Load all 3 sensor inputs with 70-80 % of the interface's capacity			
1 Sensor input at 4800 with position data			
1 Sensor input at 4800 with log data			
1 Sensor input at 38400 with heading and ROT data			
VDL contents	Check that the VDL contents agree with in input data		Ok
VDO output	Check that VDO outputs on both high speed ports agree with the sensor input data		Ok
Loss of data	Check that VDL messages are transmitted without loss of sensor data		Ok
	Check that output data at VDO output are sent without loss of sensor data		Ok
Delay of data	Check that there is no delay from sensor input change to VDL messages	Next VLD message has the new value	Ok
	Check that there is no delay from sensor input change to VDO output	No delay of more than 1 s	Ok

7.5 19.5 Test of sensor input

(7.6.2)

Method of measurement

Set-up standard test environment and operate inputs with simulated sensor data. Record VDL output.

- a) *simulate sensor information for position, speed, heading, ROT*
- b) *simulate invalid and unavailable data*

Required results

- a) *Verify that the recorded VDL message contents agree with the simulated sensor information.*
- b) *Verify that affected data is set to default values.*

Switch off internal GPS to get default values in case of invalid sensor data. The intention of this test is to check the conversion of sensor input data to the VDL messages, VDO output and MKD display including the test, if invalid and unavailable data are recognised.

Fall back behaviour at sensor fail is checked in another test (see 2.9.3 - 14.9.3 Monitoring of sensor data).

For message content of VDL messages 1, 2, 3 (position reports) no special test is required. Please enter the results of this test in that test table (go to 2.3.1 "Information content of msg 1" at the end of this test

7.5.1 GLL sentence

Test details – GLL position input			
Test item	Check	Remark	Result
Apply simulated GLL sentence to the sensor input File name is ais01_gll_vtg_hdt_rot.sst			
Set <u>status/mode to A,A</u> Check on VDL	Check latitude Check longitude Check PA-Flag = 0		Ok Ok Ok
Check VDO output on PI	Check latitude Check longitude Check PA-Flag = 0		Ok Ok Ok
Check Display on MKD	Check latitude Check longitude Check PA-Flag = 0		Ok Ok Ok
Set <u>status/mode to A,D</u> (differential mode)	Check PA-Flag = 1 on VDL Check PA-Flag = 1 in VDO Check display of differential mode on MKD		Ok Ok Ok
Set <u>status/mode to V,N</u> (invalid data) Check on VDL	Check latitude = 91° Check longitude = 181° Check PA-Flag = 0		Ok Ok Ok
Check on VDO output of PI	Check latitude = 91° Check longitude = 181° Check PA-Flag = 0		Ok Ok Ok
Check display on MKD	Check latitude = “----“ Check longitude = “----“ Check PA-Flag = 0		Ok Ok Ok
Set status/mode to A,A Change for latitude the number of digits after decimal point from 2 to 6	Check that latitude on VDL is correct for all numbers		Ok
Change the latitude to only degrees and minutes, without decimal point	Check that the latitudo on VDL is correct		Ok
No GBS sentence applied	Check that RAIM-Flag = 0		Ok

7.5.2 GGA sentence

12.05.03	Test details - GGA GPS position input		
Test item	Check	Remark	Result
Apply simulated GGA sentence to the sensor input			
File name is ais02_gga_vtg_hdt_rot.sst			
Set <u>Mode = 1 (autonomous)</u> Check on VDL	Check latitude		Ok
	Check longitude		Ok
	Check PA-Flag = 0		Ok
Set <u>mode = 2 (differential)</u> Check on VDL	Short check data Ok	EUT shows for first the default value for LAT and LON before switching to real sensor data	
		Retest 23.05.03 same problem	
		Retest 18.07.03	Ok
	Check PA-Flag = 1 on VDL		Ok
Set <u>mode = 3 (GPS-PPS)</u> Check on VDL	Short check data Ok		Ok
	Check PA-Flag = 0 on VDL		Ok
Set <u>mode =4 (RTK fixed)</u> Check on VDL	Short check data Ok	Default values	
		Retest 18.07.03	Ok
	Check PA-Flag = 1 on VDL		Ok
Set <u>mode =5 (RTK float)</u> Check on VDL	Short check data Ok	Default values	
		Retest 18.07.03	Ok
	Check PA-Flag = 1 on VDL		Ok
Set <u>mode = 6 (dead reck.)</u> Check on VDL	Short check default data		Ok
Set <u>mode = 7 (manual)</u> Check on VDL	Short check default data		Ok
Set <u>mode = 8 (simulated)</u> Check on VDL	Short check default data		Ok
Set <u>mode = 0 (no fix)</u> Check on VDL	Check latitude = 91°		Ok
	Check longitude = 181°		Ok
	Check PA-Flag = 0		Ok

7.5.3 GNS sentence

Test details – GNS satellite position input			
Test item	Check	Remark	Result
Apply simulated GNS sentence to the sensor input, check on VDL			
File name is ais03_gns_vtg_hdt_rot.sst			
Set Mode = AA (autonomous GPS/GLONASS) Check on VDL	Check latitude		Ok
	Check longitude		Ok
	Check PA-Flag = 0		Ok
	Check RAIM-Flag = 0		Ok
Set Mode = AN (autonomous GPS/no GLONASS)	Short check data Ok		Ok
	Check PA-Flag = 0 on VDL		Ok
Set Mode = NA (no GPS/autonomous GLONASS)	Short check data Ok		Ok
	Check PA-Flag = 0 on VDL		Ok
Set Mode = DA (differential GPS/ autonomous GLONASS)	Short check data Ok	Retest 18.07.03	Ok
	Check PA-Flag = 1 on VDL		Ok
Set Mode = DD (differential GPS/ differential GLONASS)	Short check data Ok		Ok
	Check PA-Flag = 1 on VDL		Ok
Set Mode = DN (differential GPS/ no GLONASS)	Short check data Ok		Ok
	Check PA-Flag = 1 on VDL		Ok
Set Mode = AD (autonomous GPS/ differential GLONASS)	Short check data Ok		Ok
	Check PA-Flag = 1 on VDL		Ok
Set Mode = ND (no GPS/ differential GLONASS)	Short check data Ok		Ok
	Check PA-Flag = 1 on VDL		Ok
Set Mode = NN (no GPS/ no GLONASS)	Check latitude = 91°	Still valid value	
		Retest 23.05.03	Ok
	Check longitude = 181°		Ok
	Check PA-Flag = 0		Ok

7.5.4 RMC sentence

12.05.03	Test details – RMC position input		
Test item	Check	Remark	Result
Apply simulated RMC sentence to the sensor input			
File name is ais04_rmc_hdt_rot.sst			
Set <u>status/mode to A,A</u> Check on VDL	Check latitude		Ok
	Check longitude		Ok
	Check PA-Flag = 0		Ok
Set <u>status/mode to A,D</u> (differential mode)	Short check of valid data		Ok
	Check PA-Flag = 1 in VDO		Ok
Set <u>status/mode to V,N</u> (invalid data) Check on VDL	Check latitude = 91°		Ok
	Check longitude = 181°		Ok
	Check PA-Flag = 0		Ok
Set <u>status/mode to V,A</u> (invalid data) Check on VDL (Test if also status is evaluated)	Check latitude = 91°		Ok
	Check longitude = 181°		Ok
	Check PA-Flag = 0		Ok
	Check SOG = 102.3		Ok
	Check COG = 360°		Ok

7.5.5 DTM sentence

12.05.03	Test details – DTM reference datum		
Test item	Check	Remark	Result
Apply simulated position sentences with DTM. Start with datum not WGS 84, change to WGS 84 and back to not WGS 84			
Apply <u>GLL</u> sentence with DTM File name: ais1d_gll_dtm_vtg_hdt_rot.sst Datum = not WGS 84	Check on VDL that data are default data	Valid data	
		DTM may not implemented	
		Retest 18.07.03	Ok
Set Datum = WGS 84	Check that data are valid		Ok
Set Datum = not WGS 84	Check that data are changed to default		Ok
Apply <u>GGA</u> sentence with DTM File name: ais2d_gga_dtm_vtg_hdt_rot.sst Datum = not WGS 84	Check on VDL that data are default data		Ok
Set Datum = WGS 84	Check that data are valid		Ok
Set Datum = not WGS 84	Check that data are changed to default		Ok
Set Datum = WGS 84	To get valid data for further tests		Ok

7.5.6 GBS sentence

Test details – GBS input			
Test item	Check	Remark	Result
Apply simulated gll sentence with GBS sentence to the sensor input File name is ais01g_gll_vtg_gbs_hdt_rot.sst			
Fields with expected error of Lat and Lon contain values	Check that RAIM-Flag = 1		Ok
Fields with expected error of Lat and Lon are empty (NULL fields)	Check that RAIM-Flag = 0	RAIM Flag = 1 even if all “expected error” fields are empty Retest 26.08.03	Ok

7.5.7 VTG sentence

12.05.03	Test details – VTG speed input		
Test item	Check	Remark	Result
Apply simulated VTG sentence to the sensor input File name is ais01_gll_vtg_hdt_rot.sst			
Set mode to A (autonomous)	Check SOG		Ok
Check on VDL	Check COG		Ok
Check VDO output on PI	Check SOG		Ok
	Check COG		Ok
Check Display on MKD	Check SOG		Ok
	Check COG		Ok
Set mode to D (differential)	Short check SOG/COG Ok		Ok
Set mode to N (invalid)	Check SOG = 102.3 (default)		Ok
	Check COG = 360 (default)		Ok
Check VDO output on PI	Check SOG = 102.3 (default)		Ok
	Check COG = 360 (default)		Ok
Check Display on MKD	Check SOG = “----“	Displayed as 102.3	
		Retest 23.05.03	Ok
	Check COG = “----“	Displayed as 360.0	
		Retest 23.05.03	Ok
Set mode to E (estimated)	Short check SOG/COG default		Ok
Set mode to M (manual)	Short check SOG/COG default		Ok
Set mode to S (simulated)	Short check SOG/COG default		Ok
Delete SOG-N field and add SOG K-Field (speed in km/h)	Check SOG value in VDL It has to be converted into knots or set to default	Displayed as 0.0 Retest 18.07.03 displayed as default	Ok

7.5.8 VBW sentence

Test details – VBW log input with VTG sentence valid			
Test item	Check	Remark	Result
Apply simulated VBW sentence to the sensor input File name is ais06_gll_vtg_vbw_hdt_rot.sst			
Status of bottom track: A (valid) Ahead and across speed available. Check on VDL	Check that SOG = resultant of ahead and across speed	= VTG data VBW data are not used VBW is a required sentence Retest 18.07.03	Ok
	COG = calculated from SOG vector and heading	= VTG data VBW data are not used Retest 18.07.03 COG from VTG because of no use of HDT Retest 26.08.03 WA COG wrong for neg. values of SOG ahead And neg. values across Retest 27.08.03 Wa	Ok
Check on VDO output of PI	Check SOG = VDL SOG value		Ok
	Check COG = VDL COG value		Ok
Check on MKD	Check SOG = VDL SOG value		Ok
	Check COG = VDL COG value		Ok
Status of bottom track: V (invalid) Ahead and across speed not empty. Water speed valid ! Check on VDL	SOG from VTG		Ok
	COG from VTG		Ok
Check on VDO output of PI	SOG from VTG		Ok
	COG from VTG		Ok
Check on MKD	SOG from VTG		Ok
	COG from VTG		Ok
Status of bottom track: A (valid) Ahead available, across speed empty (e.g. single axis log)	SOG from VTG		Ok
	COG from VTG		Ok
Status of bottom track: A (valid) Ahead and across speed available, Heading invalid	SOG from VTG	Test 26.08.03 WA Speed from VBW Retest 28.08.03 Wa	Ok
Test Report No.. 734.2/0050/2003 / S3220	print date: 07.10.03	page 170	of 229

Bundesamt für Seeschifffahrt und Hydrographie
Federal Maritime and Hydrographic Agency



	COG from VTG	Retest 27.08.03 Wa COG calculation use invalid heading = 511° Retest 28.08.03	Ok

Test details – VBW log input, no VTG			
Test item	Check	Remark	Result
Apply simulated VBW sentence to the sensor input, GPS disconnected, No VTG speed available File name is ais08_gll_vbw_hdt_rot.sst			
<u>Status of bottom track: A</u> (valid) Ahead and across speed available. Check on VDL	Check that SOG = resultant of ahead and across speed	= default VBW data are not used VBW is a required sentence Retest 18.07.03	
	COG = calculated from SOG vector and heading	= default VBW data are not used Retest 18.07.03 still default because HDT not in use Retest 26.08.03 WA COG wrong for neg. values of SOG ahead And neg. values across Retest 27.08.03 Wa	Ok
Check on VDO output of PI	Check SOG = VDL SOG value		Ok
	Check COG = calculated from SOG vector and heading		Ok
Check on MKD	Check SOG = VDL SOG value		Ok
	Check COG = calculated from SOG vector and heading		Ok
<u>Status of bottom track: V</u> (invalid) Ahead and across speed not empty. Water speed valid ! Check on VDL	SOG = default		Ok
	COG = default		Ok
Check on VDO output of PI	SOG = default		Ok
	COG = default		Ok
Check on MKD	SOG = default		Ok
	COG = default		Ok
<u>Status of bottom track: A</u> (valid) Ahead available, across speed empty (e.g. single axis log)	SOG = default		Ok
	COG = default		Ok

<p>Status of bottom track: A (valid) Ahead and across speed available, Heading invalid</p>	SOG from VBW or default	From VBW	Ok
	COG = default	Retest 27.08.03 Wa COG calculation use invalid heading = 511° Retest 28.08.03	Ok

7.5.9 OSD sentence

Test details – OSD own ship data input			
Test item	Check	Remark	Result
Apply simulated GLL and OSD sentence to the sensor input. External GLL is required for the test because with internal position the speed is taken from the internal source too.			
File name is ais09_gll_osd.sst			
Heading status = A (valid)	Check SOG from OSD		Ok
Speed reference = B (bottom)	Check COG from OSD		Ok
Check on VDL	Check heading from OSD		Ok
Check VDO output on PI	Check SOG from OSD		Ok
	Check COG from OSD		Ok
	Check heading from OSD		Ok
Check Display on MKD	Check SOG from OSD		Ok
	Check COG from OSD		Ok
	Check heading from OSD		Ok
Set speed reference to P (Positioning system)	Check SOG and COG from OSD		Ok
Set speed reference to R Radar tracking	Check SOG and COG from OSD		Ok
Set speed reference to W (Water speed)	Check SOG = default		Ok
	Check COG = default		Ok
	Check heading from OSD		Ok
Set speed reference to M (Manual)	Check SOG = default		Ok
	Check COG = default		Ok
	Check heading from OSD		Ok
Set speed reference to P (Positioning system)	Check SOG from OSD		Ok
	Check COG from OSD		Ok
	Set heading status = V (invalid)	Check heading = default	Ok
Change speed reference from N (kn) to K (km/h)	Check SOG value in VDL It has to be converted into knots		Ok

7.5.10 HDT sentence

Test details – HDT heading input			
Test item	Check	Remark	Result
Apply simulated HDT sentence to the sensor input File name is ais01_gll_vtg_hdt_rot.sst			
Heading value = 359.0	Check heading on VDL		Ok
	Check heading on VDO		Ok
	Check heading in MKD		Ok
Change value to 359.9	Check that heading on VDL = 359 or 0, not 360	359	Ok
Delete heading value (empty field)	Check that heading = default on VDL		Ok
	Check that heading = default on VDO		Ok
	Check that heading = default on MKD		Ok
Change talker to "HC" (Magnetic compass)	Check that heading is not used	Value is used Retest 23.05.03 still not Ok Retest 26.08.03 WA: Sentences from talker HC are not used	Ok
If HC talker data are used: Apply <ul style="list-style-type: none">• A HE talker with valid data• A HC talker without data	Check that only HE data are used and not changed sometime to HC data	Not applicable	
Apply <ul style="list-style-type: none">• A HC talker with valid data• A HE talker without data	Check that only HE data are used and not changed sometime to invalid		

7.5.11 ROT sentence

Test details – ROT Rate of Turn input			
Test item	Check	Remark	Result
Apply simulated ROT sentence to the sensor input, Talker = TI File name is ais01_gll_vtg_hdt_rot.sst			
ROT status = A (valid) ROT value = 0.0 degr./min	Check ROT on VDL		Ok
	Check ROT on VDO		Ok
	Check ROT on MKD		Ok
Change rate of turn to different values according to the check column and check the VDL value. The VDL value has to be the nearest value according the conversion formula (see conversion table)	10 converted to 10.0 (15)		Ok
	20 converted to 19.7 (21)		Ok
	60 converted to 61.1 (37)		Ok
	180 converted to 177.2 or 182.8 (63/64)	177.2	Ok
	360 converted to 361.6 (90)		Ok
	720 converted to 708.7 (126)	720 retest 18.07.03	Ok
	-20 converted to 19.7 (-21)		Ok
	-720 converted to -708.7 (-126)	-720 retest 18.07.03	Ok
	Set ROT status = V (invalid)	Still valid value Retest 18.07.03	Ok
	Check that ROT = default on VDL (default = -731.4 = -128)	Still valid value Retest 18.07.03	Ok
ROT status = A (valid) ROT value = 0.0 degr./min Set Talker = HE	Check that ROT = default on VDO	Still valid value Retest 18.07.03	Ok
	Check that ROT = default on MKD	Still valid value Retest 18.07.03	Ok
	Check ROT = 0.0 on VDL		Ok
Change rate of turn to different values according to the check column and check the VDL value. Values have to be according to 6.10.3.6	Check ROT = 0.0 on VDO		Ok
	Check ROT = 0.0 on MKD		Ok
	9 converted to 0	Converted to 9 Retest 18.07.03	Ok
	11 converted to 720	Converted to 11 Retest 18.07.03	Ok
	- 9 converted to 0	Converted to -9 Retest 18.07.03	Ok
	-11 converted to -720	Converted to -11 Retest 18.07.03	Ok

--	--	--	--

Date	Result	Status
02.10.2003	On the MKD the coded integer value which is transmitted in the VDL messages is displayed (with unit indication "°"). We recommend do display the ROT value in units of °/minute and also change the unit indication from "°" to "°/min".	rec

7.5.12 Additional Tests

Test details – Additional Tests			
Test item	Check	Remark	Result
Apply simulated sensor sentences to the sensor input File name is ais01_gll_vtg_hdt_rot.sst			
Send sentences without checksum, check on VDL	Check position = default		Ok
	Check SOG/COG = default		Ok
	Check heading = default		Ok
	Check ROT = default		Ok
Send sentences with false checksum, check on VDL	Check position = default		Ok
	Check SOG/COG = default		Ok
	Check heading = default		Ok
	Check ROT = default		Ok
Back to valid checksum Set baud rate of simulator to 38400 Bd, The purpose is to check if input survives wrong baudrate.	Check position = default	Could not change baudrate of EUT Retest 26.08.03 WA	
	Check SOG/COG = default		Ok
	Check heading = default		Ok
	Check ROT = default		Ok
Set baud rate of simulator and sensor input also to 38 400, check on VDL	Check position		Ok
	Check SOG/COG		Ok
	Check heading		Ok
	Check ROT		Ok

7.5.13 Compatibility check

For the practical use of AIS transponders mainly in case of retrofit it may make sense that the AIS transponder is compatible to older versions of IEC 61162.

Therefore we accept if an EUT evaluates also sentences according to IEC 61162 Edition 1 (1995)

This is not a test of required functions of the EUT but a record of the capabilities of the AIS transponder.

Test details – Compatibility check			
Test item	Check	Remark	Result
Apply simulated sensor sentences to the sensor input File name is ais01_gll_vtg_hdt_rot.sst			
GLL sentence Without mode indicator	Record if position is used Check that PA flag is set to 0	Position is used Ok	
RMC sentence Without mode indicator	Record if position is used Check that PA flag is set to 0	Position is used Ok	
VTG sentence Without mode indicator	Record if SOG/COG is used		
Priority check: • GGA sentence and • GLL sentence without mode indicator	Check that GGA sentence is used	EUT is switching between GGA and GLL data Retest 26.08.03 WA	Ok
	Check that data from GLL are not used	EUT is switching between GGA and GLL data Retest 26.08.03 WA	Ok

7.5.14 Check of different inputs

Test details – Different inputs			
Test item	Check	Remark	Result
Apply simulated sensor sentences to the sensor inputs File name of 1 st part is ais01_gll_vtg_hdt_rot.sst			
Connect simulator to sensor input 2. Change configuration according to the used input	Check position		Ok
	Check SOG/COG		Ok
	Check heading		Ok
	Check ROT		Ok
Connect simulator to sensor input 3. Change configuration according to the used input	Check position = default		Ok
	Check SOG/COG = default		Ok
	Check heading = default		Ok
	Check ROT = default		Ok
<ul style="list-style-type: none"> • Connect simulator output 1 to sensor input 1 and apply GLL and VTG. File name is ais10_gll_vtg.sst • Connect simulator output 2 to sensor input 2 and apply VBW . , File name is ais11_vbw.sst • Connect simulator output 3 to sensor input 3 and apply HDT and ROT. File name is ais12_hdt_rot.sst 	Check position		Ok
	Check SOG and COG		Ok
	Check heading		Ok
	Check ROT		Ok

7.5.15 Sensor sentences overview

29.08.03 Ba		Supported sentences overview		
Sentence	Description	Required	Supported	Result
	This list is derived from the results of the above tests of the single sentences for overview, not an additional test			
GLL	Geographical Latitude Longitude	required	Yes	Ok
GGA		optional	Yes	Ok
GNS		required	Yes	Ok
RMC		required (COG)	Yes	Ok
DTM		required	Yes	Ok
GBS		required	Yes	Ok
VTG	Velocity True Ground	optional	Yes	Ok
VBW	Velocity Bottom Water	required	Yes	Ok
OSD	Own Ship Data	optional	Yes	Ok
HDT	Heading	required	Yes	Ok
ROT	Rate of Turn	required	Yes	Ok

7.6 19.6 Test of high speed output

(7.6.3)

Method of measurement

Set up standard test environment and simulate VDL-position reports using test system. Record output from the EUT high speed port (see table 11).

Required results

Verify that the recorded message contents agree with the simulated VDL contents (VDM) and own transmitted data (VDO) and in accordance with the sentence specifications of IEC 61162-1.

This contents of VDM and VDO are checked in

- 4.7.1 16.7.1 Received messages and
- 4.7.2 16.7.2 Transmitted Messages

7.6.1 VDM – Received message

Test details – Content of received messages			
Test item	Check	Remark	Result
Transmit all types of messages from other AIS transponder or VDL generator . Check the field content of the fields listed under Test item.			
Message id	8 binary broadcast message, multi slot File name: AIBBM_multi_bin.sst		
Number of sentences	Check that value = 3		Ok
Check sentence number	Check that value = 1,2,3 according to length of message		Ok
Sequential message ident.	Check that counting from 0...9 modulo 10		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 0 (msg length = 1008 bit)		Ok
Message id	14 Safety related broadcast message, multi slot File name: AIBBM_multi_safety.sst		
Number of sentences	Check that value = 3		Ok
Check sentence number	Check that value = 1,2,3		Ok
Sequential message ident.	Check that counting from 0...9 modulo 10		Ok
Channel	Check that the correct value A and B is output		Ok
Fill bits	Check that value = 2 (msg length = 1000)		Ok
Additional checks			
Length of sentence	Confirm that no sentence exceedet the length of 82 character (no warning from monitor program)		Ok
Checksum	Confirm that no sentence had a wrong checksum (no warning from monitor program)		Ok

7.6.2 VDO Transmitted messages

Test details – Content of transmitted messages			
Test item	Check	Remark	Result
Transmit all applicable types of messages Check the field content of the fields listed under Test item.			
Message id	8 binary broadcast message, multi slot File name: AIBBM_multi_bin.sst		
Number of sentences	Check that value = 3	Ok	
Check sentence number	Check that value = 1,2,3 according to length of message	Ok	
Sequential message ident.	Check that counting from 0...9 modulo 10	Ok	
Channel	Check that the correct value A and B is output	Ok	
Fill bits	Check that value = 0 (msg length = 1008 bit)	Ok	
Message id	14 Safety related broadcast message, multi slot File name: AIBBM_multi_safety.sst		
Number of sentences	Check that value = 3	Ok	
Check sentence number	Check that value = 1,2,3	Ok	
Sequential message ident.	Check that counting from 0...9 modulo 10	Ok	
Channel	Check that the correct value A and B is output	Ok	
Fill bits	Check that value = 2 (msg length = 1000 bit)	Ok	
Additional checks			
Length of sentence	Confirm that no sentence exceeded the length of 82 character (no warning from monitor program)	Ok	
Checksum	Confirm that no sentence had a wrong checksum (no warning from monitor program)	Ok	

7.7 19.7 High speed output Interface performance

(7.6.3)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Increase the VDL load to >90%. Record transmitted messages and check PI output of EUT on port for "external Display" and "auxiliary Display".

Required results

Confirm that EUT outputs all received messages to the PI. Repeat test for port "auxiliary display".

Date	Result	Status
24.07.03 Ba	Channel A: 100%, Channel B:97.9%	Ok

7.8 19.8 Test of high speed input

(7.6.3)

Method of measurement

Set-up standard test environment. Apply simulated input data, in accordance with the sentence specifications of IEC 61162-1 and 7.6.3.3 table 10, to the EUT and record VDL output.

Required results

Verify that the VDL message contents agree with simulated input data.

Date	Format	Result	Status
21.11.02	VSD	See test details below	Ok
21.11.02	SSD	See test details below	Ok

All other sentences are tested in special test items

Test details – Evaluation of SSD sentence			
Test item	Check	Remark	Result
Apply an SSD sentence to an high speed input (PI)			
VDL transmission	Check that msg 5 is transmitted after change of data by SSD sentence		Ok
Call sign	Check that the new call sign is transmitted in msg 5		Ok
	Check that the new call sign is displayed on MKD		Ok
Ship's name	Check that the new ship's name is transmitted in msg 5		Ok
	Check that the new ship's name is displayed on MKD		Ok
A – Distance from bow B – Distance from stern C – Distance from port D – Distance from starboard	Check that the new dimensions are transmitted in msg 5		Ok
	Check that the new dimensions are displayed on MKD	For external position sensor	Ok
DTE indicator flag	Check if the DTE flag is entered in VDL message 5 Not required	DTE flag is entered in msg 5	Ok
Source identifier	Check usage of source identifier	The source identifier is used as a talker of the AIS unit. This is incorrect. The talker of the AIS transponder shall always be "AI". See note. <u>Retest 20.08.03 Ba:</u> The source identifier does not change the talker of PI output	Ok

The Source identifier can be used to associate a set of pos ref data included in this sentence to a specific type of position sensor.

So it is e.g. possible to assign one set of position ref. data for a GPS receiver (GP) and another set for an Integrated Navigation equipment (IN). The source "AI" could e.g. used to set the reference position of the internal GPS receiver.

Then it is possible for the AIS transponder to change the set of reference data in msg 5 depending on the actual talker (GP or IN) of the sensor input.

Test details – Evaluation of VSD sentence			
Test item	Check	Remark	Result
Apply an VSD sentence to an high speed input (PI)			
VDL transmission	Check that msg 5 is transmitted after change of data by VSD sentence		Ok
Navigational status	Check that the new Navigational status is transmitted in msg 1		Ok
	Check that the Navigational status is displayed on MKD		Ok
Type of ship and cargo	Check that the new type is transmitted in msg 5		Ok
	Check that the new type of ship is displayed on MKD		Ok
Maximum actual static draught	Check that the new draught is transmitted in msg 5		Ok
	Check that the new draught is displayed on MKD		Ok
Destination	Check that the new destination is transmitted in msg 5		Ok
	Check that the new destination is displayed on MKD		Ok
Estimated Time of Arrival (ETA)	Check that the new ETA is transmitted in msg 5		Ok
	Check that the new ETA is displayed on MKD		Ok
Regional application flag	Check if the regional application flag is entered in VDL message 1		Ok
Persons on board	Check if the persons on board are displayed on MKD Not required	Is not displayed	Acc

8 20 DSC functionality tests

(M.1371 A3)

8.1 20.1 General

(M.1371 A3/1)

- (a) For the tests in this clause, set the EUT into autonomous mode using channels AIS1 and AIS2 with a reporting interval of 2 s (for method of measurement see also IEC 61993-1).
- (b) Check with a sequence of valid calls consisting of a test signal number 1, a geographic call from ITU-R M.493, a test signal number 1, an individual call from ITU-R M.493 and a test signal number 1 that the EUT correctly receives and processes the three tests calls and its correct AIS operation is not affected by the interleaved calls.
- (c) Check that the EUT does not respond to invalid calls - incorrect MMSI, position outside addressed geographic area, different course, or ship's type.
- (d) Send to the EUT a standard test signal number 1 but with symbol numbers 104 and 03 followed by values 01 and 120 (Activate alternate system with group number 1 and sequence number 120). Check that the EUT does not respond.

Test details – General DSC functions check			
Test item	Check	Remark	Result
This is a first check that DSC transmission, reception and addressing is working in principle. Special addressing and data content checking is done in special tests			
Start DSC transmission of Test signal 1 (Position and name request) File name is "eut\Test_Signal_1.sst"	Check that the call is answered -> Contents are checked in a special test	No answer <u>Retest 22.07.03: Call seems to be received. EUT transmits a DSC call, but without modulation.</u> <u>Retest 22.07.03: Ok</u>	Ok
Start DSC transmission of area addressed call (Position and name request) File name is "area_pos_name_rq.sst"	Check that the call is answered within 20 s Contents are checked in a special test	No answer <u>Retest 22.07.03: Ok</u>	Ok

25.07.03 Ba Test details (b) – Sequence of 5 calls			
Test item	Check	Remark	Result
Set reporting interval to 3 s and record VDL			
Start DSC transmission of test sentence File name is "eut\Sequence_20_1.sst" Delay between the calls is 3 s	Check that the three test signal 1 calls are acknowledged Check that the two M.493-calls are not acknowledged Check that the schedule of the AIS position reports is not changed by the transmission of the DSC calls		Ok Ok Ok
Increase the channel load so that there are no 20 free succeeding slots (1 position report every 5 s) Transmit test signal 1	Check that no responses are transmitted by the EUT	EUT responses <u>21.08.03 Retest Ba: No response</u>	Ok

25.07.03 Ba Test details (c), (d) – Check of addressing			
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1 (Position and name request) File name is "eut\Test_Signal_1.sst" Change MMSI according to the test item			
With correct MMSI	Check that the call is answered		Ok
Change MMSI to not matching value	check that call is not answered		Ok
Start DSC transmission of area call (Position and name request) File name is "area_pos_name_rq.sst" Change position, course and type of ship according to the test item			
Position inside area	Check that the call is answered within 20 s		Ok
Change position to outside the area,	check that call is not answered		Ok
Position inside area again, add course matching the course of ship,	check that call is answered	Does not respond <u>21.08.03 Retest Ba: Response Ok</u>	Ok
Change course to a value differing > 2 degrees	Check that call is not answered	<u>21.08.03 Test Ba</u>	Ok
Delete course, add matching type of ship	check that call is answered		Ok
Change type of ship to All ships of this type	check that call is answered	Call is not answer <u>Retest 25.07.03: call is answered</u>	Ok
Change type of ship	Check that call is not answered		Ok

Position inside area , area now in a critical region (lon about 180 degr.) File name =area_pos_name_rq_180.sst	Check that the call is answered within 20 s		Ok
Change position to outside the area,	check that call is not answered		Ok
Start DSC transmission of Selective call with command "Activate alternate system" File name is "eut\sel_act_alt_system.sst"			
Sel. Call with symbols: 104+03+01+120 (68+03+01+78)hex	Check that EUT does not transmit a response		Ok

8.2 20.2 Regional area designation

(M.1371 A3/5)

Perform the test specified in 17.2 using the following DSC command:

Send to the EUT a standard test signal number 1 but with symbol numbers appropriate to the geographical regions and channels specified in the test. Note the transition boundary is 5nm in this test.

Test details – Regional area designation			
Test item	Check	Remark	Result
Send a <u>selective</u> region setting call File name "eut\sel_set_region.sst"	Check that an acknowledgement is received		Ok
	Check that an ACA sentence is output at PI port	ACA of the actual region in use, not an ACA of the new region	Ok
	Check that new region is stored in the region list of the EUT		Ok
	Check that transition zone is 5 nm		Ok
Send a <u>area addressed</u> region setting call File name "area_set_region.sst"	Check that an acknowledgement is received		Ok
	Check that an ACA sentence is output at PI port	ACA of the actual region in use, not an ACA of the new region	Ok
	Check that new region is stored in the region list of the EUT		Ok
	Check that new region is stored in the region list of the EUT		Ok

Send a selective call <u>with channel setting</u> in the area in use. File name"eut\sel_set_ais_channel_65.sst"	Check that an acknowledgement is received		Ok
	Check that AIS channels are set according to the call content		Ok
	Check that new AIS channels are used for transmission and reception		Ok

22.08.03 Ba Test details – Channel management test of 17.2			
Test item	Check	Remark	Result
Set-up EUT in autonomous mode transmitting on channel AIS1/AIS2, send 2 DSC messages, defining 2 adjacent areas with channels A1, B1 and A2, B2. File name is area_set_region_20_2.sst	Use external sensor input to simulate a voyage through both areas. Set the position outside the areas. Set the positions near the limits of the transitional zones to check the dimensions. The transitional zone is 5 nm by default		
MKD display defined area	Check that the defined areas are correctly displayed on MKD or output as ACA on request	The power level is set to low power <u>Retest 25.08.03 Ba:</u> Power level is set to high power	Ok
<u>Item 1:</u>	Check that channels AIS1 and AIS2 are in use		Ok
<u>Item 2:</u> Move position into transitional area of region 2	Check that EUT keeps old channels for 1 min. timing out the transmissions of AIS2		Ok
	Check that channel AIS 1 and A2 are used		Ok
	Check that reporting rate is doubled		Ok
<u>Item 3:</u> Move position into region 2	Check that EUT keeps transitional channels for 1 min. timing out the transmissions of AIS 1		Ok
	Check that channel A2 and B2 are used		Ok
	Check that reporting rate is changed back to normal reporting rate		Ok
<u>Item 4:</u> Move position into transitional area between region 1 and 2	Check that channels A2 and A1 are used		Ok
	Check that reporting rate is doubled		Ok
<u>Item 5:</u> Move position into region 1	Check that channels A1 and B1 are used		Ok
Test Report No. 734.2/0050/2003 / S3220	print date: 07.10.03	page 189	of 229

	Check that reporting rate is changed back to normal reporting rate		Ok
Move position into transitional area of region 1	Check that channels A1 and AIS1 are used		Ok
	Check that reporting rate is doubled		Ok
Move position out of the transitional zone of region 1	Check that channels AIS1 and AIS2 are used		Ok
	Check that reporting rate is changed back to normal reporting rate		Ok

8.3 20.3 Scheduling

(M.1371 A3/2)

Check that the time sequence of the TDMA messages is not changed when the EUT transmits a DSC signal.

Send a valid geographical call to the EUT. Check that the response is transmitted after a random delay distributed over the range of 0 to 20 s and subject to the restrictions of ITU-R M.1371 A3/2.2..

Send a valid geographical call to the EUT followed by a signal consisting of test signal 1 with a signal level of -107 dBm at the receiver input of 25 s duration. Check that the response is not transmitted.

24.07.03 Ba Test details – Scheduling			
Test item	Check	Remark	Result
Set reporting interval to 2 s and record VDL			
Start DSC transmission of test signal 1 File name: "eut\test_signal_1.sst" Delay between calls is 3 s	Check that the schedule of the AIS position reports is not changed by the transmission of the DSC calls		Ok
Send area addressed calls with a rate of 30 s for about 30 min. File name is "area_pos_name_rq.sst"	Record the transmissions and responses with time stamp and enter delay times in a prepared Excel sheet. Add diagram and check times	Random delay is Ok	Ok
Start DSC transmission Test sequence 20.3 (Area call + 25 s test signal 1) File name: "test_sequence_20_3.sst"	Check that EUT does not transmit a response	EUT transmits a response <u>Retest 21.08.09 Ba:</u> no change <u>Retest 25.08.03 Ba:</u> in 3 test no response. Area call without 25 s DSC transmission was responded (crosscheck)	Ok

8.4 20.4 Polling

(M.1371 A3/3)

- (a) Check that the EUT is capable of receiving, processing and automatically transmitting a response to the following calls from ITU-R M.825: 101 (command to duplex-channel), 102, 103, 108, 109, 111, 112, and 116. The sequence of calls consisting of test signals number 1 and valid geographic calls shall demonstrate the capability of the EUT to operate on single frequency channels as well as on two frequency channels.
- (b) Verify through this test, that ships maritime mobile service identify (MMSI), ship name, ships length and type of ship is programmed into the EUT.
- (c) Send a standard test signal number 1 with additional symbols number 109 and 116 and check that the reply messages 100, 119 and 120 are programmed automatically.
- (d) Check that when information is not available to respond to a command the transmitted response is followed by the symbol 126.
- (e) Send a standard test signal number 1 with additional symbol 101 followed by channel number 87. Repeat the test with channel number 88 and with symbol 104 and 00 followed by channel number 2087 and 2088. Check in all cases that the response is made on channel 70.
- (f) Send a DSI sentence to CH 4 and CH 5 (see annex D) with an individual station address and with command sets 103 (report your position) and 111 (report ship name). Check that the EUT does not transmit a DSC message.
- (g) Set the RF output power of the EUT high / low using the appropriate DSC command. Check that the output power is set accordingly.

Test details (a),(b),(c) – Information polling			
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1. File name is "eut\Test_Signal_1.sst". Modify sentence according test item			
Set channel (101+xx) (101+ch 76) (65h+4Ch)	Check that direct answer on channel xx	Answer is transmitted on channel 70 <u>21.08.03 Retest Ba:</u> Response is transmitted on an unknown channel (Tested with ch 70 (46h) and 76 (4Ch)) <u>Retest 22.08.03 Ba:</u> Response on channel 76	Ok
	Check if following answers on channel xx	Following answers are transmitted on channel 70 <u>21.08.03 Retest Ba:</u> Response is transmitted on the unknown channel <u>Retest 22.08.03 Ba:</u> Response on channel 76	Ok

(66 xx) hex	Request automatic position report (102+xx)	Check that immediate response with EOS=BQ is received	Ok
	Check automatic reporting rate		Ok
	Check that further TX are transmitted with EOS = RQ (117)	Repetitions are transmitted with EOS = BQ (122) <u>21.08.03 Retest Ba:</u> Repetitions are transmitted with EOS = RQ (117)	Ok
	Check that automatic reporting is finished after 5 transmissions (without ackn. by base station)	Reporting is finished after 5 transmissions (including direct response)	Ok
	Check that the automatic reporting is not finished with ackn. by base station.	<u>21.08.03 Retest Ba:</u> The automatic position report was continued if ackn by base station with symbol 110 It was finished if acknowledged with a call including the transmitted position data. <u>Retest 22.08.03 Ba:</u> No change <u>Retest 25.08.03 Ba:</u> Automatic position report is continued if acknowledged with the transmitted position in the message part	Ok
Send message with 102+00 (66 00) hex	Check that the automatic position report is finished	No acknowledgement by EUT The automatic position report has been finished <u>21.08.03 Retest Ba:</u> Call has been acknowledged (and the automatic position report has been finished)	Ok Ok
Request position (103) (67 hex)	Check position in response		Ok
	Check time	Not included in the DSC message <u>21.08.03 Retest Ba:</u> Correct time is included in position report	Ok
	Check type of ship	Not included (optional)	Ok
Request length of ship (108=6Ch)	Check length of ship (124=7Ch)		Ok
Request course (109=6Dh)	Check course (119=77h)		Ok
Request ships name (111=6Fh)	Check name (115=73h)	Coding is incorrect: Numbers and Space character are correct, in case of the characters from A...Z there is an offset of 1 to the table in Rec. ITU-R M.825-3 <u>21.08.03 Retest Ba:</u> Coding of	

		the name is correct	Ok
Request ackn. (112=70h)	Check ackn. (110=6Eh)	No answer received <u>21.08.03 Retest Ba:</u> Response with symbol 112, should be responded with symbol 110 <u>Retest 22.08.03 Ba:</u> Response with symbol 110	Ok
Request speed (116=74h)	Check speed (120=78h)		Ok
(C) Request test signal 1 (pos, name request) + 109 + 116 (6F 67 6D 74))	Check automatic response submitting <ul style="list-style-type: none"> name (115=73h), position (100=64h), course 119=77h) and speed (120=78h) 		Ok
Send <ul style="list-style-type: none"> modified test signal 1 (101+72)=(65h+48h) (set DSC channel to a simplex channel) + Geographically addressed call. File: sel_check_channel.sst	Check that the communication on selected simplex channel is working	<u>Test 22.08.03 Ba</u>	Ok
Send <ul style="list-style-type: none"> Modified test signal 1 (101+60) =(65h+3Ch) (set DSC channel to a duplex channel) + Geographically addressed call. 	Check that the communication on selected duplex channel is working	<u>Test 22.08.03 Ba</u>	Ok
	Check that the AIS transmits on the ship station frequency of the duplex channel (lower band frequency)	<u>Test 22.08.03 Ba</u>	Ok

25.07.03 Ba Test details (d) – polling, information not available			
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1. File name is "eut\Test_Signal_1.sst" Change request symbols according to the test item.			
Request position (103 = 67h)	Check response = (100+126) = (64 7E)h		Ok
Request length of ship (108 = 6Ch)	Check length of ship (124+126) = (7C 7E)h		Ok
Request course (109 = 6Dh)	Check course (119 + 126) = (77 7E)h	A course value of 360 is responded, should be 126 <u>21.08.03 Retest Ba:</u> responded with symbol 126	Ok
Request ships name (111 = 6Fh)	Check name (115 + 126) = (73 7E)h	18 x space character (symbol 29) is output, only 1 x symbol 126 should be output <u>21.08.03 Retest Ba:</u> Responded with 1 symbol 126	Ok
Request speed (116 = 74h)	Check speed (120 + 126) = (78 7E)h	A speed value of 1023 is responded, should be 1x symbol 126 <u>21.08.03 Retest Ba:</u> Responded with symbol 126	Ok

22.08.03 Ba Test details (e) – Use of AIS channels for DSC			
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1. File name is "eut\Test_Signal_1.sst". Modify sentence according test item			
Set channel (101+87) (65 57) + 67 (pos requ.)	Check that response is transmitted on channel 70		Ok
Set channel (101+88) (65 58) + 67	Check that response is transmitted on channel 70		Ok
Set channel (104+00+2087) (68 00 14 57) + 67	Check that response is transmitted on channel 70		Ok
Set channel (104+00+2088) (68 00 14 58) + 67	Check that response is transmitted on channel 70		Ok

25.07.03 Ba Test details (f) – DSI sentence check			
Test item	Check	Remark	Result
Apply DSI sentence to the PI interface. File name is ais_dsi.sst			
ON CH4 = PI interface	Check that the EUT does not transmit a DSC message.		Ok

25.07.03 Ba Test details (g) – Power setting check			
Test item	Check	Remark	Result
Start DSC transmission of Test signal 1. File name is "eut\Test_Signal_1.sst". Modify sentence according test item			
Ad symbols to set power = 2 watt (low power) (Symbols 104+ 01+ 02) (68 01 02) h	Check that response is transmitted with low power	No response received A response is received only if another request is included in the call. This response is transmitted with high power <u>21.08.03 Retest Ba:</u> Response is transmitted with low power	Ok
Request position (103 = 67 h)	Check that response is transmitted with low power	Is transmitted with high power <u>21.08.03 Retest Ba:</u> Response is transmitted with low power	Ok
Ad symbols to set power = 12.5 watt (high power) (Symbols 104+ 01+ 12) (68 01 0C) h	Check that response is transmitted with high power	<u>21.08.03 Test Ba:</u> Response is transmitted with high power	Ok
Request position (103 = 67 h)	Check that response is transmitted with high power	<u>21.08.03 Test Ba:</u> Response is transmitted with low power	Ok

9 21 Long Range functionality tests

(9)

9.1 21.1 LR interrogation

(9.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply a LR addressed interrogation message to the LR-interface port of EUT; Record LR output port and AIS high-speed output port Set EUT to

- Automatic response
- Manual response via MKD
- Manual response via PI

Required results

Check that EUT displays LR interrogation messages and sends to PI.

Check that EUT outputs a LR position report message

- Automatically (and indicates action on display)
- After manual confirmation via MKD
- After manual confirmation via PI

Test details – LR automatic response, all data			
Test item	Check	Remark	Result
Set EUT to automatic response.			
Apply an addressed request to the LR port of EUT requesting all possible information			
File name: LRI_LRF_MMSI_all.sst			
Response	Check that a response is output on LR port		Ok
Display on MKD	Check that the request is displayed on MKD		Ok
	Check that replay status is displayed on MKD		Ok
PI output	Check that LR interrogation and response is output on PI		Ok
Contents of LRF response	Check output of LRF sentence		Ok
	Check that sequence number = request		Ok
	Check MMSI = requestor		Ok
	Check name of requestor		Ok
	Check function request = request	EUT outputs an empty field <u>19.08.03 Ba Retest:</u> Function request field is Ok	Ok
Test Report No.. 734.2/0050/2003 / S3220	print date: 07.10.03	page 196	of 229

	Check that function reply is according to the availability of data (2=avail, 3= not av.)	Ok
Contents of LR1 response	Check output of LR1 sentence	Ok
	Check that sequence number = request = LRF	Ok
	Check own MMSI	Ok
	Check MMSI of responder = responder of request	Ok
	Check ship's name	Ok
	Check Call sign	Ok
	Check IMO number	Ok
Contents of LR2 response	Check output of LR2 sentence	Ok
	Check that sequence number = request = LRF	Ok
	Check MMSI of responder = responder of request	Ok
	Check date, UTC	Ok
	Check Lat, Lon	Output resolution is in units of 1/10 min, should be in units of 1 min <u>19.08.03 Ba Retest:</u> Lat and long are in units of min
	Check COG	Output resolution is in units of 1/10 degrees, should be in units of 1 degrees (rounded) <u>19.08.03 Ba Retest:</u> COG is in units of degrees (correctly rounded)
	Check SOG	Ok
Contents of LR3 response	Check output of LR3 sentence	Ok
	Check that sequence number = request = LRF	Ok
	Check MMSI of responder = responder of request	Ok
	Check destination	Ok
	Check ETA	Date and time are always 0002 <u>19.08.03 Ba Retest:</u> Date day and month is Ok, time is Ok, year is 00, could better be the actual year
	Check draught	Ok
	Check ship/cargo	Ok
	Check length of ship	Ok
	Check breadth of ship	Ok
	Check ship type	Ok
	Check persons	Ok

25.07.03 Ba Test details – LR automatic response, selected data			
Test item	Check	Remark	Result
Set EUT to automatic response.			
Apply an addressed request to the LR port of EUT requesting selected information			
File name: LRI_LRF_MMSI_all.sst, modified by deleting not requested information			
Request A Name Call sign IMO number	Check that only LF and LR1 is transmitted		Ok
	Check that function request field = request	Field is empty	Ok
	Check that function reply status field matches request and data availability		Ok
	Check that the requested fields are not empty		Ok
Request A,E,F Name Call sign IMO number COG SOG	Check that only LF and LR1 and LR2 is transmitted		Ok
	Check that function request field = request	See above	Ok
	Check that function reply status field matches request and data availability		Ok
	Check that requested fields are provided		Ok
	Check that only requested fields are not empty		Ok
	Check that only LF and LR2 are transmitted		Ok
Request C,E,F Position COG SOG	Check that function request field = request	See above	Ok
	Check that function reply status field matches request and data availability		Ok
	Check that requested fields are provided		Ok
	Check that only requested fields are not empty		Ok
	Check that only LF and LR3 is transmitted	LR1 is output too	Ok
Request P,W Ship/cargo Persons	Check that function request field = request	See above	Ok
	Check that function reply status field matches request and data availability		Ok
	Check that requested fields are provided		Ok
	Check that only requested fields are not empty		Ok

25.07.03 Ba Test details – Manual Confirmation			
Test item	Check	Remark	Result
Set EUT to manual response. Apply an addressed request to the LR port of EUT requesting all possible information File name: LRI_LRF_MMSI_all.sst			
Display on MKD	Check that the request for manual response is displayed on MKD		Ok
	Check that response is transmitted after manual confirmation on MKD		Ok

25.07.03 Ba Test details – Confirmation via PI			
Test item	Check	Remark	Result
Set EUT to external response if implemented (not required). Apply an addressed request to the LR port of EUT requesting all possible information File name: LRI_LRF_MMSI_all.sst			
Confirmation via PI	Check that the request for manual response is output on PI	Not implemented (not required)	Acc
	Check that response is transmitted after external confirmation via PI		N/A

9.2 21.2 LR “all ships” interrogations

(9.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Apply a LR “all ships” interrogation message to the LR-interface port of EUT defining a geographical area which contains own ships position; Record LR output port. Set EUT to

- *Automatic response*
- *Manual response.*

Repeat check with own ship outside specified area.

Required results

Check that EUT outputs a LR position report message

- *Automatically (and indicates action on display)*
- *After manual confirmation.*

No response shall be output on the repeat check.

25.07.03 Ba Test details – Area addressing - Automatic response			
Test item	Check	Remark	Result
Set EUT to automatic response			
Apply an area addressed request to the LR port of EUT requesting position and speed information			
Own position in Area File name: LRI_LRF_area_CEF.sst	Check that the request is automatically responded		Ok
	Check that the request and response status is displayed on MKD		Ok
	Check that the request and response is output on PI		Ok
Own position not in Area File name: LRI_LRF_out_area_CEF.sst	Check that the request is not responded		Ok
	Check that the request is not displayed on MKD		Ok
	Check that the request is not output on PI		Ok

25.07.03 Ba Test details – Area addressing – Manual confirmation			
Test item	Check	Remark	Result
Set EUT to manual response			
Apply an area addressed request to the LR port of EUT requesting position and speed information			
Own position in Area File name: LRI_LRF_area_CEF.sst	Check that the request is displayed on MKD		Ok
	Check that response is transmitted on confirmation on MKD		Ok
	Check that the request and response is output on PI		Ok
Own position not in Area File name: LRI_LRF_out_area_CEF.sst	Check that the request is not displayed on MKD		Ok
	Check that the request is not output on PI		Ok

9.3 21.3 Consecutive LR “all ships” interrogations

(9.2)

Method of measurement

Set-up standard test environment and operate EUT in autonomous mode. Set EUT to automatic mode. Apply 5 LR “all ships” interrogation messages to the LR-interface port of EUT defining a geographical area which contains own ships position;

Record LR output port. Set the control flag in the LRI message to

- 0 (reply on first interrogation only)
- 1 (reply on all applicable interrogations)

Required results

Check that EUT outputs a LR position report message

- *On the first interrogation only*
- *On all interrogations.*

25.07.03 Ba Test details – Area addressing - Automatic response			
Test item	Check	Remark	Result
Set EUT to automatic response Apply some area addressed requests to the LR port of EUT requesting position and speed information File name: LRI_LRF_area_CEF.sst			
Control flag = 1 (reply on all requests)	Check that the 1. request is automatically responded		Ok
	Check that the following interrogations are responded		Ok
Control flag = 0 (reply only on first request) Change MMSI to get the first response	Check that the 1. request is automatically responded		Ok
	Check that the following interrogations are not responded		Ok
	Check that the following interrogations are not displayed on MKD		Ok
	Check that the following interrogations are not output on PI		Ok

Annex A Test equipment

A.1 Test equipment summary

#	description	type	identification
1	VDL analyser / Generator	Attingimus UAIS Test unit	S/N 001 BSH PC5593 SW AISterm V1.0rev47 AISmain V1.47011120R
2	Target simulator	Simutech	BSH PC3007 SW BSHSIM7T
3	Presentation Interface Monitor	BSH	BSH PC 3481 BSH PC 3544 SW NewMoni V2.1
4	DSC Testbox	DEBEG 3817 DEBEG 6348	S/N 475533
Auxiliaries:			
5	Digital Multimeter	Voltcraft	S/N 1010365036
6	Fluke Scopemeter	123	BSH 101275/2001
7	5 Converters RS 422 to RS 232		
8	1 fixed voltage power supply (24 V/10A)		
9	3 adjustable power supplies (30 V/5 A)		
10	active retransmitting GPS antenna		

for a description of pos. 1-4 see below

A.1.1 VDL analyser / generator

The VDL analyser/generator:

- receives the radio data telegrams transmitted by the AIS under test, slotwise evaluates their radio parameters (field strength, SNR, etc.) and provides a transparent display of the decoded radio data telegrams (VDL messages).
- transmits radio data telegrams which have been entered/edited via a control panel. The AIS under test receives these messages and either passes the received data to its presentation interface and/or responds as appropriate.
- records all data contained in the received radio telegrams and radio parameters in a data base for offline evaluation and documentation purposes.
- simulates AIS targets by transmitting position reports of virtual targets up to the maximum channel capacity.

A.1.2 Target simulator

The target simulator consists of a standard PC with

- special Radar and Target Simulator software
- extension boards for generation of Radar signals and RS422 serial output signals

Connection of AIS Test system

For tests of AIS transponders the data of 60 moving targets defined in the Radar Simulator are transferred to the VDL Generator and transmitted on VHF. Thus the AIS VHF data link is loaded with simulated AIS targets.

Connection of display systems

Radar systems as well as ECDIS systems will have the ability to receive, process and display AIS information in the near future. In order to test this feature the data of moving targets defined in the Radar Simulator are transferred to the RADAR (together with video, sensor data etc as known).

Connection of AIS under Test

The AIS under test can be connected to the own ship sensor outputs in order to provide full control over own ships dynamic data (for tests of reporting rates, channel management...).

A.1.3 Presentation Interface Monitor

The Presentation Interface Monitor is a PC software running on two standard PCs.

It is used to

- simulate Sensor inputs
- analyse the AIS high speed input / output
- analyse the AIS long range function
- generate DSC calls for the DSC test box and to display, log and evaluate the received DSC calls from EUT.

For that purpose it includes the functions:

- coding / decoding of NMEA 6-bit data fields
- online AIS message filtering
- online AIS message editing
- load and transmit predefined sequences
- online modification of transmitted sequences

A.1.4 DSC Testbox

The DSC test box includes:


- A standard VHF DSC controller DEBEG 3817 with open interface
- A standard VHF radiotelephone DEBEG 6348

The software modification of the DSC controller comprises a remote control input/output facility

- to transmit DSC calls according to ITU 825-3 generated in an external device on DSC channel 70 and
- to output received DSC calls from the EUT to the external device.

The Presentation Interface Monitor is used to generate the DSC calls and to display, log and evaluate the received DSC calls.

A.2 Test environment overview

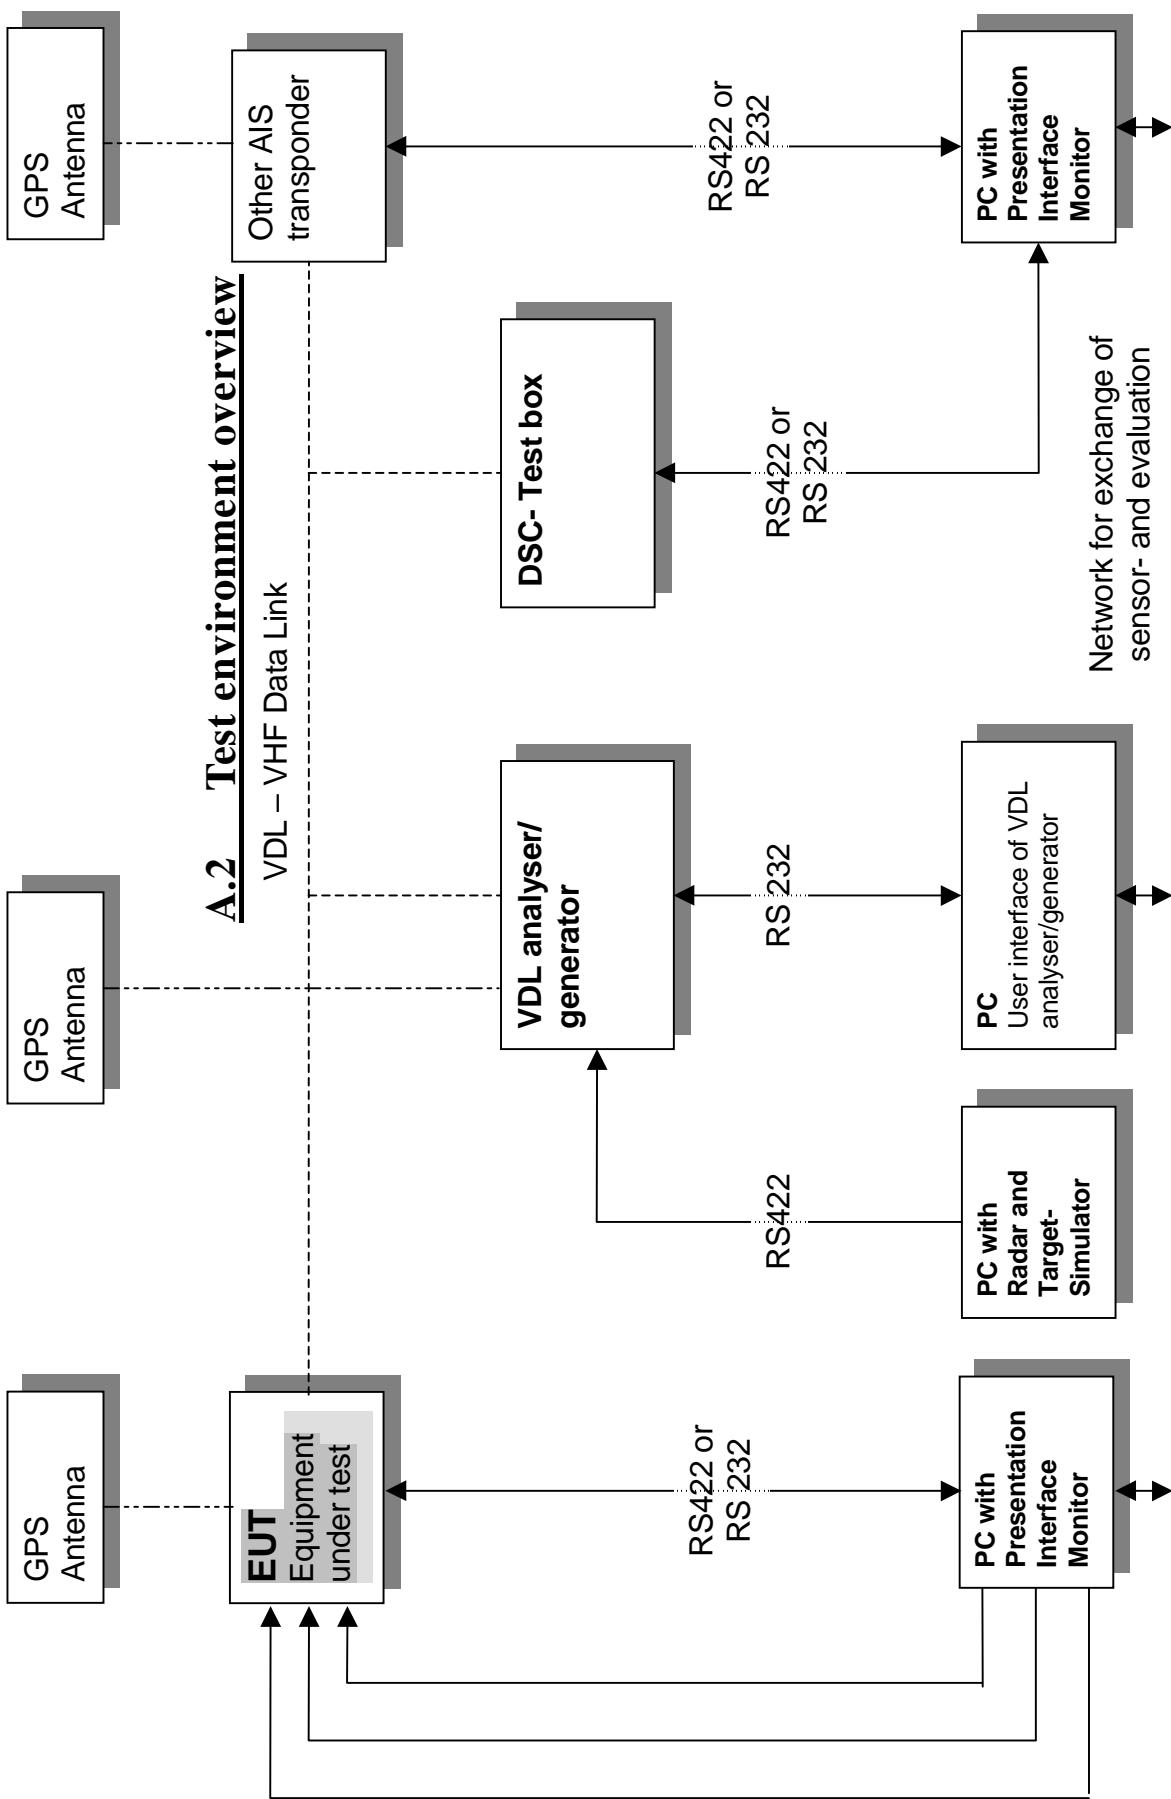

Annex B Test sentences

B.1 IEC 61162 test sentences

Many of the test sentences are modified manually during the test according to the requirements of the actual test items.

Mainly the MMSI in all addressed sentences are adapted to the actual MMSI of the EUT or of the unit the EUT communicates with.

In addition the files containing these sentences contain also some control information used by the monitor program like:

<UTC> is replaced by the actual UTC time at time of output

<WAIT EVENT> waiting for user action before next output

<WAIT xxxx> waiting xxx ms before next output

This control information is not shown in the following sentence examples because it is not sent to the EUT.

B.1.1 Sensor input

Sensor input sentences	
File name	Description
Sentences	
AIS01_gll_vtg_hdt_rot.sst	Standard sensor input sentences \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A
AIS01d_dtm_gll_vtg_hdt_rot.sst	Standard sensor input with DTM Similar files with an additional DTM sentence are also available for the other position sentence sets and not listed explicitly \$GPDTM,w84,,,,,,P90 \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A
AIS01g_gll_vtg_gbs_hdt_rot.sst	Standard sensor input with GBS sentence \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A \$GPGBS,141800.00,2.6,2.8,4.2,,,, \$TIHDT,359.9,T \$TIROT,0.0,A
AIS01x_gll_vtg_hdt_rot_180.sst	Standard sensor input at Longitude of 180°

<pre> \$GPGLL,0001.00,N,17959.00,W,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A </pre>	
AIS02_gga_vtg_hdt_rot.sst	Sensor Input set with GGA position
	<pre> \$GPGLL,092854,5330.1234,N,01001.2345,E,1,3,1.2,65.2,M,45.1,M,,, \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A </pre>
AIS02d_dtm_gga_vtg_hdt_rot.sst	Sensor Input set with GGA position and DTM
	<pre> \$GPDTM,999,,P90 \$GPGLL,092854,5330.1234,N,01001.2345,E,1,3,1.2,65.2,M,45.1,M,,, \$GPVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A </pre>
AIS03_gns_vtg_hdt_rot.sst	Sensor input set with GNS position
	<pre> \$GNGNSS,122500.00,5330.1234,N,01001.2345,E,AA,5,1.2,35.5,41.1,,, \$GNVTG,350.0,T,,M,10.0,N,,K,A \$TIHDT,359.9,T \$TIROT,0.0,A </pre>
AIS04_rmc_hdt_rot.sst	Sensor input set with RMC position and speed
	<pre> \$GPRMC,122500.00,A,5330.1234,N,01001.2345,E,11.2,352.2,120202,2.0,E,A \$TIHDT,359.9,T \$TIROT,0.0,A </pre>
AIS06_gll_vtg_vbw_hdt_rot.sst	Sensor input set with speed by VBW and VTG
	<pre> \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A \$VDVBW,11.00,01.00,A,12.00,02.00,A,,V,,V \$TIHDT,359.9,T \$TIROT,0.0,A </pre>
AIS07_osd.sst	Single OSD sentence
	<pre> \$INOSD,359.9,A,5.2,B,12.6,B,150.0,1.2,N </pre>
AIS08_gll_vbw_hdt_rot.sst	Standard sensor input with VBW instead of VTG
	<pre> \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$VDVBW,11.00,01.00,A,12.00,02.00,A,,V,,V \$TIHDT,359.9,T \$TIROT,0.0,A </pre>
AIS09_gll_osd.sst	Sensor input set with GLL and OSD
	<pre> \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$INOSD,359.9,A,5.2,B,12.6,B,150.0,1.2,N </pre>
AIS10_gll_vtg.sst	GPS receiver sentences (GLL and VTG)
	<pre> \$GPGLL,5330.1234,N,01001.2345,E,141800.00,A,A \$GPVTG,350.0,T,,M,10.0,N,,K,A </pre>
AIS11_vbw.sst	Log sentence VBW
	<pre> \$VDVBW,11.00,01.00,A,12.00,02.00,A,,V,,V </pre>
AIS12_hdt_rot.sst	Gyro sentences (HDT and ROT)
	<pre> \$TIHDT,359.9,T \$TIROT,0.0,A </pre>

--

B.1.2 Settings (VSD,SSD)

Settings (VSD,SSD)	
File name	Description
Sentences	
AISSD_transpondertype.sst	Settings of static data, specific set for each transponder type
\$AISSD,callsign,name,100,20,15,10,1,GP	
AIVSD_Hamburg.sst	Settings of voyage related data
\$AIVSD,51,11.5,26,HAMBURG,131020,20,05,0,0	

B.1.3 Messages (ABM,BBM)

The addressed messages include a MMSI number which is changed according to the actual MMSI number of the EUT

Messages (ABM,BBM)	
File name	Description
Sentences	
AIABM_bin.sst	Standard addressed binary message
!AIABM,1,1,2,000001005,1,6,06P0test,0	
AIABM_safety.sst	Standard addressed safety related message
!AIABM,1,1,2,000001005,1,12,D5CD,0	
AIABM_4_bin.sst	Set of 4 addressed binary messages
!AIABM,1,1,3,000008001,1,6,06P0test,0	
!AIABM,1,1,0,000008001,2,6,06P0test,0	
!AIABM,1,1,1,000008001,1,6,06P0test,0	
!AIABM,1,1,2,000008001,2,6,06P0test,0	
AIABM_4_safety.sst	Set of 4 addressed safety related messages
!AIABM,1,1,0,000001005,1,12,D5CD,0	
!AIABM,1,1,1,000001005,1,12,D5CD,0	
!AIABM,1,1,2,000001005,1,12,D5CD,0	
!AIABM,1,1,3,000001005,1,12,D5CD,0	
AIBBM_bin.sst	Standard binary broadcast message
!AIBBM,1,1,6,1,8,06P0test,0	
AIBBM_safety.sst	Standard safety related broadcast message
!AIBBM,1,1,6,1,14,D5CD,0	
AIBBM_5_bin.sst	Set of 5 binary broadcast messages

<pre>!AIBBM,1,1,7,0,8,06P0test1,0 !AIBBM,1,1,8,0,8,06P0test2,0 !AIBBM,1,1,9,0,8,06P0test3,0 !AIBBM,1,1,0,0,8,06P0test4,0 !AIBBM,1,1,1,0,8,06P0test5,0</pre>	
AIBBM_5_safety.sst	Set of 5 safety related broadcast messages
	<pre>!AIBBM,1,1,6,0,14,D5CDi,0 !AIBBM,1,1,7,0,14,D5CDj,0 !AIBBM,1,1,8,0,14,D5CDk,0 !AIBBM,1,1,9,0,14,D5CDl,0 !AIBBM,1,1,0,0,14,D5CDm,0</pre>
AIBBM_bin_stuffing.sst	Special message for bit stuffing test
	<pre>!AIBBM,1,1,6,1,8,06Qv>khvOP,4</pre>
AIBBM_multi_bin.sst	Long 5 slot binary broadcast message
	<pre>!AIBBM,4,1,6,2,8,06P0456789012345678901234567890123456789,0 !AIBBM,4,2,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,3,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,4,6,2,8,012345678901234567890123456789012345678901,4</pre>
AIBBM_multi_safety.sst	Long 5 slot safety related broadcast message
	<pre>!AIBBM,4,1,6,2,14,0123456789012345678901234567890123456789,0 !AIBBM,4,2,6,2,14,0123456789012345678901234567890123456789,0 !AIBBM,4,3,6,2,14,0123456789012345678901234567890123456789,0 !AIBBM,4,4,6,2,14,0123456789012345678901234567890123456789,0</pre>
AIBBM_multi_bin_1.sst	Longer than 5 slots binary broadcast message, all bits 1
	<pre>!AIBBM,4,1,1,1,8,wwwwwwwwwwwwwwwwwwwwwwwwwwww,0 !AIBBM,4,2,1,1,8,wwwwwwwwwwwwwwwwwwwwwwwwwwww,0 !AIBBM,4,3,1,1,8,wwwwwwwwwwwwwwwwwwwwwwwwwwww,0 !AIBBM,4,4,1,1,8,wwwwwwwwwwwwwwwwwwwwwwwwwwww,0</pre>
AIBBM_ABM_17_5.sst	Set of 2 long messages 8 and 12 for message priority test
	<pre>!AIBBM,4,1,6,2,8,06P045678901234567890123456789,0 !AIBBM,4,2,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,3,6,2,8,0123456789012345678901234567890123456789,0 !AIBBM,4,4,6,2,8,0123456789012345678901234567890123456789,0 !AIABM,4,1,2,000001005,1,12,0123456789012345678901234567890123456789,0 !AIABM,4,2,2,000001005,1,12,0123456789012345678901234567890123456789,0 !AIABM,4,3,2,000001005,1,12,0123456789012345678901234567890123456789,0 !AIABM,4,4,2,000001005,1,12,0123456789012345678901234567890123456789,0</pre>
AIBBM_25.sst	25 broadcast message to check 20 slots per frame rule

```
!AIBBM,1,1,6,1,8,06P0test1,0
!AIBBM,1,1,6,1,14,D5CD1,0
!AIBBM,1,1,7,1,8,06P0test2,0
!AIBBM,1,1,7,1,14,D5CD2,0
!AIBBM,1,1,8,1,8,06P0test3,0
!AIBBM,1,1,8,1,14,D5CD3,0
!AIBBM,1,1,9,1,8,06P0test4,0
!AIBBM,1,1,9,1,14,D5CD4,0
!AIBBM,1,1,0,1,8,06P0test5,0
!AIBBM,1,1,0,1,14,D5CD5,0
!AIBBM,1,1,1,1,8,06P0test6,0
!AIBBM,1,1,1,1,14,D5CD6,0
!AIBBM,1,1,2,1,8,06P0test7,0
!AIBBM,1,1,2,1,14,D5CD7,0
!AIBBM,1,1,3,1,8,06P0test8,0
!AIBBM,1,1,3,1,14,D5CD8,0
!AIBBM,1,1,4,1,8,06P0test9,0
!AIBBM,1,1,4,1,14,D5CD9,0
!AIBBM,1,1,5,1,8,06P0test10,0
!AIBBM,1,1,5,1,14,D5CD10,0
!AIBBM,1,1,6,1,8,06P0test11,0
!AIBBM,1,1,6,1,14,D5CD11,0
!AIBBM,1,1,7,1,8,06P0test12,0
!AIBBM,1,1,7,1,14,D5CD12,0
!AIBBM,1,1,7,1,8,06P0test13,0
```

AIAIR_5.sst	Simple interrogation for msg 5
\$AIAIR,000001005,5,,,,,	
AIAIR_35_5.sst	Interrogation of msg 3 and 5 from ID1 and msg 5 from ID2
\$AIAIR,000005002,3,,5,,000007001,5,,	
AIS_DSI.sst	Test that EUT ignores command to send a DSC msg
\$AIDSI,1,1,2210393930,,,03,,11,,	

B.1.4 Regional operational settings (ACA)

Regional operational settings (ACA)	
File name	Description
Sentences	
AIACA_Region_in_ch86.SST	Region around standard position with test channels
\$ECACA,2,5400.0,N,01030.0,E,5300.0,N,00930.0,E,4,2086,0,1086,0,0,1,,,	
AIACA_Region_out_ch74_76.SST	Region not including standard position with channels 74 and 76
\$ECACA,2,5500.0,N,00900.0,E,5400.0,N,00800.0,E,4,0074,0,0076,0,0,1,,,	
AIACA_Region_17_3_SW.SST	2 adjacent regions in SW quadrant, for test 17.3

\$ECACA, 2, 3000.00, S, 01200.00, W, 3100.00, S, 01300.00, E, 1, 2081, 0, 1081, 0, 0, 1, , , \$ECACA, 2, 3000.00, S, 01100.00, W, 3100.00, S, 01200.00, E, 1, 2082, 0, 1082, 0, 0, 1, , ,	
AIACA_8_Regions_17_7_1.SST	8 different regions to fill quickly the complete list, for test 17.7.1
\$ECACA, , 5400.00, N, 01030.00, E, 5300.00, N, 00930.00, E, 2, 72, 0, 74, 0, 0, 1, , , \$ECACA, , 5200.00, N, 00700.00, E, 5100.00, N, 00600.00, E, 2, 2060, 0, 1060, 0, 0, 1, , , \$ECACA, , 5200.00, N, 00900.00, E, 5100.00, N, 00800.00, E, 2, 2061, 0, 1061, 0, 0, 1, , , \$ECACA, , 5200.00, N, 01100.00, E, 5100.00, N, 01000.00, E, 2, 2062, 0, 1062, 0, 0, 1, , , \$ECACA, , 5200.00, N, 01300.00, E, 5100.00, N, 01200.00, E, 2, 2063, 0, 1063, 0, 0, 1, , , \$ECACA, , 5200.00, N, 01500.00, E, 5100.00, N, 01400.00, E, 2, 2064, 0, 1064, 0, 0, 1, , , \$ECACA, , 5100.00, N, 00800.00, E, 5000.00, N, 00700.00, E, 2, 2065, 0, 1065, 0, 0, 1, , , \$ECACA, , 5100.00, N, 01000.00, E, 5000.00, N, 00900.00, E, 2, 2066, 0, 1066, 0, 0, 1, , ,	
AIACA_Region_17_7_2_c.SST	Region for test 17.7.2 c
\$ECACA, 2, 5430.00, N, 01200.00, E, 5300.00, N, 01100.00, E, 4, 2083, 0, 1083, 0, 0, 1, , ,	
AIACA_Region_17_7_2_f.SST	Region for test 17.7.2 f
\$ECACA, 2, 5300.00, N, 01320.00, E, 5200.00, N, 01200.00, E, 4, 2081, 0, 1081, 0, 0, 1, , ,	
AIACA_Region_17_7_4.SST	4 adjacent regions for test 17.7.2 f
\$ECACA, 2, 5800.00, N, 00800.00, E, 5700.00, N, 00700.00, E, 4, 2081, 0, 1081, 0, 0, 1, , , \$ECACA, 2, 5800.00, N, 00900.00, E, 5700.00, N, 00800.00, E, 4, 2082, 0, 1082, 0, 0, 1, , , \$ECACA, 2, 5700.00, N, 00800.00, E, 5600.00, N, 00700.00, E, 4, 2083, 0, 1083, 0, 0, 1, , , \$ECACA, 2, 5700.00, N, 00900.00, E, 5600.00, N, 00800.00, E, 4, 2084, 0, 1084, 0, 0, 1, , ,	
AIACA_Region_Ion180.SST	Special region at longitude = 180°
\$ECACA, 2, 0100.00, N, 17900.00, W, 0100.00, S, 17900.00, E, 2, 0074, 0, 0076, 0, 0, 1, , ,	
AIACA_Set_channel.SST	Set channel command, without area co-ordinates
\$ECACA, , N, , W, , N, , W, 2, 2074, 0, 2076, 0, 0, 1, , ,	
Request_ACA.SST	Request of ACA sentences from EUT
\$ECAIQ, ACA	

B.1.5 Long range requests

The of long range requests include a MMSI number which is changed according to the actual MMSI number the EUT

Long Range (LRI, LRF)	
File name	Description
Sentences	
LRI_LRF_MMSI_all.sst	Request of all data addressed by MMSI \$LRLRI,5,0,211003000,000002002,, \$LRLRF,5,211003000,VTS,ABCEFIOPUW,
LRI_LRF_area_CEF.sst	Request of some data addressed by area \$LRLRI,6,1,211003000,,6000.0,N,2000.0,E,4000.0,N,0500.0,E \$LRLRF,6,211003000,VTS,CEF,
LRI_LRF_out_area_CEF.sst	Request of some data addressed by area, standard position not in area \$LRLRI,6,1,211003000,,6000.0,N,1500.0,E,5500.0,N,0800.0,E \$LRLRF,6,211003000,VTS,CEF,
LRI_LRF_area_at_180_CEF.sst	Request of some data addressed by area, area around longitude of 180° and latitude of 0° \$LRLRI,6,1,211003000,,0500.0,N,17500.0,W,0500.0,S,17500.0,E \$LRLRF,6,211003000,VTS,CEF,
LRF_ack_all.sst	For external confirmation of request \$LRLRF,5,211003000,VTS,ABCEFIOPUW,

B.2 DSC sentences

The sentences are listed as they are applied to the DSC Testbox for transmission of DSC test calls. There is a special format used based on an earlier definition of NMEA private sentences.

The frame for transmitting a DSC call is:

\$PDEBT,CCDSC,T,00014600<call content>FF

The <call content> has to be entered in Hex code, 2 hex numbers for each 7 bit DSC symbol, without spaces, beginning with the format specifiere which included only ones. The DSC coding and addition of redundancy (3 bit symbol redundancy and symbol repetition) are done by the test box. The content description of the calls is available on request.

The DSC sentences include MMSI number which is changed according to the actual MMSI number the EUT

DSC Sentences

File name	Description
Sentences	
Test_Signal_1.sst	Standard test signal no 1, selective position and name request. \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E676F75FF
area_pos_name_rq.sst	Position and name request addressed to an area, standard position inside \$PDEBT, CCDSC, T, 000146006705280000091E003C003C0067150A27271E676F75FF
area_pos_name_rq_180.sst	Position and name request addressed to an area around a longitude of 180° and latitude of 0°. \$PDEBT, CCDSC, T, 0001460067000300014F1E003C003C0067150A27271E676F75FF
sel_set_region.sst	Selective regional setting by DSC, standard pos. outside, channel 61 \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E68090A3D00680A143D00680C053C0001140068 0D053200010A0075FF
sel_set_region_in.sst	Selective regional setting, standard position inside, channel 72, 73, 12.5 kHz \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E680900480A680A00490A680C05280001030068 0D051E00005D0075FF
sel_set_region_17_7_2.sst	Selective regional setting for test 17.7.2 \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E6809145200680A0A5200680C051E0001280068 0D051400011E0075FF
sel_set_region_17_2.sst	2 regional settings for DSC test according to 17_2 \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E6809145200680A0A5200680C051E0001280068 0D051400011E0075FF \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E6809145100680A0A5100680C05140001280068 0D050A00011E0075FF
sel_set_ais_channel_ch65.sst	Setting AIS channel to 65 \$PDEBT, CCDSC, T, 0001460078000001005067150A27271E68090A4100680A14410075FF
sel_check_channel.sst	Test of channel use in 20.4 \$PDEBT, CCDSC, T, 0001460078000001010067150A27271E654875FF \$PDEBT, CCDSC, T, 000146006705280000091E003C003C0067150A27271E676F75FF
area_set_region.sst	Area addressed regional setting, standard position inside address, but not inside area, Ch 60 \$PDEBT, CCDSC, T, 000146006705280000091E003C003C0067150A27271E68090A3C00680A143C00680C05 1400005A00680D050A0000500075FF
area_set_region_20_2.sst	Area addressed regional setting for test 20.2 \$PDEBT, CCDSC, T, 00014600670F3200000E00005A005A0067150A27271E6809145200680A0A5200680C0F 1E00011E00680D0F140001280075FF \$PDEBT, CCDSC, T, 00014600670F3200000E00005A005A0067150A27271E6809145100680A0A5100680C0F 1400011E00680D0F0A0001280075FF
Sequence_20_1sst	Area addressed regional setting, standard position inside address, but not inside area, Ch 60 \$PDEBT, CCDSC, T, 0001460078000001010067150A27271E676F75FF \$PDEBT, CCDSC, T, 00014600660600050A0A64150A27271E646E5A00487E7E7E7FFF \$PDEBT, CCDSC, T, 0001460078000001010067150A27271E676F75FF \$PDEBT, CCDSC, T, 0001460078000001010067150A27271E646E5A00487E7E7E75FF \$PDEBT, CCDSC, T, 0001460078000001010067150A27271E676F75FF
Test_sequence_20_3.sst	Sequence of an area addressed call and continues transmission of other call for test of free channel check

\$PDEBT, CCDSC, T, 000146006705320000091E003C003C0067150A27271E676F75FF
\$PDEBT, CCDSC, T, 0008460078000000010167150A27271E676F75FF

Sel_act_alt_system	Activate an alternative system
--------------------	--------------------------------

\$PDEBT, CCDSC, T, 0001460078000000A0567150A27271E6803017875FF
--

all_ship_set_channel.sst	All ship call setting DSC channel
--------------------------	-----------------------------------

\$PDEBT, CCDSC, T, 000146007467150A27271E65467FFF


--	--

--	--


Annex C test diagrams

C.1 GMSK modulation 12.5 and 25 kHz bandwidth

20.06.03 - Modulation L3, 25 kHz, RX A, ch2087

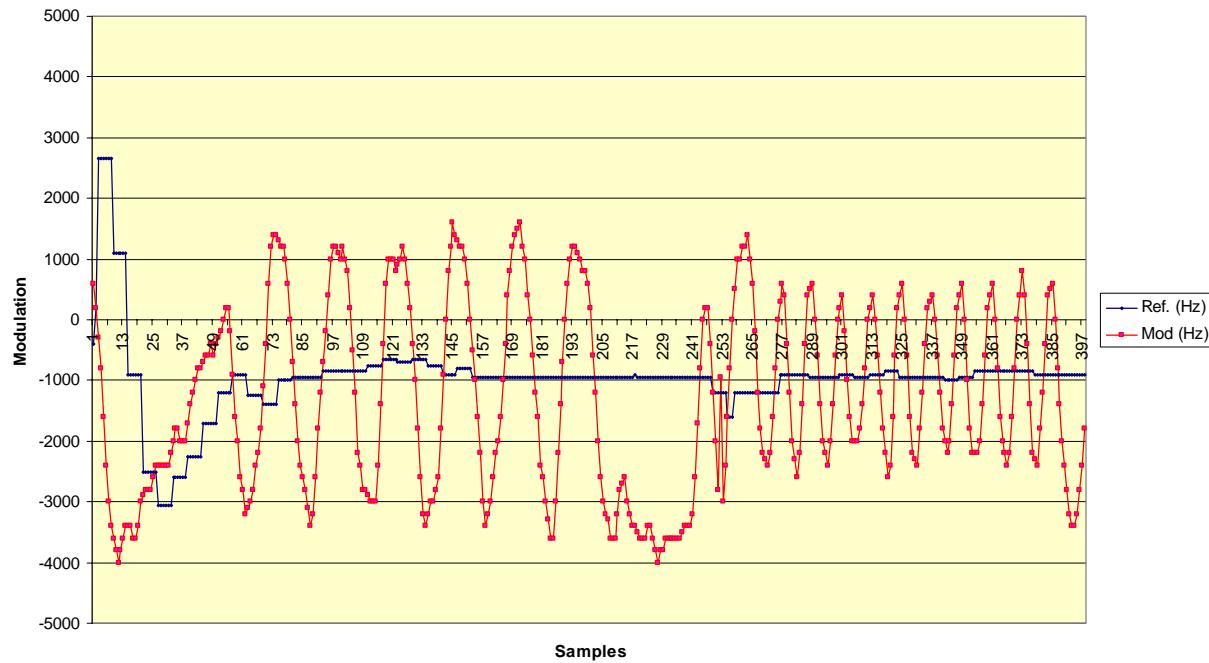


22.08.03 - Modulation L3, 12 kHz, RX A, ch272

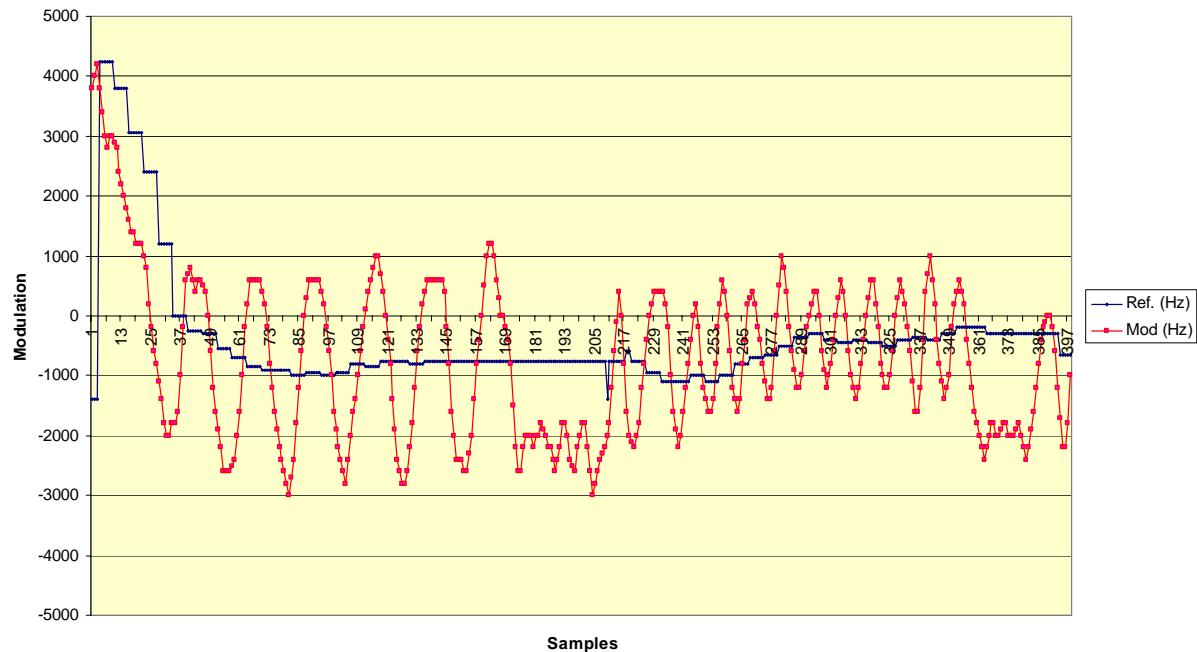


C.2 Network entry phase

23.07.03 - L3 - 16.6.1 - Slot allocation at Network entry

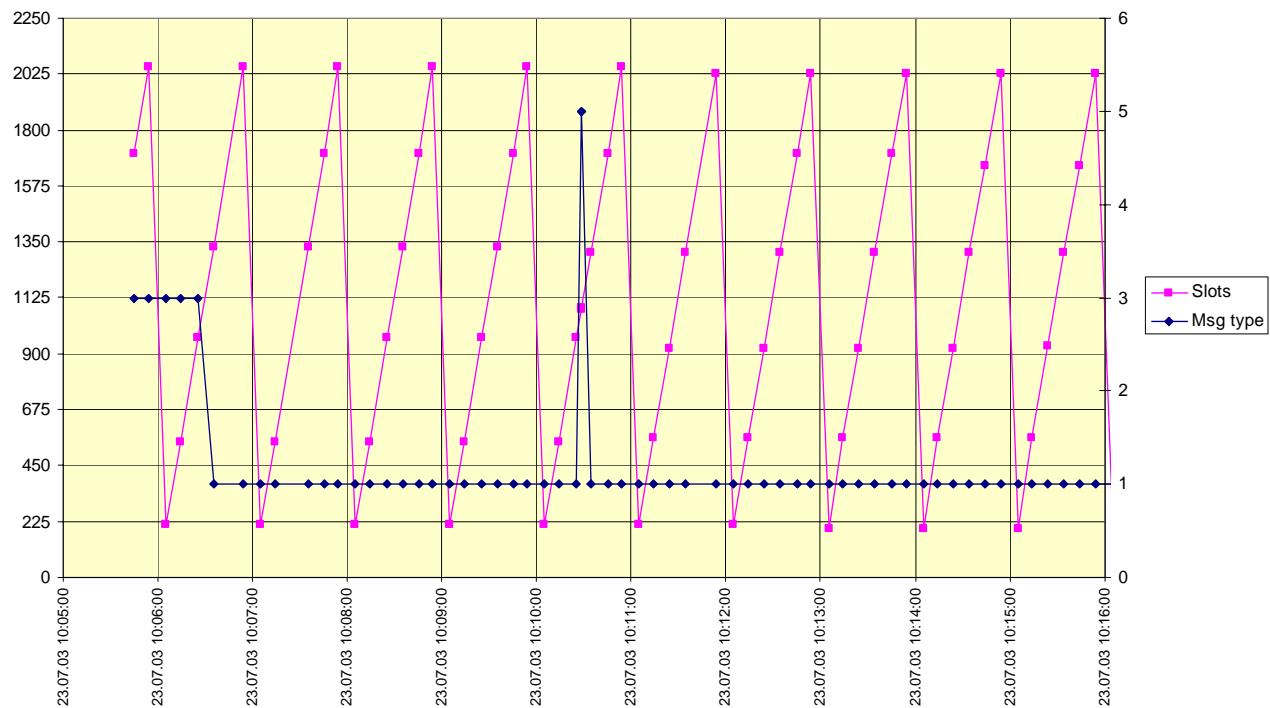


23.07.03 - L3 - 16.6.1 - Slot offsets at Network entry

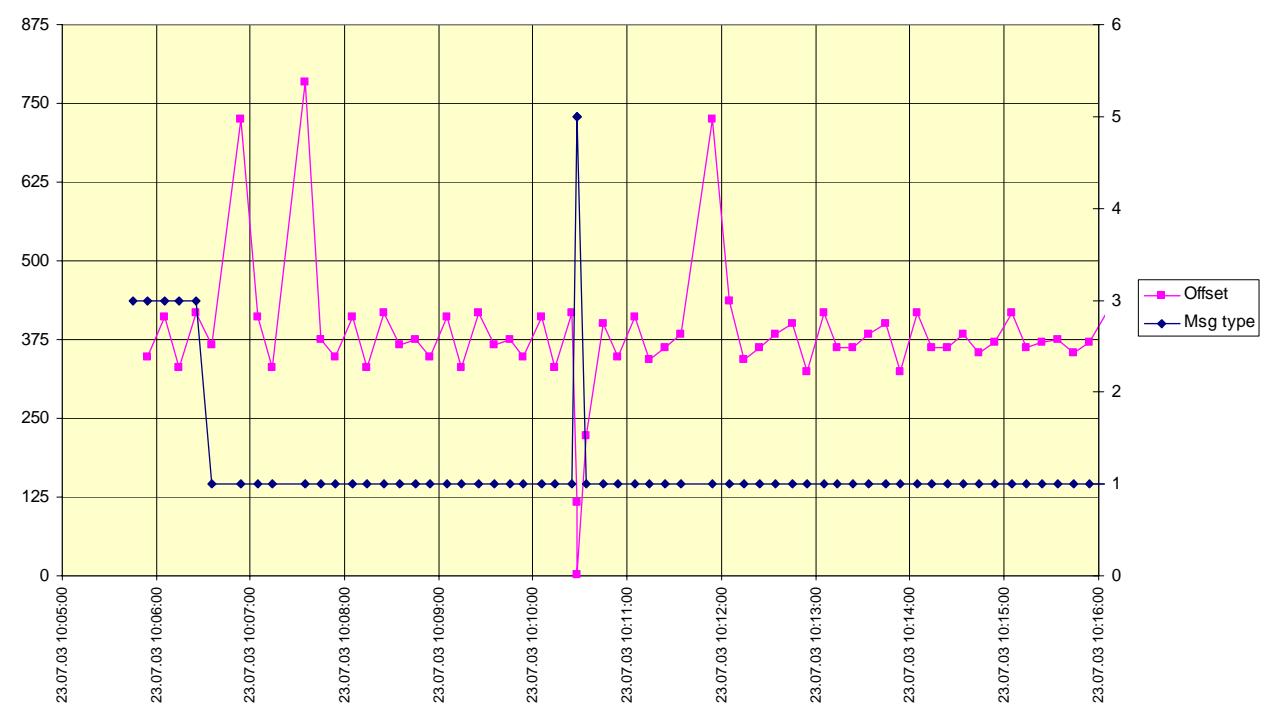


C.3 Reporting rate by speed

19.08.03 - L3 - 14.4.1 - Reporting rate by speed - Slots

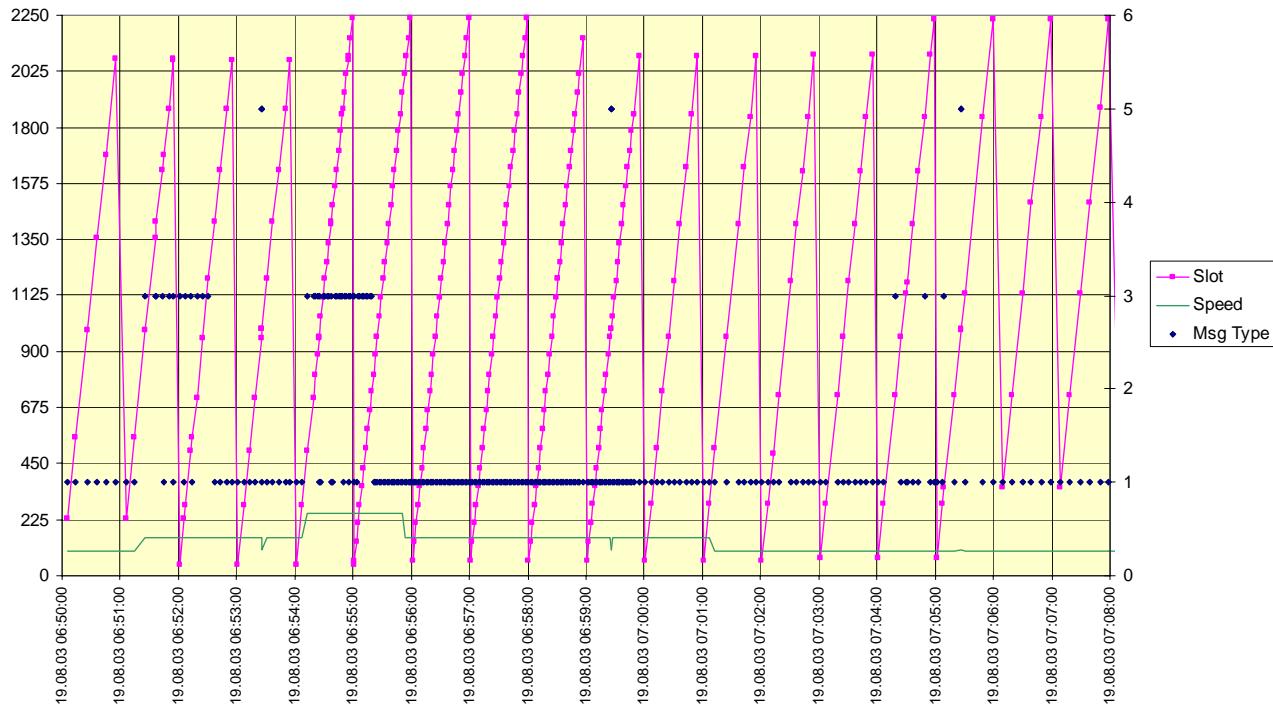


19.08.03 - L3 - 14.4.1 - Reporting rate by speed - Slot offset

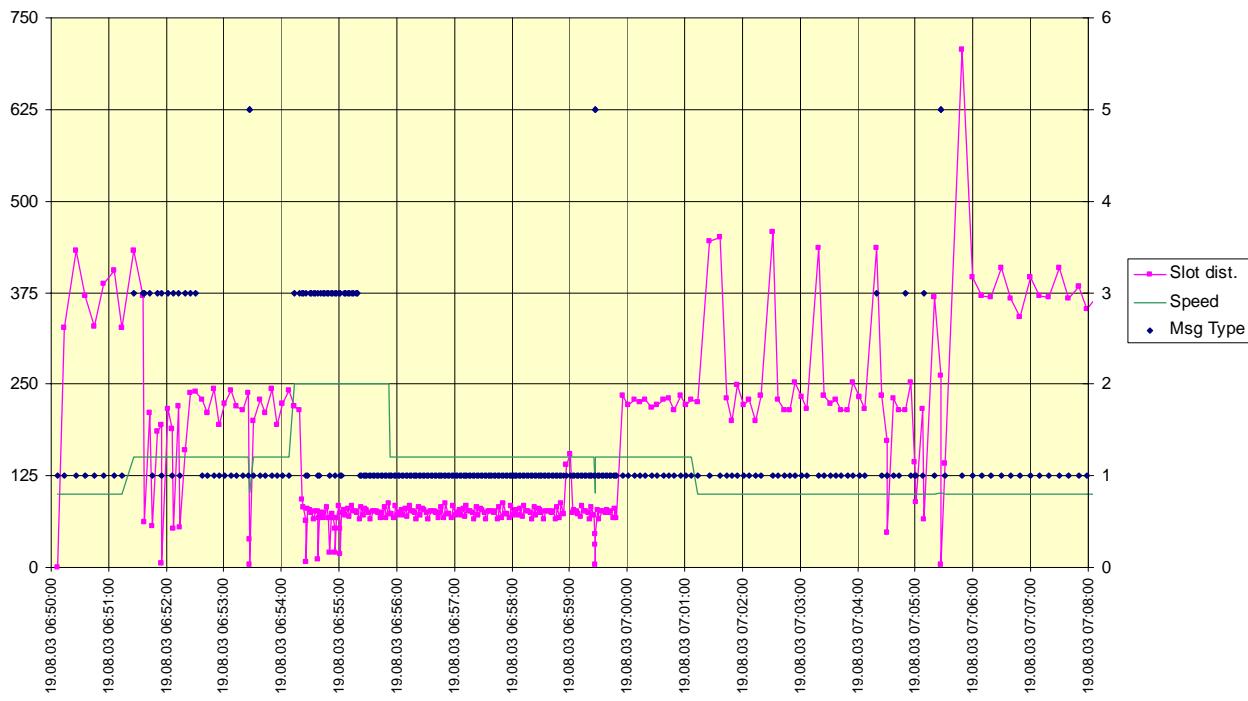


C.4 Report rate by heading


31.07.03 - L3 - 14.4.1 - Reporting rate change by heading at 10 kn - Slots

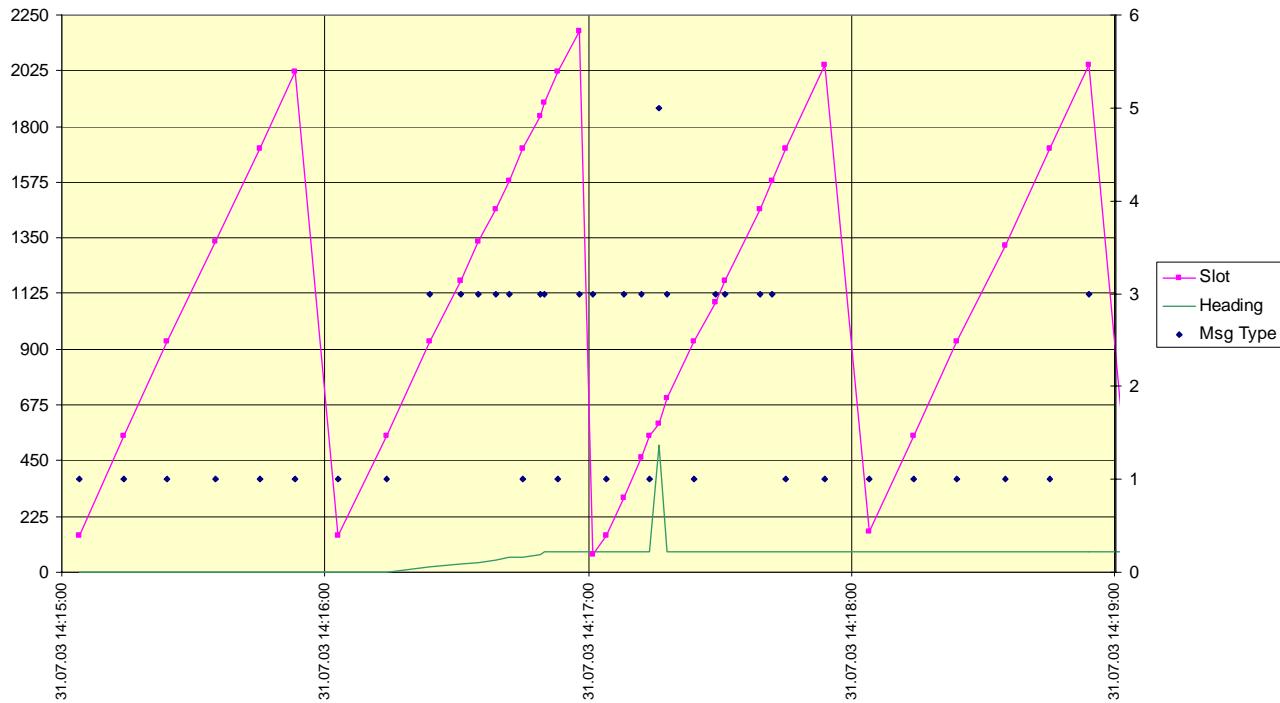


31.07.03 - L3 - 14.4.1 - Reporting rate change by heading at 10 kn - Slot offset

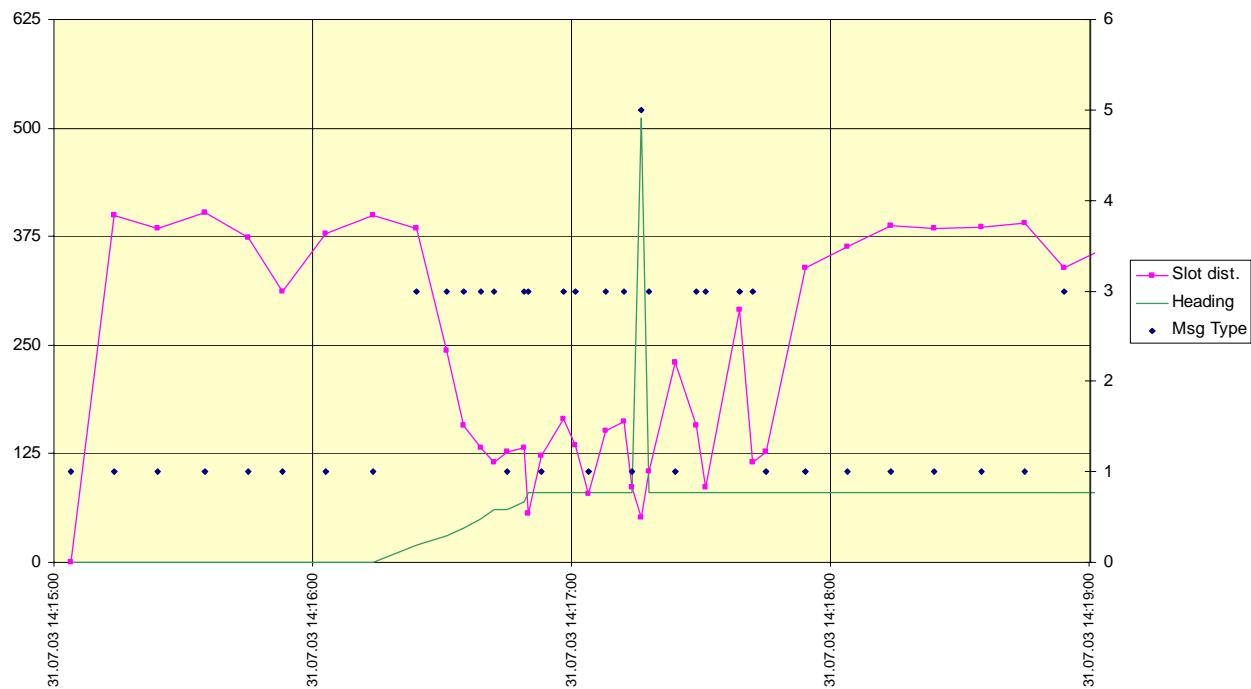

31.07.03 - L3 - 14.4.1 - Reporting rate change by heading at 15 kn - Slots

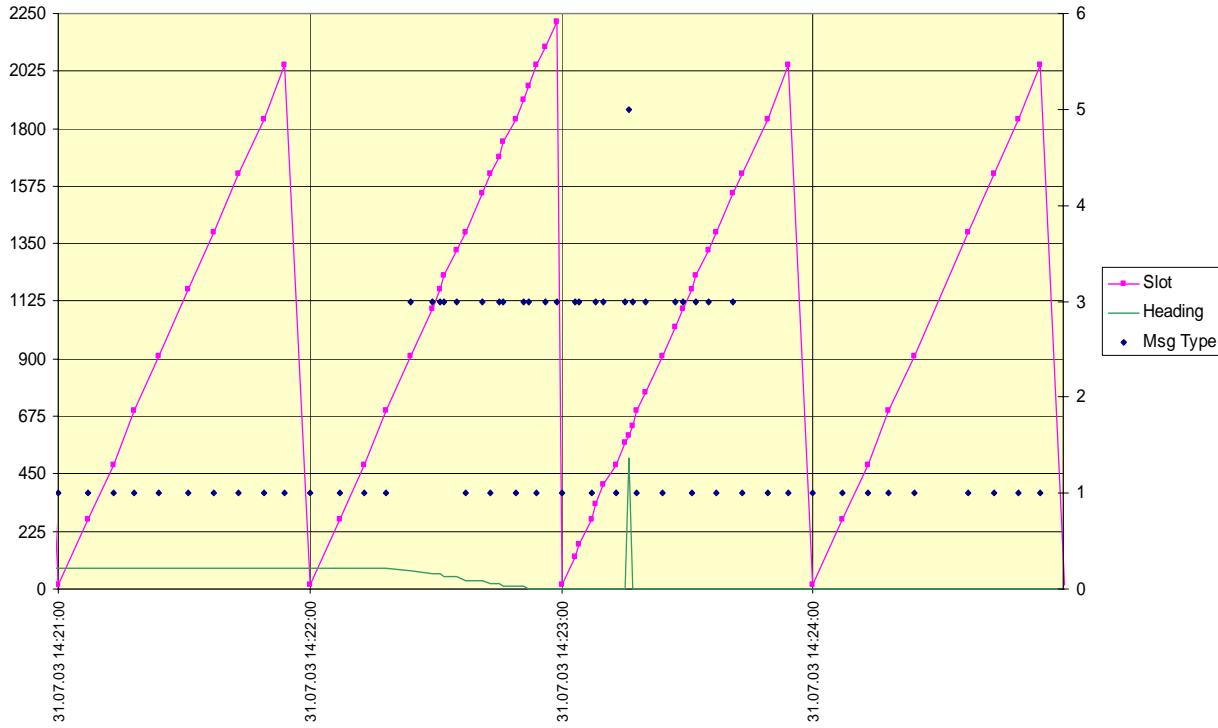


31.07.03 - L3 - 14.4.1 - Reporting rate change by heading at 15 kn - Slot offset

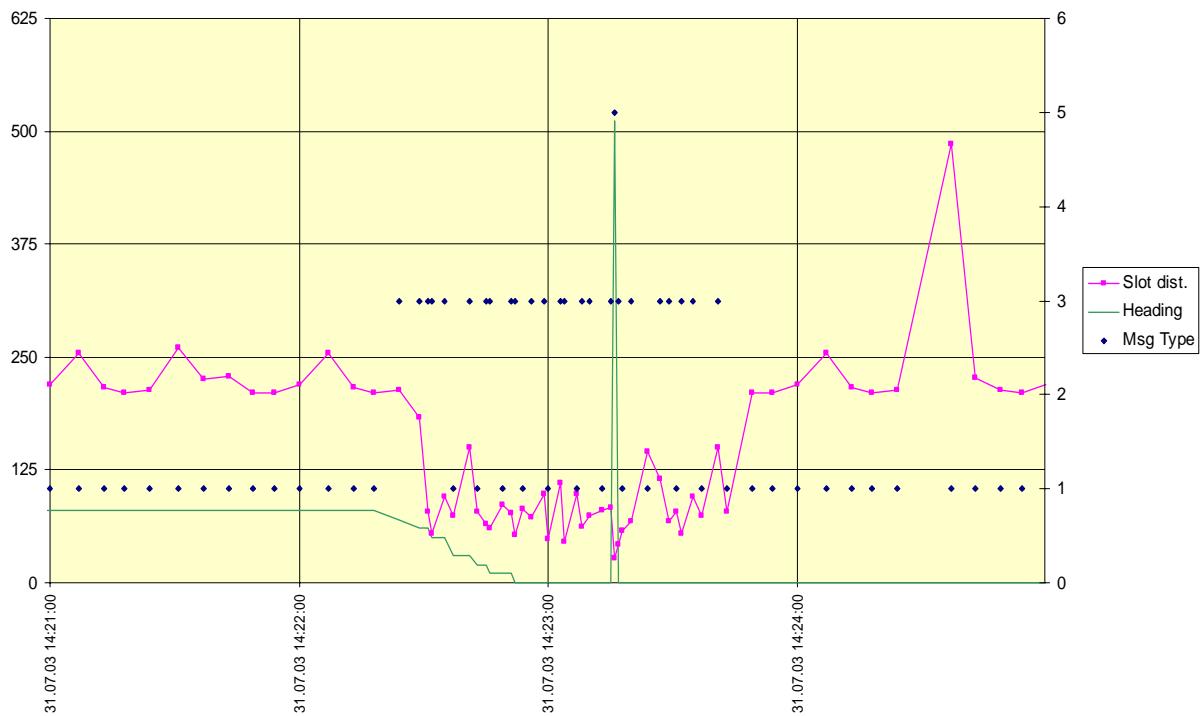

C.5 Assigned mode / rate assignment

31.07.03 - L3 - 16.6.4.2 - Rate assignment - Slots

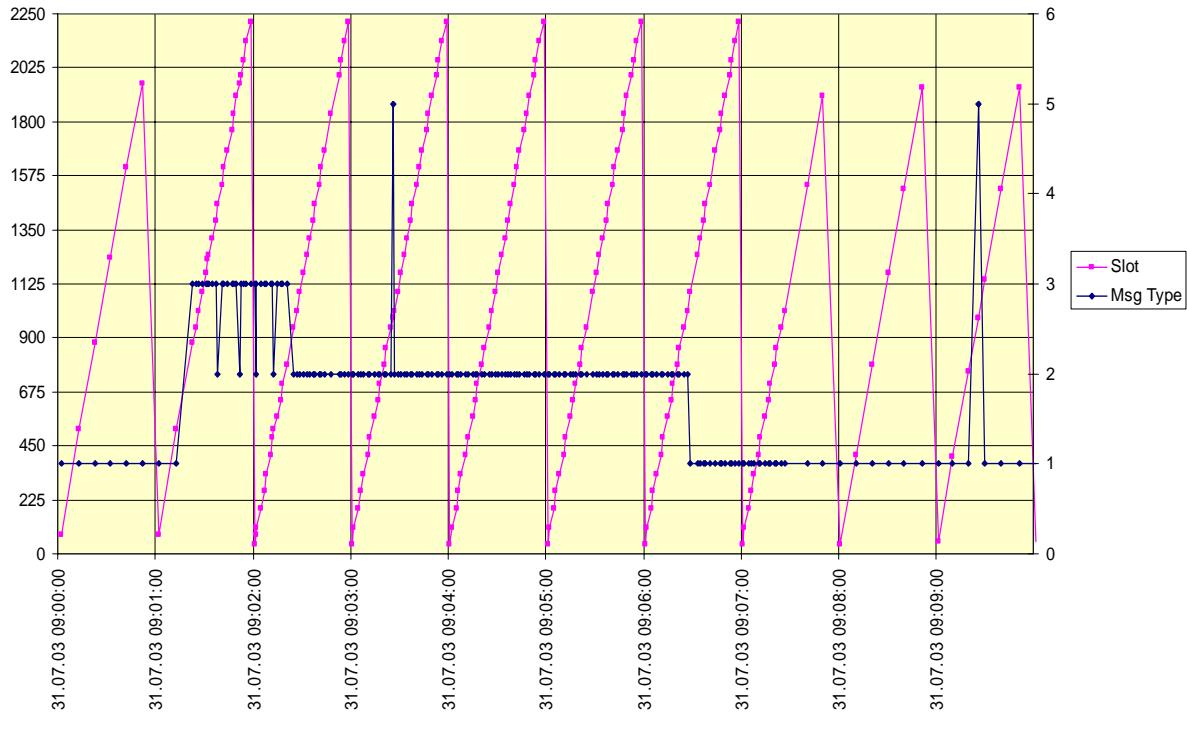


31.07.03 - L3 - 16.6.4.2 - Rate assignment - Slot offset




C.6 Assigned mode / slot assignment

29.08.03 - L3 - 16.6.4.2 - Slot assignment - Slots

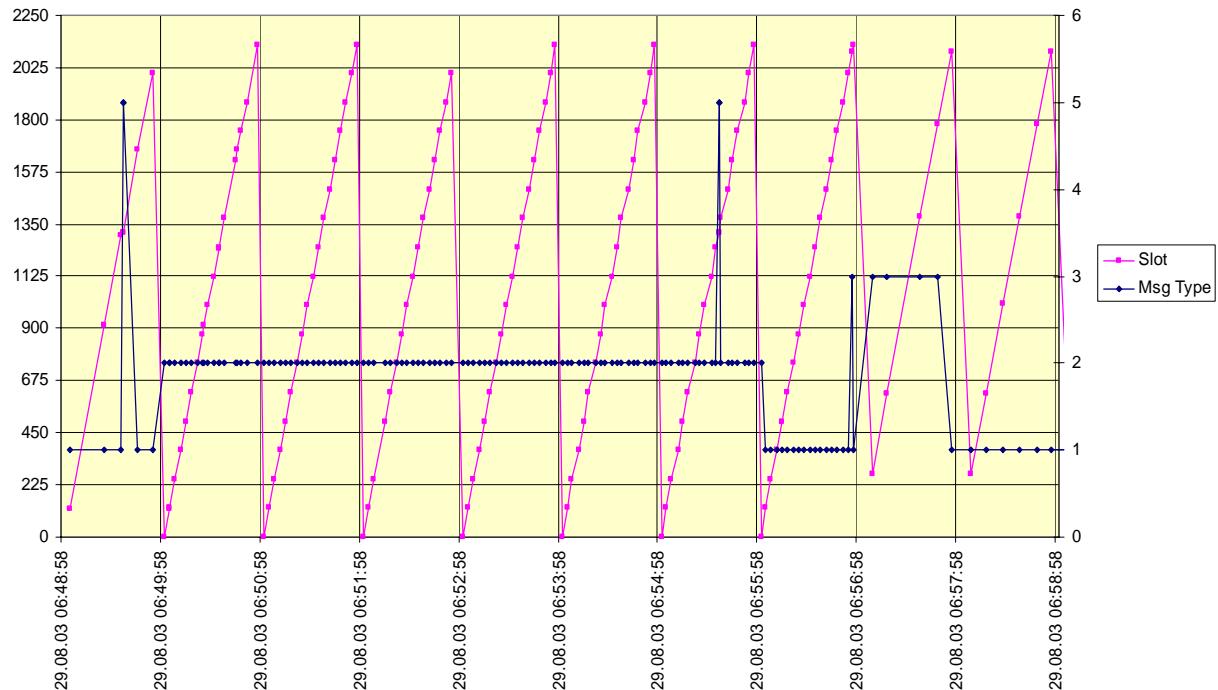


29.08.03 - L3 - 16.6.4.2 - Slot assignment - Slot offset

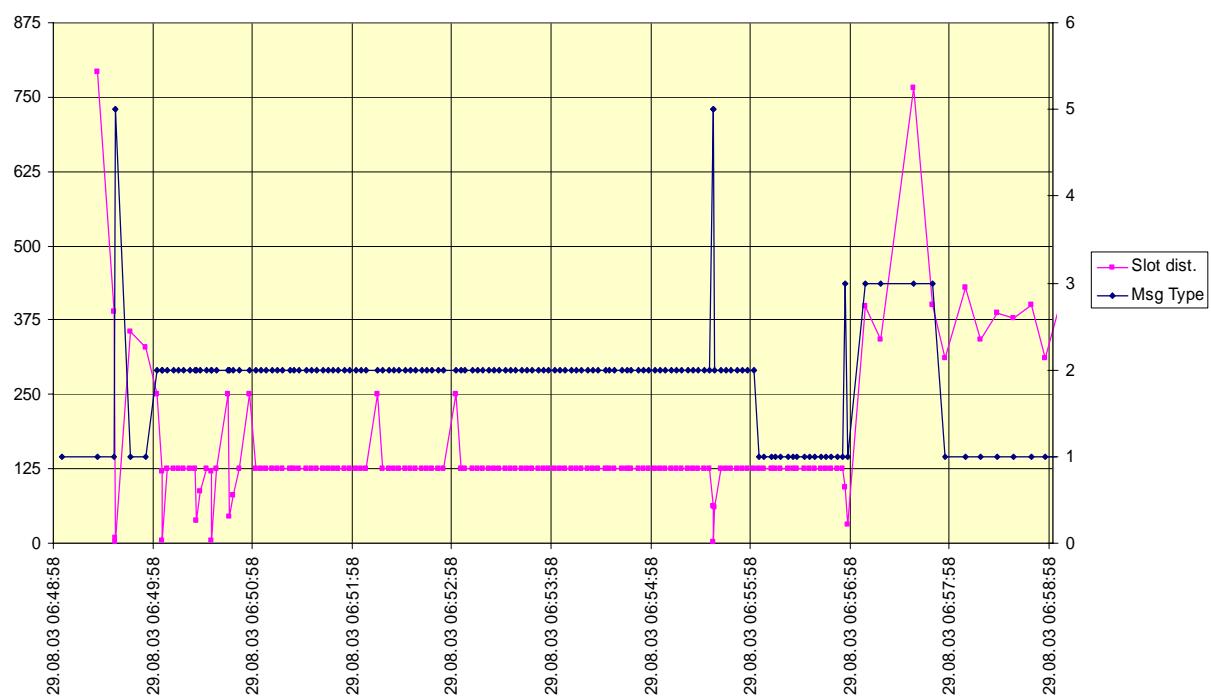


C.7 Area entry through transitional zone


25.08.03 - L3 - 17.2 - Area Entry, previous channels - Slots

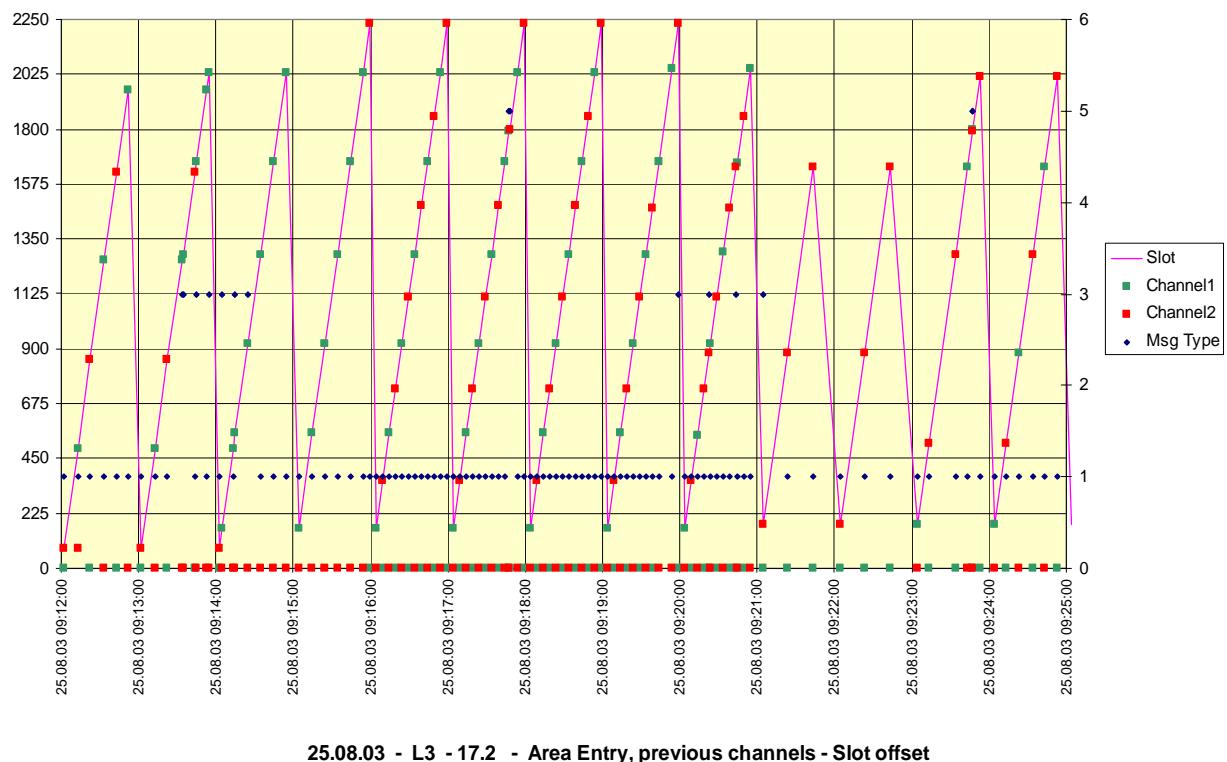


25.08.03 - L3 - 17.2 - Area Entry, previous channels - Slot offset

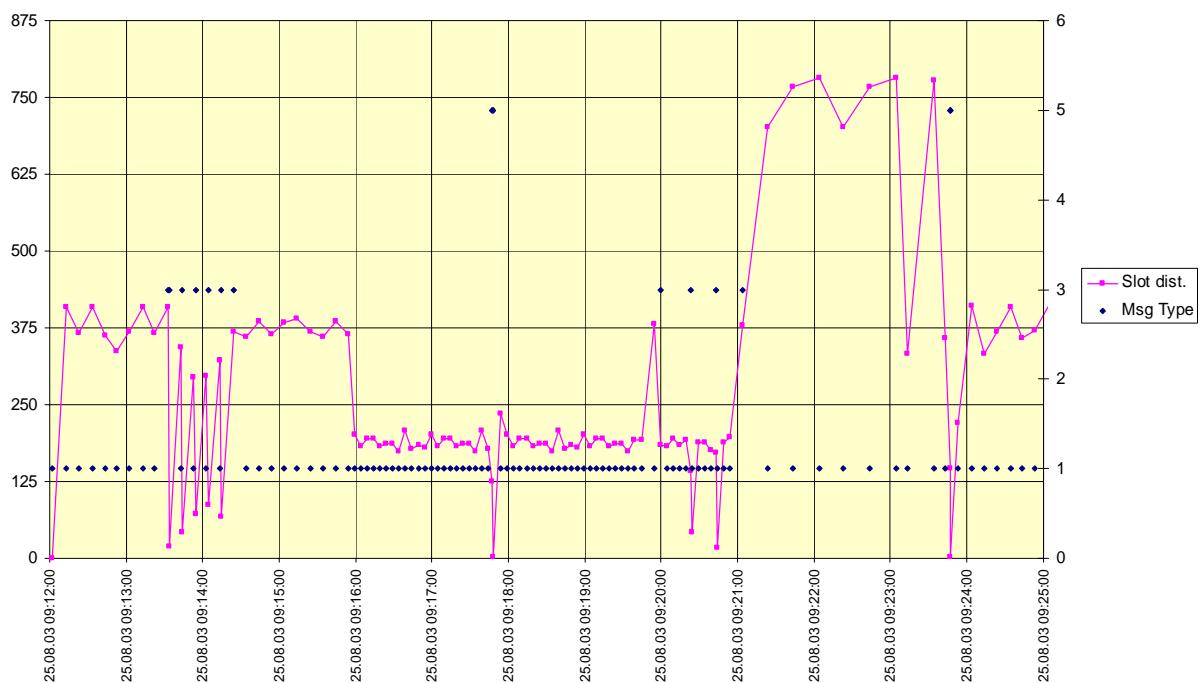

25.08.03 - L3 - 17.2 Area Entry, new channels - Slots

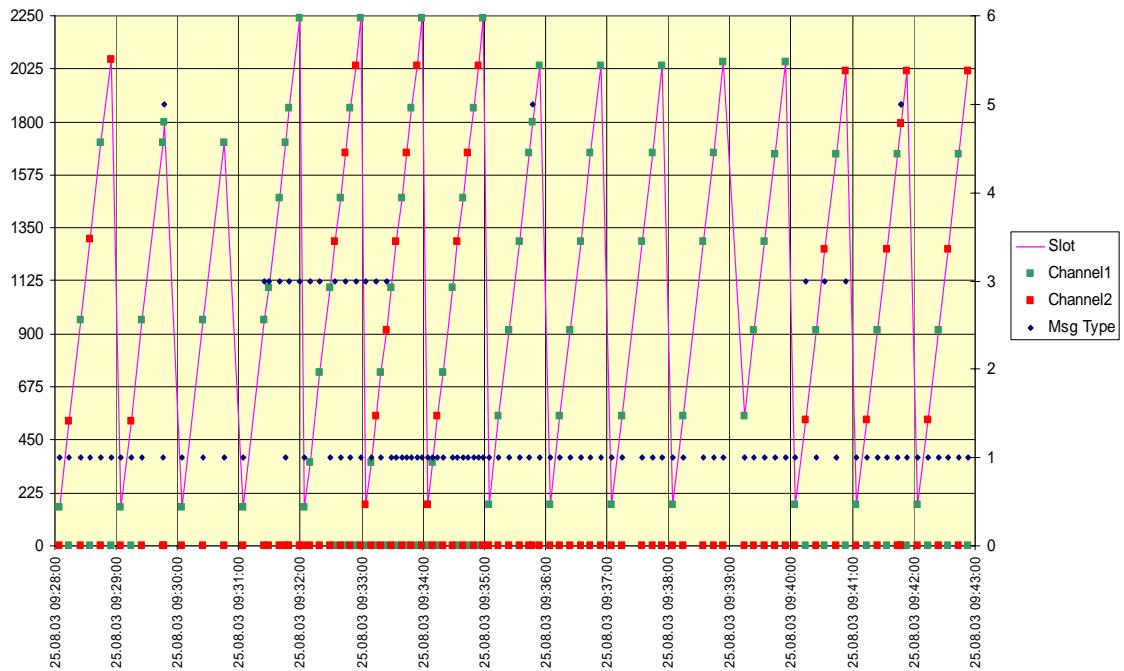


25.08.03 - L3 - Area Entry, new channels - Slot offset

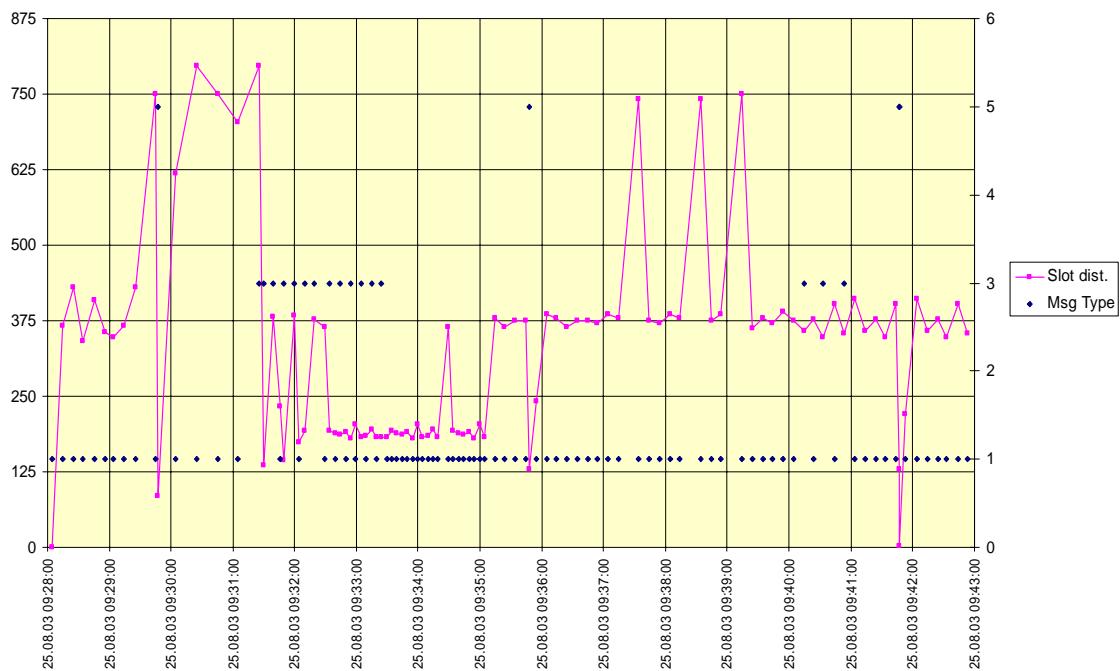


C.8 High speed output performance

24.07.2003 - L3 - 19.7 PI output performance

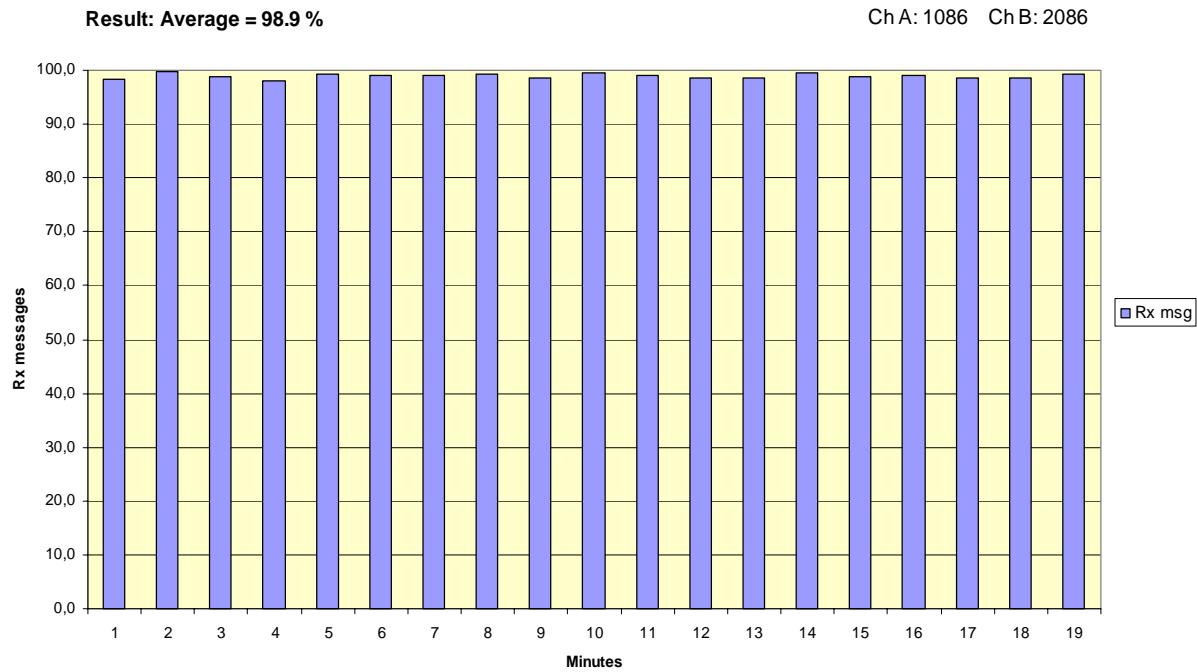


24.07.2003 - L3 - 19.7 PI output performance

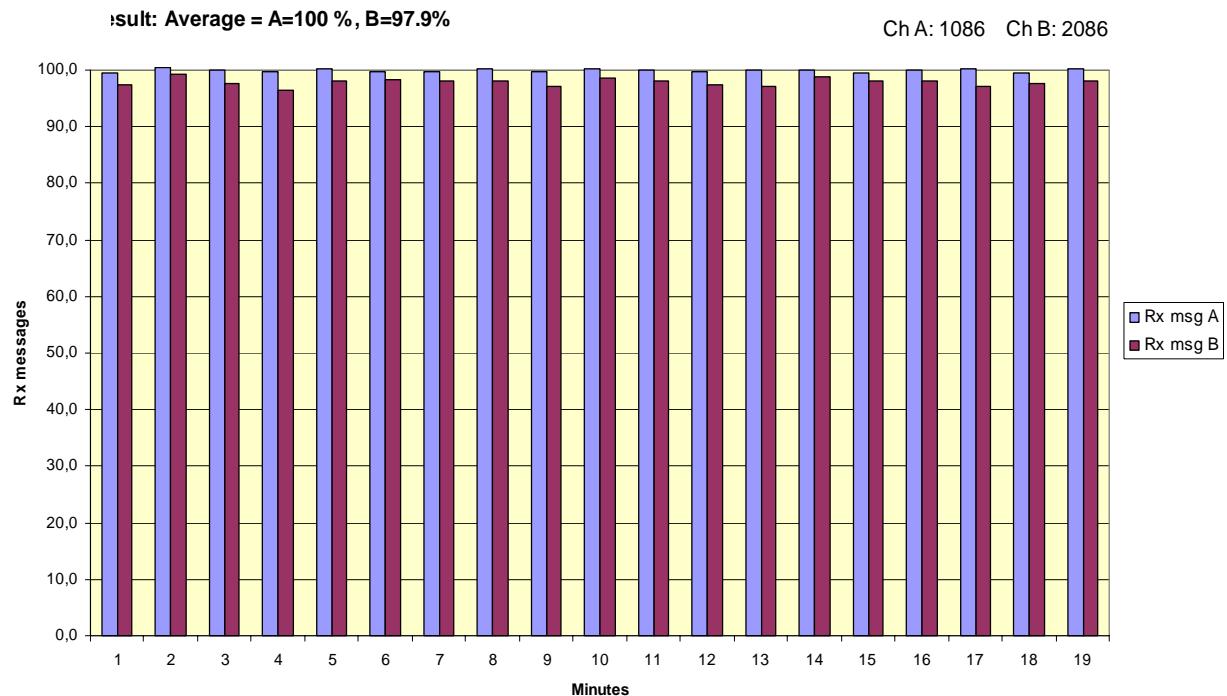


C.9 DSC response time

see test clause 8.4

24.07.03 - L3 - Area call response delay time


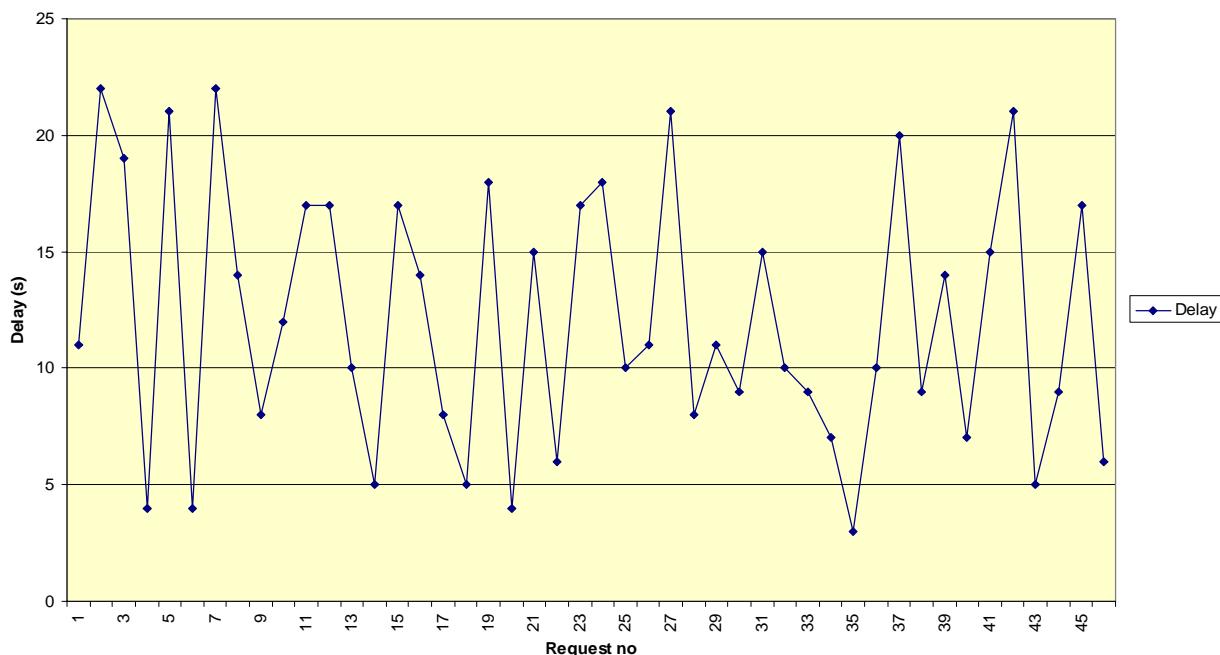


24.07.03 - L3 Protec - Area call response time

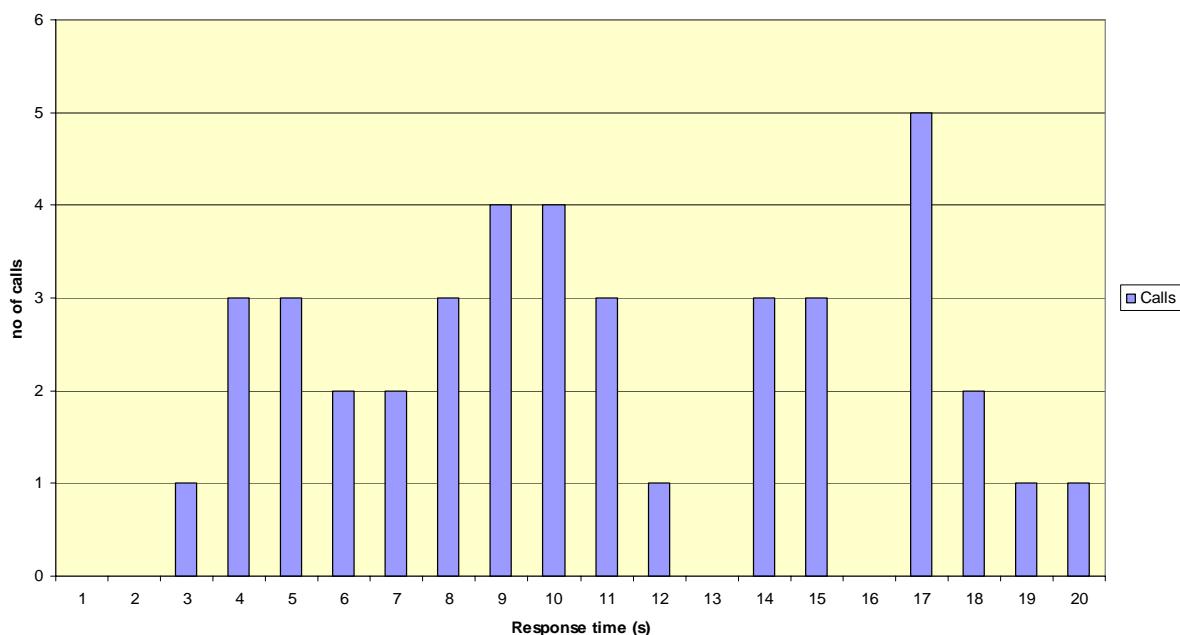


C.10 Sync Jitter

C.10.1 Sync jitter UTC direct

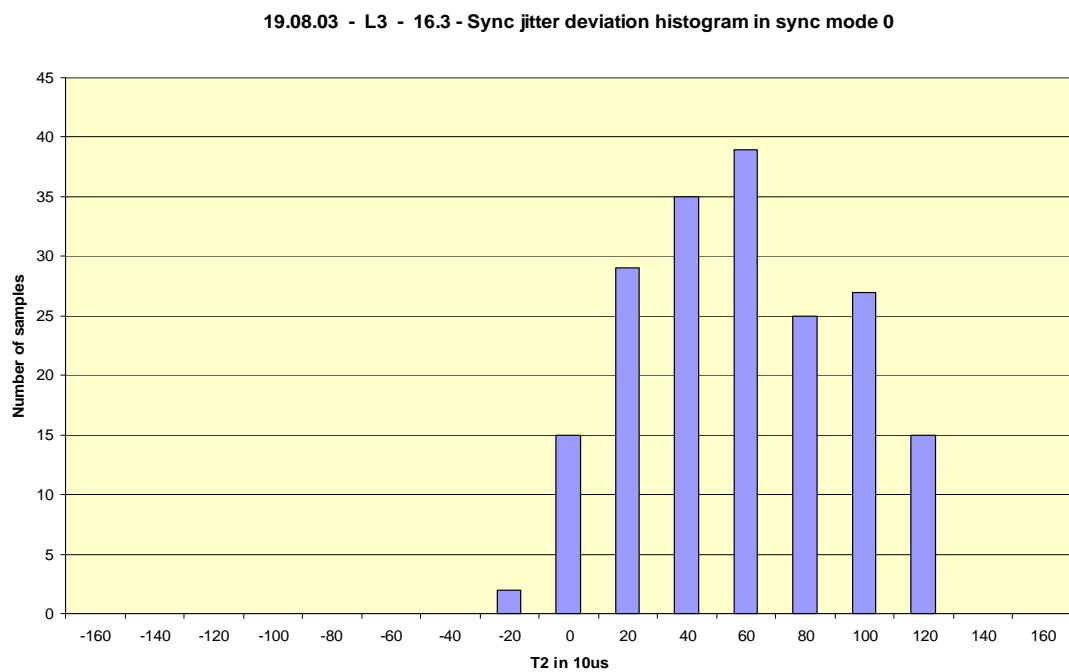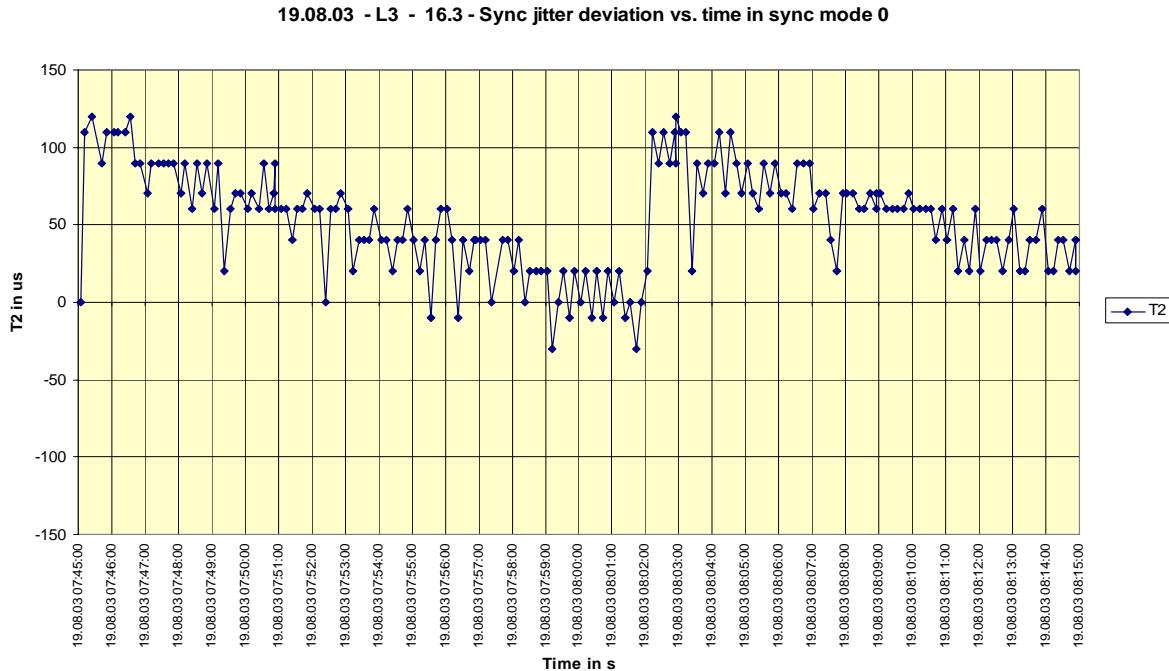


C.10.2 Sync jitter UTC indirect

17.09.03 - L3 - 16.3 - Sync jitter deviation vs. time in sync mode 1

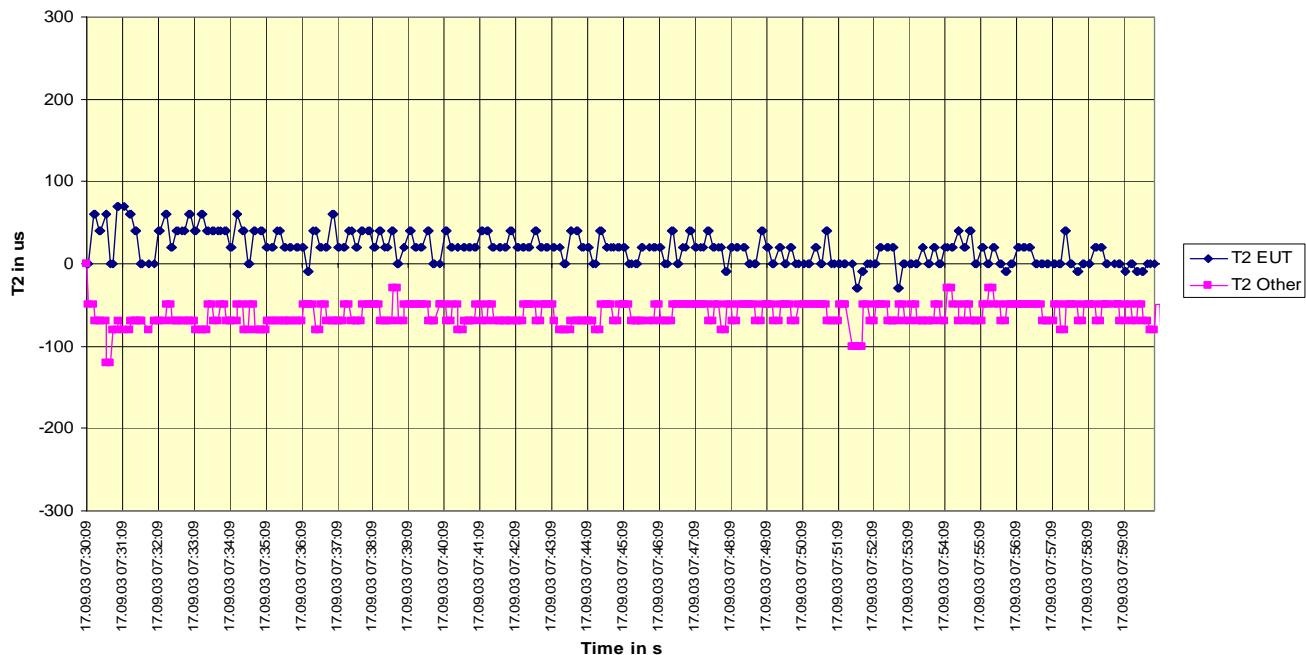

17.09.03 - L3 - 16.3 - Sync jitter deviation histogram in sync mode 1



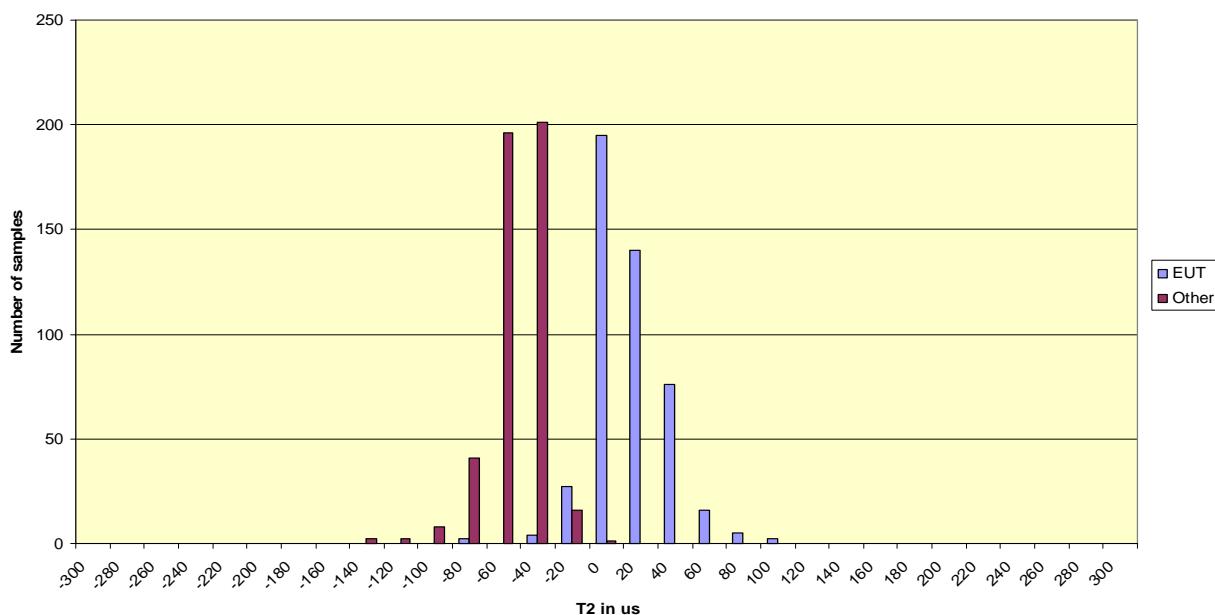


Annex D Photos of equipment under test


D.1 Transponder Unit



D.2 Inside Unit

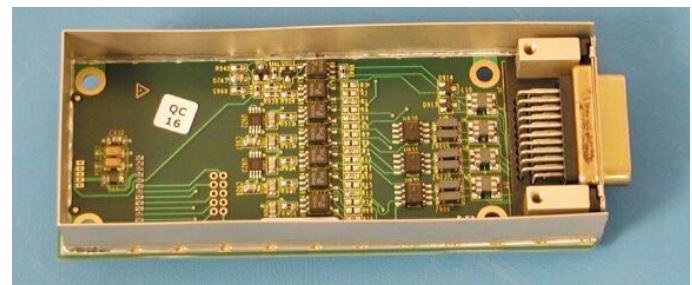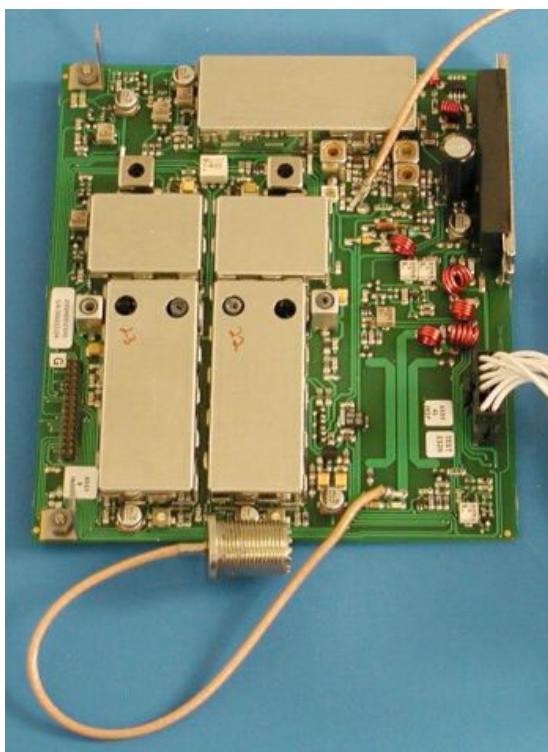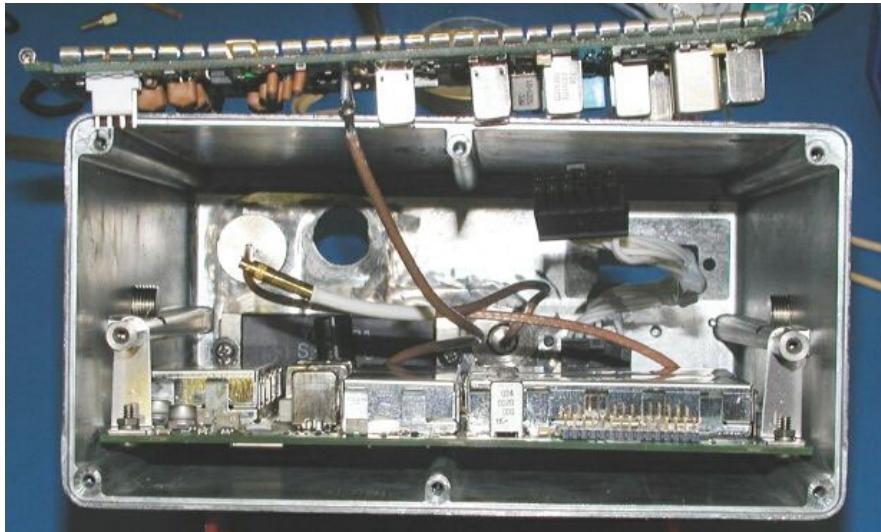

D.3 Connection box

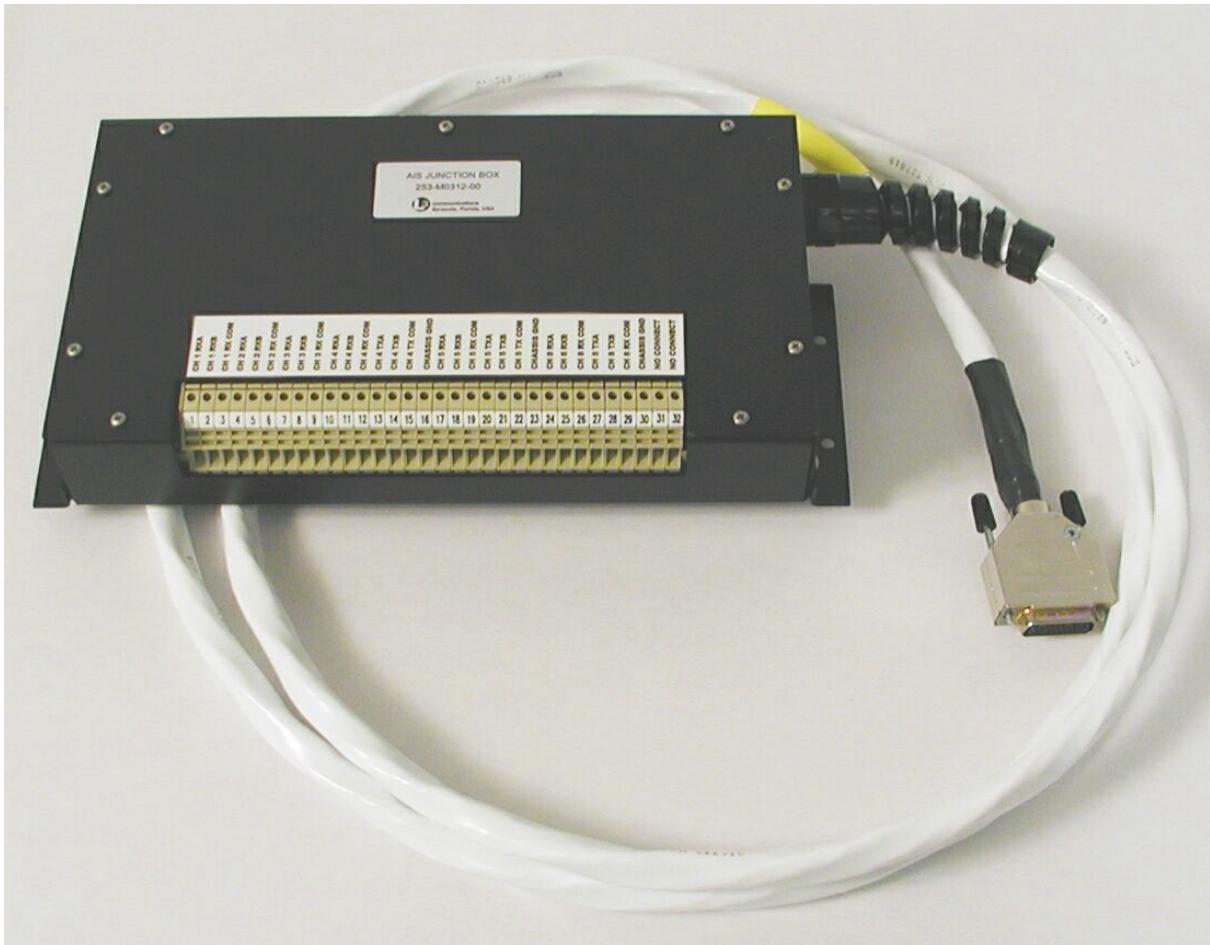

D.4 Type label

