

P+F Radar-L2-CAN

Development Sample 2.2 (DS2.2)

Manual (Draft) for
Sensor and CANopen Interface
(14-5188A)



Content

| | | |
|-------|----------------------------------|----|
| 1 | Purpose & Scope..... | 3 |
| 1.1 | General Notes..... | 3 |
| 1.2 | Validity..... | 3 |
| 1.3 | Product build state..... | 3 |
| 2 | Unit description..... | 4 |
| 2.1 | Intended Use..... | 4 |
| 2.2 | Use and application..... | 4 |
| 2.3 | Specific regulations..... | 4 |
| 2.3.1 | Europe..... | 4 |
| 2.3.2 | USA & Canada..... | 5 |
| 3 | Installation..... | 7 |
| 3.1 | Safety Information..... | 7 |
| 3.2 | Preparation..... | 7 |
| 3.3 | Connection..... | 7 |
| 3.4 | LED Indicators..... | 8 |
| 3.4.1 | Status LED..... | 8 |
| 3.4.2 | Sensor LED..... | 8 |
| 3.4.3 | LED Configuration..... | 8 |
| 4 | CANopen Interface..... | 8 |
| 4.1 | Commissioning..... | 8 |
| 4.2 | Operation and Communication..... | 12 |
| 4.2.1 | Process Data Object (PDO)..... | 12 |
| 4.2.2 | Service Data Object (SDO)..... | 13 |
| 4.3 | Object Directory..... | 14 |
| 4.3.1 | Communication Segment..... | 14 |
| 4.3.2 | Manufacturer Segment..... | 18 |

1 Purpose & Scope

1.1 General Notes

This document describes the Radar Sensor from Pepperl+Fuchs, build state 'Development Sample 2.2'. This build state is the pre-build of series versions and made in production environment. Thus the sensors in this build state are suitable for qualification testing, real world testing and field application use.

Provided is this manual in order to allow users of the sensors the proper setup for the intended use.

Contact

Pepperl+Fuchs SE
Lilienthalstraße 200
68307 Mannheim

Documentation

Document Version 1.8, Draft Version

1.2 Validity

This document applies to DS2.2 devices from hardware HW01.00 and firmware FW01.00. The version numbers can be found in CANopen parameter 'Manufacturer Hardware Revision' with Object Index 0x1009 and 'Manufacturer Software Revision' with Object Index 0x100A according to section 4.3 of this document.

For devices with newer versions, documentation will be available on request.

1.3 Product build state

The current build state is the Development Sample 2.2 (DS2.2). The unit can but must not show a complete labeling, but latest build states will show complete part marking. At least a 2D data matrix code is attached in order to apply a unique serial number to each DS2.2 sensor.

The sensor is currently available in four different versions defined according to Table 1 as listed below. The sensor housing and electronics except the kind of electrical connection is for all versions identical.

| Part number | Type code | Interface type | Connector type | Pigtail/cable type | Datasheet |
|-----------------|---------------------------|----------------|----------------|--------------------|---------------------|
| 70134318-100000 | MWC25M-L2M-B16-V15 | CANopen | M12x1 | no | 70134318-100000_ENG |
| 70134318-100001 | MWC25M-L2M-B16-0,3M-APS5P | CANopen | AMP | 0.3m pigtail | 70134318-100001_ENG |
| 70134318-100002 | MWC25M-L2M-B16-0,3M-DT6P | CANopen | DEUTSCH | 0.3m pigtail | 70134318-100002_ENG |
| 70134318-100003 | MWC25M-L2M-B16-2M | CANopen | no connector | 2m cable | 70134318-100003_ENG |

Table 1

2 Unit description

2.1 Intended Use

The radar sensor series MWC25M-L2M-B16 emits electromagnetic waves (radar waves) that are reflected from objects in the sensing range and received back by the radar sensor to detect objects, measure their distance from the sensor, and measure the relative velocity of an object. The radar sensor operates according to the Frequency Modulated Continuous Wave (FMCW) method in the 122 GHz – 123 GHz ISM band, approved for industrial use. The sensor it emits a continuous radar signal that is varied in frequency within the frequency range of the ISM band. With this method, the sensor is able to reliably detect the distance and velocity of static and moving objects. When measuring velocity, the radar sensor detects the velocity of an object in the radial direction only, without measuring tangential velocity or parts of speeds.

2.2 Use and application

The radar sensor series MWC25M-L2M-B16 with CANopen interface for distances up to 25 m range is optimized for use in industrial applications. Its compact cubic housing of the L2 series is proven in many industrial areas due to its high robustness.

The radar sensor has a standardized CANopen interface according to CiA 301 specification. Via Service Data Objects (SDOs) the sensor can be parameterized for specific features in each application. You can e.g. parameterize the measurement mode, the foreground and background suppression as well as the minimum and maximum velocity suppression. In addition, it is possible to set many other parameters, such as the filter operating mode, the filter strength and the sampling rate. Alternatively to the parameterization via CAN-Bus, P+F offers a device type manager (DTM) using the FTD framework program PACTware. Herewith you can additionally use various evaluation and filter settings for distance and velocity values.

Typically, radar sensors are used in a variety of applications such as:

- Distance measurement (between two vehicles, in a crane arm, between two cranes, etc.)
- Velocity measurement (of trains, on AGVs, etc.)
- Area monitoring/anti-collision monitoring (on front and rear of vehicles, etc.)
- Fill level control (silo, agricultural tanks, etc.)
- Height control (scissor lift table, work platforms, etc.)

2.3 Specific regulations

2.3.1 Europe

This device complies with the following standards:

EN 305550-1
EN 301489-1
EN 301489-3
EN 62368-1
EN 62311

With this the sensor fulfils the regulatory requirements in order to cover the requirements for the frequency band usage, the avoidance of electromagnetic interference, the robustness against accepted interference and the requirements for health and safety limits for the user, respectively.

For a complete list of all supported standards please refer to the respective data sheet and the declaration of conformity, available on the P+F product web page.

2.3.2 USA & Canada

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s) and complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation of the device.

Note:

The operation on board of an aircraft and or / on board of a satellite is prohibited!

Note:

Canada specific regulation: The device should not point >30° elevation towards the sky in normal operation.

Règlement spécifique au Canada: L'appareil ne doit pas être orienté vers le ciel à plus de 30° d'élévation en opération normale.

Note:

Changes or modifications made to this equipment not expressly approved by Pepperl & Fuchs may void the FCC authorization to operate this equipment!

Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Radiofrequency radiation exposure Information:

This equipment complies with FCC and ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Ce transmetteur ne doit pas être placé au même endroit ou utilisé simultanément avec un autre transmetteur ou antenne.

FCC ID : IRE-MWL2A
IC ID : 7037A-MWL2A
HVIN/PMN : MWL2A

3 Installation

3.1 Safety Information

Caution!

Risk of short circuit Carrying out work while the system is energized may result in damage to the device.

- Always disconnect the supply voltage before carrying out work on the device.
- Only connect the device to the supply voltage once all work has been completed.

3.2 Preparation

Unpacking the Device

1. Check the packaging and contents for damage.
 - In the event of damage, inform the shipping company and notify the supplier.
2. Check the package contents against your order and the shipping documents to ensure that all items are present and correct.
 - Should you have any questions, direct them to Pepperl+Fuchs.
3. Retain the original packaging in case the device is to be stored or shipped again at a later date.

3.3 Connection

Applying Supply Voltage for a Sensor with V15 Connector Plug

To supply voltage to the sensor, proceed as follows:

1. Insert the prepared connection cable into the connector plug provided for this purpose on the sensor.
2. Screw the union nut onto the connector plug as far as it will go. This ensures that the power cable cannot be pulled out inadvertently.
3. Now connect the supply voltage to the cables provided for this purpose and switch it on.
 - The sensor is now ready for operation.

Applying Supply Voltage to a Sensor Fixed Cable with Plug

To supply voltage to the sensor, proceed as follows:

1. Connect the prepared connection cable to the plug of the sensor connection cable.
2. If present, secure the plug connection with the securing elements provided.
3. Now connect the supply voltage to the cables provided for this purpose and switch it on.
 - The sensor is now ready for operation.

Note:

- Use a shielded 5-wire sensor connection cable to connect the sensor to a CANopen bus, because the pinout of the CANopen specification differs from the standard pinout.
- For pin assignment or cable color assignment refer to the respective data sheet.

3.4 LED Indicators

The sensor has a status LED and a sensor LED.

3.4.1 Status LED

The Status LED is a two colour LED with green colour or red colour. A mixture of both colours in order to obtain an orange colour is not used. The status LED indicates the sensor / CAN-Bus status according to the definitions in the table detailed below,

| Run state | Error state | STATUS LED - green | STATUS LED - red |
|-----------------|-----------------------|--------------------|------------------|
| Operational | No error | On | Off |
| Operational | Warning limit reached | On | Single flash |
| Pre-operational | No error | Blinking | Off |
| Pre-operational | Warning limit reached | Blinking | Single flash |
| Stopped | No error | Single flash | Off |
| Stopped | Warning limit reached | Single flash | Single flash |
| Don't care | Bus off | Off | On |

Table 2

3.4.2 Sensor LED

The sensor LED indicates the measurement result of the sensor with a yellow colour. Two states are implemented:

- LED is on, permanent yellow light indicates an object detected in the sensing range.
- If the LED is off no object has been detected.

3.4.3 LED Configuration

The sensor configuration allows a LED off mode. The indication by LEDs can be completely disabled over the object 0x4001 according to section 4.3 of this document.

4 CANopen Interface

4.1 Commissioning

4.1.1.1 Supported Features and Standards

The CANopen interface on the Pepperl+Fuchs Radar Sensor DS2 supports the following CANopen features:

- Network management (NMT)
- Heartbeat
- Acyclic parameter access via service data objects (SDO)
- 4 transmit process data objects (TPDO)

- Layer setting services (LSS) for configuring the node ID and baud rate
- Store/restore configuration

The CANopen interface for the 1D Radar Sensor works with the following standard configuration (factory setting):

- Node ID: 16
- Baud rate: 250 kBit/s (CiA)

Note:

Before connecting the device to a network, make sure to configure the node ID according to the IDs present in the network.


A node ID must be unambiguous, otherwise message collisions and errors can occur.

4.1.1.2 Network management (NMT)

The CANopen standard CiA301 specifies 3 possible states for the sensor node.

- Preoperational
- Operational
- Stopped

The node can be set to any of these states as required. When activated, a sensor always starts in preoperational state and issues a boot up message.

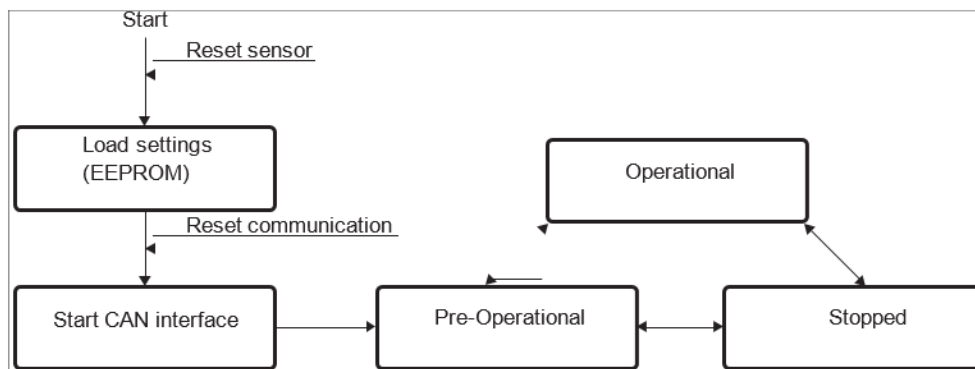

Preoperational

PDO (process data) messages cannot be sent in the "preoperational" state; as such, this state is used to parameterize the sensor or indicate a standby state.

Operational

In the "operational" state, all communication services are performed and process data is exchanged.

Stopped

In the "stopped" state, only NMT (network management) messages can be sent; redundant or defective sensors can be isolated from the bus almost completely in this state.

The network manager can issue NMT messages to prompt the sensor to change from one state to another. Other NMT functions include 2 reset commands for resetting either the entire sensor or bus communication only.

Example of an NMT message sent by the network manager (start node #16)

| | | | | | | | | |
|--------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|
| 0x000h | 0x80h | 0x10h | - | - | - | - | - | - |
| CAN-ID | Command | Node | not used | | | | | |
| | Data byte 1 | Data byte 2 | Data byte 3 | Data byte 4 | Data byte 5 | Data byte 6 | Data byte 7 | Data byte 8 |

CAN-ID: 000h, NMT message from the network manager

Command: 80h, switch to preoperational state

Command: 02h, switch to stopped state

Command: 01h, switch to operational state

Command: 82h, reset communication

Command: 81h, reset sensor

Node: 01h ... 7Fh, to address nodes 1 ... 127 individually

Node: 00h, to address all nodes in the network simultaneously

4.1.1.3 Setting the Baud Rate and Node ID

For DS2 baud rate and node ID can be configured via LSS.

Note:

Configuration of Node ID and Baud rate via LSS is active after power cycle.

4.1.1.4 Heartbeat Function

The interval after which status messages are sent can be set via the object 1017h "Producerheartbeat time". Entering the value 0 will deactivate the function. Every other 16-bit value determines the heart-beat interval in milliseconds. Default value is 0 ms, Heartbeat disabled (*acc. to CiA301 profile requirements*).

Heartbeat of the sensor (sensor in operation)

| | | | | | | | | |
|--------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|
| 0x710h | 0x05h | - | - | - | - | - | - | - |
| CAN-ID | Status | not used | | | | | | |
| | Data byte 1 | Data byte 2 | Data byte 3 | Data byte 4 | Data byte 5 | Data byte 6 | Data byte 7 | Data byte 8 |

CAN-ID: 0x710h, heartbeat message from the node with node number 16 (0x700h + 0x10h)

Status: 7Fh, sensor in "preoperational" state

Status: 04h, sensor in "stopped" state

Status: 05h, sensor in "operational" state

4.1.1.5 Error Register

The error register shows the appearance of event or errors of the sensor. Each event or error is coded bit by bit and multiple errors can be indicated at any time. A value of 0 is indicated if no error occurred. The error register can be accessed using object 0x1001h.

| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
|----------------------------|---------------|------------------------------|--------------------------|------------------|---------|---------|---------------|
| Manufac- turer specific | Re- served | Device pro- file specific | Communica- tion error | Tempera- ture | Voltage | Current | Generic error |

Detailed description:

Manufacturer specific: is indicated if a no target event or a hardware failure occurred

Device profile specific: currently not implemented

Communication error: currently not implemented

Temperature: is indicated if an over temperature warning occurred, Sensor outside specified temperature

Voltage: is indicated if an under voltage warning occurred

Generic error: is indicated in addition to any other error in this register

4.2 Operation and Communication

4.2.1 Process Data Object (PDO)

A maximum of 8 bytes of useable data can be sent in each message using the process data object (PDO). This feature is only available in the operational state and can be activated in different modes, set using the object 0x1800 "TPDO Communication Parameter" and 0x1A00 "TPDO mapping parameter."

A total of 2 transmit PDOs will be supported in the final product – currently in use is only 1 transmit PDO. The protocol supports dynamic PDO mapping.

Example of the default PDO1 message: This PDO message contains measuring readings of the sensor that are sent periodically and automatically once new values are available (event triggered). The measuring rate of the device is 50Hz (per default value).

| | | | | |
|--------|-------------|-------------|----------------|---------------|
| 0x190 | 0x07AA | 0x0000 | 0x03 | 0x4D |
| CAN-ID | Distance | Velocity | Signal quality | Cycle counter |
| | Data word 1 | Data word 2 | Data byte 1 | Data byte 2 |

CAN-ID: 190h, PDO1 channel of node 16 (0x180h + 0x10h)

Distance: 0x07AA, corresponds to 1962 mm

Velocity: 0x0000, corresponds to 0 cm/s

Signal quality: 0x03, corresponds to excellent signal quality

Cycle counter: 0x4D, corresponds to 77 cycles

4.2.2 Service Data Object (SDO)

The device from Pepperl+Fuchs is equipped with service data channel 1 as required by CiA 301.

The channel is permanently set to CAN-IDs 580h + node ID for transmission and 600h + node ID for reception. A maximum of 4 bytes of usable data can be transmitted in a single message. Larger quantities of data are divided among several messages.

4.2.2.1 Example of reading an object with max. 4 bytes of data

Request to node #16:

| | | | | | | | | |
|--------|------------|--------------|------------|------------|------------|------------|------------|------------|
| 0x610h | 0x40h | 0x00h | 0x20h | 0x01h | 0x00h | 0x00h | 0x00h | 0x00h |
| CAN-ID | Command | Object index | | Subindex | Data | | | |
| | Data byte1 | Data byte2 | Data byte3 | Data byte4 | Data byte5 | Data byte6 | Data byte7 | Data byte8 |

Request CAN-ID: 0x610h, SDO1 channel of node 16 (0x600h + 0x10h)

Command: 40h, read object 0x2000:1.

Reply of node #16:

| | | | | | | | | |
|--------|---------------|--------------|------------|------------|------------|------------|------------|------------|
| 0x590h | 0x4Bh | 0x00h | 0x20h | 0x01h | 0xAAh | 0x07h | - | - |
| CAN-ID | Command reply | Object index | | Subindex | Data | | | |
| | Data byte1 | Data byte2 | Data byte3 | Data byte4 | Data byte5 | Data byte6 | Data byte7 | Data byte8 |

Reply CAN-ID: 0x590h, SDO1 channel of node 16 (0x580h + 0x10h)

Command Reply: 0x4Bh (Return has 2 Bytes of Data), object 0x2000:1, 0x7AAh (Returned Data).

4.3 Object Directory

4.3.1 Communication Segment

| Index | Sub-Index | Parameter name | Data Type | Code description | Default value | Notes |
|--------|-----------|--------------------------------|-----------|-----------------------------------|--------------------|--|
| 0x1000 | 0 | Device Type | u32 | | 0x00000000 | 0 means that no device profile is used |
| 0x1001 | 0 | Error register | U8 | | 0x00 | Can be mapped to TPDO 0x00/0 No Error 0x03/3 Current 0x05/5 Undervoltage 0x09/9 Overtemperature 0x11/17 Communication 0x21/33 DeviceProfiler 0x81/129 Manuf. Spec. |
| 0x1002 | 0 | Manufacturer status register | u32 | | 0x00000000 | 0x00/0 NoError 0x01/1 YetNoMeasurement 0x02/2 HardwareFailure 0x04/4 Undervoltage 0x08/8 Overtemperature 0x10/16 NoTarget Emergency (only if configured) 0x20/32 SignalError (in case of noise/unexpected signal) |
| 0x1003 | 0 | Preferred error field | u32 | | 0x01 | This object provides the errors that occurred on the CANopen device and were signaled via the emergency object. |
| 0x1005 | 0 | COB ID SYNC | u32 | | 0x00000080 | This object indicates the configured COB-ID of the synchronization object (SYNC). Further, it defines whether the CANopen device generates the SYNC. |
| 0x1008 | 0 | Manufacturer Device Name | String | Type code like MWC25M-L2M-B16-V15 | MWC25M-L2M-B16-V15 | This object provides the name of the device as given by the manufacturer. |
| 0x1009 | 0 | Manufacturer Hardware Revision | String | Revision code like "1.0" | HW01.00 | This object provides the manufacturer hardware version description. |
| 0x100A | 0 | Manufacturer Software Revision | String | Revision code like "1.0.0" | FW01.00 | This object provides the manufacturer software version description. |
| 0x1010 | 1 | Save all parameters | u32 | | | This object controls the saving of parameters in non-volatile memory. |
| 0x1011 | 1 | Restore all default parameters | u32 | | | With this object the default values of parameters according to the communication profile, device profile and application profile are restored. 0x01/1 Restore parameters |
| 0x1014 | 0 | COB ID EMCY | u32 | | \$NODEID+0x80 | This object indicates the configured COB-ID for the EMCY write service. |

| Index | Sub-Index | Parameter name | Data Type | Code description | Default value | Notes |
|--------|----------------------|-------------------------|-----------|---|---|---|
| 0x1015 | 0 | Inhibit time emergency | u16 | | | This object indicates the configured inhibit time for the EMCY message. |
| 0x1017 | 0 | Producer Heartbeat Time | u16 | | 0x00/0 | The producer heartbeat time indicates the configured cycle time of the heartbeat produced by the device. The value shall be given in multiples of 1 ms. The value 0 shall disable the producer heartbeat. 0x00 BootUp 0x04 Stopped 0x05 Operational 0x7F Pre-operational |
| 0x1018 | Identity Object | | | | | |
| | 0 | Number of entries | u8 | | 0x04 | This object provides general identification information of the CANopen device. |
| | 1 | Vendor ID | u8 | | 0xAD/173 (=Pepperl-Fuchs) | Subindex 1 contains the unique value that is allocated uniquely to each vendor of a CANopen device. |
| | 2 | Product Code | u32 | Byte 1: Product Group Code Byte 2-4: Sequential number | 0x07000001 (example for MWC25M-L2M-B16-V15) | Subindex 2 contains the unique value that identifies a specific type of CANopen devices. |
| 0x1018 | Identity Object | | | | | |
| | 3 | Revision Number | u32 | | 0x01 | Subindex 3 contains the major revision number and the minor revision number of the revision of the CANopen device. |
| | 4 | Serial Number | u32 | 32-bit P+F CANopen serial number | 0x01234567 | Not implemented yet Subindex 4 contains the serial number that identifies uniquely a CANopen device within a product group and a specific revision. |
| 0x1020 | Verify configuration | | | | | |
| | 1 | Configuration date | u32 | | | Can be parametrized Value shall contain the number of days since January 1,1984. |
| | 2 | Configuration time | u32 | | | Can be parametrized Value shall be number of ms after midnight. |
| 0x1200 | Server SDO Parameter | | | | | |
| | 1 | COB ID Client to Server | u32 | | \$NODEID+0x600 | In order to describe the SDOs used on a CANopen device the data type SDO parameter is introduced. |
| | 2 | COB ID Server to Client | u32 | | \$NODEID+0x580 | |

| Index | Sub-Index | Parameter name | Data Type | Code description | Default value | Notes |
|--------|--------------------------------------|-------------------|-----------|------------------|-----------------|--|
| 0x1800 | Transmit PDO Communication Parameter | | | | | |
| | 1 | COB ID | u32 | | \$NODEID+ 0x280 | Subindex 1 contains the COB-ID of the TPDO. |
| | 2 | Transmission Type | u8 | | 0xFE/245 | Subindex 2 defines the transmission character of the TPDO. 0x00/0 synchronous (acyclic) 0x01/1 synchronous (cyclic every SYNC) 0x02/2 synchronous (cyclic every 2nd SYNC) ... 0xF0/240 synchronous (cyclic every 240th SYNC) 0xF1/241 reserved ... 0xFB/251 reserved 0xFC/252 RTR-only (synchronous) 0xFD/253 RTR-only (event-driven) 0xFE/254 event-driven (manufacturer-specific) 0xFF/255 event-driven (profile-specific) |
| | 3 | Inhibit time | u16 | | 0x00/0 | Subindex 3 contains the inhibit time. The time is the minimum interval for PDO transmission if the transmission type is set to 0xFE and 0xFF. The value is defined as multiple of 100ms. The value of 0x00 shall disable the inhibit time. |
| | 5 | Event timer | u16 | | 0x00/0 | Subindex 5 contains the event-timer. The time is the maximum interval for PDO transmission if the transmission type is set to 0xFE and 0xFF. The value is defined as multiple of 1 ms. The value of 0x00 shall disable the event-timer. |
| | 6 | SYNC start value | u8 | | 0x00/0 | Subindex 6 contains the SYNC start value. The SYNC start value of 0x00 shall indicate that the counter of the SYNC message shall not be processed for this PDO. The SYNC start value 1 to 240 shall indicate that the counter of the SYNC message shall be processed for this PDO. |
| 0x1801 | Transmit PDO Communication Parameter | | | | | |
| | 1 | COB ID | u32 | | | Can be parametrized |
| | ... | ... | ... | | | |

| Index | Sub-Index | Parameter name | Data Type | Code description | Default value | Notes |
|--------|--------------------------------------|-------------------|-----------|------------------|---------------|---|
| 0x1802 | Transmit PDO Communication Parameter | | | | | |
| | 1 | COB ID | u32 | | | Can be parametrized |
| | ... | ... | ... | | | |
| 0x1803 | Transmit PDO Communication Parameter | | | | | |
| | 1 | COB ID | u32 | | | Can be parametrized |
| | ... | ... | ... | | | |
| 0x1A00 | Transmit PDO Mapping Parameter | | | | | |
| | 1 | Mapping Entry 1 | u32 | | 0x20000110 | Subindex from 1 to 8 contains the information of the mapped application objects from process data object 0x2000 |
| | 2 | Mapping Entry 2 | u32 | | 0x20000210 | |
| | 3 | Mapping Entry 3 | u32 | | 0x20000308 | |
| | 4 | Mapping Entry 4 | u32 | | 0x20000508 | |
| | ... | Mapping Entry ... | u32 | | 0x00000000 | |
| | | | | | | |
| 0x1A01 | Transmit PDO Mapping Parameter | | | | | |
| | 1 | Mapping Entry 1 | u32 | | 0x00000000 | Can be parametrized |
| | ... | Mapping Entry ... | u32 | | 0x00000000 | |
| 0x1A02 | Transmit PDO Mapping Parameter | | | | | |
| | 1 | Mapping Entry 1 | u32 | | 0x00000000 | Can be parametrized |
| | ... | Mapping Entry ... | u32 | | 0x00000000 | |
| 0x1A03 | Transmit PDO Mapping Parameter | | | | | |
| | 1 | Mapping Entry 1 | u32 | | 0x00000000 | Can be parametrized |
| | ... | Mapping Entry ... | u32 | | 0x00000000 | |

4.3.2 Manufacturer Segment

| Index | Sub-Index | Parameter name | Data Type | Code description | Default value | Notes |
|--------|--------------|-----------------|-----------|---|---------------|---|
| 0x2000 | Process Data | | | | | |
| | 1 | Distance | u16 | 0x0000: target in blindzone 0xFFFF: no target detected | | Distance value to the target in mm. Values will be given out between 500...50000 mm. Mapped to TPDO on default |
| | 2 | Velocity | int16 | 0x7FFF: target in blindzone 0x7FFF: no target detected | | Relative velocity value between the sensor and a target in cm/s. A target approaches if the algebraic sign of the velocity value is negative. A positive algebraic sign indicates a target which moves away. Values will be given out between -8000...8000 cm/s. Mapped to TPDO on default |
| | 3 | Signal Quality | u8 | 0x00 - no target > 0x01 - Acceptable > 0x05 - Good > 0x0A - Excellent > 0x0F - Perfect (≙ corner reflector) | | This object contains received signal strength of a reflection. The signal quality can help to adjust the orientation of the sensor in the application. The maximum signal quality value is dependent on the target distance and radar cross section of the target. 0x00/0 no target 0x01/1 worst signal quality ... 0x14/20 best signal quality (highest possible value) Mapped to TPDO on default |
| | 4 | Cycle Counter16 | u16 | Counts from 0x01/1 to 0xFFFF/65535 | | This object contains a counter which is incremented if a measurement cycle has been finished. In case of an overflow, the cycle counter restarts at the value 1. Mapped to TPDO on default |
| | 5 | Cycle Counter8 | u8 | Counts from 0x01/1 to 0xFF/255 | | This object contains a counter which is incremented if a measurement cycle has been finished. In case of an overflow, the cycle counter restarts at the value 1. Mapped to TPDO on default |

| Index | Sub-Index | Parameter name | Data Type | Code description | Default value | Notes |
|--------|--------------------------------|---------------------------------|-----------|---|--|--|
| 0x2001 | 0 | Operating Hours | u32 | | | This object contains the time duration the sensor was operating. The time duration shows the value in full hours. |
| 0x2010 | Identification & Info - public | | | | | |
| | 1 | Vendor Name | String | | "Pepperl+Fuchs" | This object contains a list of identification parameters. |
| | 2 | Vendor Text | String | Web link | www.pepperl-fuchs.com/CANopen | |
| | 3 | Product ID | String | Part number | 70000001 | |
| | 4 | Product Text | String | | "Radar Distance Sensor" | |
| | 5 | Serial Number | String | | 40000000000001 | |
| | 6 | Application Sepsific Tag | String | | | |
| | 7 | Functional Tag | String | | *** | |
| | 8 | Location Tag | String | | *** | |
| | 9 | Unique Product ID | String | | https://pefu.de/ + Serial Number | |
| 0x4000 | Measurement Configuration | | | | | |
| | 1 | Measurement Mode | u8 | 0x00: Closest distance 0x01: Best reflexion 0x02: Fastest velocity | 0x00 | Subindex 1 allows to select the measurement mode for the sensor. |
| | 2 | Sampling Rate | u16 | Sampling Rate in Hz [1; 2; ...; 200 Hz] | 0x0032 / 50 | Subindex 2 allows to set the sampling rate in operational mode in Hz. |
| | 3 | Filter Mode | u8 | 0x00 - No filter 0x01 - Median filter | 0x01 | Subindex 3 allows to select the measurement filter mode. The strength of the median filter can be configured in subindex 4. |
| | 4 | Filter Strength (Median filter) | u8 | 0x00 - Low 0x01 - Standard 0x02 - High 0x03 - Very high | 0x01 | Subindex 4 allows to select the filter strength for the median filter. The sliding window size can be selected from low to very high. The parameter has no influence if "No filter" is selected. low = 3x2 std = 7x4 high = 11x6 very high = 15x8 |
| | 5 | Event Configuration | u8 | 0x00: No Target results in Replacement Value 0x01: No Target outputs Emergency Message | 0x00 | Subindex 5 allows to configure an event to trigger an emergency message |
| | 6 | Foreground Suppression | u16 | Range in mm | 0x012C | Subindex 6 allows to set a distance value in mm to suppress targets in the foreground sensing range. |

| Index | Sub-Index | Parameter name | Data Type | Code description | Default value | Notes |
|--------|------------------------|---|-----------|---|---------------|---|
| | 7 | Background Suppression | u16 | Range in mm | 0x7EF4 | Subindex 7 allows to set a distance value in mm to suppress targets in the background sensing range. |
| | 8 | Minimum velocity suppression | u16 | Range in cm/s | 0x00 | Subindex 8 allows to set an absolute velocity value in cm/s to suppress targets below it. Lowest limit with 0cm/s |
| | 9 | Maximum velocity suppression | u16 | Range in cm/s | 0x00C8 | Subindex 9 allows to set an absolute velocity value in cm/s to suppress targets above it. Highest range with 8000cm/s (80m/s) |
| 0x4001 | LED Configuration | | | | | |
| | 1 | LED Config | BOOL | 0x00: Disable all LEDs 0x01: Enable all LEDs | 0x01 | This object contains the configuration of the LED behavior. It allows to enable/disable all indicator LEDs of the sensor. |
| 0x4100 | Reflections Array List | | | | | |
| | 1 | 1 Distance | real32 | [300; 50000 mm] 0 if no target detected | | This object contains up to ten reflections of targets. All reflections are output without any influence of filters or suppressions. Each reflection shows the following values: -distance in mm -velocity in cm/s -amplitude in digits |
| | 2 | 2 Velocity | real32 | [0; +/-8000 cm/s] 0 if target does not move | | |
| | 3 | 3 Amplitude | real32 | [0; 100000] 0 if no target detected | | |
| | ... | ... Distance ... Velocity ... Amplitude | | | | |
| | 31 | GetAll | String | | | |