


UHF

MASCOT

# USER'S MANUAL

WIRELESS MICROPHONE SYSTEM

UXD-100 / UXD-200

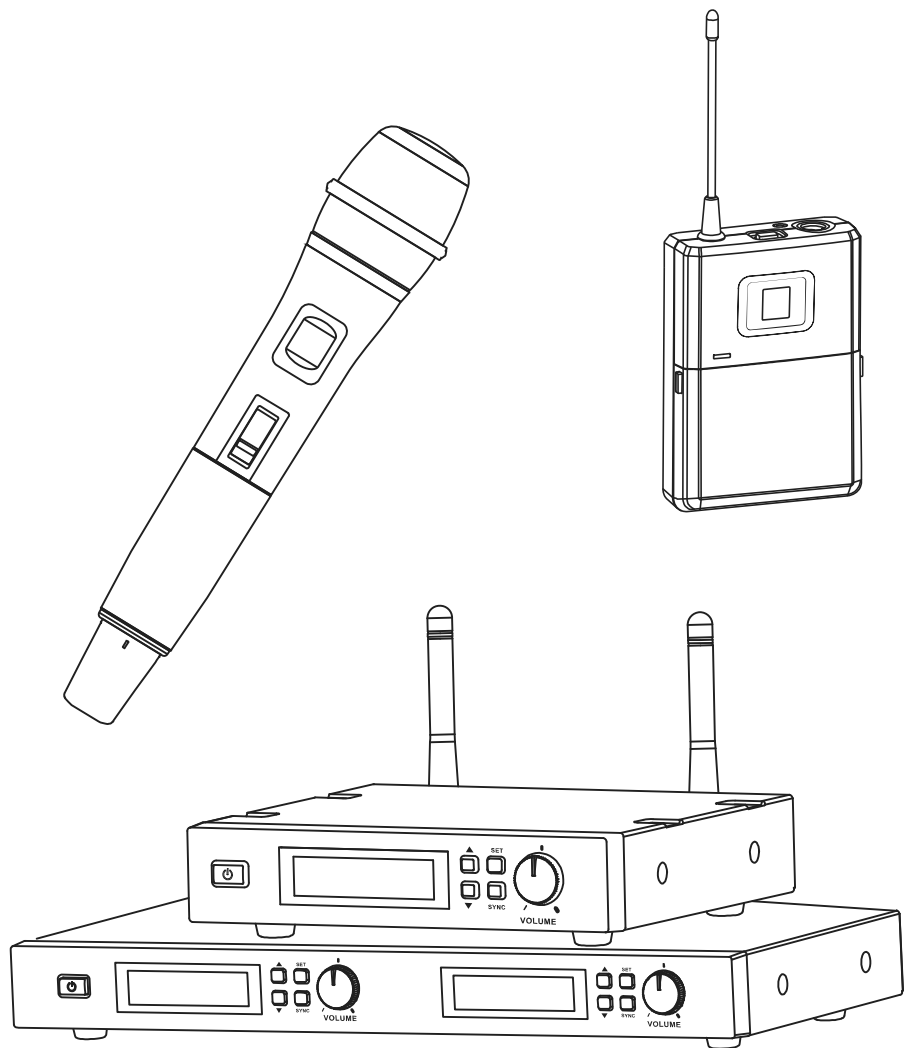

**Contents:**

Introduction .....	1
Quick Start Guide .....	2
Product Description .....	4
System Operation .....	8
Color Label Identification .....	15
Basic Connections .....	16
Trouble Shooting .....	17
Specification .....	18

## ● Introduction

Thank you for purchasing our product. This PLL synthesized wireless microphone system operates in UHF band frequency with 700 selectable channels. Please read this instruction manual carefully before operating the system. This manual covers the function and operation of the wireless microphone system.

### ◆ FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:(1)This device may not cause harmful interference and (2) This device must accept any interference received, including interference that may cause undesired operation.

Notice : The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

### ◆ FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 0.5 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The antennas used for this transmitter must be installed to provide a separation distance of at least 0.5 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

### ◆ Safety


- Do not spill liquid on the appliance and do not drop it on a hard concrete floor.
- Do not place the equipment near heat sources such as radiators, heating ducts, amplifier, etc.
- Do not expose the equipment to direct sunlight, extremely dust, excessive moisture, rain, mechanical vibrations, or shock.
- Take out the battery from transmitter, if the appliance has been not used for a longer period. This will avoid the damage resulting from a defective leaking battery.
- If the equipment is not going to be used for a long time, disconnect the AC adapter from the power outlet. Please note that if you turn the equipment off while leaving the AC adapter plugged in, it is not fully isolated from the power supply.
- **WARNING:** To reduce the risk of fire or electric shock, do not use the products near water and do not expose them to rain or moisture.
- No guarantee claims for the equipment and no liability for any resulting personal damage or material damage will be accepted if the equipment is used for other purpose than originally intended, if the equipment is not correctly connected or operated, or if the equipment is not repaired in an expert way.

### ◆ Environment


- Do not throw used batteries into a fire or garbage bin with domestic rubbish. Be sure to dispose of used batteries in accordance with local waste disposal rules.
- When disposing the equipment, remove the batteries, separate the case, circuit boards, and cables, and dispose of all components in accordance with local waste disposal rules.

# Quick Start Guide



## 1. Connected Receiver Power Cable

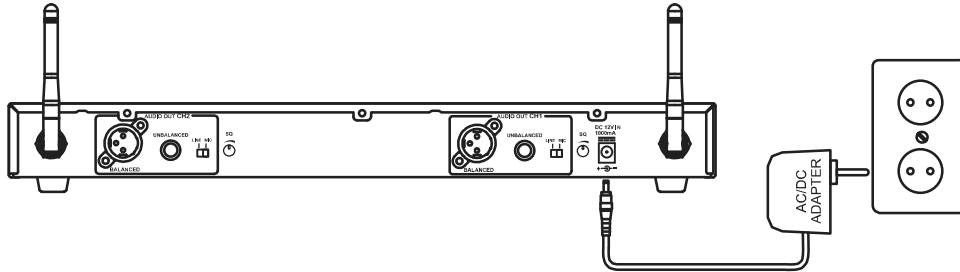


## 2. Connect Mixer or Amplifier

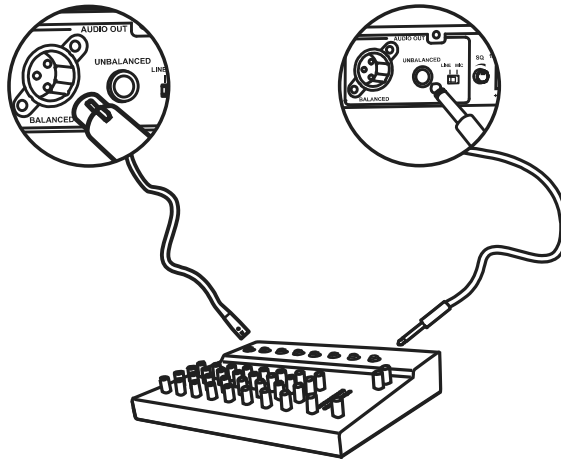


## 3. Scan Free Channel

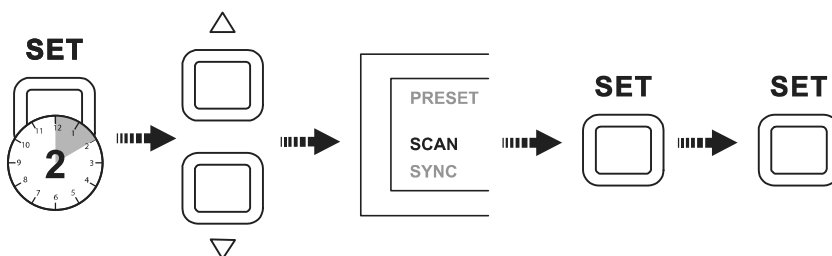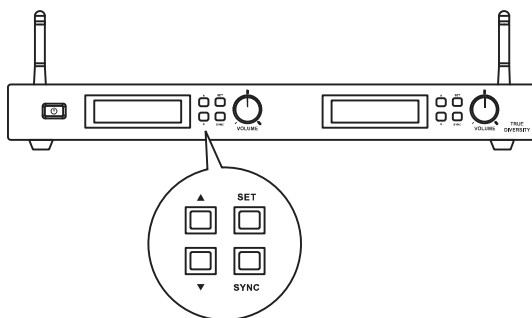

## 4. Insert Batteries

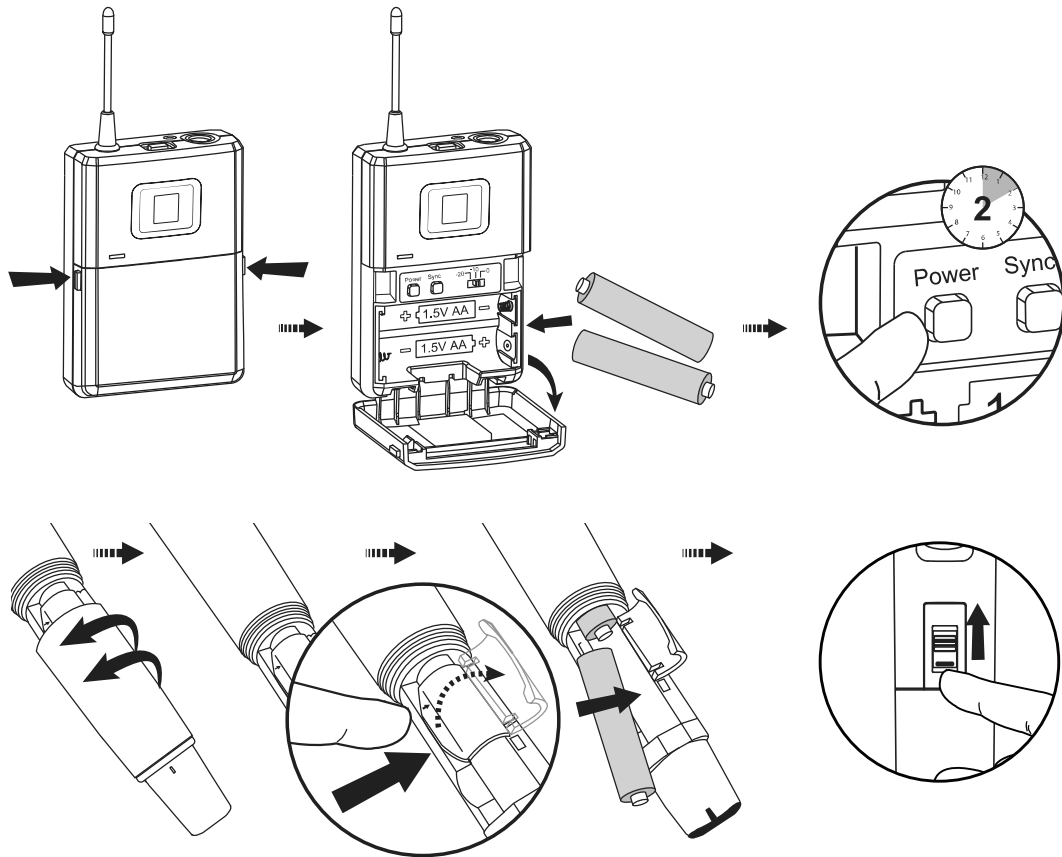


## 5. SYNC

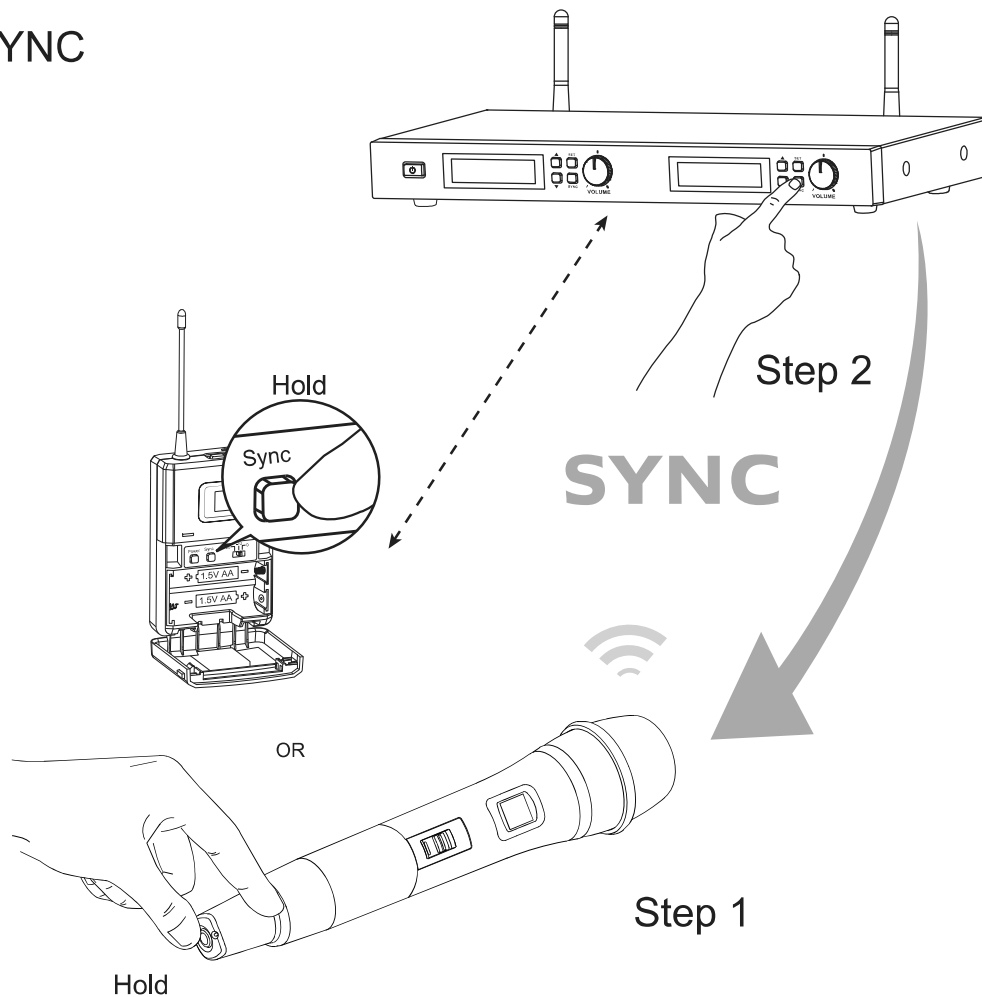


● **Receiver**

Front :

**UXD-100: True Diversity Receiver**

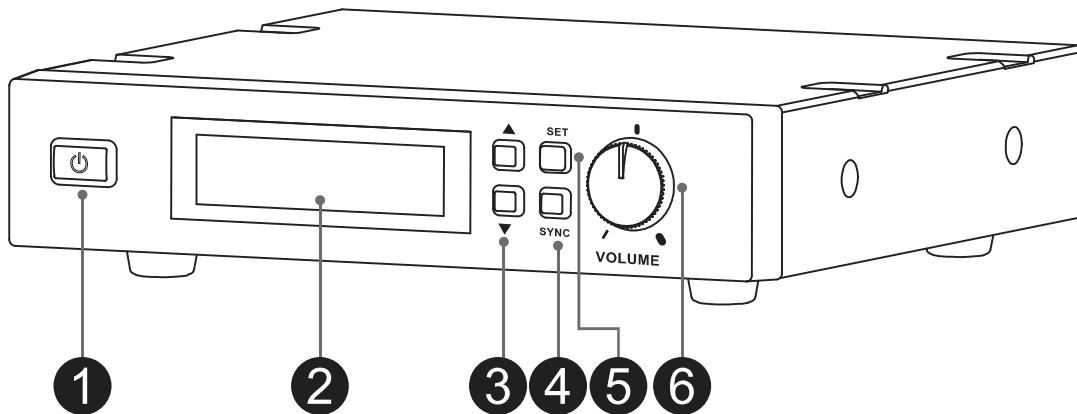


**UXD-200: True Diversity Dual Channel Receiver**

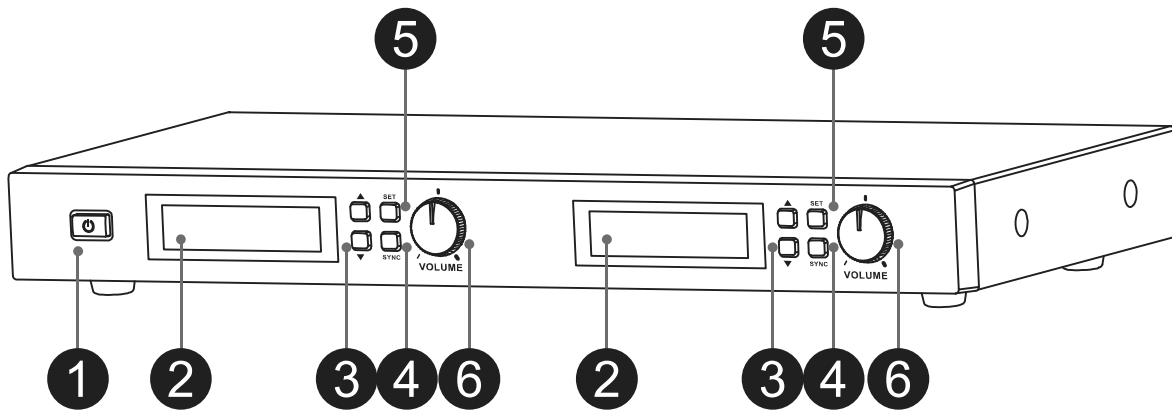

1. Power Button.
2. VA LCD Display: Display group, channel, RF and AF levels, frequency and settings.
3. Button ▲▼: Tap the channel forward / backward.
4. SYNC Button: Press the button to actuate the synchronization with transmitter.
5. SET Button: Press button to activate the scan or preset mode or manual mode.
6. Volume Controller: Adjust the receiver output level.


PRODUCT DESCRIPTION	<b>WIRELESS</b>
---------------------	-----------------

**VA LCD Display :**

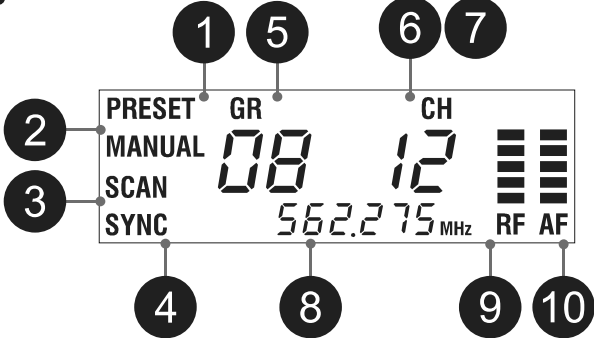


1. PRESET : Use this mode to set multiple constructions by preset group.
2. MANUAL : Use this mode to select free channel by manually.
3. SCAN : Use this mode to set free channel by scan function.
4. SYNC : The synchronization process is actuated.
5. GR : Display selected preset group.
6. CH : In "PRESET" mode, display selected preset channel.
7. CH : In "SCAN" mode or "MANUAL" mode, display selected channel number.
8. FREQ : Display selected frequency.
9. RF Bar : Display the reception status of RF signal.
10. AF Bar : Display the reception status of AF signal.

**Rear :**

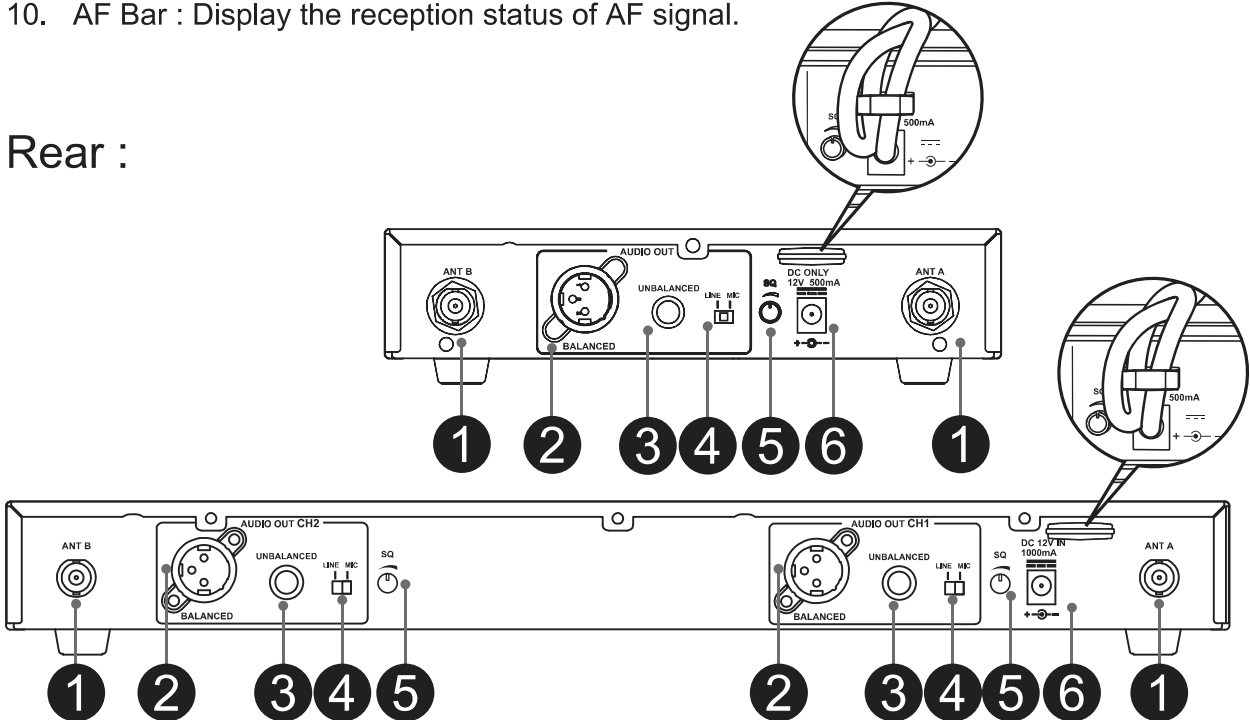

1. Antenna.
2. Balanced XLR Audio Output.
3. Unbalanced 6.3mm Audio Output.
4. Mic/Line Switch: Use this switch to adjust audio output level for mic level (-20dB) or line level (0dB).
5. Squelch: Turn the knob to adjust or decrease the noise floor level.
6. Power Adapter Connector.

● **UF-9R / UF-62B Handheld Microphone**

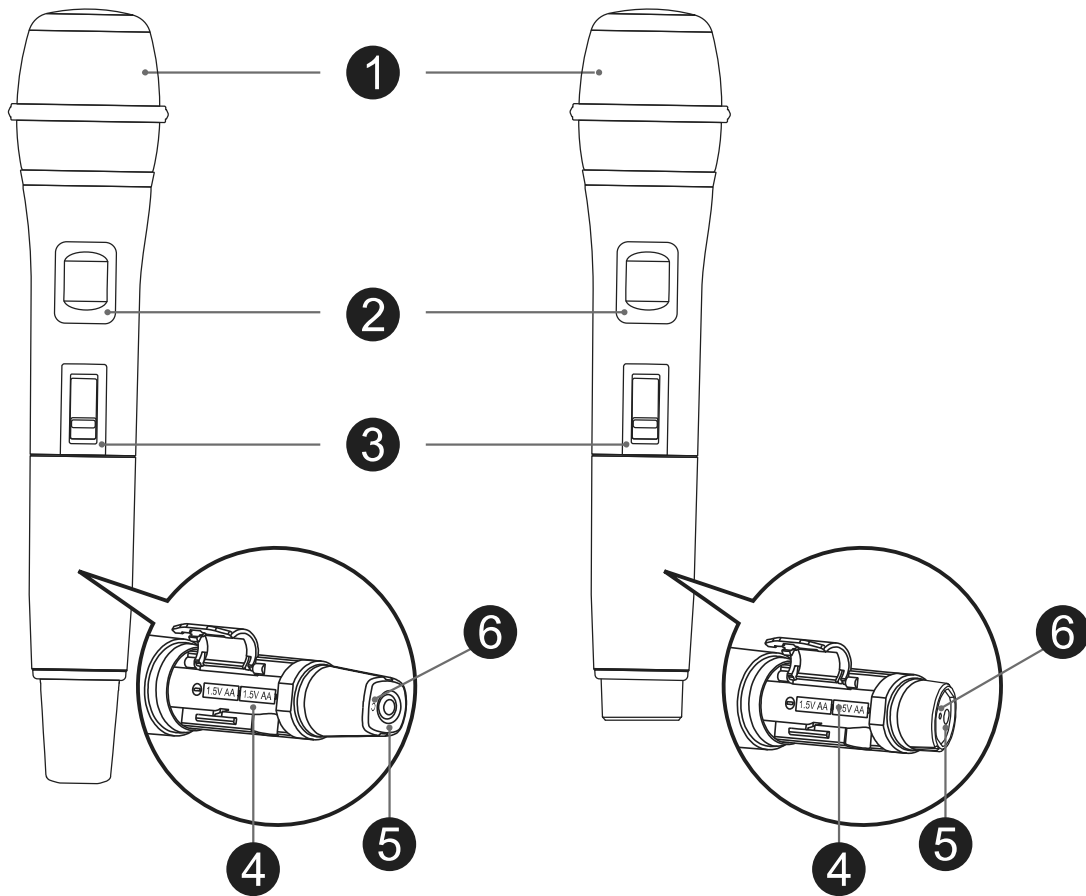


1. Grille: Protects the microphone capsule and helps reduce breath sounds and wind noise.
2. LCD Display: Display group, channel and battery power level.
3. ON/OFF Switch: Turns microphone power on or off.
4. Battery compartment: Insert two AA size batteries into the compartment and make sure that the polarity of batteries is correct.
5. SYNC Button(2.4G Module): Press to actuate the synchronization process with the receiver.
6. Power LED: Indicate the power / low battery level status.

LED Indicator	Status
Green	Ready
Flashing Green	The synchronization process is actuated.
Flashing Red	Low battery power when less than 10 minutes operation



● **UT-61 Bodypack Transmitter**

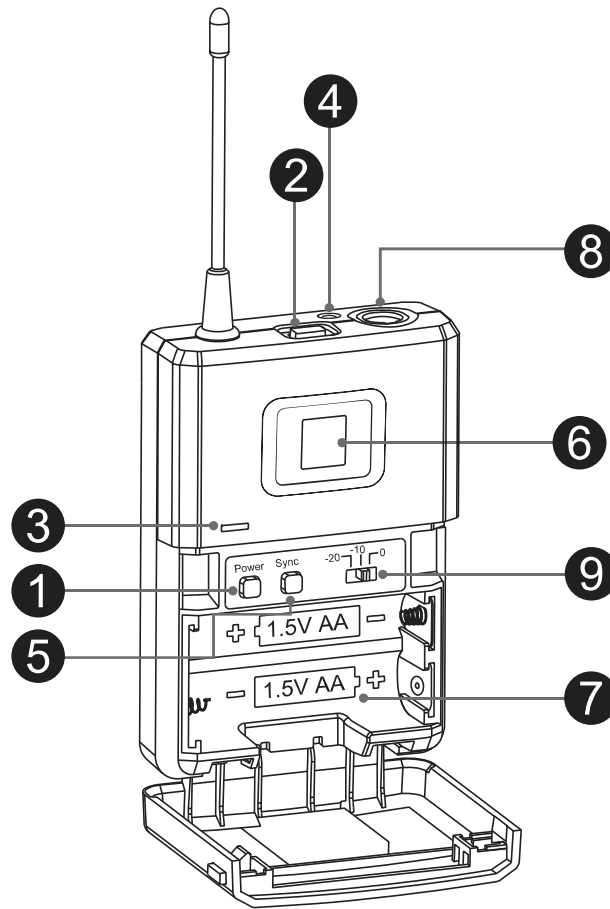

1. Power Button: Press for 2 seconds to power the microphone on or off.
2. Mute Button: With the transmitter on, a slight press for button will toggle between mute and unmute function.
3. Power LED: Indicate the power / low battery level status.


LED Indicator	Status
Green	Ready
Flashing Green	The synchronization process is actuated.
Flashing Red	Low battery power when less than 10 minutes operation

4. MUTE LED: Blue LED light on in mute status.
5. SYNC Button: Press to actuate the synchronization process with the receiver.
6. LCD Display: Display group, channel and battery power level.
7. Battery compartment: Insert two AA size batteries into the compartment and make sure that the polarity of batteries is correct.
8. Mini XLR Connector: Connect to the lapel microphone or headset microphone.
9. Gain Switch: The switch sets the audio input to -20dB, -10dB, 0dB.

● **Connecting the receiver**


Prior to setting up, please check that the transmitter and receiver are tuned to the same frequency or channel. Two or more transmitters operating in the same frequency can not be used at the same time and area.

1

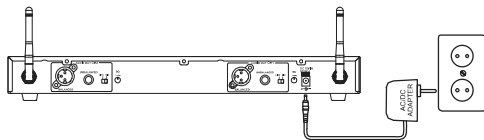


- Connected the provided DC power supply to the receiver power input with an appropriate AC power source. The LCD display will light and the receiver is on.

2

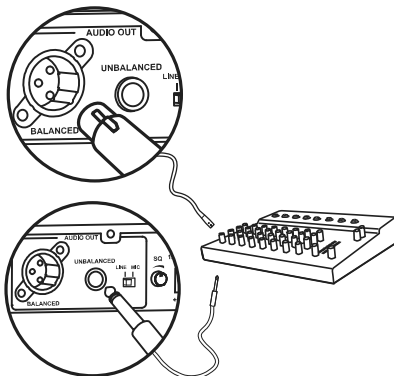


- Using a standard audio cable with 3-pin XLR connectors or 6.3mm phone plugs to connect the mixer or amplifier.
- ✧ Never use the balanced and unbalanced audio outputs at the same time! This may cause signal loss or increased noise.

3

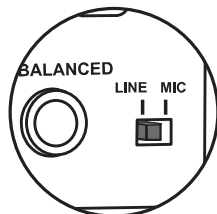


- Set the audio output level for  
MIC: -20dB  
LINE: 0dB (Default Setting)

4

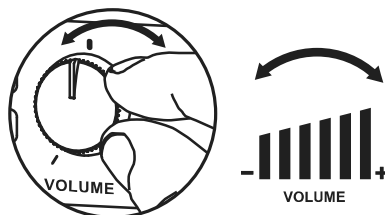

- Using the Volume Controller to adjust the AF audio level to the input of the amplifier or mixer.
- ✧ Default Setting: In minimum VOLUME position.

5

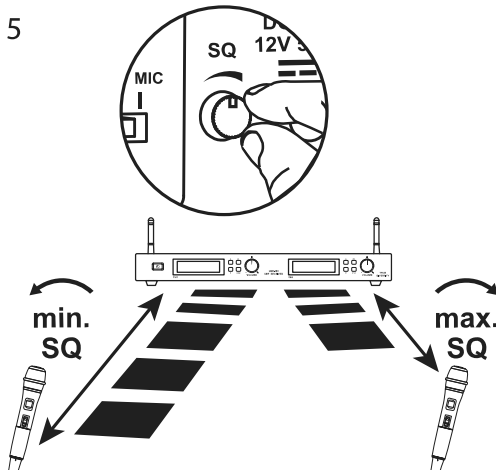

- Use squelch to eliminate or suppress the ambient RF noise.
- ✧ Defaulting Setting: In properly position.

## ● Setting up channel on receiver



Notice: Do not put two or more transmitters operating nearby when setting up the frequency channel. Please keep transmitter at least one meter away from receiver.

### ➤ Manual Mode



Setting interference-free channel by manual operation.





➤ Press the "SET" button for 2 seconds, "PRESET" or "MANUAL" or "SCAN" mode will flash.

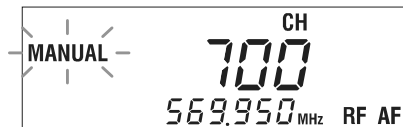



➤ Press the  $\triangle$  or  $\nabla$  button to select the "MANUAL" mode.

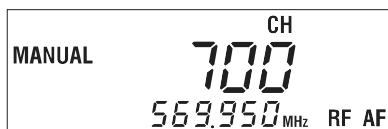

➤ Press "SET" button to lock the "MANUAL" mode.

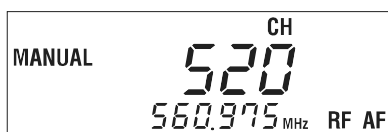

➤ Press  $\triangle$  or  $\nabla$  button to change the channel forward or backward.

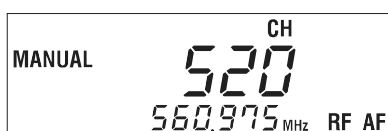


➤ Press the "SET" button to lock the setting.



**NOTE:** If user needs to set up multi-receiver system, please keep your previous receiver-microphone pair power on. Then go on to next scanning procedure.

➤ **Scan Mode**



Set interference-free channel by frequency scan function.

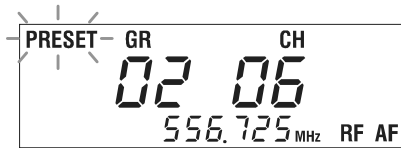



➤ Press the “SET” button for 2 seconds, “PRESET” or “MANUAL” or “SCAN” mode will flash.

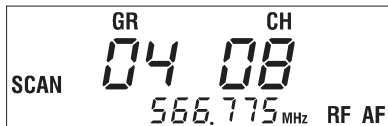

➤ Press  $\Delta$  or  $\nabla$  button to select the “SCAN” mode.

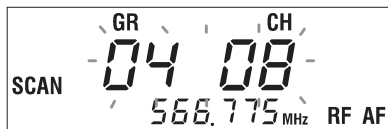

➤ Press the “SET” button, “SCAN” will stop flashing, it will searching the free channel automatically.

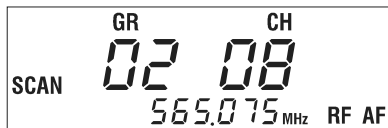

➤ Press the “SET” button to lock the “SCAN” mode.



➤ If the system fails to select free-interference channels, it will automatically scan available channels from all frequency ranges.




➤ Press the “SET” button to lock the setting.

**NOTE: If user needs to set up multi-receiver system, please keep your previous receiver-microphone pair power on. Then go on to next scanning procedure.**

### ➤Preset Mode

Set multiple constructions by using preset channels. Excluding the interference from external, up to 12 system can be operated simultaneously in each group (Region dependent).

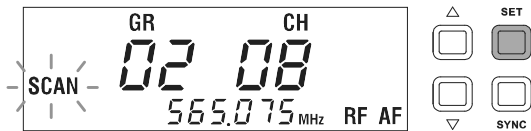


➤ Press the “SET” button for 2 seconds, “PRESET” or “MANUAL” or “SCAN” mode will flash.




➤ Press  $\Delta$  or  $\nabla$  button to select the “PRESET” mode.



➤ Press the “SET” button, “PRESET” will stop flashing. GR digit will flash simultaneously.

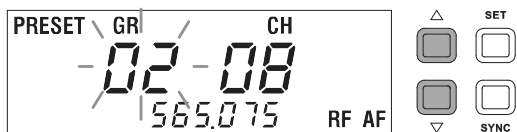


➤ Press  $\Delta$  or  $\nabla$  button to select GR number.

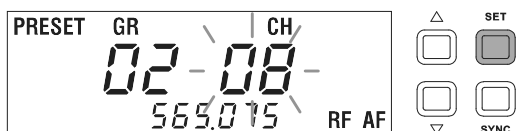

➤ Press the “SET” button, GR number stops flashing and CH digit will flash simultaneously.




➤ Press  $\Delta$  or  $\nabla$  button to select CH number.

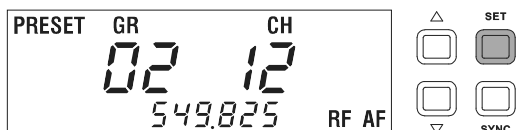


➤ Press the “SET” button to lock the setting.

**NOTE:** When there is any outside interference on the current preset group, please switch to use next preset group. If 8 preset groups are all under interference, please use scan mode to set up system.


● **Set up the handheld microphone / bodypack transmitter**

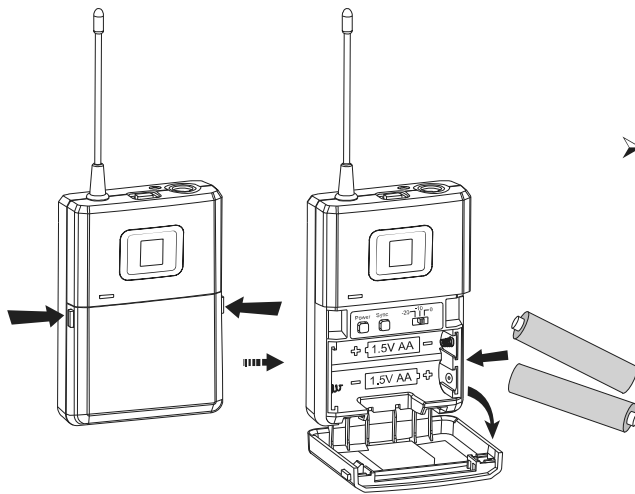


- Open the battery cover and insert batteries into the battery compartment conforming to the polarity (+)(-) marks.

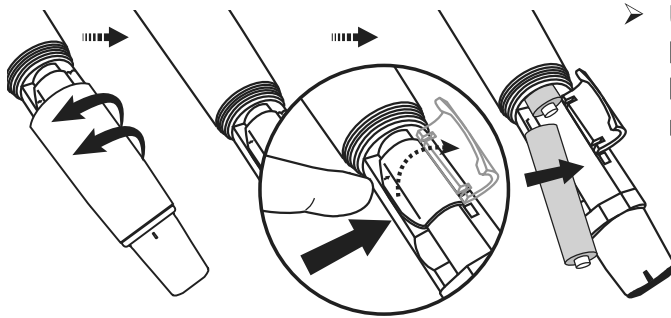


- Unscrew the handheld Mic and open the battery cover to insert the battery into the battery compartment and confirm the marks of the polarity (+) (-).

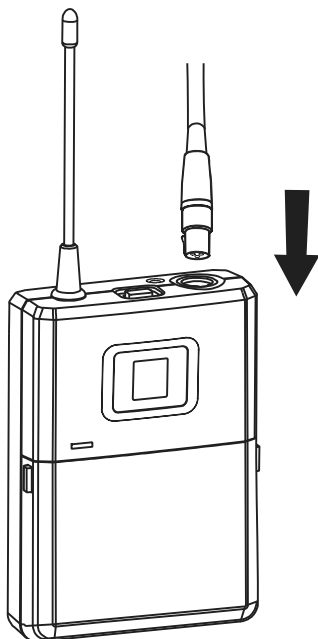


- Connect to the lavalier microphone, headset microphone or guitar cable.

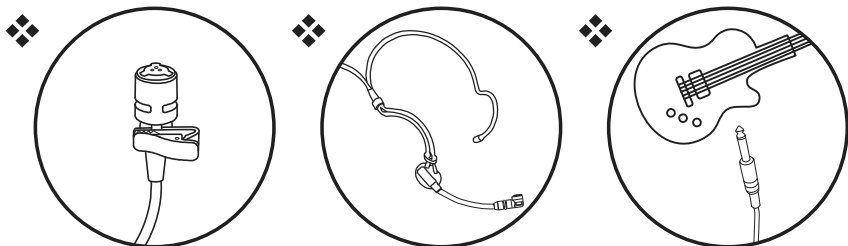

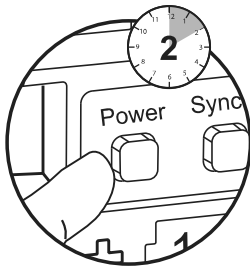


Bodypack

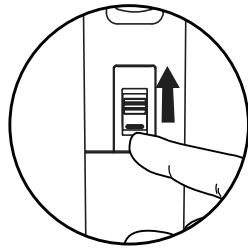

Handheld

- Handheld transmitter:  
Push the switch to power on.  
Bodypack transmitter:  
Press for 2 seconds to turn on the power.
- ✧ If the LED stays flashing, it indicates that the battery will run out of power soon and should be changed.

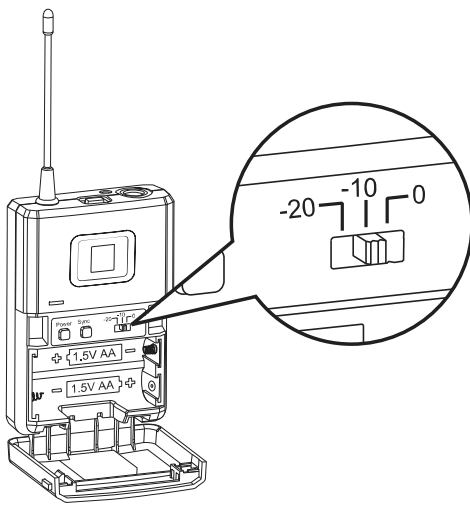


- Adjust the audio input level.
  - 0dB
  - -10dB (Default Setting)
  - -20dB



• 0dB



• -10dB

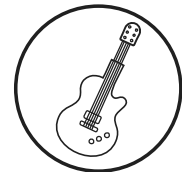

• -20dB

NOTE: When you don't use this device for a long term period, please switch the power switch to "off" mode to save more electric power.


## ● Synchronizing a transmitter with a receiver

Automatic frequency synchronization via remote channel for easy setup.

- First, switch the transmitter and the receiver on. Press and hold the SYNC button on your transmitter. The SYNC flashes on the receiver display panel.

At the same time, press the SYNC button of the receiver to transfer the selected frequency to the transmitter.



- When using SYNC setting, the distance of receiver and transmitter is within 1 M.

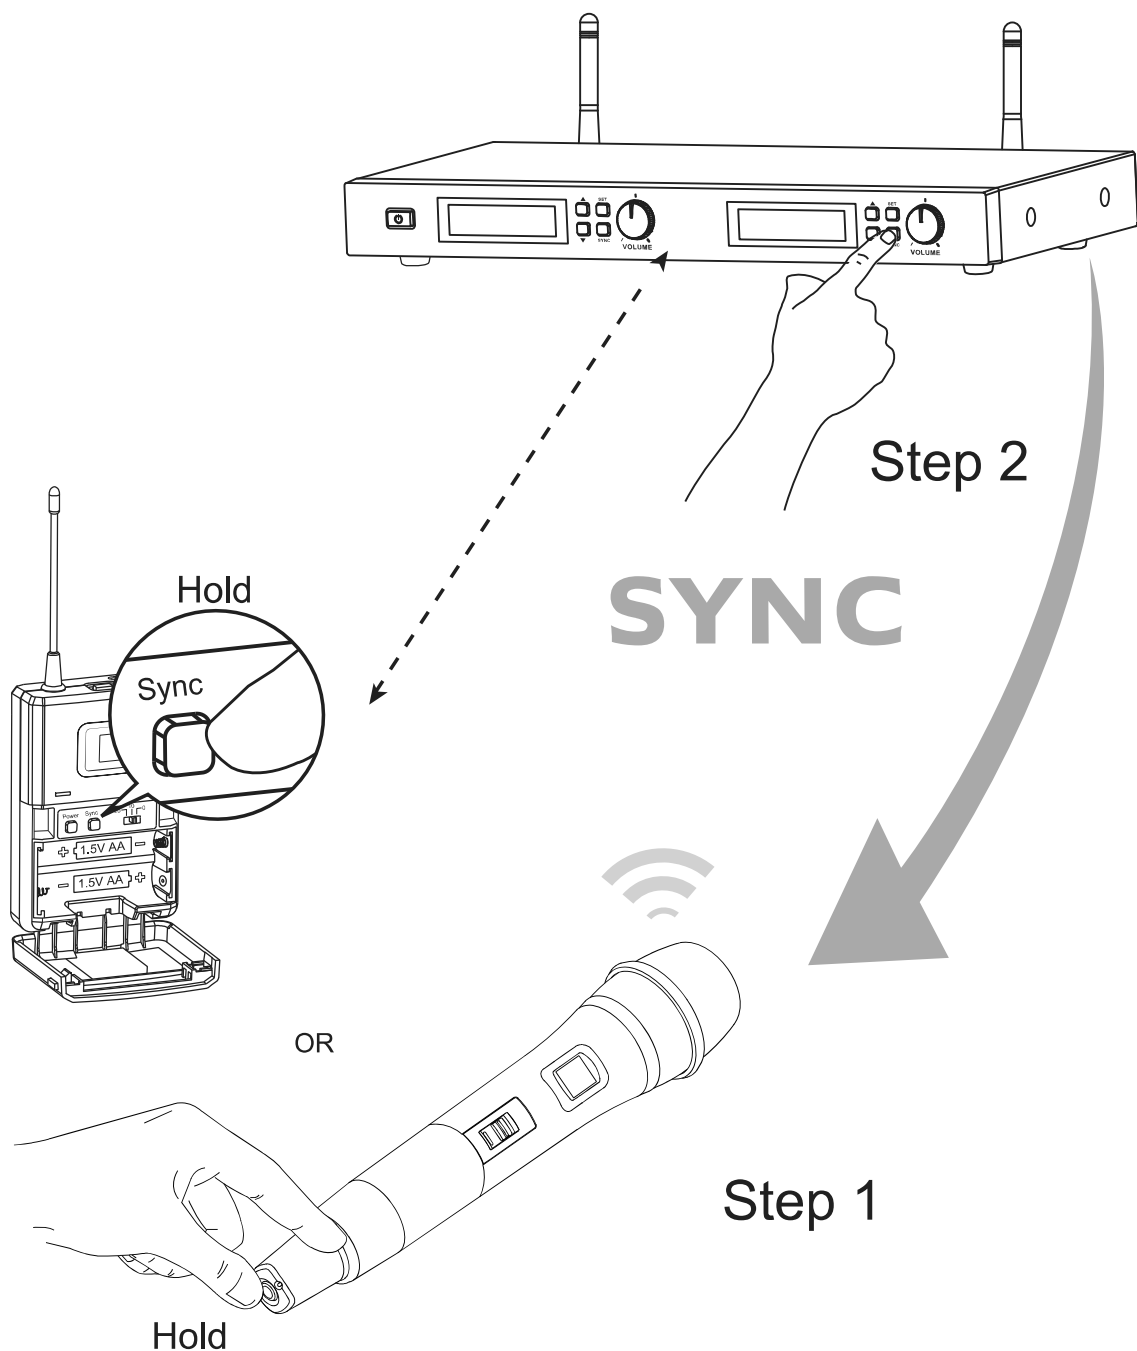




● **Color Label Identification**

You can also stick the color label on the receiver and transmitter for quickly identify the pair system.

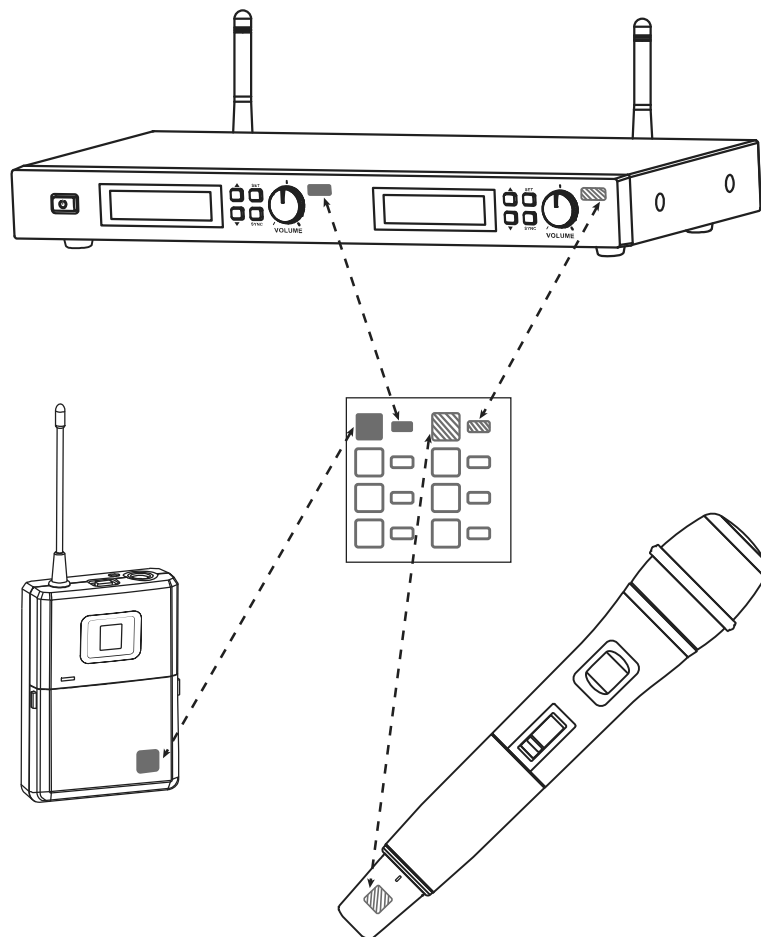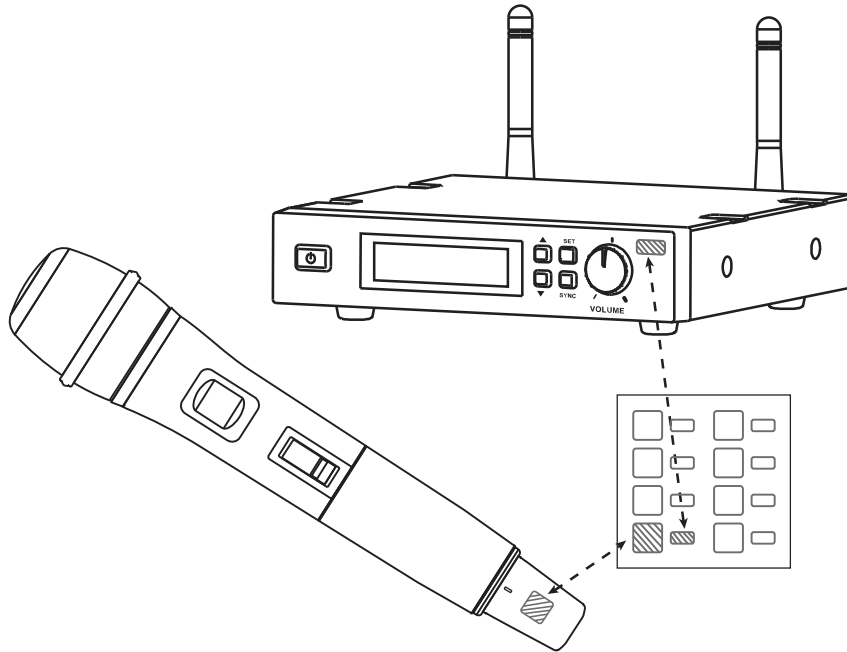


● **Basic Connections**


To install a receiver in a 19" standard rack by using 2 short L type metal racks.

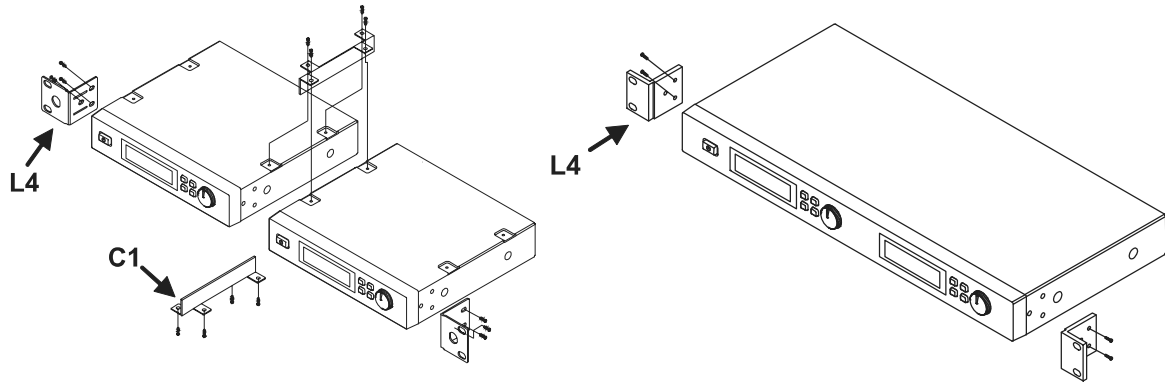

To mount a receiver in a 19" standard rack by using 2 long L type metal racks.  
(L type long metal racks is an optional product, so please purchase extra in local shops.)

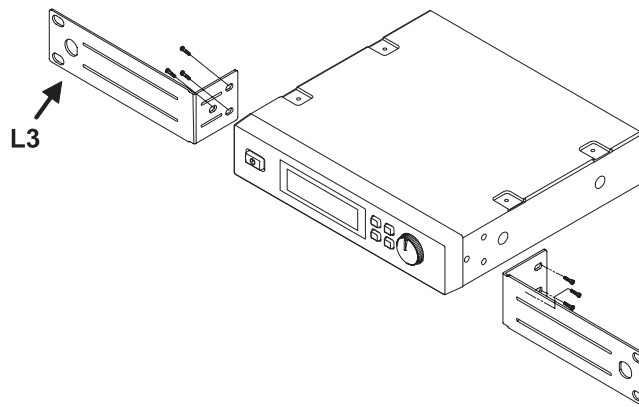

By using the antenna holder to install the UHF antenna in high place for better reception quality.

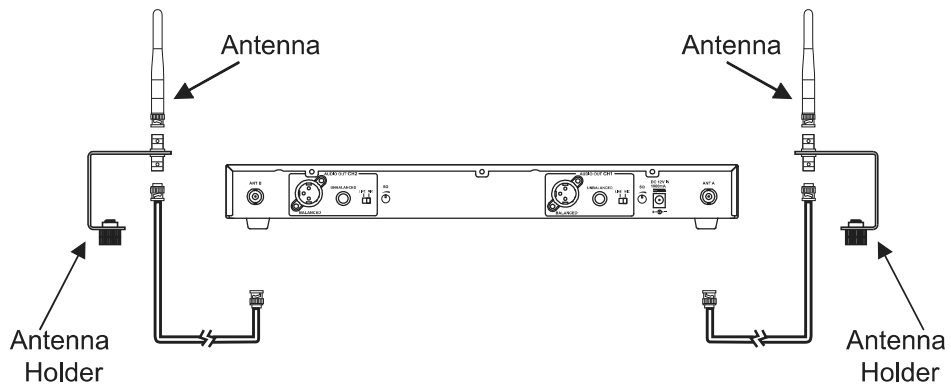

## ● Trouble Shooting

<b>Problem</b>	<b>Solution</b>
No sound	<ul style="list-style-type: none"><li>➤ Check the power supply of the microphone and receiver.</li><li>➤ Check that the transmitter and receiver are tuned to the same frequency.</li><li>➤ Check whether the hi-fi appliance is switched on and the receiver output is connected to audio mixer or amplifier input.</li><li>➤ Check whether transmitter is too far away from receiver or SQUELCH control set too high.</li><li>➤ Check whether receiver is located too near metal object or there are obstructions between transmitter and receiver.</li></ul>
Sound interference	<ul style="list-style-type: none"><li>➤ Check the antenna location.</li><li>➤ When using 2 or above microphone sets simultaneously, make sure that the chosen frequencies are not interfered.</li><li>➤ Check whether the interference comes from other wireless microphones, TV, radio and etc.</li></ul>
Distortion	<ul style="list-style-type: none"><li>➤ Check the receiver volume level whether is set too high or too low.</li><li>➤ Check whether the interference comes from other wireless microphones, TV, radio and etc.</li></ul>

## ● System Performance

### Receiver

- Frequency Range : UHF510 ~ 937.5MHz (Regionally Selected)
- Case : UXD-100: Half 19" EIA Rack Metal Case  
UXD-200: 19" EIA Rack Metal Case
- Oscillator : PLL Synthesized
- Modulation : FM
- S/N Ratio : >100dB, at 20KHz deviation and 60dB $\mu$ V antenna input
- Image & Spurious Rejection : 70dB minimum
- Receiving Sensitivity : At 5 $\mu$ V over 70dB S/N ratio
- AF Response : 50Hz to 18KHz
- T.H.D. : <1% (at 1KHz)
- IF Frequency : 1st: 243.95MHz 2nd: 10.7MHz
- Dynamic Range : >100dB
- Tone Signal : 32.768KHz
- Audio Output : Balanced & Unbalanced
- Power Supply : DC12V
- Current Consumption : UXD-100: 260 $\pm$ 10mA  
UXD-200: 520 $\pm$ 10mA
- Dimension(MM) WxHxD : UXD-100: 200x42x183  
UXD-200: 400x42x183
- Weight : UXD-100: 975g  
UXD-200: 1740g

### Handheld/Bodypack Transmitter

- Frequency Range : UHF510 ~ 937.5MHz (Regionally Selected)
- Channel Select : SYNC with Receiver
- Display : LCD displays status of group, channel and battery status.
- RF Power Output : 10mW (max.)
- Frequency Stability :  $\pm$ 0.005%
- Spurious Emission : >60dB below carrier frequency
- Gain Setting : **Bodypack** : 0dB, -10dB, -20dB (3 settings)
- Mic Unit : **Handheld** : Uni-Direction dynamic unit or  
Uni-Direction electret condenser unit  
**Bodypack**: Lavalier Mic / Headset Mic
- Battery : DC3V (1.5V x 2AA size batteries)
- Current Consumption : 120 $\pm$ 10mA
- Dimension(mm) WxHxD : **Handheld** : 243x51 $\Phi$   
**Bodypack** : 65x97x25
- Weight : **Handheld** : 258g      **Bodypack** : 86g

\*The specifications are subject to change without notice.