



9292 Jeronimo Road  
Irvine, CA 92618-1905

# SmartID and Smart

## INSTALLATION

Document Number 803



## 7 Contacts

### Americas

HID Global Corporation (California, USA)  
Email: [tech@hidcorp.com](mailto:tech@hidcorp.com)  
Main: (949) 598-1600  
Support: 1-800-237-7769  
Fax: (949) 598-1690

### Europe, Middle East and Africa

HID Global Corporation, Ltd. (Haverhill, UK)  
Email: [eusupport@hidcorp.com](mailto:eusupport@hidcorp.com)  
Main: +44 (0) 1440 714 850  
Support: +44 (0) 1440 711 822  
Fax: +44 (0) 1440 714 840

### Asia-Pacific

HID Global Corporation Asia Pacific Ltd. (Hong Kong)  
Email: [asiasupport@hidcorp.com](mailto:asiasupport@hidcorp.com)  
Main: (852) 3160 9800  
Support: (852) 3160 9802  
Fax: (852) 3160 4809





### 6.5 DGT/NCC

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

According to "Administrative Regulations on Low Power Radio Waves Radiated Devices" Without permission granted by the DGT, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to a approved low power radio-frequency devices. The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications is operated in compliance with the Telecommunications Act. The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

### Contents

- 1 **Products List**.....
- 2 **Overview**.....
  - 2.1 Mullion Mounting.....
  - 2.2 Indications.....
  - 2.3 Connections.....
  - 2.4 Output Protocols.....
  - 2.5 Security.....
- 3 **Specifications**.....
- 4 **Timing**.....
- 5 **Installation Instructions**.....
  - 5.1 Wall Mounting Drawing (All Models).....
  - 5.2 Conductor Connections (All Models).....
  - 5.3 Tamper Switch - Optional.....
  - 5.4 Switch Box Mounting Plate - Optional.....
  - 5.5 Mullion Reader Mounting Plate – Spacer.....
- 6 **Regulatory**.....
  - 6.1 UL.....
  - 6.2 FCC / Canada Radio Certification.....
  - 6.3 CE Marking.....
  - 6.4 Asia and Pacific Rim.....
  - 6.5 DGT/NCC.....
- 7 **Contacts**.....

### List of Figures

- Figure 1 Mullion Mounting.....
- Figure 2 Tamper Switch.....
- Figure 3 Mounting Plate Step 1 and 2.....
- Figure 4 Mounting Plate Step 3 and 4.....
- Figure 5 Mounting Plate Spacer.....



# 1 Products List

This guide is applicable for the following SmartID and SmartTRANS products:

HID Part Number	HID Model	Description
*8030xyzz	S10	SmartID Mullion Reader
*8045xyzz	SK10	SmartID Mullion Keypad Reader
**8100xyzz	SP10	SmartTRANS Mullion Reader with HID/AWID Prox
**8110xyzz	SPK10	SmartTRANS Mullion Keypad Reader with HID/AWID Prox
***8140xyzz	SP10	SmartTRANS Mullion Reader with Indala Prox
***8141xyzz	SPK10	SmartTRANS Mullion Keypad Reader with Indala Prox

**Notes:** 'x' = Revision of Main Board, 'y' = color of plastic housing and 'zz' = application

\* UL Listed to UL 294.

\*\* ETL Listed to UL 294 – UL Listing to UL 294 Pending.

\*\*\* UL Listing Pending.

**Accessories:**

HID Part Number	Manual Section	Description
500-0300	5.3	Tamper Switch
500-8090	5.4	Mullion SPMD – Switch Box Mounting Plate
500-9287	5.5	Mullion Reader Mounting Plate – Spacer

The accessories are not listed to UL294.

Accessories are compatible with all readers in this manual.

# 6 Regulatory

## 6.1 UL

These proximity readers are intended to be powered from the output of a previously certified power supply. These readers are not to be used with listed (UL294) control equipment.

## 6.2 FCC / Canada Radio Certification

These devices comply with part 15 of the FCC rules.

Operation is subject to the following two conditions: (1) This device must not cause harmful interference, and (2) This device must accept any interference, including interference that may cause undesired operation. Any modifications not expressly approved by the party responsible for implementation void the user's authority to operate the equipment.

Le fonctionnement est soumis aux deux conditions suivantes: (1) le dispositif ne peut pas causer de perturbations nuisibles et (2) ce dispositif doit accepter toute perturbation quelconque qu'il reçoit, y compris des perturbations qui peuvent provoquer un fonctionnement indésirable. Les changements de configuration n'ayant pas été expressément approuvés par la partie responsable de la mise en conformité peuvent faire perdre à l'utilisateur l'autorisation de faire fonctionner le matériel.

*This Category II radiocommunication device complies with the requirements of the Standard RSS-310.*

*Ce dispositif de radiocommunication de catégorie II respecte les exigences de l'Industrie Canada.*

The Carrier Frequencies and output power are as follows :

803xD, 810xD	13.56MHz	-6.5dBm
810xD	125kHz	<-40dBm

## 6.3 CE Marking

HID Global hereby declares that these proximity readers are in compliance with the essential requirements and other relevant provisions of Directive 2004/108/EC.

## 6.4 Asia and Pacific Rim

Pending



### 5.5 Mullion Reader Mounting Plate – Spacer

The sizes in the drawing are in millimeters, 1 mm is 0.039 in.

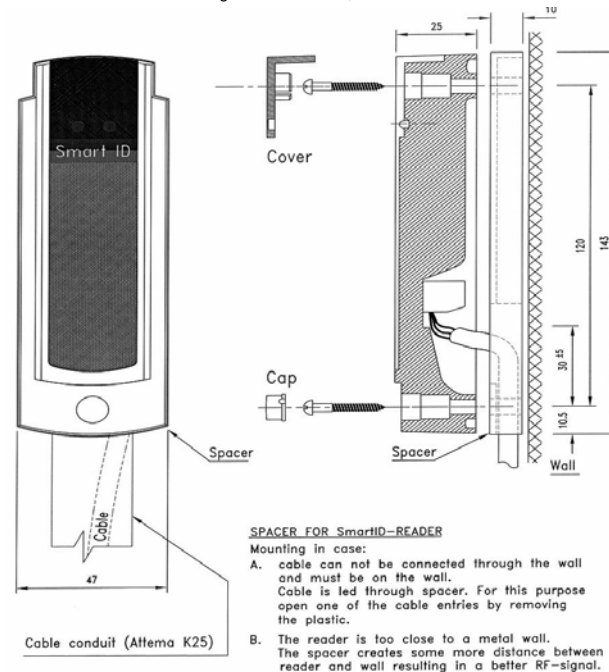


Figure 5 Mounting Plate Spacer

## 2 Overview

The SmartID 13.56MHz and SmartTRANS 13.56MHz + 125KHz slim door mountable design to match any installation environment. The LED's and buzzer allow the SmartID Readers to be mounted in a mullion. The SmartID reader accepts 5 to 24 Volts DC. The reader can accept Wiegand, Clock-and-Data (Magstripe ABA / ISO7811), RS232, RS485 hardware interfaces. The 5 Volt DC capabilities allow the reader to be used in reader systems without rewiring or pulling new cables. The reader offers high reliability, consistent read characteristics and low power consumption. The SmartID reader family includes RS232/RS422/RS485 read-only and read/write operations. Standard capabilities include host system controlled red and green LEDs and a buzzer.

### 2.1 Mullion Mounting

Ideally suited for mullion-mounted door installations or any other installation (e.g. not cover junction box). An optional single-gang electrical box is available.

### 2.2 Indications

When a card is read successfully, the card data is sent to the host system and the buzzer sounds a short 3KHz beep. Both LED's and the buzzer are controlled by the host system.

### 2.3 Connections

The SmartID reader family has a flexible and reliable connection. The cable is protected by a cable conduit with silicone to withstand harsh environmental conditions.

### 2.4 Output Protocols

The SmartID reader family operates with any facility, system or protocol. The data output format, contents and length are determined by the personalization of the card or configuration of the reader.

The readers are intended for connection to an Access Control System. The compatibility to the reader is referenced in the control unit's manual.

### 2.5 Security

The SmartID reader family offers high security challenge response authentication to protect the RFID air interface against various attack schemes such as replay attacks.



### 3 Specifications

PRODUCT	INPUT VOLTAGE	POWER	OPERATING TEMPERATURE	CABLE DISTANCE
SmartID	5-24 VDC	Avg 600 mW Peak 1000 mW	-22° - 140°F (-30° - 60° C)	<b>Wiegand</b> 500 ft - 18 AWG (153 m) 300 ft - 20 AWG (91 m) 200 ft - 22 AWG (61 m) <b>Clock-and-Data</b> 82 ft - 22 AWG (25 m) <b>RS232</b> 50 ft (15.24 m) <b>RS485</b> 4000 ft (1,219.2 m) Recommended cable type: Stranded conductor with overall stranded shield or equivalent.
SmartTRANS HID / AWID Avg 1400 mW				
Peak 2100 mW				

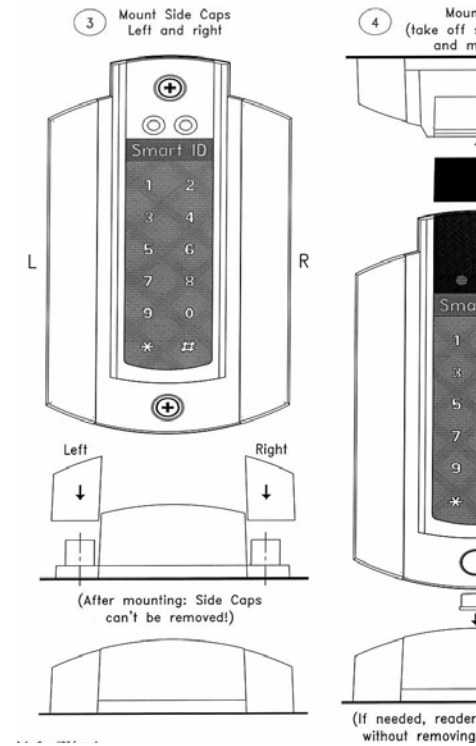


Figure 4 Mounting Plate Step 3 and 4



### 5.4 Switch Box Mounting Plate - Optional

The sizes in the drawing are in millimeters, 1 mm is 0.039 in.

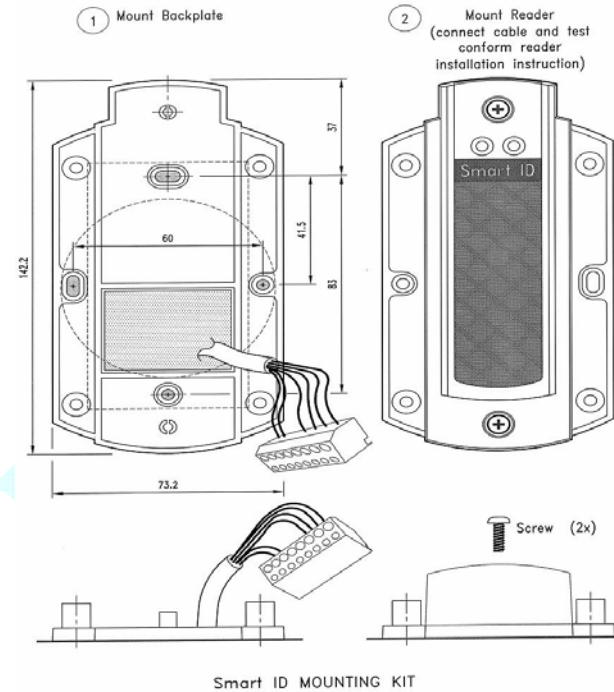


Figure 3 Mounting Plate Step 1 and 2

SmartTRANS Indala Prox		Avg 1300 Peak 1600
---------------------------	--	-----------------------

#### 3.1.1 ISO Card Read Range

- ISO14443 up to 1.6 in (4 cm)
- DESFire up to 1.6 in (4 cm)

#### 3.1.2 Interface

- Inputs EMC Prot. 10K ohm pull-ups
- Outputs EMC Prot. open drain 0.5 A/max

#### 3.1.3 Wiegand Signal Levels

- Voh = Output Voltage idle high
- Vol = Output Voltage active low

DRAFT



### 3.1.4 Reader Output Interface and Pull-up Resistors


The SmartID readers provide true open collector outputs for Wiegand, Clock-and-Data, ABA track 2 emulation, meaning the data output is not voltage driven. External pull-up resistors are required when the controller does not provide internal pull-up resistors. The typical value for the pull-up resistors is 1KOhm. The recommended position to place the pull-up resistors is at the controller side.

The pull-up resistor #1 connects form Data/D1 (reader connector pin 3) to a 5 volt reference.

The pull-up resistor #2 connects form Clock/D0 (reader connector pin 4) to a 5 volt reference.

DRAFT

### 5.3 Tamper Switch - Optional

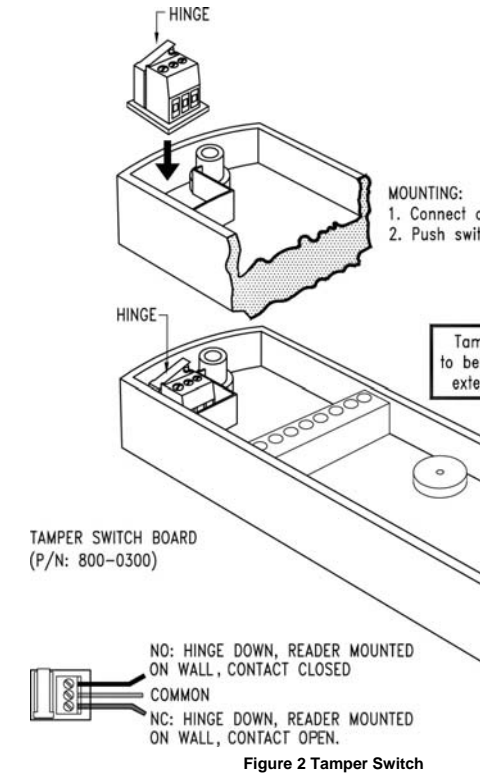





### 5.2 Conductor Connections (All Models)

	Clock-in-Data (ABA)	Wiegand	RS232	RS422	RS485
1	Green LED input	Green LED input	Green LED input**	Green LED input**	Green LED input**
2	Red LED input	Red LED input	Red LED input**	Red LED input**	Red LED input**
3	Data	D1	Do not connect	TXA	TRX
4	Clock	D0	TXD	TXB	TRX
5	Buzzer input	Buzzer input	Do not connect	RXA	Do not Connect
6	Do not Connect	Do not Connect	RXD	RXB	Do not Connect
7	Ground	Ground	Ground	Ground	Ground
8	Power 5 to 24VDC	Power 5 to 24VDC	Power 5 to 24VDC	Power 5 to 24VDC	Power 5 to 24VDC


**CAUTION:** 5 VDC is minimum voltage at reader connector pins.

**Tamper contact (optional):** rating 1A 30 VDC.


\*\* LED input only valid in read-only applications.

## 4 Timing

### Typical timing for Wiegand

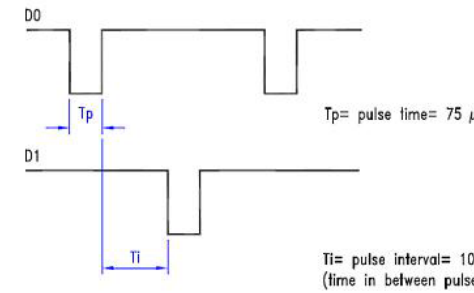

### Typical timing for ABA track 2 emulation

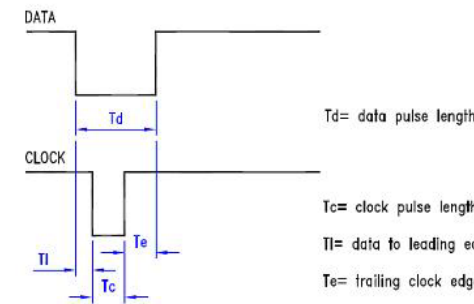



## 5 Installation Instructions

1. Drill two holes for mounting the reader (see Figure 1 Mullion Mounting, page 7). Do not mount readers less than 20 cm (7.87 in) from each other. Make sure that enough room to connect the cable is allowed. Protect the cable against sharp edges and any damage from chaffing.
2. Remove the Terminal Connector 8 pin from the back of the reader. Use a small flat head screwdriver to loosen all terminals. The end of the cable should be prepared by cutting it back to expose the wires and each end should be twisted to eliminate any loose or frayed wires.
3. Connect the wires to the reader inline with the connector assignments. Wire ends outside the shielding and optional permanent LED links should be kept as short as possible. Twist the connector a few times to twine the wire ends avoiding differential mode interference on the data lines.

**Note:** Wires at the connector must be kept as short as possible: long, unshielded connections will reduce the sensitivity of the reader.

4. After wiring the reader and the Host system, the reader is ready to be tested. Apply power and present a card to the reader. The green LED should flash and the buzzer should beep indicating a read. If the Host system is connected to the red and green LED inputs these should follow the functionality of the Host system.
5. Secure the reader using the appropriate screws. Mount the black cover (sticker) and mount the cap over the mounting hole.

### 5.1 Wall Mounting Drawing (All Models)

The drawing dimensions are in millimeters. 1 mm equals 0.039 inch.

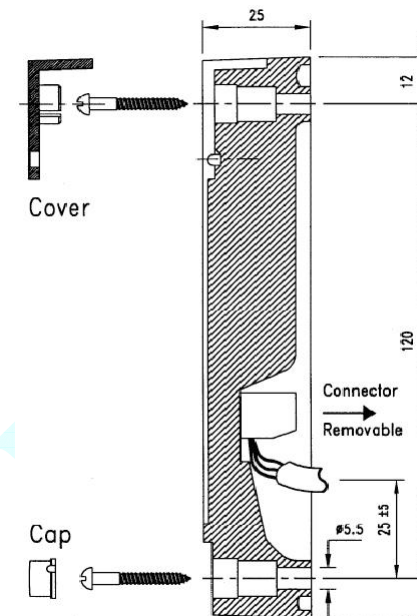


Figure 1 Mullion Mounting