



USER GUIDE

**AX3200
DUAL-BAND GIGABIT
WiFi 6 ROUTER**


Model RT3200

Contents

Product Overview	3
Front.....	3
Back.....	4
Setting Up: Basics	5
Where to find more help	5
How to install your router	5
Advanced Configuration	7
How to open the browser-based utility.....	7
Basic Router Settings.....	8
Language	9
Internet Setup.....	10
Basic Wireless Settings	12
Wireless Security.....	15
Security Option Settings.....	15
WPA2 Personal.....	15
Disabled.....	15
Troubleshooting	16
Your router was not successfully set up.....	16
<i>Your Internet cable is not plugged in</i> message	17
<i>Cannot access your router</i> message.....	18
After setup.....	19
The internet appears to be unavailable	19
Specifications	21
Belkin RT3200	21
Environmental.....	21

Product Overview


Front

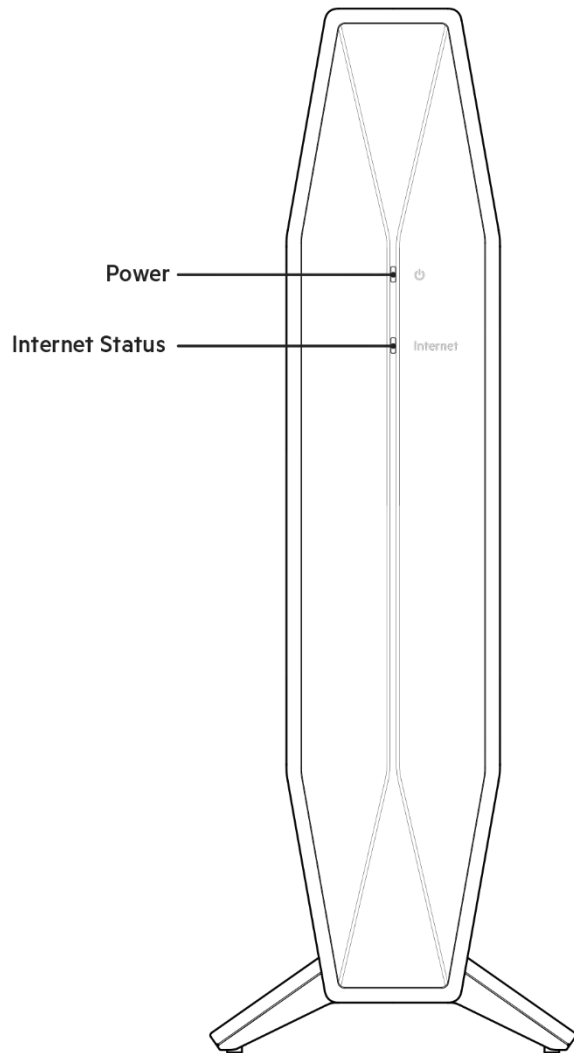

Power light—Blinks white while router is starting up and during WPS pairing. Blinks yellow if WPS pairing fails

Internet status light—Is solid white when connected to the internet and solid yellow when not connected.

Back

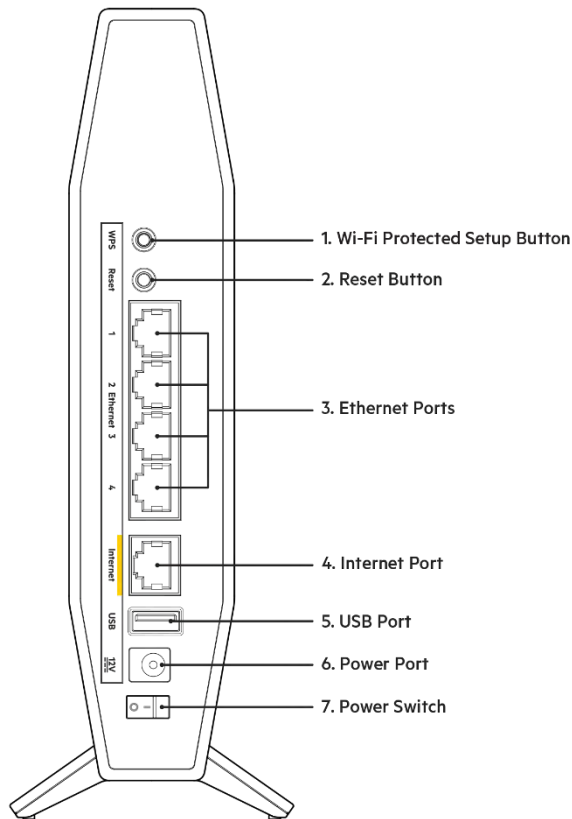

Wi-Fi Protected Setup™ (WPS) button (1)—Press to easily configure wireless security on Wi-Fi Protected Setup-enabled network devices. The light under the button will blink while WPS pairing is active.

Reset button (2)—Press and hold for until the power LED starts flashing to reset the router to factory settings.

Ethernet ports (3)—Connect Ethernet cables (also called network or internet cables) to these Fast Ethernet (10/100/1000) ports and to other wired devices on your network. The lights under the ports will light up only when an Ethernet cable is plugged in and there is data traffic on the cable.

Internet port (4)—Connect an Ethernet cable to this port and to your modem. The light under the port will light up only when an Ethernet cable is plugged in and there is data traffic on the cable.

USB 2.0 port (5)—Connect and share a USB drive on your network.

Power port (6)—Connect the included AC power adapter to this port.

Power switch (7) —Press | (ON) to turn on the router.

Setting Up: Basics

Where to find more help

In addition to this user guide, you can find help at [Belkin.com/support/RT3200](http://www.belkin.com/support/RT3200)(documentation, downloads, FAQs, technical support, live chat, forums)

Note—Licenses and notices for third party software used in this product may be viewed on <http://www.belkin.com/support/license/>. Please contact <http://www.belkin.com/support/gplcodecenter/> for questions or GPL source code requests.

How to install your router


1. If replacing an existing router, disconnect that router first.
2. Plug in the router to a power source. Make sure the power switch is in the | (ON) position.
3. Connect your new router to your modem or modem-router.

A Modem		B Modem-Router
Plug one end of the included ethernet cable into the yellow Internet port on your new router. If you have a modem, plug the other end into the Ethernet (LAN) port on the modem.	OR	Plug one end of the included ethernet cable to the yellow Internet port on your new router. If you have a modem-router, plug the other end into any available port .

4. Connect to the network name shown in the Quick Start Guide that came with your router. (You can change the network name and password later.) Select the option to automatically connect to this network in the future. If you need help connecting to the network refer to your device documentation on the provided CD.

Note—You will not have internet access until router setup is complete.

5. Enter <http://myrouter.local> in a web browser. Follow the on-screen instructions to complete setup. You also can enter 192.168.1.1 in a browser to start setup.

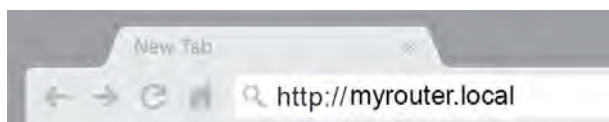

6. Once you are finished with setup, please be sure to register your router so we can keep you informed security updates, product recalls and other things that will improve your experience.

Register your product

Once you register we can share important security updates. Product recalls and other things that will improve your experience. All we need is your email. We will only use your email for limited security and customer support purposes.


Email Address

 Belkin may also email me to keep up to date with special offers and information from linksys. You can unsubscribe at any time by using the link at the end of any email we send.[Read our Privacy Policy here.](#)

Advanced Configuration

How to open the browser-based utility

To access some advanced settings, you need to open the browser-based utility. Make sure you are connected to the router, open a web browser and enter <http://myrouter.local> in a web browser or go to 192.168.1.1.



The router will prompt you for a password.



If you changed the password during setup, enter the new password. Click **LOGIN**. If you didn't change the password, or skipped setup altogether, the default password is "admin".


Basic Router Settings

This screen allows you to change the router's basic configuration.

© 2020 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.

Language


Select your language—To change language, select one from the drop-down menu. The language of the browser-based utility will change within five seconds.

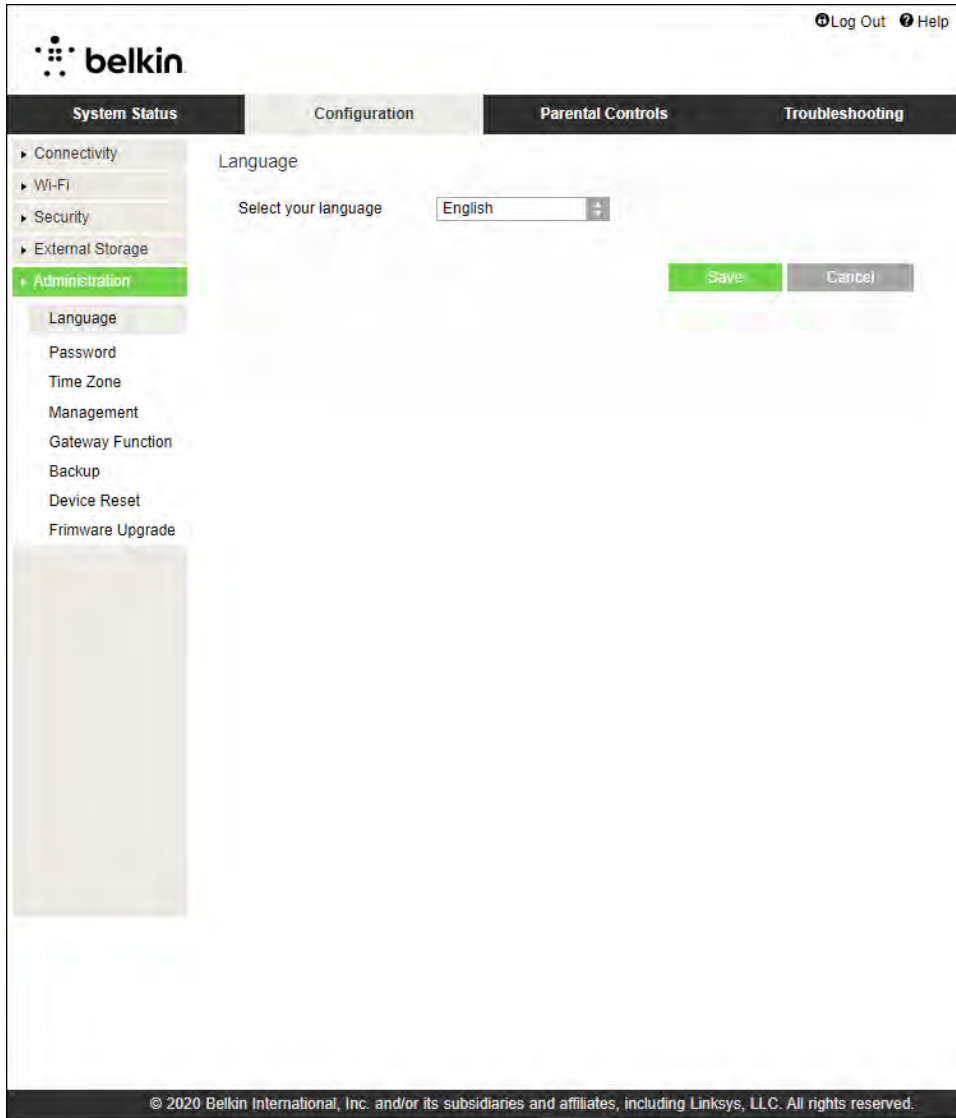

Internet Setup

The Internet Setup section configures the router to your internet connection. This information can be provided by your Internet Service Provider (ISP).

Internet Connection Type—Select the type of internet connection your ISP provides from the drop-down menu.

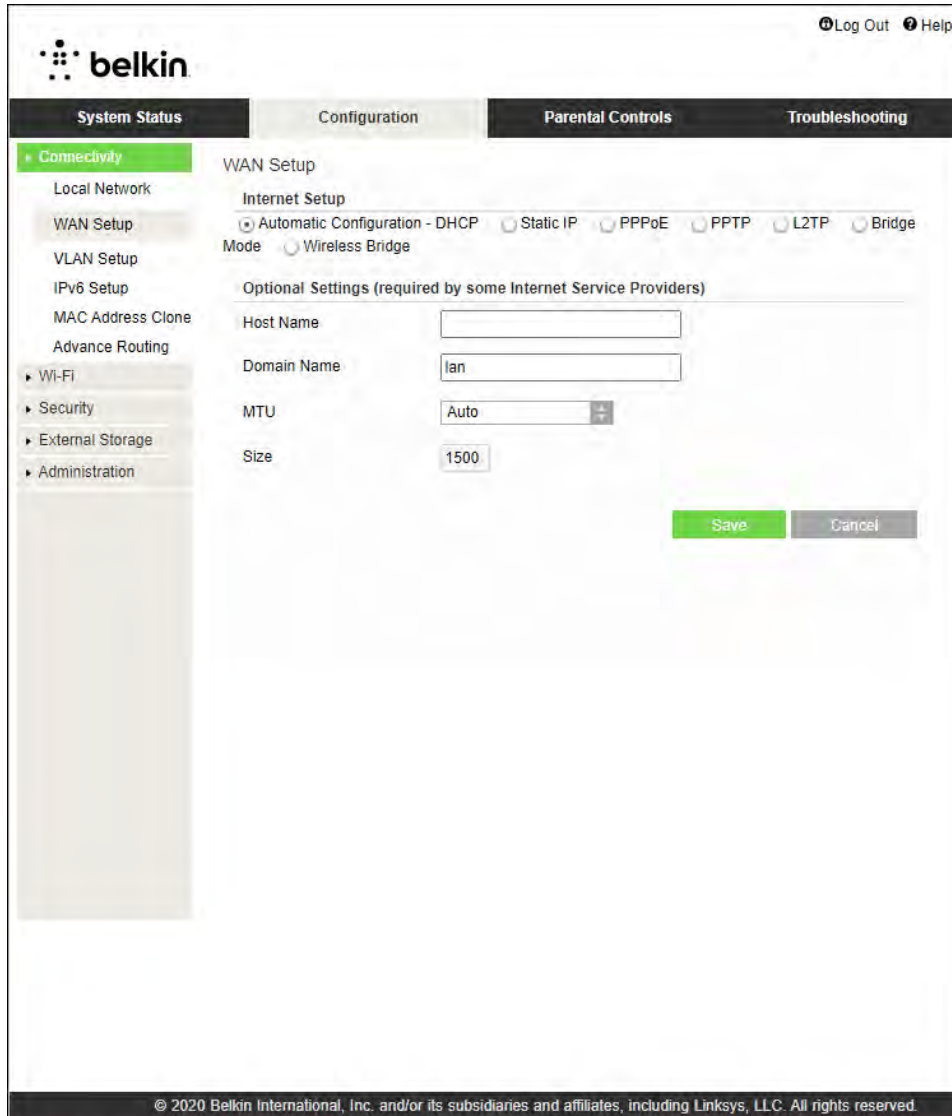


The screenshot shows the Belkin router's web interface. At the top, there is a navigation bar with 'System Status', 'Configuration', 'Parental Controls', and 'Troubleshooting'. The 'Configuration' tab is active. On the left, a sidebar menu lists various settings: Connectivity (selected), Local Network, WAN Setup, VLAN Setup, IPv6 Setup, MAC Address Clone, Advance Routing, Wi-Fi, Security, External Storage, and Administration. The main content area is titled 'WAN Setup' and 'Internet Setup'. It features radio buttons for 'Automatic Configuration - DHCP' (selected), 'Static IP', 'PPPoE', 'PPTP', 'L2TP', and 'Bridge'. Below this is a 'Mode' section with a radio button for 'Wireless Bridge'. An 'Optional Settings (required by some Internet Service Providers)' section contains input fields for 'Host Name', 'Domain Name' (with 'lan' entered), 'MTU' (set to 'Auto'), and 'Size' (set to '1500'). At the bottom right of the form are 'Save' and 'Cancel' buttons. The footer of the page reads: '© 2020 Belkin International, Inc. and/or its subsidiaries and affiliates, including Linksys, LLC. All rights reserved.'

- **Automatic Configuration - DHCP (default)**
Keep the default only if your ISP supports DHCP or if you connect using a dynamic IP address. (This option usually applies to cable connections.)
- **Static IP**
Select if you are required to use a fixed IP address to connect to the internet.

- **PPPoE**
Select if you have a DSL connection and your ISP uses Point-to-Point Protocol over Ethernet (PPPoE).
- **PPTP**
Point-to-Point Tunneling Protocol (PPTP) is a service that generally applies to connections in Europe. If your PPTP connection supports DHCP or a dynamic IP address, select *Obtain an IP Address Automatically*. If you are required to use a fixed IP address to connect to the internet, select *Specify an IP Address* and configure the options that appear.
- **L2TP**
Layer 2 Tunneling Protocol (L2TP) is a service that generally applies to connections in Israel.
Note—*Connect on Demand or Keep Alive are options when choosing PPPoE, PPTP and L2TP. They let you choose whether the router connects to the internet only as needed (useful if your ISP charges for connect time), or if the router should always be connected. Select the appropriate option.*
- **Bridge Mode**
Bridge Mode disables all router capabilities and turns the router into an access point. The router will cease to act as a DHCP server and its built-in firewall as well as the NAT features will no longer be in effect.
- **Wireless Bridge**
A wireless bridge wirelessly connects to your main router and can share the internet connection with devices connected to the bridge's Ethernet ports.

Basic Wireless Settings

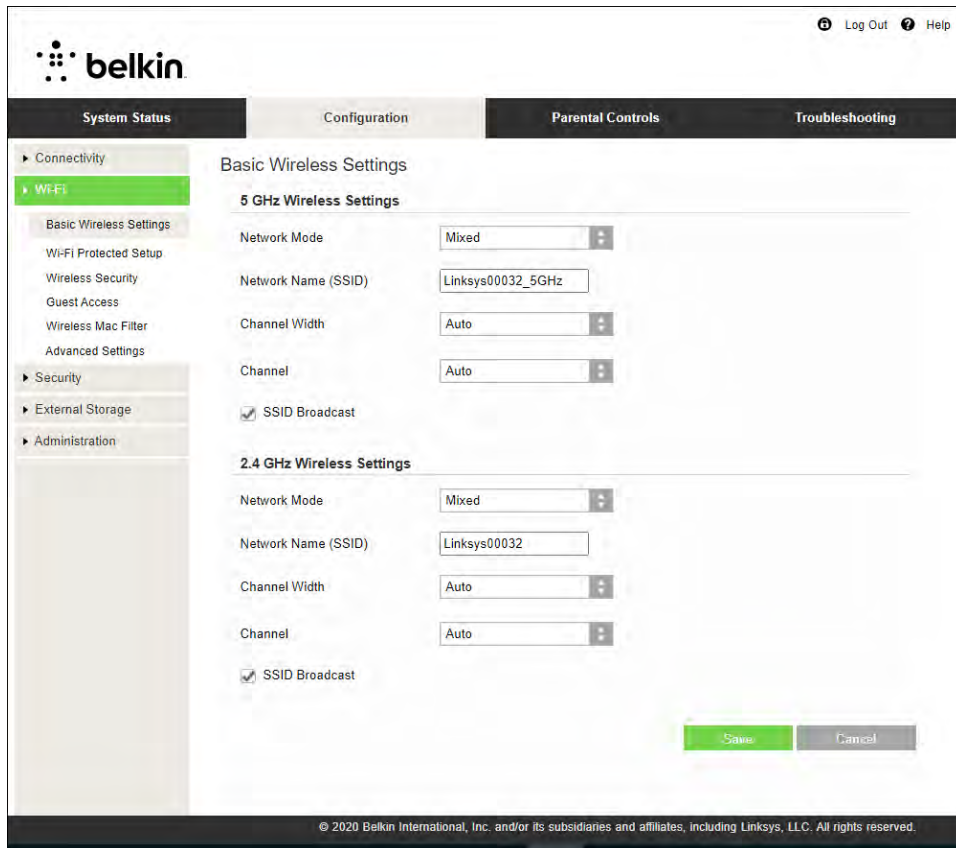

5GHz Network Mode—Select the wireless standards your network will support.

- **Mixed (default)**
Keep the default if you have Wireless-A, Wireless-N, Wireless-AC, or Wireless-AX devices in your network.
- **Wireless-AC Mixed**
Select if you have Wireless-A, Wireless-N, or Wireless-AC devices in your network.
- **Wireless-A Only**
Select if you have only Wireless-A devices.
- **Wireless-N Only**
Select if you have only Wireless-N devices.
- **Disabled**
Select if you have no Wireless-A, Wireless-N, Wireless-AC and Wireless-AX (5 GHz) devices in your network. 5GHz radio will be off after you choose this option.

Note—If you are not sure which mode to select, keep the default, *Mixed*.

2.4GHz Network Mode—Select the wireless standards your network will support.

- **Mixed** (default)
Keep the default if you have Wireless-B, Wireless-G, Wireless-N 2.4GHz devices in your network.
- **Wireless-B/G Only**
Select if you have Wireless-B, Wireless-G devices in your network.
- **Wireless-B Only**
Select if you have only Wireless-B devices.
- **Wireless-G Only**
Select if you have only Wireless-G devices.
- **Wireless-N Only**
Select if you have only Wireless-N 2.4G devices.
- **Disabled**
Select if you have no Wireless-B, Wireless-G, and Wireless-N (2.4 GHz) devices in your network. 2.4GHz radio will be off after you choose this option.

Note—If you are not sure which mode to select, keep the default, Mixed.

Network Name (SSID)

The Service Set Identifier (SSID) is a name used by devices to connect to a wireless network. SSIDs are case-sensitive and must not exceed 32 characters. The default SSIDs for the 2.4 GHz and 5 GHz networks are BelkinXXXXX and BelkinXXXXX_5GHz, respectively. The Xs represent the last five digits of the router's serial number, which can be found on the bottom of the router. If you changed the SSID, both bands have the new SSIDs. You may give them different names through the browser-based utility.

Note—If you restore the router's factory default settings (by pressing the Reset button or using the Configuration > Administration > Device Reset screen), the Network Name will return to its default value. Change the Network Name back to its original name, or you will have to reconnect all devices on your wireless network to the new network name.

Channel Width

Keep the default, Auto (20 MHz or 40 MHz), for best performance in a 2.4 GHz network using Wireless-B, Wireless-G and Wireless-N (2.4 GHz) devices. For a channel width of 20 MHz, select 20 MHz only. For the best performance in a 5 GHz network, keep the default Auto (20, 40 or 80 MHz).

Channel

Select the channel from the drop-down list. Keep the default, Auto, if you are not sure which channel to select.

SSID Broadcast

Keep the default, Enabled, to broadcast the router's SSID. When wireless clients survey the local area for wireless networks to associate with they will detect the SSID broadcast by the router. Attempting to hide your Wi-Fi name does not make your Wi-Fi more secure. Anyone truly interested in accessing your network can find it even if you turn off this feature. If you still do not want to broadcast the router's SSID, select Disabled.

Wireless Security

The router offers the following wireless security options:

WPA2/WPA3 Personal, WPA2 Personal, WPA2 Enterprise, WPA3 Personal, WPA3 Enterprise (WPA stands for Wi-Fi Protected Access.)

WPA3 is the strongest security option.

Security Option Settings

WPA2 Personal

If you select WPA2 Personal, each device in your wireless network MUST use WPA2 Personal and the same passphrase.



If you are not sure whether a device supports WPA2 or WPA3 Personal, select WPA2/WPA3 Mixed Personal option in Security Mode.

Passphrase—Enter a passphrase of 8-63 characters. This is the Wi-Fi password that provides access to the network. It can be the same as entered in setup.

Disabled

If you choose to disable wireless security, you will be informed that wireless security is disabled when you first attempt to access the internet. You will be given the option to enable wireless security, or confirm that you understand the risks but still wish to proceed without wireless security.




Troubleshooting

You can find more help from our award-winning customer support at Belkin.com/support/RT3200.

Your router was not successfully set up

If you could not complete setup in the browser-based interface, you can try the following:

- Press and hold the Reset button on your router with a paperclip or pin until the power light on the front of the router turns off and starts blinking (about 10 seconds). Type 192.168.1.1 in a browser to try setup again.

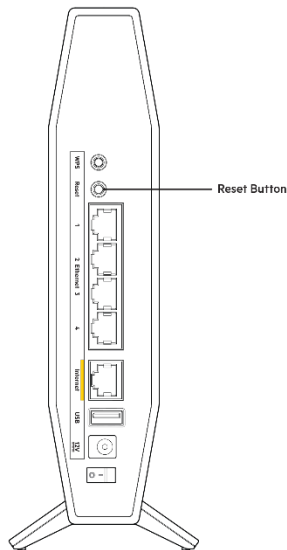


- Temporarily disable your computer's firewall (see the security software's instructions for help). Install the router again.
- If you have another computer, use that computer to install the router.

Your Internet cable is not plugged in message

If you get a “Your Internet cable is not plugged in” message when trying to set up your router:

- Make sure that an ethernet or internet cable (or a cable like the one supplied with your router) is securely connected to the yellow Internet port on the back of the router and to the appropriate port on your modem. This port on the modem is usually labeled Ethernet.

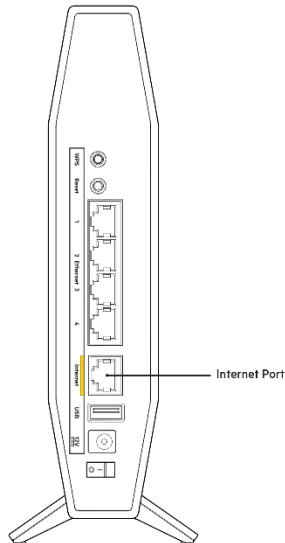

- Make sure that your modem is connected to power and is turned on.

Two diagrams showing the back views of modems. The left diagram is labeled 'Back view of cable modem' and shows a yellow Ethernet port, a Cable port, a Reset button, and a Power button. The right diagram is labeled 'Back view of Modem - Router' and shows an Ethernet port, a Cable port, a Reset button, and a Power button. <p>Back view of cable modem</p> <p>Back view of Modem - Router</p>	A diagram of the back view of a DSL modem. It shows a DSL port, a USB port, a yellow Ethernet port, a Reset button, and a Power button. A cable is plugged into the Ethernet port. <p>Back view of DSL modem</p>
<p>If your internet service is cable, verify that the cable modem's CABLE port is connected to the coaxial cable provided by your ISP.</p>	<p>If your internet service is DSL, make sure that the DSL phone line is connected to the modem's DSL port.</p>

- If your computer was previously connected to your modem with a USB cable, disconnect the USB cable.
- Install the router again.

Cannot access your router message

To access your router, you must be connected to your own network. If you currently have wireless internet access, the problem may be that you have accidentally connected to a different wireless network.

To fix the problem on Windows computers, do the following*:

1. On your Windows desktop, click on the wireless icon in the system tray. A list of available networks will appear.
2. Click your own network name. Click **Connect**. In the example below, the computer was connected to another wireless network named wraith_5GHz. The wireless network name of the Belkin router, Damaged_Beez2.4 in this example, is shown selected.




3. If you are prompted to enter a network security key, type your password (security key) into the network security key field. Click **OK**.
4. Your computer will connect to the network, and you should be able to access the router.

**Depending on your version of Windows, there could be some differences in wording or icons in these steps.*

To fix the problem on Mac computers, do the following:

1. In the menu bar across the top of the screen, click the Wi-Fi icon. A list of wireless networks will appear.
2. In the example below, the computer was connected to another wireless network named wraith_5GHz. The wireless network name of the Belkin router, Damaged_Beez2.4 in this example, is shown selected.

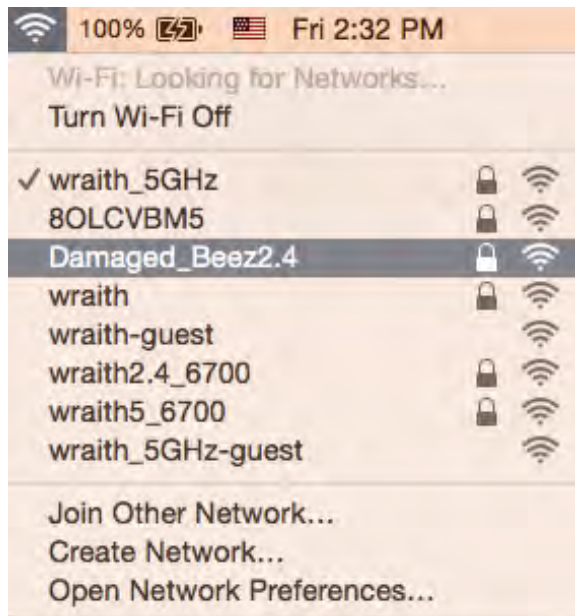

3. Click the wireless network name of your Belkin router (Damaged_Beez2.4 in the example).
4. Type your wireless network password (Security Key) into the *Password* field. Click **OK**.

After setup

The internet appears to be unavailable

If the internet has difficulty communicating with your router, the problem may appear as a “Cannot find [internet address]” message in your web browser. If you know that the internet address is correct, and if you’ve tried several valid internet addresses with the same result, the message could mean that there’s a problem with your ISP or modem communicating with your router.

Try the following:

- Make sure that the network and power cables are securely connected.
- Make sure that the power outlet that your router is connected to has power.
- Reboot your router.
- Contact your ISP and ask about outages in your area.

The most common method of troubleshooting your router is to turn it off, then back on again. Your router can then reload its custom settings, and other devices (such as the modem) will be able to rediscover the router and communicate with it. This process is called rebooting.

To restart your router using the power cord, do the following:

1. Disconnect the power cord from the router and the modem.
2. Wait 10 seconds and reconnect the power cord to the modem. Make sure it has power.
3. Wait until the modem's online indicator has stopped blinking (about two minutes). Reconnect the power cord to the router.
4. Wait until the white Power and Internet lights on the front of the router are solid. This takes about two minutes. Then, connect to the internet from a computer.

Specifications

Belkin RT3200

Model Name	AX3200 Dual-Band Gigabit WiFi 6 Router
Model Number	RT3200
Switch Port Speed	10/100/1000Mbps (Gigabit Ethernet)
Radio Frequency	2.4 GHz and 5 GHz
# of Antennas	4
Ports	Ethernet (1-4), Internet, Power, USB 2.0
Buttons	Wi-Fi Protected Setup, Reset, Power Switch
LEDs	Power, Internet
UPnP	Supported
Security Features	WPA2 Personal, WPA3 Personal, WPA2/WPA3 Mixed Personal, WPA2 Enterprise, and WPA3 Enterprise
Security Key Bits	Up to 192-bit encryption
Storage File System Support	FAT, FAT32, NTFS, HFS+

Environmental

Dimensions	156mm (L) x 77.11mm (W) x 220mm (H)
Unit Weight	638 g
Power	12V, 2A
Certifications	FCC, IC, CE, Wi-Fi (IEEE 802.11 a/b/g/n/ac)
Operating Temperature	32° to 104°F (0° to 40°C)
Storage Temperature	-4° to 140°F (-20° to 60°C)
Operating Humidity	10% to 80% relative humidity, non-condensing
Storage Humidity	5% to 90% non-condensing

Notes:

For regulatory, warranty, and safety information, see the CD that came with your router or go to [Belkin.com/support/RT3200](https://www.belkin.com/support/RT3200).

Specifications are subject to change without notice.

Maximum performance derived from IEEE Standard 802.11 specifications. Actual performance can vary, including lower wireless network capacity, data throughput rate, range and coverage.

Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, building materials and construction, operating system used, mix of wireless products used, interference and other adverse conditions.

BELKIN, LINKSYS and many product names and logos are trademarks of the Belkin group of companies. Third-party trademarks mentioned are the property of their respective owners. Licenses and notices for third party software used in this product may be viewed here:

<http://www.belkin.com/support/license>. Please contact

<http://www.belkin.com/support/gplcodecenter> for questions or GPL source code requests.

© 2020 Belkin International, Inc. and/or its affiliates. All rights reserved.

LNKPG-00736 RevA00



Die Line File: FDL_MSKU_5 X 5_8 PAGE_AF_LGL

REV 0 00

Artwork File: INS_RT3200_8850-01250_RevA00_AX3200_DUAL-BAND_WiFi6_ROUTER_Regulatory_Warranty_Info

DIE LAYOUT

LEGAL - 80 GSM WOOD FREE

FRONT

Page 6 (Back) Page 7 Page 8 Page 1 (Cover)

NON-INFRINGEMENT, TITLE, FITNESS FOR A PARTICULAR PURPOSE, LOSS OF OR DAMAGE TO DATA, LACK OF VIRUSES OR FREE FROM VIRUSES OR MALWARE, ATTACK SECURITY, PERFORMANCE, LACK OF SECURITY, WORKABLE ERROR, OVERT ENVIRONMENT THAT THE FUNCTIONS CONTAINED IN THE PRODUCT WILL MEET YOUR REQUIREMENTS OR THAT DEFECTS IN THE PRODUCT WILL BE CORRECTED OR THAT YOUR USE OF THE PRODUCT WILL GENERATE ACCIDENTS, RELIABLE, THESE RESULTS, INFORMATION, INTERNAL OR EXTERNAL, NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY BELKIN, A DEALER, AGENT OR AFFILIATE SHALL CREATE A WARRANTY. TO THE EXTENT WARRANTIES CANNOT BE OBTAINED OR EXCLUDED, THEY ARE LIMITED TO THE QUANTIFICATION OF THE RELEVANT EXPRESS WARRANTY PERIOD.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL BELKIN, ITS AFFILIATES, ASSOCIATES, DEALERS, AGENTS OR SUPPLIERS OR THEIR RESPECTIVE OFFICERS, DIRECTORS, EMPLOYEES, AGENTS AND AGENTS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, CONSEQUENTIAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO DAMAGES FOR LOSS OF PROFITS OR REVENUE, FOR BUSINESS INTERRUPTION, FOR PERSONAL INJURY, FOR LOSS OF DATA, OR FOR ANY LOSS OF ABILITY TO USE ANY THIRD PARTY PRODUCTS OR SERVICES, FOR FAILURE TO MEET ANY DUTY, INCLUDING OF GOOD FAITH OR REASONABLE CARE, FOR NEGLIGENCE, AND FOR ANY OTHER REASON OR OTHER LOSS WHATSOEVER, REGARDLESS OF THE THEORY OF LIABILITY CONTRACT, TORT OR OTHERWISE ARISING OUT OF OR IN ANY WAY RELATED TO THE USE OF OR INABILITY TO USE THE PRODUCT, EVEN IF BELKIN OR SUCH OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL THE TOTAL AGGREGATE LIABILITY OF BELKIN, ITS AFFILIATES, ASSOCIATES, DEALERS, AGENTS OR SUPPLIERS TO YOU FOR ALL DAMAGES EXCEED THE PRICE YOU PAID FOR THE PRODUCT. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE ACCIDENT OR CLAIM. THE FOREGOING LIMITATIONS WILL APPLY EVEN IF ANY WARRANTY OR REMEDY PROVIDED FAILS OF ITS ESSENTIAL PURPOSE. NOTHING IN THIS SECTION SHALL LIMIT THE LIABILITY OF BELKIN IN RELATION TO DEATH OR BODILY INJURY.

THE WARRANTIES AND REMEDIES SET OUT IN THIS AGREEMENT ARE EXCLUSIVE AND, TO THE EXTENT PERMITTED BY LAW, IN LIEU OF ALL OTHER ORAL OR WRITTEN EXPRESS OR IMPLIED, SOME JURISDICTIONS DO NOT ALLOW, THE EXCLUSION OR LIMITATION OF IMPLIED WARRANTIES OR OF LIABILITY FOR INCIDENTAL, OR CONSEQUENTIAL DAMAGES, SO THE FOREGOING LIMITATIONS MAY NOT APPLY TO YOU. IF ANY REMEDY IS NOT AVAILABLE OR UNOBTAINABLE, THE APPLICABLE REMEDY OR REMEDIES WILL BE APPLIED AS REQUIRED.

BELKIN TECHNICAL AND WARRANTY SUPPORT INFORMATION

HOW DO I GET HELP?

If you have a question about your product or experience a problem with it, please go to <http://www.belkin.com/support> or help@belkin.com for help. You may find links to our support tools and information to help you with your product.

What should I do if my product is defective?

You always have the option to return your product to the original seller if you have a problem. You can make a claim based on this warranty or any consumer laws that apply to you.

You also make a claim under this warranty or local consumer laws by contacting Linksys or Belkin Technical Support. To find out how to contact us, see the "Contact Us" link on the home page of <http://belkin.com> or <http://www.belkin.com>.

If Belkin or my product is defective and covered by this warranty, what do I need to do?

You will need to contact Technical Support for your region at the links above. So that we can help you, you will need to give us some information when you contact us:

- your product model, hardware revision and serial number;
- the name of your Internet Service Provider (ISP); and
- proof that you purchased the product, with the date of the purchase shown and place where it was purchased.

WE WILL ALWAYS NEED A DATED PROOF OF ORIGINAL PURCHASE TO PROCESS WARRANTY CLAIMS.

8850-01250 Rev. A00

belkin INNOVATION CREATIVE GROUP		218848	
FILE NAME	INS_RT3200_8850-01250_RevA00_AX3200_DUAL-BAND_WiFi6_ROUTER_Regulatory_Warranty_Info		
SKUP	RT3200	PP	8850-01250 REV A00
DESIGNER	Shiho	DATE	06/25/20 4:20 PM
VERSION	02		

Page 2 Page 3 Page 4 Page 5

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This product has been tested and complies with the specifications for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to residential operations. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which is found by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and devices.
- Connect the equipment to an outlet other than the receiver's.
- Consult a dealer or an experienced radio/television technician for assistance.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

2.4GHz operation of this product in the USA is firmware limited to channels 1 through 11.

The device for the band 502-502 MHz is only for indoor usage.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 33 cm between the radiator and your body.

This device and its accessories must not be located or operated in conjunction with any other antenna or transmitter except in accordance with FCC multi-transmitter product procedures.

Additional requirements for the band 502-502 MHz:

Limit further radio device subject to this Section shall not be capable of transmitting in the band 502-502 MHz, in that Environment Class is neither operating in this band nor protected.

Warning/Disclaimer

The maximum performance for wireless is derived from IEEE Standard 802.11 specifications. Actual performance can vary, including lower wireless network capacity, data throughput rates, range and coverage. Performance depends on many factors, conditions and variables, including distance from the access point, volume of network traffic, existing network and computer operating systems used, type of wireless product used, interference and other adverse conditions.

Safety Notices

English

WARNING: Do not use this product near water, for example, in a wet basement or near a swimming pool.

WARNING: Avoid using this product during electrical storms. There may be a remote risk of electric shock from lightning.

WARNING: The power adapter on the equipment's disconnection device. The power adapter must be located nearby the equipment and its cord must be easy. This product is provided for repair use only.

Español

ADVERTENCIA: No use este producto cerca del agua, por ejemplo en un sótano húmedo o cerca de una piscina.

ADVERTENCIA: Evite usar este producto durante tormentas eléctricas. Puede existir un riesgo remoto de que se produzca una descarga eléctrica proveniente de un rayo.

ADVERTENCIA: El adaptador de alimentación es dispositivo de desconexión del equipo. La base de datos de corriente debe estar conectada al equipo y los cables accesibles. Este producto está diseñado solo para uso de reparación.

Third-Party Software or Firmware

The use of software or firmware not supported (provided by Linksys products may result that the equipment is no longer compliant with the regulatory requirements.

WARRANTY AND SUPPORT INFORMATION

IMPORTANT:

PLEASE RETAIN PROOF OF PURCHASE AND PRODUCT WARRANTY INFORMATION

LIMITED WARRANTY

UNITED STATES AND CANADA

This warranty is provided to you by Belkin International, Inc. or its subsidiaries or affiliates ("Belkin").

IMPORTANT NOTICE REGARDING YOUR CONSUMER RIGHTS

The benefits we give in this manufacturer's warranty are **ADDITIONAL** to any rights and remedies that you may have under local consumer protection laws. Nothing in this warranty limits or affects your legal rights.

This manufacturer's warranty is governed by the laws of the country in which you purchased your Belkin, Linksys or Wemo product. In many countries, consumers have rights under local consumer laws. These consumer rights may differ between countries, states and provinces, and they cannot be excluded. You may have local consumer rights organization can advise you on your legal rights.

This manufacturer's warranty is not intended to:

- change or exclude any rights under consumer law that cannot be lawfully changed or excluded; or
- limit or exclude any rights you have against the person who sold the Belkin, Linksys or Wemo product to you if that person has breached their local consumer rights.

WHAT DOES THIS WARRANTY COVER?

Belkin warrants that the product hardware and any software media (i.e., media on which the product software is provided) will be free from defects in material and workmanship under normal use during the Warranty Period. The Warranty Period begins on the date the product was purchased by the original end user purchaser and lasts for the period set out in the table below.

This warranty does not apply to products purchased from a source other than Belkin or a Belkin Authorized Reseller.

How long is the product warranty?

Belkin warrants that the hardware in this Belkin, Linksys or Wemo product, and any associated software media, will be free from defects in material and workmanship under normal use during the Warranty Period. The Warranty Period begins on the date the product was purchased by the original end user purchaser and lasts for the period set out in the table below.

Product Type	Warranty Period
New products	12 months
Refurbished products	90 days
Repaired or replacement products	The longer of the original Warranty Period or 30 days
Software media (provided with the product)	90 days

A claim under this warranty is only eligible if it is made within the Warranty Period.

What isn't covered?

Belkin does not give any warranty:

- in relation to software or services, provided by Belkin or any third party, included in or with the product;
- that the product, software or services will always operate uninterrupted or error free;
- that the product, software or services, or any equipment, system or network on which the product, software or services are used are 100% secure and cannot be hacked or;
- that a third party service the product needs will always be available.

Note: Although Belkin does not make these promises in this warranty, you may have additional rights under consumer laws.

Who this warranty always apply?

This warranty does not apply if:

- the warranty claim was made fraudulently or in violation of consumer laws;
- the product was not installed, operated, repaired, or maintained in accordance with Belkin's instructions;
- the product has been subjected to abnormal physical or electrical stress, misuse, negligence, or accident;
- damage to the product is caused, including scratches and dents, or defects caused by normal wear and tear or normal aging of the product;
- the serial number on the product has been altered, replaced, or removed; or
- the product was supplied or licensed for beta evaluation, testing or demonstration purposes, and you didn't buy or license the product.

This warranty is only valid and enforceable in the country of purchase.

Note: Although this warranty doesn't apply in these situations, you may have additional rights under consumer laws.

How will Belkin make things right?

If you make an eligible claim under this warranty, Belkin will, at its election:

- repair the product with new or refurbished parts, or pay the reasonable costs of repairing the product;
- replace the product with a reasonably available equivalent new or refurbished Belkin, Linksys or Wemo product; or
- refund you the purchase price of the product, minus any rebates and discounts.

Any repaired or replacement products are warranted for the remainder of the original Warranty Period or 30 days, whichever is longer. All products and parts that are replaced become the property of Belkin.

Note: The rights and remedies outlined above are the only rights and remedies available under this warranty. However, you may have additional rights under consumer laws.

GENERAL EXCLUSIONS AND LIMITATIONS OF LIABILITY

IN THOSE JURISDICTIONS WHERE IT IS APPLICABLE, BELKIN, LINKSYS OR WEMO SHALL NOT BE LIABLE FOR ANY INCIDENTAL, SPECIAL, CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, ACCEPTABILITY, SATISFACTORY QUALITY.

BACK

PRINT SPECS:

Color Plates:




Finish:

508 [20]

Notes:

ACCORDION FOLD, PRINT BOTH SIDES
ALL TEXT AND GRAPHIC ELEMENTS COLOR: BLACK

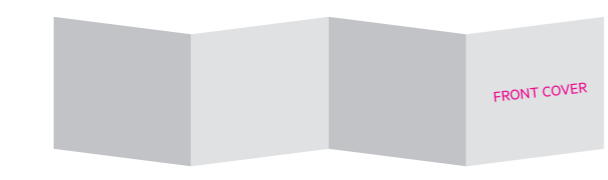

Business Unit: NET-Networking
Program Manager:
Packaging Engineer: Brian Byrd
Retail Outside Dimension (Including Hang Tab)
L x W x D (in): 5 x 5 x 5
L x W x D (mm): 127.00 x 127.00 x 127.00

DIE/MATERIAL SPECS:
Material: Please refer to drawing
Blank Size (in): 20 x 5
Blank Size (mm): 508 x 127

This dieline works for following skus (if any):

Unit: IN/MM
Side Shown: PRINT SIDE
Flute/Grain: horizontal
Tolerance: +/- 1/32" - 0.8mm
Drawing Scale 1:1

RELEASE DATE: 09/27/2018

DIELINE: **FINAL**

LEGEND:

Nitto Tape

Screen Glue

THIS DOCUMENT & THE INFORMATION IN IT ARE THE CONFIDENTIAL PROPERTY OF BELKIN INTERNATIONAL AND MUST NOT BE COPIED, REPRODUCED OR USED IN ANY MANNER WITHOUT THE WRITTEN CONSENT OF BELKIN CORPORATION. IT MUST BE RETURNED UPON REQUEST

DO NOT PRINT DIE LINES, PRINTERS NOTES