

Wireless Glass Break Detector WGB
345 FREQUENCY
WORKS WITH
Honeywell[®] 2GIG[®]
35 FOOT RANGE
3 YEAR WARRANTY


"I have been making glass breaks for 40 years at BGE, IntelliSense and the Big Red H. I really like this one, you will too"


-Ben Cornett

Part Location	Function
SW1	Adjusting detector's sensitivity. High Sensitivity (default): all OFF Low Sensitivity: 1 or 2 ON
SW3	To enter test mode. The green and red LED will light one (1) second while the button is pressed. (The detector automatically exits test mode 10 minutes after the last event is detected or powered on again.)
SW4	Tamper Switch
LED 1: (GREEN) LED 2: (RED)	The glass break detector should first acknowledge the detection of a thud sound by illuminating the green LED and then illuminate the red LED when the unit detects the crash portion of the glass breaking sound (Please note that the LEDs are only enabled during test mode, and are inactive during normal operation.)
M1	Glass break sound detection.

HOW TO JOIN THE HOST


STEP 1

Press 2GIG/Honeywell icon.

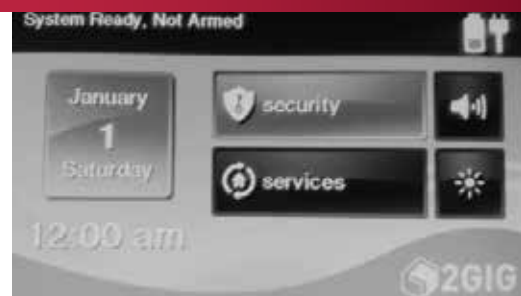


STEP 2

Enter Your Code.

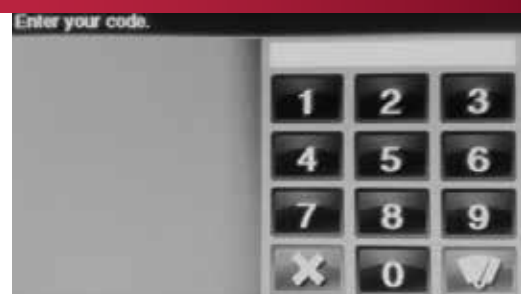

STEP 3

Press system configuration icon.

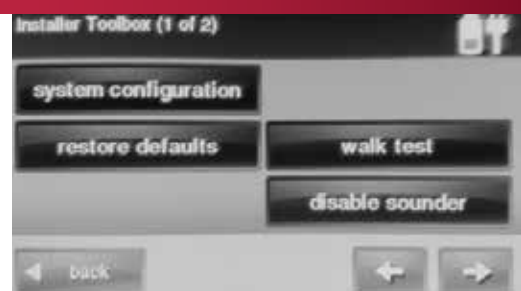

STEP 4

Press " ↓ " until (00) unused is displayed.



STEP 5

1. Press " → " until (01) exit/entry 1 is displayed.
2. Press " ↓ " until (0000) other displayed.



STEP 6

1. Press " → " until (0864) 2GIG/
Honeywell Glass Break is
displayed.
2. Press " ↓ " icon.



STEP 7

1. Make sure glass break detector
top cover is closed.
2. Press shift icon.
3. Press learn icon.



STEP 8

1. Waiting for RF sensor #
transmission...
2. Using glass-break simulator to
trigger glass break detector.




STEP 9

1. After successful inclusion, the
display will show Type and ID#.
2. Press OK icon.



STEP 10

1. Press next icon.
2. Press skip icon.

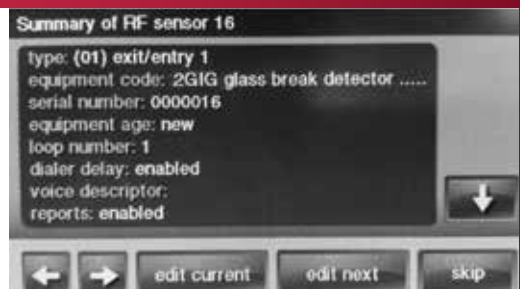


STEP 11

- Press end icon.



STEP 12

Press exit icon.

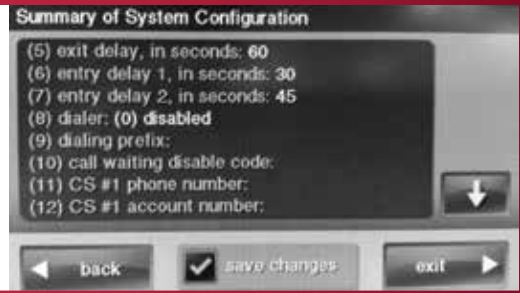

HOW TO REVIEW LOW BATTERY ALARM

STEP 1

Press the  icon.



STEP 2

1. While low battery (<2.5v) trigger device or waiting supervisory report (supervisory interval: 70 minutes).
2. Low battery alerts displayed.



FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Caution

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate his equipment. (Example – use only shielded interface cables when connecting to computer or peripheral devices)

NOTE:

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.