

# Technical Information

## FieldPort SWA50

Intelligent Bluetooth® and/or WirelessHART adapter for all HART field devices



### Application

The FieldPort SWA50 converts the HART signal of the connected HART field device to a reliable and encrypted Bluetooth® or WirelessHART signal. The FieldPort SWA50 can be retrofitted to all 2-wire and 4-wire HART field devices in both hazardous and non-hazardous areas. The robust stainless steel housing allows the FieldPort SWA50 to be installed even in harsh industrial environments.

The combination of the Bluetooth® version of the SWA50 with a FieldEdge SGC200 delivers fast and easy connection to the Netilion Cloud.

The WirelessHART version of the SWA50 can be easily integrated into any WirelessHART network.

### Your benefits

- Reliable transmission of the measured process values through the connected FieldPort SWA50 via encrypted Bluetooth® or WirelessHART communication
- Easy to retrofit all 2-wire or 4-wire HART field devices
- Easy connection of all HART field devices to the Netilion Cloud
- Loop-powered adapter, without affecting the process signal
- Easily accessible, wireless, onsite diagnostic information of connected HART field device

## Table of contents

<b>About this document</b> . . . . .	<b>3</b>	Radio approvals . . . . .	14
Symbols . . . . .	3	<b>Ordering information</b> . . . . .	<b>15</b>
<b>Function and system design</b> . . . . .	<b>3</b>	Scope of delivery . . . . .	15
Function . . . . .	3	<b>Accessories</b> . . . . .	<b>15</b>
System architecture of SWA50 Bluetooth version . . . . .	4	Device-specific accessories . . . . .	15
System architecture of SWA50 WirelessHART version . . . . .	5	<b>Supplementary documentation</b> . . . . .	<b>17</b>
<b>Input (wired interface)</b> . . . . .	<b>5</b>	Standard documentation SWA50 . . . . .	17
Inputs . . . . .	5	Supplementary device-dependent documentation for	
Communication interface and protocol version . . . . .	5	SWA50 . . . . .	17
<b>Output (wireless interface)</b> . . . . .	<b>5</b>	Standard documentation for SGC200 . . . . .	17
Communication interface . . . . .	5	Standard documentation for SGC500 . . . . .	17
Transmission frequency band . . . . .	6	Standard documentation for SMT70 . . . . .	17
Range . . . . .	6	Standard documentation for SMT77 . . . . .	17
Transmission power . . . . .	6	Standard documentation for SWA70 . . . . .	17
Device variables . . . . .	6	Standard documentation for SWG70 . . . . .	18
Diagnostics . . . . .	6	<b>Registered trademarks</b> . . . . .	<b>18</b>
<b>Power supply</b> . . . . .	<b>7</b>	<b>Radio approvals</b> . . . . .	<b>18</b>
Electrical connection . . . . .	7	Europe . . . . .	18
Terminal assignment . . . . .	8	Canada and United States . . . . .	18
FieldPort SWA50 grounding . . . . .	9	Japan . . . . .	19
Supply voltage . . . . .	9		
Power consumption . . . . .	10		
Terminals . . . . .	10		
Cable entry . . . . .	10		
Cable specification . . . . .	10		
<b>Installation</b> . . . . .	<b>10</b>		
Mounting methods . . . . .	10		
Mounting instructions . . . . .	11		
Lightning protection . . . . .	11		
<b>Environment</b> . . . . .	<b>12</b>		
Ambient temperature range . . . . .	12		
Storage temperature range . . . . .	12		
Climate class . . . . .	12		
Degree of protection . . . . .	12		
Vibration resistance . . . . .	12		
Shock resistance . . . . .	12		
Electromagnetic compatibility (EMC) . . . . .	12		
<b>Mechanical construction</b> . . . . .	<b>12</b>		
Design, dimensions . . . . .	12		
Weight . . . . .	13		
Materials . . . . .	13		
<b>Human interface</b> . . . . .	<b>14</b>		
Operating concept . . . . .	14		
Local operation . . . . .	14		
<b>Certificates and approvals</b> . . . . .	<b>14</b>		
CE mark . . . . .	14		
Ex approval . . . . .	14		

## About this document

### Symbols

#### Safety symbols

##### **DANGER**

This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.

##### **WARNING**

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.









##### **CAUTION**

This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.

##### **NOTICE**

This symbol contains information on procedures and other facts which do not result in personal injury.

#### Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Preferred</b> Procedures, processes or actions that are preferred.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
	<b>Tip</b> Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
	Visual inspection.

## Function and system design

### Function

The FieldPort SWA50 converts the HART signal of the connected HART field device to a reliable and encrypted Bluetooth® or WirelessHART signal. The FieldPort SWA50 can be retrofitted to all 2-wire or 4-wire HART field devices.

The Endress+Hauser SmartBlue app or the Endress+Hauser Field Xpert is used to configure the FieldPort SWA50 and to visualize the measured values and status of the connected HART field device.

HART field devices can be connected to the Netilion Cloud via the FieldPort SWA50 and a FieldEdge device.



For detailed information on the Netilion Cloud, see <https://netilion.endress.com>

The WirelessHART version of the SWA50 can be integrated into any WirelessHART network via a WirelessHART-Fieldgate, such as SWG70.


In addition, the WirelessHART version can be operated as follows:

- Local configuration with FieldCare SFE500 or DeviceCare via DTM for SWA50
- Remote configuration with FieldCare SFE500 via WirelessHART Fieldgate SWG70 and DTM for SWA50 and SWG70

**NOTICE****Safety applications with control functions via Bluetooth signal or WirelessHART signal**

Undesirable behavior of safety application


- ▶ Do not use a wireless signal such as Bluetooth or WirelessHART in a safety application with a control function.

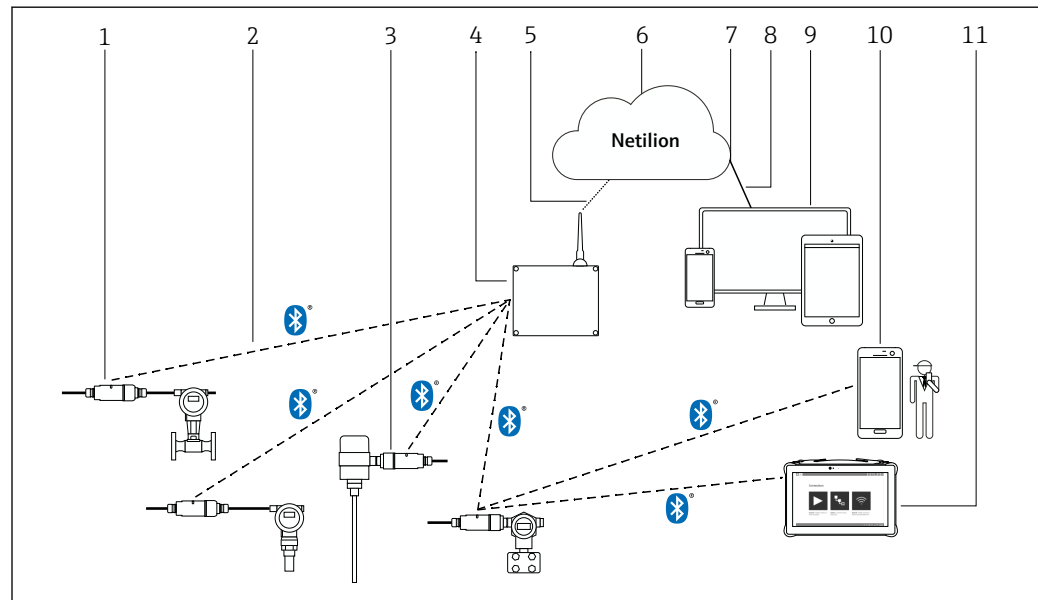**System architecture of SWA50 Bluetooth version**

1 System architecture of SWA50 Bluetooth version

- 1 HART field device with FieldPort SWA50, remote mounting
- 2 Encrypted wireless connection via Bluetooth®
- 3 HART field device with FieldPort SWA50, direct mounting
- 4 FieldEdge SGC200 (not included in scope of delivery)
- 5 LTE connection
- 6 Netilion Cloud
- 7 Application Programming Interface (API)
- 8 https Internet connection
- 9 Internet browser-based Netilion Service app or user application
- 10 Endress+Hauser SmartBlue app
- 11 Endress+Hauser Field Xpert, e.g. SMT7x

**System architecture of SWA50 WirelessHART version**

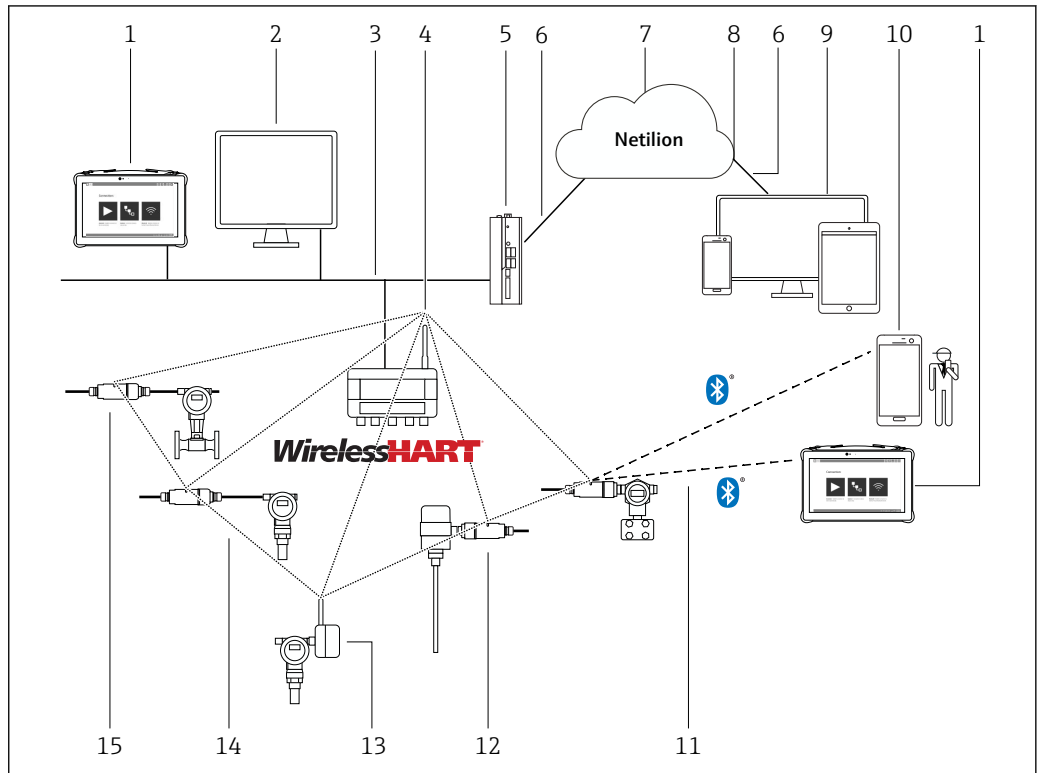

2 System architecture of SWA50 WirelessHART version

- 1 Endress+Hauser Field Xpert, e.g. SMT7x
- 2 Host application / FieldCare SFE500
- 3 Ethernet communication
- 4 WirelessHART-Fieldgate, e.g. SWG70
- 5 FieldEdge SGC500 (not included in scope of delivery)
- 6 https Internet connection
- 7 Netilion Cloud
- 8 Application Programming Interface (API)
- 9 Internet browser-based Netilion Service app or user application
- 10 Endress+Hauser SmartBlue app
- 11 Encrypted wireless connection via Bluetooth®
- 12 HART field device with FieldPort SWA50, direct mounting
- 13 HART field device with WirelessHART adapter, e.g. SWA70
- 14 Encrypted wireless connection via WirelessHART
- 15 HART field device with FieldPort SWA50, remote mounting

## Input (wired interface)

**Inputs**

A point-to-point connection to a 2-wire or 4-wire HART field device

**Communication interface and protocol version**

Field devices with HART 5, HART 6 or HART 7

## Output (wireless interface)

**Communication interface**

**Bluetooth**  
Bluetooth IEEE 802.15.1




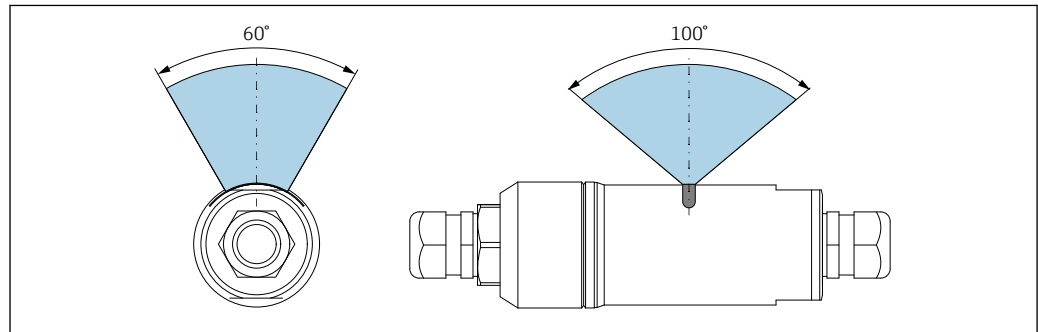
In addition to the FieldPort SWA50, there can be only one other HART master in the HART loop of the SWA50.

**WirelessHART**


- WirelessHART communication interface (IEC 62591)
- HART version 7.5, backward-compatible with previous HART versions

**Transmission frequency band** 2.4 GHz (ISM band)

**Range**  The range depends on the alignment of the FieldPort SWA50, the mounting location and the environmental conditions.



A0043409

 3 Range of opening angle

**Bluetooth**

Up to 40 m without obstacles when FieldPort SWA50 is optimally aligned

**WirelessHART**

Up to 200 m without obstacles when FieldPort SWA50 is optimally aligned

**Transmission power** 0 dBm or 10 dBm, configurable for adaptation to national regulations

**Device variables** **You can read out the following data via Bluetooth® using the Endress+Hauser SmartBlue app or the Field Xpert:**

For all HART field devices:

- Measured value output current of HART field device
- Device information, configuration data and HART information of FieldPort SWA50

Also for Endress+Hauser HART field devices:

- Measured values PV, SV, TV and QV of HART field device
- Additional device information of HART-7- or HART-6 field device
- HART information of HART field device
- Status as per NAMUR NE 107 of HART field device if available


The HART field device must be connected.

**The following data can be read out via the Bluetooth version of the FieldPort SWA50 and the Endress+Hauser FieldEdge SGC200(Netilion Cloud):**

- Process variables PV and SV of HART field device if available
- Status as per NAMUR NE 107 of HART field device if available

The HART field device must be connected.

**For the WirelssHART version of the FieldPort SWA50 and the Endress+Hauser FieldEdge SGC500(Netilion Cloud)**

 For detailed information, see the Operating Instructions for the FieldPort SWA50 WirelessHART →  17


**Diagnostics** 1 LED  
Green: Flashes twice at start-up to indicate that the device is operational  
The LED is located on the electronic insert and is not visible from the outside.

## Power supply

### Electrical connection

#### 2-wire HART field device with passive current output

**i** Some grounding concepts require a shielded cable. If connecting the cable shield to the FieldPort SWA50, you must use an EMC cable gland. See ordering information, feature 060, option B.

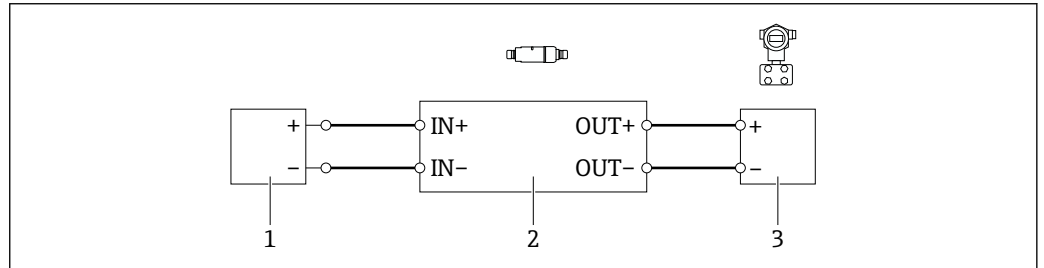


A0040494

**4** Electrical connection for 2-wire HART field devices with passive current output (optional grounding not shown)

- 1 Supply voltage or PLC with active current input or transmitter with active current input
- 2 Electronic insert SWA50
- 3 2-wire field device 4 to 20 mA-HART

#### 4-wire HART field device with passive current output

**i** Some grounding concepts require shielded cables. If connecting the cable shield to the FieldPort SWA50, you must use an EMC cable gland. See ordering information, feature 060, option B.

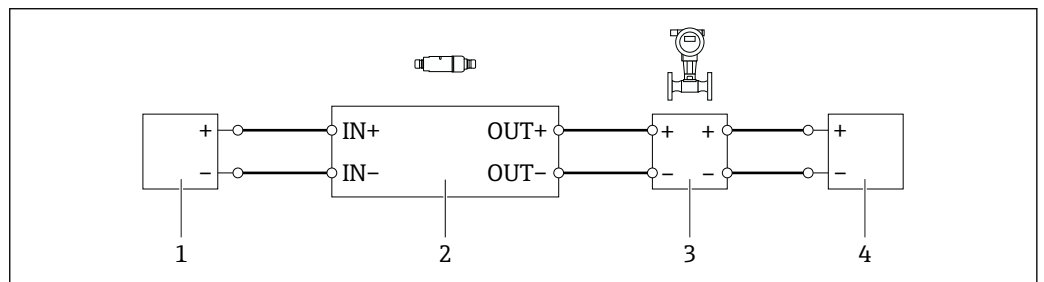


A0040491

**5** Electrical connection for 4-wire HART field devices with passive current output (optional grounding not shown)

- 1 Supply voltage or PLC with active current input or transmitter with active current input
- 2 Electronic insert SWA50
- 3 4-wire field device with passive 4 to 20 mA-HART output
- 4 Supply voltage for 4-wire field device

#### 4-wire HART field device with active current output

**i** Some grounding concepts require a shielded cable. If connecting the cable shield to the FieldPort SWA50, you must use an EMC cable gland. See ordering information, feature 060, option B.

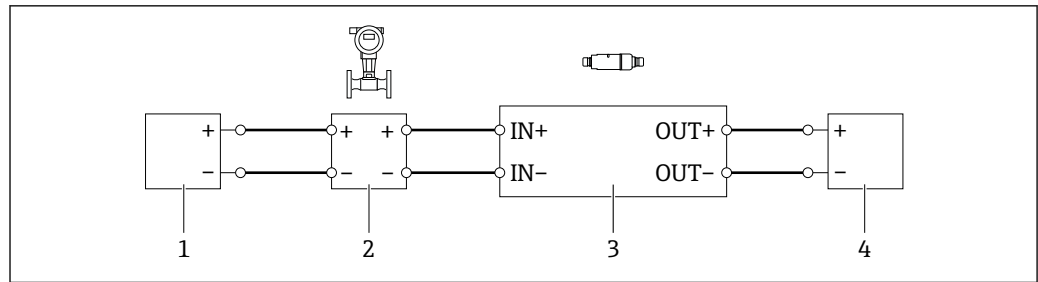

A0040492

**6** Electrical connection for 4-wire HART field devices with active current output (optional grounding not shown)


- 1 Supply voltage for 4-wire HART field device
- 2 4-wire field device with active 4 to 20 mA-HART output
- 3 Electronic insert SWA50
- 4 PLC or transmitter with passive current input (optional), alternatively wire bridge between terminals OUT+ and OUT-

**i** You must connect a PLC, a transmitter or a wire bridge to terminals OUT+ and OUT-.

**i** If you select the "direct mounting" version and the "4-wire HART field device with active current output and PLC or transmitter" electrical connection version, you can use core cross-sections of 0.75 mm<sup>2</sup> at maximum. If larger core cross-sections are required, we recommend remote mounting.

#### FieldPort SWA50 without HART field device

**i** With this connection version, you can preconfigure the FieldPort SWA50.

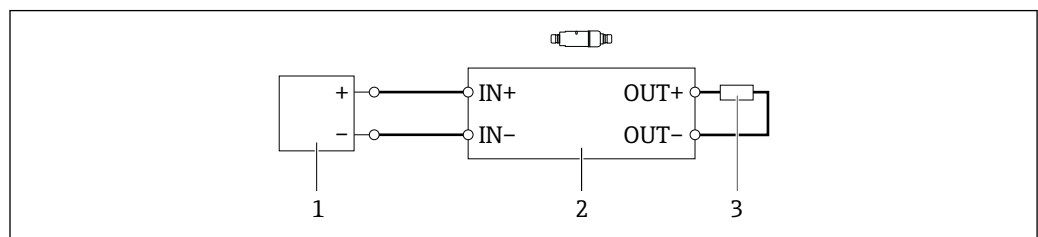


A0040493

**7** FieldPort SWA50 without HART field device (optional grounding not showing)

- 1 Supply voltage, FieldPort SWA50, 10 to 30 VDC
- 2 Electronic insert SWA50
- 3 Resistor 1.5 kOhm and min. 0.5 W between terminals OUT+ and OUT-

#### Terminal assignment

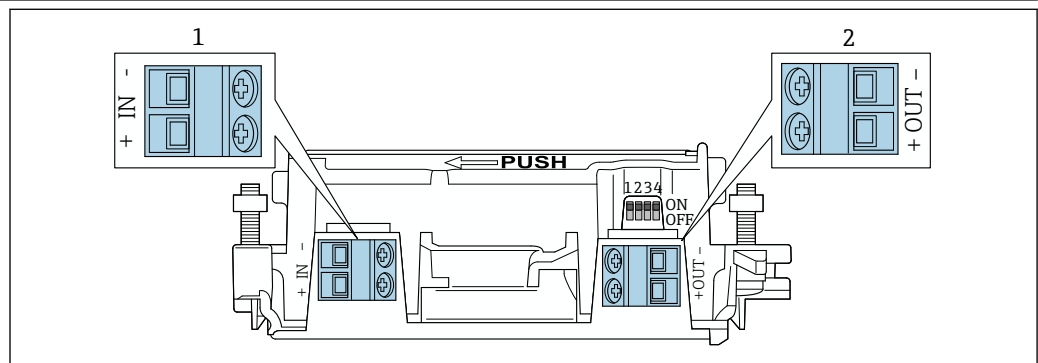









A0040495

**8** FieldPort SWA50 terminal assignment

- 1 Input terminal IN
- 2 Output terminal OUT



Application	Input terminal IN	Output terminal OUT
2-wire HART field device →  4,  7	Cable from supply voltage, PLC with active current output or transmitter with active current output	Cable to 2-wire HART field device
4-wire HART field device with passive current output →  5,  7	Cable from supply voltage, PLC with active current output or transmitter with active current output	Cable to 4-wire HART field device
4-wire HART field device with active current output →  6,  8	Cable from 4-wire field device with active 4 to 20 mA HART output	PLC or transmitter with passive current output (optional), alternatively wire bridge between terminals OUT+ and OUT-
FieldPort SWA50 without field device →  7,  8	Cable from supply voltage for FieldPort SWA50	Resistor between terminals OUT+ and OUT-

**FieldPort SWA50 grounding "Direct mounting" version**


With the "direct mounting" version, the FieldPort SWA50 is grounded via the field device or the metal conduit.

**"Remote mounting" version**

With the "remote mounting" version, ground the FieldPort SWA50 via the optional mounting bracket or a grounding clip provided by the customer.

*Optional mounting bracket*


If using the mounting bracket, ground the FieldPort SWA50 via the grounding screw.

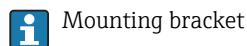


*Grounding clip provided by customer*

The grounding clip provided by the customer must meet the following requirements:

- Diameter: approx. 40 mm
- Stainless steel
- If the FieldPort SWA50 is used in a hazardous area: suitable for hazardous areas as per DIN EN 62305, Sheet 3 and DIN EN 62561-1

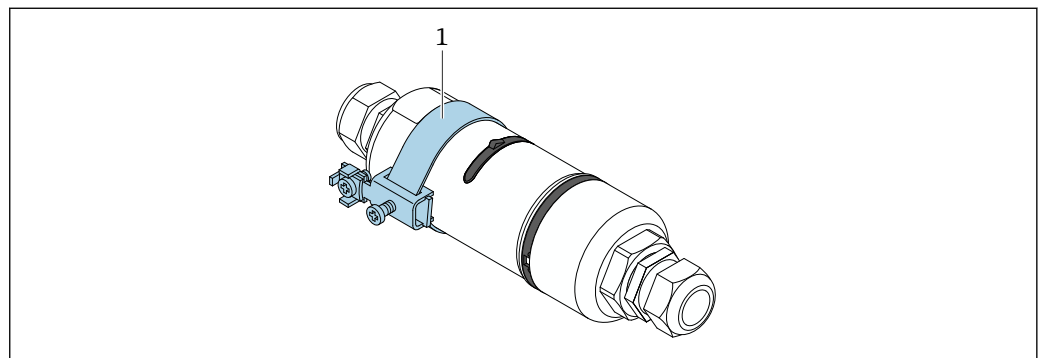

 9 Grounding via grounding clip

1 Example of grounding clip provided by customer


A0041808

**Supply voltage**

- Loop-powered 4 to 20 mA
- 24 V DC (min. 4 V DC, max. 30 V DC): min. 3.6 mA loop current required for start-up

**Voltage drop**

- If internal HART communication resistor is deactivated
  - 3.2 V in operation
  - < 3.8 V at start-up
- If internal HART communication resistor is activated (270 Ohm)
  - < 4.2 V at 3.6 mA loop current
  - < 9.3 V at 22.5 mA loop current

 To select the supply voltage, pay attention to the voltage drop via the FieldPort SWA50. The remaining voltage must be high enough to enable the start-up and operation of the HART field device.

---

**Power consumption** Max. 0.2 W at 22 mA and with internal HART communication resistor (270 Ohm)

---

**Terminals** 2 x 2-pin screw terminals

---

**Cable entry**

- "Remote mounting" version: 2 cable glands
- "Direct mounting" version: 1 cable gland and 1 direct cable entry from field device

**Cable glands supplied**

- Ex t-version: no cable glands. Dummy plugs are supplied.
- Ordering information, feature "060", option "B": M20 x 1.5 plastic version
- Ordering information, feature "060", option "C": M20 x 1.5 EMC version


---

**Cable specification** Use cables that are suitable for the anticipated minimum and maximum temperatures.

Observe grounding concept of the plant.

2 x 0.25 mm<sup>2</sup> to 2 x 1.5 mm<sup>2</sup>

You can use unshielded cable with or without ferrules and shielded cable with or without ferrules.

 If you select the "direct mounting" version and the "4-wire HART field device with active current output and PLC or transmitter" electrical connection version, you can use core cross-sections of 0.75 mm<sup>2</sup> at maximum. If larger core cross-sections are required, we recommend remote mounting.


## Installation

---

**Mounting methods**

- Remote mounting
- Direct mounting on HART field device via either M20 or NPT 1/2" connection adapter


For remote mounting, we recommend the optional mounting bracket. Alternatively, you can secure the remote version using pipe clips.

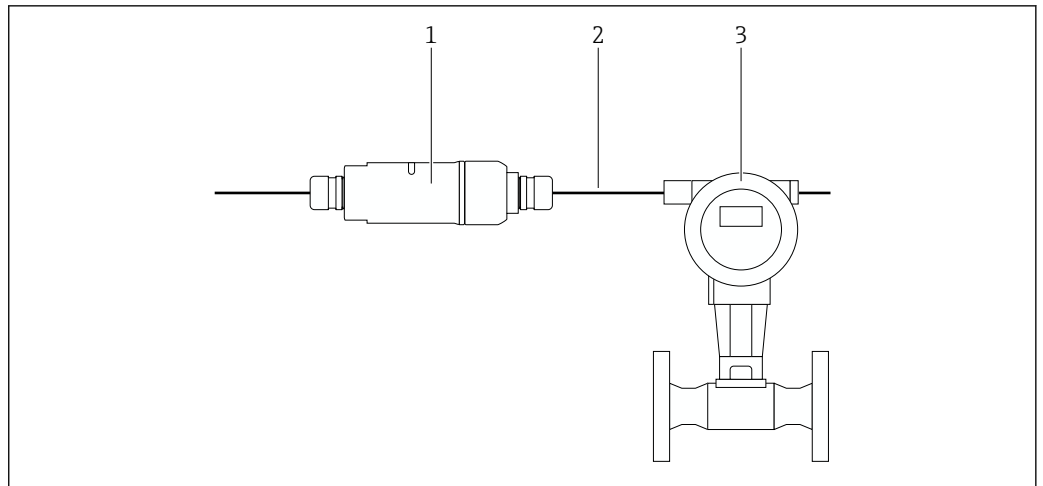

A0043240

10 Example of remote mounting

- 1 FieldPort SWA50 "remote mounting" version
- 2 Cable
- 3 HART field device

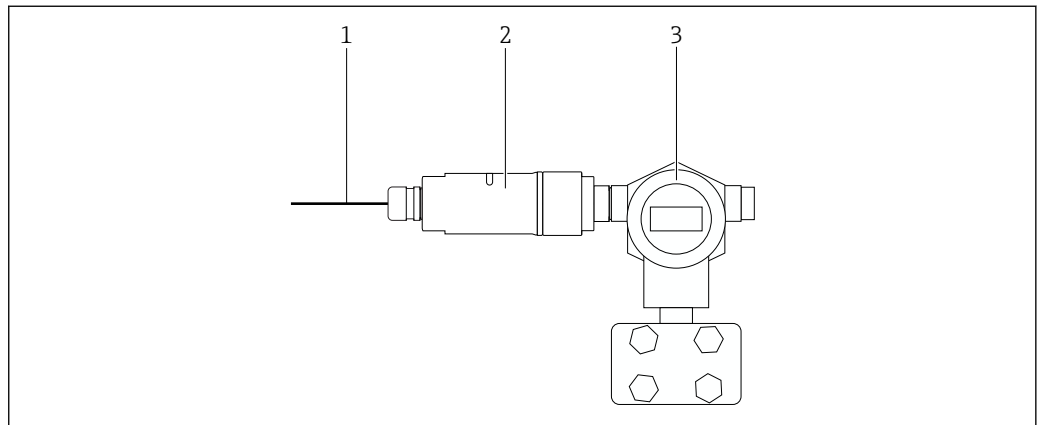

A0043241

11 Example of direct mounting

- 1 Cable
- 2 FieldPort SWA50 "direct mounting" version
- 3 HART field device

### Mounting instructions

- Pay attention to range. → 6
- Observe a distance of at least 6 cm from walls and pipes. Pay attention to the expansion of the Fresnel zone.
- Avoid mounting in close proximity to high-voltage devices.
- Pay attention to the effect of vibrations at the mounting location. → 12


Additional mounting information for Bluetooth version:  
Mount within the visual range of a FieldEdge SGC200.

Additional mounting information for WirelessHART version:  
Mount within the visual range of a WirelessHART adapter, such as SWA50, SWA70, or a WirelessHART gateway, such as SWG70.

### Lightning protection

- Do not mount the FieldPort SWA50 at the highest point of the system.
- Ground the housing of the FieldPort SWA50.


## Environment

<b>Ambient temperature range</b>	<ul style="list-style-type: none"> <li>■ -40 to +85 °C (-40 to +185 °F)</li> <li>■ Ex version for temperature class T4: -40 to +70 °C (-40 to +158 °F)</li> </ul>
<b>Storage temperature range</b>	-40 to +85 °C (-40 to +185 °F)
<b>Climate class</b>	As per IEC 60068-2-38 test Z/AD
<b>Degree of protection</b>	When housing is closed, tested according to: <ul style="list-style-type: none"> <li>■ IP68 / NEMA 6P (24 h at 1 m under water)</li> <li>■ IP66 / NEMA 4X</li> </ul>
<b>Vibration resistance</b>	As per IEC 60068-2-64:2008 <ul style="list-style-type: none"> <li>■ a(RMS) = 50 m/s<sup>2</sup></li> <li>■ f = 5 to 2000 Hz</li> <li>■ t = 3 planes x 2 h</li> </ul> <p> Vibration resistance tested only for "remote mounting" version.</p>
<b>Shock resistance</b>	As per IEC 60068-2-27:2008 300 m/s <sup>2</sup> [= 30 gn] + 18 ms
<b>Electromagnetic compatibility (EMC)</b>	Electromagnetic compatibility as per EN 61326 series and NAMUR recommendation EMC (NE 21)

## Mechanical construction

### Design, dimensions


### "Remote mounting" version

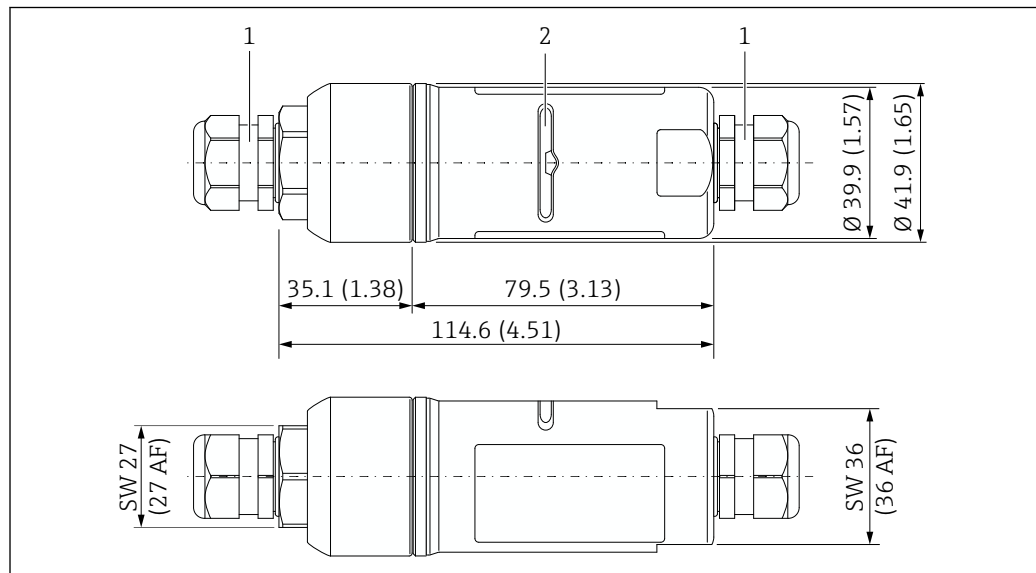

 12 Dimensions of "remote mounting" version in mm (in)

- 1 M20 cable gland  
2 Transmission window


"Direct mounting" version

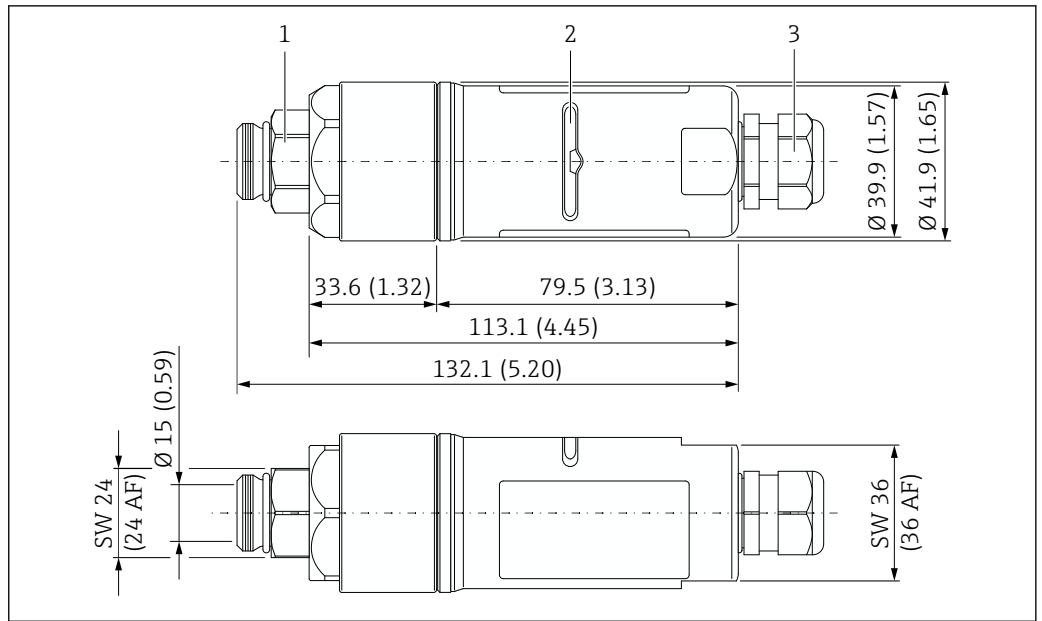

A0040483

13 Dimensions of "direct mounting with M20" version in mm (in)

- 1 Connection adapter with M20 thread
- 2 Transmission window
- 3 M20 cable gland

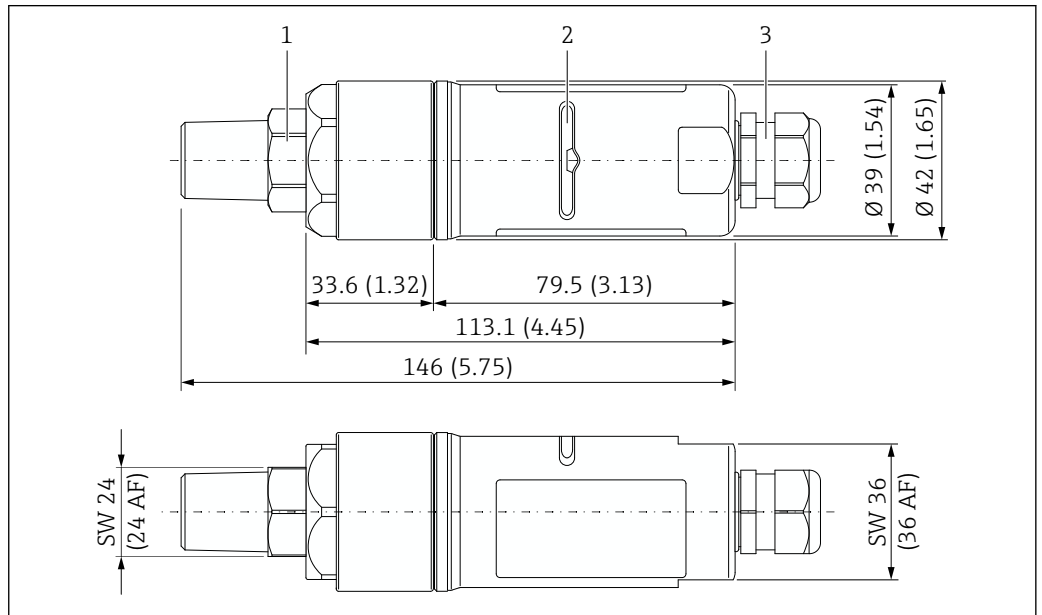

A0043218

14 Dimensions of "direct mounting with NPT" version in mm (in)

- 1 Connection adapter with 1/2 NPT thread
- 2 Transmission window
- 3 M20 cable gland

**Weight** Max. 500 g

**Materials** **Housing**  
Stainless steel 1.4404 (316L)

**Cable entries**

- Standard: plastic
- EMC version: brass

**Connection adapter**

- M20 thread: stainless steel. 1.4404 (316L)
- NPT 1/2" thread: stainless steel. 1.4404 (316L)

**Seals**

- Design ring (housing – cover seal): PC
- O-ring: EPDM
- Transmission window seal: silicone

## Human interface

**Operating concept**

The FieldPort SWA50 can be operated as follows:

- Via smartphone or tablet with the Endress+Hauser SmartBlue app
- Via Endress+Hauser Field Xpert SMT7x tablet PC

In addition, the WirelessHART version can be operated as follows:

- Local configuration with FieldCare or DeviceCare via DTM for SWA50
- Remote configuration with FieldCare via WirelessHART-Fieldgate SWG70 and DTM for SWA50 and SWG70

**Local operation**

You can enable and disable the following functions via DIP switches.

- Bluetooth communication
- Firmware update
- Configuration via Bluetooth

The DIP switches are located on the electronic insert.

## Certificates and approvals



Currently available certificates, approvals and other documentation are available at [www.endress.com](http://www.endress.com) > Downloads

**CE mark**

The device meets the legal requirements of the applicable EU Directives. These are listed in the corresponding EU Declaration of Conformity along with the standards applied.

Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.

**Ex approval**

All explosion-protection data are provided in separate Ex documentation. The relevant Ex documentation is delivered with the Ex devices as standard. The Ex documentation is also available in the Downloads area of the Endress+Hauser website.

**Explosion-protected smartphones and tablets**

Mobile end devices with Ex approval must be used in hazardous areas.

**Document type: Safety Instructions, certificates**

Depending on the approval, safety instructions are supplied with the device, e.g. XA. This documentation is an integral part of the Operating Instructions. The nameplate indicates the Safety Instructions (XA) that are relevant to the device.

**Radio approvals**

The device has the following radio approvals:

- Radio equipment directive (RED) 2014/53/EU
- FCC/ISED Canada Part 15.247

## Ordering information

Detailed information on the product structure are available as follows:

- On the Endress+Hauser website: [www.endress.com](http://www.endress.com) → Enter "SWA50" in the search field → Click the icon to the right → Product Configurator opens → Configure product
- From your Endress+Hauser Sales Center: [www.addresses.endress.com](http://www.addresses.endress.com)

### Scope of delivery

- FieldPort SWA50
- Optional accessory: mounting bracket

## Accessories


Various accessories are available for the device, and can be ordered with the device or at a later stage from Endress+Hauser. Detailed information on the order code in question is available from your local Endress+Hauser Sales Center or on the product page of the Endress+Hauser website: [www.endress.com](http://www.endress.com).


### Device-specific accessories

#### Mounting bracket

Order number  
71487573

Material  
Stainless steel 1.4404 (316L)

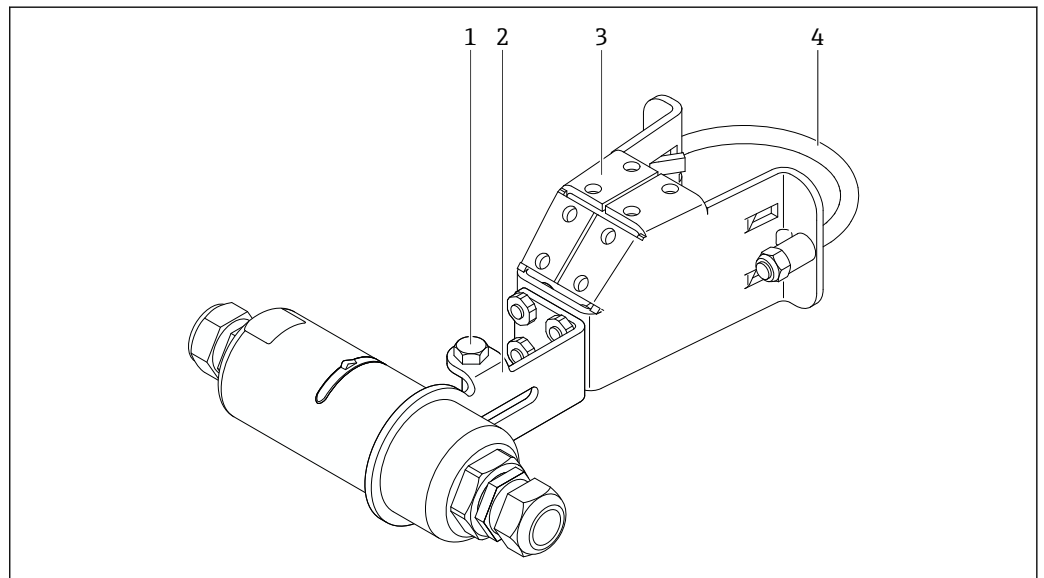

 15 FieldPort SWA50 mounted via optional mounting bracket

- 1 Hexagonal-headed bolt for grounding
- 2 Support bracket
- 3 Mounting bracket
- 4 Round bracket


#### Mounting and alignment options

The mounting bracket can be mounted as follows:

- On pipes with a maximum diameter of 65 mm
- On walls

The FieldPort can be aligned as follows using the support bracket:

- Via the various mounting positions on the mounting bracket
- By rotating the support bracket

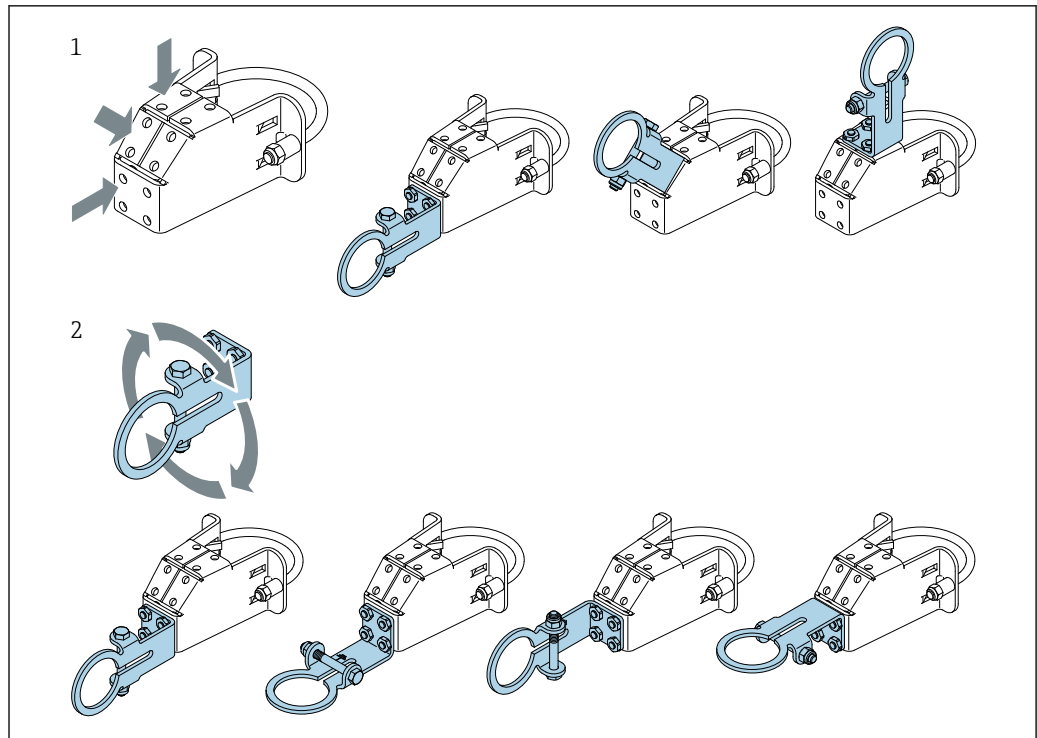


A0043411

16 Alignment options via support bracket

- 1 Various mounting positions on support bracket
- 2 By rotating the support bracket


Dimensions

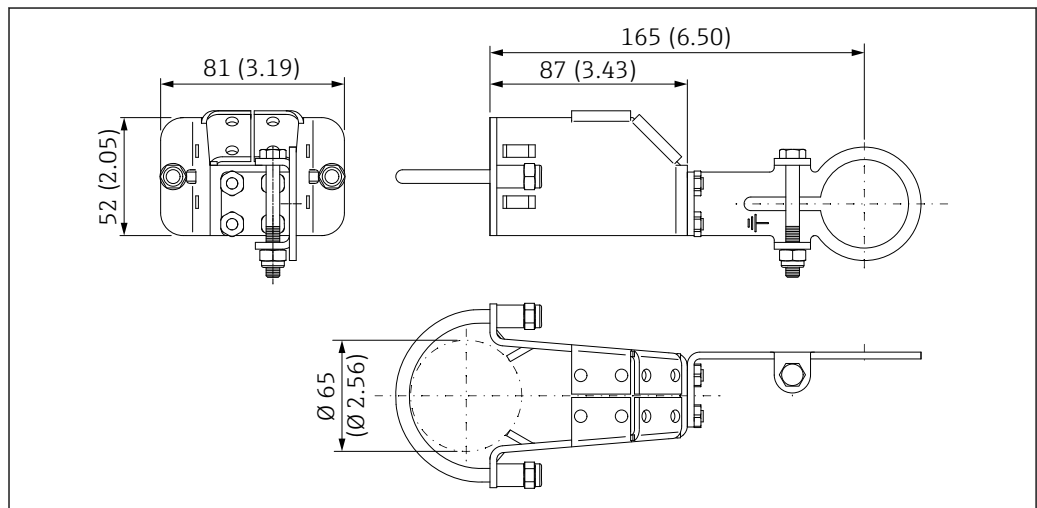

A0043313

17 Dimensions of mounting bracket - pipe mounting



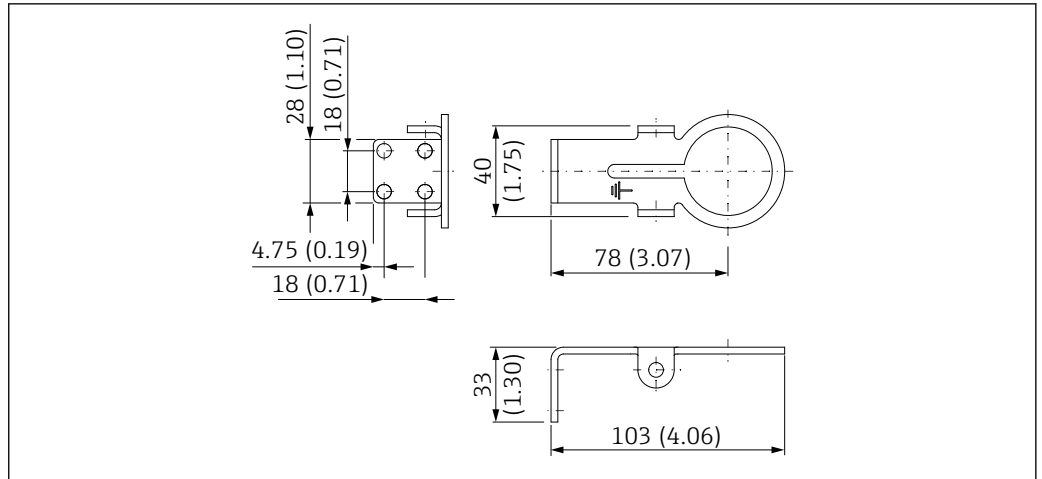

A0043410

18 Dimensions of retaining bracket – wall mounting

## Supplementary documentation

Standard documentation  
SWA50

**Operating Instructions**

- Bluetooth: BA01987S
- WirelessHART: BA02046S

**Brief Operating Instructions**

WirelessHART: KA01436S

Supplementary device-  
dependent documentation  
for SWA50

All explosion-protection data are provided in separate Ex documentation. The relevant Ex documentation is delivered with the Ex devices as standard. The Ex documentation is also available in the Downloads area of the Endress+Hauser website.

Standard documentation for  
SGC200

**Technical Information**

TI01468S

**Brief Operating Instructions / Operating Instructions**

KA01428S

Standard documentation for  
SGC500

**Technical Information**

TI01525S

**Operating Instructions**

BA02035S

Standard documentation for  
SMT70

**Technical Information**

TI01342S

**Operating Instructions**

BA01709S

Standard documentation for  
SMT77

**Technical Information**

TI01418S

**Operating Instructions**

BA01923S

Standard documentation for  
SWA70

**Technical Information**

TI00026S

**Operating Instructions**

BA00061S

Standard documentation for  
SWG70

#### Technical Information

TI00027S

#### Operating Instructions

BA00064S

## Registered trademarks

#### Bluetooth®

Registered trademark of the Bluetooth Special Interest Group (SIG), Kirkland, Washington, USA

#### HART®

Registered trademark of the FieldComm Group, Austin, Texas, USA

#### WirelessHART®

Registered trademark of the FieldComm Group, Austin, Texas, USA

## Radio approvals

### Europe

This device meets the requirements of the "Radio Equipment Directive" (RED) 2014/53/EU:

- EN 300 328 V2.1.1
- EN 301 489-1 V2.1.1
- EN 301 489-17 V3.1.1
- EN 62311: 2008

### Canada and United States

FCC ID: LCGSWA5

IC: 2519A-SWA50

This device complies with Part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s).

Operation is subject to the following two conditions:

- this device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.



Changes or modifications made to this equipment not expressly approved by Endress+Hauser SE+Co. KG may void the FCC authorization to operate this equipment.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- reorient or relocate the receiving antenna
- increase the separation between the equipment and receiver
- connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- consult the dealer or an experienced radio/TV technician for help with radiofrequency radiation exposure information.

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 cm (7.87 in) between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Changes or modifications made to this device that are not expressly approved by Endress+Hauser may void the FCC authorization to operate this device. This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

#### Français

Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- L'appareil ne doit pas produire de brouillage, et
- L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



Les changements ou modifications apportées à cet appareil non expressément approuvée par Endress+Hauser SE+Co. KG peut annuler l'autorisation FCC d'utiliser cet appareil.

#### Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm (7.87 in) de distance entre la source de rayonnement et votre corps.

Ce transmetteur ne doit pas être placé au même endroit ou utilisé simultanément avec un autre transmetteur ou antenne.

---

#### Japan

##### 電気通信事業法

Japanese Radio Law and Japanese Telecommunications Business Law Compliance.

This device is granted pursuant to the Japanese Radio Law (電波法) and the Japanese Telecommunications Business Law (電気通信事業法).

This device should not be modified (otherwise the granted designation number will become invalid).

[www.addresses.endress.com](http://www.addresses.endress.com)

---