

Polycom® KIRK® 4080



User Guide

Congratulations on your new KIRK handset

Your new handset from Polycorn will provide you with the greatest possible degree of flexibility and mobility due to high battery capacity, low weight, practical size and design.

DRAFT

Contents:

1. Warnings	4	9.5.1 Create subscription	23
2. Label information.....	5	9.5.2 Login.....	24
3. Construction	6	9.5.3 Auto login.....	25
4. Battery information.....	7	9.5.4 Remove subscription.....	28
5. Charging.....	8	9.5.5 Change startup text.....	28
6. Key functions.....	9	9.6 Battery.....	29
7. Turning the handset ON/OFF.....	11	9.7 Redial	30
8. Making a call.....	12	9.8 Book.....	32
8.1 Receiving calls	14	9.9 External services.....	34
8.2 During conversation	15	9.10 MSF Functions.....	35
8.2.1 Volume regulation.....	15	9.11 Mail/Textmessages.....	36
8.2.2 Microphone mute	15	9.12 Menu language.....	40
8.2.3 Transferring the call to another handset.....	15	10. Shortcuts	41
9. Menu structure	16	11. Speed dial.....	42
9.1 Using the alphanumeric keyboard.....	17	12. Date and Time Function.....	43
9.2 The key functions.....	18	13. Advanced settings.....	44
9.3 Handset set-up	19	14. Information	47
9.4 Handset functions	21	14.1 Error tree	47
9.5 Menu subscription and login	22	14.2 Error information	48
		14.3 Warranty.....	48
		14.4 Technical information.....	49
		15. EC Declaration of Conformity	50

1. Warnings

The KIRK 4080 is developed for use in potentially explosive working environments, as defined by local fire protection authorities. The handset complies with the ATEX directive 94/9/EC as well as IEC standards, please refer to Declaration of Conformity at the end of this user guide for more details.


For safe use of KIRK 4080, please remind the following:

- Please consult your system manager for instruction before using KIRK 4080
- Do not open KIRK 4080 in a potentially explosive atmosphere
- Battery may only be charged outside the hazardous area and the handset may only be charged with dedicated charger, part number **8464 2496**.
- The AC power adaptor used in connection with the charger must **not** be connected to a higher voltage than 250V AC.
- Only battery part-number **8474 3225** may be used.
- When an additional headset is needed, only part-number **0231 9517** is allowed.
- When the handset is used in hazardous area, the handset must be used with leather pouch part-number 0231 9543 if relative umidity <60%, or when the user wears clothes that could cause electrostatic charging.

- If defects occur, remove KIRK 4080 immediately from the potentially explosive atmosphere
- Only Polycom may repair and service KIRK 4080
- Relevant data concerning repairs must be logged
- For traceability it is advisable to keep a record of type- and serial numbers of the handsets, as well as the name of users of the handset

DRAFT

3. Construction

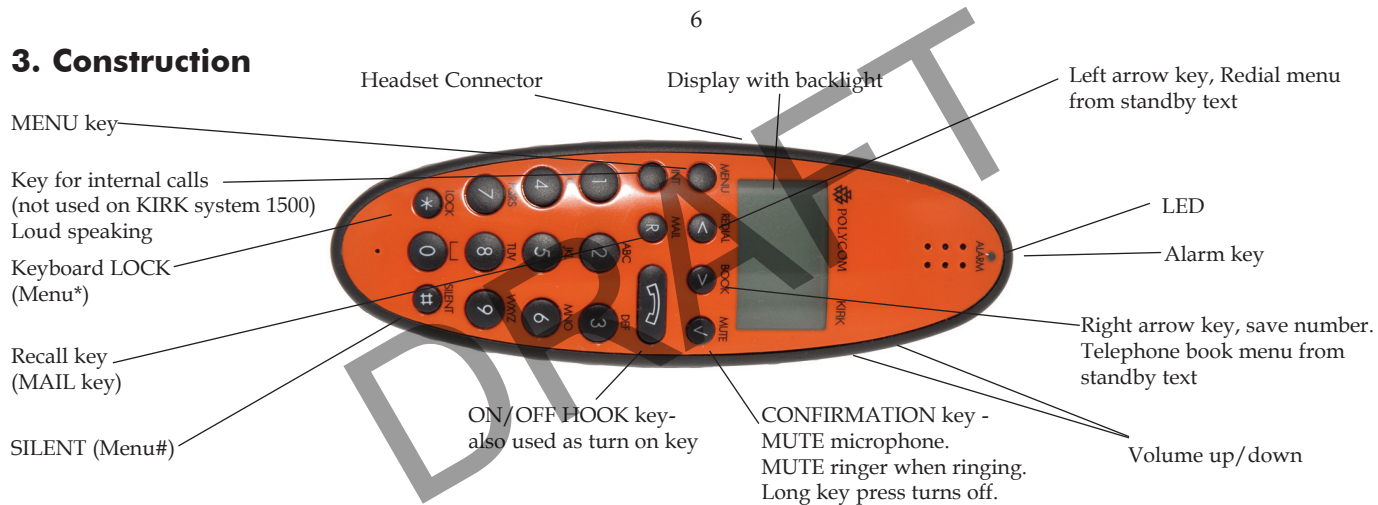

4. Battery information

The battery is connected to the handset from factory and must not be removed.
To replace the battery, please contact your local distributor.


DRAFT

5. Charging

Do not charge KIRK 4080 in a potentially explosive atmosphere. Use only the dedicated charger 8464 2458 (orange) for charging KIRK 4080.

It takes approximately 3 1/2 hours to charge the handset from fully discharged to its full capacity. Place the handset in the charger. When the handset is turned on, the display shows the charging status in line 3. For correct charging the room temperature has to be between 0°C and 25°C and the handset must therefore not be placed in direct sunshine. The battery has a built-in heat sensor which will stop charging if the battery temperature is too high.

It is necessary to recharge the battery when the display shows "BATTERY LOW", or if it can not be turned on. The LED flashes at a low frequency while charging and lights constantly when the charging is finished. The display goes back to normal mode when fully charged.



When the handset is placed in the charger it will not vibrate, and B-answer is inactive. If the battery is fully discharged, up to 10 min. may pass before charging begins and the handset can be turned on. When charging begins the charging status is shown in the 3rd line of the display and the LED flashes slowly.

6. Key Functions

The handset has 21 keys:

Two keys are placed at the right side for volume control. Press upper or lower key to change the volume. Each key-press turns volume one step up/down.

- "MENU" - Go to menu structure or exits the menu structure. (Escape or »NO«)
- " < ", "REDIAL" - Menu: left, Cursor left, after a digit: delete last digit. Long press: delete all
From standby text: Redial menu
- " > ", "BOOK" - Menu: right, Cursor right, After a digit: Store number in telephone book
From standby text: Telephone book read
- "3", "MUTE" - Confirmation (»YES«) or jump to next level in the menu. In off hook: Mute microphone
In on hook: Mute ringer. Long key press turns the handset OFF

- "INT" - If residential systems: Internal calls off hook
(not used on KIRK systems 1500 and 500)
Turns loudspeaking on and off
- "R" - If off hook: Recall. If on hook: Read or write message
- "☎" - On hook/off hook and turn ON
- "*" - * (Change from pulse to DTMF on KIRK CCFP), Long = pause (-), extra long: change from pulse to DTMF (a "T" appears in the display, GAP standard)
- "0-9" - Digits or letters in alphanumeric mode (names and messages)
- "* " - *, Choose uppercase or lowercase letters in alphanumeric mode

7. Turning the handset ON/OFF


ON: Press -key for 1/2 second.

When the handset is turned on the  symbol is shown in the lower left corner of the display, if the handset is subscribed to a system. (For subscription, see 9.5.1)

OFF: Press the “3” (MUTE) key for 3 seconds

Please note: When the handset has been outside the coverage area, it can take up to 30 seconds before the handset is back on the system after re-entering the coverage area.



8. Making a call

For making or receiving calls the handset has to be subscribed to a system ( shown in display) (see chap. 9.5.1)
Press the -key, the -icon in the display will flash until connection is established
Dial the number

Pre-dial:

Press the number to dial (long press on »*« will make a pause, if necessary)
Press the -key, the -icon will flash until the connection is established

Telephone book:

Press the > -key (book-key) to enter the telephone book
Search for the number either by using the < -key or the > -key or by pressing the first letter in the name by using the digits 1 - 9 (see chap. 9.2)
Press the -key, the -icon will flash until the connection is established

Redial:

Redial / CLIP (CLIP = Calling Line Identification Presentation) stack:


Press the <-key (redial-key) to enter the redial/CLIP stack

Search for the number by using the <-key or the >-key, redial numbers are marked with REDIAL or name and clip numbers are marked either with CLIP or the name of the person who called and the LED is on

Press the -key, the -icon will flash until the connection is established

Using the handset in residential systems: (not in KIRK systems 1500 and 500)

Internal call post-dial:

Press the INT-key, the -icon in the display will flash

Dial the number of another handset on the base station, the -icon will flash until the connection is established

Internal call pre-dial: (not in KIRK systems 1500 and 500)

Press the number of another handset on the base station

Press the INT-key, the -icon will flash until the connection is established

Please note: If the Date and Time function is supported, then date and time of the incoming or outgoing call is shown in the CLIP/Redial stack on the 4th line of the display. See Chap. 12 for more information.

Speed dial:

See Chap. 10 and Chap. 11 for more information about speed dialing.

8.1. Receiving calls

If the phone rings, the call can be answered by pressing the -key.

When ringing the LED flashes fast, and the display shows the CLIP (if presented). If it is an external call (or if no CLIP) the display shows "INCOMING CALL".

It is possible to stop the ring signal without answering the call. Press MUTE (3) and the ring signal is muted. Display shows: »RINGER MUTED«.

8.2 During conversation

8.2.1 Volume regulation:

Use the two keys placed at the right side of the handset for volume control

8.2.2 Microphone mute:

Press the 3-key (mute-key), MIC. MUTED is showed in the display

Press the 3-key (mute-key) to enable the microphone again

8.2.3 Transferring the call to another handset:


Press R, and dial new number

Press the -key and the call is transferred to the other handset

9. Menu structure

Pressing the MENU-key, enters or exits the menu structure. It has to be used if a “NO” or “CLEAR” is wanted in the menu structure.

Pressing the 3-key, jumps to a lower level in the menu. When the lowest menu level is reached, it will store the setting and jump to a higher level. It has to be used if a “YES” is wanted.

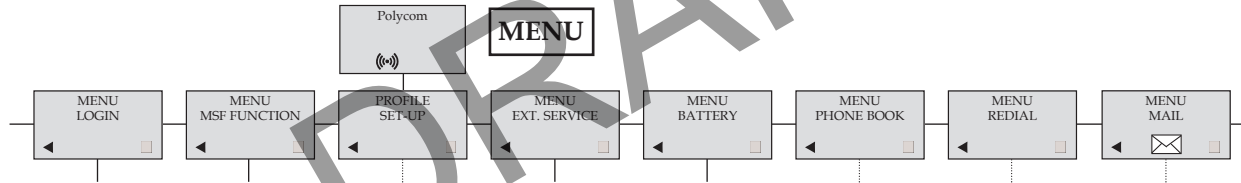

The phonebook and redial menu can be accessed directly. The phone book by pressing the > -key (book-key) and the redial menu by pressing the < -key (redial-key).

9.1 Using the alphanumeric keyboard

The normal dialling keys (0-9) are used for writing the name to be placed in the telephone book. By pressing the keys a certain number of times the related letters or digits will appear in the display. Spaces are made by using the 0-key. Key * changes between uppercase and lowercase letters. The arrows will move the cursor. Left arrow is also used for deleting (hold for 1 sec.) = delete. New letters can be inserted.

Change of key press and pauses lasting more than 1 second automatically moves the cursor to next position.

Please note: 4th line of the display shows the possible alphanumeric keys.

9.2 The key functions


Key	Capital letter	Small letter
1	? ! 1 - + * / = & () % ¿ ¡	? ! 1 - + * / = & () % ¿ ¡
2	A B C 2 Ä Å À Á Ã Æ Ç	a b c 2 ä å à á ã æ ç
3	D E F 3 È É Ê Ë	d e f 3 è é ê ë
4	G H I 4 Ì Í Î Ï	g h i 4 ì í î ï
5	J K L 5	j k l 5
6	M N O 6 Ñ Ö Ò Ó Ô Õ Ø	m n o 6 ñ ö ò ó ô õ ø
7	P Q R S 7 ß	p q r s 7 ß
8	T U V 8 Ü Ù Ú Û	t u v 8 ü ù ú û
9	W X Y Z 9	w x y z 9
0	[Space] , . 0 : ; _ " ' ^ ~	[Space] , . 0 : ; _ " ' ^ ~
*	A → a	A → a
#	# @ E \$ £ ¥ § < > { } [\]	# @ E \$ £ ¥ § < > { } [\]

9.3 Handset set-up

To set-up the handset press "MENU". You are now able to switch between the different settings. Press "3" when you find the setting you wish to change (or see). Change the setting according to your needs, confirm with "3" and you automatically go to the next setting. Press "Menu" to finalize the setup.

DRAFT

Profile set-up (fig)

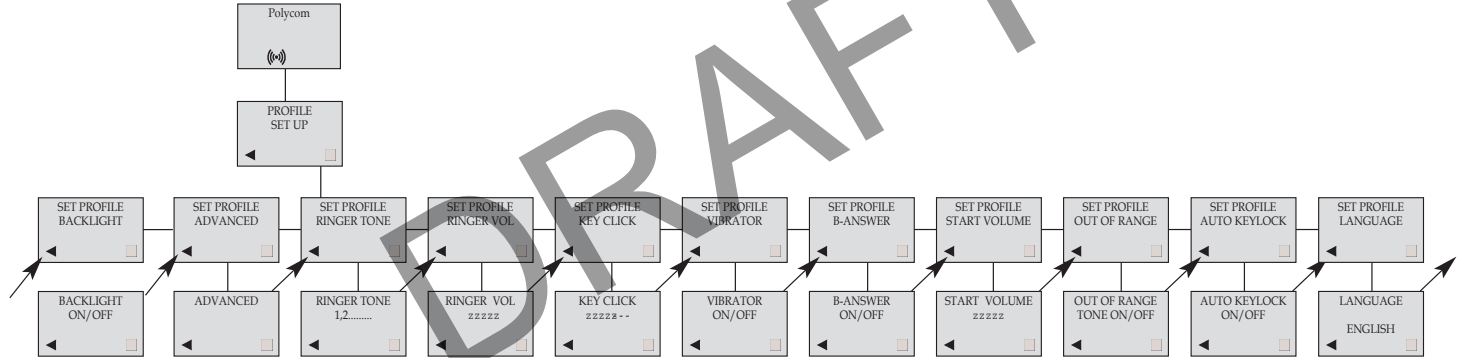

9.4 Handset functions

RINGERTONE: Scroll through the 9 different ringtones using < and >. Confirm with 3.

RINGER VOL: Turn the volume up and down using < and >. Confirm with 3.

KEY CLICK: Turn the volume up and down using < and >. Confirm with 3.

VIBRATOR: Can be turned on/off using < and >. Confirm with 3 (vibrator only works on KIRK 4040).

B-ANSWER: Can be turned on/off using < and >. Confirm with 3. When turned on, the telephone automatically goes off hook when ringing. If subscribed to a KIRK solution it automatically goes on hook when calls are terminated. B-answer is inactive when handset is placed in the charger.

REMARK: Automatic on-hook is only reliable under defined conditions related to the interface settings between the KIRK Wireless Server and the PBX.

START VOL: Start volume can be adjusted using < and >. Confirm with 3.

OUT OF RANGE: The out of range indication can be turned on/off using < and >. Confirm with 3. With the out of range indicator turned on, a beep will appear when the telephone is moving out of range of the base station, and "OUT OF RANGE" will appear in the display.


AUTO KEYLOCK: The auto keylock function can be turned on/off using < and >. Confirm with 3. With auto keylock turned on the handset will automatically lock the keys after 30 seconds. Press MENU * to activate the keys again.

LANGUAGE: see page 40

BACKLIGHT: Can be turned on/off using < and >. Confirm with 3.

ADVANCED: see Chap. 13.

9.5 Menu subscription and login

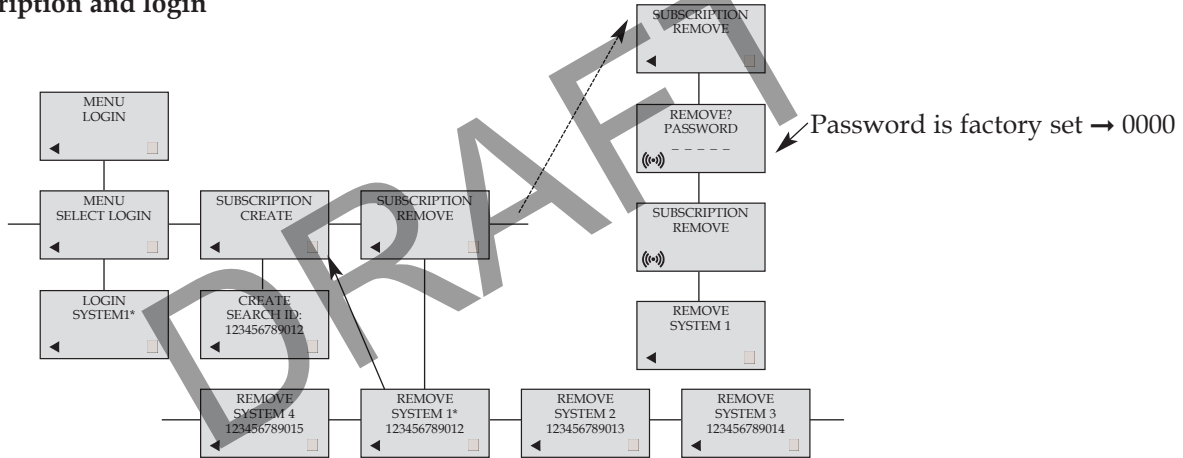

9.5.1 Create subscription


To make subscriptions, the system must allow subscriptions to be made. Some systems also require an Access Code (AC). If more than one system currently permits subscription, you will need to know the ID of the system to which you wish to subscribe. Access Codes and system ID's will be provided by the system administrator.

Choose the SUBSCRIPTION CREATE menu to subscribe to a new system. (see 9.5.3/9.5.4)

Use the < and > keys to scroll between the ID's of the different systems available

During subscription the handset will search for free positions and perform subscription on the first free position

An alternative position can be chosen using < or >. Give in the AC (if required) using the keyboard, and press (3)

If the subscription was successful, the startup text will be replaced by the standby text given into the system by the system administrator and  is shown in the display. If not, the subscription has failed and the procedure must be retried.

If the handset is already subscribed to 10 systems, you will have to remove a subscription before creating a new subscription (see 9.5.4).

9.5.2 Login

The handset can be subscribed to 10 different systems enabling you to use the same handset on 10 different systems.

If you would like to change to another system, use the login menu to connect to another system number.

The actual chosen system is marked with a * or an A (if Autologin is selected).


To change to another system use < or > and press 3 to confirm

To be able to log on to a system, subscription to the system has to be established (See 9.5.1).

Under LOGIN/SELECT LOGIN only subscriptions will be shown. Free positions will not be shown.

9.5.3 Auto login

The handset can be subscribed to 10 different systems. If Auto login is chosen from the menu, the handset automatically selects a system. The selected system is marked with an "A".

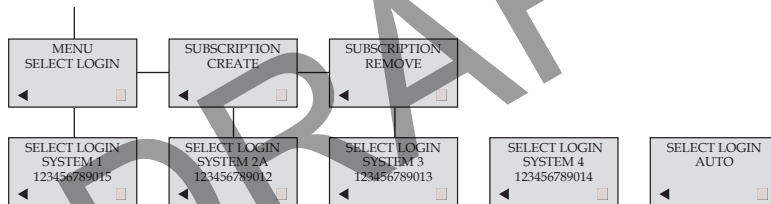

Please note: Auto login A should only be used in separate systems without overlaps. If a handset loses signal from the system (the display showing "OUT OF RANGE"), then after 20 seconds the handset will start searching for an alternative system available from the Login list and automatically change to this system. Changing between systems can only take place while on hook. Any call will be dropped when changing to an alternative system.

DRAFT

If a handset is subscribed to two systems only, you can use Auto login B to change between the two systems automatically. The selected system is marked with a “B”.

Please note: Auto login B can be used in separate systems which are overlapping each other. As soon as the handset has measured a low radio signal 5 times in succession, it will start up the Auto login B procedure and change to an alternative system if available. Changing between two systems can only take place while on hook. Any call will be dropped when changing to an alternative system.

9.5.4 Remove subscription

Subscriptions can be removed from the system in use and from the 9 other systems (if connected). Removing a subscription requires a password. Password is factory set at 0000. If the system in use is removed, it is necessary either to select one of the remaining systems or to subscribe to a new one. If one of the systems not chosen is removed, the handset remains connected to the system in use.


9.5.5 Change startup text

The startup text is predefined as e.g. "Polycom" as factory default. This can be changed by using the following procedure: Press ********, BOOK, (3) and give in the new startup text by the keyboard followed by (3). It is possible to insert 24 characters.

9.6 Battery capacity

In the battery menu it is possible to see the remaining battery capacity. For reading the correct capacity, the handset has to be removed from the charger for at least one hour. Press "Menu" and use the < or > keys to reach the Battery Menu. Press "3" to enter the menu, and you can see the current status of the battery capacity. Press "3" to return to the menu system or press "Menu" to quit.

The indication on the display is not necessarily an exact reflection on the remaining speech time, but only an indication of the voltage on the battery.

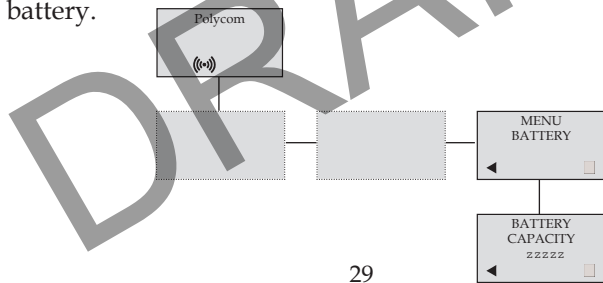

9.7 Redial

The handset has maximum 10 redial numbers and 10 Caller ID's placed in the same stack. Each number is only represented once. Enter the redial menu by pressing "<" (Redial) from the standby text. Repeated presses at the "<" button turn backward through the dialled numbers and CLIP numbers (from newest to the oldest). Right arrow moves in the opposite direction. It is also possible to reach the redial menu in the main menu. Numbers are named "REDIAL", "CLIP" or with the name.


The LED will flash slowly if a new number (Missed call) has arrived in the CLIP stack. If no number (no clip) is represented by a call only the LED will flash slow afterwards.

If you want to delete a "CLIP" or a "REDIAL" you scroll to the name/number and press »3« twice.

The name/number is now deleted. If number is stored, it is moved to the telephone book. You can also delete all name/numbers using the "delete all?" function.

It is possible to edit the CLIP or redial numbers. Find the number you wish to edit and press the digits you want to add to the number, e.g. prefix = 0.


The Redial and CLIP stack Menu (fig)

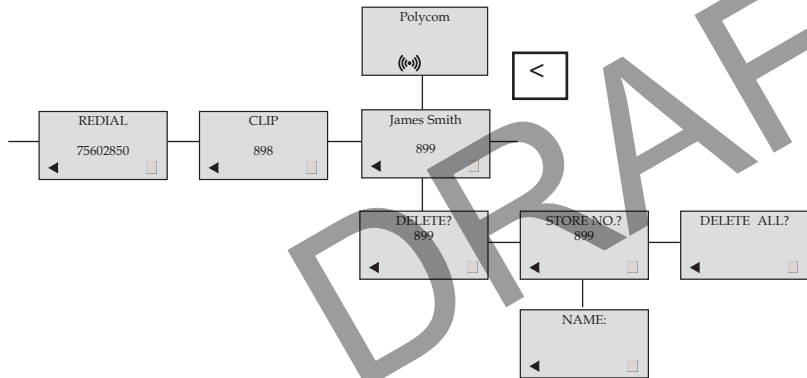


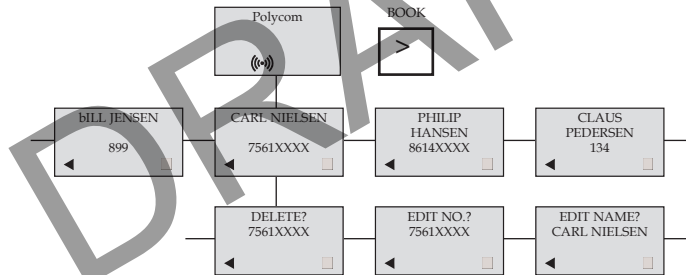
9.8 Book

Storing a number (max. 24 digits) in the telephone book is done by pressing the number to be stored (in on hook), then press the ">"- key followed by the "3" key. The book can store up to 200 numbers with name. Typing of the name and a confirmation is required. After storing the telephone will go back to standby mode. If the display shows "MEMORY FULL", it is necessary to delete one or more numbers from the telephone book.

(See menu structure page 31)

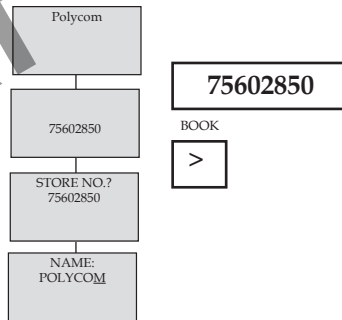

Read BOOK numbers: The telephone book is entered by pressing ">" (book). For quick-search: press the first letter of the name (using 1-9)(see chap. 9.2). Call the displayed person by pressing the  key. It is also possible to reach the telephone book menu in the main menu. Viewing and editing the telephone book can also be done while in conversation.



9.9 External services

External services are facilities placed in the main system, and only available if the handset is subscribed to a KIRK system. Under External services can be found; Clip stack, Delete clip stack and local Phone book. The Local Phone book is a common Phone book for all handsets subscribed to the actual system, and all handsets subscribed to the system are listed in the Phone book. Additional numbers can be added to the Phone book by the system administrator.

9.10 MSF Functions

MSF Functions are special functions, which are based on MSF (Message Service Function). The functions require special software in the main system.

DRAFT

9.11 Mail/Text Messages

Available in systems configured with the possibility of sending text messages

At the reception of a text message the envelope icon  appears in the display. The envelope icon is indicating one or more unread messages.

The text message is shown in the display, and when the message is read the envelope icon will disappear.

If the message contains a call-back number, this will be displayed on the bottom line of the display. As long as the call-back number is in the display, it is possible to activate the number by pressing the -key.

1st letter in the display, in front of the timestamp, shows the message status: read (R), unread (N) or locked (L). Mails include a maximum of 72 letters or digits (2 display screens of 36 each). Call-back no. is max. 24 digits (or letters for E-mail).

14 messages can be "stored" in the handset. When receiving a new message, the oldest unlocked will be deleted. Locked messages will not automatically be overwritten, but can manually be deleted. Maximum 7 messages can be locked.

Read a mail

Press the "R" - (MAIL) key followed by the 3-key or enter the mail menu (in on hook condition)

If the message includes more than 36 letters or digits, the message will run over 2 display screens

Use the > -key to scroll. To see the **sender** of the mail, press the 3-key. To leave the mail, press the MENU-key

Reply a mail

Open the mail by pressing the R-key followed by the 3-key, press the 3-key again and use the < >-keys to find the reply feature, press the 3-key and you are then able to reply the mail. After writing your reply press the 3-key to confirm

Forward a mail

Open the mail by pressing the R-key followed by the 3-key, press the 3-key again and use the < >-keys to find the forward feature, press the 3-key twice and you are then able to write the number on the receiver. Confirm with the 3-key

Delete all mail

Open the mail stack by pressing the R-key followed by the 3-key, press the 3-key again and use the < >-keys to find the delete feature, press the 3-key and all mails are deleted

Delete a mail

Open the mail by pressing the R-key followed by the 3-key, press the 3-key again and use the < >-keys to find the delete feature, press the 3-key and the mail is deleted

Lock/unlock a mail

Open the mail by pressing the R-key followed by the 3-key, press the 3-key again and use the < >-keys to find the lock/unlock feature, press the 3-key and the mail is locked/unlocked

Write a mail


To write a new mail press the R (mail)-key, confirm with the 3-key and write your message. To send the mail press the 3-key, type the number of the receiver and confirm with the 3-key

If one or more mails are stored do as followed: Press the R (mail)-key followed by the >-key confirm with the 3-key and write your message. Press the 3-key, type the number of the receiver and confirm with the 3-key. The message is sent.

Note

In case a sent message is not received, the sender will get a message in the display.

Menu structure

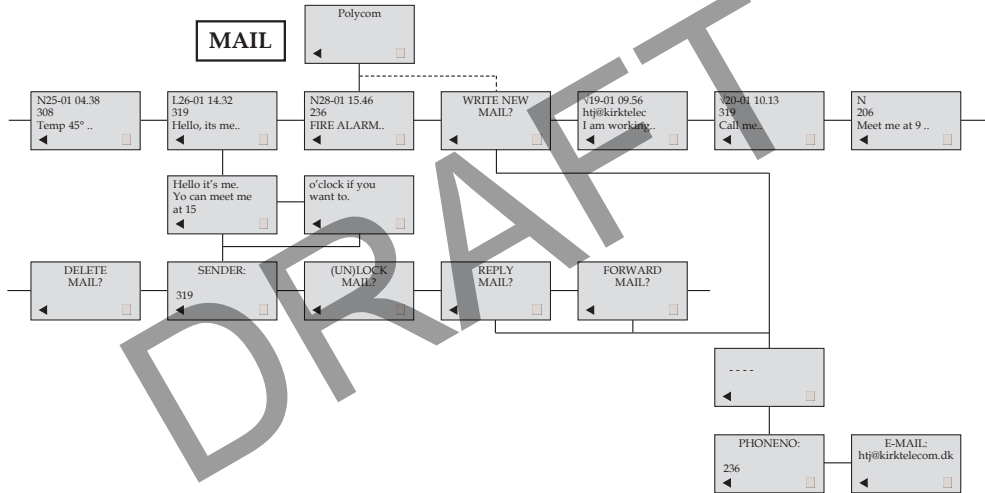

9.12 Menu language

There are 10 predefined languages in the handset: English, German, French, Italian, Spanish, Dutch, Portuguese, Swedish, Danish and Norwegian. Select the required language by pressing the 3-key. If an 11th language is present this will be shown. This language is a specific dealer language and is factory programmed.

10. Shortcuts

"KEY LOCKED": Press: MENU *. (Display shows )

"SILENT": Press: MENU #. (No sounds) (Display shows )

"PHONE BOOK": Press >(BOOK) key in standby

Name search in telephone book: Press the first letter in name and > (book) afterwards

Store a number: Press >(BOOK) after the number (in on hook)

"REDIAL " and "CLIP": Press <(REDIAL) key in standby

"MAIL": Press R(MAIL) key in on hook

MUTE temporarily the ringer: Press "3"(MUTE) when the telephone is ringing

MUTE the microphone: Press "3"(MUTE) when the telephone is off hook

RECALL: Press the INT key if residential system, else press the "R"-key

Pause(-): Hold * for one second

Change from pulse to DTMF(T): Hold * for 2 seconds

11. Speed dial

Please note: To use the speed dial function it is necessary to set “LONG KEY” to “SPEED DIAL”.

The speed dial list has maximum 11 speed dial numbers. Calling a number from the speed dial list is done by pressing the 0,1,2...9 key with a long key press or by pressing the alarm button key. If no number is assigned to the key it is possible to enter a new number. The number is added to the speed dial list automatically.

To store a number (max. 23 digits) in the speed dial list press MENU and use the < or > keys to reach the Speed dial Menu. Press 3 to enter the menu. Use the < or > keys to scroll between the list numbers, enter the number and then confirm with 3. After storing, the telephone will go back to standby mode.

To delete or change a number in the speed dial list press MENU and use the < or > keys to reach the Speed dial Menu. Press 3 to enter the menu. Use the < or > keys to scroll between the list numbers, press 3 to select the number in question and then use the < key to delete the existing number. Confirm with 3 or enter a new number and then confirm with 3.

12. Date and Time Function

The Date and Time function requires the use of a KIRK Wireless Server and special software in the main system. If the Date and Time function is supported, a clock is shown in the 1st line of the display. The clock shows the time with an accuracy of +/- 1 minute.

If the Date and Time function is supported, then date and time of the incoming or outgoing call is also shown in the CLIP/Redial stack on the 4th line of the display. An icon + date and time shows the status of the call.

If the call is missed, the date and time is displayed: ✕ 29/03 20:28

If the incoming call is received, the date and time is displayed: ➔ 29/03 20:28

If the outgoing call is made, the date and time is displayed: 29/03 20:28 ➔

Date and time is only displayed if CLIP feature is supported by the PBX.

13. Advanced settings

AUTO HOOK: Can be turned on/off using < and >. Confirm with 3. When turned on, the handset automatically goes off hook when removed from the charger and a call is present. When placing the handset in the charger, the handset automatically goes on hook.

ANY KEY ANSW: Can be turned on/off using < and >. Confirm with 3. When turned on, all keys work as a Hook key when receiving an incoming call.

LONG KEY: Can be set to "SEND MSF" or "SPEED DIAL" using < and >. Confirm with 3. When choosing "SEND MSF" an MSF is sent to the KIRK Wireless Server when pressing 0,1,2...9 with a long key press or when pressing the alarm key with a long key press. When choosing "SPEED DIAL" a call is made to the assigned number when pressing 0,1,2...9 with a long key press or when pressing the alarm key with a long key press. If no number is assigned the alarm key it is possible to enter a new number. This number is automatically added to the speed dial list. For more information, see Chap 7.12.

LONG KEY TIM: Used to define the time for how long a key (0,1,2...9) should be pressed before it is detected as a long key press.

A. KEY DELAY: Used to define the time for how long the alarm key should be pressed before the alarm key function is executed.

LS ON B-ANSWER: Can be turned on/off using < and >. Confirm with 3. When turned on and “B-ANSWER ON” (hands-free) is selected, the handset turns on the loudspeaker automatically (see Chap. 7.4).


STANDBY TEXT: Can be turned on/off using < and >. Confirm with 3. When turned off the display shows a local standby text.

HEADS. ALERT: The ringer volume in headset can be set to either “OFF” or 1, 2, 3, 4, 5 (indicated by a bar) using < and >. Confirm with 3.

HEADSET VOL: The volume in headset can be set to either 1, 2, 3, 4 or 5 (indicated by a bar) using < and >. Confirm with 3.


OFF HOOK MSF: Can be set to either “NORMAL”, “KEY CLICK” or “KEY BEEP” using < and >. Confirm with 3. The “OFF HOOK MSF” setting only applies to the behaviour of the handset when an MSF is received and the handset is off hook. When set to “NORMAL” the alert type used is the one defined in the MSF. When set to “KEY CLICK” a key click is produced when receiving an MSF. When set to “KEY BEEP” a key beep is produced when receiving an MSF.

Advanced settings (fig)

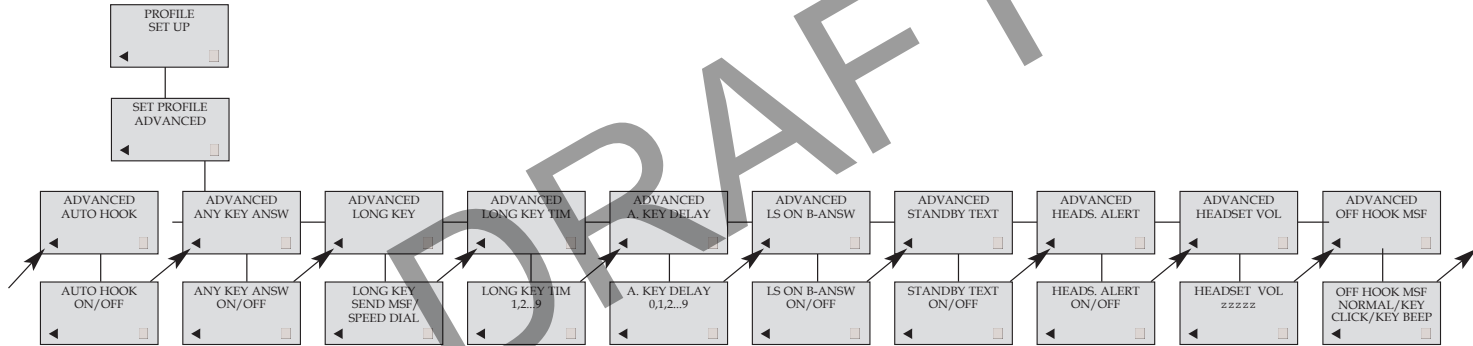

14. Information

14.1 Error tree

Problem	Check
The telephone freezes	Remove and replace the battery pack. Press  to turn on the telephone
The telephone does not ring	Check whether the ringer is SILENT or RINGER VOL. is OFF
The telephone cannot find a system ID at "SUBSCRIPTION CREATE"	Check whether the system is set to allow subscriptions
The telephone cannot subscribe even if system ID has been found	Check if Access Code is necessary
Not possible to turn on the telephone	Check if battery is connected. If yes, charge the battery
The telephone turn off when receiving a call and going off-hook	Charge the battery. If still a problem change the battery as it might be defective

14.2 Error information

Improper function of the handset might be related to the installation of the DECT system or failures related to the main system. Before declaring a handset for repair be sure that the main system is operating properly.

14.3 Warranty

The handset is covered by a normal warranty-solution, except the battery. The lifetime of the battery depends on the general use of the handset.

The handset is not covered by a general warranty if:

- The handset is exposed to water or metal dust
- The handset is mistreated
- The handset is exposed to unauthorised break-in

14.4. Technical information

Approvals

Acoustics:	TBR 10
Access profile:	TBR 22 (GAP)

Size and weight

Size:	148 x 50 x 28 mm
Weight:	130 g including battery \pm 10 g

Capacity

Active talking time	16 hours
Stand-by time	150 hours

Temperature and air pressure

Operating temperature: 0-40°C
Air pressure: Normal atmosphere condition

Charger (orange)

The AC power adapter used in connection with the handset charger 8464 2458 must **not** be connected to a voltage higher than 250V AC.

15. EC Declaration of Conformity



This KIRK product has been marked with the CE mark. This mark indicates compliance with EEC Directives 94/9 EC and 1999/5/EC. A full copy of the Declaration of Conformity can be obtained from Polycom Ltd, 270 Bath Road, Slough, Berkshire, SL1 4DX, UK.



The WEEE Marking on this equipment indicates that the product must not be disposed of with unsorted waste, but must be collected separately.



Manufacturer: Polycom Denmark
Langmarksvej 34
8700 Horsens
Denmark

Product	Type
KIRK 4080	0234 0800

Type number

XX may vary (numbers and letters) depending on software and design.

Telecom requirements

The transceivers described above comply with the essential requirements of the R&TTE directive 99/5/EC if used for the intended purpose.

DRAFT

Applied standards

	Standard	Date
TBR 22	Generic Access Profile (GAP)	1997
TBR 10	General Terminal Attachment requirements	1999

Application, Intended purpose

The KIRK 4080 is a DECT based handset, designed to be used in connection with KIRK wireless communication solutions in potentially explosive environments. The DECT transmitter frequencies of the apparatus are harmonized for these services in the European Community.

Meaning of Conformity

For the application of the equipment in areas which have a potentially explosive atmosphere, the manufacturer declares on his own responsibility that under the claimed type of protection the equipment is in conformance with the relevant European harmonized standards. The equipment may only be used under conditions that are mentioned in the ATEX and IEC Type Examination Certificate.

Electrical apparatus for potentially explosive atmospheres

The KIRK 4080 is in conformance with the requirements of the ATEX Directive 94/9/EC.

Quality Assurance

The product is designed and produced by a manufacturing organisation, which is certified on ISO 9001: 2008 and ISO 14001: 1996 standards. These products are in conformance with the full quality assurance procedures as mentioned in annex III, IV and VII of the ATEX directive 94/9/EC and annex V of the R&TTE directive 99/5/EC and bears the marking 0539.

The number 0539 is the identification number of UL International, Demko A/S.

Compliance with the requirements of ISO 9001: 2008 and ATEX directive are assessed and certified by the following Notified Bodies:

ATEX directive: UL International
Demko A/S
Borupvang 5
DK-2750 Ballerup

ISO 9001:


Bureau Veritas
Oldenborggade 1b
DK-7000 Fredericia

Special conditions for safe use of the KIRK 4080

The KIRK 4080 is developed for use in potentially explosive working environments, as defined by local fire protection authorities. The handset complies with the ATEX directive 94/9/EC as well as IEC standards.

For safe use of KIRK 4080, please remind the following:

- Please consult your system manager for instruction before using KIRK 4080
- Do not open KIRK 4080 in a potentially explosive atmosphere
- Battery may only be charged outside the hazardous area and the handset may only be charged with dedicated charger, part number 8464 2496
- The AC power adaptor used in connection with the charger must **not** be connected to a higher voltage than 250V AC.
- Only battery part-number 8474 3416 may be used.
- When an additional headset is needed, only part-number 0231 9517 is allowed.
- When the handset is used in hazardous area, the handset must be used with leather pouch part-number 0231 9543 if relative humidity < 60%, or when the user wears clothes that could cause electrostatic charging. Polycom recommends always using the leather pouch.
- If defects occur, remove KIRK 4080 immediately from the potentially explosive atmosphere
- Only Polycom (Denmark) may repair and service KIRK 4080
- Relevant data concerning repairs must be logged
- For traceability it is advisable to keep a record of type- and serial numbers of the handsets, as well as the name of users of the handset

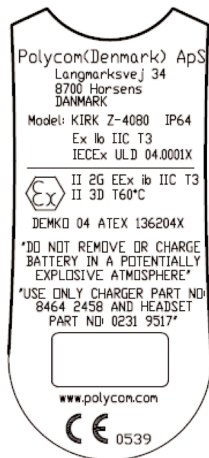

Name and address of manufacturer

KIRK Z-4080

Product name

IP64

IP 64 classification

Ex

KIRK 4080 is approved according to International standards

ib

Intrinsic safe, ib category

IIC

Equipment group II, ib gas group C

T3

Temperature group T3 (relevant for gas)

IECEX ULD 04.0001

International country code for notified body/year/certification number

X

Special warnings concerning the use of KIRK 4080 exist, please refer to the certificate: IECEX ULD 04.0001X

II 2G	Equipment group II, zone 1 (gas)
EEx	KIRK 4080 is approved according to European standards
ib	Intrinsic safe, ib category
IIC	Equipment group II, gas group C
T3	Temperature group T3 (relevant for gas)
II 3D	Equipment group II, zone 2 (dust)
T60°C	Max. surface temperature of KIRK 4080 in use
Ex logo	Specific marking of explosion protection
Demko 04 ATEX 136204	Name of notified body/year/certification number
X	Special warnings concerning the use of KIRK 4080 exist, please refer to the certificate: Demko 04 ATEX 136204X
CE 0539	CE marking and identification number of Notified Body

Notices

Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local telecommunications company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe system, if present, are connected together. This precaution may be particularly important in rural areas.

EMC Cautions: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

If your telephone equipment causes harm to the telephone network, the telephone company may ask you to disconnect the system from the line until the problem has been corrected or they may discontinue your service temporarily.

If possible, they will notify you in advance, but if advance notice is not practical, you should be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the proper functioning of your telephone system. If they do and it is possible, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service. If you experience trouble with this telephone system, disconnect it from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to local regulations. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Note: This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. FCC ID: M72-PKK002.

SAR: Device has been tested for SAR compliance for head and body worn configurations. The highest reported SAR values are: head 0.050m W/g and body worn 0.068 W/g.

IC Note: Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The Term "IC": before the certification/registration number only signifies that the Industry Canada technical specifications were met. Privacy of communications may not be ensured when using this telephone. IC number: 1849C-PKK002.

Power Outage: In the event of a power outage, your cordless telephone will not operate. The cordless telephone requires electricity for operation. You should have a telephone which does not require electricity available for use during power outages.

Information to user: The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note EMC: Cet appareil a été soumis à un essai et jugé conforme aux normes régissant les limites établies pour un dispositif numérique de classe B, conformément aux règlements locaux. Ces limites visent à assurer une protection raisonnable contre des interférences pouvant nuire à l'appareil utilisé dans un secteur résidentiel. Cet équipement génère et utilise des radiofréquences, et peut en émettre. S'il n'est pas installé et utilisé selon les directives fournies, il risque de perturber les radiocommunications. L'exploitation de cet appareil dans un secteur particulier est toutefois susceptible de produire des interférences nuisibles. Si cet équipement provoque des interférences lors de la réception des équipement provoque des interférences lors de la réception des radiofréquences ou des fréquences de télévision, ce qui peut être vérifié en mettant l'appareil hors tension, puis en le remettant sous tension, l'utilisateur doit prendre l'une des mesures suivantes pour corriger la situation:

- réorienter ou relocaliser l'antenne de réception;
- augmenter la distance entre l'appareil et l'antenne de réception;
- brancher l'appareil à une prise d'un circuit différent de celui auquel l'antenne est branchée;
- consulter le détaillant ou un technicien en radiotélévision d'expérience pour obtenir de l'aide.

DRAFT

If in doubt about installation, configuration or the correct functioning of the product please consult the manufacturer:

Polycom Denmark

Customer Support

Langmarksvej 34

8700 Horsens

Denmark

Tel: +45 75602850

emeadksupport@polycom.com

DRAFT



©2007 Polycom, Inc. All rights reserved.
Specifications subject to change without notice.

Polycom Headquarters
4750 Willow Road
Pleasanton
CA 94588 (T)

Polycom Denmark
Langmarksvej 34
DK-8700 Horsens
Tel. +45 7560 2850
Fax +45 7560 2851
emeadk@polycom.com
www.polycom.com