

UNATTENDED TERMINAL XUPT-303

INSTALLATION GUIDE



1. xUPT-303 PACKAGE CONTAINS

- xUPT-303
- Cable clamp (Figure 1)
- 2 Hand screws (Figure 2)
- 2 RS232 to RJ 12 cable (Figure 3)
- P90 dedicated cable (Figure 4) – Used to connect and supply power to XAC P90 (Optional)



Figure 1



Figure 2



Figure 3



Figure 4

2. PORT CONFIGURATION

There are several ports at the back side of terminal (Figure 5).

- Power jack
- 1 Ethernet port
- 3 COM port
- 4 USB port
- 1 mini USB port

NOTE: COM3 port is dedicated to XAC Secure Hybrid Reader module.



Figure 5

- Power Input Requirement:

Input: 12Vdc/3A

3. REMOVAL PROTECTION

Two “Removal Protection” sensors (Figure 6) are located at the right side of front. When install this module, make sure these two sensors are pressed firmly against kiosk bezel.



Figure 6

4. CABLE MANAGEMENT

Step 1: Place the cable clamp on top of cable management channels. The tip on clamp should be aligned to the hole on xUPT-303 (Figure 7)

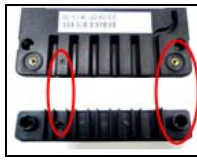


Figure 7

Step 2: Tight the hand screw on the right side of cable clamp (**Figure 8**) until the cable clamp can move loosely.



Figure 8

Step 3: Plug each cable into corresponding port, and collect each cable into cable channel (**Figure 9**). To secure the cables, fasten two hand screws (**Figure 10**).



Figure 9



Figure 10

5. POWER ON THE TERMINAL

Step 1: Connect the power cord to the power adapter

Step 2: Plug the power adapter into an electrical outlet or into a surge suppressor (recommended).

Step 3: Plug the power cord into the power jack (**Figure 11**)



Figure 11

Note: If P90 is required, connecting P90 to xUPT-303 before power on xUPT-303, or P90 will initiate fail.

6. USING THE CONTACTLESS CARD READER

Contactless reader antenna is around the display. It will light up and blinking the 1st LED when xUPT-303 is powered on and that means reader is working normally. Place contactless card near the display (**Figure 14**). The contactless antenna should detect the card and read the card data.

Note: Make sure the xUPT-303 contactless antenna is away from other contactless antenna at least 8 inches to avoid interfere.



Figure 14

7. CONNECTING XAC SECURE HYBRID READER (P90)

COM3 port is dedicated to XAC Secure Hybrid Reader module. When connecting P90 to xUPT-303, please using the P90 dedicated cable (**Figure 4**), and make sure plug the RJ connector into COM3 port of xUPT-303 (**Figure 15**); otherwise, P90 will not function.

Note: Connecting P90 to xUPT-303 before power on the xUPT-303, otherwise P90 will initiate fail.
Note: Do not plug any other module or connector into COM3 port, this will cause unpredictable error.



Figure 15

FCC statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF exposure warning

The equipment complies with FCC RF exposure limits set forth for an uncontrolled environment. The equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

IC Radiation Exposure Statement for Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

"CAUTION: Risk of Explosion if Battery is replaced by an Incorrect Type. Dispose of Used Batteries According to the Instructions."



XAC Automation Corporation
886-3-577-2738
www.xac.com.tw

The above information is the exclusive intellectual property of XAC Automation Corporation and shall not be disclosed, distributed or reproduced without permission of XAC Automation Corporation.

XAC AUTOMATION CORP. shall not be held liable for technical and editorial omissions or errors made herein; nor for incidental or consequential damages resulting from the furnishing, performance or use of his material.