


### 3. SpaceLink Home Gateway Utilities

After installation, you can launch the utilities through the Start menu.

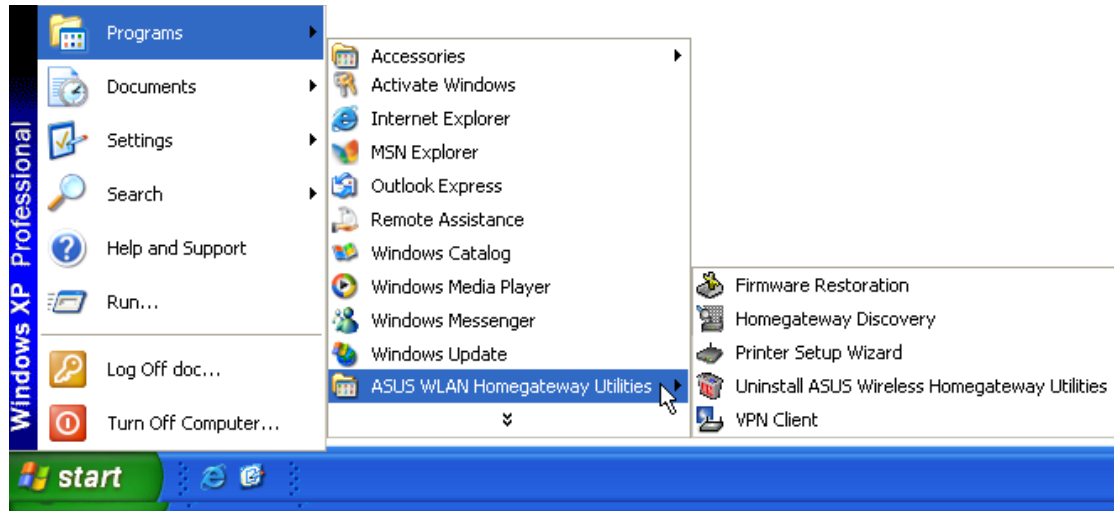

### Connecting to the SpaceLink Web Manager

#### Wired Ethernet Connection

Besides using a network hub, you can also connect a LAN cable from your computer's network card to the Home Gateway using either a straight or crossover cable because the SpaceLink Home Gateway LAN and WAN RJ-45 ports have auto-crossover capability.

#### Wireless Connection

If you are using a Notebook PC with a wireless adapter, you can connect to the SpaceLink Homegateway Web Manager without a wired Ethernet connection.

### Home Gateway Discovery

Run the **ASUS Homegateway Discovery** from the **Start** menu and click **Config** on the device.

#### Manually Entering the Address

You can also open your PC's web browser and enter the IP address of the ASUS SpaceLink Home Gateway depending on the port you are using.


## Chapter 3 - Home Gateway Utilities

If your computer is connected to the WAN port use


**http://(WAN Port IP Address):8080**

If your computer is connected to the LAN port use:

**http://192.168.123.1**

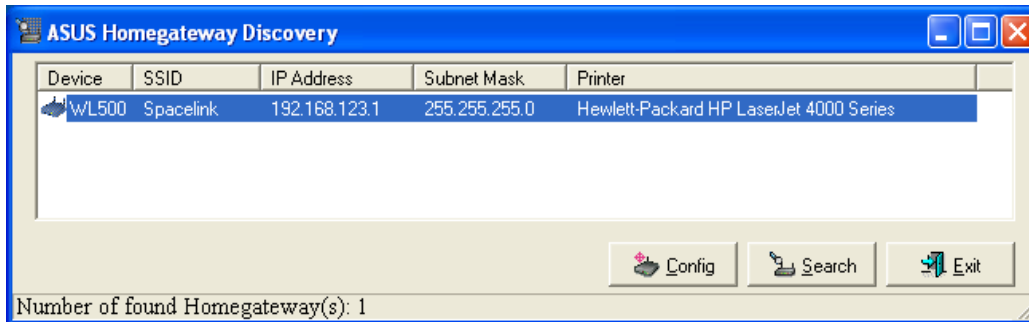


Web access through the WAN port (over the Internet) is disabled by default so that the above private IP can be used for configuration access. If Internet access through the WAN port is enabled by the user, port 8080 must be used for configuration access. In this case, you would enter the following: **http://(WAN Port IP Address):8080** in your web browser.

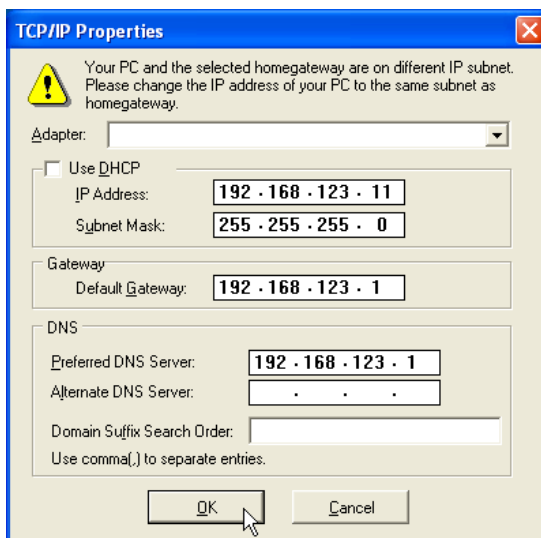

If your computer's IP is not on the same subnet as the SpaceLink Home Gateway, you will be asked to change it. The IP address can be any number from 2 to 254 that is not used by another device.

**Using a proxy server for your LAN requires that you set an exception for the SpaceLink Home Gateway or else connection will fail.**

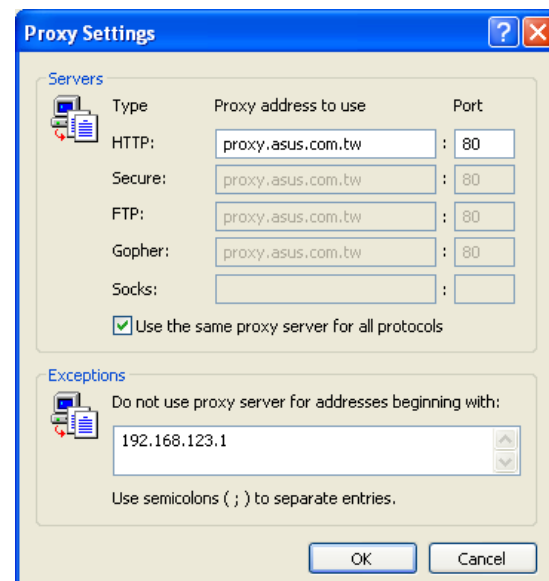

## Chapter 3 - Home Gateway Utilities

If you cannot find any the SpaceLink Home Gateways due to a problem in the IP settings, push and hold the “Restore” button over five seconds to restore factory default settings.


### User Name and Password

Once connected, a window will ask for the User name and Password in order to log in. The factory default values are “**admin**” and “**admin**”.



### Home Page


After logging in, you will see the ASUS HomeGateway home page.

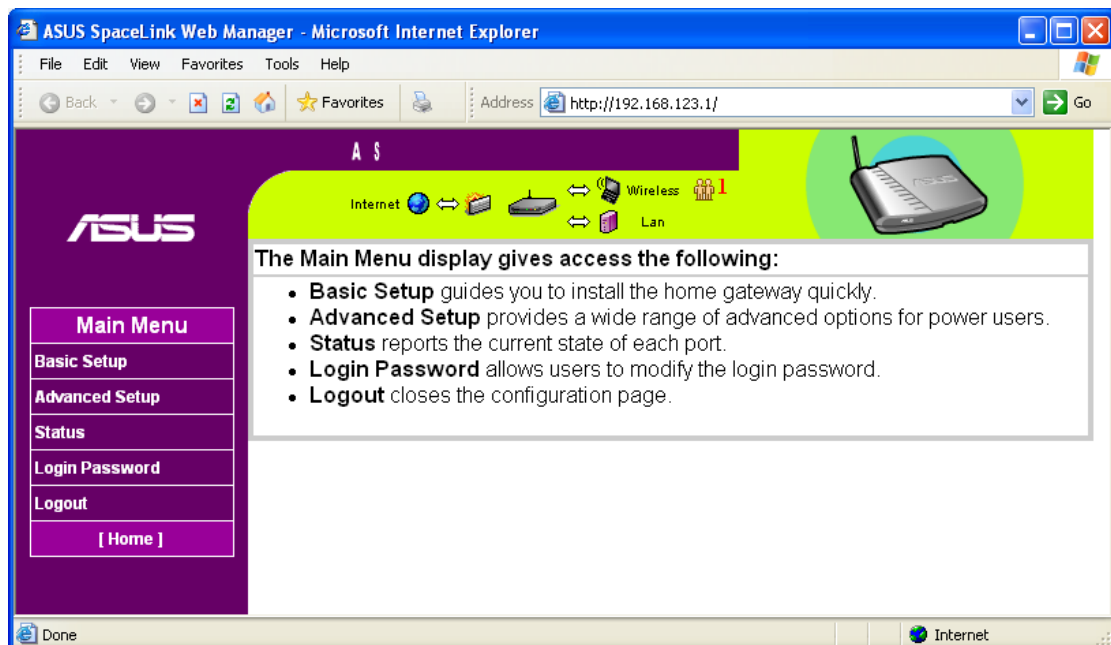

### Login Password


You can find “Login Password” on the Main Menu. This page will allow you to change the default password “admin” (lower case) to any password of your choice. You can enter any usable characters between 1-16 characters long (cannot be left blank). Click **Modify** button to save your new password. If you forget the SpaceLink Home Gateway’s password, you can reset the SpaceLink Home Gateway to its factory settings (see troubleshooting).

**Note: The password is case sensitive.**

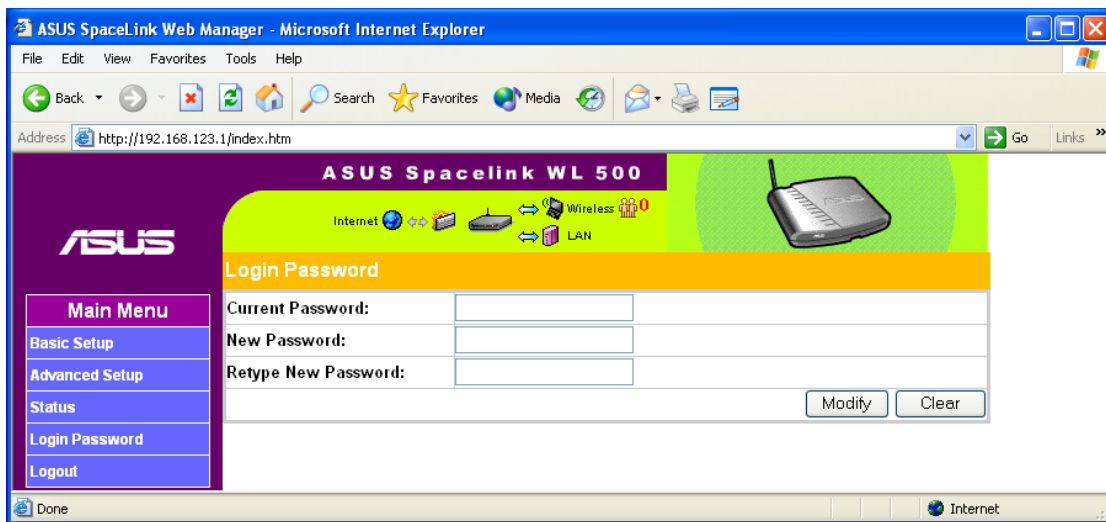

### Basic Setup

Select **Basic Setup** from the menu on the left.

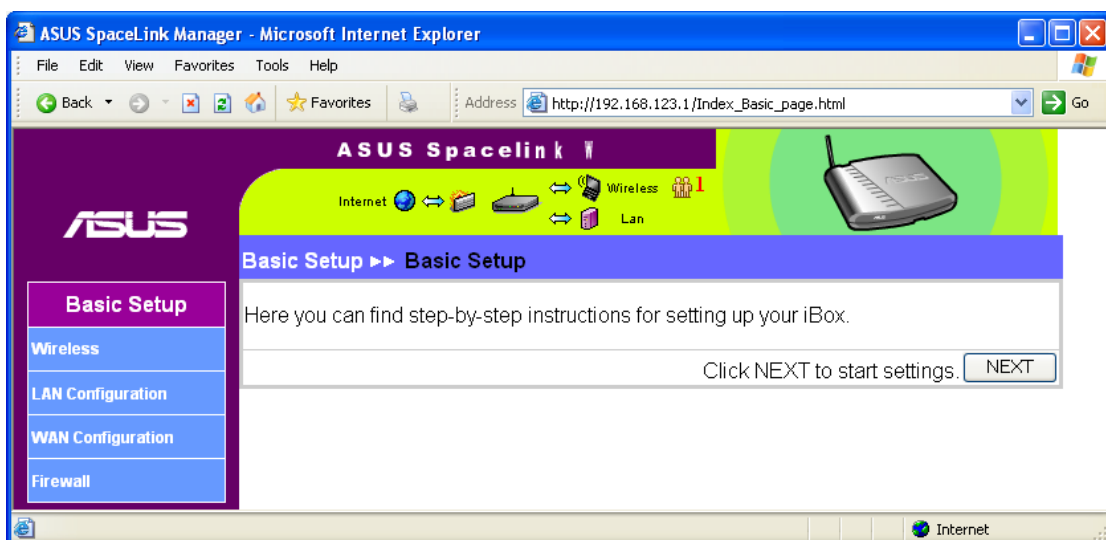

Click **Next** to enter the wireless configuration page.

## Chapter 3 - Home Gateway Utilities

### Status

The Status page available from the Main Menu gives you all the necessary information for monitoring the SpaceLink Home Gateway's condition.

The screenshot shows the ASUS SpaceLink Web Manager interface in Microsoft Internet Explorer. The browser address bar shows `http://192.168.123.1/index.htm`. The page features a purple sidebar with a 'Main Menu' containing links for 'Basic Setup', 'Advanced Setup', 'Status', 'Login Password', 'Logout', and '[ Home ]'. The main content area displays system and network information:

- System:** ELAPSED TIME SINCE BOOT: 0 Day : 0 Hour : 9 Min : 22 Sec
- Wireless:** SSID: Spacelink, Channel: 6, Encryption (WEP): Off, Number of Associated Stations: 1
- LAN:** IP Address: 192.168.123.1, Subnet Mask: 255.255.255.0, DHCP Server: Enabled, LAN Port Link State: Linked
- WAN:** IP Addressing Method: PPPoE, IP Address: 61.230.105.240, Subnet Mask: 0.0.0.0, Gateway: 61.230.96.254, DNS Server 1: 168.95.1.1, WAN Port Link State: Linked, WAN Port Connection State: OK
- Printer Server:** Connected Printer Status: on-line, User in service: [empty]

A 'Refresh' button is located at the bottom right of the main content area. The browser status bar at the bottom indicates 'Opening page http://192.168.123.1/index\_title.html...' and 'Internet' connectivity.

3. Utilities

See next page for information on this page.

## Chapter 3 - Home Gateway Utilities

---

### Status Details

Details of the Status page items are described in the configuration pages following this page.

### Wireless

**Number of Associated Stations** - Tells you how many wireless mobile clients are connected to the SpaceLink Home Gateway.

### LAN

**DHCP Server** - This shows either Enabled or Disabled.

**LAN Port Link State** - Linked or Not Linked (indicates whether the cable is plugged in or not).

### WAN

**WAN Port Link State** - Linked or Not Linked (indicates whether the cable is plugged in or not).

**WAN Port Connection State:** Disconnected, Connecting, OK (OK indicates that the IP address is working).

### Printer Server

**Connected Printer Status:** There are five possible statuses: Off-Line (no printer), On-Line (ready), Error (problem), Out of Paper, Busy (someone is printing).

**User in Service:** Shows the IP address of the user when the status is busy.

### Basic Setup - Wireless

This page allows you to configure the wireless settings. See next page for descriptions on each setting.

**ASUS Spacelink WL 500**

Internet Wireless Lan

#### Basic Setup >> Wireless

Assign an identification string, consisting of up to 32 characters, for your WLAN.

SSID:

Select the operating radio channel.

Channel:

Select 1, 2, 5.5 & 11 Mbps to maximize performance. Use 1 & 2 Mbps only when the backward compatibility is needed for some old WLAN cards whose maximal bit rate is 2 Mbps.

Basic Data Rate:  1 & 2 Mbps  1, 2, 5.5 & 11 Mbps

Enable encryption mechanism (WEP) to protect your data from eavesdroppers?

WEP:

Give a magic word to generate the WEP keys automatically or leave this field blank and type in the keys manually.

Magic Word:

WEP Key 1 (10 or 26 hex digits):

WEP Key 2 (10 or 26 hex digits):

WEP Key 3 (10 or 26 hex digits):

WEP Key 4 (10 or 26 hex digits):

Default Key:

Authentication Method:

Save:	Save the above settings and continue.
Restore:	Clear the above settings and restore the settings in effect.
Finish:	Finish all settings and restart the Home Gateway now.

3. Utilities

**IMPORTANT:** New settings will only take effect after clicking the “Finish” button and waiting for the SpaceLink Home Gateway to restart.

## Chapter 3 - Home Gateway Utilities

---

### SSID & Channel

The SSID is an identification string of up to 32 ASCII characters that differentiate one SpaceLink Home Gateway or Access Point from another. The SSID is also referred to as the “ESSID” or “Extended Service Set ID.” You can use the default SSID and radio channel unless more than one SpaceLink Home Gateway or Access Point is deployed in the same area. In that case, you should use a different SSID and radio channel for each SpaceLink Home Gateway or Access Point. All the SpaceLink Home Gateways and SpaceLink 802.11b client adapters must have the same SSID to allow a wireless mobile client to roam between the SpaceLink Home Gateways. By default, the SSID is set to “default”.

### Channel

IEEE 802.11b devices are direct sequence spread spectrum devices that spread a radio signal over a range of frequencies. The range of frequencies used by a direct sequence device is called a Channel.

The IEEE 802.11b specification supports up to 14 overlapping Channels for radio communication. But only 11 Channels are supported in the United States and therefore on the SpaceLink Home Gateway. To minimize interference, configure each the SpaceLink Home Gateway to use Non-overlapping channels. Non-overlapping channels have 25Mhz separation beginning at the first allowed channel for the country (for the US and most of Europe, channels 1, 6 & 11 are used).

Make sure that the SpaceLink Home Gateways sharing the same Channel (or Channels close in number) are as far away from each other as possible, based on the results of your site survey of the facility. You can find the site survey utility in the SpaceLink PC card or CF card setup CD.

### Basic Data Rate

Select “1, 2, 5.5 & 11Mbps” to maximize performance. Use “1 & 2 Mbps” only when backward compatibility is needed for some older wireless LAN cards with a maximum bit rate of 2Mbps.

The IEEE 802.11b specification supports four data rates: 11 Mbps, 5.5 Mbps, 2 Mbps, and 1 Mbps. As a wireless mobile client travels further and further away from the SpaceLink Home Gateway, the data rate automatically decreases in order to maintain a usable radio connection. Therefore, a client that is close to an the SpaceLink Home Gateway may operate at 11 Mbps, but a client that is far away from the SpaceLink Home Gateway may operate at 2 Mbps.



### Supported Clients

802.11b products can operate at 11 Mbps, 5.5 Mbps, 2 Mbps or 1 Mbps. This allows 802.11b devices to communicate with any existing 802.11 direct sequence devices that operate only at 1 or 2 Mbps. By default, the SpaceLink Home Gateway will support both 802.11b and 2 Mbps 802.11 direct sequence clients.

### WEP

The IEEE 802.11b standard specifies an optional encryption feature, known as Wired Equivalent Privacy or WEP, that is designed to provide a wireless LAN with a security level equal to what is found on a wired Ethernet network.

WEP encrypts the data portion of each packet exchanged on the 802.11b network using either a 64-bit or 128-bit encryption algorithm. In addition, WEP is also used in conjunction with the optional Shared Key Authentication algorithm to prevent unauthorized devices from associating with an 802.11b network.

Enabling WEP can protect your data from eavesdroppers. If you do not need this feature, select “no” to skip the following setting. The SpaceLink Home Gateway supports both 64-bit and 128-bit encryption using the Wired Equivalent Privacy (WEP) algorithm. Select the type of encryption you want to use (64 or 128 bit) and configure one to four WEP Keys. The “128-bit” method is more secure than the “64-bit”.

### 64/128bits versus 40/104bits

You may be confused about configuring WEP encryption, especially when using multiple wireless LAN products from different vendors. There are two levels of WEP Encryption: 64 bits and 128 bits.

Firstly, 64 bit WEP and 40 bit WEP are the same encryption method and can interoperate in the wireless network. This lower level of WEP encryption uses a 40 bit (10 Hex character) as a “secret key” (set by user), and a 24 bit “Initialization Vector” (not under user control). This together makes 64 bits (40 + 24). Some vendors refer to this level of WEP as 40 bits and others refer to this as 64 bits. ASUS SpaceLink products use the term 64 bits when referring to this *lower* level of encryption.

Secondly, 104 bit WEP and 128 bit WEP are the same encryption method and can interoperate in the wireless network. This higher level of WEP encryption uses a 104 bit (26 Hex character) as a “secret key” (set by user), and a 24 bit “Initialization Vector” (not under user control). This together

## Chapter 3 - Home Gateway Utilities

---

makes 128 bits (104 + 24). Some vendors refer to this level of WEP as 104 bits and others refer to this as 128 bits. ASUS SpaceLink products use the term 128 bits when referring to this *higher* level of encryption.

### Magic Word & Generate

Automatically generate four WEP keys. A WEP key is either 10 or 26 hexadecimal digits (0~9, a~f, and A~F) based on whether you select 64 bit or 128 bit in the WEP pull-down menu. Type a combination of up to 64 letters, numbers, or symbols in the Magic Word column, then the SpaceLink Home Gateway Manager uses an algorithm to generate four WEP keys for encryption. If you want to type in the keys manually, leave this field blank.

The SpaceLink family of products all use the same algorithm to generate the keys so that they can all use the same WEP key.

---

**Note: This function eases users from having to remember their passwords and is compatible to ASUS SpaceLink family of products. But this is not as secure as manual assignment.**

---

### WEP Key

At most four keys can be set. A WEP key is either 10 or 26 hexadecimal digits (0~9, a~f, and A~F) based on whether you select 64 bit or 128 bit in the WEP pull-down menu. The home gateway and ALL of its wireless clients MUST have at least the same default key.

### Default Key

The Default Key field lets you specify which of the four encryption keys you use to transmit data on your wireless LAN. As long as the SpaceLink Home Gateway or wireless mobile client with which you are communicating has the same key in the same position, you can use any of the keys as the default key. If the home gateway and ALL of its wireless clients use the same four WEP keys, select “key rotation” to maximize security. Otherwise, choose one key in common as the default key.

### Authentication Method

It is suggested to select “Shared Key Only”. If “Open System Only” or “Shared Key and Open System” is used, the home gateway may accept connection requests from unauthorized wireless clients.

---

**Click the “Finish” button to save your new settings and restart the SpaceLink Home Gateway or click “Save” and restart later.**

---

### Basic Setup - LAN Configuration

This page does not require any settings for general use.

**ASUS Spacelink WL 500**

Internet Wireless Lan

#### Basic Setup >> LAN Configuration

The home gateway supports up to 254 IP addresses for your local network. The IP address of a local machine can be assigned manually by the network administrator or obtained automatically from the home gateway if the DHCP server is enabled. By default, the following IPs have been reserved for PPTP connections: **192.168.x.2 ~ 192.168.x.9**

#### IP Settings

IP settings for the Home Gateway:

**IP Address:** 192 . 168 . 123 . 1

**Subnet mask:** 255 . 255 . 255 . 0

**Host name:** spacelink

#### DHCP Server

If the DHCP server is enabled, a local machine adopting automatic TCP/IP configuration can acquire the following settings from the home gateway: IP address, address lease time, Domain Name Server (DNS), and Domain Name. The assigned IP is selected from the IP pool, a predefined continuous address segment.

Enable the DHCP server?  Yes  No

**IP Pool Starting Address:** 192 . 168 . 123 . 21

**IP Pool Ending Address:** 192 . 168 . 123 . 254

**DNS Server 1:** . . . .

**DNS Server 2:** 192 . 168 . 123 . 1

**Domain Name:** home

**IP Address Lease Time:** 86400 seconds

Save:	Save the above settings and continue.
Restore:	Clear the above settings and restore the settings in effect.
Finish:	Finish all settings and restart the Home Gateway now.


Click the “Finish” button to save your new settings and restart the SpaceLink Home Gateway or click “Save” and restart later.

### Basic Setup - WAN Configuration

The settings that you need to perform will vary depending on the role that your SpaceLink Home Gateway will play.


### Network Backbone

No software setting is necessary in the SpaceLink Home Gateway.

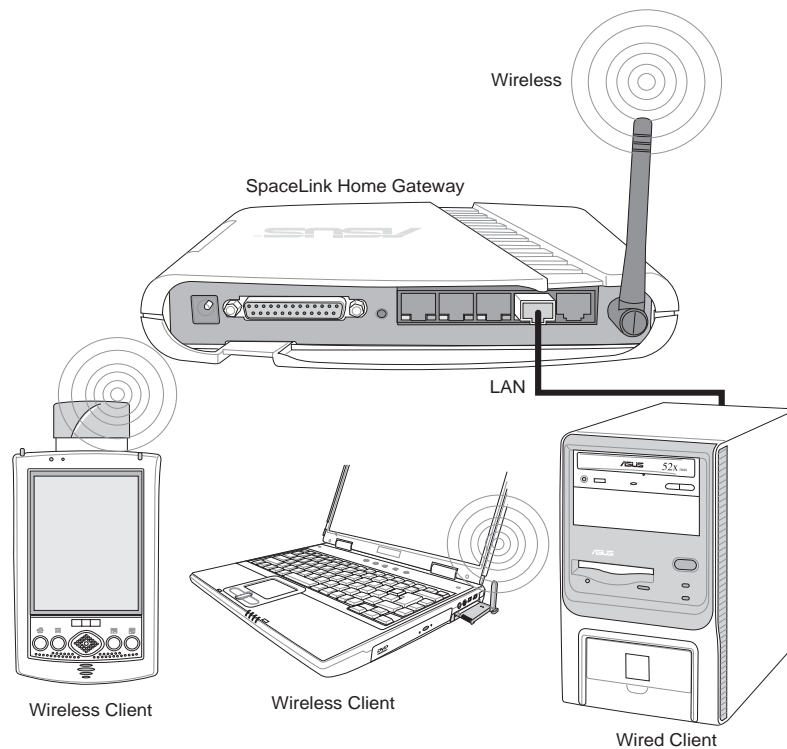


# Chapter 3 - Home Gateway Utilities

## Agent to an ISP

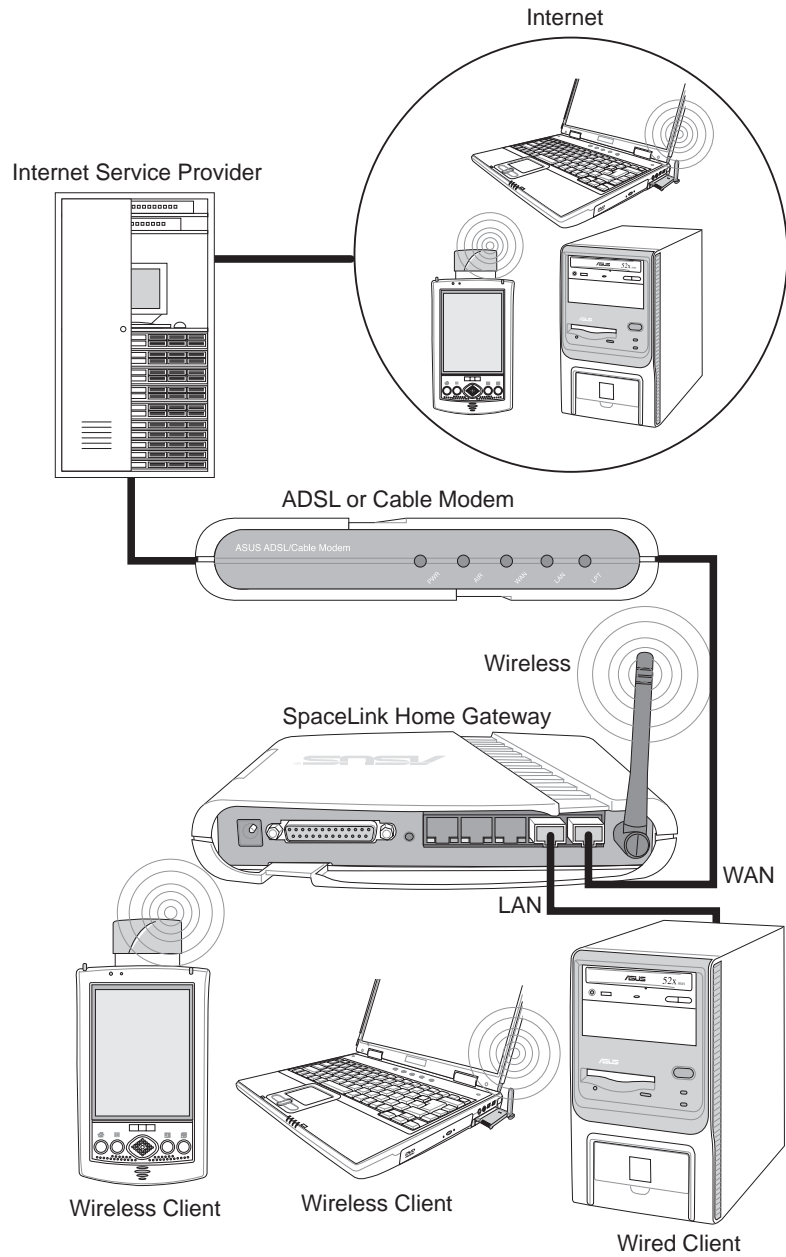

3. Utilities

## Agent to an ISP (Cont.)

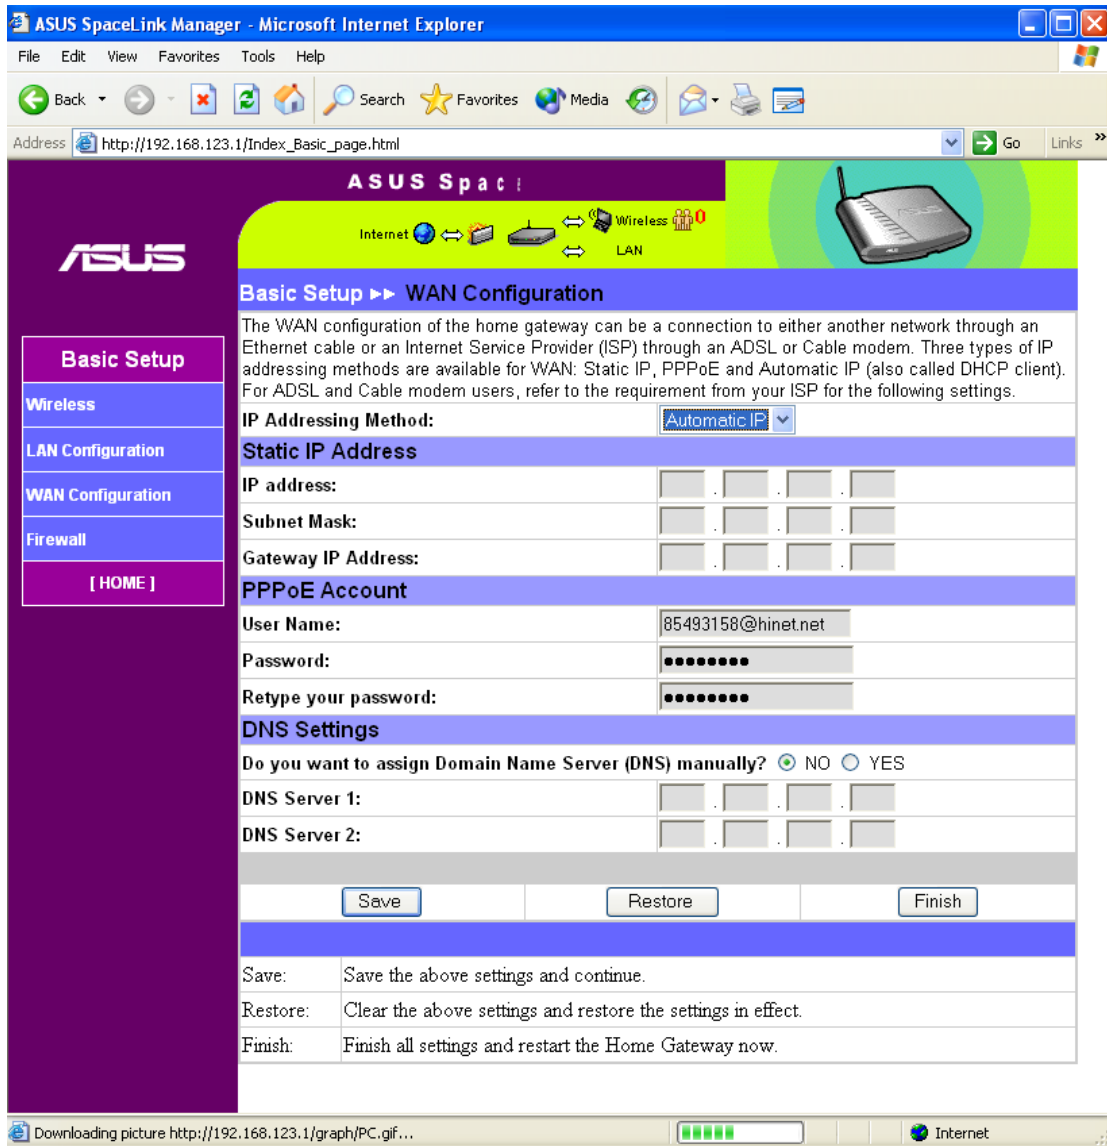

### Static IP Address

**IP Address** - Normally, this is Dynamic (because fixed IP accounts cost more) and should be set to Automatic IP. Do not use “Static IP” if your ISP’s documentation does not mention an IP Address. If your ISP provided an IP Address with instructions to use it, select Static IP from “IP Addressing Method” and enter the address into the provided field.

### PPPoE Account

**User Name** - The name of your Internet account provided by your ISP. Some ISPs work with the entire account name along with the hosting domain (such as yourname@yourdomain.com) and others require that you enter only the account name (yourname). See the example above.

## Chapter 3 - Home Gateway Utilities

---

### Agent to an ISP (Cont.)

**Password** - Enter the password for your Internet account.

**Retype your password** - Re-enter the password for confirmation.

### DNS Settings


**DNS Server** - Normally this is automatic and you would answer “NO” to the question about manually assigning DNS. If you are given instructions from your ISP to enter DNS addresses, select “YES” to manually assigning DNS and enter the IP addresses here. You can set the DNS server anytime using any connection type (Static IP, PPPoE, or Automatic IP).

---

**Click the “Finish” button to save your new settings and restart the SpaceLink Home Gateway or click “Save” and restart later.**

---

### Agent to Another Network

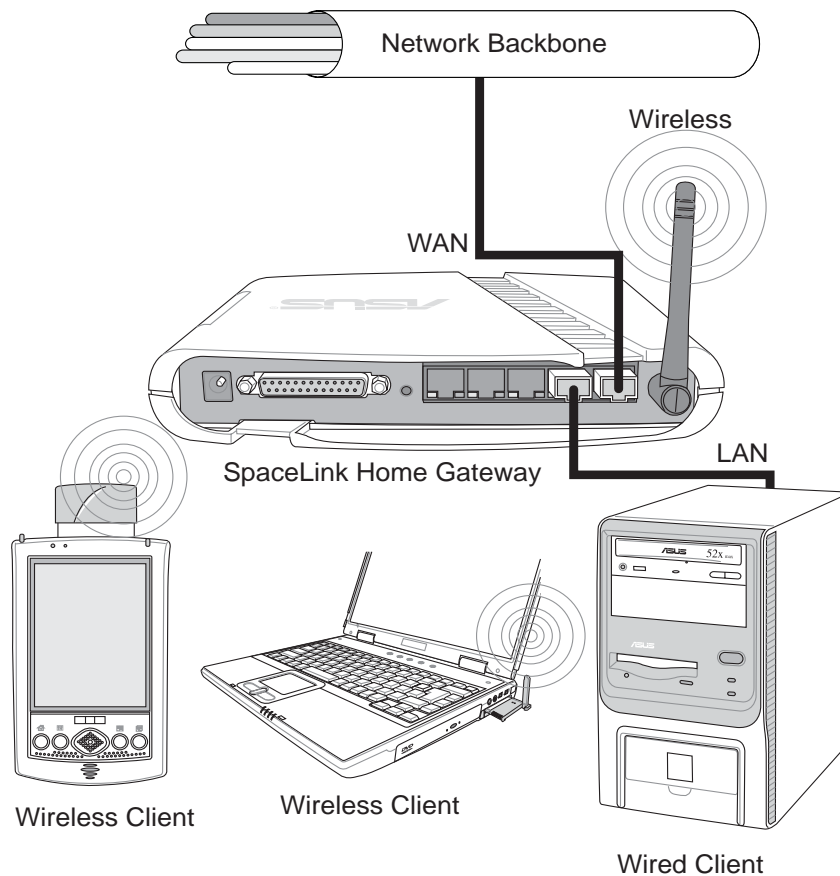

To connect to an existing network, the IP address of the home gateway can be assigned manually or automatically obtained from a DHCP server. In the first case, fill in the IP address and the DNS address(es).

### Automatic IP

This parameter determines if the SpaceLink Home Gateway will send out a DHCP request during bootup. If you have a DHCP server on the network, set this option so that the SpaceLink Home Gateway can receive an automatic IP address assignment.

If you have a DHCP (Dynamic Host Configuration Protocol) server on the network, then the DHCP server will automatically assign the SpaceLink Home Gateway an IP address when the SpaceLink Home Gateway is powered up. To determine what IP address has been assigned to the SpaceLink Home Gateway, review the IP address on the “Status” page available on the “Main Menu”.



## Chapter 3 - Home Gateway Utilities

### Static IP

The SpaceLink Home Gateway also accepts a static IP address. You may manually configure the IP address and subnet mask on the “IP Config” page. Enter an IP address and a subnet mask in the field provided to assign the SpaceLink Home Gateway a static IP address. If you don’t know your Gateway setting, leave it empty (not 0.0.0.0).

The screenshot shows the ASUS SpaceLink Manager interface in Microsoft Internet Explorer. The browser window title is "ASUS SpaceLink Manager - Microsoft Internet Explorer" and the address bar shows "http://192.168.123.1/Index\_Basic\_page.html". The page features a navigation menu on the left with options: Basic Setup (selected), Wireless, LAN Configuration, WAN Configuration, Firewall, and [HOME]. The main content area is titled "Basic Setup >> WAN Configuration" and includes a description of WAN configuration options. The "IP Addressing Method" is set to "Static IP". The "Static IP Address" section contains the following fields: IP address (192.168.39.33), Subnet Mask (255.255.255.0), and Gateway IP Address (empty). The "PPPoE Account" section includes fields for User Name (85493158@hinet.net), Password (masked), and Retype your password (masked). The "DNS Settings" section has a radio button for "NO" selected under "Do you want to assign Domain Name Server (DNS) manually?". Below the settings are "Save", "Restore", and "Finish" buttons. A legend at the bottom explains the actions: "Save" saves settings and continues, "Restore" clears settings and restores defaults, and "Finish" restarts the gateway.


IP Addressing Method:	Static IP
<b>Static IP Address</b>	
IP address:	192 . 168 . 39 . 33
Subnet Mask:	255 . 255 . 255 . 0
Gateway IP Address:	
<b>PPPoE Account</b>	
User Name:	85493158@hinet.net
Password:	.....
Retype your password:	.....
<b>DNS Settings</b>	
Do you want to assign Domain Name Server (DNS) manually? <input checked="" type="radio"/> NO <input type="radio"/> YES	
DNS Server 1:	
DNS Server 2:	

Save: Save the above settings and continue.  
Restore: Clear the above settings and restore the settings in effect.  
Finish: Finish all settings and restart the Home Gateway now.

3. Utilities

### Firewall


The SpaceLink Home Gateway does not only use basic NAT to protect your local network. The SPI (Stateful Packet Inspection) firewall filters out advanced forms of attacks from the Internet. A SPI firewall remembers the context of connections and continuously updates this information in dynamic connection tables.

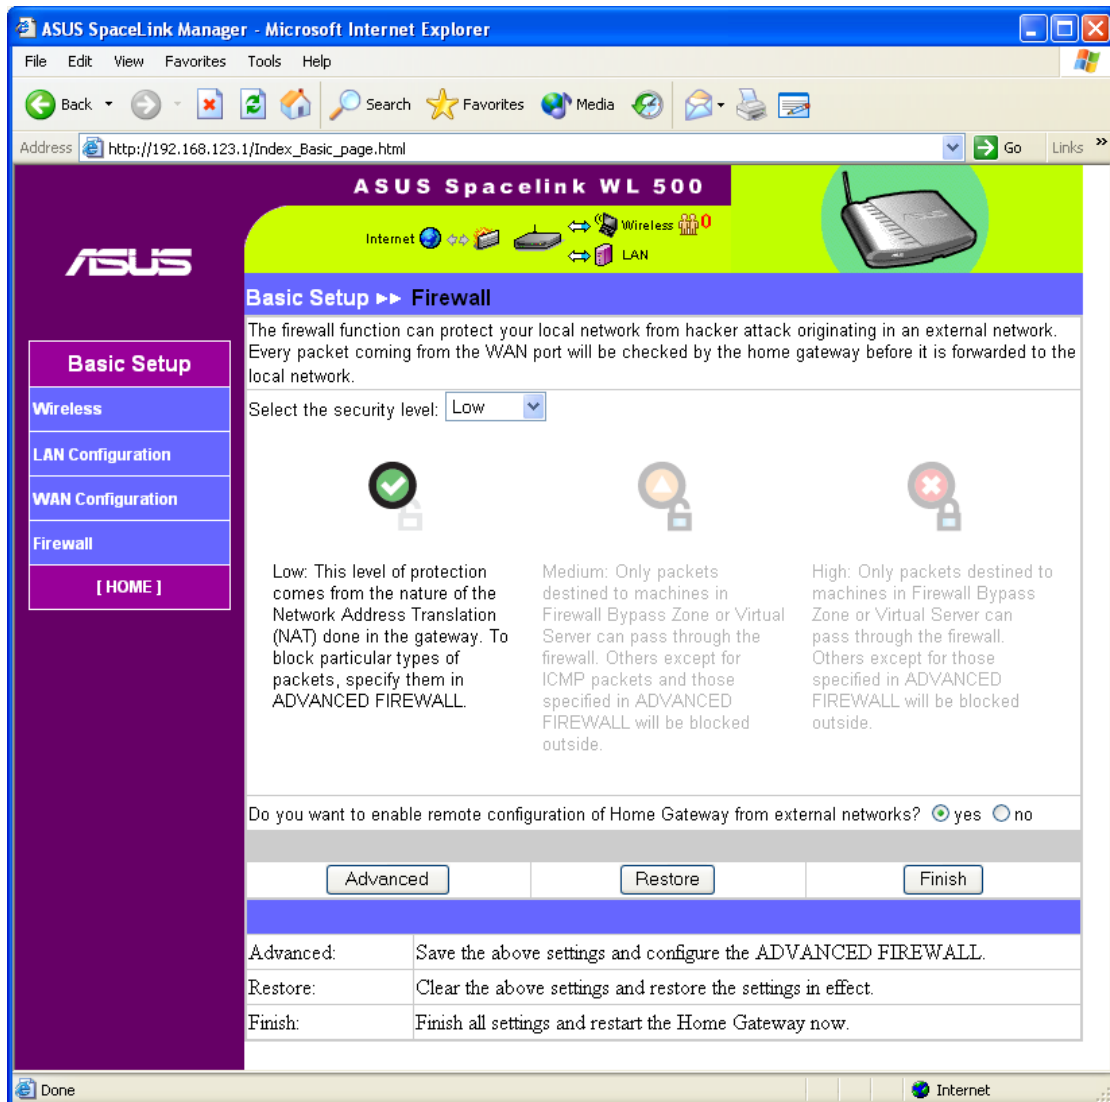

Select the security level for the firewall that you require. “Low” should be good enough for most home users. “Medium” and “High” levels can provide more protection for your local network but they may also stop you from executing some Internet applications. These problems can be overcome through advanced configuration options by clicking on the **Advanced** button.

**Click the “Finish” button to save your new settings and restart the SpaceLink Home Gateway or click “Save” and restart later.**

## Wireless Access Control

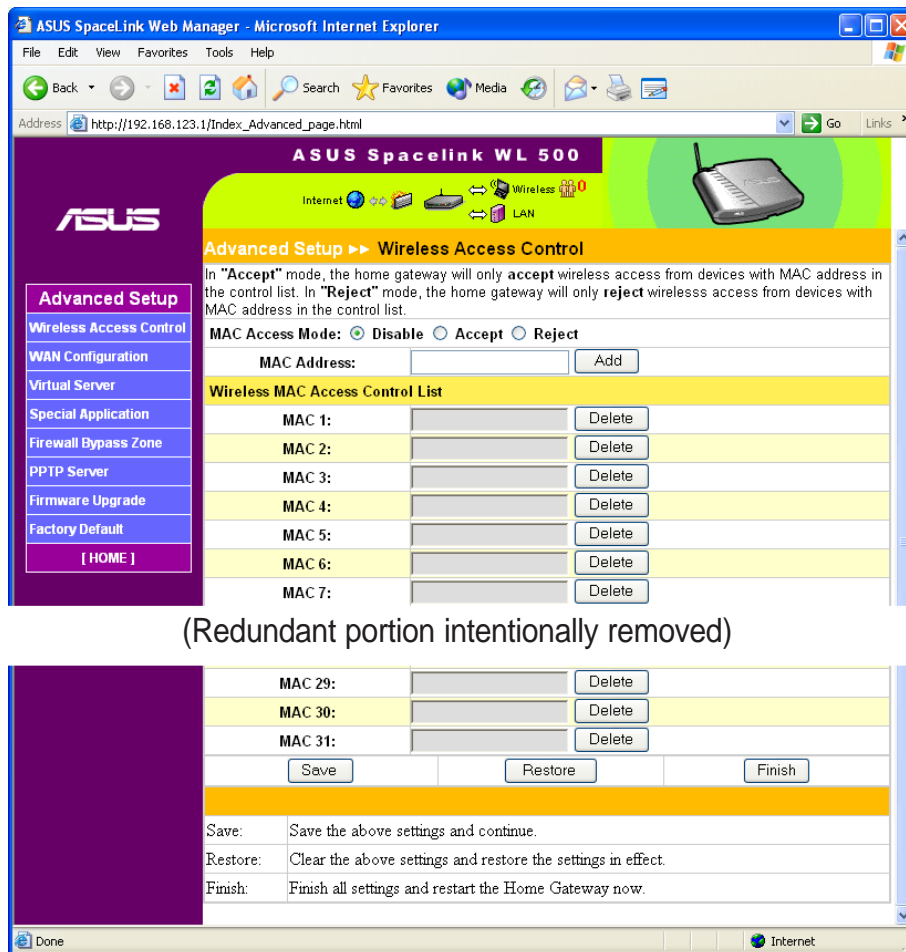

To add security, the SpaceLink Home Gateway has the ability to only associate with or not associate with wireless mobile clients that have their MAC address entered into this page.

The default setting of “Disable” will allow any wireless mobile client to connect. “Accept” will only allow those entered into this page to connect. “Reject” will prevent those entered into this page from connecting.

### Adding a MAC Address


To add a MAC address, enter the 12 hexadecimal characters into the white box next to “MAC Address:” and click the **Add** button. The MAC address will be placed in the control list below. Only a total of 31 MAC addresses can be entered into this page so determine which will be the lesser; those you wish to accept or those you wish to reject and click the appropriate “MAC Access Mode”.

---

**Click the “Finish” button to save your new settings and restart the SpaceLink Home Gateway or click “Save” and restart later.**

---

# Advanced WAN Configuration

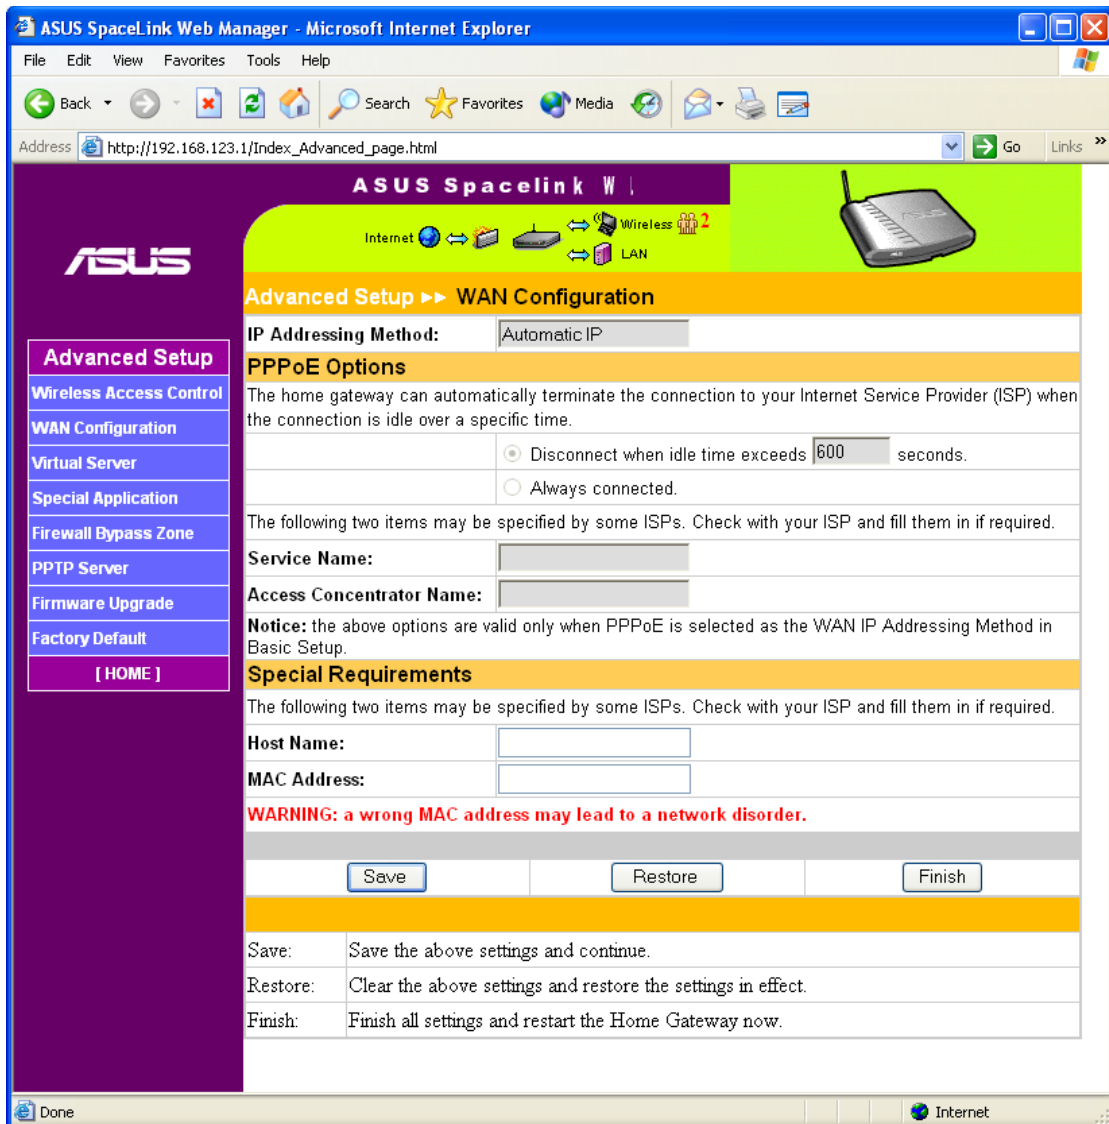

**IP Addressing Method** - This displays the current selection in the Basic Setup WAN Configuration.

### PPPoE Options

The SpaceLink Home Gateway can automatically terminate the connection to your Internet Service Provider (ISP) when the connection is idle over a specific time.

**Click the “Finish” button to save your new settings and restart the SpaceLink Home Gateway or click “Save” and restart later.**

## Chapter 3 - Home Gateway Utilities

---

**Disconnect when idle time exceeds seconds** - Enter the number of seconds of inactivity to disconnect you from your ISP.

**Always connected** - This will always keep you connected to your ISP and reconnect if connection fails.

The following two items may be specified by some ISPs. Check with your ISP and fill them in if required.

**Service Name** - Fill this in if required by your ISP.

**Access Concentrator Name** - Fill this in if required by your ISP.

---

**Note:** The above options are valid only when PPPoE is selected as the WAN IP Addressing Method in Basic Setup. Otherwise they will be grayed out.

---

### Special Requirements

The following two items may be specified by some ISPs. Check with your ISP and fill them in if required.

**Host Name** - Fill this in if required by your ISP.


**MAC Address** - Fill this in if required by your ISP.

---

**WARNING:** A wrong MAC address may lead to a network disorder.

---

## Virtual Server

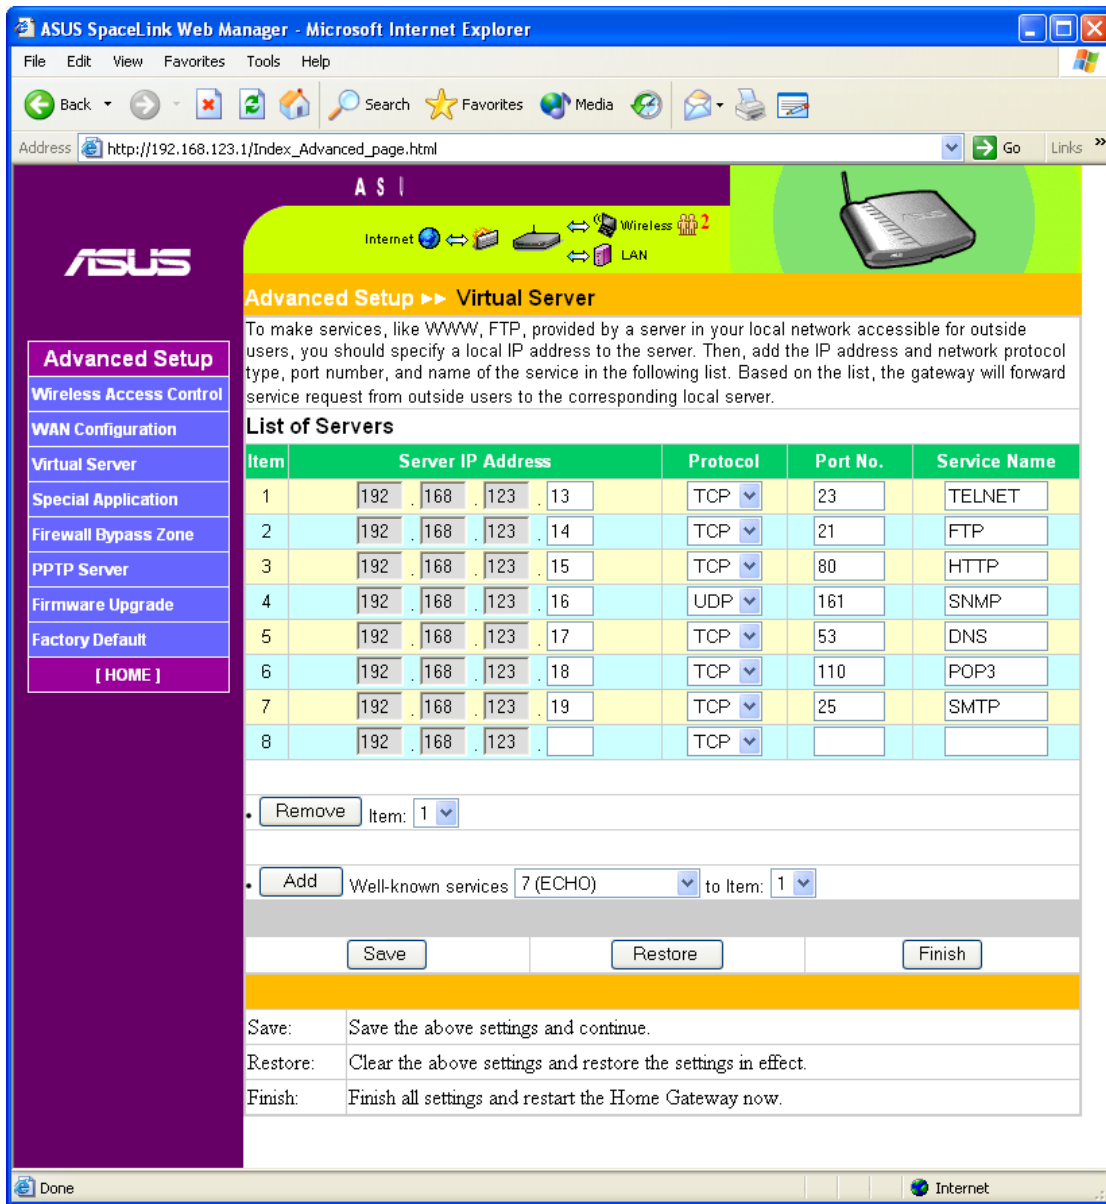

To make services, like WWW, FTP, provided by a server in your local network accessible for outside users, you should specify a local IP address to the server. Then, add the IP address and network protocol type, port number, and name of the service in the following list. Based on the list, the gateway will forward service request from outside users to the corresponding local server.

**Click the “Finish” button to save your new settings and restart the SpaceLink Home Gateway or click “Save” and restart later.**

## Chapter 3 - Home Gateway Utilities

---

### List of Servers

Enter the IP address of the servers under the SpaceLink Home Gateway. Select a protocol, port number, and enter any description you want for the service name.


### Removing an Entry

To remove one of the 8 entries, select the “Item” (1 2 3 4 5 6 7 8) number and click the **Remove** button.

### Adding an Entry

Besides entering the data manually, you can also select from a commonly used entries. To add an often used service to one of the 8 entries, select the service {7 (ECHO) 21 (FTP) 23 (TELNET) 25 (SMTP) 53 (DNS) 79 (FINGER) 80 (HTTP) 110 (POP3) 161 (SNMP) 162 (SNMP TRAP)} and select the “Item” (1 2 3 4 5 6 7 8). Click the **Add** button to replace the entry that you have selected.

# Special Application

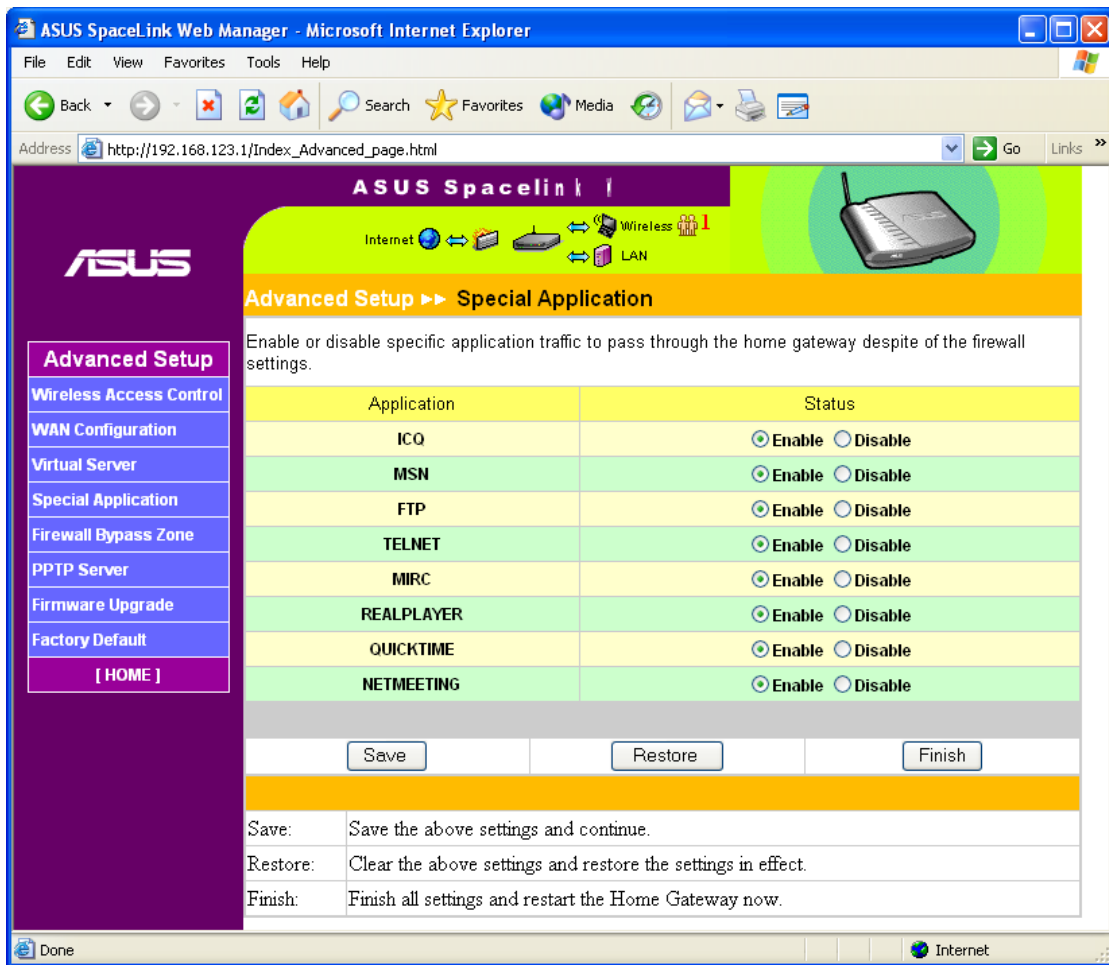

Enable or disable specific application traffic to pass through the home gateway despite any firewall settings in the SpaceLink Home Gateway.

Application Status - These commonly used applications are normally allowed to pass through the firewall. Choose Disable if you do not want users to use the following applications:

ICQ, MSN, FTP, TELNET, MIRC, REALPLAYER, QUICKTIME, NETMEETING.


---

**Click the "Finish" button to save your new settings and restart the SpaceLink Home Gateway or click "Save" and restart later.**

---



## Firewall Bypass Zone

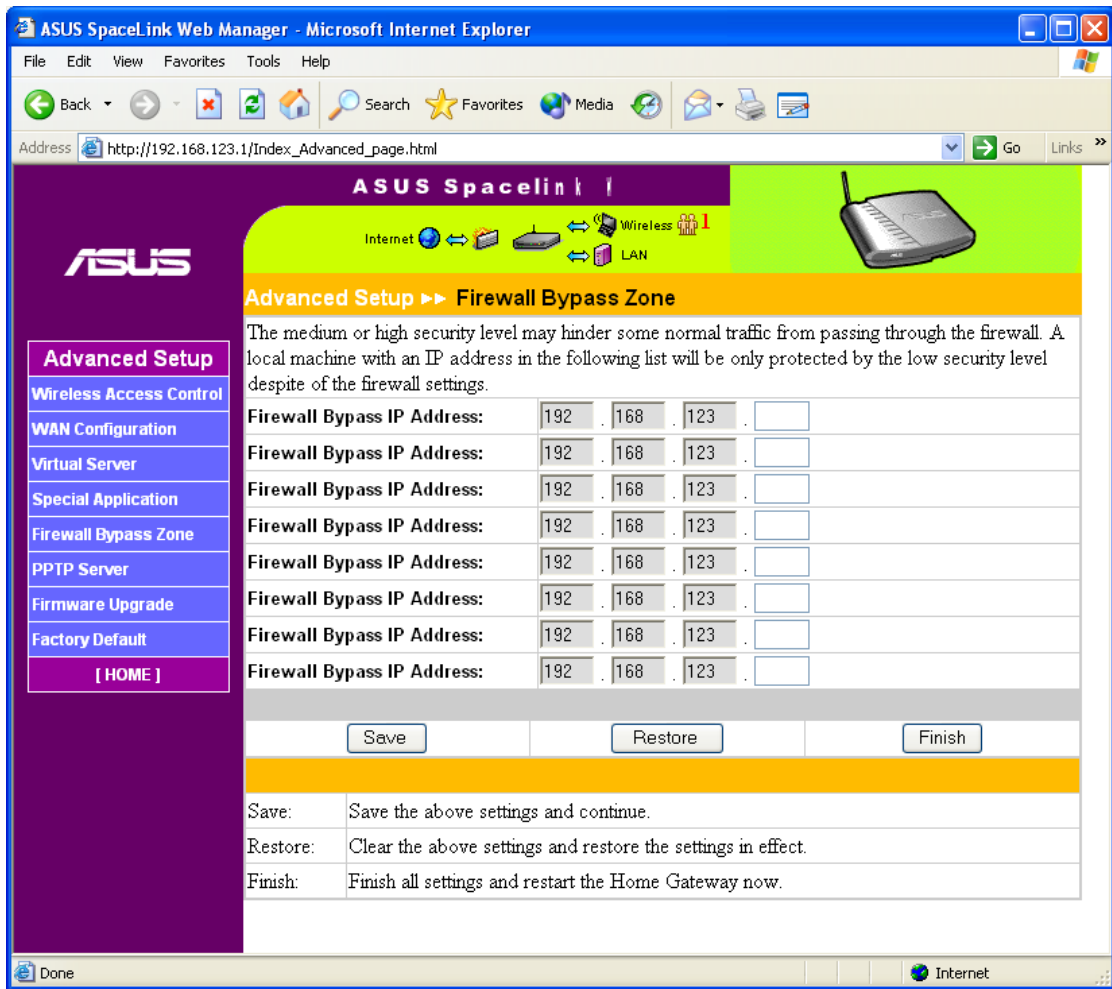


3. Utilities

The medium or high security level may hinder some normal traffic from passing through the firewall. A local machine with an IP address in the following list will be only protected by the low security level despite of the firewall settings.

**Firewall Bypass IP Address** - Enter the IP address of the computer you wish to have access through the firewall.

## PPTP Server

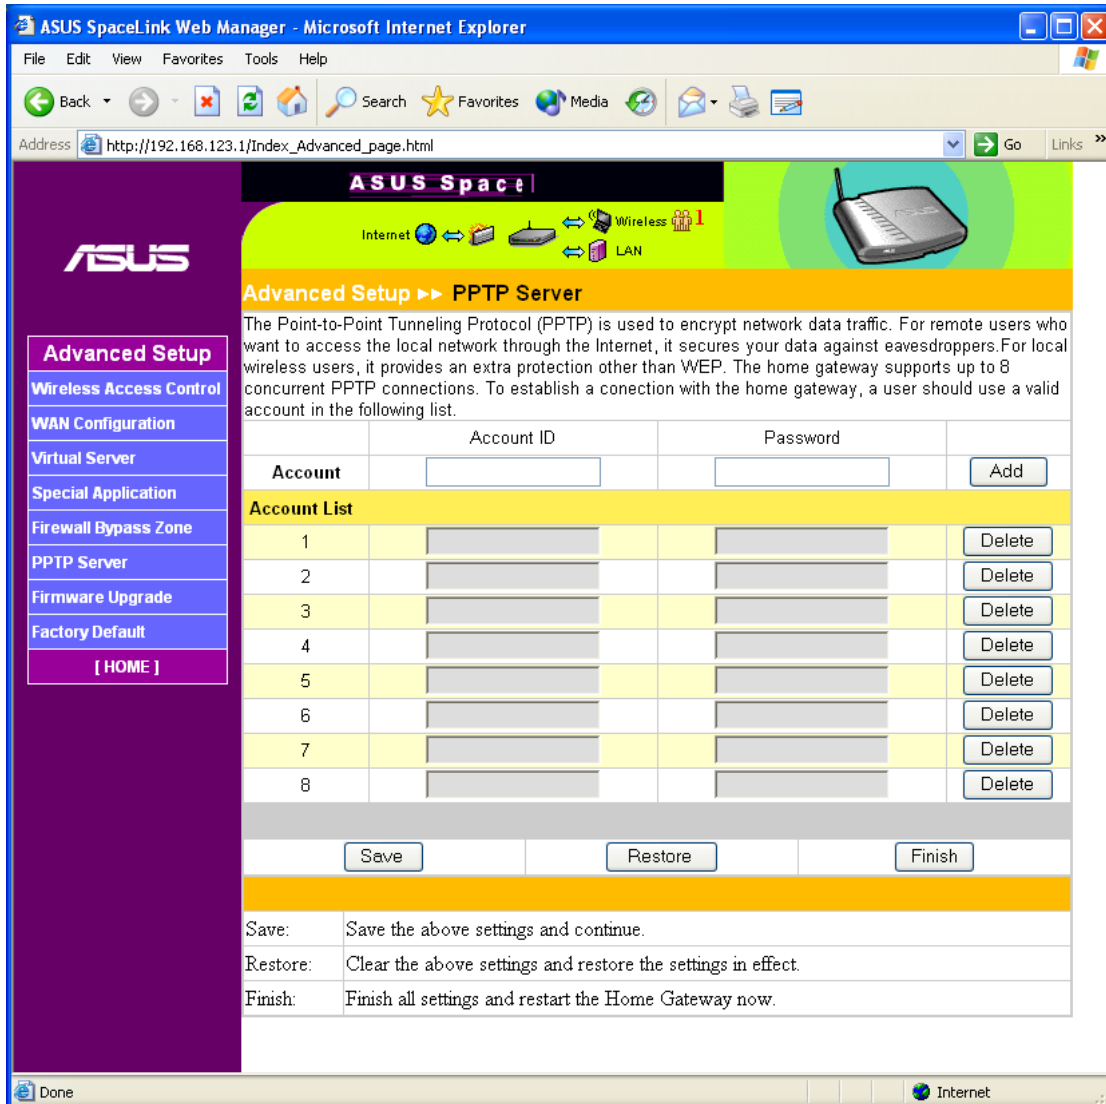

The Point-to-Point Tunneling Protocol (PPTP) is used to encrypt network data traffic. For remote users who want to access the local network through the Internet, it secures your data against eavesdroppers. For local wireless users, it provides an extra protection other than WEP. The home gateway supports up to 8 concurrent PPTP connections. To establish a connection with the home gateway, a user should use a valid account in the following list.

### Account


**Account ID** - Enter name or ID number.

**Password** - Enter password.

**Account List** - Click the Add button to move the Account ID and Password entries into this list.

### Firmware Upgrade

This page reports the Flash Code (Firmware) version installed in the SpaceLink Home Gateway. Periodically, a new Flash Code is available for the SpaceLink Home Gateways on ASUS's Web site. You can update the SpaceLink Home Gateway's Flash Code using the Firmware Upgrade page under the Advanced Setup menu of the Web Manager. If you are experiencing a problem with your SpaceLink equipment, a Technical Support representative may ask you to report the device's Flash Code (Firmware) version.

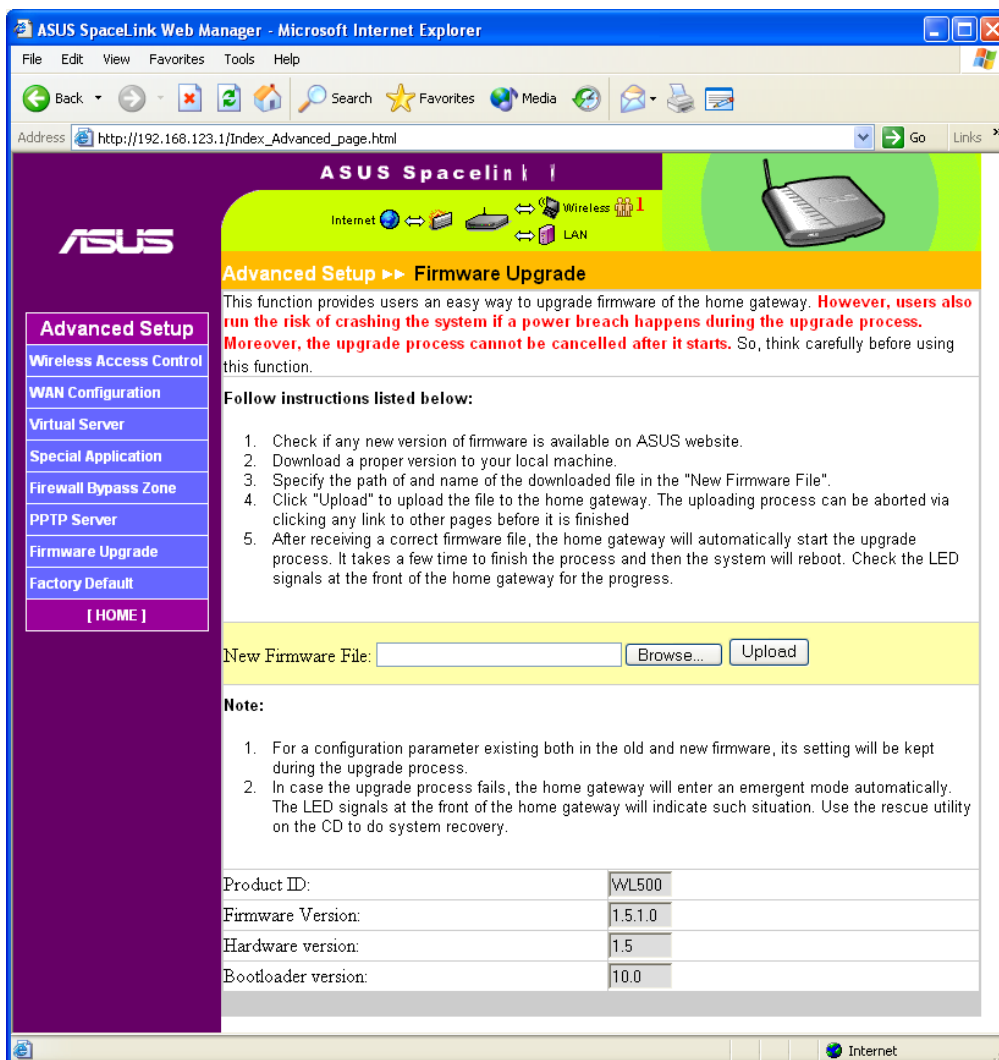

The firmware upgrade takes approximately 60 to 90 seconds. When the firmware upgrade is completed, you will be directed to the home page.

## Chapter 3 - Home Gateway Utilities


### Restoring Factory Default Settings

#### Web Manager

You can reset all settings to their factory defaults through the web manager using the “Factory Default” page in “Advanced Setup”. Click the **Restore** button and wait about 30 seconds before trying to access the SpaceLink Home Gateway.

#### Hardware

You can reset all settings to their factory defaults manually by pushing the “Restore” button in a hole on the back of the SpaceLink Home Gateway while it is ON. Use a pen or straightened paper clip to hold the “Restore” button depressed over 5 seconds until all the LEDs on the front of the SpaceLink Home Gateway start blinking. Release the button and the SpaceLink Home Gateway will reboot.

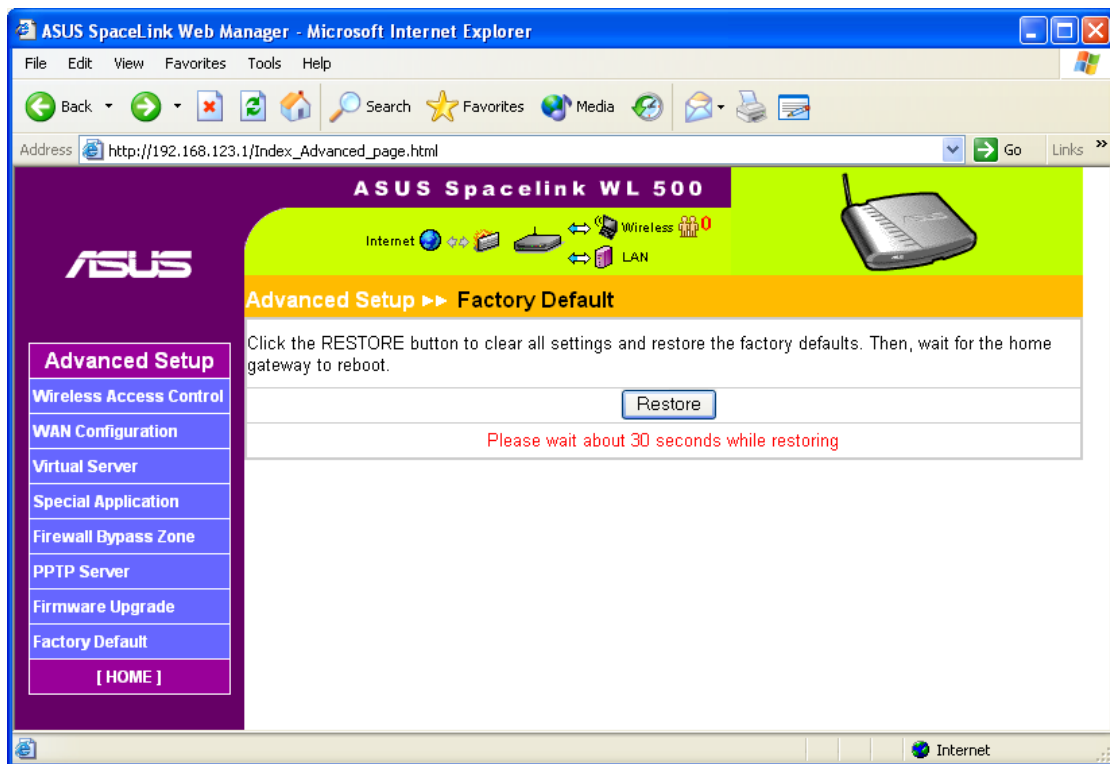

You will be notified when factory default settings are restored while using the web manager.

#### SpaceLink Setup Information

 **Success !!**

**All new settings are saved to Home Gateway now. Wait for system reboot !**


If you don't want to configure Home Gateway anymore, close your browser or click 'Logout' after Home Gateway is ready again.

[Logout](#)

### Firmware Restoration

This utility will automatically search out failed SpaceLink Home Gateways and upload a firmware that you specify. The process takes about 3 to 4 minutes and during this process the PWR, AIR, and WAN LEDs will remain lit while the LAN LED will flash slowly.

The Firmware Restoration utility is an emergency rescue tool to restore a SpaceLink Home Gateway which has failed during a previous firmware upload. A failed firmware upgrade will cause the SpaceLink Home Gateway to enter a failure mode, waiting for the user to use the Firmware Restoration utility to find and upload a new firmware. This is not a firmware upgrade utility and cannot be used on a working SpaceLink Home Gateway. Normal firmware upgrades must be done through the web manager.

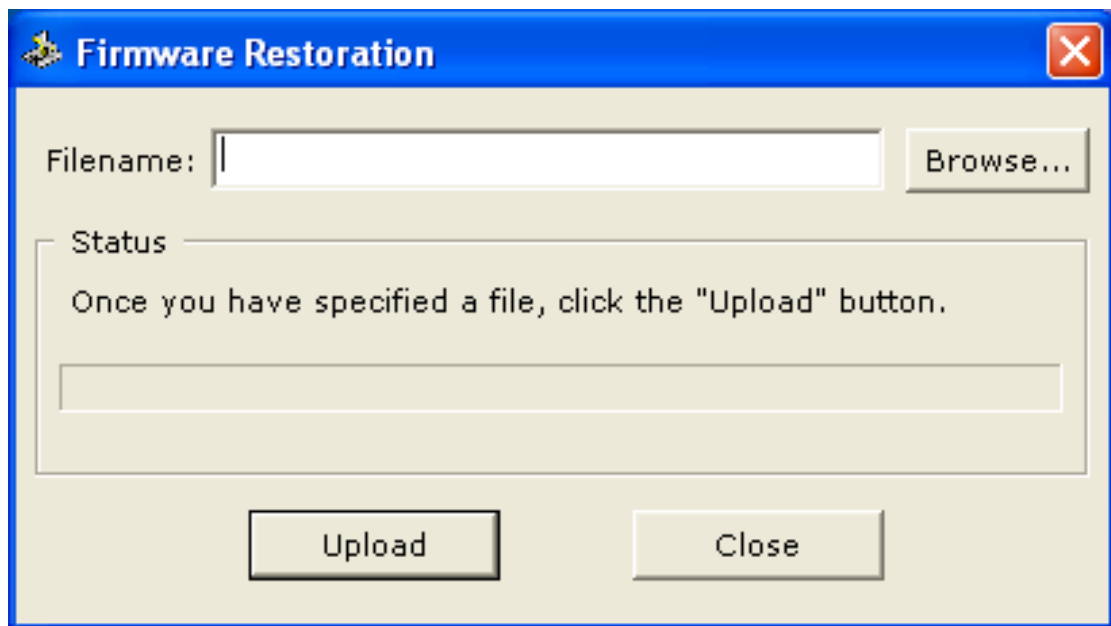

### Using a Hub


If you have problems upload a firmware while using a network hub, try connecting your computer directly to the LAN port. Either 10Base-T or 100Base-TX connections will work.

### Printer Setup Wizard


This utility helps you setup your computers to utilize the printer server function of the SpaceLink Home Gateway.

### Add Printer Wizard

You should add your printer to your computer to simplify the SpaceLink Home Gateway Printer Setup Wizard. If you run the “Printer Setup Wizard” without your printer driver installed, it will direct you to the “Add Printer Wizard”.

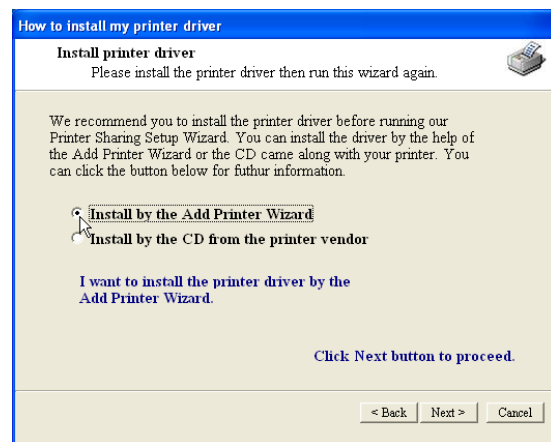


- (1) Run the “Add Printer Wizard” from **Start | Printers and Faxes | Add Printer**.
- (2) Choose “Install by the Add Printer Wizard”.

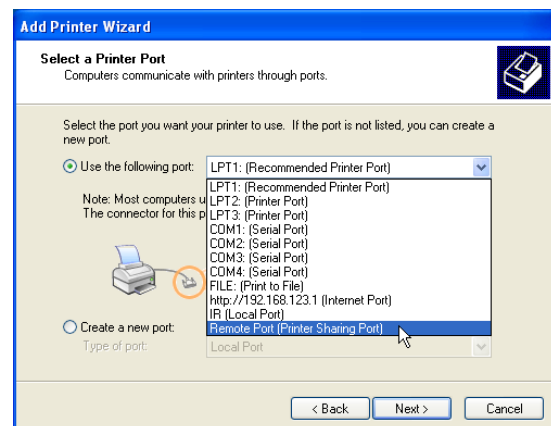


- (3) Choose “Local printer attached to this computer”.
- (4) Choose “Remote Port (Printer Sharing Port)”. If this is not available, select LPT1.


# Chapter 3 - Home Gateway Utilities

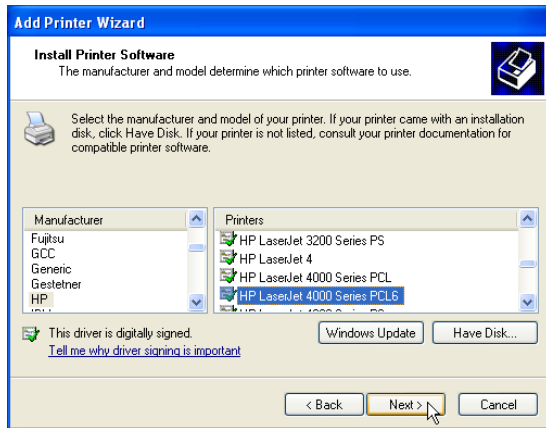


(5) Find your manufacturer and model. Click **Have Disk** if you cannot find it in the list and use the driver provided with your printer.

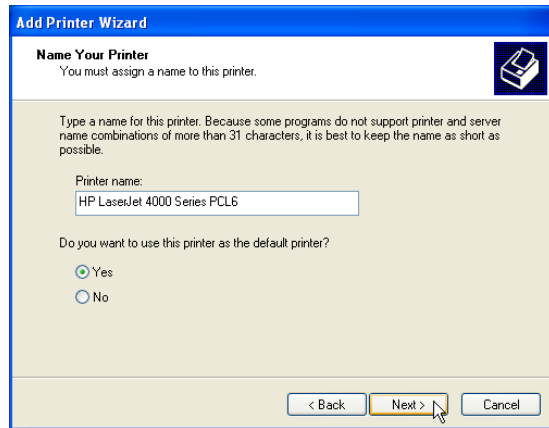


(6) Click **Next** to set this as your default printer.

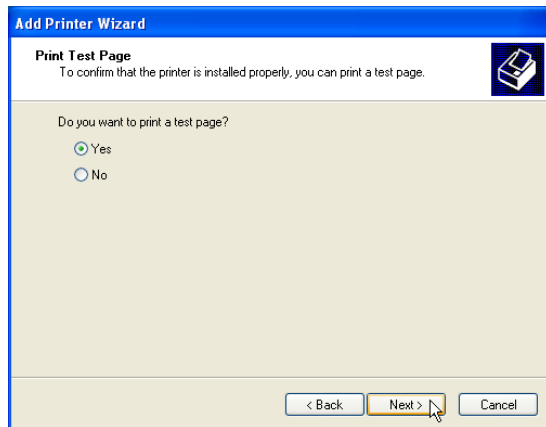

(7) You can print a test page.

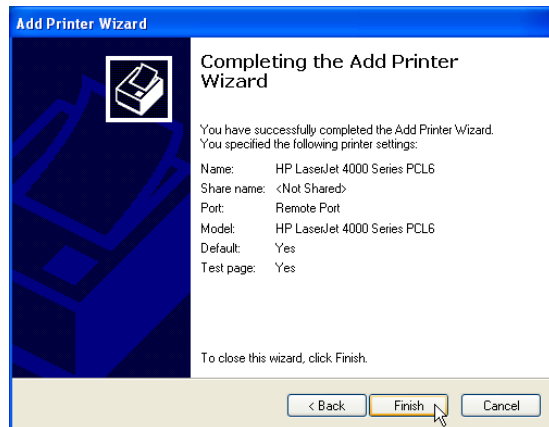

(8) Click **Finish** to close the wizard.


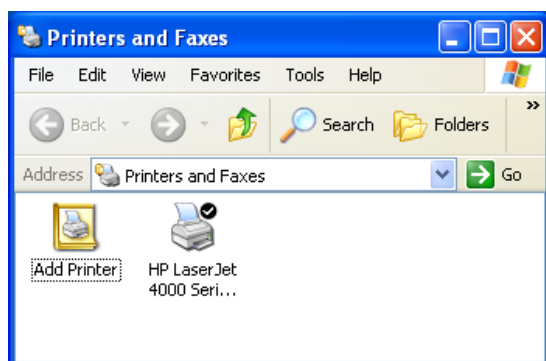


Your printer will show in the “Printers and Faxes” window and the check mark shows that it is set as your default printer.

## Chapter 3 - Home Gateway Utilities

### Printer Setup Wizard

The wizard will explore all available SpaceLink Home Gateways and model information of the printers attached to them in your local network.

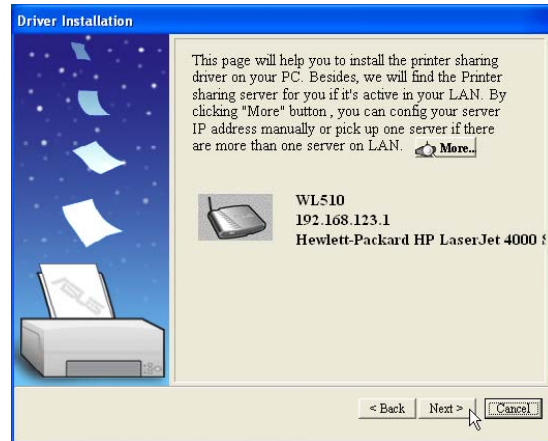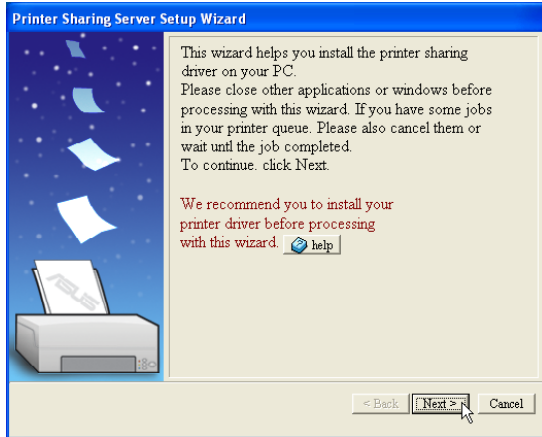


- (1) If you already have your printer installed on your printer port (LPT1), it will make this setup process much easier. See next page for instructions. Run the Printer Setup Wizard from the Windows Start menu.

- (2) If the printer is found, the name of the printer will be shown on this screen.


**Note:** If there is an error communicating with the printer, you will get this message.

If you can see this message, this means no Server found during this search. Please click "More" to search again after checking all the settings.

Make sure that the printer is ON, ready, and connected. Click **Back** and **Next**.

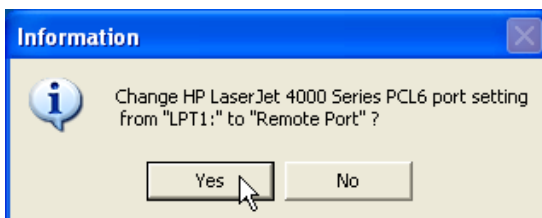



- (3) This setup wizard will change your default printer to use "Remote Port" which is serviced by the SpaceLink Home Gateway.

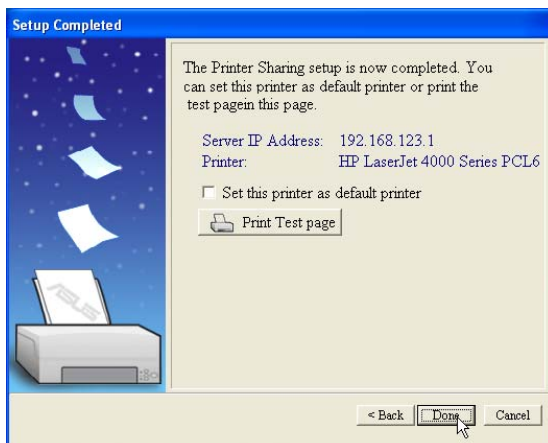

- (4) Click **Done** when setup is complete.




## Verifying Your Printer

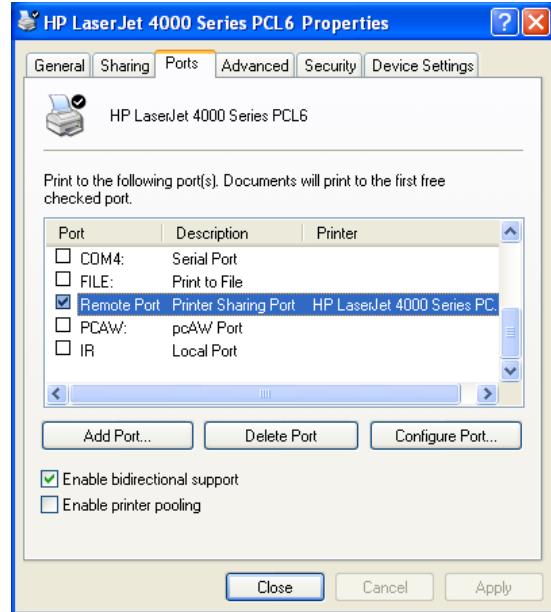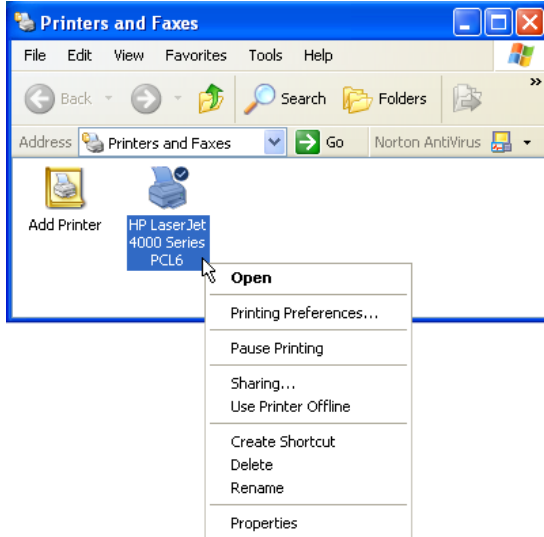


After setting up the printer, a printer icon will appear in Windows' "Printers and Faxes". Right click the printer icon and choose **Properties** to configure the printer.

If your printer was previously setup, the SpaceLink Home Gateway printer setup wizard will change your printing port from your local LPT1 (parallel) port to "Remote Port". If necessary, you can change this back at anytime or use Windows "Add Printer" to setup another printer on whatever port you require.

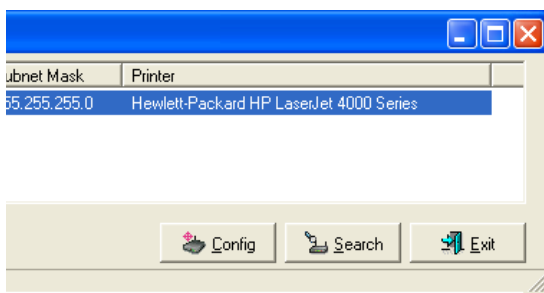

When properly setup, the SpaceLink Home Gateway will show the printer name in the "Homegateway Discovery" utility and show "on-line" under the "Printer Server" on the "Status" page of the web manager.

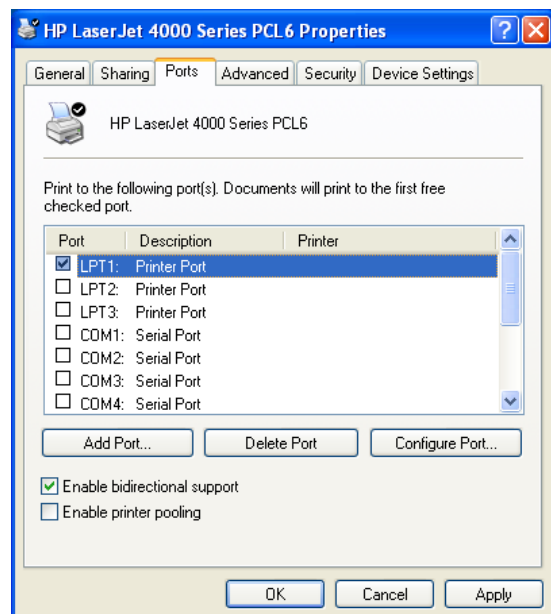


### VPN Client

A virtual private network (VPN) is the extension of a private network that encompasses links across shared or public networks like the Internet. A VPN enables you to send data between two computers across a shared or public intranet in a manner that emulates the properties of a point-to-point private link. The VPN Client utility help you to create and configure the VPN connections.


#### Starting VPN Client

Click the Windows Start button, point to Programs, point to ASUS Wireless Homegateway Utilities, and then click VPN Client.

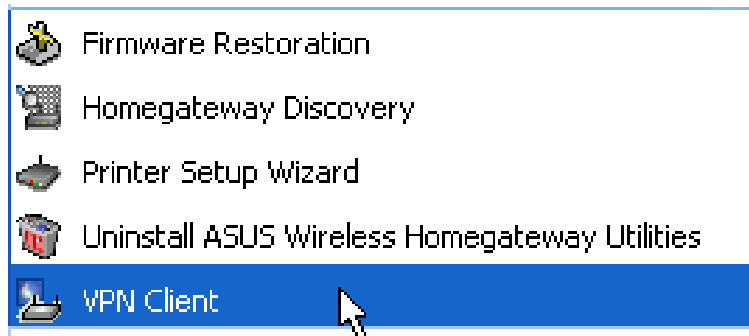

#### Main Window


The main windows shows all the available VPN connections on your system. Click **Make New Connection** to open the VPN Connection Wizard. Follow the instructions on the next page to create a new VPN connection. When you finish, the VPN connection name will appear in the list box.

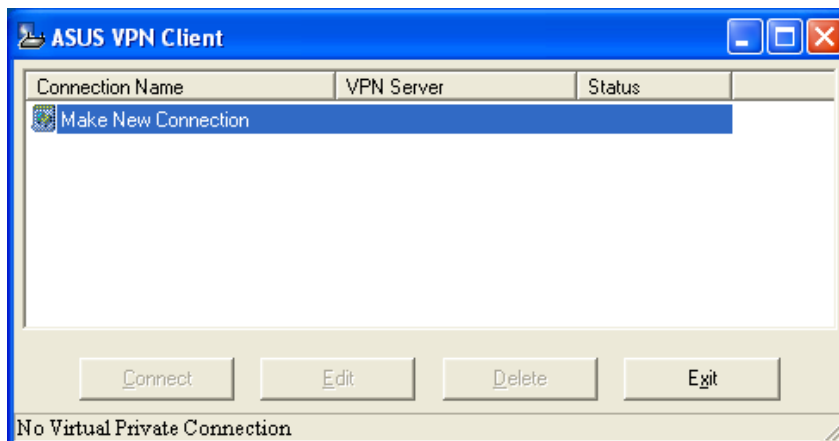


## Chapter 3 - Home Gateway Utilities

### VPN Connection Wizard


The VPN Connection Wizard helps you create a new virtual private network (VPN) connection. On the main window, double-click **Make New Connection** from the connections list box, then the VPN Connection Wizard dialog box appears. Follow the on-screen instructions to specify settings for your connection.

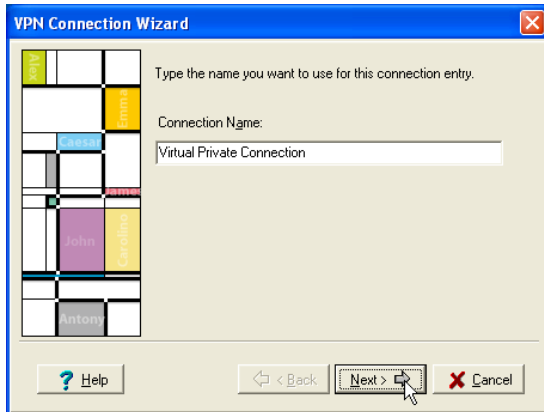


Enter a unique name for this new connection entry. The name is used to identify this connection. This name is not case-sensitive. Click **Next**.

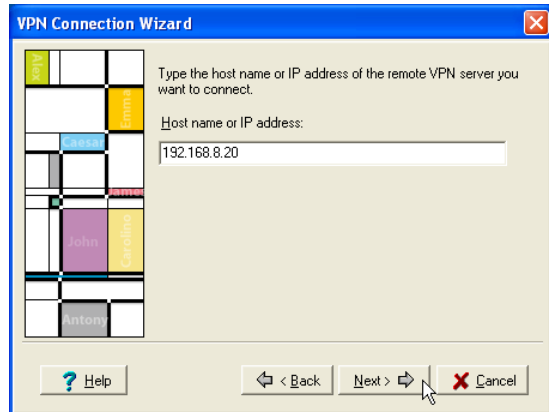


Enter the host name or IP address of the remote VPN server to which you wish to connect, and then click **Next**.

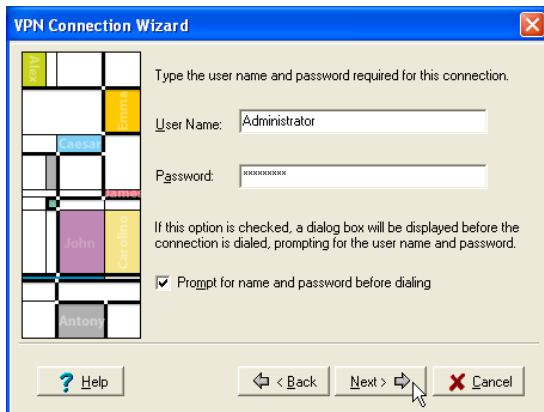

Enter the user name/password for this connection, and then click **Next**.

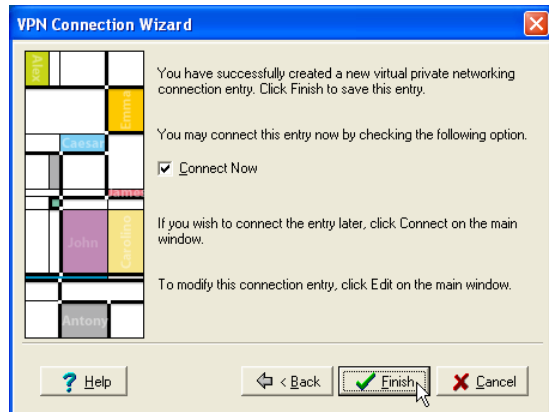

If you want to connect now, check **Connect Now** and then click **Finish**.

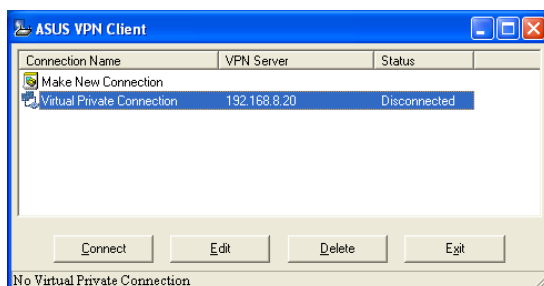

After the VPN Connection Wizard dialog box closes, your new connection entry appears in the ASUS VPN Client's main window. Select a connection name and click **Edit** to view the properties.

### Connection Properties

Select a connection name in the VPN Client window and click **Edit**.


#### Connection Name

Types the name you want to use for this connection entry in the Name field. The name is used to identify this connection. This name is not case-sensitive.

#### Properties

Opens the standard DUN properties dialog for the currently selected connection. Let user to change or set parameters for a connection entry.

When you finished setting parameters, click **OK** to close Properties dialog box and save your changes. To discard your changes, click **Cancel** to close Properties dialog box without saving your changes.

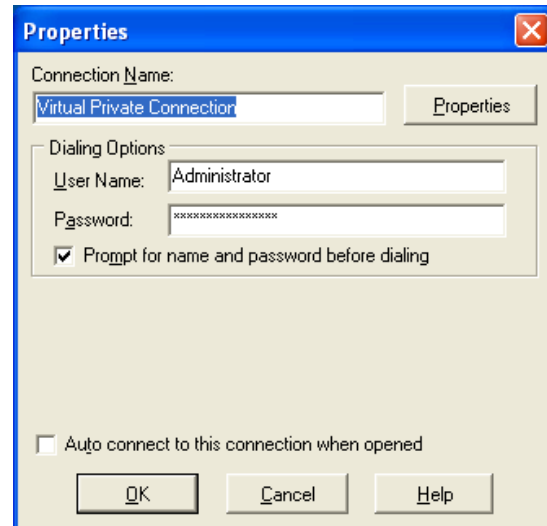


#### Dialing Options

**User Name:** Provides a space for you to type your user name for this connection.

**Password:** Provides a space for you to type your password for this connection. The password will be shown as asterisks for security.

**Prompt for name and password before dialing:** Specifies whether to request identity authentication information before attempting to connect. This information can include a user name and password. If this option is checked then a dialog box will be displayed before the connection is dialed, prompting for the user name and password. If you have already entered the user name and/or password in the edit boxes described above, then you should uncheck this box. If you want to leave the password blank on this properties page and enter your password every time you use this connection, then you should check this box.

**Auto connect to this connection when opened:** When this feature is enabled, it will automatically start connecting to this VPN connection when the VPN client utility opens.

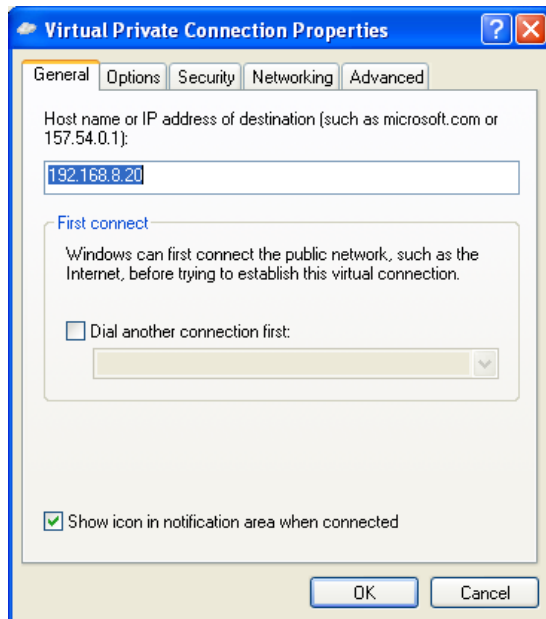

### Advanced Properties

#### Host name or IP address of destination


Enter the host name or IP address of the remote VPN server to which you are connecting, and then click **Next**.

#### Dial another connection first

Check this checkbox if you want the VPN connection to first make a call to an ISP. You must then select a dial-up connection from the drop-down list box.

### Dialing a Connection

To dial a VPN connection, select a connection name from the connections list box and click the **Connect** button. The Connect... window will show. If you only see the “Hang Up” button on the main window, that means you are already connected to the selected VPN connection. Click **Hang Up** to disconnect from the currently connected remote server.

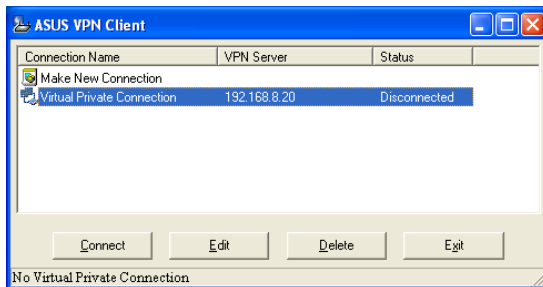

### Buttons

**Connect** - Connect to remote server.

**Hang Up** - Disconnect from remote server.

**Edit** - Displays the standard Dial-Up Networking properties dialog for the currently selected connection entry.

**Delete** - Deletes the selected connection entry.

**Exit** (or press Esc) - Closes VPN Client utility.

### 4. Wireless Performance

This section provides the user with ideas for how to improve the performance of a SpaceLink 802.11b network.

#### Site Topography

For optimal performance, locate wireless mobile clients and the SpaceLink Home Gateways away from transformers, heavy-duty motors, fluorescent lights, microwave ovens, refrigerators, and other industrial equipment. Signal loss can occur when metal, concrete, walls or floors block transmission. Locate the SpaceLink Home Gateways in open areas or add the SpaceLink Home Gateways as needed to improve coverage.

Microwave ovens operate in the same frequency band as the SpaceLink Home Gateway. Therefore, if you use a microwave within range of the SpaceLink Home Gateway you may notice network performance degradation. However, both your microwave and your the SpaceLink Home Gateway will continue to function.

#### Site Surveys

A site survey (utility provided with the SpaceLink PC card and CF card) analyzes the installation environment and provides users with recommendations for equipment and its placement. The optimum placement of 11 Mbps Home Gateways differs for 1 or 2 Mbps Home Gateways, because the locations and number of Home Gateways required are different.

### Range

Every environment is unique with different obstacles, barriers, materials, etc. and, therefore, it is difficult to determine the exact range that will be achieved without testing. However, has developed some guidelines to estimate the range that users will see when the product is installed in their facility, but there are no hard and fast specifications.

Radio signals may reflect off of some obstacles or be absorbed by others depending on their construction. For example, with two 802.11b radios, you may achieve up to 1000' in open space outdoors where two devices have a line of sight, meaning they see each other with no obstacles. However, the same two units may only achieve up to 300' of range when used indoors.

The IEEE 802.11b specification supports four data rates: 11 Mbps, 5.5 Mbps, 2 Mbps, and 1 Mbps. Operation at 1 Mbps provides greater range than operation at 11 Mbps. The SpaceLink Home Gateway will automatically adjust the data rate to maintain a usable radio connection.

Therefore, a client that is close to the SpaceLink Home Gateway may operate at 11 Mbps while a client that is on the fringe of coverage may operate at 1 Mbps. As mentioned earlier, you can configure the data rates that the SpaceLink Home Gateway will use. Note that if you limit the range of data rates available to the SpaceLink Home Gateway, you may reduce the effective wireless range of the SpaceLink 802.11b products.

### 5. Troubleshooting

The SpaceLink Home Gateway is designed to be very easy to install and operate. However, if you experience difficulties, use the information in this chapter to help diagnose and solve problems. If you cannot resolve a problem, contact Technical Support, as listed on the front of this manual.

### Common Problems and Solutions

#### Problem

SpaceLink Home Gateway does not power up:

#### Solution

- Check for faulty the SpaceLink Home Gateway power supply by measuring the output voltage with an electrical test meter.
- Check failed AC supply (power outlet)

#### Problem

Cannot communicate with the SpaceLink Home Gateway through a wired network connection.

#### Solution

- Verify network configuration by ensuring that there are no duplicate IP addresses. Power down the device in question and ping the assigned IP address of the device. Ensure no other device responds to that address.
- Check that the cables used have proper pin outs and connectors or use another LAN cable.
- Check that the hub, switch, computer, or modem connected to the WAN port of the SpaceLink Home Gateway supports 10Mbps speed.

This is the LED result if you connect the SpaceLink Home Gateway to a(n):

	Auto 10/100 Mbps Hub	Pure 100 Mbps Hub
Hub LED	ON	OFF
Home Gateway WAN LED	ON	OFF

So you will not know if the connection is bad from the SpaceLink Home Gateway Link LED alone, you will have to look at the Hub LED if you are not sure what kind of hub the SpaceLink Home Gateway is attached to.




## Chapter 5 -Troubleshooting

### Problem

The SpaceLink Home Gateway Web Manager still cannot find or connect to the SpaceLink Home Gateway after verifying the IP address and LAN cable, changes cannot be made, or password is lost.

### Solution

In case the SpaceLink Home Gateway is inaccessible, you can restore the SpaceLink Home Gateway's factory default settings. Use a straightened paper clip to press the button located in the hole labeled "Reset" on the back of the SpaceLink Home Gateway and keep it depressed over 5 seconds. The LEDs will flash when reset is successful.

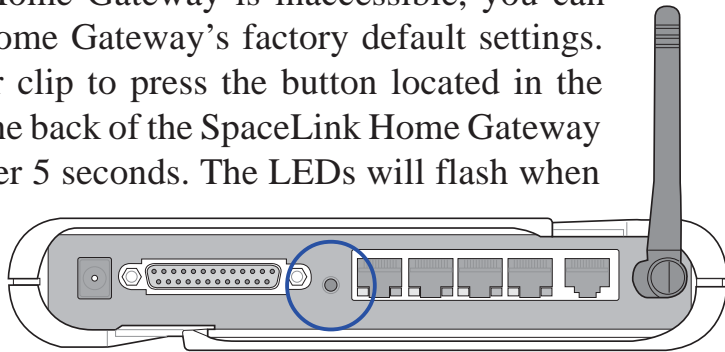

### Reset to Defaults

The following are factory default values. These values will be present when you first receive your the SpaceLink Home Gateway, if you push the reset button on the back of the SpaceLink Home Gateway over 5 seconds, or if you click the "Restore" button on the "Factory Default" page under "Advanced Setup".

Name	Default Value
User Name	admin
Password	admin
Enable DHCP	Yes
IP Address	192.168.123.1
Subnet Mask	255.255.255.0
DNS Server 1	(blank)
DNS Server 2	192.168.123.1
SSID	default
Domain Name	home

## Chapter 5 -Troubleshooting

---

### Problem

My 802.11b PC Card will not associate with the SpaceLink Home Gateway.

### Solution

Follow these steps:

1. Try to bring the devices closer together; the PC Card may be out of range of the SpaceLink Home Gateway.
2. Confirm that the SpaceLink Home Gateway and PC Card have the same SSID.
3. Confirm that the SpaceLink Home Gateway and PC Card have the same Encryption settings, if enabled.
4. Confirm that the SpaceLink Home Gateway's Air and Link LEDs are solid green.
5. Confirm that the authorization table includes or excludes the MAC address of the SpaceLink PC card if "Wireless Access Control" is enabled.

### Problem

The throughput seems slow.

### Solution

To achieve maximum throughput, verify that your antennas are well-placed, not behind metal, and do not have too many obstacles between them. If you move the client closer to the SpaceLink Home Gateway and throughput increases, you may want to consider adding a second the SpaceLink Home Gateway and implementing roaming.

- Check antenna, connectors and cabling.
- Verify network traffic does not exceed 37% of bandwidth.
- Check to see that the wired network does not exceed 10 broadcast messages per second.
- Verify wired network topology and configuration.

## Chapter 5 -Troubleshooting

---

### Problem

I cannot find the SpaceLink Home Gateways using the SpaceLink Home Gateway Discovery.

### Solution

To configure the SpaceLink Home Gateway through a wireless LAN card, your computer must be in the same subnet of the SpaceLink Home Gateway. You cannot find the SpaceLink Home Gateways with subnet different from your computer within the same gateway. You must change your computer to the same subnet as the SpaceLink Home Gateway. The factory default subnet of the SpaceLink Home Gateway is "192.168.123.1".

---

**In Windows NT/2000/XP, you must login with Administrator privileges so that all functions of the SpaceLink Home Gateway Manager can function correctly. If you do not login as a member of the Administrator group, you cannot change IP settings but can still run the Discovery utility if the original IP setting is correct.**

---

### Problem

How do I upgrade the firmware on the SpaceLink Home Gateway?

### Solution

Periodically, a new Flash Code is available for the SpaceLink Home Gateways on the ftp site at <ftp://ftp.asus.com>. Ideally, you should update the SpaceLink Home Gateway's Flash Code using "Firmware Upgrade" on the "Advanced Setup" menu of the web manager.

## 6. Appendix

### Operating frequency range

The DSSS PHY shall operate in the frequency range of 2.4 GHz to 2.4835 GHz as allocated by regulatory bodies in the USA and Europe or in the 2.471 GHz to 2.497 GHz frequency band as allocated by regulatory authority in Japan.

### Number of operating channels

The channel center frequencies and CH ID numbers shall be as shown below. The FCC (US), IC (Canada), and ETSI (Europe) specify operation from 2.4 GHz to 2.4835 GHz. For Japan, operation is specified as 2.471 GHz to 2.497 GHz. France allows operation from 2.4465 GHz to 2.4835 GHz, and Spain allows operation from 2.445 GHz to 2.475 GHz. For each supported regulatory domain, all channels marked with “Yes” shall be supported.

In a multiple cell network topology, overlapping and/or adjacent cells using different channels can operate simultaneously without interference if the distance between the center frequencies is at least 30 MHz. Channel 14 shall be designated specifically for operation in Japan.

### DSSS PHY frequency channel plan

CH ID	Frequency	(Regulatory Domains)					
		X'10' FCC	X'20' IC	X'30' ETSI	X'31' Spain	X'32' France	X'40' MKK
1	2412 MHz	Yes	Yes	Yes	-	-	Yes
2	2417 MHz	Yes	Yes	Yes	-	-	Yes
3	2422 MHz	Yes	Yes	Yes	-	-	Yes
4	2427 MHz	Yes	Yes	Yes	-	-	Yes
5	2432 MHz	Yes	Yes	Yes	-	-	Yes
6	2437 MHz	Yes	Yes	Yes	-	-	Yes-
7	2442 MHz	Yes	Yes	Yes	-	-	Yes
8	2447 MHz	Yes	Yes	Yes	-	-	Yes
9	2452 MHz	Yes	Yes	Yes	-	-	Yes
10	2457 MHz	Yes	Yes	Yes	Yes	Yes	Yes
11	2462 MHz	Yes	Yes	Yes	Yes	Yes	Yes
12	2467 MHz	-	-	Yes	-	Yes	Yes
13	2472 MHz	-	-	Yes	-	Yes	Yes
14	2484 MHz	-	-	-	-	-	Yes

# SpaceLink Home Gateway Specifications

The following technical specification is for reference purposes only. Actual product's performance and compliance with local telecommunications regulations may vary from country to country. ASUS will only ship products that are type approved in the destination country.

<b>WAN Ethernet Port</b>	Support: Both Ethernet and 802.3 with Max. Bit Rate 10 Mbps Auto crossover function (MDI-X) Connector: RJ45 for 10Base-T
<b>LAN Ethernet Port</b>	Support: Both Ethernet and 802.3 with Max. Bit Rate 100Mbps Four Port Switch with Auto crossover function (MDI-X) Connector: Four RJ45 for 10Base-T or 100Base-TX
<b>Wireless</b>	Freq. Band: 2400-2497 MHz Antenna: 2 Diversity Antennas Modulation: Direct Sequence Spread Spectrum (CCK, DQPSK, DBPSK) Data rate: 1, 2, 5.5, 11 Mbps Output Power: 15 dBm
<b>Printer port</b>	Support: Standard Print Port (SPP) Connector: 25 PIN D-SUB FEMALE
<b>DC Power Adapter</b>	AC Input: 100V~240V(50~60HZ) DC Output: 5V with max. 2A current
<b>Visible LEDs</b>	PWR (Power), AIR, WAN, LAN, LPT, 10/100 indication for LAN Ports
<b>Reset button</b>	Push for 5 seconds to restore factory setting
<b>Environment</b>	Operating Temp.: 0 to 50 °C with 1 meter/sec airflow Storage Temp.: -20 to 70 °C Operating Humidity: 0 to 95% (Non-condensing) Storage Humidity: 0 to 95%
<b>Regulation Certification</b>	EMI: FCC Part 15 Class B; VCCI Class B; ETSI 300 328; CISPR 22 Class B , CE Mark, FCC Part 68, UL1950, CSA22.2, EN60950
<b>MTBF</b>	More than 10,000 hrs/failure

### Glossary

**Access Point** - An access point is a device that allows wireless clients to connect to other wireless clients and it acts as a bridge between wireless clients and a wired Ethernet network.

**Broadband** - A type of data transmission in which a single medium (such as cable) carries several channels of data at once.

**Channel** - Wireless access points allows you to choose different radio channels in the wireless spectrum. A wireless LAN device operates within the 2.4 GHz spectrum and a channel is within a FCC specified range, similar to any radio channel.

**Client** - A client is the desktop or mobile PC that is connected to your network.

**Device name** - Also known as DHCP client ID or network name. Sometimes provided by an ISP when using DHCP to assign addresses.

**DHCP (Dynamic Host Configuration Protocol)** - This protocol allows a computer (or many computers on your network) to be automatically assigned a single IP address from a DHCP server.

**DNS Server Address (Domain Name System)** - DNS allows Internet host computers to have a domain name and one or more IP addresses. A DNS server keeps a database of host computers and their respective domain names and IP addresses, so that when a user enters a domain name into the Internet browser, the user is sent to the proper IP address. The DNS server address used by the computers on your home network is the location of the DNS server your ISP has assigned.

**DSL Modem (Digital Subscriber Line)** - A DSL modem uses your existing phone lines to transmit data at high speeds.

**Encryption** - This provides wireless data transmissions with a level of security.

**ESSID (Extended Service Set Identifier)** - You must have the same ESSID entered into the gateway and each of its wireless clients. The ESSID is a unique identifier for your wireless network.

**Ethernet** - Ethernet networks are connected by cables and hubs, and move data around. This is a standard for computer networks.

**Firewall** - A firewall determines which information passes in and out of a network. NAT can create a natural firewall by hiding a local network's IP addresses from the Internet. A Firewall prevents anyone outside of your network from accessing your computer and possibly damaging or viewing your files.

**Gateway** - A network point that manages all the data traffic of your network, as well as to the Internet and connects one network to another.

**IEEE** - The Institute of Electrical and Electronics Engineers. The IEEE sets standards for networking, including Ethernet LANs. IEEE standards ensure interoperability between systems of the same type.

**IP Address (Internet Protocol)** - An IP address consists of a series of four numbers separated by periods, that identifies a unique Internet computer host, allowing messages intended for that computer to be delivered to the correct destination.

**ISP (Internet Service Provider)** - An ISP is a business that allows individuals or businesses to connect to the Internet. Users log on to the Internet using an account with an ISP or Internet Service Provider. ISPs can serve IP addresses dynamically, or assign static (fixed) IP addresses to individual computers.

**ISP Gateway Address** - The ISP Gateway Address is an IP address for the Internet router. This address is only required when using a cable or DSL modem.

**LAN (Local Area Network)** - A LAN is a group of computers and devices connected together in a relatively small area (such as a house or an office). Your home network is considered a LAN.

**MAC Address (Media Access Control)** - A MAC address is the hardware address of a device connected to a network.

**NAT (Network Address Translation)** - NAT masks a local network's group of IP addresses from the external network, allowing a local network of computers to share a single ISP account. This process allows all of the computers on your home network to use one IP address. This will enable access to the Internet from any computer on your home network without having to purchase more IP addresses from your ISP.

**PC Card** - This is an Ethernet card that connects to the PCMCIA slot on your Notebook PC. This enables the computer to communicate with wireless access points.

## Appendix

---

**PPP (Point-to-Point Protocol)** - PPP is a protocol for communication between computers using a serial interface, typically a personal computer connected by phone line to a server.

**PPPoE (Point-to-Point Protocol over Ethernet)** - Point-to-Point Protocol is a method of secure data transmission. PPP using Ethernet to connect to an ISP.

**Subnet Mask** - A subnet mask is a set of four numbers configured like an IP address. It is used to create IP address numbers used only within a particular network.

**TCP/IP (Transmission Control Protocol/Internet Protocol)** - This is the standard protocol for data transmission over the Internet. Protocols used to connect hosts on the Internet.

**WAN (Wide Area Network)** - A system of LANs, connected together. A network that connects computers located in separate areas, (i.e., different buildings, cities, countries). The Internet is a wide area network.

**WECA (Wireless Ethernet Compatibility Alliance)** - An industry group that certifies cross-vender interoperability and compatibility of IEEE 802.11b wireless networking products and to promote that standard for enterprise, small business, and home environments.

**WLAN (Wireless Local Area Network)** - This is a group of computers and other devices connected wirelessly in a small area. A wireless network is referred to as LAN or WLAN.