

Quick Start Guide
快速操作指南

FMS-G7



FLYSKY



FCC ID: N4ZMG700

[Http://www.flysky-cn.com](http://www.flysky-cn.com)
Copyright © 2022 Flysky Technology co., ltd
Release date: 2022-06-07

FLYSKY

Thank you for purchasing the products of Flysky! To find out more about our products, visit our website at www.flysky-cn.com. If you encounter any problems during using, please refer to the manual first. If the problem is still not resolved, contact your local dealer directly or contact the customer service staff via Flysky official website.

Precautions

Read the safety messages listed below before operation!

- Do not use the product at night or during bad weather conditions, like rain or thunderstorms. It can cause erratic operation or loss of control.
- Do not use the product when visibility is limited.
- Do not expose the product to rain or snow. Any exposure to moisture (water or snow) may cause erratic operation or loss of control.
- Interference may cause loss of control. To ensure the safety of you and others, do not operate in the following places:



Near any sites where other radio control activity may occur



Near people or roads



On any pond/lake when passenger boats are present




Near power lines or communication broadcasting antennas


- Do not use this product when you are tired, uncomfortable, or under the influence of alcohol or drugs. Doing so may cause serious injury to yourself or others.
- The 2.4GHz radio band is limited to line of sight. Always keep your model in sight as a large can block the RF signal and lead to loss of control.
- Never grip the transmitter antenna during operation. It significantly degrades signal quality and strength and may cause loss of control.
- Do not touch any part of the model that may generate heat during operation, or immediately after use. The engine, motor or speed control, may be very hot and can cause serious burns.
- Misuse of this product may lead to serious injury or death. To ensure the safety of you and your equipment, read this manual and follow the instructions carefully.
- Make sure the product is properly installed in your model. Failure to do so may result in serious injury.
- Make sure that the receiver's battery is disconnected before turning off the transmitter. Failure to do so may lead to unintended operation and cause an accident.
- Ensure that all motors operate in the correct direction. If not, adjust the direction first.
- Make sure that the model stays within range in order to prevent loss of control.

CAUTION!

- **RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.**

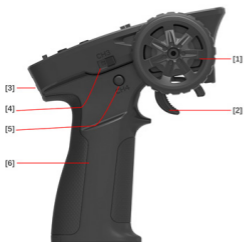

- [1] CH1 Steering wheel
- [2] CH2 Throttle
- [3] Neck Strap Hook
- [4] CH3 Three-position switch
- [5] CH4 Reset button SW2
- [6] Handle contains 4 batteries(Removable battery)
- [7] Logo sticker
- [8] CH6 Reset button SW4
- [9] LED light in green
- [10] CH5 Reset button SW3
- [11] BIND button
- [12] ST- trim button
- [13] TH-Throttle trim button
- [14] Power switch
- [15] CH7 Reset button SW5
- [16] REV Sterring/Throttle reverse
- [17] ST+ trim button
- [18] TH+Throttle trim button

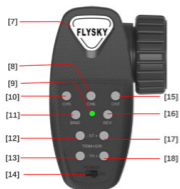

▶ Power on

Follow the steps below to turn on the transmitter:

1. Check to make sure that the batteries are fully charged and installed correctly.
2. Press and hold **Power Switch** until the LED indicator is solid on for 3S and then goes into three-flash-one-off state, at the time, the transmitter is in standby mode. When the receiver is connected to transmitter normally, the transmitter LED is solid on.

▶ Binding

Follow the steps below to bind with the receiver:

1. Press and hold the **BIIND** button while turning on the transmitter, the transmitter LED will flash fast.
2. Put the receiver into binding mode.
3. The binding process is finished when the transmitter LED stops flashing and is solid on.
4. Check to make sure the transmitter and receiver are working correctly, if there are any issues or unexpected operation arise, follow the steps above to bind again.

Note: If the transmitter disconnects with the receiver, the transmitter LED will go into three-flash-one-off state.

▶ Controls

The **ST+** and **TH+** button are for increasing trim value defaultly, the buzzer will prompt with tone 1 short beep when the trim is successful. One beep once for a press. when press for a while, the buzzer will prompt with quick short beep. The buzzer will prompt with 2 short beeps when the trim is over the mid-point. When the trim is at the end, the buzzer will prompt with long beep.

▶ Channel reverse

1. When the steering wheel is in the non-centering state, the channel 1 is reversed by pressing the **REV** button, and switch once when the button is pressed.
2. When the throttle trigger is in the non-centering state and the steering wheel is in the centering state, the channel 2 is reversed by pressing the **REV** button, and switch once when the button is pressed.
3. If the **CH5** four-wheel steering is in the rear-wheel-only steering mode, the reverse operation is for **CH5**, not for **CH1**.
4. When the channel reverse takes affect by pressing the **REV** button, the buzzer will prompt with 1 beep. The buzzer will prompt with 1 beep for **CH1** and **CH5** reverse, and with 2 beep for **CH2**.

▶ Servo travel adjustment

CH1 servo travel can be adjusted by **ST+/-** button. The adjustment range is 0~120%, the step is 5%, and the default value is 100%.

CH2 servo travel can be adjusted by **TH+/-** button. The adjustment range is 0~120%, the step is 5%, and the default value is 100%.

► Channels operation description

1. SW₂ reset button(CH₄), press and hold the SW₂ button for several seconds, then CH₄ takes affect, otherwise, the CH₉ takes affect.
 - Press and hold SW₂ button over 2S, the CH₄ will reverse while the CH₉ isn't changed.
 - Press and hold SW₂ button within 2S, the CH₉ will reverse while the CH₄ isn't changed.
2. SW₃ reset button(CH₅) is four-wheel steering switch. The four mode will switch by pressing the button once.
3. SW₄ reset button(CH₆), the default output value is 1000us. When press the SW₄ button once, the output value will change to 2000us. The buzzer will prompt with 1 short beep when switching to 1000us, and 2 short beeps for 2000us.
4. SW₅ reset button(CH₇), to turn on/off winch function. The winch function is enabled when the transmitter is powered on defaultly.
 - When winch function is enabled, CH₇ value can be adjusted by ST+/- button.
 - When winch function is enabled over 3S and the ST+ button is not operated, the winch function is disabled automatically, then CH₇ outputs neutral value prompted with 2 short beeps on tone 1.

► Failsafe

When the transmitter is turned on, keep the channel output at the desired value, then press and hold the BIND button for 3S, after the buzzer prompts with long beep on tone 1, the failsafe is set successful.

The default setting of the failsafe is no setting.

When the transmitter rebinds, the failsafe is reset to default setting.

► Stick Calibration

Follow the steps below to calibrate the transmitter.

1. Turn the Steering Wheel to the Max endpoint in a clockwise direction and push the trigger forward to its maximum endpoint while powering on the transmitter, then the transmitter enters stick calibration mode.
2. Turn the Steering Wheel or push the trigger to the Max or Min endpoint, then return to its neutral point.
3. After the calibration is finished, press the BIND button to exit the calibration mode. If the calibration is failed, then the setting can not be saved by pressing the BIND button.

► Data resetting

Follow the steps below to reset the data.

1. Press and hold the BIND button and the REV button while powering on the transmitter, the data will be reset.
2. When the operation is successful, the buzzer will prompt with long beep on tone 2.

▶ Idle alarm

When the transmitter is not operated over 10 minutes, it will go into idle alarm state. In idle alarm state, the transmitter will exit idle alarm mode when any control is operated. When the transmitter is in idle alarm state over 2 minutes, the transmitter will go into sleep mode. Repower on the transmitter to exit the sleep mode.

▶ Low voltage alarm

When the transmitter voltage is lower than 4.2V, it will enter low voltage alarm mode. The transmitter LED will be in slow flashing state for prompt.

Certifications

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

EU DoC Declaration

Hereby, [Flysky Technology co., Ltd] declares that the Radio Equipment [FMS-G7] is in compliance with RED 2014/53/EU.

The full text of the EU DoC is available at the following internet address:

www.flysky-cn.com.

Digital Proportional Radio Control System **FSM-G7**

RF Exposure Compliance

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Environmentally friendly disposal

Old electrical appliances must not be disposed of together with the residual waste, but have to be disposed of separately. The disposal at the communal collecting point via private persons is for free. The owner of old appliances is responsible to bring the appliances to these collecting points or to similar collection points. With this little personal effort, you contribute to recycle valuable raw materials and the treatment of toxic substances.



FCC ID: N4ZMG700

Manufacturer: ShenZhen FLYSKY Technology Co.,Ltd

Address: 16F, Huafeng Building, No. 6006 Shennan Road, Futian District, Shenzhen, Guangdong, China

本说明书中的图片和插图仅供参考，可能与实际产品外观有所不同。产品设计和规格可能会有所更改，恕不另行通知。

Figures and illustrations in this manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.