


CommuPack Modax

Installation Guide and AT Command Set

Model: MDX-56KRE

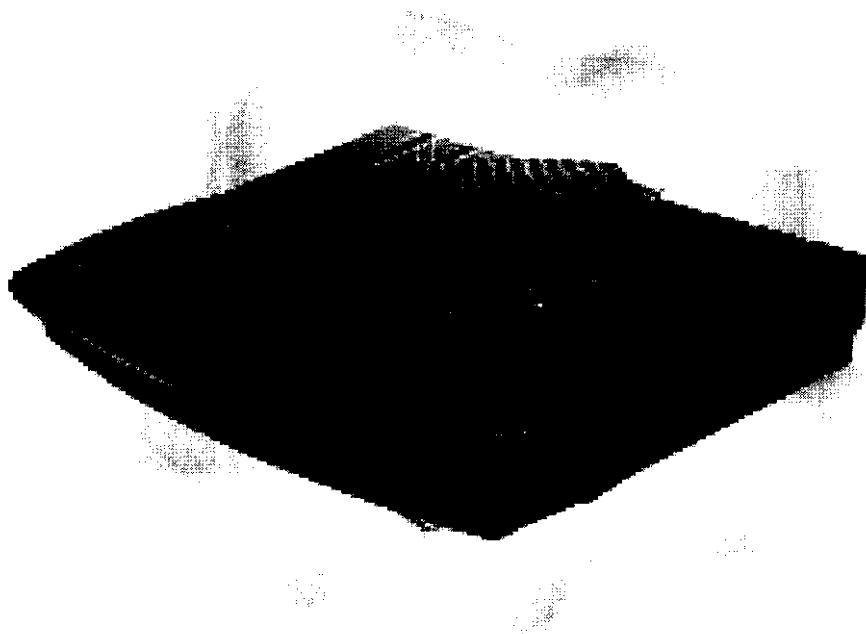

Netronics Inc.

A membership of ADI Group

11F, No. 1, Sec. 4, Nanking E. Road, Taipei, Taiwan, R.O.C.

TEL: 886 2 27198652

FAX: 886 2 27198653

1.0 Installation Guide

Your *CommuPack Modax* package should include the following items:

- ✓ **Modem**
- ✓ **RS-232 serial cable**
- ✓ **RJ-11 phone cord**
- ✓ **Communication software CD**

1.1 Step by Step Installation

1. Plug one end of the phone cord into the telephone jack (labeled with a wall plug icon) and the other end into a phone wall jack.
2. Connect the 25-pin male of serial cable to the modem.
3. Connect the other end of 9-pin female to the available COM port, either COM1 or COM2.
4. If you wish to use your modem and phone through the same phone wall jack, plug your phone's cord into modem's other jack (labeled with phone icon).
5. Plug the power adapter into the power jack and into a standard wall outlet.
6. Use the handset to check for the dial tone. If there is none, please check to make sure the line cord and handset cord at both ends are properly connected.

1.2 Front Panel LEDs

MR: Modem Ready. It signals your modem is ready to function.

TR: Terminal Ready. It signals your modem and computer are successfully connected.

HS: High Speed. When using your high speed modem's software, this LED will flash to signal modem is in high speed mode.

OH: Off Hook. It signals your modem is engaged. Suppose when browsing through internet your computer comes to a standstill, you can judge from this LED to check whether the modem is still on-hooked or not. This will help you to save some telephone bills.

CD: Carrier Detect. It signals your modem is successfully connected with the remote modem, ready to send or receive data.

RD: Receive Data. It signals your modem is receiving data from the remote modem.

TD: Transmit Data. It signals your modem is sending out data to the remote modem. For example, this LED will flash when sending e-mails.

AA: Auto Answer. When a remote modem makes connection to your modem, this LED must flash so that your modem can automatically make the connection.

2.0 AT Command

2.1 BASIC AT COMMANDS

	Command Function
A/	Re-execute command.
A	Go off-hook and attempt to answer a call.
B0	Select V.22 connection at 1200 bps.
B1	Select Bell 212A connection at 1200 bps.
C1	Return OK message.
Dn	Dial modifier.
E0	Turn off command echo.
E1	Turn on command echo.
F0	Select auto-detect mode (equivalent to N1). (RC144)
F1	Select V.21 or Bell 103. (RC144)
F2	Reserved. (RC144)
F3	Select V.23 line modulation. (RC144)
F4	Select V.22 or Bell 212A 1200 bps line speed. (RC144)
F5	Select V.22 bis line modulation. (RC144)
F6	Select V.32 bis or V.32 4800 line modulation. (RC144)
F7	Select V.32 bis 7200 line modulation. (RC144)
F8	Select V.32 bis or V.32 9600 line modulation. (RC144)
F9	Select V.32 bis 12000 line modulation. (RC144)
F10	Select V.32 bis 14400 line modulation. (RC144)
H0	Initiate a hang-up sequence.
H1	If on-hook, go off-hook and enter command mode.
I0	Report product code.
I1	Report pre-computed checksum.
I2	Report OK.
I3	Report firmware revision, model, and interface type.
I4	Report response programmed by an OEM.
I5	Report the country code parameter.
I6	Report modem data pump model and code revision.
I7	Reports the DAA code (W-class models only).
L0	Set low speaker volume.
L1	Set low speaker volume.
L2	Set medium speaker volume.
L3	Set high speaker volume.
M0	Turn speaker off.
M1	Turn speaker on during handshaking and turn speaker off while receiving carrier.
M2	Turn speaker on during handshaking and while receiving carrier.
M3	Turn speaker off during dialing and receiving carrier and turn speaker on during answering.
N0	Turn off automode detection.
N1	Turn on automode detection.
O0	Go on-line.
O1	Go on-line and initiate a retrain sequence.
P	Force pulse dialing.
Q0	Allow result codes to DTE.
Q1	Inhibit result codes to DTE.
Sn	Select S-Register as default.
Sn?	Return the value of S-Register n.
Sn=v	Set default S-Register to value v.
Sn?	Return the value of default S-Register.
T	Force DTMF dialing.
V0	Report short form (terse) result codes.
V1	Report long form (verbose) result codes.
W0	Report DTE speed in EC mode.
W1	Report line speed, EC protocol and DTE speed.
W2	Report DCE speed in EC mode.
X0	Report basic call progress result codes, i.e., OK, CONNECT, RING, NO CARRIER (also, for busy, if enabled, and dial tone not detected), NO ANSWER and ERROR.
X1	Report basic call progress result codes and connections speeds (OK, CONNECT, RING, NO CARRIER (also, for busy, if enabled, and dial tone

	not detected), NO ANSWER, CONNECT XXXX, and ERROR.
X2	Report basic call progress result codes and connection speeds, i.e., OK, CONNECT, RING, NO CARRIER (also, for busy, if enabled, and dial tone not detected), NO ANSWER, CONNECT XXXX, and ERROR.
X3	Report basic call progress result codes and connection rate, i.e., OK, CONNECT, RING, NO CARRIER, NO ANSWER, CONNECT XXXX, BUSY, and ERROR.
X4	Report all call progress result codes and connection rate, i.e., OK, CONNECT, RING, NO CARRIER, NO ANSWER, CONNECT XXXX, BUSY, NO DIAL TONE and ERROR.
Y0	Disable long space disconnect before on-hook.
Y1	Enable long space disconnect before on-hook.
Z0	Restore stored profile 0 after warm reset.
Z1	Restore stored profile 1 after warm reset.
&C0	Force RLSD active regardless of the carrier state.
&C1	Allow RLSD to follow the carrier state.
&D0	Interpret DTR ON-to-OFF transition per &Qn: The modem ignores DTR.
&Q0, &Q5, &Q6	The modem hangs up.
&Q1, &Q4	The modem hangs up.
&Q2, &Q3	The modem hangs up.
&D1	Interpret DTR ON-to-OFF transition per &Qn: Asynchronous escape.
&Q0, &Q1, &Q4, &Q5, &Q6	The modem hangs up.
&Q2, &Q3	Interpret DTR ON-to-OFF transition per &Qn: The modem hangs up.
&D2	Interpret DTR ON-to-OFF transition per &Qn: The modem hangs up.
&Q0 through &Q6	Interpret DTR ON-to-OFF transition per &Qn: The modem hangs up.
&D3	Interpret DTR ON-to-OFF transition per &Qn: The modem performs soft reset.
&Q0, &Q1, &Q4, &Q5, &Q6	The modem hangs up.
&Q2, &Q3	Interpret DTR ON-to-OFF transition per &Qn: The modem hangs up.
&F0	Restore factory configuration 0.
&F1	Restore factory configuration 1.
&G0	Disable guard tone.
&G1	Disable guard tone.
&G2	Enable 1800 Hz guard tone.
&J0	Set S-Register response only for compatibility.
&J1	Set S-Register response only for compatibility.
&K0	Disable DTE/DCE flow control.
&K3	Enable RTS/CTS DTE/DCE flow control.
&K4	Enable XON/XOFF DTE/DCE flow control.
&K5	Enable transparent XON/XOFF flow control.
&K6	Enable both RTS/CTS and XON/XOFF flow control.
&L0	Select dial up line operation.
&M0	Select direct asynchronous mode.
&M1	Select sync connect with async off-line command mode. *
&M2	Select sync connect with async off-line command mode and enable DTR dialing of directory zero.
&M3	Select sync connect with async off-line command mode and enable DTR to act as Talk/Data switch.
&P0	Set 10 pps pulse dial with 39%/61% make/break.
&P1	Set 10 pps pulse dial with 33%/67% make/break.
&P2	Set 20 pps pulse dial with 39%/61% make/break.
&P3	Set 20 pps pulse dial with 33%/67% make/break.
&Q0	Select direct asynchronous mode.
&Q1	Select sync connect with async off-line command mode. *
&Q2	Select sync connect with async off-line command mode and enable DTR dialing of directory zero.
&Q3	Select sync connect with async off-line command mode and enable DTR to act as Talk/Data switch.
&Q4	Select Hayes AutoSync mode.
&Q5	Modem negotiates an error corrected link.
&Q6	Select asynchronous operation in normal mode.
&R0	CTS tracks RTS (async) or acts per V.25 (sync).
&R1	CTS is always active.
&S0	DSR is always active.
&S1	DSR acts per V.25.
&T0	Terminate any test in progress.
&T1	Initiate local analog loopback.
&T2	Returns ERROR result code.

&T3	Initiate local digital loopback.
&T4	Allow remote digital loopback.
&T5	Disallow remote digital loopback request.
&T6	Request an RDL without self-test.
&T7	Request an RDL with self-test.
&T8	Initiate local analog loop with self-test.
&V	Display current configurations.
&V1	Display connection statistics
&W0	Store the active profile in NVRAM profile 0.
&W1	Store the active profile in NVRAM profile 1.
&X0	Select internal timing for the transmit clock.
&X1	Select external timing for the transmit clock.
&X2	Select slave receive timing for the transmit clock.
&Y0	Recall stored profile 0 upon power up.
&Y1	Recall stored profile 1 upon power up.
&Zn=x	Store dial string x (to 34) to location n (0 to 3).
%E0	Disable line quality monitor and auto retrain.
%E1	Enable line quality monitor and auto retrain.
%E2	Enable line quality monitor and fallback/fall forward.
%L	Return received line signal level.
%Q	Report the line signal quality.
%7	Plug and Play serial number
%8	Plug and Play vendor ID and product number
\Kn	Controls break handling during three states: When modem receives a break from the DTE: Enter on-line command mode, no break sent to the remote modem.
\K0,2,4	Clear buffers and send break to remote modem.
\K1	Send break to remote modem immediately.
\K3	Send break to remote modem in sequence with transmitted data.
\K5	When modem receives \B in on-line command state: Clear buffers and send break to remote modem.
\K0,1	Send break to remote modem immediately.
\K2,3	Send break to remote modem in sequence with transmitted data.
\K4,5	When modem receives break from the remote modem: Clear data buffers and send break to DTE.
\K0,1	Send a break immediately to DTE.
\K2,3	Send a break with received data to the DTE.
\K4,5	Select normal speed buffered mode.
\N0	Select direct mode.
\N1	Select reliable link mode.
\N2	Select auto reliable mode.
\N3	Force LAPM mode.
\N4	Force MNP mode.
\N5	Connect messages are controlled by the command settings X, W, and S95.
\V0	Connect messages are displayed in the single line format.
\V1	Select modulation.
+MS	Disable RPI/Video Ready Mode.
+H0	Enable RPI and set DTE speed to 19200 bps.
+H1	Enable RPI and set DTE speed to 38400 bps.
+H2	Enable RPI and set DTE speed to 57600 bps.
+H3	Enable RPI+ mode.
+H11	Enable Video Ready Mode
+H16	Download to flash memory at last sensed speed.
**0	Download to flash memory at 38.4 kbps.
**1	Download to flash memory at 57.6 kbps.
**2	Disable Distinctive Ring.
-SDR=0	Enable Distinctive Ring Type 1.
-SDR=1	Enable Distinctive Ring Type 2.
-SDR=2	Enable Distinctive Ring Type 1 and 2.
-SDR=3	Enable Distinctive Ring Type 3.
-SDR=4	Enable Distinctive Ring Type 1 and 3.
-SDR=5	Enable Distinctive Ring Type 2 and 3.
-SDR=6	Enable Distinctive Ring Type 1, 2, and 3.
-SDR=7	Enable Distinctive Ring Type 1, 2, and 3.

2.2 ECC COMMANDS

%C0	Disable data compression.
%C1	Enable MNP 5 data compression.
%C2	Enable V.42 bis data compression.
%C3	Enable both V.42 bis and MNP 5 compression.
\A0	Set maximum block size in MNP to 64.
\A1	Set maximum block size in MNP to 128.
\A2	Set maximum block size in MNP to 192.
\A3	Set maximum block size in MNP to 256.
\Bn	Send break of n x 100 ms.

2.3 MNP 10 COMMANDS

-K0	Disable MNP 10 extended services.
-K1	Enable MNP 10 extended services.
-K2	Enable MNP 10 extended services detection only.
-SEC=0	Disable MNP10-EC.
-SEC=1,[<tx level>]	Enable MNP10-EC and set transmit level <tx level> 0 to 30 (0 dBm to -30 dBm).

2.4 W-CLASS COMMANDS

*B	Display list of permanently blacklisted numbers.
*D	Display list of delayed numbers.
*NCn	Change country to one of eight in NVRAM.

2.5 CALLER ID COMMANDS

#CID=0	Disable Caller ID.
#CID=1	Enable Caller ID with formatted presentation.
#CID=2	Enable Caller ID with unformatted presentation.

2.6 FAX CLASS 1

+FCLASS=n	Service class.
+FAE=n	Data/fax auto answer
+FRH=n	Receive data with HDLC framing.
+FRM=n	Receive data.
+FRS=n	Receive silence.
+FTH=n	Transmit data with HDLC framing.
+FTM=n	Transmit data.
+FTS=n	Stop transmission and wait.

2.7 VOICE/AUDIO COMMANDS

#BDR	Select baud rate (turn off autobaud).
#CLS	Select data, fax, or voice.
#MDL?	Identify model.
#MFR?	Identify manufacturer.
#REV?	Identify revision level.
#SPK=	Speakerphone setting.
#TL	Audio output transmit level.
#VBQ?	Query buffer size.
#VBS	Bits per sample.
#VBT	Beep tone timer.
#VCI?	Identify compression method.
#VGT	Set playback volume in the command state.
#VLS	Voice line select.
#VRA	Ringback goes away timer (originate).
#VRN	Ringback never came timer (originate).
#VRX	Voice receive mode.
#VSD	Enable silence deletion (no function, command response only).
#VSK	Buffer skid setting.
#VSP	Silence detection period (voice receive).
#VSR	Sampling rate selection.
#VSS	Silence detection tuner (voice receive).

#VTD	DTMF/tone reporting.
#VTM	Enable timing mark placement.
#VTS	Generate tone signals.
#VTX	Voice transmit mode.

2.8 CELLULAR COMMANDS

^C2	Download cellular phone driver.
^I	Identify cellular phone driver.
^T6	Indicate status of cellular phone.

2.9 SYNCHRONOUS ACCESS MODE COMMANDS

+ES	Enables and disables Synchronous Access Mode in the client or central site modem
+ESA	Configures the operation of the Synchronous Access Submode
+ITF	Selects Transmit Flow Control Thresholds

3.0 Federal Communications Commission (FCC) Statement

3.1 Part 15

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC rules. These limits are provide reasonable protection against harmful interference in a residential installation this equipment generates, uses and can radiate radio frequency energy and , if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception , which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning:

Use only shield signal cables to connect I/O devices to this equipment.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment

3.2 Part 68

This equipment complies with Part 68 of the FCC Rules. On the bottom of this equipment is label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. IF REQUESTED, THIS INFORMATION MUST BE GIVEN TO THE TELEPHONE COMPANY.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN's of all devices connected to on line should not exceed five (5.0). To be certain of the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area. If your telephone equipment cause harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice isn't practical, you will be informed of your right to file a complaint with the FCC.

Your telephone company may changes in it's facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to given you an opportunity to maintain uninterrupted telephone service.

If you experience trouble with this telephone equipment, please contact the following address and phone number for information on obtaining service or repairs. The telephone company may ask that your disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning. This equipment may not be used on coin service provide by the telephone company.