


VI. Section 15.247(b): Power Output

6.1 Test Condition & Setup

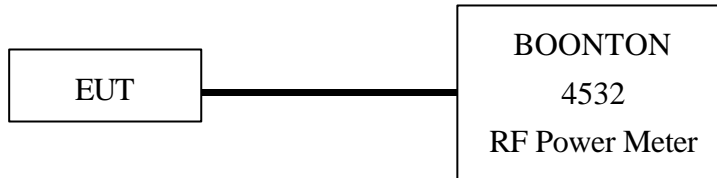

1. The output of the transmitter is connected to the BOONTON RF Power Meter.
2. The calibration is performed before every test. The values of the output power of the EUT will shown in the dBm directly are the transmitter output peak power. Recording as follows.

6.2 List of Test Instruments

Instrument Name	Model No.	Brand	Serial No.
RF Power Meter	4532	BOONTON	117501

6.3 Test Result

Formula:
 Signal generator + |Cable loss| = Output peak power

Channel	Power Meter Reading	Cable Loss	Limit	Output peak power	
	dBm	dBm	(DSS)	dBm	mW
CH1	6.12	5.18	100mW	11.30	13.49
CH6	5.20	5.20	100mW	10.40	10.96
CH11	3.92	5.25	100mW	9.17	8.26

Note:

The limit is vary according to the equipment class, listed below:

1. Digital Transmission System (DTS): 100mW
2. Spread Spectrum Transmitter (DSS): 1W