

Rhein Tech Laboratories
360 Herndon Parkway
Suite 1400
Herndon, VA 20170
<http://www.rheintech.com>

Client: Alinco, Inc
Model: DJ-596TMkII
Standards: FCC 15.121/IC RSS-215
Report #: 2002219
Date: December 31, 2002

APPENDIX H: MANUAL

Please refer to the following pages.


ALINCO

DUAL BAND FM TRANSCEIVER

DJ-596T/E MKII

Instruction Manual

Thank you for purchasing this ALINCO transceiver. This instruction manual contains important safety and operation instructions. Please read it carefully before using the transceiver and be sure to keep it for future reference.

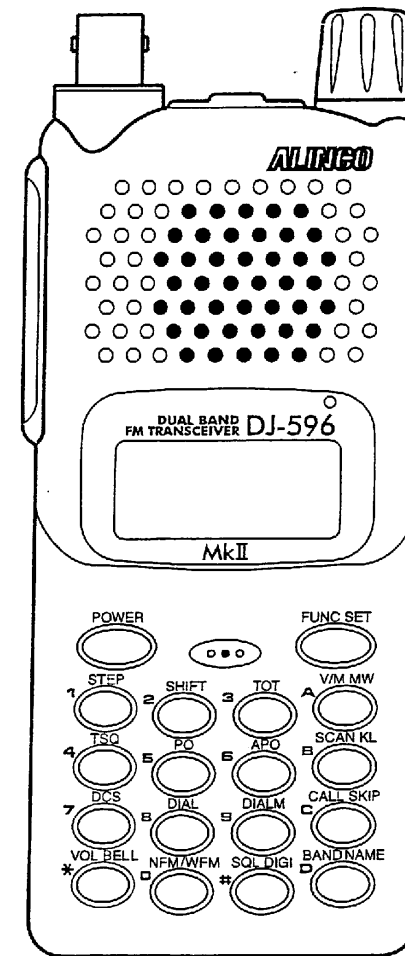

ALINCO INC.

Compliance Information Statement

Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



Tested to Comply
With FCC Standards

FOR HOME OR OFFICE USE

Information in this document is subject to change without notice or obligation. All brand names and trademarks are the property of their respective owners. Alinco cannot be liable for pictorial or typographical inaccuracies. Some parts, options and/or accessories are unavailable in certain areas. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

VHF/UHF FM Transceiver DJ-596T MkII

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

U.S. Representative:

ATOC Amateur Distributing LLC, 23 South High St. Covington, OH
45318 USA Ph. 937-473-2840



Conformity Information

In case the unit you have purchased is marked with a CE symbol, a copy of relative conformity certificate or document can be reviewed at <http://www.alinco.com/usa.html>

Copyright 2003 All rights reserved. No part of this document may be reproduced, copied, translated or transcribed in any form or by any means without the prior written permission of Alinco.Inc., Osaka, Japan.
English Edition Printed in Japan.

Notice to California resident users.

Please refer <http://www.alinco.com/usa.html> for the Safe Drinking Water and Toxic Enforcement Act of 1986 statement.

Introduction

Thank you very much for purchasing this excellent Alinco transceiver. Our products are ranked among the finest in the world. This radio has been manufactured with state of the art technology and it has been tested carefully at our factory. It is designed to operate to your satisfaction for many years under normal use.

Please read this manual completely to learn all the functions the product offers. We made every attempt to write this manual to be as comprehensive and easy to understand as possible. It is important to note that some of the operations may be explained in relation to information in previous chapters. By reading just one part of the manual, you risk not understanding the complete explanation of the function.

Contents


Before Operating the Transceiver	5
■ Attention.....	5
■ Points to Note Before Transmitting.....	5
■ Points to Note When Using an External Power Supply.....	5
1 Functions and Features	6
1.1 Standard Accessories.....	6
2 Accessories	6
2.1 Attaching the Accessories.....	6
● Connecting and Disconnecting the Antenna.....	6
● Attaching the Hand Strap.....	6
● Attaching and Detaching the Belt Clip.....	7
● Attaching and Detaching the Battery Pack.....	7
● Prevent Short Circuiting the Battery Pack.....	8
● Battery Recharger (Wall Charger) (EDC-92.....	8
● Battery Level Indicator.....	8
3 Control Functions	9
3.1 Name and Operation of Transceiver Controls.....	9.10
3.2 DTMF Key Operations.....	11
3.3 Display.....	12
4 Basic Operations	13
4.1 Turning the Power ON.....	13
4.2 Adjusting the Squelch.....	13
4.3 Adjusting the Audio Volume.....	14
4.4 Operating Modes.....	14
■ Switching Between Modes.....	14
4.5 VFO Mode.....	15
■ Setting the Tuning Step.....	16
■ Offset / Split Functions.....	16
4.6 Memory Mode.....	17
■ Selecting a Memory Channel.....	17
■ Programming a Memory Channel.....	17
■ Clearing a Memory Channel.....	17
■ Contents of Memory Programming.....	18
4.7 Call Mode.....	18
■ Programming a Call Channel Frequency.....	19
4.8 Receiving.....	19
■ Monitoring.....	19
■ Switching between NFM and WFM.....	19
4.9 Transmitting.....	20
■ Selecting Transmitter Output Level.....	20
5 Advanced Operations	21
5.1 Scanning.....	21
■ VFO Scan.....	21
■ Memory Scan.....	21
■ Skip Channel Setting.....	21
5.2 Keylock.....	22
5.3 Tone Call.....	22
5.4 Channel Names.....	22
■ Setting.....	22
■ Channel Name Display.....	22
5.5 Lamp.....	23
6 Communicating	24
Selective Calling.....	24
6.1 Tone Squelch.....	24
■ Tone Squelch Setting.....	24
■ Canceling Tone Squelch.....	24

■ Changing Tone Squelch Frequency.....	24	■ DTMF Wait Time.....	32
6.2 DCS (Digital Code Squelch).....	25	■ DTMF Burst / Pause Time.....	32
■ DCS Setting.....	25	■ DTMF First Digit Burst Time.....	32
■ Changing DCS Code.....	25	■ Theft Alarm.....	32,33
■ Canceling DCS.....	25	■ Meaningless.....	33
■ DCS Operation.....	25	■ Mosquito Repelling Signal.....	33
6.3 DTMF Manual Transmitting.....	26	■ End Beep.....	33
6.4 Auto Dialer.....	26		
■ Auto Dialer Memory Setting.....	26	8 Digital-Voice Communication Mode.....	34
■ Auto Dialer Output.....	27		
■ Redialing.....	27	9 Cloning and Packet Operation.....	35
6.5 TOT (Timeout Timer).....	28	9.1 Cloning.....	35
■ Setting.....	28	■ Connecting the Transceivers.....	35
■ TOT Operation.....	28	■ Transmitting Data from the Master transceiver.....	35
6.6 APO (Auto Power Off).....	28	■ Receiving the Master Data.....	35,36
■ Setting.....	28	9.2 Packet Operation.....	36
■ APO Operation.....	28	■ Packet Operation Connections.....	36
6.7 BELL.....	28		
■ Setting.....	28	10 Maintenance and Reference.....	37
■ BELL Operation.....	28	10.1 Troubleshooting.....	37
7 Parameter Setting Mode.....	29	10.2 Resetting.....	38
7.1 Available Parameters.....	29	10.3 Options.....	38
7.2 Selecting the Parameters.....	29	10.4 Transmission System.....	39
7.3 Setting the Functions.....	30		
■ Battery Save.....	30	11 Specifications.....	40
■ Scan Type.....	30	● General.....	40
■ Beep.....	30	● Transmitter.....	40
■ Tone Call Frequency.....	30	● Receiver.....	40
■ BCLO (Busy Channel Lock Out).....	31		
■ TOT Penalty.....	31		

Before Operating the Transceiver

■ Attention

- Do not open the case or touch the interior components. Tampering can cause equipment trouble.
 - Do not expose the transceiver to direct sunlight, dusty places or place it near sources of heat.
 - Keep the transceiver away from TVs, tuners or other equipment if it interferes with reception.
 - Securely connect the antenna included with the transceiver.
 - When transmitting for a long time at high power, the transceiver can overheat.
 - Turn the power off immediately if the transceiver emits smoke or strange odors.
- Ensure that the transceiver is safe, then bring it to the nearest Alinco service center.

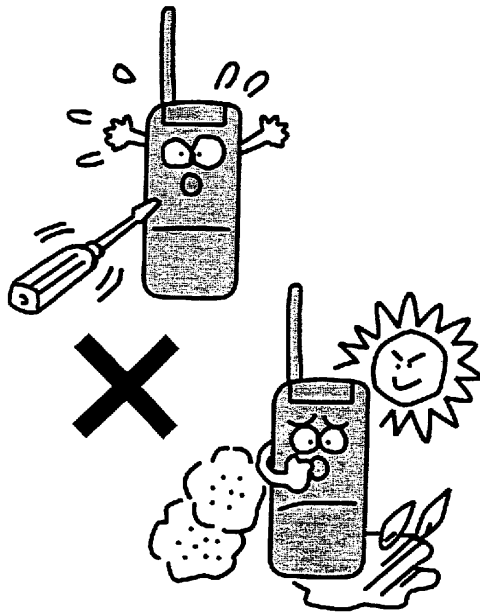

■ Points to Note Before Transmitting

Many wireless stations use frequencies adjacent to the ham bands for business purposes. Be mindful when transmitting near them.

Even when amateur stations obey regulations, unexpected interference can occur.

Pay sufficient attention during mobile operation.

⚠ Caution The use of a transceiver in the following places may be prohibited:

- Aboard aircraft · In airports · In shipping ports
- Within or near the operating area of business wireless stations or their relay stations.

Before using in any of the above places, obtain any necessary permission from the proper authorities, and be mindful of local laws that govern amateur radio operation.

■ Points to Note When Using an External Power Supply

- Use a 6.0V-16.0V DC external power supply.
- When connecting the power supply to the transceiver, use the optional DC cable for base station operation (ECD-37). Connect the cable to the DC jack on the side of the transceiver.
- When power is supplied from a cigarette socket of a car, use the cigarette lighter cable (EDC-43) or the cigarette lighter cable with filter (EDC-36). Use the cigarette lighter cable with filter (EDC-36) during mobile operation to prevent noise. Be sure the car's supply voltage and polarity are correct for use with your equipment.
- Turn the transceiver's power off when connecting or disconnecting the DC cable.

1. Functions and Features

- 39 CTCSS Tone Squelch settings
- 104 DCS Digital Code Squelch settings
- TOT (Timeout timer) function
- Channel naming feature
- Tone Call (burst) functions (1750,2100,1000,1450Hz and CALL)
- 9 Auto Dialer Memories
- Direct Frequency input function
- Cloning
- Theft Alarm function
- MRS (Experimental Mosquito Repelling Signal) function
- TCXO circuit

1-1 Standard Accessories

- Ni-MH Battery Pack EBP-50N (9.6V 700mAh)
- Battery Recharger (EDC-93(120V), EDC-94(230V))
- Helical Antenna
- Belt Clip
- Hand Strap
- Instruction Manual


The standard accessories may vary slightly depending on the version you have purchased. Please contact your local authorized Alinco dealer should you have any questions. Standard accessories may change without notice.

2. Accessories

2.1 Attaching the Accessories

● Connecting and Disconnecting the Antenna

· Connecting

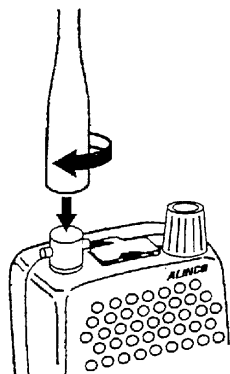

1. Hold the antenna by its base.
2. Align the grooves at the base of the antenna with the protrusions on the antenna connector.
3. Slide the antenna down and turn it clockwise until it stops.
4. Confirm that the antenna is securely connected.

· Disconnecting

Turn the antenna counter-clockwise to disconnect the antenna.


● Attaching the Hand Strap




Attach the hand strap as shown in the illustration on the left.

● **Attaching and Detaching the Belt Clip**

• **Attaching**
Attach the belt clip to the back of the transceiver and push it until it clicks.

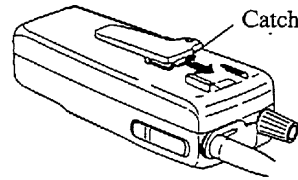


• **Detaching**
Push up the catches of the belt clip, and pull it.

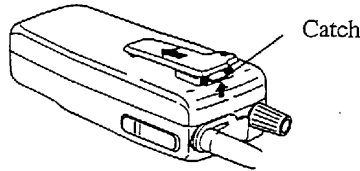


● **Attaching and Detaching the Battery Pack**

• **Attaching**
Align the catches on the battery pack with the grooves on the transceiver, and push in the direction of the arrow until it clicks.

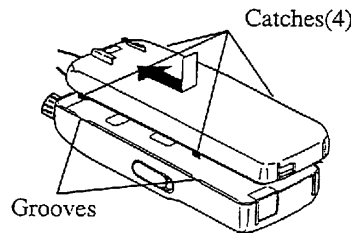

• **Detaching**
Push up the catch at the bottom, and slide the battery pack out.


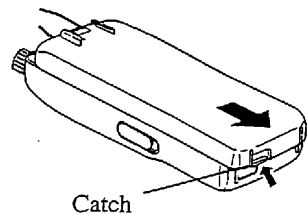


⚠ **Caution**

- The battery pack is not charged when shipped. It must be charged before using.
- It takes up to 12 hours (maximum) to fully charge the battery pack with the EDC-92.
- Charging should be conducted within a temperature range of 0 to 40 °C. (32-104 °F)
- Do not modify, dismantle, incinerate or immerse the battery pack in water, as these practices can be dangerous.
- Never short-circuit the battery pack terminals, as this can cause damage to the equipment or lead to overheating the battery, which could cause burns.
- Unnecessary prolonged charging (overcharging) can deteriorate battery performance.
- The battery pack should be stored in a dry place where the temperature is from -20 °C to -45 °C. (-4 °F - +113 °F)
Temperatures outside this range can cause the battery liquid to leak. Exposure to prolonged high humidity can cause corrosion of metal components.
- Typically, the battery pack can be charged up to 500 times. However, the battery pack can be considered dead if the period of use drops significantly despite the pack being charged for the aforementioned charging time. When this happens, a new pack should be used.
- In the interests of environmental protection, do not dispose of the used battery pack improperly. Check with your local solid waste officials for details on recycling options or proper disposal in your area.
- The battery pack can be charged by mounting it on the DJ-596MkII and connecting 13.8VDC to the DC power supply jack on the transceiver.

● Prevent Short Circuiting the Battery Pack

Be extra cautious when carrying the battery pack; short-circuiting will produce surge current possibly resulting in fire.

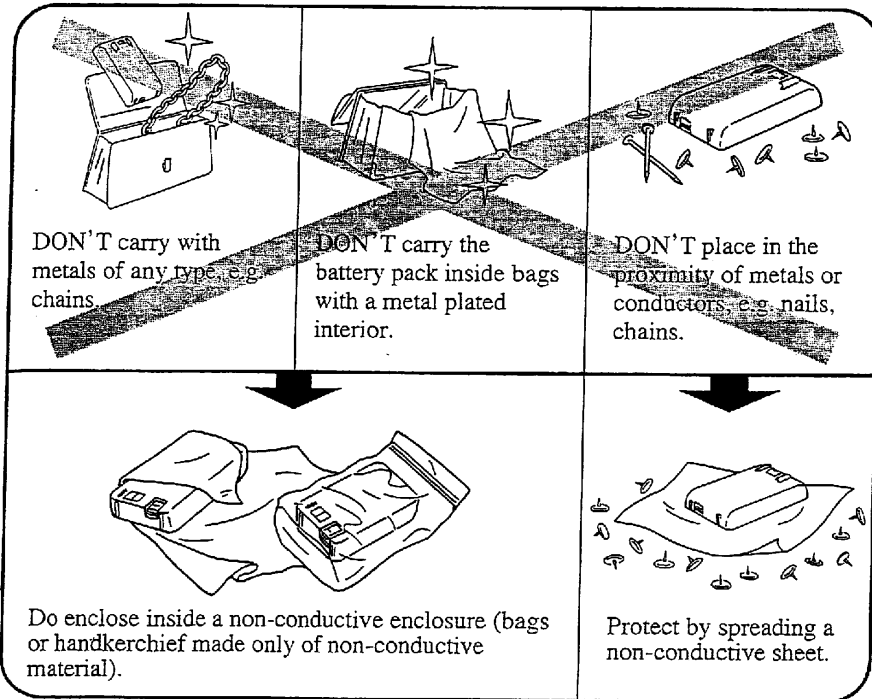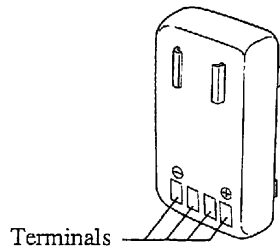


⚠ Caution: Keep the battery pack inside the included pouch when carrying.

● Battery Recharger (Wall Charger) (EDC-93/94)

· Recharging

Power Plug

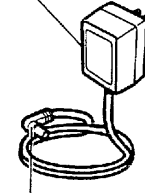


AC Adapter Plug

1. Mount the battery pack on the transceiver
2. Connect AC adapter plug to the external power supply jack on the transceiver.
3. Connect to the AC outlet.

- ⚠ Caution**
- Turn the transceiver power off before recharging the battery pack. (EDC-93/94)
 - Disconnect the EDC-93/94 from the outlet while not using it.
 - Never charge the battery packs of other manufacturers with this charger.
 - The required recharging time depends on the condition and model of battery pack. Refer to the instruction manual of the battery pack.
 - Never short-circuit the recharging terminals of this recharger with metal objects, etc. The charger can be damaged.
 - The EDC-93/94 does not work when the voltage from the wall outlet is extremely low.
 - The charger cannot be used to charge dry cell batteries, or used with the dry cell battery pack case.

● Battery Level Indicator

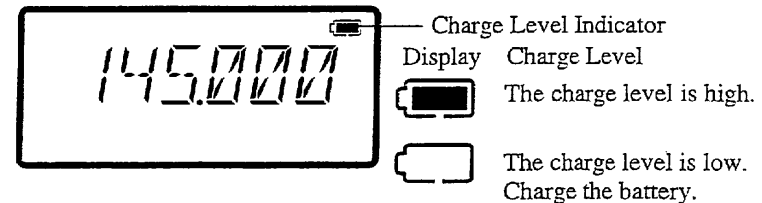


- Battery consumption level may change depending on the surrounding temperature or the frequency of use.
- Even if the battery monitor indicates the need for charging, you may be able to continue operations for low-output transmissions or reception.

3. Control Functions


3.1 Name and Operation of the Transceiver Controls

Top and Front Views

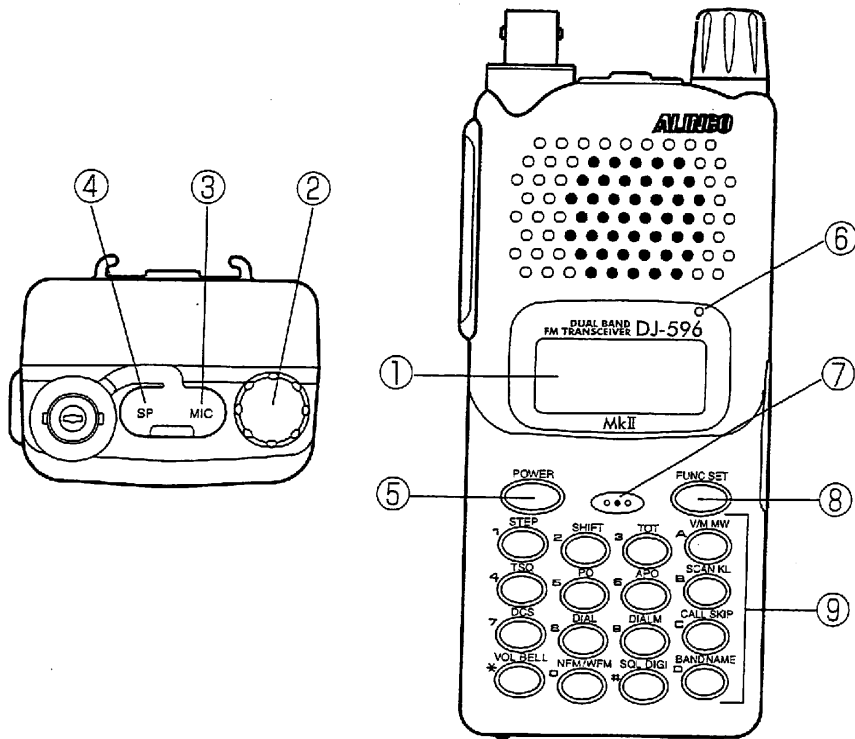

Key	Function
①	Display (LCD) Refer to "Display" in this manual. (Page12)
②	Dial Rotate this dial to select transmitting/receiving frequency, memory channel, offset frequency, tone frequency, DCS code, mode settings and input character for memory names. By rotating the dial after pressing the FUNC key, frequency can be adjusted by 1MHz steps.
③	MIC Connector For connection of the optional external microphone (2kΩ) with 2.5Φ stereo plug.
④	SP Connector For connection of the optional external speaker (8Ω) with 3.5Φ monophonic plug.
⑤	Power switch For switching power ON/OFF.
⑥	TX/RX Lamp Illuminated green when the squelch unmutes. Turns to red when transmitting.
⑦	Microphone Speak into microphone from a distance of approx. 5 cm in a normal tone.
⑧	FUNC key Use this key in combination with other keys to access various functions of the transceiver. Holding this key for 3 seconds activates the Setting mode where various parameter adjustments are possible.
⑨	Key pads Refer to "DTMF Key Operations". (Page 11)

■ Side View

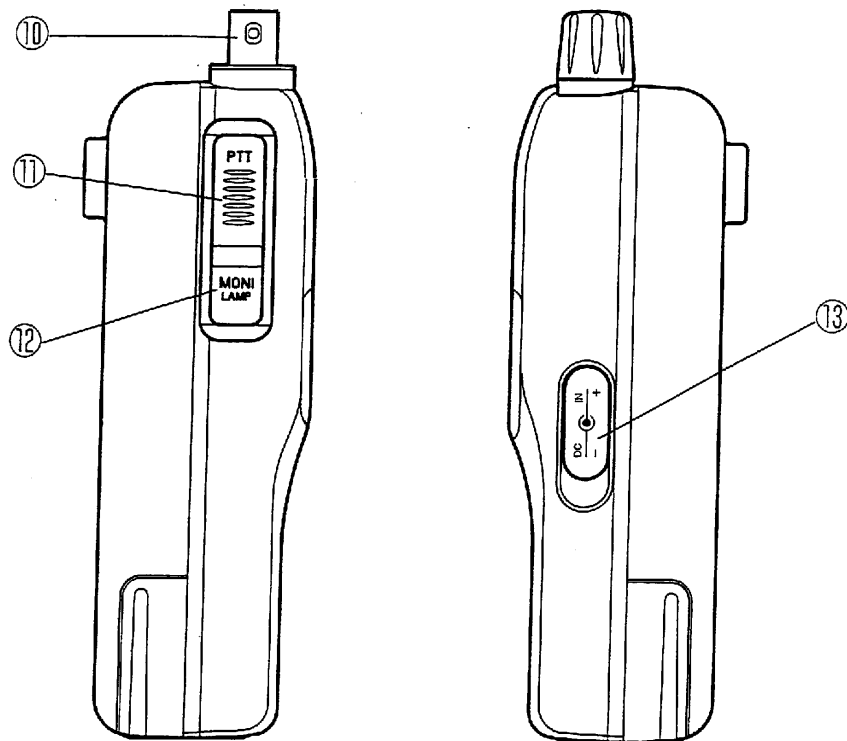














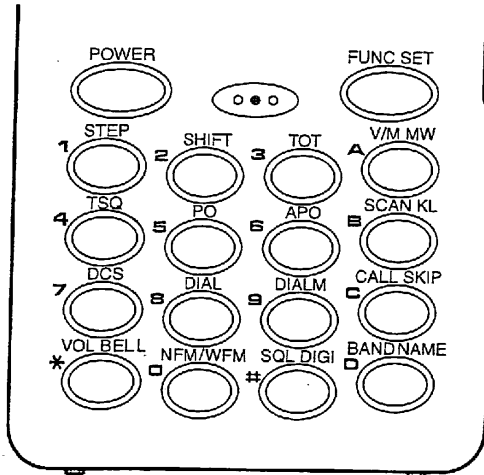




Key		Function
⑩	BNC Antenna Connector	For connection of the included helical antenna. If you use other antennas, choose one with low SWR (Standing Wave Ratio) designed for VHF and UHF frequencies.
⑪	PTT key	Press this key to transmit. When the key is released, the transceiver returns to receive.
⑫	MONI key	When this key is pressed, the squelch is unmuted and you can hear the received signal. The squelch is also unmuted when TSQ/DCS are set. If this key is pressed while F appears, the lamp lights for five seconds. Pressing this key while the PTT key is pressed and held, transmits the tone call (tone burst) signal.
⑬	DC-IN	Terminal for connecting an external power supply. By connecting the optional cigarette lighter cable with filter (EDC-36), you can supply the power from a car battery. The pin in the center of the jack is + positive, and the surrounding part is - negative. Use a regulated power supply with DC6.0~DC16.0V, 2A or more for home-use with the optional EDC-37 cable.

3.2 DTMF Key Operations


3






Control Functions

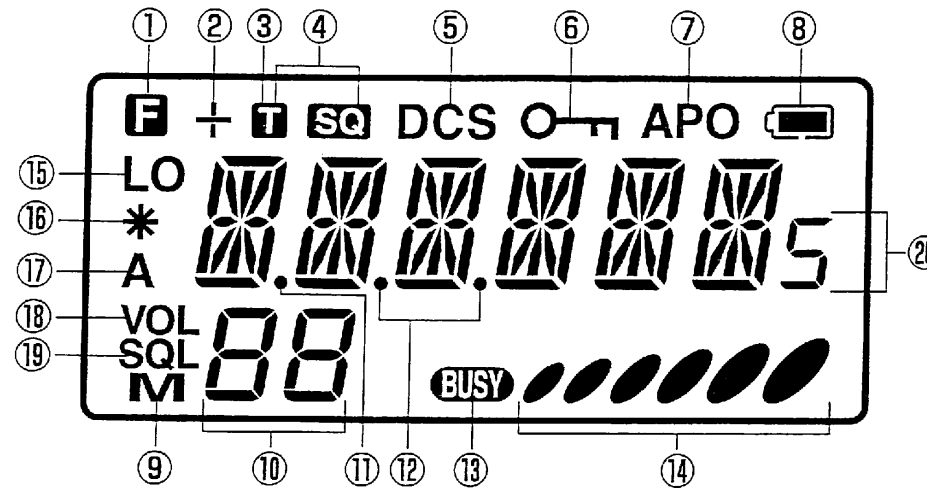

Key	Independent operation	While F appears after pressing the  key
	Inputs "1"	Tuning Step setting (Page 16)
	Inputs "2"	Shift / Split setting (Page 16)
	Inputs "3"	TOT (timeout timer) setting (Page 28)
	Inputs "4"	Tone Squelch and Tone Encoder setting (Page 24)
	Inputs "5"	Selects the transmission output level HI/LOW (Page 20)
	Inputs "6"	APO (auto power off) setting (Page 28)
	Inputs "7"	DCS (digital code squelch) setting (Page 25)
	Inputs "8"	Auto Dialer sending (Page 27)
	Inputs "9"	Auto Dialer memory setting (Page 26)
	Inputs "0"	Selects NFM/WFM (Page 19)
	Switches VFO / Memory modes (Page 15, 17)	Writes VFO information to a Memory Channel (Page 15)
	Scanning Starts / Stops (Page 21)	Keylock setting (Page 22)
	Switches to Call mode (Page 18)	Skip Channel setting (Page 21)
	Band change (Page 14)	Channel Name setting (Page 22)
	Squelch Level adjustment (Page 13)	Digital-voice mode setting (Page 34) Optional EJ-47U required
	Volume adjustment (Page 14)	BELL function setting (Page 28)


3.3 Display




①	F	Appears when the  key is pressed.	⑫	•	Divides MHz and kHz of the frequency. Blinks during scanning operation.
②	+	Indicates the offset frequency (−/+) direction.	⑬	BUSY	Appears when the squelch is unmuted.
③	T	Appears when the tone encoder is set.	⑭		Indicates received signal level and transmission output.
④	T SQ	Appears when the tone squelch is set.	⑮	LO	Appears when the transmitter output level is set to LOW.
⑤	DCS	Appears when the DCS is set.	⑯	*	Appears when the Theft Alarm is ON.
⑥		Appears when keys are locked.	⑰	A	Appears when NFM mode has been selected.
⑦	APO	Appears when Auto Power Off function is activated.	⑱	VOL	Appears while the audio volume is being adjusted.
⑧		Interior of the battery icon appears empty when the battery charge level becomes low.	⑲	SQL	Appears while the squelch level is being adjusted.
⑨	M	Appears when the Memory mode is activated.	⑳		Indicates the frequency and status of various settings.
⑩	88	Indicates memory channel No. and other setting levels.			
⑪	•	Meaningless on this Version. (Page 33)			

4. Basic Operations

4.1 Turning the Power ON

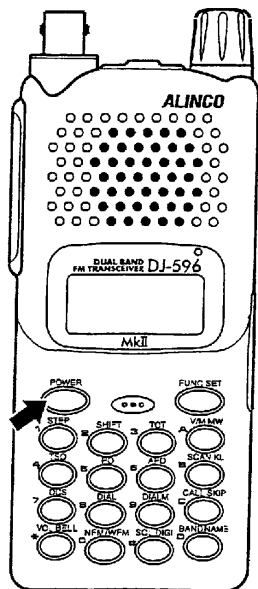

Hold the  key down for a second to turn the power ON.


To turn the power OFF, hold the power key down again for a second.



4.2 Adjusting the Squelch

The squelch silences the background noise when a signal is not received.

“To unmute the squelch,” means that the transceiver receives a signal higher than the squelch setting and reproduces the received sound.

- There are 21 squelch levels (00 ~ 20).
- The default setting is 00 (minimum).


1. Press the  key. SQL and the squelch level will appear on the LCD.

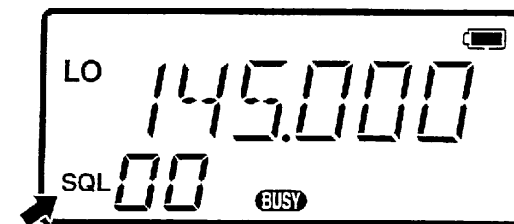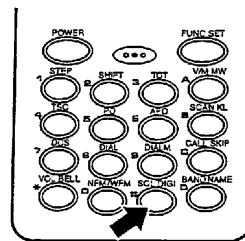


2. Adjust the squelch level by rotating the dial.
A higher squelch level requires a stronger signal to unmute the squelch.
3. Press any key other than the MONI key to complete the setting.
The setting function terminates automatically if no key is pressed within 5 seconds.

4.3 Adjusting the Audio Volume

- There are 21 volume levels (00 ~ 20).
- The default setting is 00 (minimum).

1. Press the  key. **VOL** and the volume level will appear on the LCD.

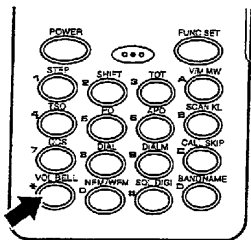


2. Adjust the volume level by rotating the dial.
A higher volume level produces a louder sound.
3. Press any key other than the MONI key to complete the setting.
The setting is automatically completed if no key is pressed within 5 seconds.


4.4 Operating Modes


The DJ-596MkII has three operating modes: VFO mode, MR (memory) mode and CALL mode.
The VFO mode allows to operate at the displayed frequency. The MR mode has 100 channels (VHF/UHF mixture) and the CALL mode has one VHF and one UHF channel.

Switching Between Modes


“VFO mode” and “MR mode” are switched by pressing the  key.

M appears on the display when “MR mode” is activated, and disappears when “VFO mode” is activated.

“CALL mode” is activated by pressing the  key. **C** appears on the display.

To return to the previous mode, press the  key again.


To switch between VFO VHF and VFO UHF, or CALL VHF/UHF, press the “BAND” key while in either of those modes.

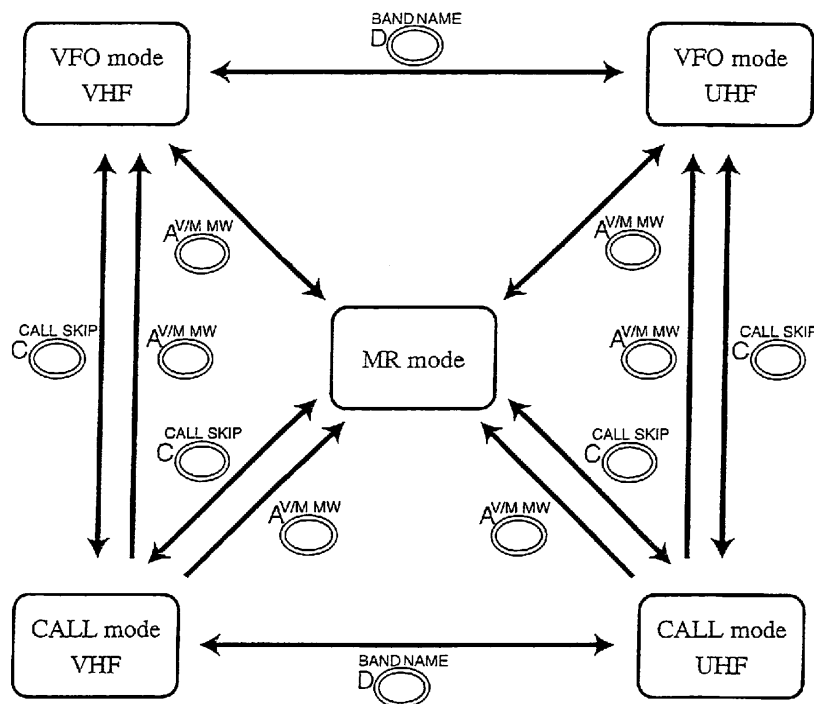

4.5 VFO Mode


The factory default setting for the DJ-596MkII is the VFO mode. The VFO mode allows you to change the frequency and other settings.



● Switching the Band

Press the  key to switch the band. Each press of the key changes the band as shown below.


Example: 145.00 → 435.00 → 145.00 → ... (DJ596EMkII)

● 1MHz UP / DOWN

Select the VFO mode by pressing the  key.

Press the  key and rotate the dial while  appears. Frequency increases and decreases by 1MHz steps.

● Entry From the Keypad

Select the VFO mode by pressing the  key.

Entry e.g.: 145.000MHz 1 → 4 → 5 → 0 → 0 → 0

(Tuning step : 5KHz)

Note To cancel the keypad input, press a key other than number keys at any time while entering the number. The previous frequency will appear on the display again. The last digit entered must be in accordance with the currently selected tuning step.

● Entry Completion Digit for Different Tuning Steps

Depending on the tuning step, entry may be required to the 1 kHz digit or the 10 kHz digit.

Tuning step	Entry completion digit	Last digit selection
12.5kHz	10kHz	When you input the 10kHz digit, the 1kHz digit is defined as follows: {0}:00.0, {1}:12.5, {2}:25.0, {3}:37.5, {4}:invalid {5}:50.0, {6}:62.5, {7}:75.0, {8}:87.5, {9}:invalid
25.0kHz	10kHz	When you input the 10kHz digit, the 1kHz digit is defined as follows: (Other entries are invalid) {0}:00.0, {2}:25.0, {5}:50.0, {7}:75.0
5kHz	1kHz	Enter {5} for the 1kHz digit to enter 5kHz. Any other entry sets the 1kHz digit to 0.
Other	10kHz	When you input the 10kHz digit, the 1kHz digit is defined.



4.6 Memory Mode


In the Memory mode, you can call up and operate on a previously programmed frequency.

The DJ-596MkII has 100 memory channels (any VHF/UHF mixture). It is not possible to increase the number of memory channels. All memory channels are blank in the initial factory configuration.

NOTE: Resetting the memory (page 38) will eliminate all memory channel data.



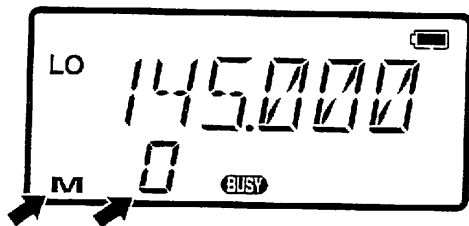

■ Selecting a Memory Channel




1. Press the  key to activate the Memory mode.
The mode switches between Memory mode and VFO mode by pressing the  key.
2. **M** and a memory channel number appear when the Memory mode is activated.
M blinks when the displayed channel is blank.




3. Rotate the dial to select a memory channel.
Rotate the dial clockwise to choose a higher-numbered memory channel, and counterclockwise to select a lower-numbered memory channel.



■ Programming a Memory Channel



1. Press the  key to activate the Memory mode. Select a memory channel to be programmed by rotating the dial.
A blinking **M** indicates that the memory channel is blank.
2. Configure the frequency and parameters in the VFO mode.
3. Press the  key and the  key while  appears. A beep is heard and memory channel programming is completed.

Reference · To overwrite the memory channel, in the memory mode press  then  .
· The **M** icon starts to flash. Press  key to enter to the VFO mode and edit the parameters. Repeat the above procedure 3 to enter the new configuration.

■ Clearing a Memory Channel

1. Press the  key to activate the Memory mode.
2. Select a memory channel you wish to clear by rotating the dial.
Observe that, **M** is displayed steadily (without blinking).

- Press the  key and the  key while **F** appears. A beep is heard and the programmed frequency is cleared. **M** starts blinking.

Reference If you wish to retrieve the cleared information, press the  key and the  key while the previous memory channel information remains on the display. Note that this retrieving operation will not work if the memory channel or operating mode was changed after the memory was cleared.

■ Contents of Memory Programming

The following contents can be stored in each memory channel and in the CALL channels.

- Frequency
- Offset Frequency
- Shift Direction (+/-)
- Tone Encoder Frequency
- Tone Encoder / Decoder Setting
- Tone Decoder Frequency
- DCS Code
- DCS Setting
- Transmit Power H/L
- Skip Channel Setting
- Channel Name Setting
- Wide / Narrow setting
- Battery Save Setting
- Busy Channel Lock Out (BCLO)

4.7 Call Mode

The Call mode is used when you wish to receive or transmit on the Quick-recall channel.


The DJ-596MkII has 2 CALL channels (VHF and UHF).

The default settings are :


VHF : 145.00MHz, UHF : 445.00MHz (DJ-596TMkII)


VHF : 145.00MHz, UHF : 435.00MHz (DJ-596EMkII)


To edit the frequency and parameters, follow the memory channel procedure and select C instead of the channel number.

- Press the  key to activate the Call mode.



- CALL channel switches between VHF and UHF by pressing the  key in the Call mode.

- To return to the VFO mode or the Memory mode, press the  key again.

The VFO mode or the Memory mode can also be reactivated by pressing the  key.




- Note
- In the Call mode, the frequency and memory channel number cannot be changed by rotating the Dial.
 - Offset, Tone, DCS settings can be temporarily changed.
 - Scanning cannot be performed in the Call mode.

■ Programming a Call Channel Frequency

A Call channel is one of the memory channels. To program the frequency and other settings of the call channel, select the memory channel in the VFO mode.

Note The Call channels can be programmed but cannot be cleared.

4.8 Receiving




1. Turn the power ON by pressing the  key.
2. Press the  key and rotate the dial to adjust the audio volume.
3. Press the  key and rotate the dial to eliminate the noise.
4. Adjust to the desired frequency.
When a signal is received on the selected frequency, **BUSY** appears on the display, the RF meter indicates relative signal strength, and the received signal is heard. The RX/TX Lamp displays green during reception.


■ Monitoring

The Monitor function unmutes the squelch temporarily to hear weak or unsteady signals.

- While the MONI key is pressed, the squelch is unmuted and sound is heard from the speaker regardless of the squelch setting.
- Monitoring can be performed even if the tone squelch or DCS are active.

■ Switching between NFM and WFM

1. The NFM/WFM mode is changed by pressing the  key and the  key while  appears.
A appears when NFM is selected, and disappears when WFM is selected.
NFM : **A**
WFM : No indication

2. Press a key other than the MONI key or the  key to complete the setting. (Default setting: WFM)

Note When NFM is selected, the transmitted deviation also becomes half of the WFM value.

4.9 Transmitting






1. Select a frequency on which you wish to transmit.
2. Press the PTT key to transmit. The RX/TX Lamp turns on red while transmitting.
3. Speak into the microphone at a normal tone. Excessive voice level may cause poor audio.
4. Release the PTT key to stop transmitting and return to the receiving mode.

Note · A tone call (burst) signal can be transmitted by pressing and holding the PTT key and pressing the MONI key.
(Page 22)

- If the PTT key is pressed when the frequency is outside of the transmitting range, "OFF" appears on the display prohibiting the transmission.

■ Selecting the Transmission Output Power

The transmission output power can be changed by the following operation:

- Press the  key and then  key while  appears. Transmission power is switched between HI and LOW. **LO** appears on the display when the output level is set to LOW, and nothing is indicated when HI is selected. Initial setting is LOW.
- The RF meter indicates LOW transmission power as , and HI transmission power as  while transmitting.

Note Transmitter output level cannot be changed during the transmission.

5. Advanced Operations

5.1 Scanning

You can automatically search for signals to receive by using the scan function. The Timed Scan and Busy Channel Scan modes are available.

Timed Scan

Scanning stops on a busy channel, and resumes five seconds later even if the frequency remains busy.



Busy Channel Scan

Scanning resumes only after a received signal ceases.

- The decimal point blinks during scanning.
- If the MONI key is pressed during scanning, scanning stops temporarily and the squelch unmutes. When the MONI key is released, scanning restarts.
- Scanning direction can be changed by rotating the dial during the scanning operation.
- Scan starts in the last selected direction the next time the feature is activated.
- The Scan mode is cancelled by pressing a key other than the MONI key.

Reference Timed scan or busy channel scan mode can be selected in the Setting mode. (Page 30)



■ VFO Scan

1. Press the  key to activate the VFO mode.
2. Press the  key.

Scan starts in the last operated direction by tuning steps.



3. Scanning direction goes upwards by rotating the dial clockwise, and goes downwards by rotating the dial counterclockwise.
4. To stop scanning, press a key other than the MONI key.

■ Memory Scan




1. Press the  key to activate the Memory mode.
2. Press the  key to start scanning.
3. Scanning direction goes upward by rotating the dial clockwise, and goes downward by rotating the dial counterclockwise.
4. To stop scanning, press a key other than the MONI key.


■ Skip Channel Setting

Memory channels that have a “memory skip” programmed are not monitored during memory scanning.

- Press the  key in the Memory mode, and press the  key while **F** appears. The selected memory channel is now set as a skip channel. The skip channel setting is cancelled by repeating the same operation.
- The 10MHz decimal point appears in a memory channel that a memory skip is programmed.

5.2 Keylock

To switch the keylock function ON/OFF, press the  key and then the  key while  appears.

-  appears when the key lock is ON.
- Operations of the PTT / LAMP / MONI keys, and the VOL / SQL controls are available even when the key lock is ON.

5.3 Tone Calls

The Tone Call function transmits an audible tone to access repeaters typically used in Europe. It is also convenient to use this function as if the "ring" of a telephone to attract the attention of stand-by stations.








- Press MONI key while pressing and holding the PTT key to transmit the tone. The initial frequency of the tone signal is 1750Hz, and it can be changed in the Setting mode. (Page 30)
- The call tone (tone burst) has the first-priority. The CTCSS or DCS tone becomes activated only when the MONI key is released to stop transmitting the call tone.

5.4 Channel Names


Instead of the frequencies, the alphanumeric characters can be displayed for the memory and call channels.

There are 67 characters available such as A ~ Z and 0 ~ 9 for programmed memory channel names.



■ Setting





1. Select a channel you wish to name in the Memory mode.
2. Press the  key and the  key while  appears. "A" appears and blinks on the display.
3. Select a character by rotating the dial.
4. Press the  key to set. The selected character stops blinking. The same character blinks on the right side of the completed.
5. Repeat this to edit up to 6 characters.
6. If the  key is pressed during the name setting procedure, all the selected characters are cleared.
7. Press a key other than the MONI,  and the  keys to complete the setting.

■ Channel Name Display

- In the Memory mode, programmed channel names are displayed instead of the frequency display. (Channel numbers are displayed whether or not the channel names are programmed.)
- Frequency display appears for 5 seconds by pressing the  key. If a key is pressed during the 5-second frequency display, the display returns to the channel name indication or moves to a function setting mode depending on how long the key is being pressed.

5.1 Lamp

The display can be illuminated to ease the operation in the dark. Press the  key and then the MONI key while  appears to illuminate the display.

- It turns off automatically if no key is pressed for 5 seconds.
- If a key other than the LAMP key is pressed while it's illuminated, it remains turned on for another 5 seconds.
- To illuminate it continuously, press and hold the MONI key and turn the power ON.
- To cancel continuous lighting, turn the power OFF, press and hold the MONI key and turn the power ON again.
- To turn off continuous lighting, press the  key and the MONI key while  appears. To illuminate again, press the  key and the MONI key while  appears.

6. Communicating


Selective Calling

- When communicating with a specific station, the tone squelch function or DCS function may be used. The tone squelch is a function that unmutes the squelch and enables you to hear only the signal that matches your tone setting. 39 different tones are available.
- DCS is a similar system but uses digital code tones instead of TSQ's continuous tone, and 104 codes are available.
- Tone squelch and DCS cannot be used at the same time.

6.1 Tone Squelch

■ Tone Squelch Setting

1. Press the **FUNC SET** key and the **4^{TSQ}** key while **F** appears. Present status and tone frequency are displayed, and the setting rotates as below each time the **4^{TSQ}** key is pressed.



- **T** indicates that only the encoder function is set. This is to access the CTCSS-Activated repeater system without using the TSQ.
- **T SQ** indicate that the encoder /decoder functions (tone squelch) are set.
- Monitoring can be performed when the tone frequency is being displayed.

2. Rotate the dial to select a tone frequency from the list below.

67.0	69.3	71.9	74.4	77.0	79.7	82.5	85.4	88.5	91.5
94.8	97.4	100.0	103.5	107.2	110.9	114.8	118.8	123.0	127.3
131.8	136.5	141.3	146.2	151.4	156.7	162.2	167.9	173.8	179.9
186.2	192.8	203.5	210.7	218.1	225.7	233.6	241.8	250.3(Hz)	

3. Press a key other than the MONI key to complete the setting.

■ Canceling Tone Squelch

Select "TCS-OF" in the tone squelch setting mode by pressing the **4^{TSQ}** key. Press a key other than the MONI key to complete the tone squelch cancellation.




■ Changing the encode / decode frequency

Tone encode frequency and tone decode frequency can be set independently.

- If the encode frequency is changed when **T** is displayed, the decode frequency is automatically changed to the same frequency.
- If the frequency is changed when **T SQ** is displayed, only the decode frequency is changed.


6.2 DCS (Digital Code Squelch)

DCS Setting

Press the  key and the  key while  appears.

DCS and the DCS code are displayed.

Initial setting is "023".




1. Rotate the dial to select desired DCS code. Refer the chart below for available codes.
2. Press any key other than the MONI key to complete the setting. The encode / decode code is unique and can't be set separately.
3. To select DET mode for the DCS operation, display DCS-OF then rotate the dial to select DCS OF, then follow the step 1. See the Reference for the details of DET mode.

The following 104 DCS codes can be selected.

023	025	026	031	032	036	043	047	051	053
054	065	071	072	073	074	114	115	116	122
125	131	132	134	143	145	152	155	156	162
165	172	174	205	212	223	225	226	243	244
245	246	251	252	255	261	263	265	266	271
274	306	311	315	325	331	332	343	346	351
356	364	365	371	411	412	413	423	431	432
445	446	452	454	455	462	464	465	466	503
506	513	523	526	532	546	565	606	612	624
627	631	632	654	662	664	703	712	723	731
732	734	743	754						

Canceling DCS

To cancel DCS, select "DCS-OF" by pressing the  key, and press a key other than the MONI key to complete the setting.

DCS Operation

Squelch unmutes when the receiving code matches the programmed DCS code.

Reference · DET mode

DET on DCS function stands for Detect-Only mode. In DCS operation, the TX signal carries a digital code such as 001010000 as determined by setting the 3-digit code such as 123,124 etc. This stream is modulated with a very low sub-audible frequency. The RX side, just like TSQ, detects this stream and determines the squelch operation. This DCS code stream is transmitted all the way through the communication like a CTCSS tone (in this case a single continuous tone, instead of digital coded stream).

It is necessary for receiver to correctly and CONTINUOUSLY receive this DCS digital stream to hold the squelch open, otherwise the CPU thinks that the signal is unwanted and it closes the squelch. But due to noise or weak signal strength etc, sometimes it is difficult to continuously receive a DCS stream. By activating DET, the receiver opens the squelch when the first corresponding DCS stream is received, then thereafter, regardless of the status of the DCS codes, the DCS squelch remains opened.







Advantage of DET

It enables DCS squelch operation even in poorer conditions, opening the squelch only when a corresponding DCS coded signal is received.

Disadvantage of DET

When it is activated, suppose 2 stations are sharing the same channel and using the DCS selective-calling technique and transmitting at the same time. After station A with its corresponding DCS is gone, you may still hear station B, although he can't open your DCS squelch by his signal alone.

6.3 DTMF Manual Transmitting

When one of the 16 keys ( ~ ,  ~ , , ) is pressed during transmission, a DTMF code corresponding to the pressed key is transmitted. DTMF codes that are transmitted manually are automatically recorded, up to 16 digits, and can be redialed in the same fashion as the auto dialer.



1. Press and hold the PTT key and press one of the 16 keys.
2. A DTMF code corresponding to the pressed key is transmitted.

6.4 Auto Dialer

This function is to set DTMF codes to the DTMF memory. The 9 memories and 1 redial memory are available.






■ Auto Dialer Memory Setting

Program DTMF codes you wish to transmit using the auto dialer function.

1. Press the  key and the  key while **F** appears. The auto dialer programming mode is activated. 6 figures are displayed. No display appears in the initial status.
2. Select a dialer memory number from No.1 ~ 9 by rotating the dial.
Input the codes by pressing the 16 keys. The display indication will be as follows.






3. For example, if you input 123456789, the display will be:
「1」 → 「12」 → 「123」 → 「1234」 →
「12345」 → 「123456」 → 「234567」 →
「345678」 → 「456789」

You can input characters up to 16 digits.




- A pause can be set instead of codes by pressing the  key and the  key while **F** appears. A pause is displayed as “—”, and no signal is sent for approx. 1 second.
- The display can be scrolled within the entered range by pressing the  key and rotating the dial.
- To clear the entered codes, press the  key and the  key while **F** appears.

4. Press the PTT key to complete the setting.

■ Auto Dialer Output







1. In the receive mode, press the  key and press the  key while  appears. “DIAL” is displayed.
2. By pressing one of the  ~  keys, DTMF codes that are programmed into the autodial memory number of the pressed key are automatically played back through the speaker.
 - The DTMF tones are not transmitted in this operation.
 - If DTMF codes are not programmed into the memory number of the pressed key, no DTMF codes are heard.

● Transmitting DTMF codes from the Auto Dialer

1. Press the PTT key to transmit, and press the  key while the PTT key is being held. “DIAL” appears on the display.
2. Press one of the  ~  key to transmit the programmed DTMF codes.
If DTMF codes are not programmed into the memory number of the pressed key, no DTMF codes are transmitted.

■ Redialing

This function is to retrieve the last DTMF codes output.




1. In the receiving mode, press the  key and the  key while  appears. “DIAL” appears on the display.
2. The most recently used DTMF codes (either one of the auto dialer codes or manually transmitted DTMF codes) are automatically heard from the speaker by pressing the  key. The signals are not transmitted in this operation.
3. To transmit the most recently used DTMF codes, press and hold the PTT key, and then press the  key and the  key. While they are being transmitted, the DTMF codes are also heard from the speaker during this operation.

Note The redial function is not active in the default factory settings or after resetting.


6.5 TOT (Timeout Timer)

This function automatically stops transmission when a specified period of time has elapsed.

■ Setting

1. Press the  key and the  key while  appears. "TP-OFF" is displayed.
2. Rotate the dial to adjust the TOT setting time. The maximum setting time is 450 seconds.

TP-OFF → T-30 → T-60 → T-90 → → T-450



■ TOT Operation

When transmitting continues up to the TOT setting time, a beep is heard 5 seconds before the time-out. When the transmission exceeds the set TOT value, the transceiver automatically stops transmitting and shifts to receive mode. In order to transmit again, release the PTT key once and then press it again.




If a TOT penalty is set, transmitting is not available within the penalty period even if the PTT key is pressed again.

Note: A warning beep will not be heard if the Beep setting is set to OFF.

6.6 APO (Auto Power Off)

This function turns off the power automatically.

■ Setting

- Press the  key and the  key while  appears. APO is displayed.

■ APO Operation

If there is no operation for 30 minutes when APO is on, a beep is heard and the power goes off automatically.





To turn on the power again, press the power key.

Note Only the key operations extend the APO timeout regardless of receiving signals.

6.7 BELL

The bell informs you that you are being called by sounding a bell like a pager.

■ Setting

1. Press the  key and the  key while  appears. "BEL-OF" is displayed.
2. Select "BEL-ON" by rotating the dial, and Press the  key or the PTT key to complete the setting.

■ BELL Operation

When a signal is received, the "BELL" blinks and a bell sound is heard. The Bell function turns off automatically when a key is pressed.

7. Parameter Setting mode




In the setting mode, you can adjust various operating parameters of the DJ-596.

7.1 Available parameters

The following operational parameters are available to suit your needs.

- Battery Save function
- Scan Type
- BEEP Sound
- Tone Call Frequency
- Busy Channel Lockout
- TOT Penalty
- DTMF Wait Time
- DTMF Burst/Pause (DP) Time
- DTMF First Digit Burst Time
- Theft Alarm Function
- Meaningless
- Mosquito Repelling Signal
- End Beep

7.2 Selecting the Setting Mode

1. Hold  key down for a few seconds and the Setting mode is activated, and menu number appears
The initial menu displays "BS-ON".
2. You can review the menu by pressing the MONI key (upward) or  (downward).
Monitoring will not occur in this mode.
3. Rotate the dial and select the appropriate setting.
4. Press a key other than the  and MONI keys to complete the setting and to return to the operation mode.
The last menu item operated appears the next time the setting mode is activated.

7.3 Setting the Parameters

■ Battery Save (Menu 01)

The battery save function extends battery life. If there is no key operation and no signal reception for five seconds, the internal power of the transceiver cycles on and off in a fixed ratio to reduce battery power consumption.

1. "BS-ON" is displayed in the Battery Save setting menu.
2. Rotate the dial to turn ON/OFF the battery save function.

BS-ON → BS-OFF

- It is "On" in the initial factory settings.
- This operation is cancelled temporarily if a signal is received or another operation is performed.

■ Scan Type (Menu 02)

Timed scan and busy channel scan can be selected in the Setting mode.

1. "TIMER" is displayed in the Scan Type switching menu.
2. Rotate the dial to change the scan type. The display rotates as follows.

TIMER → BUSY

- *Busy Scan : Scanning stops while receiving, resumes 2 seconds after the signal is gone.
- *Timed Scan : Even during the signal reception, the unit resumes scanning 5 seconds after receiving or 2 seconds after the signal is gone.

■ Beep (Menu 03)

- It is the function to make a beep sound when operating the keys.
1. "BEP-ON" is displayed in the Beep function setting menu.
 2. Rotate the dial to turn ON/OFF the beep function. The display rotates as follows.


BEP-ON → BEP-OFF

■ Tone Call Frequency (Menu 04)

1. "1750" is displayed in the Tone Call Frequency setting menu.
2. Rotate the dial to change the frequency. The display rotates as follows.

1750 → 2100 → CALL → 1000 → 1450

3. The CALL tone transmits a ringing sound similar to that of a telephone.

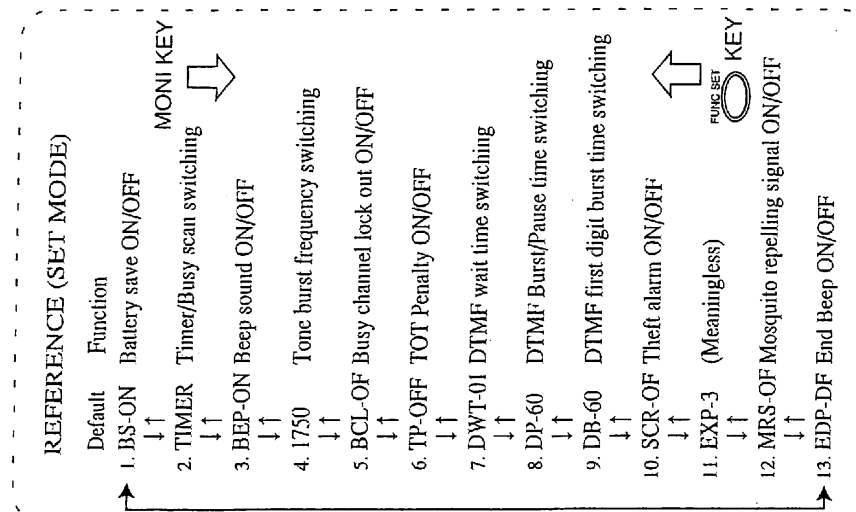

■ Busy Channel Lock Out (BCLO : Menu 05)

When active, the transmission is restricted while signals are being received.

1. "BCL-OFF" is displayed in the BCLO setting menu.
2. Rotate the dial to turn ON/OFF the BCLO function. The display rotates as follows.

BCL-OFF → BCL-ON
↑
└──────────────────┘

When BCLO is on, transmitting is available only if a signal is not being received.

If you press the PTT key when transmitting is not available, a beep sounds to indicate that you cannot transmit. The alarm will not be heard if the BEEP parameter is set to OFF.

■ TOT Penalty (Menu 06)

When the TOT penalty is set, transmission is not allowed within the programmed TOT penalty time after a transmission is automatically stopped by TOT.

1. " TP-OFF" is displayed in the TOT Penalty setting menu.
2. Rotate the dial to change the TOT penalty time (seconds). The display rotates as follows.

TP-OFF → TP-1 → → TP-4 → → TP-15
↑
└──┘

- When PTT key is pressed during TOT penalty time, a beep sounds to alert.
The alarm will not be heard if the BEEP parameter is set to OFF.
- When PTT key is pressed after the TOT penalty time finishes, the penalty operation is cancelled and you can transmit again.

■ DTMF Wait Time (Menu 07)

When the auto dialer outputs programmed DTMF codes, the codes are sent after the programmed DTMF wait time. The default setting is 100mS.

1. "DWT-01" is displayed in the DTMF Wait Time setting menu.
2. Rotate the dial to change the DTMF Wait Time. The display rotates as follows.

DWT-01 → DWT-04 → DWT-07 → DWT-10

■ DTMF Burst/Pause Time (Menu 08)

When the auto dialer outputs programmed DTMF codes, the codes are sent according to the programmed burst/pause time. The default setting is 60mS.

1. "P-60" is displayed in the DTMF Burst/Pause Time setting menu.
2. Rotate the dial to change the Burst/Pause Time. The display rotates as follows.

DP-60 → DP-80 → DP-160 → DP-200


■ DTMF First Digit Burst Time (Menu 09)

When the auto dialer sends programmed DTMF codes, the first code is sent according to the programmed DTMF First Digit Burst Time. The default setting is 60mS.

1. "DB-60" is displayed in the DTMF First Digit Burst Time setting menu.
2. Rotate the dial to change the DTMF First Digit Burst Time. The display rotates as follows.


DB-60 → DB-80 → DB-160 → DB-200

Reference DTMF times are as follows.

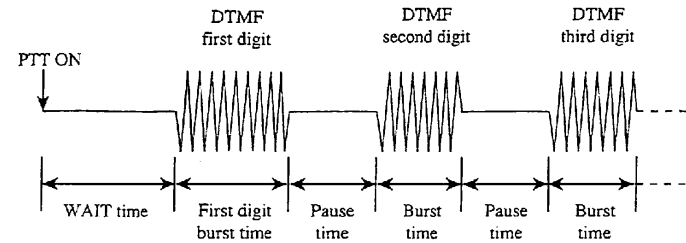


■ Theft Alarm (Menu 10)

DJ-596MkII has a theft alarm function that generates an alarm sound from the speaker if the alarm cable is removed improperly. When the plug of the 3.5 φ alarm cable connected to the SP terminal of the transceiver (as shown in the illustration) is pulled out, an alarm sounds from the speaker.

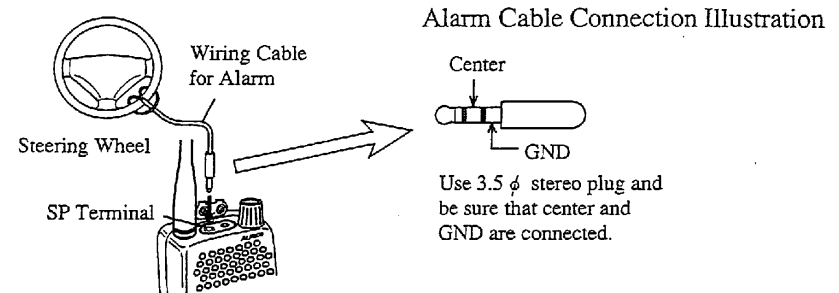


1. Turn off the power of the transceiver and insert the alarm cable plug in the SP terminal.
2. Turn on the power of the transceiver and select "SCR-OF" in the Setting mode.
3. Rotate the dial to turn ON/OFF the Theft Alarm function. The display rotates as follows.

[*] appears
SCR-OF → SCR-ON

4. Complete the setting and press the  key to turn off the power.

The theft alarm function is now activated.

5. When the plug is pulled out or the cable is cut, the alarm starts sounding.

If the alarm operates accidentally, press and hold the MONI key and press the  key. The power is turned off.

6. If the memory channel 99 is programmed, the transceiver receives this frequency while in the alarm mode.


If the memory channel 99 is blank, the transceiver receives the previous frequency that was selected before turning off the power.

When the squelch is unmuted, the alarm stops and the transceiver receives the signal as usual.

Note Set the squelch level properly prior to set this function. It is recommended to use tone or DCS squelch together with regular squelch to avoid the alarm function being deactivated by unwanted signals.

■ **Meaningless (Menu 11)**

This parameter is not available for the version you have purchased. Selecting EXP-2 will eliminate the decimal point that may appear on LCD, and facilitate the digital voice mode setting.



■ **Mosquito Repelling Tone (Menu 12)**

An ultrasonic tone, which is disliked by some mosquitoes, is output from the speaker.

1. Select "MRS-ON" in the setting mode.

An ultrasonic tone is sent from the speaker.


- The transceiver operates normally even when MRS is on.
- Since the ultrasonic tone is always present if MRS is on, the usable time of the battery is reduced.
- To cancel the MRS setting, select "MRS-OF" in the setting mode.

Note There are thousands of kinds of mosquitoes in the world. Since some of them may not dislike the ultrasonic wave output from this transceiver, it may be ineffective against them. No warranty is made as to the effectiveness of this experimental feature.

■ **End Beep (Menu 13)**

You can add a "peep" sound at the end of the transmission to inform your partner that you have released the PTT.








1. "EDP-OF" is displayed in the End Beep setting menu.
2. Rotate the dial to turn ON/OFF the End Beep. The display rotates as follows.





"OFF" is set in the initial factory setting.

8. Digital-Voice communication mode

By installing the optional EJ-47U the DJ-596T/E MkII can be operated in the 10F3 digital GMSK modulation mode. Please be sure to consult the rules that apply in your country before you actually operate in this mode. Alinco declines any and all responsibilities for any illegal use of this device.

1. Install the EJ-47U unit following the installation manual included in the package. Refer Menu#9 on P.33 and select EXP-2 position.
2. Press  key and press  key while  icon is display.
3. A  icon and 6 digit number appear on the display. Press PTT to enter the digital voice mode and exit to the operation mode, or press  key to cancel the setting.
4. Repeating 2 and press  key will enter to the analog mode, and  icon disappears.

Note In the setting mode 3, by pressing keys vary the displayed parameters. Regardless of the status, by pressing PTT the DJ596T/E MkII enters the digital mode for amateur radio communication. The  icon that appears by pressing the  key is meaningless in this mode and will disappear when the analog mode is selected.
EJ-47U's 10F3 digital voice mode is not cross-compatible with EJ-40U/EJ-43U's 20F3 mode.


9. Cloning and Packet Operation

9.1 Cloning

In using the cloning function, all of the information (including settings and memory data) of one DJ-596MkII (master) can be transferred and copied to another DJ-596MkII (slave) by connecting them with a cable.

■ Connecting the Transceivers


- Connect the external speaker jacks on both the master and slave transceivers with a commercially available 3.5 ϕ stereo mini plug cord. The cloning cable is not available as an optional accessory. Please refer the diagram below to make it by yourself.
- Turn off the power when connecting the cable.

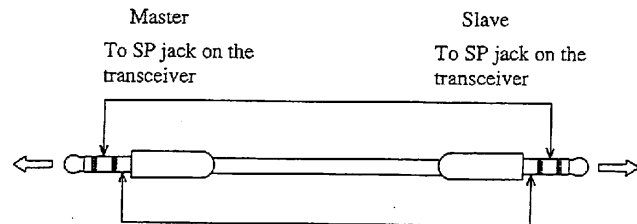


- Turn on the power of both transceivers after making the connections.

■ Transmitting Data from the Master Transceiver


1. Press and hold the MONI key and press the PTT key 3 times. "CLONE" appears on the display to indicate the Clone mode is activated.

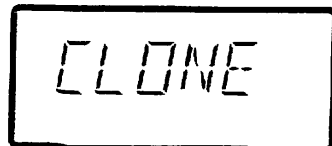

2. Press the PTT key. "SD * * *" is displayed. Information is now being transferred to the other transceiver.

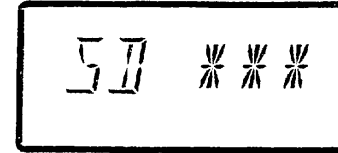


3. "PASS" appears when the cloning is completed.

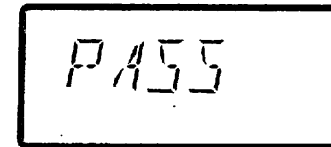


4. If the power is turned off, the cloning mode is cancelled. If the data is not transmitted correctly, "PASS" is not displayed. Repeat the process described in steps 1 and 2.

■ Receiving the Master Data

1. When the master data is transmitted, "LD * * *" appears on the slave transceiver's display.

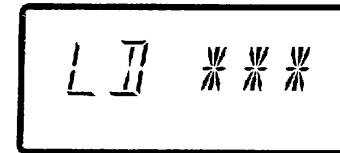

2. "PASS" appears when the cloning is completed.

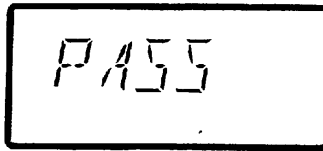

3. Turn off the power.

If the data is not transmitted correctly, "PASS" is not displayed.

In this case, try to transmit the master data again or reset the slave transceiver.

If "PASS" did not appear after cloning, incorrect operation may occur if you attempt to use the slave transceiver.

- Note
- Use a direct connection type cable without internal resistance.
 - If any key is pressed while data is being transmitted during the cloning operation, the cloning transmission stops. Press the PTT key to start transmitting again.
 - Do not disconnect the cable while cloning. If the cable is pulled out, "COMERR" appears on the master transceiver's display, and the data transmission stops.
 - All data in the slave transceiver will be updated to the master transceiver's data by the cloning operation. Be sure you want to change everything before cloning.

9.2 Packet Operation

Packet operation is one of the data communication methods, which enables data transmission and reception with a personal computer and TNC.


Packet Operation Connections

Packet operation connections for this unit are shown below.

Connect the packet communication TNC (Accessory: Terminal Node Controller) terminals to the SP (ϕ 3.5 mm plug) and MIC (ϕ 2.5 mm plug) connectors at the top of the transceiver.

- Input level adjustment :The transceiver has no MIC level adjustment circuit. Adjust the output level of the TNC.
- Output level adjustment : Use the volume dial of the transceiver.

Connection method for packet operation

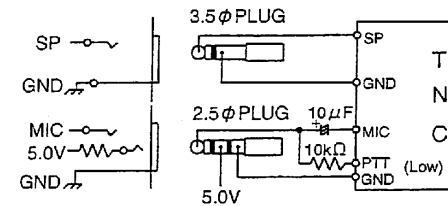

Power can be supplied from an internal 5V source through a 100 Ω resistor.

- Note
- Refer to the TNC'S instruction manual when connecting the TNC unit to other devices (personal computer, etc.). If the transceiver, TNC and connected personal computer are too close together, noise between them may cause interference.
 - Turn the battery save function off during packet operation.
 - Confirm your frequency and your communicating partner's frequency. If the frequencies are not exactly the same, the number of retries will be high, or communications may not be possible at all.
 - Operate up to 1200 bps.

10. Maintenance and Reference



10.1 Troubleshooting

Please check the list below before concluding that the transceiver is faulty.
If a problem persists, reset the transceiver. This may correct erroneous operation.

Symptom	Possible Cause	Action
Nothing appears on the display when you turn the power on.	Poor Ni-Cd battery pack or battery case connection.	Check if the battery pack terminals are clean.
	Dead battery.	Recharge or exchange batteries.
	You are releasing the key too quickly.	Hold the power switch down for 1 second.
No speaker audio. No reception.	Volume too low.	Adjust the volume.
	Squelch level too high.	Adjust the squelch.
	Tone squelch is on.	Turn off tone squelch.
	DCS is on.	Turn off DCS.
Frequency display is incorrect.	You are pressing the PTT key and transmitting.	Release the PTT key.
	CPU error.	Detach the battery pack or external power supply, wait 10 seconds and attach it again. If it is still not operational, reset the transceiver.
Won't scan.	Squelch is unmuted.	Set squelch so that noise is just muted.
Frequency and memory number do not change.	Keylock is on.	Turn off keylock.
	Transceiver is in the call mode.	Go to VFO mode.
Key entry not possible.	Keylock is on.	Turn off keylock.
One-touch repeater cannot be used.	Incorrect setting for one-touch repeater use.	Set the transceiver correctly for repeater use.
Cannot transmit. Display blinks or goes out when you transmit.	Battery power is insufficient.	Change or recharge batteries. Or connect transceiver to external power source.
Cannot transmit. No reply when you transmit.	Not pressing the PTT key firmly enough.	Press the PTT key firmly.
	You are outside of the band. (When shift is set.)	Transmit within transmission frequency range.
	BCLO activated.	Deactivate BCLO.
	No reply.	You may be out of the communication range.
Display blinks or goes out when you receive.	Incorrect frequency.	Match your frequency to receiving station's frequency.
	Battery power is insufficient.	Change or recharge batteries.

10.2 Resetting

When you reset the transceiver, all settings are returned to the initial (default) factory settings.

1. Press and hold the  key and press the  key to turn the power on.
2. Release the keys when all icons are displayed.
The transceiver returns to the initial VFO mode, completing the reset


● Factory Settings

- VFO Frequency
VHF : 145,000MHz
UHF : 445,000MHz (DJ-596T MkII)
UHF : 435,000MHz (DJ-596E MkII)
- CALL Frequency
VHF : 145,000MHz
UHF : 445,000MHz (DJ-596T MkII)
UHF : 435,000MHz (DJ-596E MkII)
- Memory Channel
0 ~ 99ch Blank
- Shift, Tone, DSQ,APO,
Keylock, Bell and Dial settings OFF
- Shift Range
VHF : 0.6MHz
UHF : 5.0MHz
- Tone Frequency
88.5Hz
- Tuning Step
DJ-596T MkII : 5KH z
DJ-596E MkII : 12.5KH z
- Audio Volume
0
- Squelch Level
0
- Scan Resume Condition
Timed Scan
- Transmit Power
LOW
- Battery Save
ON
- Beep
ON
- DTMF-WAIT Time
100ms
- DTMF Burst/Pause Time
60ms
- DTMF 1st figure Burst Time
60ms

10.3 Options

- EBP-50N Ni-MH Battery Pack (DC9.6V700mAh)
- EBP-51N Ni-MH Battery Pack (DC9.6V1500mAh)
- EBP-56N Li-ion Battery Pack (DC7.4V1000mAh)
- EDH-30 Dry cell battery case
- EDC-36 Cigarette lighter cable with filter (DC12V)
- EDC-37 DC cable for AC/DC power supply
- EDC-43 Cigarette lighter cable for recharging the battery pack
- EDC-97 Rapid recharger for EBP 50/51N
- EDC-111 Rapid recharger (120V/AC input) for EBP-56N
- EDC-111E Rapid recharger (230V/AC input) for EBP-56N
- EDC-93 Battery recharger (120V / AC input) for EBP-50/51N
- EDC-94 Battery recharger (230V / AC input) for EBP-50/51N
- EMS-9 Speaker microphone
- EMS-47 Speaker microphone with volume-control
- EME-6 Earphone
- EME-12A Head set with VOX (speaker type)
- EME-13A Head set with VOX (earphone type)
- EME-15A Tie-pin microphone with VOX (earphone type)
- EME-20 Earphone microphone
- ESC-36 Softcase (fits with EBP50/51N)
- EJ-47U Digital Unit

10.4 Transmission System

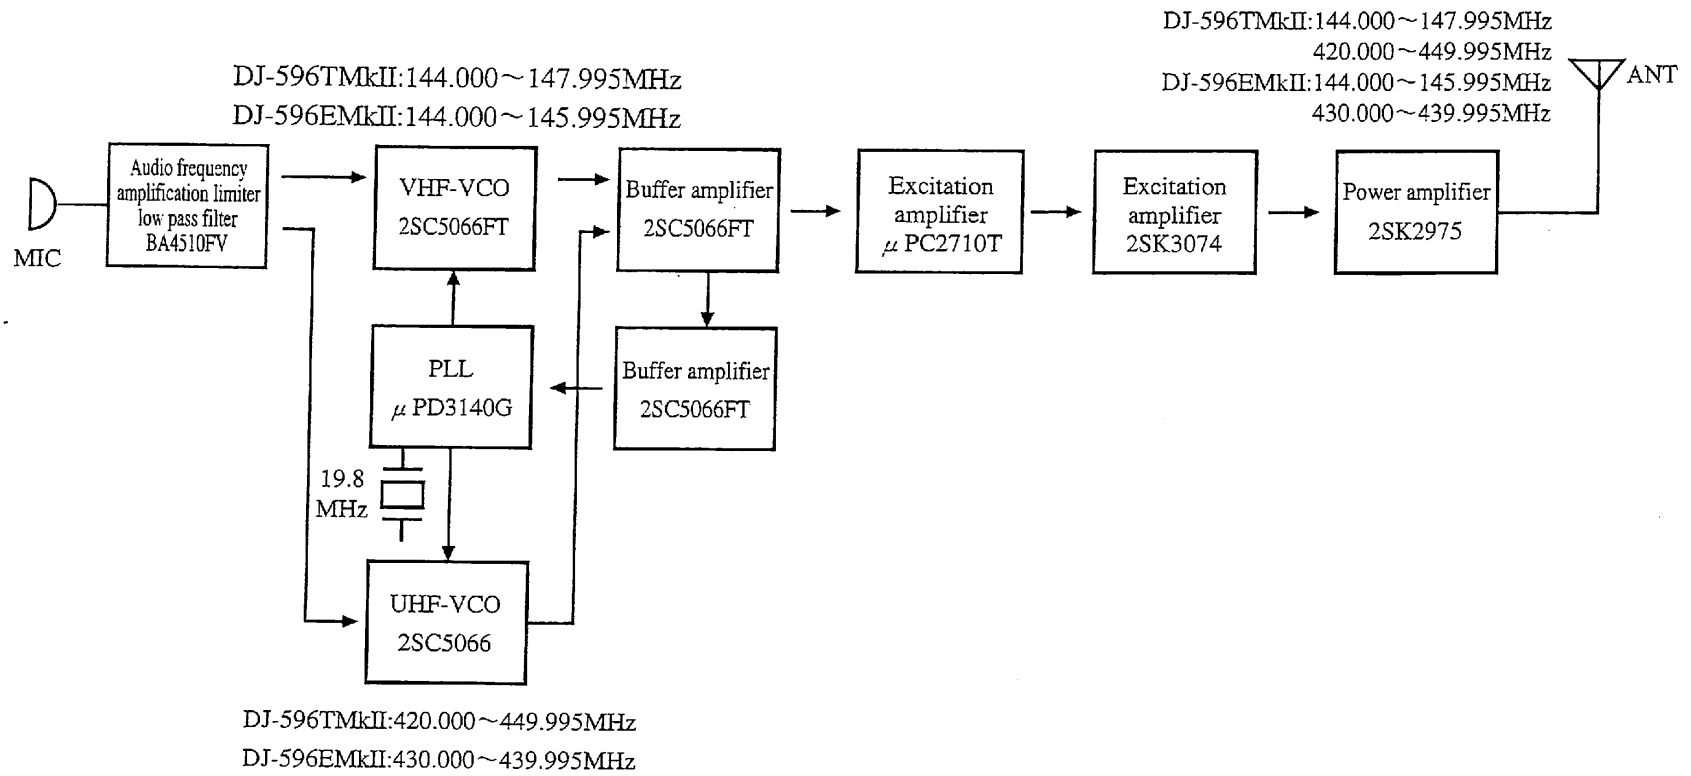

1 1. Specifications

● General

Frequency Range	TX	VHF	144.000~147.995MHz (DJ-596T MkII)
			144.000~145.995MHz (DJ-596E MkII)
		UHF	420.000~449.995MHz (DJ-596T MkII)
			430.000~439.995MHz (DJ-596E MkII)
	RX	VHF	136.000~173.995MHz (DJ-596T MkII)
			144.000~145.995MHz (DJ-596E MkII)
UHF		400.000~511.995MHz (DJ-596T MkII)	
		430.000~439.995MHz (DJ-596E MkII)	
Modulation			F2, F3
Ant. Impedance			50Ω (BNC)
Supply Voltage	External Terminal	6.0~16.0VDC	
	Battery Terminal	6.0~16.0VDC	
Current	Transmit	DC13.8V : VHF Approx.1.2A, UHF Approx.1.4A 9.6V(EBP-50N) : VHF Approx.1.2A, UHF Approx.1.5A	
	Receive	Approx. 75mA	
	Battery Save	Approx. 25mA	
Frequency Stability			±2.5ppm
Dimensions	(Projections exclusive)	56(W)×124(H)×40(D)mm	
Weight			Approx. 280g (EBP50N inclusive)

● Transmitter

Power Output	External 13.8V	Approx. 5W
	EBP-50N equipped	VHF : 4.5W、UHF : 4W
Modulation		Variable Reactance
Max. Deviation		±5kHz
Spurious Emission		-60dB or less
Mic. Impedance		Approx. 2kΩ

● Receiver

System		Double-conversion super heterodyne
Intermediate Frequencies	1st	LF 39.15MHz
	2nd	IF 450kHz
Sensitivity	(12dB SINAD)	0.2μV or less
Selectivity	-6dB	±6kHz or over
	-60dB	±15kHz or less
AF Output		300mW or over (MAX) 200mW or over (10% Distortion factor 8Ω)
Spurious response		60dB or over
Squelch Sensitivity		Approx. -10dB μ or less

ALINCO, INC.

Head Office: Shin-Dai building 9th Floor
2-6, 1-Chome, Dojimahama, Kita-ku,
Osaka 530-0004, Japan

Phone: +81-6-4797-2136

Fax: +81-6-4797-2157

e-mail: export@alinco.co.jp