



UV99


# WALKIE TALKIE

## Ultra High Power=10W

- Dual Band Dual Wait Dual Standby
- One Key Frequency Copy
- Noise Cancellation
- 200 Channels
- Multi Charger way:desk charger / Type C
- 2 Tone / 5 Tone
- Torching Function



USER'S MANUAL

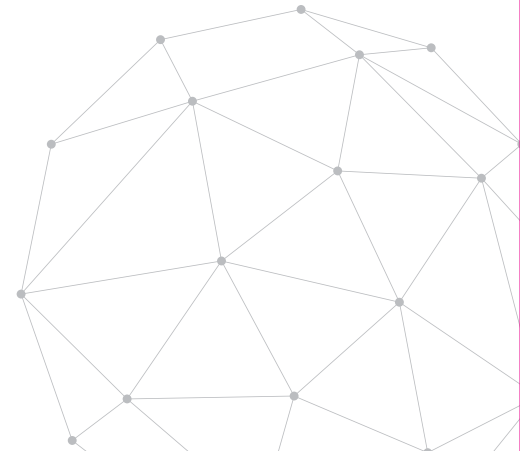



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the use's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Use Two Way Radio in the environment with the temperature between -10°C and 40°C, otherwise, it may damage your two way radio. It can be operating under 2000m. Hereby, TYT Electronics Co., Ltd. declares that the radio equipment type is compliance with Directive 2014/53/EU.



For this decide, head SAR and Body SAR were performed with the device configured in the positions according to EN62209-2:2010 and face-up SAR was performed with the device 25mm from the phantom, and Body SAR was performed with the device 0mm from the Phantom, Body SAR was also performed with the headset and belt clip attached and without.

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority granted by the local government radio management departments to operate this radio and should not be made. To comply with the corresponding requirements, transmitter adjustments should be made only by or under the supervision of a person certified as technically qualified to perform transmitter maintenance and repairs in the private land mobile and fixed services as certified by an organization representative of the user of those services.

Replacement of any transmitter component (crystal, semiconductor, etc.) not authorized by the local government radio management departments equipment authorization for this radio could violate the rules.

## TO CUSTOMERS

Thank you very much for using our two way radio. This radio of modern design is reasonable structure with stable functions. It is designed to meet different customers' need for high quality with easy operation and perfect capability. We believe you are pleased with its nice shape and excellent performance.

# Welcome to use two-way radio

Professional FM Transceiver

## Main Functions

- DOT-MATRIX LCD DISPLAY
- Power-on mode select able
- DTMF calling channels quick assignment
- Wide / Mid / narrow bandwidth selectable
- 200 channels
- Dual band, dual wait, dual standby,
- Busy channel lock
- Scan: frequency and CTCSS scan
- FM radio for 24 channels storage
- Multiple types for keys lock setting
- TOT
- Remote stun/ kill/ activate
- ANI
- PTT ID
- VOX
- Battery saving
- Scrambler
- Multi-Display mode
- DTMF
- Backlight brightness setting
- COMP
- 1750Hz tone
- 2Tone/5 Tone
- CTCSS/DCS

# CONTENTS

|   |    |
|---|----|
| USING TIPS .....                        | 02 |
| UNPACKING AND CHECKING EQUIPMENT .....  | 03 |
| Supplied Items .....                    | 03 |
| CHARGING BATTERY PACK .....             | 05 |
| Charging Preparation .....              | 05 |
| Charging Operation .....                | 06 |
| INSTALLATION OF ACCESSORIES .....       | 07 |
| Installation of Battery Pack .....      | 07 |
| Antenna Installation .....              | 08 |
| Installing Belt Clip .....              | 09 |
| Installing External Micro/Speaker ..... | 10 |
| GETTING FAMILIAR .....                  | 11 |
| Radio Illustration .....                | 12 |
| LCD Display .....                       | 14 |
| Keypad Function .....                   | 16 |
| WORKING MODE .....                      | 19 |
| Frequency Mode(VFO) .....               | 20 |
| Frequency-Channel Mode(MR) .....        | 20 |
| Channel Mode(CH) .....                  | 20 |
| FM Radio Mode .....                     | 20 |

|                                     |    |
|-------------------------------------|----|
| MENU Mode .....                     | 20 |
| RESET Mode .....                    | 21 |
| SET MENU MODE .....                 | 21 |
| SHORTCUT MENU OPERATION .....       | 22 |
| DETAILED FUNCTION DESCRIPTION ..... | 25 |
| Scan & Scan Mode setting .....      | 30 |
| Priority Transmit .....             | 30 |
| VOX Level & VOX Switch .....        | 31 |
| TX Power setting .....              | 31 |
| Squelch Adjustment .....            | 32 |
| Dual Wait/Standby .....             | 32 |
| LED Display Mode .....              | 32 |
| Background light .....              | 33 |
| Keypad Beeper setting .....         | 33 |
| DTMF/2T &5T setting .....           | 33 |
| Transmitter Timer-Out Timer .....   | 33 |
| Busy Channel Lock-out .....         | 34 |
| Transmit Over Beeper .....          | 34 |
| Receive Saver .....                 | 34 |
| Auto Keypad Lock .....              | 35 |
| Voice Prompt .....                  | 35 |
| Power-on Display setting .....      | 35 |

|  |    |
|--|----|
| Repeater Shift setting .....                           | 36 |
| Display Channel Name .....                             | 36 |
| Tone coder & Tone Search Scanning & Tone calling ..... | 36 |
| VFO Step setting .....                                 | 36 |
| Wide/Narrow Band Selecting .....                       | 40 |
| Voice Mode and Scrambler .....                         | 41 |
| ADVANCED FUNCTIONS .....                               | 41 |
| Emergency Alert .....                                  | 42 |
| Keypad Lock setting .....                              | 42 |
| Tone Calling(1750Hz) .....                             | 42 |
| Channel Storage/Delete .....                           | 42 |
| FM Radio Function .....                                | 44 |
| VFO offset setting .....                               | 44 |
| SIGNALINGS .....                                       | 47 |
| DTMF Part .....  | 48 |
| 2-Tone Part .....                                      | 53 |
| 5-Tone Part .....                                      | 54 |
| TECHNICAL PARAMETERS .....                             | 56 |
| GUARANTEE .....  | 58 |

**User's Manual**

# USING TIPS

## UNPACKING AND CHECKING EQUIPMENT

Professional FM Transceiver

## USING TIPS

Please read the following brief instructions, non-compliance with these rules may cause danger or violate the law.

- Obey the local government regulation before using this radio, improper use may violate the law and be punished.
- Turn off the radio before entering flammable or explosive areas.
- Do not charge or change the battery in flammable or explosive areas.
- Turn off the radio before getting close to the blasting zone or detonator areas.
- Do not use radio whose antenna is damaged, touching of damaged antenna will cause heat injury.
- Do not attempt to open the radio; the maintenance work should be done by technical-expert only.
- To avoid troubles caused by electromagnetic interference or electromagnetic compatibility, please turn off the radio in places where have the banner "Do not use wireless equipment", such as hospital and other healthcare places.
- In the car with an airbag, do not put the radio within the scope of the airbag deployment.
- Do not store the radio under the direct sunshine or in hot areas.
- When you transmit with the radio, do keep away from its antenna for 5cm at least.
- If the radio appears smelly or smoke, please shut off its power immediately and contact with your local dealer.
- Do not transmit too long, for the radio may heat and hurt the user.


## UNPACKING AND CHECKING EQUIPMENT

Please check if any damage to the package when you receive it. Carefully unpack the transceiver. We recommend that you check the items listed in the following table. If any items are missing or damaged during shipment, please contact with your local dealer immediately.

### Supplied Items:




Body

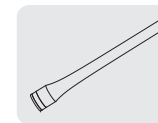

Antenna




Li-ion battery(2800mAh)

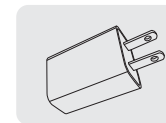


Adaptor



USB Charger

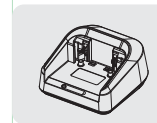

Charger

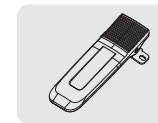

Belt Clip



User's Manual

**Note:** The antenna frequency range please refers to the annular label at the bottom of antenna.

## CHARGING BATTERY PACK INSTALLATION OF ACCESSORIES

Professional FM Transceiver

### CHARGING BATTERY PACK

#### Charging Precaution

The supplied battery pack of this radio is a high –performance Li-ion with 7.4V standard voltage 2800mAh high capacity in a very compact package. Under normal use, the battery pack may be used for approximately 300 charge cycles and more, after which operating time maybe expected to decrease. If you have an old battery pack which is displaying capacity which has become diminished, you should replace the pack with a new one.

- Notice:
- Please do not short-circuit the battery terminals or expose of in fire. Do not disassemble the battery unauthorized.
  - Charge the battery between temperature 0°C and 45°C. The battery can not be normally charged beyond this temperature range.
  - Please turn off the transceiver when you charge it. Transmitting with the transceiver in charge will affect its normal charge.
  - Do not unplug the Power Adapter or battery when it is charged.
  - If the battery pack lasts shortly even it is full of power, it shows that the battery is depleted, please change the battery pack.
  - Please do not charge when the battery or the radio is wet. Please dry it with a cloth before charging to avoid any danger.

**Warning:** When the conductive metals such as jewelry, key or decorative chains touch the



battery terminals, all the batteries are likely to cause damage to the items or personal injury. These conductive metals may form a short circuit and generates much heat. Do deal with any battery carefully, especially when put it into pocket, wallet or other metallic containers.

### Charging Operation

After installing the battery pack, if the battery icon shows  $\text{☐}$ , it means that the battery pack is out of power, Please charge it.

Indicator light of charger will show charging condition

| Indicator Display | Status    |
|-------------------|-----------|
| Red               | Charging  |
| Green             | Completed |


### Battery Tips:

- The battery is not fully charged in factory, please charge before using it.
- charge and discharge the battery for two or three times, the battery capacity will reach the best condition. When the battery capacity is low, please charge or change the battery.
- The battery lasts shortly even if it is fully charged, the battery is depleted, please contact your local dealer to buy a new authentic battery.


## INSTALLATION OF ACCESSORIES

### Installation of Battery Pack

To install the battery into the battery positioning hole of radio bottom, the press the battery, make the button completely to lock battery. To remove the battery, please turn off the radio, and then push up the battery button of radio top, finally take off the battery.

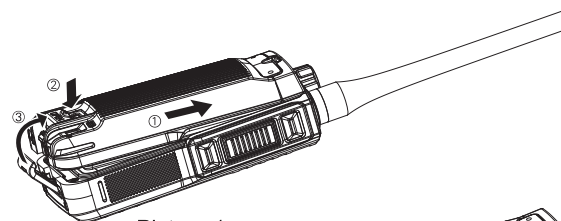

Picture 1

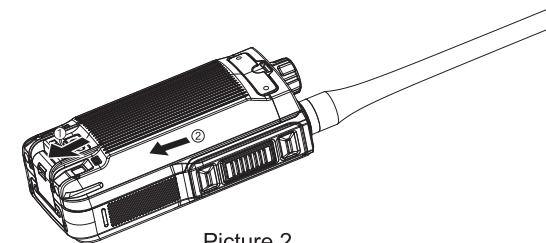


Picture 2


### Installing and removing the antenna

1)Align the threaded end of antenna and the threaded hole at the top of radio, rotate the antenna clockwise until it is tight.(picture 3)

2)To remove the antenna, rotate it counter-clockwise until the antenna spirals out.(picture 4)

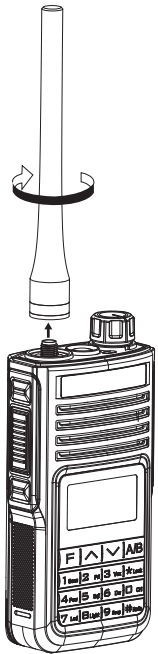

Picture 3

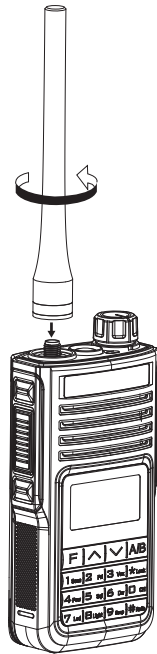


Picture 4

### Installing Belt Clip

Align the two holds of belt clip and the two holes of the radios, fix them with the supplied M2.5x5 screws. loosen the screw set to remove belt clip.

Picture 5

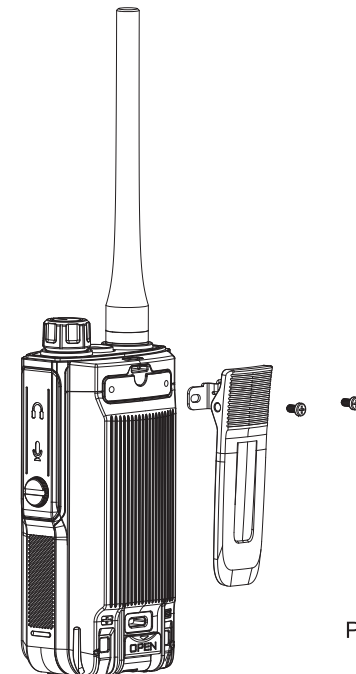


Picture 5

### Installing External Micro/Speaker

Open the cover of the Mic/speaker jack and insert the microphone/speaker plugs into the jack. Picture 7

- Note:**
- Using the external headset or Mic/speaker will affect the water-tightness performance of radio.
  - If the external headset is not workable, please use the headset case.

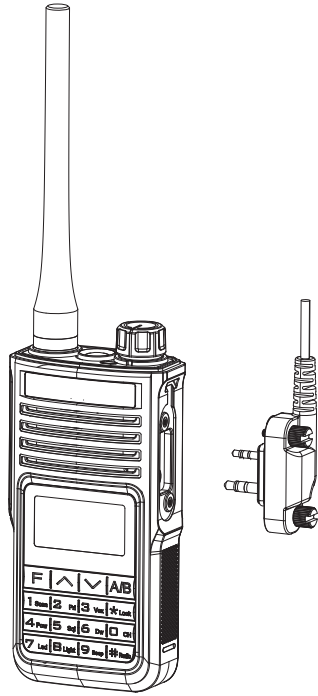


Picture 7

## GETTING FAMILIAR


Professional FM Transceiver

## RADIO ILLUSTRATION

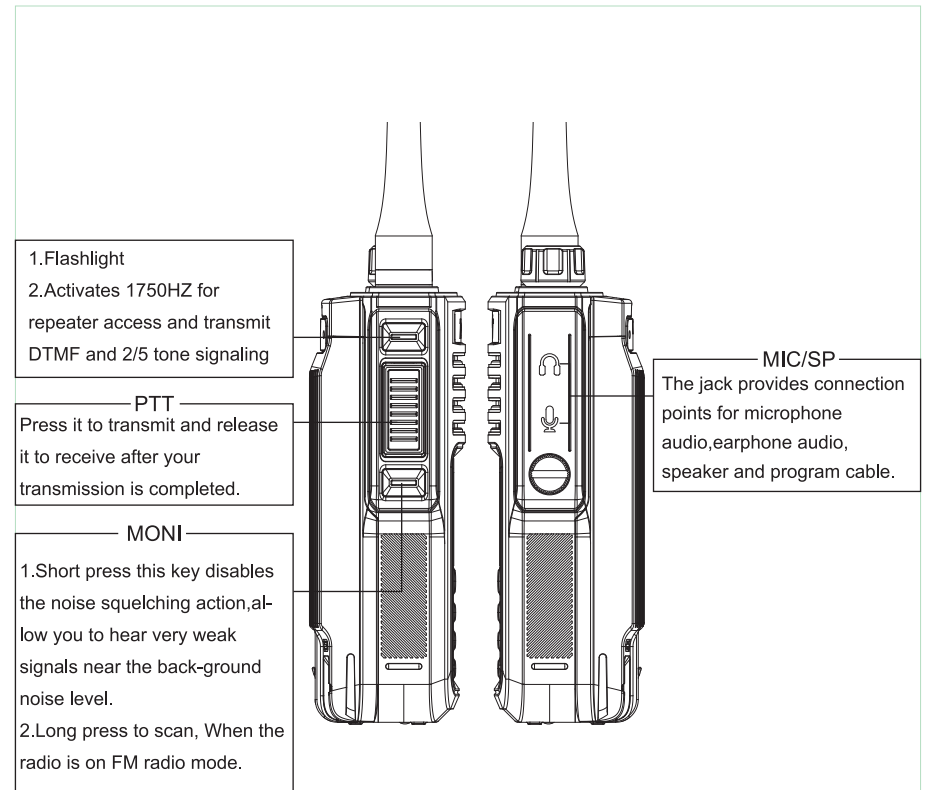

## LCD DISPLAY

You will see various icons shown on the screen when power on. The following table can help you identify icons' meaning which display on LCD

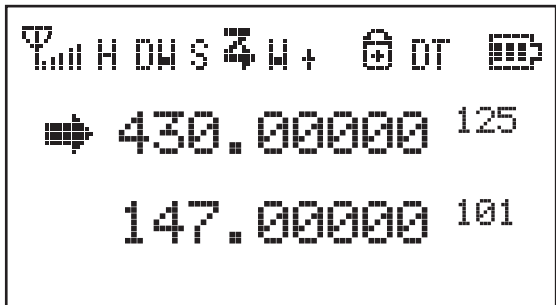

| Icons | Description of functions                   |
|-------|--|
|       | Operating band signal & power meter        |
| H     | High TX power active                       |
| DW    | Dual watch/standby active                  |
| S     | RX power save active                       |
|       | Scanning active                            |
| W     | Narrow/wide band mode active               |
| +     | Repeater shift direction                   |
|       | Keypad lock                                |
| DT    | DTMF signal active                         |
| 2T    | 2 Tone signaling active                    |
| 5T    | 5 Tone signaling active                    |
|       | Battery power indicator                    |
| 125   | Channel number/Menu items number indicator |
|       |  |
|       |  |
|       |  |

## KEYPAD FUNCTIONS

|           | [ F ]                               | [ A/B ]   | [ ^ ]                                 | [ v ]                                 |
|-----------|-------------------------------------|---|---------------------------------------|---------------------------------------|
| Press key | Enter menu mode/confirm the setting | (1)Switch the A or B frequency to be the "Operating" Band<br>(2)EXIT function | Upper menu item, channel or frequency | Lower menu item, channel or frequency |

|               | [ 1 SCAN ]                       | [ 2 PRI ]                        | [ 3 VOX ]                        | [ 4 POW ]                        | [ 5 SQUEL ]                      |
|---------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| Press key     | Frequency/ Channel No. entry "1" | Frequency/ Channel No. entry "2" | Frequency/ Channel No. entry "3" | Frequency/ Channel No. entry "4" | Frequency/ Channel No. entry "5" |
| Press [ F ] + | Enter scan item                  | Enter priority TX mode item      | Enter VOX level item             | Enter high/low power item        | Enter squelch level item         |

|               | [ 6 SW ]                         | [ 7 LED ]                        | [ 8 LIGHT ]                      | [ 9 BEEP ]                       | [ 0 CH ]                         |
|---------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|----------------------------------|
| Press key     | Frequency/ Channel No. entry "6" | Frequency/ Channel No. entry "7" | Frequency/ Channel No. entry "8" | Frequency/ Channel No. entry "9" | Frequency/ Channel No. entry "0" |
| Press [ F ] + | Enter dual wait/standby item     | Enter LED item                   | Enter light item                 | Enter beep item                  | Enter DTMF 2T & 5T               |

|           | [ * LOCK ]                              | [ # RATED ]   |  |
|-----------|---|---|--|
| Press key | Press and hold key to start keypad lock | Switch CH mode and VFO mode<br>Long press [#] to enter FM radio |  |
|           | Enter TX/RX Tone coder                  | Press [F] +[#] to start emergency alert                         |  |

WORKING MODE  
SET MENU MODE  
SHORTCUT MENU OPERATION

Professional FM Transceiver

## WORKING MODE


### 1) Frequency Mode (VFO)

Under this mode, you can use [  ] / [  ] key to change the frequency or input the frequency by keypad directly and store channels.

When the radio is under VFO mode, long press A/B to seek the frequency with CTCSS/DCS near. It will copy the frequency and CTCSS/DCS if the other radio press PTT.

The radio (want to be copied) must keep on pressing PTT till the frequency and the CTCSS/DCS copied, or it maybe seek the end tone of the copied radio


### 2) Frequency –Channel Mode(MR)

When you have stored a memory channel at least and under VFO mode, press [  ] key to enter MR mode.

The frequency will be indicated on the display and the channel No. will be indicated at the right side. If the transceiver display name option is ON and channel name edited, it will show the name of the channel.


Please see Shortcut Menu Operation item 22<sup>nd</sup> & 33<sup>rd</sup>. Page 37.

### 3) Channel Mode(CH)


When you have stored a memory channel at least, power on the radio, press [  ]+33 to enter DIS MD and choosing CH mode. Channel No. will be indicated on the display and if the transceiver display mode option is on, it will show the name and the channel.

Please see Shortcut Menu Operation item 22<sup>nd</sup> & 33<sup>rd</sup>. Page 37.

#### 4) FM Radio Mode



The transceiver provides frequency 64.00-108.00MHz FM radio. Under this mode, you can choose FM frequency you need directly. Scan frequency range and store your favorite channels. Long press [  ] to enter and exit FM radio mode.

#### 5) MENU Mode

Press [  ] KEY to enter MENU mode, there are 38 items in total. Please see SET MENU MODE. 22. Page.

#### 6) RESET Mode

Press [  ] +[3] [5] key to enter Reset mode, then press [  ] key to enter.

[  ] or [  ] key to select ALL/VFO/FULL

1. ALL: initialize all setting.

2. VFO: initialize all setting under frequency mode.

3. FULL: initialize all setting under frequency and channel mode.

## SET MENU MODE

| No. | LCD Display | Available Values              | Description of Function     |
|-----|-------------|-------------------------------|-----------------------------|
| 1   | SCAN        | /                             | Frequency/Channel Scan      |
| 2   | TX-SEL      | EDIT/BUSY                     | Priority Transmit           |
| 3   | VOX LEV     | 1-7                           | VOX Level Setting           |
| 4   | POWER       | HIG/LOW/MID                   | High/Low/Middle TX Power    |
| 5   | SQL         | 0-9                           | SQL level setting           |
| 6   | D.WAIT      | ON/OFF                        | Dual Wait/Standby           |
| 7   | LED         | ON/5S/10S/15S/20S/25S/30S/OFF | LED Display mode            |
| 8   | LIGHT       | 1-7                           | Background Light Color      |
| 9   | BEEP        | ON/OFF                        | Keypad Beeper Setting       |
| 10  | DT/2T/5T CH | 1-16                          | Preset Channel Selection    |
| 11  | TOT         | OFF/30/60/.../270             | Transmitter Timer-out Timer |
| 12  | BCLO        | OFF/WAVE/CALL                 | Busy Channel Lock-Out       |
| 13  | VOX.SW      | ON/OFF                        | VOX Switch ON/OFF           |
| 14  | ROGER       | ON/OFF                        | Transmit Over Beeper        |
| 16  | RX.SAV      | 1:1/1:2/1:4/OFF               | Receive Saver               |



| No. | LCD Display | Available Values | Description of Function             |
|-----|-------------|------------------|-------------------------------------|
| 17  | SCAN.S      | TO/CO/SE         | Scan Mode                           |
| 18  | AUTOLK      | ON/OFF           | Auto Keypad Lock                    |
| 19  | VOICE       | ON/OFF           | Voice Prompt                        |
| 20  | OPENSET     | OFF/DC/MEG       | Power-on Display                    |
| 21  | DC VOLT     | /                | Battery Power Voltage               |
| 22A | OFFSET      | 0.000-99.995MHz  | Repeater Shift(Under VFO mode)      |
| 22B | DIS.NM      | ON/OFF           | Display Channel Name(Under CH mode) |
| 23  | C-CDC       | OFF/67.0/D023N   | TX/RX Tone coder                    |
| 24  | R-CDC       | OFF/67.0/D023N   | RX Tone coder                       |
| 25  | T-CDC       | OFF/67.0/D023N   | TX tone coder                       |
| 26  | S-D         | +/-/OFF          | Shift Direction                     |
| 27  | STEP        | 5K/6.25K.../100K | VFO Step                            |
| 28  | N/W         | WIDE/NARR/MIDD   | Wide/Narrow/Middle Band             |
| 29  | SEEK 67.0   | /                | CTCSS Scanning                      |
| 30  | SEEK D023N  | /                | DCS Scanning                        |
| 31  | Scrambler   | ON/OFF           | Voice Scrambler                     |

| No. | LCD Display | Available Values  | Description of Function |
|-----|-------------|-------------------|-------------------------|
| 32  | LOCK MD     | ALL/PTT/KEY/KEY+S |                         |
| 33  | DIS MD      | FRE/CH/MR         | Working mode setting    |
| 34  | DW          | ON/OFF            | Dual Watch/monitor      |
| 35  | Reset       | ALL/VFO/FULL      | Reset function          |
| 36  | Radio Ver   | MCU B1.07         | Radio Version           |
| 37  | NM SET      | -1A.@             | Channel Name Editing    |
| 38  | RX ENC      | ON/OFF            | RX Noise cancellation   |

#### Menu Operation

- 1) Under standby mode, press [ **F** ] to enter menu setting, LCD displays "MENU".
- 2) Press [ **▲** ] or [ **▼** ] to select the desired menu item, LCD display current setting of selected item.
- 3) Press [ **F** ] to enter and then press [ **▲** ] or [ **▼** ] to select the desired setting.
- 4) Press [ **F** ] to confirm.
- 5) Press [ **A/B** ] twice to exit and then return the standby mode.













## SHORTCUT MENU OPERATION

| Item No. | Item Name               | Enter item               | Screen Display      | Select parameter | Parameter Explanation   | Confirm  | Return Standby |
|----------|-------------------------|--------------------------|---------------------|------------------|---|----------|----------------|
| 1)       | Frequency /Channel scan | <b>F</b> + <b>1</b> SCAN | Tx. SCAN 01         | <b>F</b>         | Press [ ] or [ ] to change scan direction<br>Press [ <b>F</b> ] key to start scanning | <b>F</b> | <b>A/B</b>     |
| 2)       | Priority Transmit       | <b>F</b> + <b>2</b> PRI  | Tx. TX SEL EDIT 03  | <b>F</b>         | Press [ ] or [ ] to select available values<br>EDIT / BUSY                            | <b>F</b> | <b>A/B</b>     |
| 3)       | VOX level setting       | <b>F</b> + <b>3</b> VOX  | Tx. VOX 4 03        | <b>F</b>         | Press [ ] or [ ] to select available values<br>VOX level: 1~8                         | <b>F</b> | <b>A/B</b>     |
| 4)       | TX power setting        | <b>F</b> + <b>4</b> PWR  | Tx. POW LOW 01      | <b>F</b>         | Press [ ] or [ ] to select available values<br>High / Low                             | <b>F</b> | <b>A/B</b>     |
| 5)       | SQL level setting       | <b>F</b> + <b>5</b> SQL  | Tx. SQL 5 01        | <b>F</b>         | Press [ ] or [ ] to select available values<br>SQL level: 0~9                         | <b>F</b> | <b>A/B</b>     |
| 6)       | Dual wait/standby       | <b>F</b> + <b>6</b> DW   | Tx. D. WAIT ON 03   | <b>F</b>         | Press [ ] or [ ] to select available values<br>ON / OFF                               | <b>F</b> | <b>A/B</b>     |
| 7)       | LED display mode        | <b>F</b> + <b>7</b> LED  | Tx. LED 01          | <b>F</b>         | Press [ ] or [ ] to select available values<br>ON/5S/10S/15S/20S<br>25S/30S/OFF       | <b>F</b> | <b>A/B</b>     |
| 8)       | Background light color  | <b>F</b> + <b>8</b> CLR  | Tx. LIGHT COLOR1 03 | <b>F</b>         | Press [ ] or [ ] to select available values<br>COLOR1 / COLOR2 / COLOR3               | <b>F</b> | <b>A/B</b>     |
| 9)       | Keypad beeper           | <b>F</b> + <b>9</b> BEEP | Tx. BEEP ON 03      | <b>F</b>         | Press [ ] or [ ] to select available values<br>ON / OFF                               | <b>F</b> | <b>A/B</b>     |

| Item No. | Item Name                  | Enter item                                | Screen Display    | Select parameter | Parameter Explanation  | Confirm  | Return Standby |
|----------|----------------------------|---|-------------------|------------------|--|----------|----------------|
| 10)      | Automatic Number Identity  | <b>F</b> + <b>0</b> ANI                   | Tx. DT CH 1 01    | <b>F</b>         | Press [ ] or [ ] to select available value<br>1-16                   | <b>F</b> | <b>A/B</b>     |
| 11)      | Transmitter time-out timer | <b>F</b> + <b>1</b> SCAN<br><b>1</b> SCAN | Tx. TOT OFF 01    | <b>F</b>         | Press [ ] or [ ] to select available values<br>OFF / 30... / 270s    | <b>F</b> | <b>A/B</b>     |
| 12)      | Busy channel lock-out      | <b>F</b> + <b>1</b> SCAN<br><b>2</b> PRI  | Tx. BCLO OFF 02   | <b>F</b>         | Press [ ] or [ ] to select available values<br>OFF / WAVE / CALL     | <b>F</b> | <b>A/B</b>     |
| 13)      | VOX switch                 | <b>F</b> + <b>1</b> SCAN<br><b>3</b> VOX  | Tx. VOX SW OFF 03 | <b>F</b>         | Press [ ] or [ ] to select available values<br>ON / OFF              | <b>F</b> | <b>A/B</b>     |
| 14)      | Transmit over beeper       | <b>F</b> + <b>1</b> SCAN<br><b>4</b> PWR  | Tx. ROBER OFF 01  | <b>F</b>         | Press [ ] or [ ] to select available values<br>ON / OFF              | <b>F</b> | <b>A/B</b>     |
| 16)      | Receive saver              | <b>F</b> + <b>1</b> SCAN<br><b>6</b> DW   | Tx. RX. SAV ON 06 | <b>F</b>         | Press [ ] or [ ] to select available values<br>OFF / 1:1 / 1:2 / 1:4 | <b>F</b> | <b>A/B</b>     |
| 17)      | Scan mode                  | <b>F</b> + <b>1</b> SCAN<br><b>7</b> LED  | Tx. SCANS CO 01   | <b>F</b>         | Press [ ] or [ ] to select available values<br>TO / CO / SE          | <b>F</b> | <b>A/B</b>     |
| 18)      | Auto keypad lock           | <b>F</b> + <b>1</b> SCAN<br><b>8</b> CLR  | Tx. AUTOLK OFF 08 | <b>F</b>         | Press [ ] or [ ] to select available values<br>ON / OFF              | <b>F</b> | <b>A/B</b>     |

| Item No. | Item Name             | Enter item                                  | Screen Display      | Select parameter                            | Parameter Explanation | Confirm  | Return Standby |
|----------|-----------------------|---|---------------------|---|-----------------------|----------|----------------|
| 19)      | Voice prompt          | <b>F</b> + <b>1</b> [SCAN] / <b>9</b> [REP] | Y.M.F. VOICE ON     | Press [ ] or [ ] to select available values | ON / OFF              | <b>F</b> | <b>A/B</b>     |
| 20)      | Power-on display      | <b>F</b> + <b>2</b> [PR] / <b>0</b> [ANI]   | Y.M.F. OPN. SET OFF | Press [ ] or [ ] to select available values | OFF / DC / MEG        | <b>F</b> | <b>A/B</b>     |
| 21)      | Battery power voltage | <b>F</b> + <b>2</b> [PR] / <b>4</b> [SCAN]  | Y.M.F. ULT 7.6V     | Press [ ] or [ ] to select available values | Show current voltage  | <b>F</b> | <b>A/B</b>     |
| 22) A.   | Repeater shift        | <b>F</b> + <b>2</b> [PR] / <b>2</b> [PR]    | Y.M.F. OFFSET 2.000 | Press [ ] or [ ] to select available values | 0.000-99.995MHz       | <b>F</b> | <b>A/B</b>     |
| B.       | Display channel name  | <b>F</b> + <b>2</b> [PR] / <b>2</b> [PR]    | Y.M.F. DIS. CH ON   | Press [ ] or [ ] to select available values | ON / OFF              | <b>F</b> | <b>A/B</b>     |
| 23)      | TX/RX tone coder      | <b>F</b> + <b>2</b> [PR] / <b>3</b> [VX]    | Y.M.F. C-CDC 254.1  | Press [ ] or [ ] to select available values | OFF / QT / DCS        | <b>F</b> | <b>A/B</b>     |
| 24)      | RX tone coder         | <b>F</b> + <b>2</b> [PR] / <b>4</b> [PR]    | Y.M.F. R-CDC 254.1  | Press [ ] or [ ] to select available values | OFF / QT / DCS        | <b>F</b> | <b>A/B</b>     |
| 25)      | TX tone coder         | <b>F</b> + <b>2</b> [PR] / <b>5</b> [VX]    | Y.M.F. T-CDC 8254.1 | Press [ ] or [ ] to select available values | OFF / QT / DCS        | <b>F</b> | <b>A/B</b>     |
| 26)      | Shift direction       | <b>F</b> + <b>2</b> [PR] / <b>6</b> [VX]    | Y.M.F. S-D OFF      | Press [ ] or [ ] to select available values | OFF / + / -           | <b>F</b> | <b>A/B</b>     |

| Item No. | Item Name          | Enter item                                 | Screen Display             | Select parameter                            | Parameter Explanation                | Confirm  | Return Standby |
|----------|--------------------|--|----------------------------|---|--------------------------------------|----------|----------------|
| 27)      | VFO step           | <b>F</b> + <b>2</b> [PR] / <b>7</b> [VX]   | Y.M.F. STEP 25K            | Press [ ] or [ ] to select available values | 5K / 6.25K / 10K...100K              | <b>F</b> | <b>A/B</b>     |
| 28)      | Wide/Narrow band   | <b>F</b> + <b>2</b> [PR] / <b>8</b> [CUR]  | Y.M.F. W-N WIDE            | Press [ ] or [ ] to select available values | WIDE/NARR/MIDD                       | <b>F</b> | <b>A/B</b>     |
| 29)      | CTCSS scan         | <b>F</b> + <b>2</b> [PR] / <b>9</b> [REP]  | Y.M.F. SEEK 67.0           | Press [ ] or [ ] to change scan direction   | Press [ <b>F</b> ] key to start scan | <b>F</b> | <b>A/B</b>     |
| 30)      | DCS scan           | <b>F</b> + <b>3</b> [VX] / <b>0</b> [ANI]  | Y.M.F. SEEK D023H          | Press [ ] or [ ] to change scan direction   | Press [ <b>F</b> ] key to start scan | <b>F</b> | <b>A/B</b>     |
| 31)      | Voice scrambler    | <b>F</b> + <b>3</b> [VX] / <b>4</b> [SCAN] | Y.M.F. SCRAMBLER ?         | Press [ ] or [ ] to select available values | ON/OFF                               | <b>F</b> | <b>A/B</b>     |
| 32)      | Lock MD            | <b>F</b> + <b>3</b> [VX] / <b>2</b> [PR]   | Y.M.F. Lock MD KEY         | Press [ ] or [ ] to select available values | ALL/PTT/KEY/KEY+S                    | <b>F</b> | <b>A/B</b>     |
| 33)      | DIS Mode           | <b>F</b> + <b>3</b> [VX] / <b>3</b> [VX]   | Y.M.F. DIS Mode CH         | Press [ ] or [ ] to select available values | CH/FRE/MR                            | <b>F</b> | <b>A/B</b>     |
| 34)      | Dual watch/monitor | <b>F</b> + <b>3</b> [VX] / <b>4</b> [PR]   | Y.M.F. DW OFF              | Press [ ] or [ ] to select available values | ON/OFF                               | <b>F</b> | <b>A/B</b>     |
| 35)      | Reset              | <b>F</b> + <b>3</b> [VX] / <b>5</b> [VX]   | Y.M.F. Reset All           | Press [ ] or [ ] to select available values | ALL/VFO/FULL                         | <b>F</b> | <b>A/B</b>     |
| 36)      | Radio Version      | <b>F</b> + <b>3</b> [VX] / <b>6</b> [PR]   | Y.M.F. RADIO VER MCU B1.07 | Press [ ] or [ ] to select available values | MCU B1.07/Time                       | <b>F</b> | <b>A/B</b>     |

- 37) NM SET  **F** +   NM SET  
- 38) RX ENC  **F** +   RX ENC   ON/OFF  

## DETAILED FUNCTION DESCRIPTIONS

### ADVANCED FUNCTIONS

## DETAILED FUNCTION DESCRIPTIONS

### 1) Scan & Scan Mode setting (SCAN&SCANS---MENU 1&17)

**Functions:** under VFO/MR/CH mode, the transceiver allows you to scan the entire current operating band and memory channels.

**Enter Menu 1<sup>st</sup> and press [ F ] key to start scanning.**

When you have started scanning, press [ ▲ ] / [ ▼ ] key to change direction. And it will halt on a signal it encounters, press [ F ] key to stop scanning

Scanning operation is basically the same in each of the above modes. Before you begin, take a moment to select the way in which you would like the scanner to halt on a signal.

**Enter Menu 17<sup>th</sup> to set scan mode. Default: TO.**

Three options for the scan mode are available under VFO mode:

**TO:** In this mode, the scanner will halt on a signal it encounters, and will hold there for some time. If you do not take action to disable the scanner within the time period, the scanner will resume even if the stations are still active.

**CO:** In this mode, the scanner will halt on a signal it encounters, and will hold there if the stations are still active. And after the carrier has dropped, the scanner will resume.

**SE:** In this mode, the scanner will halt on a signal it encounter, it will not restart automatically; you must manually re-initiate scanning if you wish to resume.

### 2) Priority Transmit (TX.SEL---MENU 2)

**Functions:** This transceiver allows you to transmit on the sub band even if you are working on the operating band.

**Enter Menu 2<sup>nd</sup> to select priority transmit band. Default: EDIT.**

**EDIT:** It will transmit on the operating band.

**BUSY:** It will transmit on the band last talking used.

### 3) VOX Level & VOX Switch (VOX&VOX.SW---MENU 3&13)

**Functions:** the VOX function provides automatic transmit/receive switching based on voice input to the microphone. With the VOX switch ON, you do not need to press **PTT** switch in order to transmit, and it is not necessary to use a VOX headset in order to utilize VOX operation.

**Enter Menu 13<sup>th</sup> to set VOX switch. Default: OFF.**

**Enter Menu 3<sup>rd</sup> to set VOX level, it has 7 grades.**

The higher level is, the more sensitive will be.

This transceiver provides for adjustment of " Hang- Time" of the VOX (the transmit-receive delay after the cessation of speech) via program software.

**Default: 2s.**

#### 4) TX Power setting (POW---MENU 4)

**Functions:** you can select high/low TX power according to your talking environment and need. When you store memories, you can store High and Low power settings separately in each memory.

**Enter Menu 4<sup>th</sup> to set TX power.**

High: 10W Middle:5W

Low: 2W, when you select Low power, the “L” icon will appear on the display.

#### 5) Squelch Adjustment (SQL---MENU 5)

**Functions:** Squelch system allows you to mute the background noise when no signal is being received. Not only does the Squelch system “standby” operation more pleasant, it also significantly reduce battery current consumption.

**Enter Menu 5<sup>th</sup> to set SQL level. Default: 5.**

#### 6) Dual Wait/Standby (D.WAIT---MENU 6)

**Functions:** This transceiver allows you to receive the sub band signal even if you are working on the operating band. It could monitor the signal under both master and sub band at the same time.

**Enter Menu 6<sup>th</sup> to set Dual Wait. Default: ON.**

#### 7) LED Display Mode (LED---MENU 7)

**Function:** select the LED/Keypad Lamp mode.

**Enter Menu 7<sup>th</sup> to select LED display mode. Default: AUTO.**

ON: Illuminates the LED when any key is pressed. You can set 5S,10S,15S,20S,25S,30S to disalbe the lamp.

OFF: Disable the LED lamp.

#### 8) Background Light brightness(LIGHT---MENU 8)

**Functions:**Adjust screen brightness.

**Enter Menu 8<sup>th</sup> to Adjust screen brightness 1,2,3,4,5,6,7.**

#### 9) Keypad Beeper setting (BEEP---MENU 9)

**Functions:** enable/disable the keypad beeper.

**Enter Menu 9<sup>th</sup> to set keypad beeper. Default: ON.**

#### 10) Preset Channel Selection(DT/2T/5T CH-MENU 10)

**Functions:** Preset the signal type(OFF/DTMF/2T/5T) at software,by choosing 1-16 channel to achieve remote kill/stun/activate/revive function.

**Enter Menu 10<sup>th</sup> to choose 1-16 channel.**

#### 11) Transmitter Time-Out Timer (TOT---MENU 11)

**Functions:** the TOT feature provides a safety switch which limits transmission to a pre-programmed value. This will promote battery conservation by not allowing you to make excessively-long transmissions, and in the event of a stuck PTT switch it can prevent interference to other users as well as battery depletion.

**Enter Menu 11<sup>th</sup> to set TOT. Default: OFF.**

#### 12) Busy Channel Lock-Out (BCLO---MENU 12)

**Functions:** the BCLO feature prevents the radio's transmitter from being activated if a signal strong enough to break through the "noise" squelch is present. On a frequency where stations using different CTCSS or DCS codes may be active, BCLO prevents you from disrupting their communications accidentally (because your radio may be muted by its own tone decoder).

**Enter Menu 12<sup>th</sup> to set BCLO. Default: OFF.**

OFF: Disable BCLO feature.

WAVE: the radio's PTT will be prevented only if the frequency is busy used.

CALL: the radio's PTT will be prevented only the frequency and tone coder is the same.

#### 13) Transmit Over Beeper (ROGER---MENU 14)

**Functions:** sending a beeper to inform the receiver TX is over.

**Enter Menu 14<sup>th</sup> to set ROGER. Default: OFF.**

#### 14) Receive Saver (RX.SAV---MENU 16)

**Functions:** this feature significantly reduces quiescent battery drain, and you may not receive the full data burst.

**Enter Menu 16<sup>th</sup> to set RX.SAV. Default: OFF.**

#### 15) Auto Keypad Lock(AUTOLK & LOCK MD—MENU 18 &MENU 32)

**Functions:** in order to prevent accidental frequency change or inadvertent transmission. Various aspects of the radio's keys and switches may be locked out.

**Enter Menu 32<sup>th</sup> to set LOCK MD, you can choose to lock All/K+S/KEY/PTT.**

When you switch AUTOLK ON, the keypad will be locked automatically if there is no key operation for 10 second.

If the radio is locked, press [ \*00 ] key to unlock it. Also you can lock it using [ \*001 ] key by manual.

#### 16) Voice Prompt (VOICE---MENU 19)

**Functions:** enable/disable voice prompt.

**Enter Menu 19<sup>th</sup> to set VOICE. Default: ON.**

#### 17) Power-on Display setting (OPN.SET&VLT---MENU 20&21)

**Functions:** choose power-on display mode and edit power-on message

**Enter Menu 20<sup>th</sup> to set OPN.SET.**

DC: battery power voltage

MEG: power-on message

**Enter Menu 21<sup>st</sup> to check battery voltage.**

#### 18) Repeater Shift setting (OFFSET&S-D---MENU 22&26)

**Functions:** repeater stations, usually located on mountaintops or other high locations, provide a dramatic extension of the communication range for low-powered hand-held or mobile transceivers.

Under VFO mode, you can set the magnitude and direction of the repeater shift.

**Enter Menu 22<sup>rd</sup> to set magnitude of the repeater shift.**

Available values: 0.00 ~ 99.95 MHz

**Enter Menu 26<sup>th</sup> to set the repeater shift direction. Default: OFF.**

#### 19) Display Channel Name(DIS.NAME &NM SET—MENU 22 &37)

Function: switch channel name display ON/OFF and edit channel name under MR/CH mode

Enter Menu 22<sup>nd</sup> to switch display channel name ON/OFF.

Enter Menu 37<sup>th</sup> to edit channel name, also you can edit it directly by programming software.




Using [  ] / [  ] to select character, [  ] to switch cursor position.


#### 20) Tone coder & Tone Search Scanning & Tone calling (C-CDC & R-CDC & T-CDC&SEEK 67.0 & D023N—MENU 23&24&25&29&30).

**Function 1:** CTCSS/DCS Operation

Many repeater systems require that a very-low-frequency audio tone be superimposed on your FM carrier in order to activate the repeater. This helps prevent false activation of the repeater by radar or spurious signals from other transmitters.

**Enter Menu 23<sup>th</sup>/24<sup>th</sup>/25<sup>th</sup> to set TX&RX Tone coder/ RX Tone coder/ TX Tone coder.**

1) Press [  ] key to select CTCSS/ DCS/ OFF. After you choose CTCSS/ DCS, press [  ] / [  ] key to choose the right group you need.

2) Press [  ] key to select DCS direction.

This transceiver has 50 groups CTCSS, 104 groups normal/inverted DCS.



| CTCSS TONE FREQUENCY (Hz) |       |       |       |       |       |
|---------------------------|-------|-------|-------|-------|-------|
| 67.0                      | 69.3  | 71.9  | 74.4  | 77.0  | 79.7  |
| 82.5                      | 85.4  | 88.5  | 91.5  | 94.8  | 97.4  |
| 100.0                     | 103.5 | 107.2 | 110.9 | 114.8 | 118.8 |
| 123.0                     | 127.3 | 131.8 | 136.5 | 141.3 | 146.2 |
| 151.4                     | 156.7 | 159.8 | 162.2 | 165.5 | 167.9 |
| 171.3                     | 173.8 | 177.3 | 179.9 | 183.5 | 186.2 |
| 189.9                     | 192.8 | 196.6 | 199.5 | 203.5 | 206.5 |
| 210.7                     | 218.1 | 225.7 | 229.1 | 233.6 | 241.8 |
| 250.3                     | 254.1 | -     | -     | -     | -     |

| DCS CODE |     |     |     |     |     |     |
|----------|-----|-----|-----|-----|-----|-----|
| 023      | 074 | 172 | 265 | 371 | 503 | 662 |
| 025      | 114 | 174 | 266 | 411 | 506 | 664 |
| 026      | 115 | 205 | 271 | 412 | 516 | 703 |
| 031      | 116 | 212 | 274 | 413 | 523 | 712 |
| 032      | 122 | 223 | 306 | 423 | 526 | 723 |
| 036      | 125 | 225 | 311 | 431 | 532 | 731 |
| 043      | 131 | 226 | 315 | 432 | 546 | 732 |
| 047      | 132 | 243 | 325 | 445 | 565 | 734 |
| 050      | 134 | 244 | 331 | 446 | 606 | 743 |
| 051      | 143 | 245 | 332 | 452 | 612 | 754 |
| 053      | 145 | 246 | 343 | 454 | 624 | -   |
| 054      | 152 | 251 | 346 | 455 | 627 | -   |
| 065      | 155 | 252 | 351 | 462 | 631 | -   |
| 071      | 156 | 255 | 356 | 464 | 632 | -   |
| 072      | 162 | 261 | 364 | 465 | 645 | -   |
| 073      | 165 | 263 | 365 | 466 | 654 | -   |

**Function 2: TONE Search Scanning**

In operating situations where you don't know the CTCSS/DCS tone being used by another station or stations, you can command the radio to listen to the incoming signal and scan in search of the tone being used.

**Enter Menu 29<sup>st</sup>/30<sup>nd</sup> to start CTCSS/DCS searching.**

If the Tone scan feature does not detect a tone or code, it will continue to scan indefinitely. When this happens, it may be that the other station is not sending any tone. You can press **PTT** key to halt the scan at any time.

You also can press **MONI** key during Tone scanning to listen to the (muted) signal from the other station. When you release the **MONI** key, Tone scanning will resume.

Tone Scanning works either in the VFO or MR modes.

**Function 3: TONE Calling (1750Hz)**

If the repeaters in your country require a 1750Hz burst tone for access (typically in Europe), you can press and hold Side Key 1 for 2S and transmitter will automatically be activated, and a 1750Hz audio tone will be superimposed on the carrier. Once access to the repeater has been gained, you may release Side Key 1 and use PTT key for activating. The transmitter.

21) VFO Step setting (STEP---MENU 27)

**Functions:** setting of the synthesizer steps

**Enter Menu 27<sup>th</sup> to set VFO step.**

Available Values: 2.5/5/6.25/10/12.5/25/50/100kHz.

22) Wide/Narrow band selecting (N/W---MENU 28)

**Functions:** setting of wide / midd / narrow bandwidth

**Enter Menu 28<sup>th</sup> to set bandwidth.**

Available Values: Wide---25kHz / Midd---20kHz / Narrow---12.5kHz

Noted: Wide Band is not available for USA and Canada version.

23) Scrambler(SCR---MENU 31)

**Functions:** only 2/5 tone version has this function.

This transceiver has 1 group of scrambler. It is accomplished by the addition of components to the original signal in order to make a extraction of the original signal difficult. And its voice compand technology will make the voice more clearly in the noise environment.

**Enter Menu 31<sup>td</sup> to set scrambler group.**

24)Dual Watch/Monitor(DW-MENU 34)

Function: Dual Watch feature makes transceiver can monitor the calling signal when FM radio is on and you won't miss any calling.

**Enter Menu 34<sup>th</sup> to set DW. Default:OFF.**

## ADVANCED FUNCTIONS

### 1)EMERGENCY ALERT [ F ] + [ #RADIO ]

Under standby mode, press [ F ] to enter menu setting. LCD display “MENU”, then press [ #RADIO ] to turn on emergency alert function, radio will transmit emergency ring, until you press PTT, it will exit.



### 2)KEYPAD LOCK SETTING

Under standby mode, press [ \*Lock ] for 2 S to lock to unlock the keypad. “” will be displayed at the top of LCD when keypad is locked.

And you can Enter Menu 32<sup>th</sup> [LOCK MD] to set Keypad lock method:

ALL/PTT/KEY/KEY+S lock.

### 3)TONE CALLING (1750 TONE)

To access a repeater, press and hold in [Side key 1] for the amount of time specified by the repeater. The transmitter will automatically be activated, and a 1750Hz audio tone will be superimposed on the carrier. Once access to the repeater has been gained, you may release [Side key 1] and use PTT for activating the transmission.

### 4)CHANNEL STORAGE AND DELETE

Channel Storage


421

Under VFO mode, input desired frequency by keypad directly or select one by pressing [ ^ ] or [ v ] and then long press [ F ], the digits blinks at the right top of LCD, press number to input desired channel directly, or press [ ^ ] or [ v ] to choose desired one, then press [ #RADIO ] for storage.

**Note:** after you input desired channel number, if it blinks, it means that this channel is already occupied, you can choose another one.

e.g.: to store the frequency: 450.325MHz with CTCSS: 151.4 to the channel 05, the step are as follows:

- 1) Under VFO mode, input 4-5-0-3-2-5
- 2) Press [ F ]+[ 2 On ]+[ 3 Vox ] or press [ F ]+[ \*Lock ],then press [ F ] to enter.
- 3) Press [ \*Lock ] to choose CTCSS mode, LCD displays C-CDC 67.0
- 4) Press [ ^ ] or [ v ] to choose 151.4, then press [ F ] to confirm
- 5)Press [ A/B ] to exit
- 6)Long press [ F ], the digit blinks at the right top of LCD
- 7)Press [ ^ ] or [ v ] to choose 05 directly
- 8)Press[ #RADIO ] for storage. LCD displays MR mode and currently stored channel

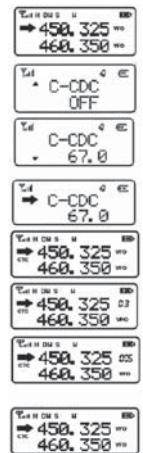

Note: If the screen says D023N instead of 67.0, to go back to CTCSS setting press successively the [ \*Lock ] key until the display show OFF. Then you can Press the [ ▲ ] or [ ▼ ] key, now the LCD screen shows the 67.0 or the frequency of the last selected tone.

#### Channel delete

- 1) Under VFO mode, long press [ F ], the digit blinks at the right top of LCD
- 2) Press [ ▲ ] or [ ▼ ] or input channel number you want to delete, then press [ \*Lock ] to confirm
- 3) After delete, it will skip into next channel, if you want to delete it, repeat above operation.

#### 5) FM RADIO FUNCTION

##### 1) On/off radio receiver

Under standby mode, press [ #Radio ] to open FM radio function, LCD display "70.00M", then press [ #Radio ] again, radios receiver is off.



##### 2) Mode selection:

Under FM radio mode, press [ #Radio ] to switch between FM memory mode and FM frequency mode (this function is unavailable when there is not FM memory channel)

##### 3) Frequency selecting

Under FM frequency mode, input the digits directly by keypad or press [ ▲ ] or [ ▼ ] to choose the desired frequency. Under FM memory mode, press [ ▲ ] or [ ▼ ] to choose the desired channel.

##### 4) FM radio storage

Under FM frequency mode, long press [ F ], the channel number for storage blinks at the right of the screen. Press [ ▲ ] or [ ▼ ] to select the desired channel number, press [ #Radio ] to confirm and then back to the receiving mode.

##### 5) FM radio channel delete:

Under FM frequency mode, long press [ F ], the channel number blinks, press [ ▲ ] or [ ▼ ] to choose the channel number you want to delete, Press [ \*Lock ] to confirm. Repeat this operation, you can delete all memory channel 24 in maximum.

#### 6) VFO offset setting

Under VFO mode, enter Menu 22 to set magnitude of the repeater shift, enter menu 26 to set the shift direction, synthesizer Steps can be changed through menu item 27. For example, if your frequency now is 445.0500MHz, would like to set a frequency 444.4500MHz as transmit frequency, steps as below:

1. Under VFO mode, enter Menu 22 to set the offset at 0.6MHz, press F to confirm.
2. Enter menu 26 to set shift direction at "-", press F to confirm.
3. Press PTT button will show transmit frequency at 444.4500MHz

#### 7) RX ENC (Environment Noise Cancellation) function

Audio sound active control is a signal-processing methodology that reduces the effective sound amplitude to improve signal-to-noise ratio (SNR) so that unwanted noise is less perceptible. The ENC methodology is also called audio noise reduction (ANR). ENC or ANR is based on coherent acoustics that accurately replicate the original sound field in all its forms. This radio equipped with the ENC (Environment Noise Cancellation) function, can help you hear clear in the noisy environment. RX ENC ON/OFF can be set from Menu 38.

#### 8) One-Key Frequency Copy

When the radio is under VFO mode, long press A/B key, the radio will broadcast "Di" prompt sound and green light flashing slowly. Transmit (Press PTT) the radio (the one we want to copy), Radio will finish copy current frequency and CTCSS when Radio Broadcast "Di" prompt sound with green light always on when save successfully. Same operate method for others channels Copy save, Switch off and on radio again once all done.

:Support different brand walkie talkie copy.

The radio (want to be copied) must keep on pressing PTT till the frequency and the CTCSS/DCS copied, or it may seek the end tone of the copied radio

## User's Manual

# SIGNALINGS

Professional FM Transceiver

**Selected channel call:**

**Press PTT and Side key 1( Flashlight button) to achieve remote kill/stun/active.**

**DTMF**

When the signal of the channel selects the DTMF, press PTT and at the same time press side key 1, the current channel will automatically check if the DTMF signaling is received and decoding it. And achieve a corresponding function according to the received code.

The function including: ANI display, remote stun/waken/kill..

ANI Display:

1.DTMF Encode type choose ANI:

| Dtmf Encode |      |         |
|-------------|------|---------|
| No.         | Type | Code    |
| 1           | ANI  | 003*001 |

2.Input the called ID, eg, your radio ID is 001, the called radio ID is 003

|           |     |
|-----------|-----|
| No.       | 001 |
| Call Type | ANI |
| Call ID   | 003 |

3.Select channel NO.

Own ID: 001  
Delimiter: \*  
Group Code: A  
Dtmf Speed(MS): 100  
First Digit(MS): 200  
Auto Reset Time(S): 10  
 DTMF ANI  
 Side Tone  
Select Ch: 1

4.Choose DTMF signal

| No. | Rx Fre    | Tx Fre    | Decode | Encode | Scramble | Power | E_Lock | Step  | Wide | Signal |
|-----|-----------|-----------|--------|--------|----------|-------|--------|-------|------|--------|
| 1   | 445.02500 | 445.02500 | OFF    | OFF    | OFF      | Hig   | OFF    | 12.5K | Wide | DTMF   |

5.Press PTT and side key 1 at the same time to achieve the ANI display function.

### Remote stun, remote kill function

Stun code: when the radio receives the corresponding DTMF code, the radio will be remote stunned and disabled transmit.

Kill code: when the radio receives the corresponding DTMF code, the radio will be remote killed and disabled receive and transmit.

Waken code: release the state of stun/kill.

Select Ch: the default channel when the DTMF is calling.

1.DTMF Encode type choose OFF, user can input the desired DTMF code directly.

| Dtmf Encode |      |                  |
|-------------|------|------------------|
| No.         | Type | Code             |
| 1           | ANI  | 003*001          |
| 2           | OFF  | 323457989012345  |
| 3           | OFF  | 323457989012345# |
| 4           | OFF  | 423465789012345  |
| 5           | OFF  | 423465789012345# |
| 6           |      |                  |

2.In transmitting ,input the remote kill/stun code for the radio which you want to remote kill/stun.

|           |  |
|-----------|--|
| Stun Code | <input type="text" value="323457989012345"/> |
| Kill Code | <input type="text" value="423465789012345"/> |

3.DTMF Encode:

Remote receive code : "remote stun code + #" to waken radio which at stun state

Remote receive code: "remote kill code + #" to waken radio which at kill state

4.Select channel

|            |                                  |   |  |
|------------|----------------------------------|---|--|
| Own ID     | <input type="text" value="001"/> | Dtmf Speed(MS)                                | <input type="text" value="100"/>         |
| Delimiter  | <input type="text" value="*"/>   | First Digit(MS)                               | <input type="text" value="200"/>         |
| Group Code | <input type="text" value="A"/>   | Auto Reset Time(S)                            | <input type="text" value="10"/>          |
|            |                                  | <input checked="" type="checkbox"/> DTMF ANI  | Select Ch <input type="text" value="1"/> |
|            |                                  | <input checked="" type="checkbox"/> Side Tone |  |

Like above setting,  
 Channel 1: ANI display,  
 Channel 2: remote stun code  
 Channel 3: remote waken from stun state  
 Channel 4: remote kill code  
 Channel 5: remote waken from kill state

#### 5. Signal choose DTMF

| No. | Rx Fre    | Tx Fre    | Decode | Encode | Scramble | Power | B_Lock | Step  | Wide | Signal |
|-----|-----------|-----------|--------|--------|----------|-------|--------|-------|------|--------|
| 1   | 445.02500 | 445.02500 | OFF    | OFF    | OFF      | Hig   | OFF    | 12.5K | Wide | DTMF   |

#### 6. Remote kill/waken/stun operation.

After setting like above, if you would like to achieve Radio A kill Radio B, there are two way to achieve:

One: At programming software DTMF setting choose Ch 4.


Then press the PTT and side key 1 to achieve remote radio B.

Two: At radio, choose Menu 10th—DT CH—Channel number choose 4.

Then press the PTT and side key 1 to achieve remote radio B.

Similar operation for remote stun/waken.

## 2 TONE Operation

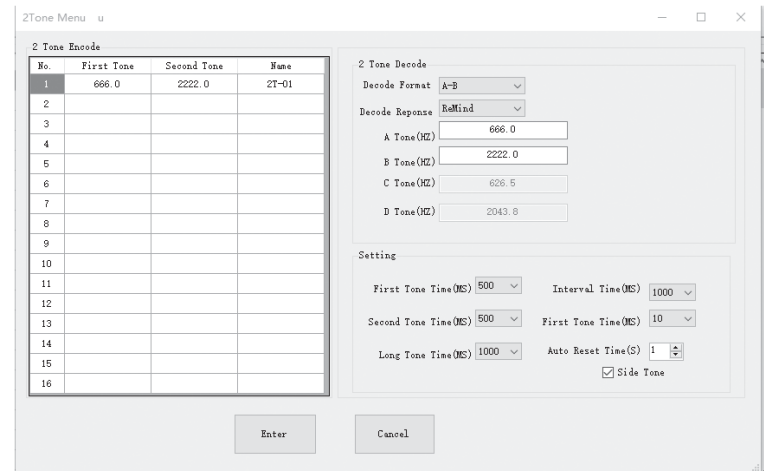

### 2 Tone encode

Input: the frequency of first tone and second tone

Note: the frequency between of the first tone and second tone should not too similar to avoid the decoding is wrong.

### 2 Tone decode

Decode Format: the combination of decode, for example: A-B, you should make sure the frequency of first tone is A, and second tone is B. Other combination is similar.



## 5 Tone Operation

The screenshot shows a software interface titled "5Tone Menu". It has two tabs: "5Tone Encode" and "5Tone Decode". The "5Tone Encode" tab is active, displaying a table with the following data:

| No. | Type | Call ID  | Ch Name |
|-----|------|----------|---------|
| 1   | ANI  | 12345    | 5T-01   |
| 2   | OFF  | 12345678 | 5T-02   |
| 3   | OFF  | 12345678 | 5T-03   |
| 4   | OFF  | 87654321 | 5T-04   |
| 5   | OFF  | 35578411 | 5T-05   |
| 6   |      |          |         |
| 7   |      |          |         |
| 8   |      |          |         |
| 9   |      |          |         |
| 10  |      |          |         |
| 11  |      |          |         |
| 12  |      |          |         |
| 13  |      |          |         |
| 14  |      |          |         |
| 15  |      |          |         |
| 16  |      |          |         |

At the bottom of the interface are two buttons: "Enter" and "Cancel".

### 5 Tone encode

The write way is same with the DTMF.

### 5 Tone decode

Function: The function will be achieved when the radio receives the corresponding code.

Select: Turn on squelch

Stun/kill: same with DTMF

Wake: release the state of stun/kill

54 |

## User's Manual

# TECHNICAL PARAMETERS GUARANTEE

Professional FM Transceiver

## TECHNICAL PARAMETERS

### General

|                       |                                       |
|-----------------------|---------------------------------------|
| Channel               | 200                                   |
| Operating Voltage     | 7.4VDC                                |
| Operating Temperature | -10° C ~ +50° C                       |
| weight                | 295g ( battery and antenna included ) |
| Dimension             | 126x62x43mm                           |

### Transmitter

|                               |   |
|-------------------------------|---|
| Frequency                     | 144-148/420-450MHz USA version<br>144-146/430-440MHz EU version<br>136-174/400-480MHz |
| power                         | 10W   |
| Modulation Type               | FM  |
| Spurious Power                | ≤ -15dB   |
| Modulation Noise              | < -40dB   |
| Modulation Distortion         | <5%   |
| Frequency Stability           | 5ppm  |
| Max Fr. Deviation             | ≤ ± 5KHz  |
| Current                       | ≤ 1600mA  |
| Audio response ( 300-3400Hz ) | +6.5~-14dB  |
| Adjacent Ch Power             | ≥ 65dB  |

### Receiver

|                               |   |
|-------------------------------|---|
| Frequency                     | 144-148/420-450MHz USA version<br>144-146/430-440MHz EU version<br>136-174/400-480MHz |
| Sensitivity                   | ≤ 0.2 μ V   |
| Occupied Bandwidth            | ≤ 16KHz   |
| Selectivity                   | ≥ 65dB  |
| Intermediation                | ≥ 55dB  |
| Audio powe                    | > 500m W  |
| Audio distortion              | ≤ 10%   |
| Frequency Stability           | 5ppm  |
| Current                       | standby: 60mA working:250mA   |
| Audio response ( 300-3400Hz ) | +7~-12.5dB  |

**WARNING: MODIFICATION OF THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES AND FEDERAL LAW.**

## Guarantee

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Purchasing Date: \_\_\_\_\_

Dealer: \_\_\_\_\_ Telephone: \_\_\_\_\_

User's Name: \_\_\_\_\_ Telephone: \_\_\_\_\_

Address: \_\_\_\_\_ Post Code: \_\_\_\_\_

### Remarks:

- 1 This guarantee card to be kept by the user, no replenishment if lost.
- 2 This guarantee card to be filled & chopped by the dealer, or it is invalid.
- 3 Don't alter the guarantee card, please confirm the serial number on the guarantee card is same as that on the machine.
- 4 One-year guarantee, charger, battery, ear-phone, antenna and cable are not under guarantee.
- 5 The user can get repairing service from the followingways:
  - Go to the shop where you buy the machine.
  - Our local repairing agents.
  - Send back to our company.

--- Please cut along with this line ---

