

EddyTM means
real-time

Eddy Serial

User Guide

Ver 2.1.1.1

2010. 06.25



Revision History

Revision Date	Document Version	Pages	Description
Feb-5-2009	2.1.0.1	All	Initial release by shlee
Sep-10-2009	2.1.0.2	4,5,6	Added Wifi
Nov-11-2009	2.1.0.3	2,3,5	Append Eddy-S4M
Jun-06-2010	2.1.1.1	All	Open Linux Version Added Eddy-BT

Table of Contents

Chapter 1.	Introduction	5
1.1	About this manual.....	5
1.2	Who should read this manual	5
1.3	Contents	5
1.4	Eddy Documents	6
1.5	Technical Support	7
Chapter 2.	Getting Started	8
2.1	Overview.....	8
2.2	Eddy-CPU v2.1	8
2.3	Eddy-DK v2.1 (Development Kit)	9
2.4	Eddy-S4M v2.1	11
2.5	Eddy-S4M-DK v2.1 (Development Kit)	13
2.6	Eddy-S4M-JiG v2.1 (Testing Board)	14
2.7	Eddy-Wifi v 2.1	15
2.8	Eddy-BT v2.1.....	17
2.9	Eddy Software Architecture.....	18
2.10	Main Features	18
2.11	Applications	19
Chapter 3.	Hardware Description.....	20
3.1	Eddy-CPU	20
3.2	Eddy-DK v2.1	21
3.3	Eddy-S4M v2.1	23
3.4	Eddy-S4M-DK v2.1	24
3.5	Eddy-S4M-JiG v2.1.....	25
3.6	Eddy Wifi v2.1.....	26
3.7	Eddy BT v2.1	28
Chapter 4.	Integration.....	30
4.1	Connection Guide.....	30
4.2	First-time Bootup	30
4.3	Connecting to Eddy with IP address.....	30
4.4	Using MCI slot & USB Host Port	33

Chapter 5.	Configuration via Web	36
5.1	Connection	36
5.2	Setup Menu	37
5.3	Network Settings	39
5.4	Serial Settings.....	41
5.5	Wireless Settings	44
5.6	Peripheral Settings	47
5.7	DIO Settings	50
5.8	SNMP Settings.....	51
5.9	Change Password	52
5.10	Update Firmware	53
5.11	Factory Default	54
5.12	Save & Reboot	54
Chapter 6.	Configuration via Telnet	56
6.1	Connection	56
6.2	View commands.....	56
6.3	Network commands	57
6.4	WiFi commands.....	59
6.5	Serial Commands.....	60
6.6	Username/Password Commands.....	61
6.7	System Commands.....	62
Chapter 7.	Appendix	63
7.1	Firmware Updates via FTP.....	63
7.2	Ordering Information.....	64
7.3	FCC Statement	64

Chapter 1. Introduction

Eddy, SystemBase Embedded Device Server Module, is an optimized minimal CPU module for developing an industrial embedded device. This manual introduces general functions for the Eddy.

1.1 About this manual

This manual guides that users are able to develop Eddy for a device server including the function that transfers from serial data to LAN. Setting Eddy's configurations, status monitoring, firmware update, and other administration work are also included, H/W level integration and S/W setting information can also be found.

1.2 Who should read this manual

This guide is designed for Eddy users and administrators. It is strongly recommended that anyone trying to apply, use, and maintain Eddy read this document. It will be a great starting point for any administrator who wants to easily monitor and control Eddy and its connected devices.

1.3 Contents

[Chapter 1. Introduction](#) is a preface with general information and introductory notices.

[Chapter 2. Getting Started](#) gives a brief introduction to Eddy series, including features and applications.

[Chapter 3. Hardware Descriptions](#) explains the layout and pin specifications with block diagram and drawings.

[Chapter 4. Integration](#) assists you connecting Eddy to serial and network environment. It covers first time boot-up and status check procedures.

[Chapter 5. Configuration via Web](#) provides ways to configure and to connect Eddy via web browser.

[Chapter 6. Configuration via Telnet](#) provides commands and its explanation to configure and to connect Eddy via web Telnet.

[Chapter 7. Appendix](#) provides firmware update guides and detailed technical specifications.

1.4 Eddy Documents

The following table summarizes documents included in the Eddy document set.

Document	Description
Eddy Serial User Guide	Eddy' s Configuration, and Management Information
Eddy DK Guide	Programmer' s application development guide, including in-depth approach to compiling, linking, creating and uploading firmware API reference is included with a list of available functions for customized application programming
LemonIDE User Guide	User manual about Eddy integrated development environment of Window/Linux based on Eclipse
Portview User Manual	Guide for SystemBase device server management application Portview
COM Port Redirector User Manual	Guide for SystemBase COM Port Redirector
TestView User Manual	Guide for SystemBase test program TestView

General information on Eddy or embedded device servers can be obtained at our website at <http://www.sysbas.com/>. Latest documents, software and firmware downloads are available.

Other relevant documents are as follows:

Document	Description
Eddy-CPU Spec Sheet	Eddy-CPU spec description
Eddy-S4M Spec Sheet	Eddy-S4M spec description
Eddy-Wifi Spec Sheet	Eddy-Wifi spec description
Eddy-BT Spec Sheet	Eddy-BT spec description
LemonIDE Spec Sheet	integrated development environment description
Eddy White Paper	An introductory reading for anyone new to embedded device server, which focuses on background, history, market environment, and technology

All documents are updated promptly, so check for the recent document updates. The contents in these documents are subject to change without a prior notice.

1.5 Technical Support

You can reach our tech support by following 3 ways;

1. Visit the Eddy official community site at <http://www.embeddedmodule.com> and go to 'Technical Support' menu. FAQ and questions can be reviewed and submitted.
2. E-mail our technical support team to tech@sysbas.com. Any kind of inquiries, requests, and comments are welcomed.
3. Call us at our customer center at 82-2-855-0501 for immediate support.

Our technical support team will kindly help you get over with the problem.

Chapter 2. Getting Started

Welcome to Eddy! This chapter includes Eddy series overview, main and distinctive features, package contents for each product, and application fields.

2.1 Overview

There are two categories in Eddy; Eddy-CPU module, Eddy Development Kit (DK).

Eddy-CPU modules include category of socket type Eddy-CPU and Mini PCI type Eddy-S4M.

Eddy-DK includes DK board for Eddy-CPU exclusive, JIG and DK board for Eddy-S4M exclusive.

The Eddy-CPU module includes default applications for serial and LAN communication, and supports plug-and-play features. By switching to the custom mode, users can program any application and upload it on to the module. This application then is executed on the module. In order to write and compile programmer's source code, Software Development Kit (SDK) LemonIDE™ is required.

SDK is included in the DK package. Please refer to Programming Guide and LemonIDE™ user's manual included in the Development Kit for detailed information on the SDK.

SDK is not necessary for users using Eddy in default presettings.

2.2 Eddy-CPU v2.1

Eddy-CPU is an embedded module based on ATMEL AT91SAM9260-CJ processor with 32MB SDRAM, 4MB or 8MB Flash Memory, 1 Ethernet port with 10/100Mbps, 16 bit address / 8 bit data bus interface supporting external device connection, and maximum 17 programmable I/O pins. Programmers can easily implement any device drivers with referring to library type example codes and evaluation kit circuit diagrams.

User can design their own customized device using example sources and Evaluation Kit circuit.

Eddy-CPU is implemented on a small form factor (42 * 25mm) with on-board memory and integrated 10/100Mbps network interface. Developers can minimize time and cost spent on developing application products.




	Feature	Type
Hardware	CPU	ARM926EJ-S (210 MHz)
	Memory	8MB Data Flash, 32 MB SDRAM
	External I/F	19 Bit / 16 Bit Data Bus

	Feature	Type
	Ethernet I/F	10/100 Base-T Auto MDI/MDIX
	UARTs	4 Port, Support up to 921.6 Kbps (1 : Full Signal, 2,3,4, : Async, Tx/D, RTS, CTS only)
	USB 2.0 FS	2 Host /1 Device Port, 2.0 FS (12Mbps)
	ADC	4-Channel 10 Bit ADC
	I2C	Master, Multi-Master and Slave Mode
	SPI	8- to 16-bit Programmable Data Length Four External Peripheral Chip Selects
	GPIO	Max. 56 Programmable I/O Pins
	Power Input	3.3 V (200 mA Max)
	Dimensions	25 x 48.5 x 6.2 mm
	Weight	8.3 g
Network	Protocol	TCP, UDP, Telnet, ICMP, DHCP, TFTP, HTTP, SNMP 1/2, SSH, SSL
	Ethernet	10/100Mbps MAC / PHY
	Network Connection	Static IP, DHCP
Software	O/S	Linux Kernel 2.6.21
	Mgt Tools	SNMP, Web, PortView
	Uploads	TFTP, FTP, Web
	Dev Tools	LemonIDE & SDK
Environmental	Operating Temp	-40 ~ 85 °C
	Storage Temp	-60 ~ 150 °C
	Humidity	5 ~ 95% Non-Condensing
Approvals	CE Class A, FCC Class A, RoHS compliant	

2.3 Eddy-DK v2.1 (Development Kit)

Eddy Development Kit (Eddy DK) helps programmers to test and customize their own Eddy applications easily. The kit includes evaluation board, all necessary connectors, and programming environment with documentations and guidelines. Please refer to Eddy DK Manual included in the Development Kit for detailed information on the DK.

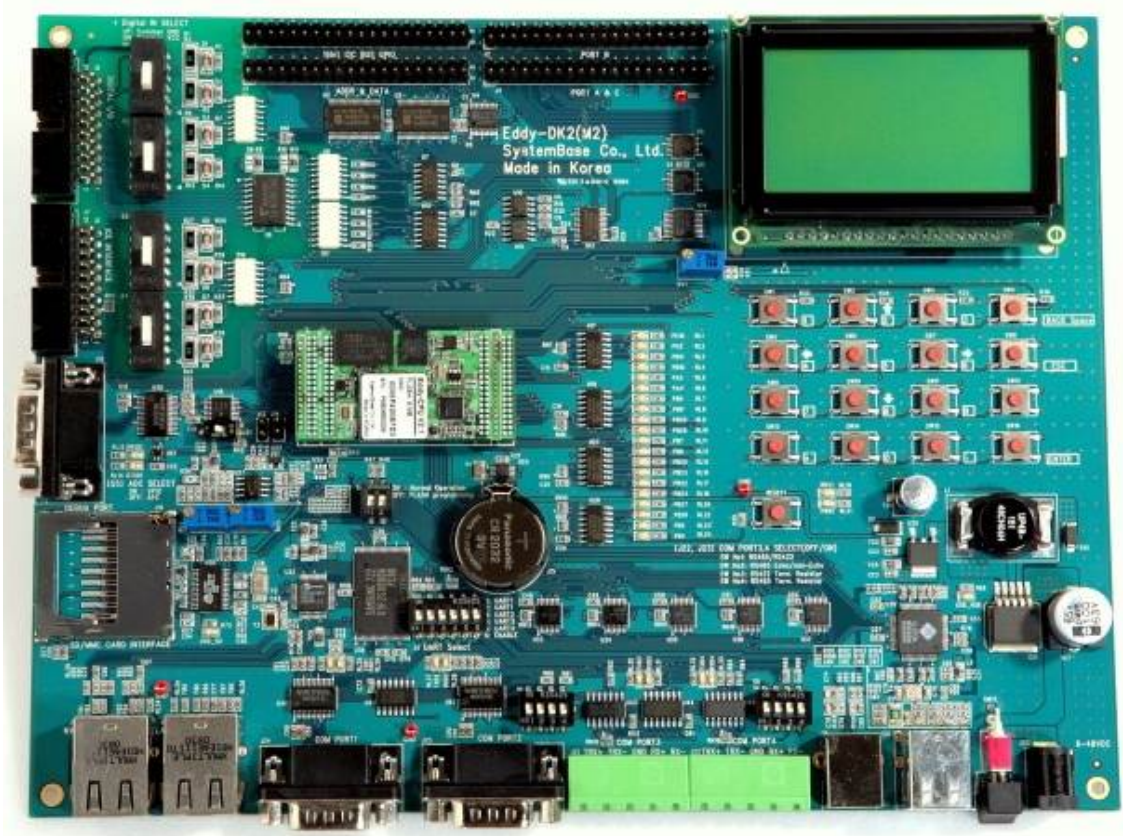

Feature	Type
NAND Flash	256MB, 8bit I/F
SD Card Connector	Push Type, Up to 16 GB MMC / SD Card / MC supported
USB Connector	1 x Device 2 x HOST, Dual-Port
LCD Module	128 x 64 Dots Matrix Structure
KEY	4 x 4 Matrix
Battery Holder	3V Lithium Battery, 235 mAh
LED	Power, Ready, 20 Programmable IO, Console & Serial Tx/D, RxD
I2C Interface	16bit I2C BUS GPIO
SPI Interface	2Kbit EEPROM
MCI Interface	SD Card, MMC Socket
ADC Interface	Temp / Light Sensor
Digital I/O	8 Port Input, 8 Port Output
Switch	Serial or GPIO Select AS422/485 Select DIO : Common VCC or GND Select Programming
Jumper Switch	Boot Mode Select, JTAG Select
Serial Port	2 x RS232 DB9 Male 2 x RS422/485 Terminal Block (RS422 & RS485 Selected by S/W)
Console Port	DB9 Male
LAN Port	2 x RJ45
ICE Port	Used for Flash Programming
Reset Button	Factory Default & Warm Boot
Input Power	9-48VDC
Dimensions	240 x 180 mm

2.4 Eddy-S4M v2.1


Eddy-S4M is a high-performance mini PCI type embedded module which include ATMEL AT91SAM9260-CJ processor 32MB SDRAM, 8MB DataFlash, 10/100Base-T Ethernet port, Serial 4 Channel, ATC with Battery, microSD, 4ch ADC, temperature sensor, max 34 programmable GPIO pins.

Eddy-S4M is 59.75 x 61.8mm size. If using Eddy-S4M-JIG board, user could develop their customized device without other H/W development, which minimizing time and cost to develop.

Referring Example code and Evaluation Kit circuit allow developer to design device they want.




	Classification	Specification
Hardware	CPU	ARM9260B-CJ (210 MHz)
	Memory	AT45DB642D, 8MB Data Flash IS42S16160B, 32 MB SDRAM
	Ethernet MC/PHY	10/100 Base-T MAC KSZ8041NLI PHYceiver Auto MDI/MDIX
	Serials	Port 0,1 : RS232 (DB9 male) Port 0 : Full Signal Port 1 : TXD, RXD, RTS, CTS only Port 2,3 : COMBO (Terminal Block 5pin) * COMBO : RS422/RS485 is S/W selectable
	USB 2.0 FS	3 Host /1 Device Port, 2.0 FS (12Mbps) Use to GL850A USB Hub chip
	ATC	Real Time Clock, ATC DS1340U-33+ Connect to I2C I/F
	Battery Holder	CR1220 (38mAh) 3V Lithium Battery
	ADC	4-Channel 10 Bit ADC
	I2C	Master, Multi-Master and Slave Mode
	SPI	8 to 16-bit Programmable Data Length Four External Peripheral Chip Selects
	MC	SD Spec V2.0 [SDHC], MMC Spec V4.2 support USB to SD Controller, 16GB, 12Mbps/s
	GPIO	Max. 34 Programmable I/O Pins
	LED	Ready LED
Software	Protocol	TCP, UDP, Telnet, ICMP, DHCP, TFTP, HTTP, SNMP1 & 2, SSH, SSL
	Network Connection	Static IP, DHCP
	O/S	Linux Kernel 2.6.21
	Mgt Tools	SNMP, Web, PortView
	Uploads	TFTP, FTP, Web
	Dev Tools	LemonIDE & SDK
Physical characteristics	Power Input	3.3 V (200mA Max)
	Dimensions	59.75 x 61.80 x 4 mm

	Classification	Specification
	Weight	15 g
Environment	Operating Temp	-40 ~ 85 ° C
	Storage Temp	-66 ~ 150 ° C
	Humidity	5 ~ 95 % Non-Condensing
CE Class A, FCC Class A, RoHS compliant		

2.5 Eddy-S4M-DK v2.1 (Development Kit)

Eddy-S4M DK is Development Kit supporting programmer can easily materialize and test their application.

DK includes Test Board, various connectors, programming environment and document. Please refer to Eddy-DK manual for more specific explanation of Eddy-S4M

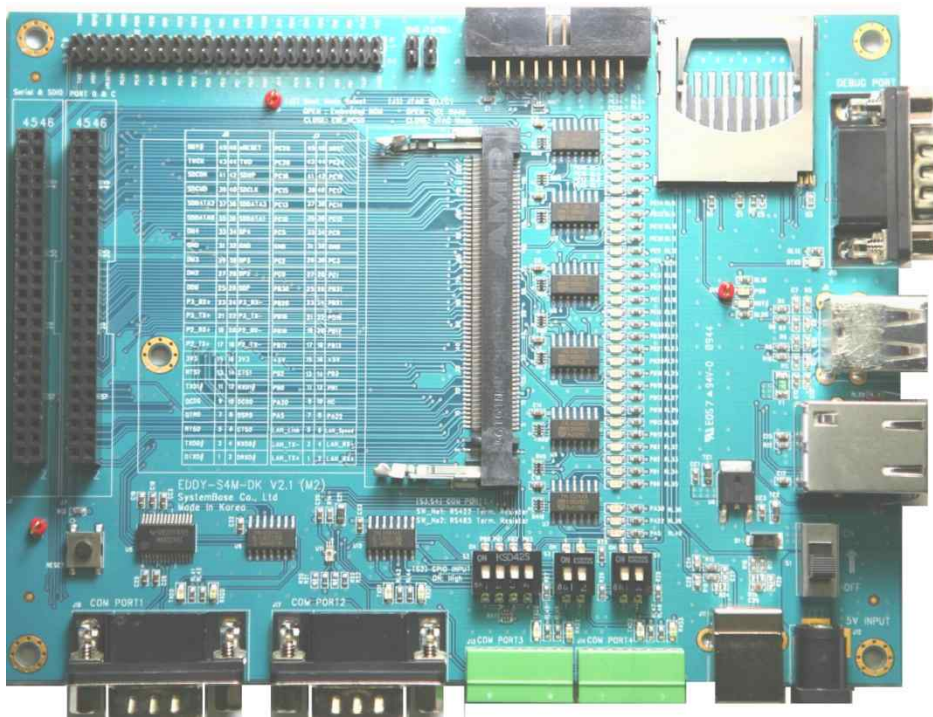


Classification	Specification
Serial Port	2 x RS232 DB9 Male 2 x RS422/485 5pin Terminal Block (S/W Selectable & with Auto toggle)
SD Card Connector	Push Type, Up to 16 GB MMC / SD Card / MC supported
MCI Interface	SD Card, MMC Socket
ADC Interface	Light Sensor
USB Connector	1 x Device, 2 x HOST, Dual-Port
LAN Port	RJ45 with transformer

Classification	Specification
Console Port	DB9 Male
Switch	Power ON/OFF switch Serial RS422/485 Termination resistor configuration switch GPIO input test switch (OFF : Low, ON : High)
LED	RDY, Power, 34 Programmable IO, Console & Serial TXD, RXD LED
JTAG Port	Used for downloading code and single-stepping through programs
Reset Button	Factory Default & Warm Boot (If pushing over 5sec, operate in Factory default)
JIG Connection Socket	2 2x23pin socket, which connect JIG board to confirm problems
Expansion Header	2x22pin Header, used to test GPIO of Eddy-S4M
Input Power	5 VDC
Dimensions	160 x 120 mm

2.6 Eddy-S4M-JiG v2.1 (Testing Board)

Eddy-S4M JIG board is test board which enable of user to integrate and test their application with Eddy-S4M. JIG board include mini connector for joining Eddy-S4M, Ethernet RJ45, USB Host, Power, Reset Switch, and providing connectors to all Eddy-S4M functions.

For more information, please refer to Eddy-DK manual in DK product.

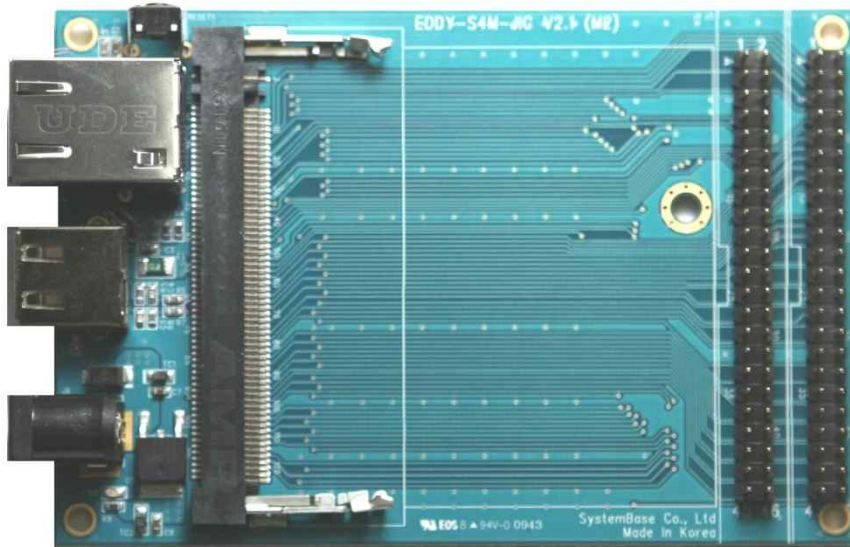

Classification	Specification
USB Connector	USB HOST
LAN Port	RJ45 with Transformer
Reset Button	Factory Default & Warm Boot
Expansion Header	Used to connect most functions of S4M to externalS4M
Input Power	5 VDC
Dimensions	70 x 105 mm

2.7 Eddy-WiFi v 2.1

Eddy WiFi joined with Eddy-CPU, Eddy-S4M enables various serial devices (secure device, communication device, modem, print data device, industrial measuring instrument) to connect wireless LAN.

Eddy-WiFi module supports IEEE 802.11 b/g wireless specification.

You can set the wireless network parameters. After changing values, you need to click **[Submit]** button. Then you will see the same page with modified values. Please note that you have to **[Save & Reboot]** in order to see these changes in effect. Changes will be discarded if you do not save current settings.



Classification	Specification
Standard	802.11b, 802.11g
Modulation	802.11g: OFDM 802.11b: CCK, DQPSK, DBPSK
Frequency Band	802.11b/g: ISM band 2.4GHz ~ 2.483.5GHz
RX sensitivity	802.11a/g: -68m @54Mbps 8% PER 802.11b: -85dBm @11Mbps 8% PER
Security	WEP 64/128, WPA, WPA2
Working distance	60 - 120m, depending on surrounding environment
Data Rate	802.11b : 11, 5.5, 2, 1 Mbps 802.11g : 54, 48, 36, 24, 18, 12, 11, 9, 6, 5.5, 2, 1 Mbps
Power consumption	TX : 450mA RX : 300mA
Host interface	USB2.0
Antenna	ANT 2.4Ghz, AP-SMA Female
Antenna Cable	AF 100mm SMA B/H
Dimension	54 x 25 x 6mm
Operating Temp	-20 ~ 50 ° C

Classification	Specification
Humidity	5 ~ 90 % Non-Condensing
Operating Voltages	3.3V ± 5 %
Weight	10g
Approvals	CE Class B, FCC Class B, RoHS Compliant

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

Caution : Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

* If the Eddy-WiFi is installed inside of another device, then the exterior label of the device must use such as the following:
 "Contains Transmitter Module FCC ID: PROEddy-WiFi" or "Contains FCC ID: PROEddy-WiFi"

FCC RF RADIATION EXPOSURE STATEMENT

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.

CE warning

!Changes and modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


EN Test Regulations

- ETSI EN 300 328 V1.7.1
- ETSI EN 301 489-1 V1.6.1
- ETSI EN 301 489-17 V1.3.2
- EN 60950-1:2006+A11:2009

2.8 Eddy-BT v2.1


Linking to Eddy-CPU and Eddy-S4M, Eddy-BT module enables communication with various types of Bluetooth device in Bluetooth method. Eddy-BT is based on Bluetooth 2.0 and supports communication distance of up to 1,000m.

For the details of Eddy-BT, please refer to "Eddy DK Programming Guide" .

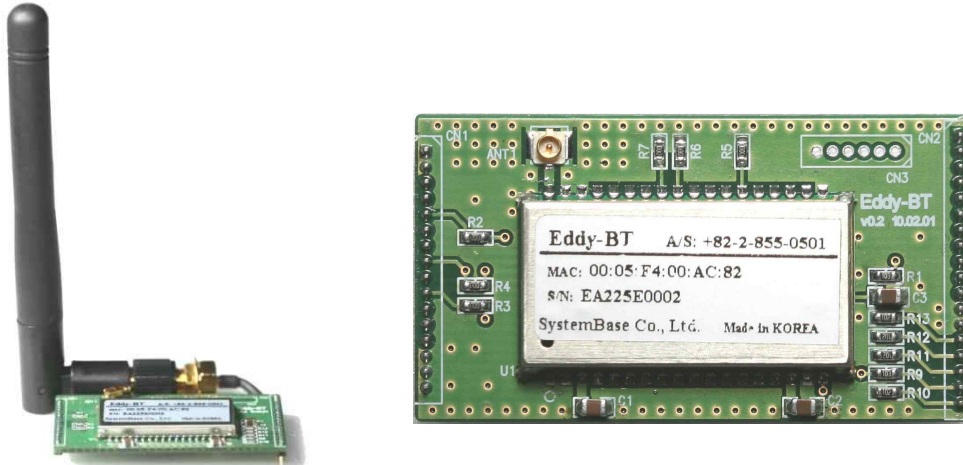

Classification	Specification	
Interface	Bluetooth v2.0+ EDR Class I	
Profile	SPP (Serial Port Profile)	
Max, TX Power	+18dBm	
RX sensitivity	-88dBm	
Power	Supply voltage: 3.3V DC Supply current: 10mA — 60mA	
Operating Temp	Operating temperature: -30 ~ 80 °C	
Storage Temp	Storage temperature: -40 ~ 85 °C	
Humidity	Humidity : 90% (Non-condensing)	
Working distance	Stub Antenna (+1dBi)	100 meters
	Dipole Antenna (+3dBi)	150 meters
	Dipole Antenna (+3dBi)	200 meters
	Dipole Antenna (+5dBi)	300 meters
	Patch Antenna (+9dBi)	500 meters
	Dipole Antenna (+5dBi)	400 meters
	Patch Antenna (+9dBi)	600 meters
	Patch Antenna (+9dBi)	1,000 meters
Approvals	CE Class A, FCC Class A, RoHS Compliant	

2.9 Eddy Software Architecture

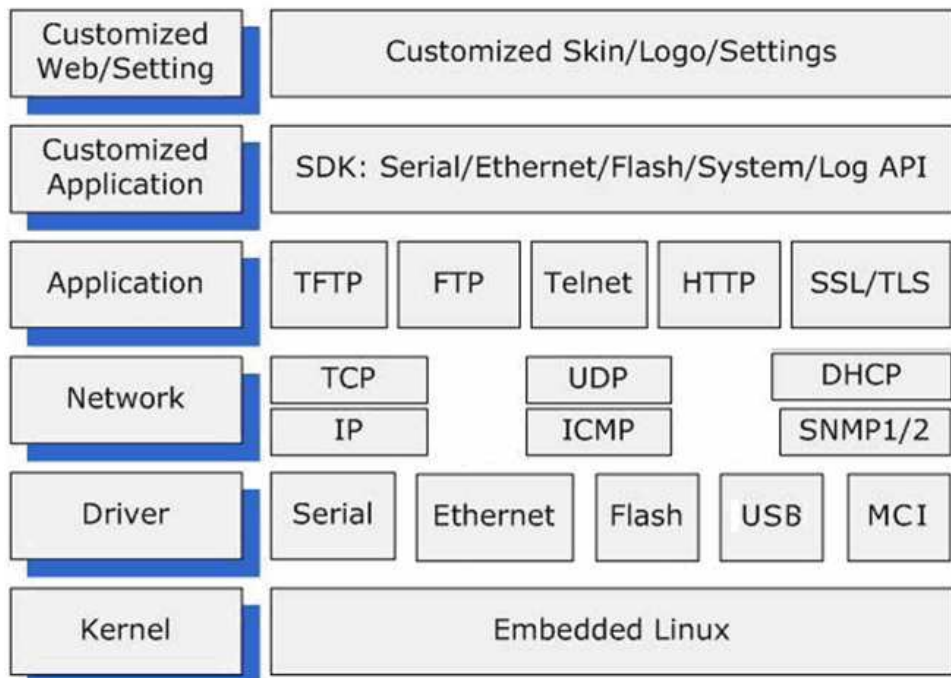

2.10 Main Features

Various features of Eddy make it a universal yet distinctive embedded solution.

Below lists main features of Eddy.

- Premium-level hardware with ARM9 210MHz CPU, 8MB Flash, and 32MB SDRAM
- Selectable RS232 only or RS422/485 combo interfaces
- USB host port (Max 12Mbps USB Full speed)
- SD Card Interface
- Max 921.6Kbps serial speed
- Program and run your own application
- SystemBase SDK and API support for application programming (included in Development Kit)
- Small size to fit in to any hardware
- 10/100Mbps Ethernet port (auto MDIX)
- SystemBase COM Port Redirector for better adaptability
- Extensive configuration and monitoring with Portview
- Firmware upload with Web, FTP, and TFTP
- Configuration with Web, Telnet, SNMP, and Portview
- Various customizing options
- Standard Linux environment for openness in executable applications
- Multiple Programmable IO pins for customized applications
- Watchdog timer support for monitoring the system and reset when system error is occurred.

2.11 Applications

Eddy can be applied to many practical applications in various fields. Some are presented below.

◆ **Factory / Industrial Automation**

PLC, Robot arms, Human-Machine Interface, Warehouse rails
Medical instruments, Inspection equipment controllers
Alarming units

◆ **Home Appliances / Electronic Devices**

Power controller, Gaming machines
Scales, Gas detection units, Water ft pollution metering devices
Data collection and distribution units

◆ **Financial / Building Automation**

Card readers, Barcode scanners, Kiosks, Point-Of-Sale related devices
Serial printers, Cash registers, Credit card authorization terminals
Biometric detection units, Security devices

◆ **OEM Device Server Distributors**


OEM device server with distributor's own case ft brand
Ready-to-go device or customized application / setup mode can be inserted

Chapter 3. Hardware Description


This chapter provides Eddy's hardware information, including block diagram, layout, pin specifications, dimensions and other hardware-related issues.

3.1 Eddy-CPU

Ethernet port is provided as pin headers, and the transformer and RJ-45 connector should be manually implemented by users. (RJ-45 connector with embedded transformer, normally called LAN-Mate or MAG Jack, can be used as a simpler approach.

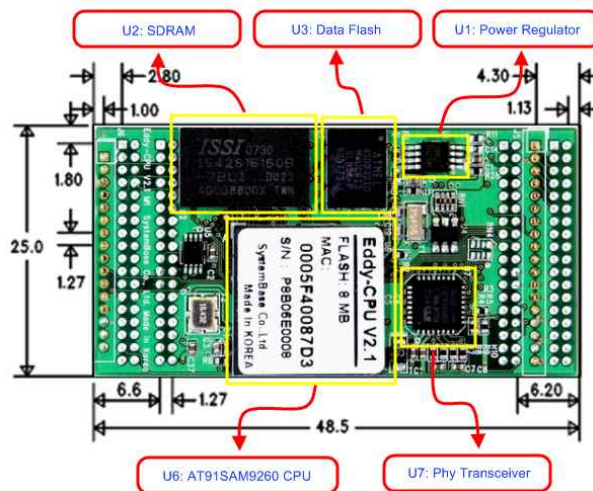


Eddy CPU V2.1 Device Description

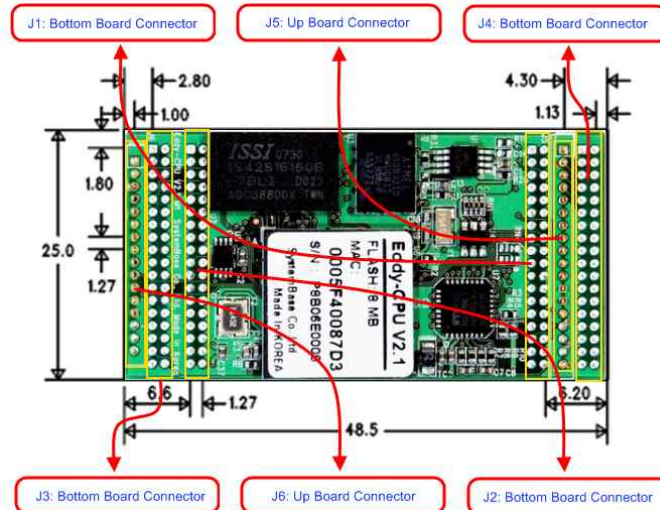


Eddy CPU V2.1 Connector Description

3.2 Eddy-DK v2.1


It is Development Kit Providing environment to test and developing. Bellow is simple Instruction on Device, Switch, Pin, LED and so on.

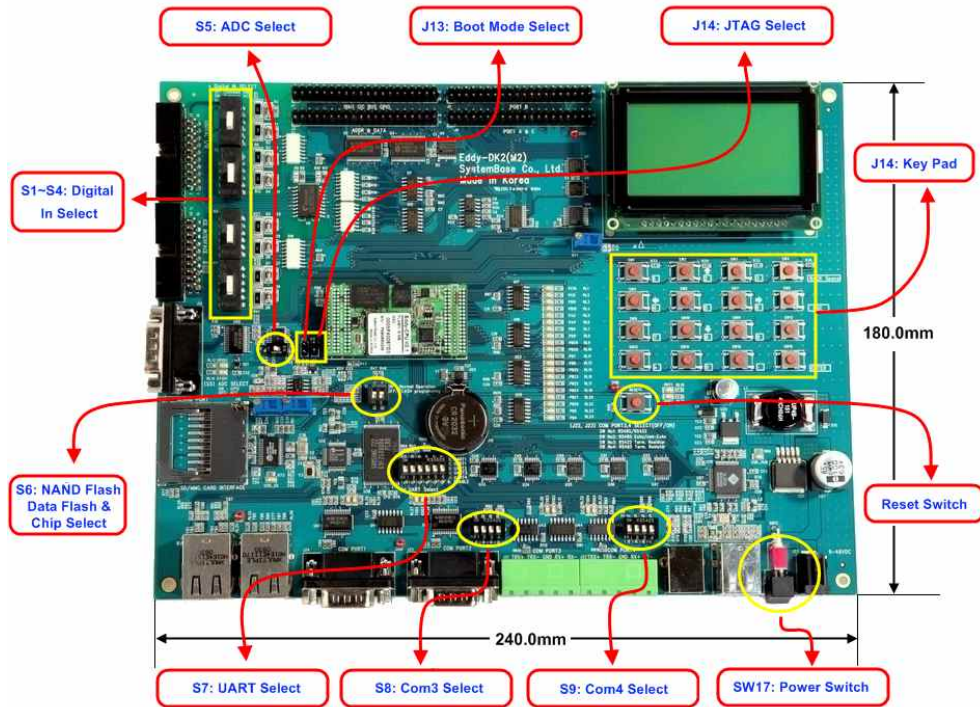


Switch Feature

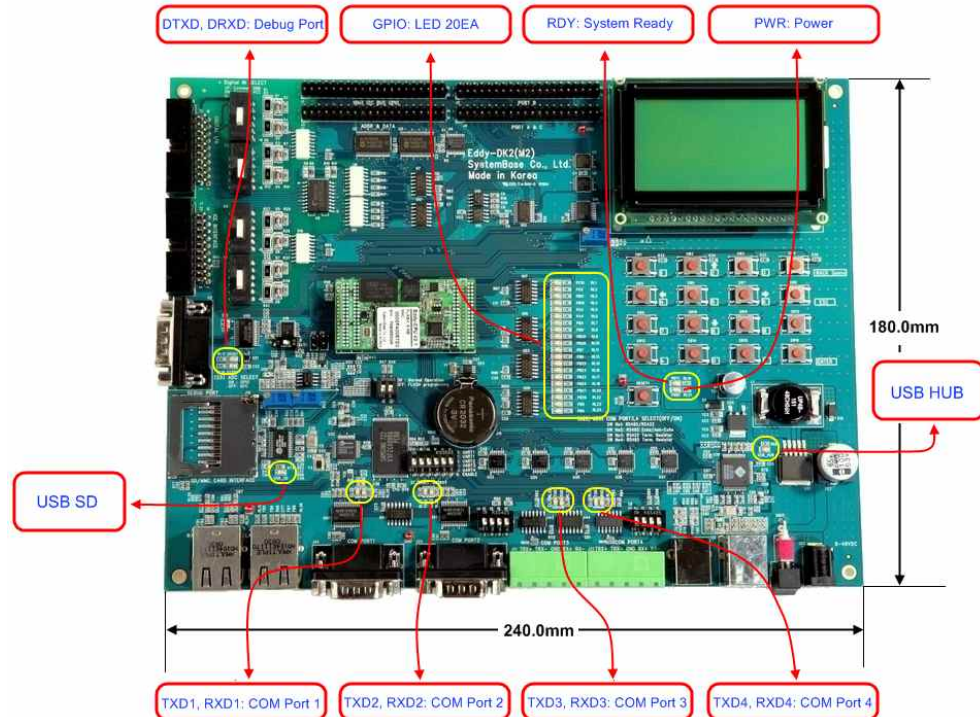


LED Feature

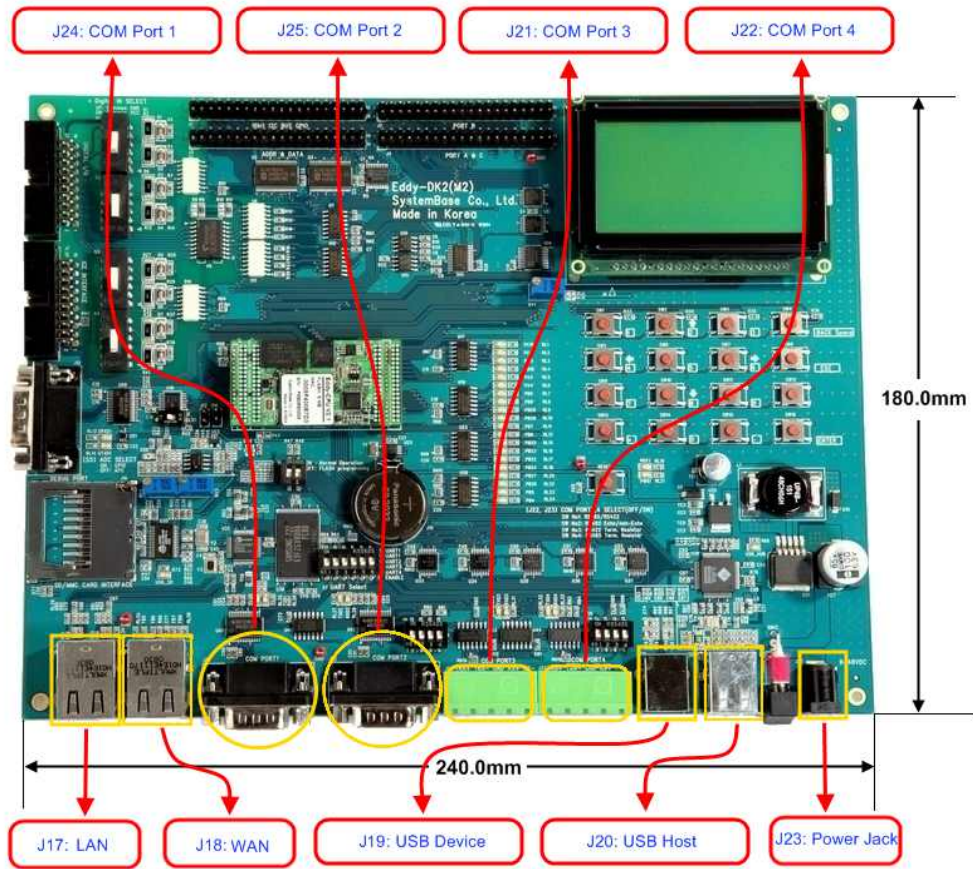

External Device Feature A

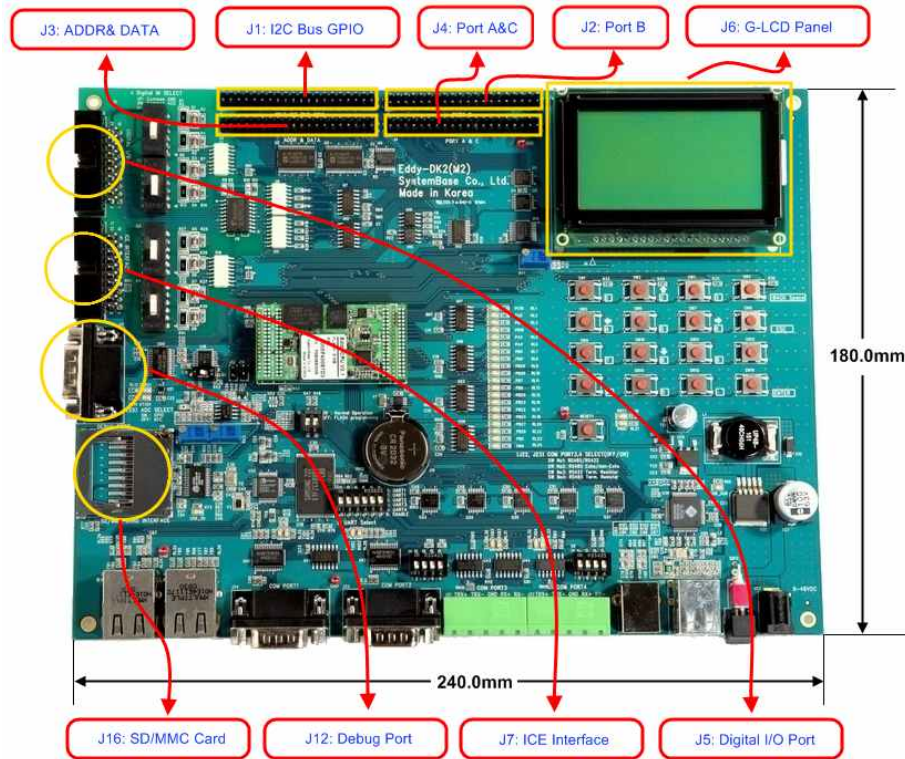

External Device Feature B

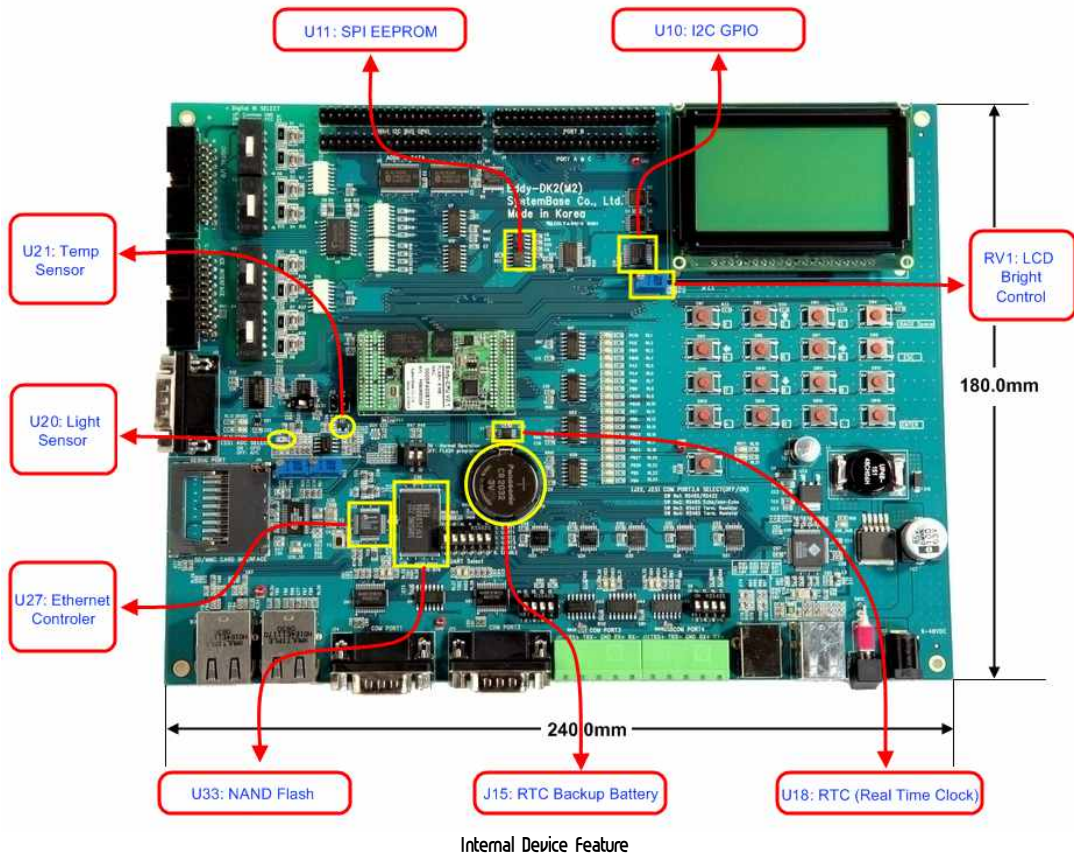


3.3 Eddy-S4M v2.1

Mini PCI Type Slot..


When developing main board, user must materialize transformer and RJ-45 connector (or RJ45 in which transformer is included (LAN-Mate or MAC Jack)).

Since Driver IC is in Eddy-S4M, Serial port can be integrated easily only by attach connector.

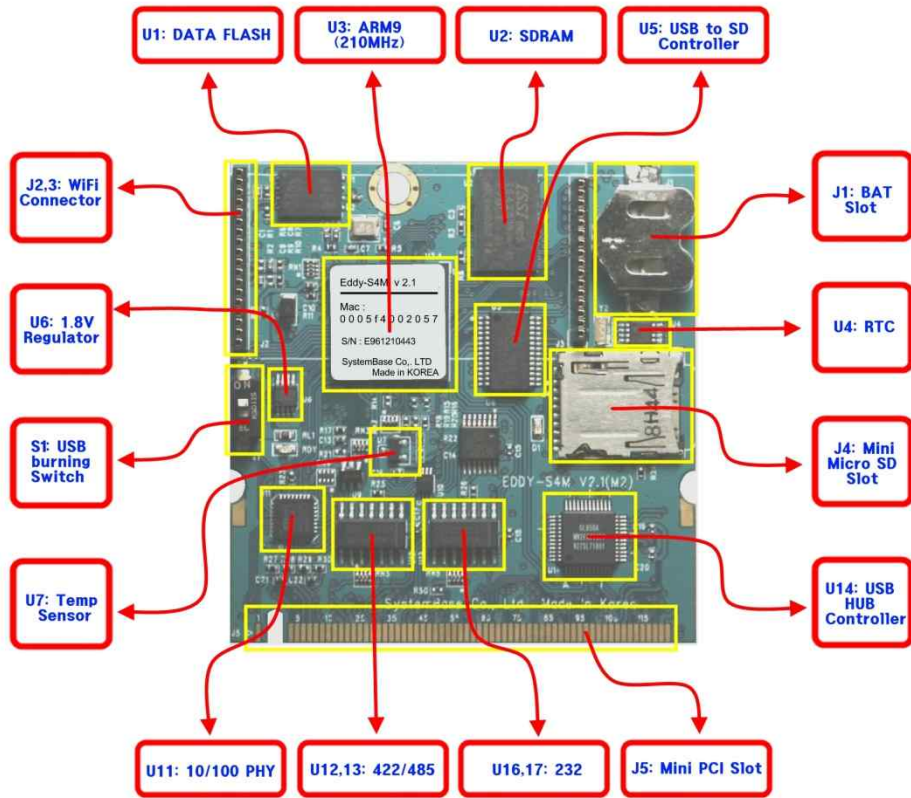


3.4 Eddy-S4M-DK v2.1

Development Kit provides testing and configuration in environment of Eddy-S4M v2.1

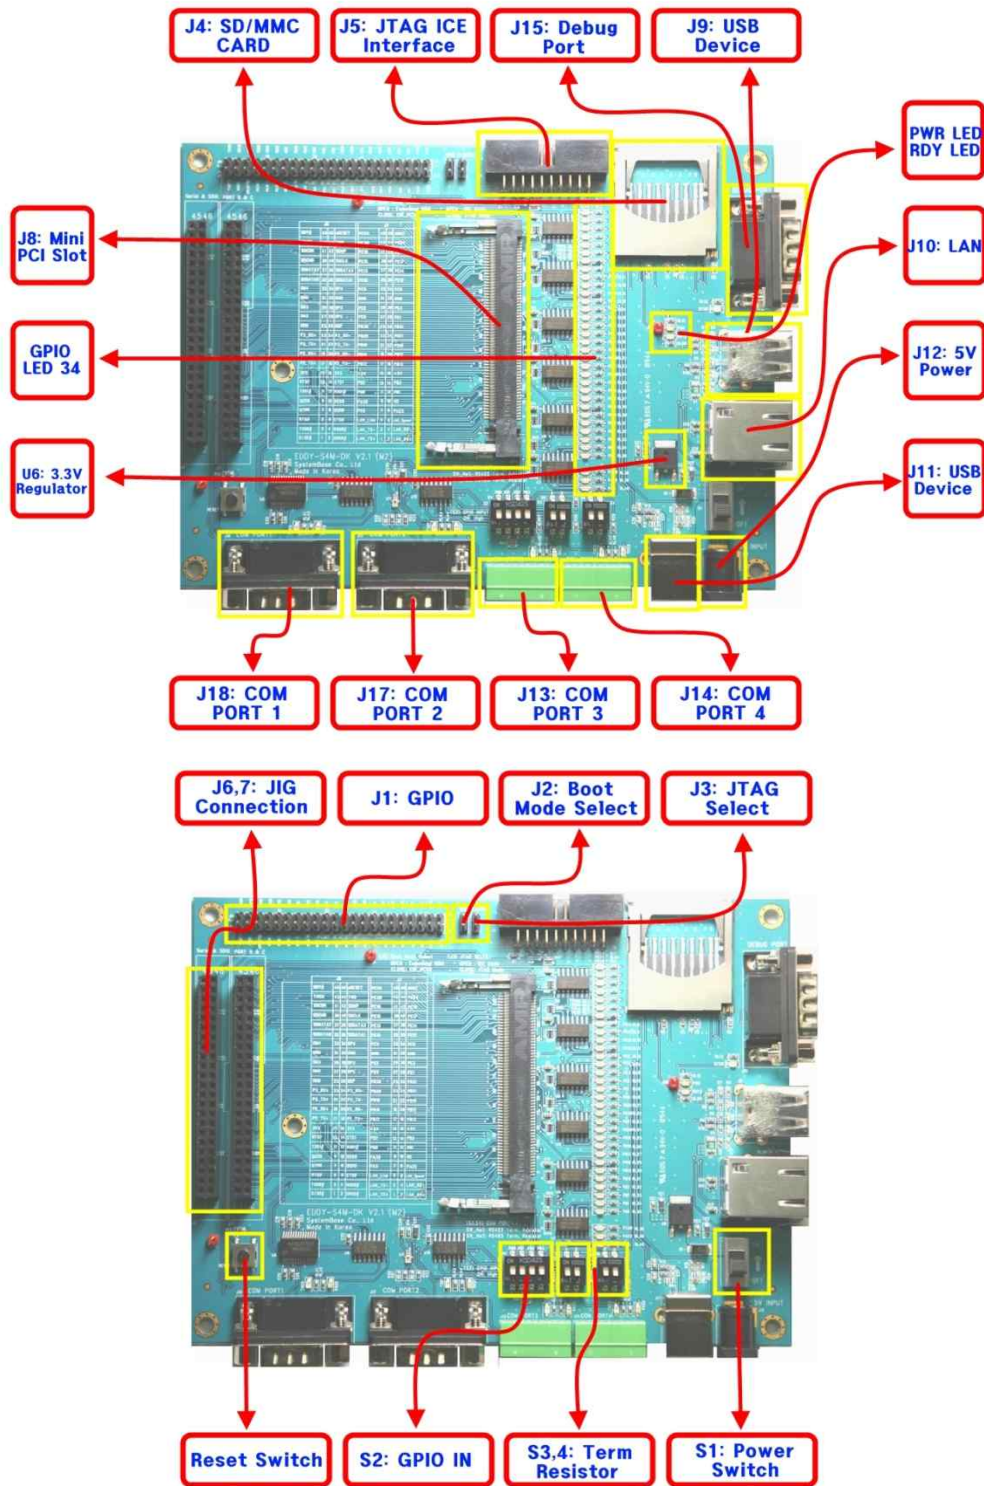


3.5 Eddy-S4M-JIG v2.1

It is test board which used when you test with Eddy-S4M v2.1

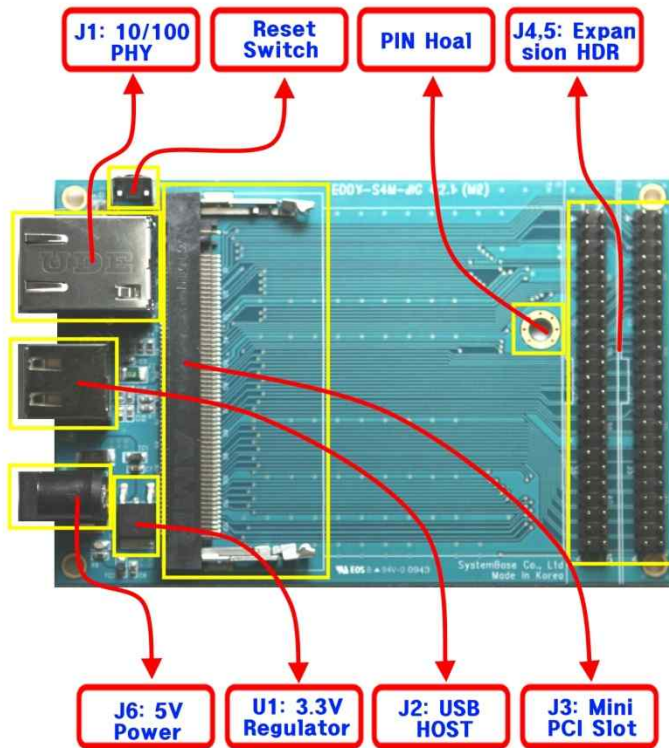

3.6 Eddy WiFi v2.1

Linking to Eddy-CPU and Eddy-S4M, Eddy-WiFi module enables to use various types of serial device (Security equipment, telecommunications device, modem, data output devices, industrial instruments etc.) through wireless LAN. Eddy-WiFi module supports IEEE 802.11b/g. For application development, please refer to Wifi.c, the source code for Eddy-WiFi module.

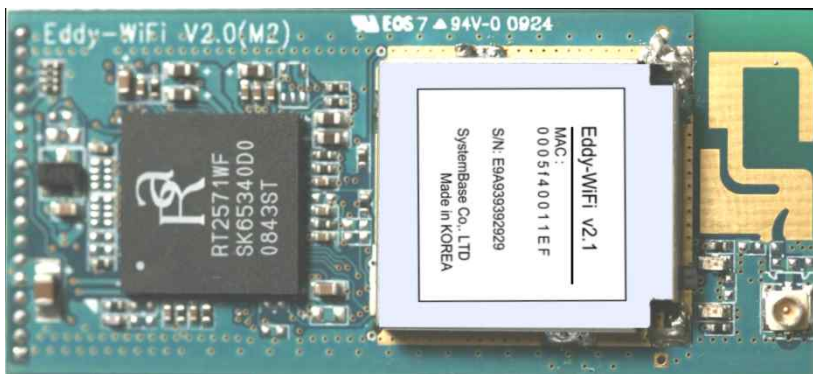





LEFT	Description
1	NA
2	NA
3	NA
4	NA

RIGHT	Description
1	NA
2	NA
3	NA
4	NA
5	VCC(3.3V)
6	VCC(3.3V)
7	USB Host Data (-)
8	USB Host Data (+)
9	NA
10	NA
11	H/W Reset
12	Ground
13	Ground
14	NA
15	NA
16	NA
17	NA
18	NA

3.7 Eddy BT v2.1

Bluetooth module is composed to connect 4th serial port of Eddy-CPU or Eddy-S4M in TTL method. It is possible to use Eddy-BT as 4th serial port, but it can lose data in case of using HW Flow Control. If you want to use HW Flow Control, please refer to Test_Bluetooth.c in SDK and revitalize HW Flow control of 4th serial port.

For the details of Eddy-BT, please refer to "Eddy DK Programming Guide" .

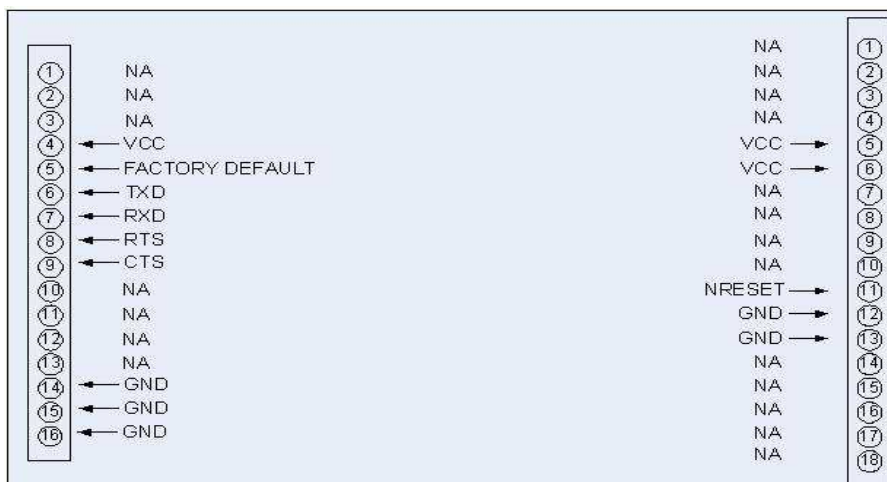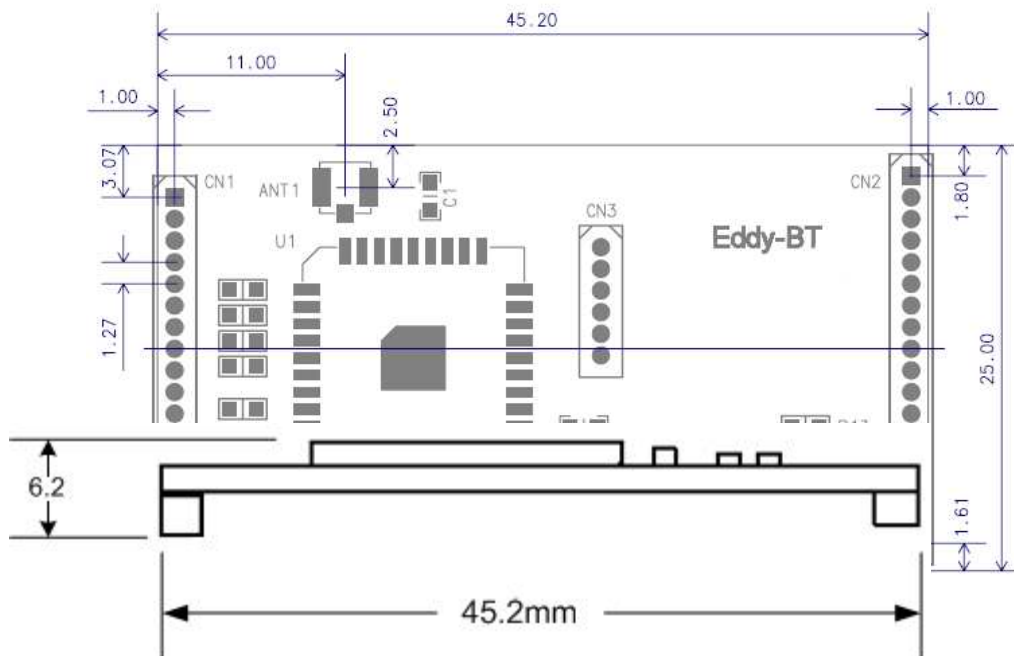

LEFT	Description
1	NA
2	NA
3	NA
4	VCC(3.3V)
5	Factory Reset
6	UART TXD
7	UART RXD
8	UART RTS
9	UART CTS
10	Pairing Signal
11	H/W Reset
12	NA
13	NA
14	Ground
15	Ground
16	Ground

RIGHT	Description
1	NA
2	NA
3	NA
4	NA
5	VCC(3.3V)
6	VCC(3.3V)
7	NA
8	NA
9	NA
10	NA
11	H/W Reset
12	Ground
13	Ground
14	NA
15	NA
16	NA
17	NA
18	NA

Chapter 4. Integration

This chapter explains how you can make Eddy to communicate. It deals with LAN and pin header connection guides for Eddy to operate together with the target serial device.

Follow these steps to connect Eddy to the device and network.

4.1 Connection Guide

1) WAN/LAN

In order to connect Eddy to network, you need to use RJ45 Ethernet port. It supports both 10Mbps and 100Mbps Ethernet connection (auto-sensing). Since Eddy's LAN port supports MDIX function, you can either connect cross LAN cable or direct LAN cable. Plug one end of a LAN cable to Eddy and the other end to a hub, switch, or any other network device that can provide you with network access.

2) DB9

For the model included a DB9 serial port, you can simply connect Eddy to the destination serial device with a DB9 cable. For pin specifications, please refer to Chapter 3.

3) MCI slot

MMC and SDCards excepting T-Flash, Micro SD, and SDHC can be used through MCI slot. It provides Maximum 2 GBytes. Please note that MCI and SDCard must be inserted before power is induced to Eddy module.

2) USB Host

An USB memory stick or USB hub can be attached to Eddy-S2M/PIN module's USB host port. For an USB Hub it should have own power.

4.2 First-time Bootup

First of all, please make sure the power input you supply to the module is corresponding with the Eddy model that you have. If an appropriate power input has been successfully supplied, Eddy will power on and start booting.

Although there is no power LED to check the status, you can check by LEDs on the RJ45 Ethernet port. LED status operation is described in [Chapter 3. Hardware Description](#).

An IP address is required to access Eddy's web interface or telnet command-line configuration tool. By factory default, Eddy is assigned a static IP address. After the initial connection, you can either manually assign a different IP address or set Eddy to automatically get an IP address from a DHCP server. While this depends on your network environment and policy, it is strongly recommended that you assign Eddy with a unique static IP.

4.3 Connecting to Eddy with IP address

In order to view current Eddy's settings or modify them, you need to make a Web or Telnet connection to Eddy. IP address is required information to make a connection.


There are two ways you can know the current IP address of Eddy.

First is to use a built-in, alias IP address of "10.10.1.1".

Second is to use "Detector" application provided in the Utility & Documents CD. This application allows searching for Eddy modules on the network.

◆ **The factory default IP address:** 192.168.0.223

Eddy's default IP address is set to 192.168.0.223. In order to connect with this address, you need to change network configurations so that your PC can connect to the IP 192.168.0.223. Please refer to an example below, and note that values don't necessarily have to be identical to the example below.

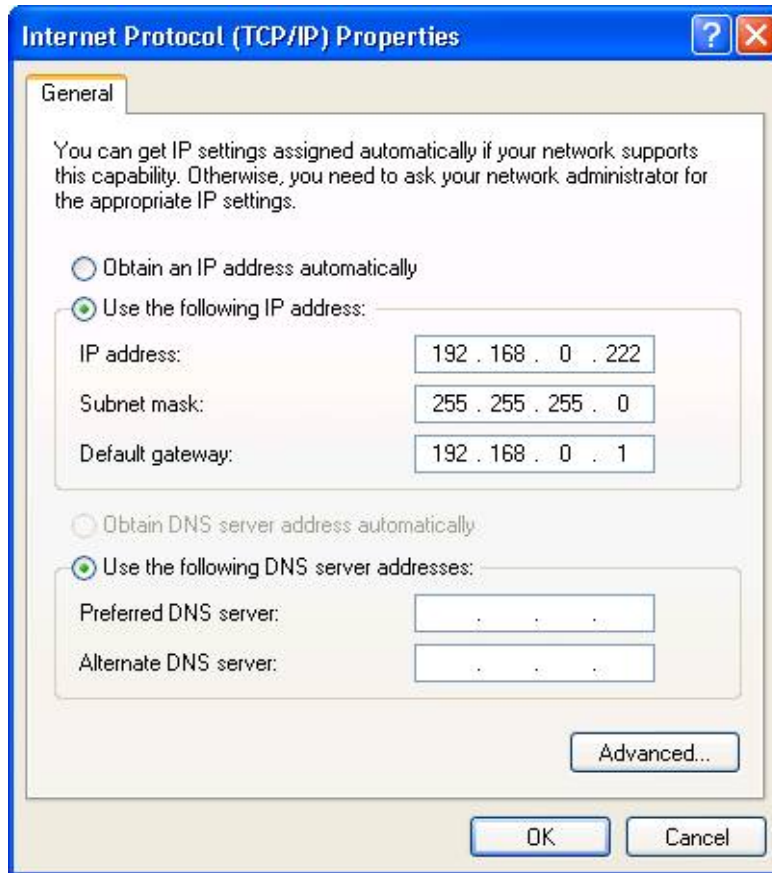


◆ **Factory default alias IP address: 10.10.1.1**

In case you configure Eddy to use DHCP to obtain an IP address automatically, you might find it hard to know the IP address to connect to. To provide users with an easier way to know the current IP address, Eddy has a fixed alias IP that is always accessible. Use the address below whenever you cannot find out Eddy's IP address.

In order to connect with this address, you need to change network configurations so that your PC can connect to the IP 10.10.1.1. Please refer to an example below, and note that values do not necessarily have to be identical to the example below.


Since Eddy-S4M doesn't support LAN port so that doesn't include below.

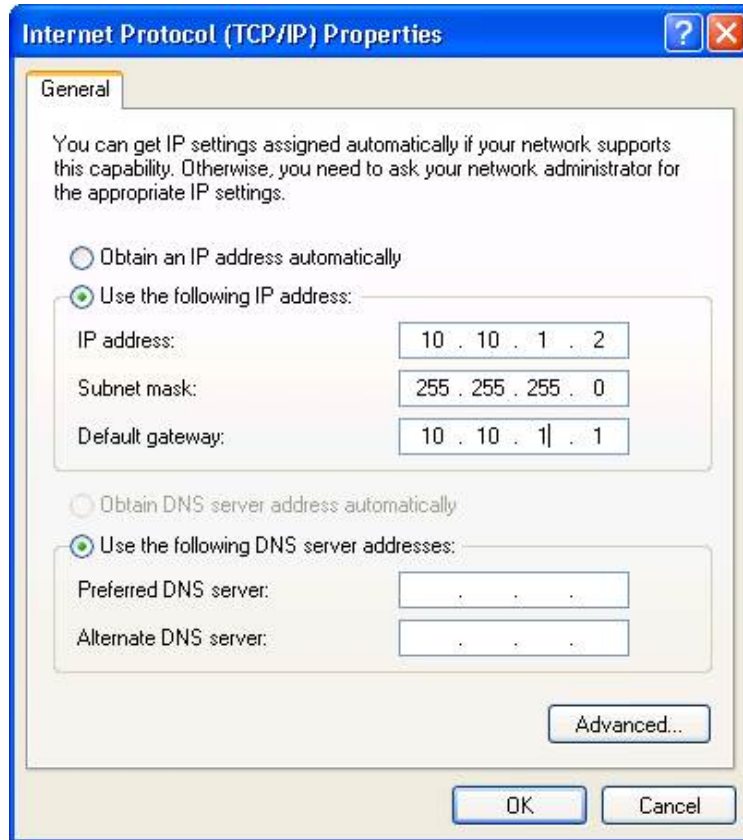


◆ **Connection via Detector**

By running the Detector program in the Utility & Documents CD included in the Eddy package, you can dynamically search for all Eddy modules on the network and connect to any module. (For more information on Detector, please refer to the Portview manual in the Utility & Documents CD included in the Eddy package)

After running Detector, click Search button on the top-left to display all Eddy modules on the network. Select the module that you would make a connection to, and click Telnet or Web to connect to the module via Telnet or Web, respectively.

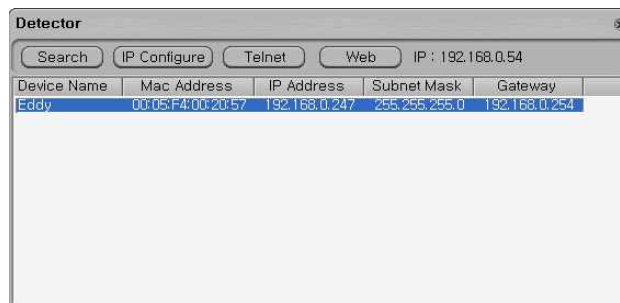

If Eddy module is not on the same network as the PC you are working on, use "IP Configure" button to temporarily assign an IP address that you would like to make a Web or Telnet connection to. If you assign a temporary IP address to Eddy, you need to change the IP address and restart in Web or Telnet.

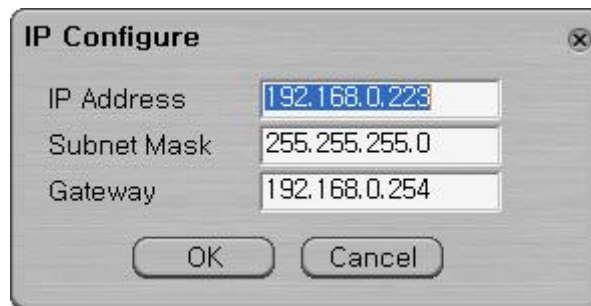

Now you are ready to connect to Eddy! There are three options to configure Eddy.

1) Web

You can easily configure Eddy with web interface, accessible from any web browser. For more information, please refer to [Chapter 5. Configuration via Web](#).

2) Telnet

You can configure Eddy with commands after accessing Eddy through Telnet. For more information, please refer to [Chapter 6. Configuration via Telnet](#).

3) Portview

You can use a Windows-based utility Portview from SystemBase to monitor Eddy. For more information on using the utility for your administration purpose, please refer to Portview User Guide.

4.4 Using MCI slot & USB Host Port

The following contents outline the usage of Eddy's MCI & USB Host Port.

Using MCI slot

MMC and SDCards can be used through MCI slot.

Please note that MCI and SDCard must be inserted before power is induced to Eddy.

MMC or SDCards are automatically recognized as a new disk space in "/tmp/mmc" folder. If memory card is not inserted to the MCI slot, "/tmp/mmc" folder will not be created.

To check memory card's current disk space information, type in "du -sk /tmp/mmc" or "df /tmp/mmc" commands via telnet. Following example displays status of a memory card with 1GB memory storage capacity.

```
Eddy login: eddy
Password:
# pwd
/tmp
# ls
ifstate  login.pw  thttpd.log  wtmp
login.id  mmc       thttpd.pid
# du -sk /tmp/mmc
9520    /tmp/mmc
# df /tmp/mmc
Filesystem          Size      Used Available Use% Mounted on
/dev/sda1           967.2M    9.3M   957.9M    1% /tmp/mmc
#
```

Using USB host port

An USB memory stick or USB hub can be attached to Eddy module's USB host port. If other USB devices are to be attached to this port, device drivers for the devices must be first created and loaded to Eddy-S2M/PIN module using Eddy-DK.

Following example displays procedures for USB memory stick usage.

Insert the USB memory stick to USB host port and connect telnet.

Type in "fdisk -l" or "ls -al /dev/sd*" command to check USB memory stick is properly inserted.

Create a folder using "mkdir /tmp/usb" command.

Mount "/tmp/usb" folder using "mount -t vfat /dev/sda1 /tmp/usb" command.

Always unmount USB memory stick with "umount <mounted folder>" command, before removing USB memory stick from USB host port.

If more than one USB memory stick is connected using a USB hub, each memory stick would be recognized as /dev/sdb1, /dev/sdc1, /dev/sdd1 Each device must be mounted for proper use. Following displays an example of two USB memory stick connection with a hub.

```

Eddy login: eddy
Password:
# fdisk -l
Disk /dev/sda: 1014 MB, 1014497280 bytes
44 heads, 32 sectors/track, 1407 cylinders
Units = cylinders of 1408 * 512 = 720896 bytes
   Device Boot      Start         End      Blocks   Id  System
/dev/sda1            1           1408     990704    6  FAT16
Disk /dev/sdb: 4068 MB, 4068474880 bytes
51 heads, 50 sectors/track, 3116 cylinders
Units = cylinders of 2550 * 512 = 1305600 bytes
   Device Boot      Start         End      Blocks   Id  System
/dev/sdb1            1           3117    3973116    b  Win95 FAT32
# ls -al /dev/sd*
brw-rw---- 1 root  root    8,  0 Jan 1 00:04 /dev/sda
brw-rw---- 1 root  root    8,  1 Jan 1 00:04 /dev/sda1
brw-rw---- 1 root  root    8,  2 Jan 1 00:04 /dev/sdb
brw-rw---- 1 root  root    8,  3 Jan 1 00:04 /dev/sdb1
# ls -l
-rw-r--r-- 1 root  root          16 Jan 1 00:00 ifstate
-rw-rw-rw- 1 root  root           4 Jan 1 00:00 login.id
-rw-rw-rw- 1 root  root           8 Jan 1 00:00 login.pw
drwxr-xr-x 2 root  root       16384 Jan 1 00:00 mmc
-rw-r--r-- 1 root  root           0 Jan 1 00:00 thttpd.log
-rw-r--r-- 1 root  root           4 Jan 1 00:00 thttpd.pid
-rw-r--r-- 1 root  root        768 Jan 1 00:05 wtmp
# pwd
/tmp
# mkdir usb1
# mount -t vfat /dev/sdb1 usb1
# df /tmp/usb1
Filesystem      Size  Used Available Use% Mounted on
/dev/sdb1       3.8G  3.0G  768.3M   80% /tmp/usb1
#

```

Chapter 5. Configuration via Web

5.1 Connection

Open your favorite web browser and enter the IP address of Eddy to access Eddy's web manager. Once you are successfully connected, the following front page will show up. You need to enter appropriate username and password to login. Please note that this username and password is used as authentication method for Telnet as well.

- ◆ Factory default username: eddy
- ◆ Factory default password: 99999999



EddyTM
means
real-time

Welcome to Web Manager

Device Name	Eddy
BootLoader Version	2.1.x.x
Kernel Version	2.1.x.x
Firmware Version	2.1.x.x

Username:


Password:

5.2 Setup Menu

If login process is successful, you will see a web manager's main page, showing summary of your device. On the left, you will see a setup menu, and you can navigate through these options.

Wifi Disable View

Since S4M doesn't support DIO and LCD, "DIO settings" doesn't appear on the left menu.

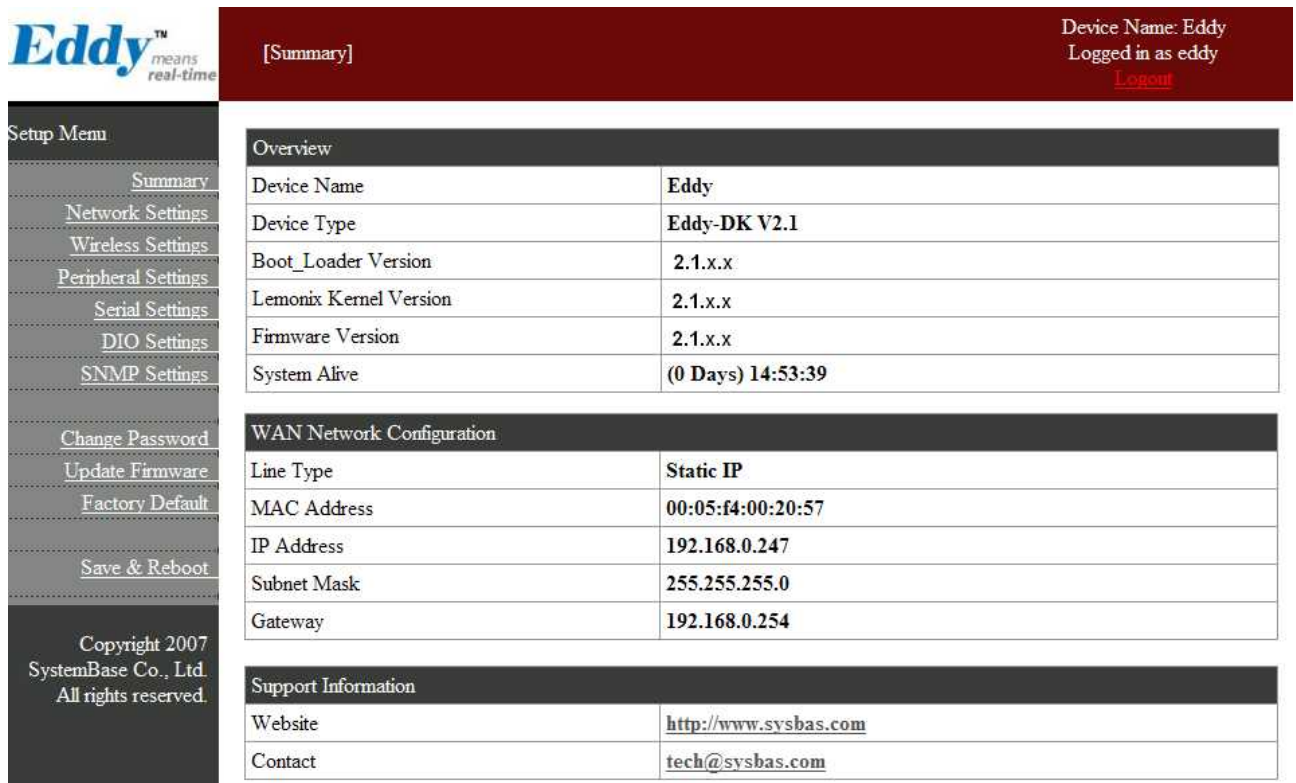

The screenshot shows the Eddy web manager interface. On the left is a 'Setup Menu' with options: Summary, Network Settings, Wireless Settings, Peripheral Settings, Serial Settings, DIO Settings, SNMP Settings, Change Password, Update Firmware, Factory Default, and Save & Reboot. The main content area is titled '[Summary]' and shows device information and configuration tables.

Eddy™ means real-time

[Summary] Device Name: Eddy
Logged in as eddy
[Logout](#)


Overview	
Device Name	Eddy
Device Type	Eddy-DK V2.1
Boot Loader Version	2.1.x.x
Lemonix Kernel Version	2.1.x.x
Firmware Version	2.1.x.x
System Alive	(0 Days) 14:53:39

WAN Network Configuration	
Line Type	Static IP
MAC Address	00:05:f4:00:20:57
IP Address	192.168.0.247
Subnet Mask	255.255.255.0
Gateway	192.168.0.254

Support Information	
Website	http://www.sysbas.com
Contact	tech@sysbas.com

Copyright 2007
SystemBase Co., Ltd.
All rights reserved.

Wifi Enable View



[Summary]

Device Name: Eddy
Logged in as eddy
[Logout](#)

Setup Menu

- Summary
- Network Settings
- Wireless Settings
- Peripheral Settings
- Serial Settings
- DIO Settings
- SNMP Settings
- Change Password
- Update Firmware
- Factory Default
- Save & Reboot

Copyright 2007
SystemBase Co., Ltd.
All rights reserved.

Overview			
Device Name	Eddy		
Device Type	Eddy-DK V2.1		
Boot Loader Version	2.1.x.x		
Lemonix Kernel Version	2.1.x.x		
Firmware Version	2.1.x.x		
System Alive	(0 Days) 14:53:39		

Wireless Network Configuration			
Link State	Connection	Access Point	00:50:18:58:0F:20
Connection Mode	DHCP	Frequency	2.422 GHz (Channel 3)
MAC Address	00:0C:43:25:73:00	Bit Rate	54 Mb/s
IP Address	192.168.0.40	Link Quality	100/100
Subnet Mask	255.255.255.0	Signal level	-40 dBm
Gateway	192.168.0.254	Noise level	-79 dBm

WAN Network Configuration	
Line Type	Static IP
MAC Address	00:05:f4:00:20:57
IP Address	192.168.0.247
Subnet Mask	255.255.255.0
Gateway	192.168.0.254

Support Information	
Website	http://www.sysbas.com
Contact	tech@sysbas.com

Main features of Setup Menu are as follows.


Menu	Descriptions
Summary	View a summary of Eddy.
Network Settings	Configure network connection settings.
Wireless Settings	Configure Wireless settings.
Peripheral Settings	Select GPIO or Device mode.
Serial Settings	Configure detailed operation environment for serial communication.
GPIO Settings	Configure programmable I/O pins.
DIO Settings	Configure DIO port. (Doesn't supported in Eddy-S4M)
SNMP Settings	Configure detailed operation environment for SNMP.
Change Password	Change ID and password for both Web and Telnet interface.

Update Firmware	Update Eddy's firmware.
Factory Default	Restore all the factory default settings.
Save & Reboot	Save the configurations and reboot Eddy.

5.3 Network Settings

Configure general network environment and network management. After changing values, you need to click 'Submit' button. Then you will see the same page with modified values. Please note that you have to 'Save & Reboot' in order to see these changes in effect. Changes will be discarded if you do not save current settings.

Since S4M doesn't support LCD, "LAN Configuration" doesn't appear.


[Network Settings]

Device Name: Eddy
 Logged in as eddy
[Logout](#)

Setup Menu

- Summary
- Network Settings
- Wireless Settings
- Peripheral Settings
- Serial Settings
- DIO Settings
- SNMP Settings
- Change Password
- Update Firmware
- Factory Default
- Save & Reboot

Copyright 2007
SystemBase Co., Ltd.
All rights reserved.

WAN Configuration	
Line Type	Static IP Help
IP Address	192.168.0.223 Help
Subnet Mask	255.255.255.0 Help
Gateway	192.168.0.254 Help
DNS	168.126.63.1 Help

LAN Configuration	
DHCP Server	Disable Help
IP Address	10.10.1.1
Subnet Mask	255.255.255.0
Lease Start Address	10.10.1.2
Lease End Address	10.10.1.30
Lease Time	0 min

Network Service Configuration	
Device Name	Eddy Help
PortView IP / Port	0.0.0.0 / 4000 Help
DDNS / (Username/Password)	203.32.117.1 / eddy 99999999 Help
Telnet Service	Enable Help
FTP Service	Enable Help
WEB Service	Enable Help
SSH Service	Disable Help
LemonIDE Target Agent	Disable Help

Main features for WAN Configuration is as follows.

Menu	Default	Descriptions
Device Name	Eddy	Name of the current device
Line Type	Static IP	IP obtaining method for Eddy's network connection.
IP Address	192.168.0.223	Current IP address Eddy is assigned to. (When line type is Static IP, manually enter an appropriate IP address. When line type is DHCP, current IP is displayed, but it is not editable.)
Subnet Mask	255.255.255.0	Current subnet mask Eddy is assigned to. (When line type is Static IP, manually enter an appropriate subnet mask. When line type is DHCP, current subnet mask is displayed, but it is not editable.)
Gateway	192.168.0.254	Current default gateway Eddy is assigned to (When line type is Static IP, manually enter an appropriate default gateway. When line type is DHCP, current default gateway is displayed, but it is not editable.)..
DNS	168.126.63.1	Domain Name Service IP address

Main features for LAN Configuration is as follows.

- Since S4M doesn't have LAN port, doesn't include bellows


Menu	Default	Descriptions
DHCP Server	Enable	Enable or disable DHCP server.
IP Address	10.10.1.1	Current IP address for LAN is assigned to.
Subnet Mask	255.255.255.0	Current subnet mask for LAN is assigned to.
Lease Start Address	10.10.1.2	If DHCP server is enabled, start address of the DHCP scope for leasing.
Lease End Address	10.10.1.30	If DHCP server is enabled, end address of the DHCP scope for leasing.
Lease Time	180	DHCP lease time.

Main features for Network Service Configuration are as follows.

Menu	Default	Descriptions
Portview IP / Port	0.0.0.0 / 4000	Set the IP address and the port number of the PC where Portview is installed. For more information on Portview, please refer to the Portview User Manual. If IP is set to 0.0.0.0, this feature is disabled
DDNS (Username/ Password)	203.32.117.1	Register DDNS server's IP address for DDNS service. DDNS service used in Eddy is supported by http://ddns.nu default ID is eddy and default password is 99999999 if you want to used this ,you should register your own in http://ddns.nu
Telnet Service	Enable	Enable or disable Telnet service. If disabled, you cannot connect to Eddy via Telnet.

FTP Service	Enable	Enable or disable FTP service. If disabled, you cannot connect to Eddy via FTP.
Web Service	Enable	Enable or disable Web service. If disabled, you cannot connect to Eddy via Web.
SSH Service	Disable	Enable or disable Secure Shell service.
LemonIDE Target Agent	Disable	Enable or disable remote debugging function used by Eddy development environment, LemonIDE. For more information, please refer to LemonIDE user manual in the SDK CD included in Eddy-DK package.

5.4 Serial Settings



[Wireless Settings]

Device Name: Eddy
 Logged in as eddy
[Logout](#)

Setup Menu

- Summary
- Network Settings
- Wireless Settings
- Peripheral Settings
- Serial Settings
- DIO Settings
- SNMP Settings
- Change Password
- Update Firmware
- Factory Default
- Save & Reboot

Copyright 2007
SystemBase Co., Ltd.
All rights reserved.

Wireless Network Configuration	
Wireless Network	Enable Help
Wireless Mode	Infrastructure Help
Wireless Network Mode	802.11b/g mixed Help
Wireless Network Name (SSID)	none Help
Channel	Auto Help
Bitrate	Auto Mbps Help
RTS Threshold	2347 byte(s) Help
Fragment Threshold	2346 byte(s) Help
802.11h	Disable Help
Wireless Roaming	Disable Help
Authentication Mode	WPA-PSK Help
Encryption Type	TKIP Help
Password	none
Connection Type	DHCP Help
IP Address	192.168.0.40 Help
Subnet Mask	255.255.255.0 Help
Gateway	192.168.0.254 Help
DNS	73.78.71.95 Help

You can set the communication and operation environment for the serial port. After changing values, you need to click 'Submit' button. Then you will see the same page with modified values. Please note that you have to 'Save & Reboot' in order to see these changes in effect. Changes will be discarded if you do not save current settings.

Menu	Default	Descriptions
------	---------	--------------


Menu	Default	Descriptions
Operation Mode	COM	<p>Select the operation protocol, which the serial port would use.</p> <p>Disable Do not use this port.</p> <p>COM Use the serial port of Eddy as the COM ports of Windows 2000/HP/2003/Vista operated PC.</p> <p>TCP Server Eddy works as a socket server, waiting for the client connection on the network. Socket number for awaiting connections can be set in 'Local socket port' field. All data between the socket and the serial port is transferred untouched after the socket connection is established.</p> <p>TCP Client Eddy acts as a socket client in this mode. It tries to connect to the server IP address and the socket number assigned when a certain server waits for connection on the network. All data between the socket and the serial port is transferred untouched after the socket connection is established.</p> <p>TCP Broadcast Eddy works as a server, accepting up to 5 simultaneous connections from socket clients. Data transmitted from Eddy is broadcast to each socket client.</p> <p>TCP Multiplex Eddy works as a server, accepting up to 5 simultaneous connections from socket clients. The difference between TCP Broadcast and TCP Multiplex is that Multiplex allows each socket to communicate exclusively. That is, serial data in response are only transferred to the sender socket.</p> <p>UDP Server Eddy works as a UDP server, waiting for UDP connection from the client on the network. Socket number for awaiting connections can be set in 'Local socket port' field. Once a UDP packet is received to the socket that waits for the connection, the data is transmitted to the serial port. The data input from the serial port is put into UDP packets, which eventually are sent to the client.</p> <p>UDP Client When the data is input to the serial port, UDP packets are sent using the preset IP address and the socket number of the server.</p>
Interface	AS422	<p>Serial Port 1,2 hardwired to AS232 so that this category cannot be selected.</p> <p>Serial Port 3, 4 can be used AS422 or AS485 (Echo, No Echo) by selecting.</p> <p>In Eddy-CPU, this can be selected by Dip Switch S8, S9 on Eddy-DK board so that this category cannot be selected.</p> <p>(option: AS422, AS485 (Echo), AS485 (No Echo))</p>
Local Socket Port	4001	Set the socket number for the port. TCP server and UDP server operation mode makes use of this port for awaiting network socket connections.
Port Alias	Port1	Port alias name for convenience. 16 Characters at maximum.

Menu	Default	Descriptions
Baud Rate	9600 bps	Set communication speed. (Options: 150, 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600 bps)
Data Bits	8	Set the number of bits in each character size. (Options: 5, 6, 7, 8)
Stop Bits	1	Set the number of stop bits.. (Options: 1, 2)
Parity	None	Set parity bit check scheme.. (Options: None, Odd, Even)
Flow Control	None	Set the flow control scheme. (Options: None, Hon/Hoff, RTS/CTS)
Device Type	DataOnly	Set the signal line checking method for the device to be connected to the given serial port. If the mode is set to Data Only, only TXD, RXD, and GND signal lines are used in inter-device communication. If the mode is set to Modem Signals, all modem signals except AI (Ring Indicator) are asserted, tested, and used in communication. (Options: Data Only, Modem Signals)
Remote IP Address / Port	0.0.0.0 / 4000	When the Operation Mode is either TCP Client or UDP Client, set the IP address and the socket number to connect to..
Keepalive Check Time	0	<p>After a certain amount of time passes without any communication after the socket connection between the given serial port and the server is established, automatically disconnect the socket connection. Valid from 0 to 32767 sec.</p> <p>For example, if the operation mode is set to TCP Server and Alive Check Time is configured to 10, TCP Server will listen for the client's connection and eventually establish a connection. Since the check time is 10 seconds, the server will wait for 10 seconds until the client connected to it sends any packet. If there is no data for 10 seconds, server will quit the connection and return to the listening state. This option is helpful in preventing communication obstacles that occur when either Eddy or the client quits unexpectedly (i.e. Sudden black out, reboot, LAN cable cut, etc.). In these cases, the other part of communication might not recognize the failure of its partner. Such misunderstanding can cause communication errors.</p> <p>If the value is set to 0, this function is disabled. Once connected socket will be retained until explicitly disconnected.</p> <p>(Only applies to TCP Client, TCP Server, TCP Broadcast, and TCP Multiplex operation modes.)</p>
Latency Time	0	<p>This needs to be set when consecutive data from the given serial port needs to be transmitted to socket at once.</p> <p>For example, if 100 bytes of character string are to be transmitted from the serial device to a server through Eddy, bypass is set to 0 for the latency time. Although it provides immediate sending through Eddy, the server could be received a lot parts of divided packets.</p> <p>If the latency time is not 0, Eddy will wait for the time and check new data. If there is new data, Eddy repeatedly wait for the time. Otherwise, Eddy will transfer the buffered data, but it could not run in real time.</p>

Menu	Default	Descriptions
Port Login	Disable	When the Operation Mode is set to TCP Server, ask for the username and password when the client tries to connect (Options: Enable, Disable)
Passive Username	eddy	When the Operation Mode is set to TCP Server, set the username to ask for. 16 Characters at maximum.
Passive Password	99999999	When the Operation Mode is set as TCP Server, set the password to ask for. 16 Characters at maximum.

5.5 Wireless Settings

You can set the wireless network parameters. After changing values, you need to click **[Submit]** button. Then you will see the same page with modified values. Please note that you have to **[Save & Reboot]** in order to see these changes in effect. Changes will be discarded if you do not save current settings.



[Wireless Settings]

Device Name: Eddy
 Logged in as eddy
[Logout](#)

Setup Menu

- Summary
- Network Settings
- Wireless Settings
- Peripheral Settings
- Serial Settings
- DIO Settings
- SNMP Settings
- Change Password
- Update Firmware
- Factory Default
- Save & Reboot

Copyright 2007
SystemBase Co., Ltd.
All rights reserved.

Wireless Network Configuration	
Wireless Network	Enable Help
Wireless Mode	Infrastructure Help
Wireless Network Mode	802.11b/g mixed Help
Wireless Network Name (SSID)	none Help
Channel	Auto Help
Bitrate	Auto Mbps Help
RTS Threshold	2347 byte(s) Help
Fragment Threshold	2346 byte(s) Help
802.11h	Disable Help
Wireless Roaming	Disable Help
Authentication Mode	WPA-PSK Help
Encryption Type	TKIP Help
Password	none
Connection Type	DHCP Help
IP Address	192.168.0.40 Help
Subnet Mask	255.255.255.0 Help
Gateway	192.168.0.254 Help
DNS	73.78.71.95 Help

Menu	Default	Description
Wireless Network	Disable	When enabled, Eddy-Wifi is available. <ul style="list-style-type: none"> •Disable: Eddy-Wifi is not available. •Enable: Eddy-Wifi is available.
Wireless Mode	Infrastructure	Set the wireless LAN mode. (Option: Infrastructure, Ad-Hoc) <ul style="list-style-type: none"> •Infrastructure : Use Eddy-Wifi under the Infrastructure mode. This mode is used for connecting to the wireless AP (Access Point) as a client to connect to other network. •Ad-Hoc : Use Eddy-Wifi under the Ad-hoc mode. This mode is used for 1:1 communication with another Ad-hoc client.
Wireless Network Mode	802.11b/g Mixed	Sets the operation protocol of a wireless network. (Option: 802.11b/g mixed, 802.11B only, 802.11G only) <ul style="list-style-type: none"> •802.11b/g mixed: 802.11b and 802.11g are supported. •802.11B only: Use only 802.11b. •802.11G only: Use only 802.11g.
Wireless Network Name (SSID)	None	Sets the identification (SSID) of a wireless network to be connected. (Up to 32 bytes)
Channel	Auto	Selects a frequency channel for wireless connection. (Option: Auto, 1 ~ 13) <ul style="list-style-type: none"> •Auto: Connect a channel specified in AP automatically. In most cases, this setting is used. •Value Specification: Specify a channel to be connected manually.
Bitrate	Auto	Sets the speed for wireless connection. (Option: Auto, 1, 2, 5.5, 6, 9, 11, 12, 18, 24, 36, 48, 54Mbps) The setting as Auto adjusts the speed depending on signal sensitivity and noise. In most cases, this setting is used. If Wireless Network mode is set to 802.11b/g Mixed, all options can be selected. The setting as 802.11a only allows setting as 6, 9, 12, 18, 24, 36, 48 and 54Mbps. The setting as 802.11b only allows setting as 1, 2, 5.5 and 11Mbps. The setting as 802.11g only allows setting as 6, 9, 12, 18, 24, 36, 48 and 54Mbps.
ATS Threshold	2347	Sets the minimum packet size to send ATS in a communication node. (Range: 1 ~ 2347 bytes) This setting adds the ATS/CTS handshake procedure to verify that the transmission channel is empty before transmitting a packet. In most cases, this setting is not used. The setting as 2347 disables this function.

Fragment Threshold	2346	<p>Sets the maximum packet size to send a packet after dividing into small pieces. (Range: 256 ~ 2346 bytes)</p> <p>This setting transmits a packet after dividing into small pieces.</p> <p>Communication overhead is increased but communication error can be reduced in serious interference or noise environment.</p> <p>In most cases, this setting is not used.</p> <p>The setting as 2346 disables this function.</p>
Wireless Roaming	Disable	<p>Set whether to use of the Roaming functions.</p> <ul style="list-style-type: none"> • Enable : Use Roaming function. • Disable : Do not use Roaming function.
Roaming Threshold	75 (dbm)	<p>(Option: 61~89 dbm)</p> <p>If you have different Access Points and have enabled roaming, you should also set carefully the roaming threshold, which is the point (in signal strength) at which Eddy-WiFi search for a new Access Point. If you set it too low, Eddy-WiFi will spend too much time with a non optimal AP (getting a poorer throughput), and if you set it too high the card will waste time searching for a new AP too often.</p> <p>The represented value is absolute. The real value should be the represented value * (-).</p>
Authentication Mode	OPEN	<p>(Option: OPEN, SHARED, WPAPSK, WPA2PSK, WPA NONE)</p> <p>An authentication mode defines the procedure that the 802.11 device uses when it authenticates and associates with an access point.</p> <ul style="list-style-type: none"> • OPEN : Specifies IEEE 802.11 Open System authentication. • SHARED : Specifies IEEE 802.11 Shared Key authentication that uses a preshared WEP key. • WPA-PSK : Specifies WPA security. Authentication is performed between the supplicant and authenticator over IEEE 802.11. Encryption keys are dynamic and are derived through the preshared key used by the supplicant and authenticator. • WPA2-PSK : Specifies WPA2 security. Authentication is performed between the supplicant and authenticator over IEEE 802.11. Encryption keys are dynamic and are derived through the preshared key used by the supplicant and authenticator. • WPA-NONE : Specifies WPA security. Specifies the use of a preshared key without IEEE 802.11 authentication. Encryption keys are static and are derived through the preshared key. This mode is applicable only to ad hoc network types.
Encryption Type	NONE	<p>(Option: NONE, WEP, TKIP, AES)</p> <p>Encryption modes define the set of cipher suites that can be enabled on the 802.11 device.</p> <ul style="list-style-type: none"> • NONE : Not used. • WEP : Wired Equivalent Privacy (WEP) is the RC4-based algorithm specified in the IEEE 802.11 specification. • TKIP : Temporal Key Integrity Protocol (TKIP) is the RC4-based cipher suite based on the algorithms defined in the WPA and IEEE 802.11i specifications. • AES : The Advanced Encryption Standard (AES) defines an encryption algorithm in FIPS PUB 197.
Key Index	1	<p>Selects the index of the key to be used from the created keys.</p> <p>(Option: 1, 2, 3 and 4)</p>
Key	None	<p>Selects WEP 64-bit (Enter a Hex Key value directly).</p> <p>(Example: 3132333435)</p> <p>Selects WEP 128-bit (Enter a Hex Key value directly)</p> <p>(Example: 31323334353637383940414243)</p>
Password	None	<p>Password for the TKIP encryption type.</p> <p>(Up to 64 bytes)</p>

Connection Type	DHCP	Sets an IP address type in a wireless network. (Option: DHCP, Static IP) • DHCP : Assign a dynamic IP address through a DHCP server. • Static IP : Specify an IP address manually.
IP Address	192.168.1.72	Sets an IP address of a wireless network. If the line Type is Static IP, a user can enter an IP address directly. If line type is DHCP, the current IP address is displayed. In DHCP type, the address cannot be changed.
Subnet Mask	255.255.255.0	Sets an IP address of a wireless network. If the line Type is Static IP, a user can enter a subnet mask address directly. If line type is DHCP, the current subnet mask address is displayed. In DHCP type, the address cannot be changed.
Gateway	192.168.1.1	Sets a gateway address of a wireless network. If the line Type is Static IP, a user can enter a gateway address directly. If line type is DHCP, the current gateway address is displayed. In DHCP type, the address cannot be changed.
DNS	168.126.63.1	Sets a DNS server address of a wireless network. If the line Type is Static IP, a user can enter a DNS server address directly. If line type is DHCP, the current DNS server address is displayed. In DHCP type, the address cannot be changed.

5.6 Peripheral Settings

Configure operation mode and output value for each Programmable I/O pins.

Eddy includes GPIO pins that output 3.3V or detect 3.3V signals.

Eddy-CPU provides 56 GPIO ports, if you only use WAN port.

You can detect either any 3.3V signals from external device, or output 3.3V signal to the external device. You can also program a customized GPIO application, and you can implement it with the SDK included in the Eddy development kit.

Eddy-S4M provide 34ea GPIO port, different from Eddy-CPU, the sharing device is limited to ADC.

After changing values, you need to click 'Submit' button. Then you will see the same page with modified values. Please note that you have to 'Save & Reboot' in order to see these changes in effect. Changes will be discarded if you do not save current settings.

Menu	Default	Descriptions
Device Select	Eddy	Set the GPIO port to current pin's I/O mode. Eddy: Set Eddy defined mode. GPIO: Set only GPIO port mode. User: Set only user mode.
Value	Output (Low)	Select the GPIO port to the specified mode. Input (Pull-up): Standby with setting the GPIO to Vcc. Input (Pull-down): Standby with setting the GPIO to Gnd. Output (Low): 3.3V is not flowed through the port. Output (High): 3.3V is output through the port.

Configuration view of Eddy-CPU

Setup Menu

- Summary
- Network Settings
- Wireless Settings
- Peripheral Settings
- Serial Settings
- DIO Settings
- SNMP Settings
- Change Password
- Update Firmware
- Factory Default
- Save & Reboot

Copyright 2007
SystemBase Co., Ltd.
All rights reserved.

Device	Select	Port No.	Value	Eddy Peripheral	User Peripheral
Serial 1 (RS-232)	Eddy	B-04	Input (PullDown)	TxD	Image Sensor Data2 Image Sensor Data3 Image Sensor Data4 Image Sensor Data5 Image Sensor Data6 Image Sensor Data7
		B-05	Input (PullDown)	RxD	
		B-22	Input (PullDown)	DSR	
		B-23	Input (PullDown)	DCD	
		B-24	Input (PullDown)	DTR	
		B-25	Input (PullDown)	RI	
		B-26	Input (PullDown)	RTS	
B-27	Input (PullDown)	CTS			
Serial 2 (RS-232)	Eddy	B-06	Input (PullDown)	TxD	TC Ch1 External CLK In TC Ch2 External CLK In Image Sensor Data Clock Image Sensor Vertical Sync
		B-07	Input (PullDown)	RxD	
		B-28	Input (PullDown)	RTS	
		B-29	Input (PullDown)	CTS	
Serial 3 (Combo)	Eddy	A-04	Input (PullDown)	RTS	LED Control(A-04) LED Control(A-05)
		A-05	Input (PullDown)	CTS	
		B-08	Input (PullDown)	TxD	
		B-09	Input (PullDown)	RxD	
Serial 4 (Combo)	Eddy	B-10	Input (PullDown)	TxD	Image Sensor I/F Image Sensor I/F Chip Select 4 Address Bus
		B-11	Input (PullDown)	RxD	
		C-08	Input (PullDown)	RTS	
		C-10	Input (PullDown)	CTS	
Debug Port	Eddy	B-14	Input (PullDown)	RxD	
		B-15	Input (PullDown)	TxD	
Analog Digital Converter	GPIO	C-00	Input (PullDown)	ADC Ch0	USARTx Serial Clock Program Clock Output 0 Program Clock Output 1 SP1 Chip Select 3
		C-01	Input (PullDown)	ADC Ch1	
		C-02	Input (PullDown)	ADC Ch2	
		C-03	Input (PullDown)	ADC Ch3	
EEPROM (SPI)	GPIO	B-00	Input (PullDown)	EERPOM	SPI1 Master In Slave Out SPI1 Master Out Slave In SPI1 Serial Clock SPI1 Chip Select 0
		B-01	Input (PullDown)	EERPOM	
		B-02	Input (PullDown)	EERPOM	
		B-03	Input (PullDown)	EERPOM	
LAN	Eddy	C-12	Input (PullDown)	Chip Select	Chip Select 7 Ext. Interrupt in 1
		C-15	Input (PullDown)	Interrupt Input	
NAND Flash	GPIO	C-14	Input (PullDown)	Chip Select	External Interrupt Input 2 SPI0 Chip Select 3
		C-17	Input (PullDown)	Ready/Busy	
LED	Eddy	C-04	Input (PullDown)	Ready LED	Address Bus
Reset	Eddy	C-16	Input (PullDown)	Reset/Factory	SPI0 Chip Select 2
Key Pad	Eddy	B-20	Input (PullDown)	SW 01,02,03,04	SSC Receive Clock SSC Receive Frame Sync Pgmm Clk Output 0 Pgmm Clk Output 1 Data Bus Data Bus Data Bus Data Bus
		B-21	Input (PullDown)	SW 05,06,07,08	
		B-30	Input (PullDown)	SW 09,10,11,12	
		B-31	Input (PullDown)	SW 13,14,15,16	
		C-20	Input (PullDown)	SW 01,05,09,13	
		C-21	Input (PullDown)	SW 02,06,10,14	
		C-22	Input (PullDown)	SW 03,07,11,15	
C-23	Input (PullDown)	SW 04,08,12,16			
User Peripheral Interface	GPIO	A-22	Input (PullDown)	Serial Port 5(Tx), Image Sensor I/F Serial Port 5(Rx), Image Sensor I/F TC Ch4 Ext. CLK In SSC Transmit Frame Sync, TC ch4 Ext CLK IN SSC Transmit Data, TC ch4 I/O B SSC Receive Data, TC ch5 I/O B Ch0 I/O Line B Address Bus, SPI1 Peripheral Chip Select 1 Data Bus, SPI1 Peripheral Chip Select 1 Address Bus, SPI1 Peripheral Chip Select 2 Data Bus	
		B-12	Input (PullDown)		
		B-13	Input (PullDown)		
		B-16	Input (PullDown)		
		B-17	Input (PullDown)		
		B-18	Input (PullDown)		
		B-19	Input (PullDown)		
		C-05	Input (PullDown)		
		C-09	Input (PullDown)		
		C-18	Input (PullDown)		
C-19	Input (PullDown)				
C-26	Input (PullDown)				

Configuration view of Eddy-54M

[Peripheral Settings]

Device Name: Eddy
 Logged in as eddy
[Logout](#)

Setup Menu

- Summary
- Network Settings
- Wireless Settings
- Peripheral Settings
- Serial Settings
- SNMP Settings
- Change Password
- Update Firmware
- Factory Default
- Save & Reboot

Copyright 2007
SystemBase Co., Ltd.
All rights reserved.

Device	Select	Port No.	Value	Eddy Peripheral	User Peripheral
Analog Digital Converter		C-00	Input (PullDown) ▾	ADC Ch0	USARTx Serial Clock
		C-01	Input (PullDown) ▾	ADC Ch1	Program Clock Output 0
		C-02	Input (PullDown) ▾	ADC Ch2	Program Clock Output 1
		C-03	Input (PullDown) ▾	ADC Ch3	SP1 Chip Select 3
User Peripheral Interface	GPIO ▾	A-05	Input (PullDown) ▾	GPIO	
	GPIO ▾	A-22	Input (PullDown) ▾	GPIO	
	GPIO ▾	A-30	Input (PullDown) ▾	GPIO	
	GPIO ▾	B-00	Input (PullDown) ▾	SPI Master in Slave Out	
	GPIO ▾	B-01	Input (PullDown) ▾	SPI Master in Slave In	
	GPIO ▾	B-02	Input (PullDown) ▾	SPI Serial Clock	
	GPIO ▾	B-03	Input (PullDown) ▾	SPI Chip Select 0	
	GPIO ▾	B-12	Input (PullDown) ▾	GPIO	
	GPIO ▾	B-13	Input (PullDown) ▾	GPIO	
	GPIO ▾	B-16	Input (PullDown) ▾	SSC Transmit Clock	
	GPIO ▾	B-17	Input (PullDown) ▾	SSC Transmit Frame Sync	
	GPIO ▾	B-18	Input (PullDown) ▾	SSC Transmit Data	
	GPIO ▾	B-19	Input (PullDown) ▾	SSC Receive Data	
	GPIO ▾	B-20	Input (PullDown) ▾	SSC Receive Clock	
	GPIO ▾	B-21	Input (PullDown) ▾	SSC Receive Frame Sync	
	GPIO ▾	B-30	Input (PullDown) ▾	GPIO	
	GPIO ▾	B-31	Input (PullDown) ▾	GPIO	
	GPIO ▾	C-05	Input (PullDown) ▾	SPI Chip Select 1	
	GPIO ▾	C-09	Input (PullDown) ▾	GPIO	
	GPIO ▾	C-10	Input (PullDown) ▾	GPIO	
	GPIO ▾	C-12	Input (PullDown) ▾	GPIO	
	GPIO ▾	C-13	Input (PullDown) ▾	GPIO	
	GPIO ▾	C-14	Input (PullDown) ▾	GPIO	
	GPIO ▾	C-15	Input (PullDown) ▾	External Wait Signal	
	GPIO ▾	C-17	Input (PullDown) ▾	GPIO	
GPIO ▾	C-18	Input (PullDown) ▾	SPI Chip Select 1		
GPIO ▾	C-19	Input (PullDown) ▾	SPI Chip Select 2		
GPIO ▾	C-20	Input (PullDown) ▾	SPI Chip Select 3		
GPIO ▾	C-24	Input (PullDown) ▾	GPIO		
GPIO ▾	C-25	Input (PullDown) ▾	GPIO		

5.7 DI

0 Settings

Eddy-DK supports 16 Channel Digital inputs and outputs (DIO) by connecting with I2C interface. It is possible to switch GLCD or Digital IO port via 16 Channel DIO. After changing values, you need to click 'Submit' button. Then you will see the same page with modified values. Please note that you have to 'Save & Reboot' in order to see these changes in effect. Changes will be discarded if you do not save current settings.

Since Eddy-S4M doesn't support DIO and LCD, DIO Settings doesn't be supported.



Setup Menu

- Summary
- Network Settings
- Wireless Settings
- Peripheral Settings
- Serial Settings
- DIO Settings
- SNMP Settings
- Change Password
- Update Firmware
- Factory Default
- Save & Reboot


Copyright 2007
 SystemBase Co., Ltd.
 All rights reserved.

Device	Select	Port No.	Value
		00	Output (Low) ▾
		01	Output (Low) ▾
		02	Output (Low) ▾
		03	Output (Low) ▾
		04	Output (Low) ▾
		05	Output (Low) ▾
		06	Output (Low) ▾
DIO or LCD	LCD ▾	07	Output (Low) ▾
		08	Output (Low) ▾
		09	Output (Low) ▾
		10	Output (Low) ▾
		11	Output (Low) ▾
		12	Output (Low) ▾
		13	Output (Low) ▾
		14	Output (Low) ▾
		15	Output (Low) ▾

Menu	Default	Descriptions
Device Select	LCD	Set the purpose of the I2C 16 Bit I/O channel. LCD: Set the G-LCD mode. If you set to the LCD, you cannot use it for the DIO port. DIO: Set the DIO 16 channel mode. You can set input or out 16 channel as like the GPIO. If you set to the DIO, you cannot use it for the G-LCD.

5.8 SNMP Settings

You can set the communication and operation environment for the SNMP Agent. After changing values, you need to click 'Submit' button. Then you will see the same page with modified values. Please note that you have to 'Save & Reboot' in order to see these changes in effect. Changes will be discarded if you do not save current settings.



[SNMP Setting]

Device Name: Eddy
Logged in as eddy
[Logout](#)

Setup Menu

- Summary
- Network Settings
- Wireless Settings
- Peripheral Settings
- Serial Settings
- DIO Settings
- SNMP Settings
- Change Password
- Update Firmware
- Factory Default
- Save & Reboot

Copyright 2007
SystemBase Co., Ltd.
All rights reserved.

SNMP Agent Configuration	
SNMP v1/v2/v3 Agent	Disable Help
V1/2 Attribution	ReadOnly Help
V3 Attribution	ReadOnly Help
V3 Username / Password	eddy / administrator Help
TRAP IP / Port	0.0.0.0 / 162 Help
System reset notification	Enable Help
Port connect notification	Disable Help
Port disconnect notification	Disable Help

In order to use the SNMP Agent, SNMP v1/v2/v3 Agent become enabled and pushes the [Submit] button.

Feature	Default	Descriptions
SNMP v1/v2/v3 Agent	Disable	Enable or disable Simple Network Management Protocol (SNMP) support. (Options : Disable/Enable)
V1/2 Attribution	ReadOnly	SNMP V1/2 Attributes can read and write by SNMP Agent. In order to read attributes only, change the feature to "ReadOnly". In order to read and write attributes, change the feature to "ReadWrite". (Options : ReadOnly/ ReadWrite)
V3 Attribution	ReadOnly	SNMP V3 Attributes can read and write by SNMP Agent. In order to read attributes only, change the feature to "ReadOnly". In order to read and write attributes, change the feature to "ReadWrite". (Options : ReadOnly/ ReadWrite)
V3 Username/ Password	eddy/administrator	Configure the Username and the password when use SNMP V3. The Password is at least 8 character string
TRAP IP/ Port	0.0.0.0/162	Configure the server IP address and Port which receive the TRAP information.
System reset notification	Enable	If Enable is selected, inform the "System reset info." (Option : Enable, Disable)
Port connect notification	Disable	If Enable is selected, inform the "Serial Port opened info." (Option : Enable, Disable)
Port disconnect notification	Disable	If Enable is selected, inform the "Serial Port Closed info." (Option : Enable, Disable)

5.9 Change Password

Change Web/Telnet access username and password. After changing values, you need to click 'Submit' button. Then you will see the same page with modified values. Please note that you have to 'Save & Reboot' in order to see these changes in effect. Changes will be discarded if you do not save current settings.

◆ Default user id : eddy

◆ Default password : 99999999

The screenshot shows the Eddy web interface. At the top left is the Eddy logo. The main header area is dark red and contains the text "[Change ID/Password]", "Device Name: Eddy", "Logged in as eddy", and a "Logout" link. On the left is a vertical "Setup Menu" with options: Summary, Network Settings, Wireless Settings, Peripheral Settings, Serial Settings, DIO Settings, SNMP Settings, Change Password, Update Firmware, Factory Default, Save & Reboot. The main content area is divided into two sections: "Change ID" and "Change Password".

Change ID

Current ID	eddy
New ID	<input type="text"/>

Change Password

Enter Current Password	<input type="password"/>
Enter New Password	<input type="password"/>
Retype New Password	<input type="password"/>

At the bottom of the form are "Submit" and "Cancel" buttons. The footer contains "Copyright 2007 SystemBase Co., Ltd. All rights reserved."

5.10 Update Firmware

Firmware is an application embedded in Flash memory of Eddy. Set the location of the firmware file to update, using the 'Browse ...' button. The selected firmware will be transferred to Eddy when you click 'Start Update'. After the transmission is complete, Eddy will be automatically restarted to operate with the new firmware.

The screenshot shows the Eddy web interface for the "Update Firmware" page. The header is dark red with "[Update Firmware]", "Device Name: Eddy", "Logged in as eddy", and a "Logout" link. The left "Setup Menu" has "Update Firmware" highlighted. The main content area is titled "New Firmware" and contains the following text:

Browse and select the firmware file to upload.

It will take about a minute for the upload to complete.
The time may vary according to your environment.
Please note that wrong firmware file may cause serious damage to Eddy

At the bottom are "Start Update" and "Cancel" buttons. The footer contains "Copyright 2007 SystemBase Co., Ltd. All rights reserved."

5.11 Factory Default

Restore all the configuration parameters to the factory default values. Clicking on 'Restore Factory Defaults' button will delete all current settings and restore settings to the initial status. Eddy will automatically reboot.

You cannot turn back the decision once you select this option.

- ◆ The factory default WAN IP Address: 192.168.0.223
- ◆ The factory default LAN IP Address: 10.10.1.1

The screenshot shows the Eddy web interface. At the top left is the Eddy logo. The top right header area displays 'Device Name: Eddy', 'Logged in as eddy', and a 'Logout' link. Below the header is a navigation menu on the left with options: Summary, Network Settings, Wireless Settings, Peripheral Settings, Serial Settings, DIO Settings, SNMP Settings, Change Password, Update Firmware, Factory Default, and Save & Reboot. The main content area is titled '[Factory Default]' and contains a section for 'Restore Factory Default Configuration'. This section includes a warning: 'All your configuration changes will be lost. Factory default settings will be restored after the device reboots. You cannot turn back the decision once you click the button below.' A 'Restore Factory Defaults' button is positioned below the warning text. At the bottom of the page, the copyright information reads: 'Copyright 2007 SystemBase Co., Ltd. All rights reserved.'

5.12 Save & Reboot

This option saves changes to the Flash memory and restarts the system to let the changes to take place in the operation.

[Save / Reboot]

Device Name: Eddy
 Logged in as eddy
[Logout](#)

Setup Menu

- Summary
- Network Settings
- Wireless Settings
- Peripheral Settings
- Serial Settings
- DIO Settings
- SNMP Settings
- Change Password
- Update Firmware
- Factory Default
- Save & Reboot

Copyright 2007
SystemBase Co., Ltd.
All rights reserved.

Save and Reboot

All your configuration changes will be saved on Eddy
Your configuration changes will be in effect after the device reboots automatically.

Reboot without Saving

All your configuration changes will be lost.
Your last saved configuration will be in effect after the device reboots automatically.

Main features for Save & Reboot are as follows

Menu	Descriptions
Save and Reboot	'Save & Reboot' reboots Eddy after saving changes to Flash memory.
Reboot Only	'Reboot Only' option just reboots Eddy without saving changes. This option can be used to rollback the changes you have mistakenly made.

Chapter 6. Configuration via Telnet

6.1 Connection

Open your telnet client and enter Eddy's IP address to connect. You need to enter appropriate username and password to login. Please note that this username and password is used as authentication method for Web as well. This means if username or/and password has been modified from the telnet interface, modified values have to be entered to connect to web, and vice versa.

- ◆ Factory default username : eddy
- ◆ Factory default password : 99999999



Connection via Telnet

[def] command - you can view or configure Eddy's settings

[def help] command - you can see help for [def] command

After changing values, you can see modified values with [def view] commands. But be careful because these values are not in effect unless you issue a [def save] command. Changes will be discarded if you do not save current settings.

6.2 View commands

Commands related to View are as follows.

Commands	Descriptions
def view	Show all information about Eddy.
def view wan	Show WAN network settings.
def view lan	Show LAN network settings.
def view wifi	Show WiFi network settings.

def view management	Show managing items settings.
def view port	Show serial port settings.
def view gpio	Show GPIO pin settings.
def view dio	Show DIO pin settings.
def help	Show command list and help.

6.3 Network commands

Configure general network environment and network management.

Commands	Default	Descriptions
def mac <Mac Address>	00:05:F4:00:20:57	Register Eddy's MAC address.
def line [ip/dhcp]	Static IP	IP obtaining method for Eddy's network connection.
def ip <IP Address>	192.168.0.223	Set the current IP address Eddy is assigned to. When line type is Static IP, manually enter an appropriate IP address. When line type is DHCP, it is not editable. Instead, current IP address is shown.
def mask <Subnet mask>	255.255.255.0	Set the subnet mask Eddy is assigned to. When line type is Static IP, manually enter an appropriate subnet mask. When line type is DHCP, it is not editable. Instead, current subnet mask is shown.
def gateway <Gateway address>	192.168.0.1	Set the default gateway Eddy is assigned to. When line type is DHCP, it is not editable. Instead, current gateway address is shown.
def dns <IP address>	168.126.63.1	Set the Domain Name Service IP address.
def portviewip <IP address>	0.0.0.0	Configures IP of PC which Portview is installed If IP is set to 0.0.0.0, NMS feature is disabled. (Please refer to Portview User's Manual for detailed information.)
def portviewport <Port Number>	4000	Set the socket number of the PC with Portview installed.
def telnet [Enable / Disable]	Enable	Enable or disable Telnet service. If disabled, you cannot connect to Eddy via Telnet.

def ftp [Enable / Disable]	Enable	Enable or disable FTP service. If disabled, you cannot connect to Eddy via FTP.
def ssh [Enable / Disable]	Disable	Enable or disable SSH service. If enabled, you can connect to Eddy via SSH.
Def ddns [IP Address]	203.32.117.1	If you set DDNS server IP , DDNS service will be enable. But you set "0.0.0.0" ,this service will disable.
Def ddnsuser [username]	eddy	You can access DDNS server with this ID.
Def ddnsPASS [password]	99999999	You can access DDNS server with this password.
def web [Enable / Disable]	Enable	Enable or disable Web service. If disabled, you cannot connect to Eddy via Web.
def target_agent [Enable / Disable]	Disable	Enable or disable remote debugging function used by Eddy development environment, LemonIDE. For more information, please refer to LemonIDE user manual in the SDK CD included in Eddy DK package.
def name <Eddy name>	Name of the module	Set the name of Eddy module. (Max 32 bytes)
def snmp [Enable / Disable]	Disable	SNMP V1/V2 Attributes can read and write by SNMP Agent. In order to read attributes only, change the feature to "ReadOnly." In order to read and write attributes change the feature to "ReadWrite." (Options : ReadOnly/ ReadWrite)
def v1readwrite [enable, disable]	Disable	SNMP V1/V2 Attributes can read and write by SNMP Agent. In order to read attributes only change the feature to "ReadOnly." In order to read and write attributes change the feature to "ReadWrite." (Options : ReadOnly/ ReadWrite)
def v3readwrite [enable, disable]	Disable	SNMP V3 Attributes can read and write by SNMP Agent. In order to read attributes only change the feature to "ReadOnly." In order to read and write attributes change the feature to "ReadWrite." (Options : ReadOnly/ ReadWrite)
def v3username [string]	eddy	Configure the Username when use SNMP V3.
def v3password [string]	none	Configure the password when use SNMP V3.
def trapip [address]	0.0.0.0	Configure the server IP address which receives the TRAP information.
def trapoprT [Socket No.]	162	Configure the server Port which receives the TRAP information.
def trap_reset [enable, disable]	Enable	If Enable is selected, inform the "System reset info".

def trap_connect [enable, disable]	Disable	If Enable is selected, inform the "Serial Port opened info".
def trap_disconnect [enable, disable]	Disable	If Enable is selected, inform the "Serial Port Closed info".
def landhcp [enable, disable]	Enable	If Enable is selected, DHCP server service will be enabled on the LAN port.
def lanip <IP Address>	10.10.1.1	Set the IP address on the LAN port.
def lanmask <Subnet Mask>	255.255.255.0	Set the subnet mask address on the LAN port.
def lanstart <IP Addrss>	10.10.1.2	Set the start address for the DHCP range on the LAN port.
def lanend <IP Address>	10.10.1.30	Set the end address for the DHCP range on the LAN port.
def leasetime <msec>	180	Set lease time for DHCP.

6.4 Wifi commands

Bellow are instruction and function which enable Wifi Network.

명령어	디폴트	설명
def wifi wireless <Enable/ disable>	disable	Determine whether to use Eddy-Wifi module
def wifi mode [infrastructure / ad-hoc]	infrastructure	Configure the active mode of wireless LAN
def wifi network <802.11 b/g mixed, 802.11b only, 802.11g only,>	802.11 b/g mixed	Configure the active protocol of wireless network.
def wifi ssid <SSID string>	None	Configure wireless network name (SSID) you want connect.
def wifi channel <Auto, 1 ~ 13>	Auto	Select frequency which used for wireless connection.
def wifi bitrate <auto, 1,2,5,6,9,11,12,18,24,36,48, 54>	Auto	Configure the speed of wireless connection.
def wifi rts (1 ~ 2347)	2347	Configure minimum packets which enable RTS in communication node.

def wifi fragment <256 ~ 2346>	2346	Configure Maximum packet when sending with small pieces of packet.
def wifi roaming [Enable/ Disable]	Disable	Configure whether to use roaming function of wireless network.
def wiri authentication [open, shared, wpa-psk, wpa2-psk, wpa-none]	WPA2-PSK	Select certification way when testing access point.
def wifi encryption [none, wep, tkip, aes]	TKIP	Configure the way of encryption
def wifi keyindex [1 ~ 4]	1	Select the index when Encryption is WEB
def wifi key [wep key string]	None	Register key to use when Encryption is WEB.
def wifi password [wpa password]	None	Register password to use when Encryption is TKIP.
def wifi line [dhcp, static ip]	DHCP	Select acquiring way of IP in wireless network
def wifi ip [IP address]	192.168.1.72	Register IP address when acquiring way of IP is Static IP.
def wifi gateway [router Address]	192.168.1.1	Register GW address when acquiring way of IP is Static IP.
def wifi mask [Mask Address]	255.255.255.0	Register Mask address when acquiring way of IP is Static IP.
def wifi dns [DNS Address]	168.126.63.1	Register DNS server address.

6.5 Serial Commands

You can set the communication and operation environment for the serial port. Chapter 5 describes each option in detail. Only a summary of each option is presented here.

Commands	Default	Descriptions
def port 1 protocol [disable / com/ tcp_server/tcp_client/ tcp_broadcast / tcp_multiplex/ udp_server/udp_client]	com	Select the operation protocol, which the serial port would use.
def port 1 socket <port number>	4001	Set the socket number for the port. TCP Server, TCP Broadcast, TCP Multiplex, and UDP server operation modes make use of this port for awaiting network socket connections.
def port 1 name <name>	Port 1	Port alias name for convenience. 16 Characters at maximum

Commands	Default	Descriptions
def port speed [150/300/600/1200/2400/4800/9600/19200/38400/57600/115200/230400/460800/921600]	9600bps	Set communication speed.
def port data [5 / 6 / 7 / 8]	8	Set the number of bits in each character size.
Def po interface [rs422, rs485e, rs485ne]	RS422	Configure interface of serial 3,4 port on Eddy-S4M (In Eddy-DK, this can be selected by Dip Switch on Eddy-DK board so that this category cannot be selected.)
def port stop [1 / 2]	1	Set the number of stop bits.
def port parity [none/odd/even]	none	Set parity bit check scheme.
def port flow [none/xon/rts]	none	Set the flow control scheme.
def port signal [data/modem]	data	Set the signal line checking method for the device to be connected to the given serial port.
def port remote <IP address>	0.0.0.0	When the Operation Mode is set to TCP Client or UDP Client, set the IP address to connect to.
def port remoteport <socket number>	4000	When the Operation Mode is set to TCP Client or UDP Client, set the socket number to connect to.
def port keepalive <0 ~ 65535>	0	After a certain amount of time passes without any communication after the socket connection between the given serial port and the server is established, automatically disconnect the socket connection.
def port latency <msec>	180	This needs to be set when consecutive data from the given serial port needs to be transmitted to socket at once.
def port login [Enable / Disable]	Disable	When the Operation Mode is set to TCP Server, ask for the username and password when the client tries to connect. Set to 1 to enable.
def port loginname <username>	None	When the Operation Mode is set to TCP Server, set the username to ask for (Max 8 bytes)
def port loginpass <password>	None	When the Operation Mode is set as TCP Server, set the password to ask for (Max 8 bytes)

6.6 Username/Password Commands

Configure username and password for Web/Telnet/FTP.

Commands	Default	Descriptions
def username <username>	eddy	Set username to use in Web, Telnet, or FTP. 16 Characters at maximum.
def password <password>	99999999	Set password to use in Web, Telnet, or FTP. 16 Characters at maximum.

6.7 System Commands


Commands	Descriptions
def default	Restore all settings to factory default. Requires reboot for changes to take effect.
def save	Save current configuration settings. Requires reboot for changes to take effect.
reboot	Reboot Eddy.

Chapter 7. appendix

7.1 Firmware Updates via FTP

Eddy supports firmware update with Web or FTP. This section describes update method via FTP and Telnet. Web update is described in [Chapter 5. Configuration via Web](#).

- 1) Connect to Eddy with FTP, using correct username and password. (Default: eddy, 99999999)
- 2) Issue a command 'bin' for binary file transfer mode. Optionally use 'hash' to see the data transfer mark.
- 3) Issue 'put' command upload the firmware file.
- 4) After getting a 'Transfer complete' message, issue a command 'quit' or 'bye' to disconnect. Now we are ready to update the firmware.

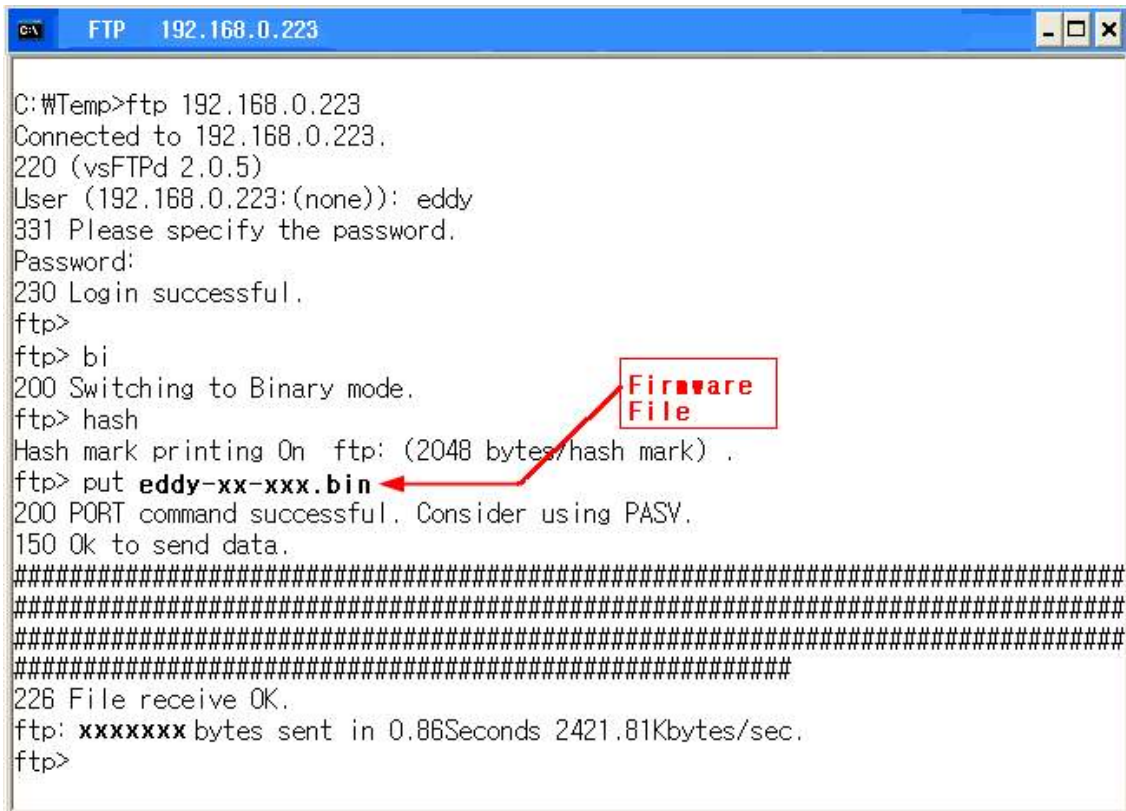

```
C:\> FTP 192.168.0.223
C:\#Temp>ftp 192.168.0.223
Connected to 192.168.0.223.
220 (vsFTPd 2.0.5)
User (192.168.0.223:(none)): eddy
331 Please specify the password.
Password:
230 Login successful.
ftp>
ftp> bi
200 Switching to Binary mode.
ftp> hash
Hash mark printing On ftp: (2048 bytes/hash mark) .
ftp> put eddy-xx-xxx.bin
200 PORT command successful. Consider using PASV.
150 Ok to send data.
#####
#####
#####
#####
226 File receive OK.
ftp: xxxxxxxx bytes sent in 0.86Seconds 2421.81Kbytes/sec.
ftp>
```

The screenshot shows a terminal window titled "FTP 192.168.0.223". The user is in a Windows command prompt at "C:\#Temp" and has initiated an FTP session to "192.168.0.223". The session proceeds with login using the username "eddy". The user then enters "bi" to switch to binary mode, followed by "hash" to enable hash marks. The command "put eddy-xx-xxx.bin" is entered, and the server responds with "200 PORT command successful. Consider using PASV." and "150 Ok to send data." followed by several lines of hash marks. The session concludes with "226 File receive OK." and "ftp: xxxxxxxx bytes sent in 0.86Seconds 2421.81Kbytes/sec.". A red box labeled "Firmware File" has a red arrow pointing to the filename "eddy-xx-xxx.bin" in the terminal output.

Firmware updates via FTP

- 5) Connect to Eddy with Telnet, using correct username and password. (Default: eddy, 99999999)
- 6) After the login, you are already at the default directory where the firmware resides. Update can start right away.
- 7) Issue a command 'ls' to make sure firmware files are both successfully uploaded.
- 8) Use 'upgrade' command to write this file into Eddy's Flash memory. Upgrade application automatically detects whether the given firmware is kernel or file system.
- 9) Usage: upgrade <firmware filename> (Filename is case-sensitive.)
- 10) Make sure 'Flash Write OK' and 'Flash Verify OK' messages are displayed.

ii) Enter 'reboot' to restart Eddy. Now Eddy will run with the new firmware.

```

C:\> telnet 192.168.0.223

Eddy login: eddy
Password:
#
# upgrade eddy-xx-xxxx.bin
FileSystem Erase ... 2756852 Bytes, info.erasize = 1056
FileSystem Write ... 2756852 Bytes, eddy-xx-xxxx.bin
2756852 (2756852 bytes)
Flash Write OK

Verifying .....
Flash Verify OK
Update Complete

# reboot
    
```

7.2 Ordering Information

Product	Version	Descriptions
Eddy-CPU	2.1	Embedded CPU Module
Eddy-DK	2.1	Eddy V2.1 Development Kit
Eddy-S4M	2.1	Embedded CPU Module (Mini PCI Type)
Eddy-S4M-DK	2.1	Eddy-S4M v2.1 Development Kit
Eddy-S4M-JIG	2.1	Eddy-S4M v2.1 JIG Board
Eddy-Wifi	2.1	802.11 b/g Wifi Module
Eddy-BT	2.1	Bluetooth Module

7.3 FCC Statement

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- 1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- 2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED.
- 3) INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIAED OPERATION.

FCC RF
INTERFERENCE STATEMENT

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.