



KONGSBERG

MBR 144 OEM
Maritime Broadband Radio
Instruction Manual

G210-58/3

????? 2020 © Kongsberg Seatex AS

Document information

- Product: MBR 144 OEM
- Document: Instruction Manual
- Document part number: G210–58

Copyright

The information contained in this document remains the sole property of Kongsberg Seatex AS. No part of this document may be copied or reproduced in any form or by any means, and the information contained within it is not to be communicated to a third party, without the prior written consent of Kongsberg Seatex AS.

Warning

The equipment to which this manual applies must only be used for the purpose for which it was designed. Improper use or maintenance may cause damage to the equipment and/or injury to personnel. You must be familiar with the contents of the appropriate manuals before attempting to operate or work on the equipment.

Kongsberg Seatex disclaims any responsibility for damage or injury caused by improper installation, use or maintenance of the equipment.

Disclaimer

Kongsberg Seatex AS endeavours to ensure that all information in this document is correct and fairly stated, but does not accept liability for any errors or omissions.

Support information

If you require maintenance or repair, contact Kongsberg Maritime's support organisation. You can contact us using the following address: km.support.seatex@km.kongsberg.com. If you need information about our other products, visit <http://www.kongsberg.com>.

Table of contents

ABOUT THIS MANUAL	5
MBR 144 OEM	6
System description.....	6
System diagram.....	7
Scope of supply.....	7
Restrictions in guarantee.....	8
Radio frequency license.....	8
Equipment identification.....	8
FCC compliance statement.....	9
ISED Canada compliance statement.....	9
Exposure statement.....	10
Health and safety.....	11
Network security.....	11
Support information.....	12
OPERATION	13
Getting started.....	13
Turning on the Radio Unit.....	13
Enabling contact with the Radio Unit.....	14
Defining the IP address on the computer network adapter.....	15
Operating procedures.....	17
Setting up the radio site for operation.....	17
Creating a new radio network.....	22
Joining a radio network.....	24
Editing an existing radio network.....	25
Adding or removing third party equipment.....	26
Checking the status of the MBR network.....	28
User preference procedures.....	29
Choosing the colour palette.....	29
User interface.....	30
Operational principles.....	30
Display organisation.....	30
Functions and dialog boxes.....	31
Menu system.....	32
Welcome.....	32
Configuration guide.....	33
Create site.....	34
Add radios to site.....	35

Configure site	36
Third party equipment	38
Status	39
Edit current network	40
New network	41
Resource management	43
Join network	44
System status	45
Network status	45
Individual radio site status	45
INSTALLATION	46
Preparations	46
Mechanical drawings	46
Necessary tools and equipment	47
Radio Unit location	47
Arranging the antennas	47
Installing the Radio Unit	49
Cable layout and interconnections	50
Setting to work summary	51
DRAWINGS	52
About drawings	52
Radio Unit dimensions	53
TECHNICAL SPECIFICATIONS	54
Performance specifications	54
Interface specifications	54
Frequency specifications	55
Weight and outline dimensions	55
Power specifications	56
Environmental specifications	56
Standards and regulations	56
MAINTENANCE	58
Checking the product version	58
Repairing the Radio Unit	58
EQUIPMENT HANDLING	60
Taking delivery	60
Unpacking and handling	60
Storage	61
Disposal	61

About this manual

Purpose of manual

The purpose of this manual is to provide the descriptions and procedures required to install, configure, operate and maintain the MBR 144 OEM.

Target audience

This manual is intended for all users of the MBR 144 OEM. This includes project engineering personnel, installation personnel, IT administrators and operators.

License information

The MBR 144 OEM is not subject to product licensing. The product is a radio transmitting device. A frequency license is required for operation.

Maintenance purposes

This manual is also intended as reference material for the maintenance personnel. Keep this manual for later use.

MBR 144 OEM

Topics

[System description, page 6](#)

[System diagram, page 7](#)

[Scope of supply, page 7](#)

[Restrictions in guarantee, page 8](#)

[Radio frequency license, page 8](#)

[Equipment identification, page 8](#)

[FCC compliance statement, page 9](#)

[ISED Canada compliance statement, page 9](#)

[Exposure statement, page 10](#)

[Health and safety, page 11](#)

[Network security, page 11](#)

[Support information, page 12](#)

System description


The MBR 144 OEM is a Maritime Broadband Radio (MBR). The MBR 144 OEM is intended for operations where personnel require a robust communication link during surveillance and inspection. The tilted antennas are suitable for helmet mounting. The MBR 144 OEM is also available with a dedicated plug-and-play camera for live streaming and battery packs.

The system is a maritime radio network distribution system which connects computers and systems together in a wireless network. Each MBR 144 OEM works in a network with two or more radio units. A *radio site* is one or several radio units connected together by Ethernet on one location. A *radio network* is a wireless network of radio sites.

The MBR 144 OEM requires no extra infrastructure to operate. It serves as an extension of your local radio network.

The MBR 144 OEM is set up via a web interface which is available on each radio unit.

System diagram

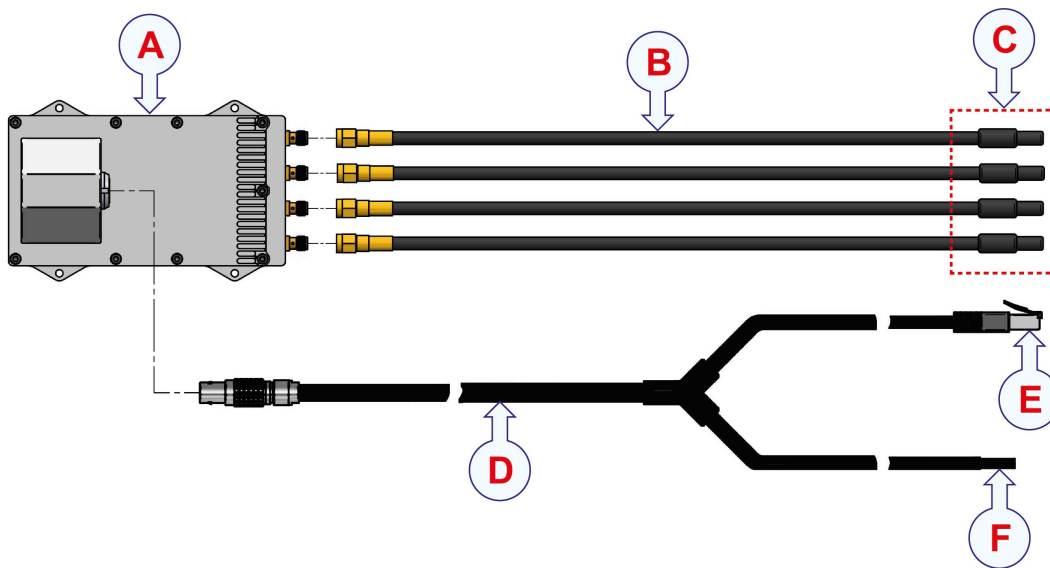

- A *Radio Unit*
- B *Antenna cable*
- C *Antenna radiating part*
- D *Combined Ethernet and power cable*
- E *Ethernet connection to user equipment*
- F *Connection to power source on vessel*

Scope of supply

The basic items are included in the delivery. Additional optional items can be purchased from Kongsberg Seatex AS.

Basic items

- 1 ea Radio Unit
- 1 ea Combined Ethernet and power cable
- 1 ea End user documentation

Additional required items

Observe these additional items which are required for installation and/or operation. They can be ordered from Kongsberg Seatex AS or purchased locally.

- Dipole antenna
 - Power supply
 - Computer
- For configuration purposes

Restrictions in guarantee

Changes or modifications to the product not explicitly approved by Kongsberg Seatex AS will void the guarantee.

The liability of Kongsberg Seatex AS is limited to repair of this product only under the given terms and conditions stated in the sales documents. Consequential damages such as customer's loss of profit or damage to other systems traceable back to this product's malfunctions, are excluded.

The warranty does not cover malfunctions of the product resulting from the following conditions.

- Incorrect power connection.
- Insufficient cooling of the Radio Unit.

Radio frequency license

This product contains a radio transmitting device. A frequency license for the use of radio frequencies is required for operation. Use in national waters will require a frequency license issued by the relevant national authorities. The owner and user of the equipment are responsible for obtaining such a license prior to switching the product ON.

This product is in compliance with the standard ETSI EN 303 276. This applies to the frequency channels 5862 and 5890 MHz.

This product is in compliance with FCC (Federal Communications Commission) Part 15.407. This applies to the frequency channels 5725 to 5850 MHz.

Equipment identification

This product has the following identifications for FCC (Federal Communications Commissions) and IC (Industry Canada).

- **FCC ID:** Q8IM144M2OEM
- **IC:** 5637A-M144M2OEM

FCC compliance statement

This device complies with Part 15 of the FCC (Federal Communications Commission) Rules. Operation of the device is subject to the following conditions.

- 1 This device may not cause harmful interference.
- 2 This device must accept any interference received. Including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a marine and/or commercial environment. This equipment generates, uses and can radiate radio frequency energy. If not installed and used in accordance with the instructions, the equipment may cause harmful interference to radio communication. The equipment is not intended for operation in a residential area. Operation in such an area is likely to cause harmful interference. In which case the user will be required to correct the interference at his own expense.

Changes or modifications not expressly approved by the party responsible for compliance, could void the user's authority to operate the equipment.

ISED Canada compliance statement

Text in English

This device complies with Industry Canada (IC) license-exempt RSS standard(s). Operation is subject to the following two conditions.

- 1 This device may not cause interference.
- 2 This device must accept any interference, including interference that may cause undesired operation of the device.

Texte en Français

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes.

- 1 L'appareil ne doit pas produire de brouillage.
- 2 L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillard est susceptible d'en compromettre le fonctionnement.

Text in English

This radio transmitter (IC: 5637A-M144M2OEM) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for the type, are strictly prohibited for use with this device.

This device has been designed to operate with the antenna(s) listed below, and having a maximum gain of 6 dB. Antennas not included in this list or having a gain greater than 6 dB, are strictly prohibited for use with this device.

The required antenna impedance is 50 ohms.

Supported antennas:

- MBR 144 OEM antennas (MBR-E-ANTxx)

Texte en Français

Le présent émetteur radio (IC: 5637A-M144M2OEM) a été approuvé par Innovation, Sciences et Développement économique Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué pour tout type figurant sur la liste, sont strictement interdits pour l'exploitation de l'émetteur.

Cet appareil a été conçu pour fonctionner avec les antennes listées ci-dessous et ayant un gain maximum de 6 dB. Les antennes non incluses dans cette liste, ou ayant un gain supérieur à 6 dB, sont strictement interdites pour l'exploitation de l'émetteur.

L'impédance d'antenne requise est de 50 ohms.

Antennes supportées:

- Antennes OEM MBR 144 (MBR-E-ANTxx)

Exposure statement

To comply with FCC or IC RF exposure limits for general population or uncontrolled exposure, the antenna(s) used for this transmitter must be installed on outdoor permanent structures in order to provide a separation distance at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

This product contains a radio transmitting device. According to the output power of the equipment, the minimum distance for human beings in a controlled environment is:

- **Maximum power/ETSI EN 303 276:** 40 cm
- **FCC Part 15.407:** 40 cm

Health and safety

Operation or troubleshooting of this equipment will not imply any risk for high voltages, explosions or exposure to gas. The equipment complies with IEC 61010-1/EN 61010-1 standards regarding product safety.

Network security

If a MBR 144 OEM system is connected to a local area network, data security is important.

Equipment manufactured by Kongsberg Seatex is frequently connected to the vessel's local area network (LAN). When you connect a computer to a local area network you will always expose the data on that computer. All other computers connected to the same network may be able to access your data. Several threats may immediately occur:

- Remote computers can read the data.
- Remote computers can change the data.
- Remote computers can change the behaviour of the computer, for example by installing unwanted software.

Usually, two parameters are used to define the threat level:

- 1 The likelihood that any remote computer will do any of the above.
- 2 The damage done if a remote computer succeeds doing this.

Kongsberg Seatex has no information regarding the complete system installation on any vessel. Systems provided by Kongsberg Seatex are regarded as stand-alone offline systems. They are stand-alone even though they may be connected to a network for sensor interfaces and/or data distribution.

Note

No network safety applications are installed on Kongsberg Seatex computers. The computers are therefore not protected against viruses, malware or unintentional access by external users.

Securing the MBR 144 OEM system itself has no meaning unless there is a policy in place that secures all computers in the network. This policy must include physical access by trained and trusted users. The customer/end user of the MBR 144 OEM system will always be in charge of defining and implementing a security policy, and providing the relevant network security applications.

Note

Kongsberg Seatex will not accept any responsibility for errors and/or damages caused by unauthorized use of or access to the MBR 144 OEM.

Support information

If you need technical support for your Seatex MBR 144 OEM you must contact your local dealer, or one of our support departments.

- **Company name:** Kongsberg Seatex AS
- **Address:** Havnegata 9, 7010 Trondheim, Norway
- **Telephone:** +47 73 54 55 00
- **Telephone, 24h support:** +47 33 03 2407
- **E-mail address:** km.support.seatex@km.kongsberg.com
- **Website:** <http://www.kongsberg.com>

Operation

Topics

[Getting started, page 13](#)

[Operating procedures, page 17](#)

[User preference procedures, page 29](#)

[User interface, page 30](#)

[Functions and dialog boxes, page 31](#)

Getting started

Topics

[Turning on the Radio Unit, page 13](#)

[Enabling contact with the Radio Unit, page 14](#)

[Defining the IP address on the computer network adapter, page 15](#)

Turning on the Radio Unit

The Radio Unit is turned on when the power connector is inserted in the power source on the vessel. The system power is controlled from the power source.

Context

The software is pre-installed and the system will start automatically after it has been turned on.

Note

Use a dedicated power supply or battery to power the Radio Unit.

Procedure

- 1 Make sure that the Ethernet cable is properly connected.
- 2 Insert the power connector into the dedicated power source on the vessel. 24 V DC.
- 3 To turn off the Radio Unit, simply remove the power connector.

Result

The system is now ready for configuration.

Related topics

[Enabling contact with the Radio Unit, page 14](#)

[Defining the IP address on the computer network adapter, page 15](#)

[Setting to work summary, page 51](#)

Enabling contact with the Radio Unit

To be able to set up and communicate with the Radio Unit you must enable contact with the unit via a browser.

Prerequisites

In order to set up the Radio Unit you need these items.

- Computer with an Ethernet adapter.
- Up-to-date browser. For example Chrome, Firefox, Internet Explorer version 10 or newer.

The IP address of the Radio Unit is found on a label at the rear of the unit.

You must define which IP Address and Subnet mask the Ethernet adapter in the computer shall use for this communication.

Context

You only need the computer for configuration or re-configuration purposes.


Note

*The **Welcome** page only appears the first time you set up your site. After the configuration is completed, the web interface takes you directly to the **Main** view.*

Procedure

- 1 Set up the computer with:
 - **IP address:** 10.19.127.10
 - **Subnet mask:** 255.255.0.0
- 2 Connect the computer to the Radio Unit via Ethernet.

- 3 Type the radio's IP address in the browser address bar.
Observe that the **Welcome** page appears.

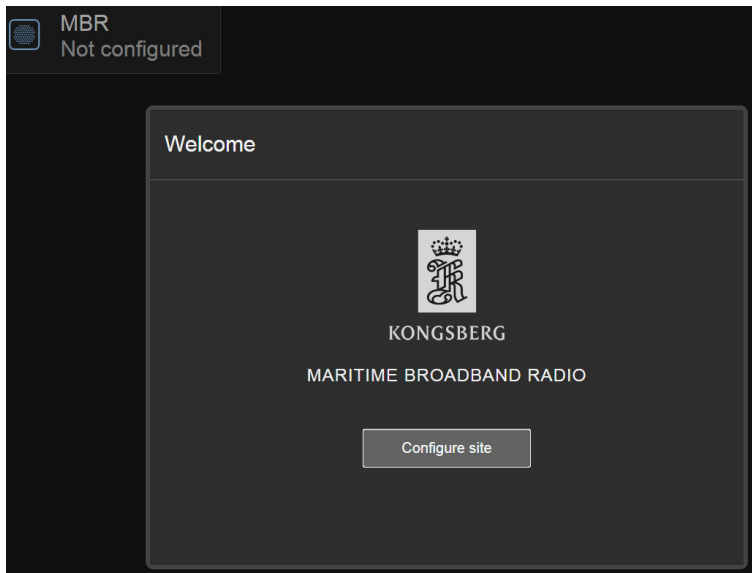

For previously configured systems the **Main** view appears.

Result

You are now connected to the web interface on your local radio.

Related topics

[Turning on the Radio Unit, page 13](#)

[Defining the IP address on the computer network adapter, page 15](#)

[Setting up the radio site for operation, page 17](#)

[Welcome, page 32](#)

[Setting to work summary, page 51](#)

Defining the IP address on the computer network adapter

You must define which IP Address and Subnet mask the Ethernet adapter in the computer shall use for this communication. As long as you do not replace the computer or the network adapter in the computer, you only need to do this once.

Prerequisites

This procedure is made for the Microsoft® Windows® 7 and 10 operating systems. It is assumed that you are familiar with the Windows® operating systems, computer technology, and interface principles.

Procedure

- 1 Close all the programs that are running on the computer.

- 2 Open the **Network Connections** dialog box.

This procedure is made for the Microsoft® Windows® 10 operating system.

- a In the bottom-left corner of your desktop, select the Windows® **Start** button.
- b On the menu, select **Settings**.
- c Observe that the **Windows Settings** dialog box opens.
- d Select **Network & Internet**.
- e Select **Change adapter options**.
- f Select the network adapter you are going to use; then right-click and select **Properties** on the short-cut menu.
- g On the list of connections, select **Internet Protocol 4 (TCP/IPv4)**, and then **Properties**.

This procedure is made for the Microsoft® Windows® 7 operating system.

- a In the bottom-left corner of your desktop, select the Windows® **Start** button.
- b On the right-hand side of the **Start** menu, select **Control Panel**.
- c Observe that the Control Panel opens.
- d Select **Network and Sharing Center**.
(If the Control Panel is shown with categories, select **View network status and tasks**.)
- e On the left-hand menu, select **Change adapter settings**.
- f Click once on your network adapter to select it, then right-click and select **Properties** on the shortcut menu.
- g On the list of connections, select **Internet Protocol 4 (TCP/IPv4)**, and then **Properties**.

- 3 Select **Use the following IP address**, and type the IP address and network mask.

- IP Address: **10.19.127.10**
- Subnet mask: **255.255.0.0**

- 4 Select **OK** to save the selected settings, and then close all the dialog boxes.

Related topics

[Turning on the Radio Unit, page 13](#)

[Enabling contact with the Radio Unit, page 14](#)

[Setting up the radio site for operation, page 17](#)

[Setting to work summary, page 51](#)

Operating procedures

Topics

[Setting up the radio site for operation, page 17](#)

[Creating a new radio network, page 22](#)

[Joining a radio network, page 24](#)

[Editing an existing radio network, page 25](#)

[Adding or removing third party equipment, page 26](#)

[Checking the status of the MBR network, page 28](#)

Setting up the radio site for operation

The setup is done using a wizard. A *radio site* is one or several radio units connected together by Ethernet on one location. A *radio network* is a wireless network of radio sites. You must set up the radio site before you can start the radio network configuration. All configuration of the MBR 144 OEM Maritime Broadband Radio (MBR) is done through the web interface.

Prerequisites

The IP address for the Radio Unit is located at the bottom of the Radio Unit. You must have enabled contact with the Radio Unit.


The IP address and the MAC address for the third party equipment must be known.

Context

The MBR 144 OEM Maritime Broadband Radio (MBR) uses static layer 2 bridging (OSI model - Open Systems Interconnection Basic Reference Model). Therefore it needs both the IP address and the MAC address of the equipment in order to establish an IP connection.

Procedure


- 1 On the **Welcome** page, which appears after you have enabled contact with the Radio Unit, select **Configure site** to start the installation wizard.

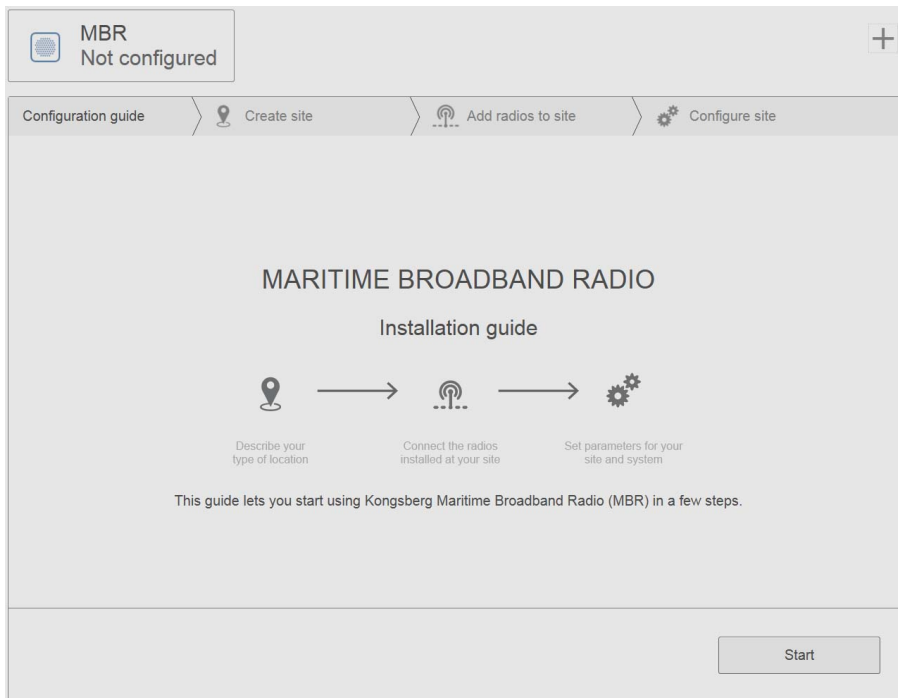

Note

*The default colour palette setting is with dark background. If your current light conditions require white background, select the **System menu** button **[+]** to open the **System menu**. In the **Palette** group you can change the colour palette.*


- 2 Select **Start** on the **Configuration guide** page to start the step-by-step configuration of your radio site.
- 3 Type a suitable name for your radio site and select **Continue**.

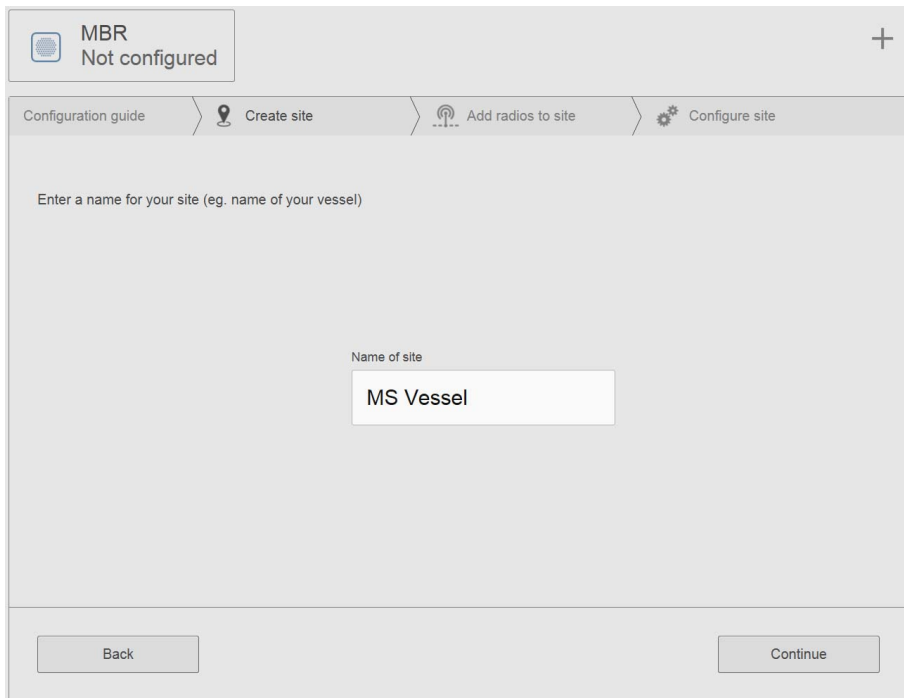


- 4 Select the radios you want to add to the site. Type a description of the location of the Radio Unit. Select **Continue**.

Note


Radio units connected on the local Ethernet will appear automatically. They are by default selected.

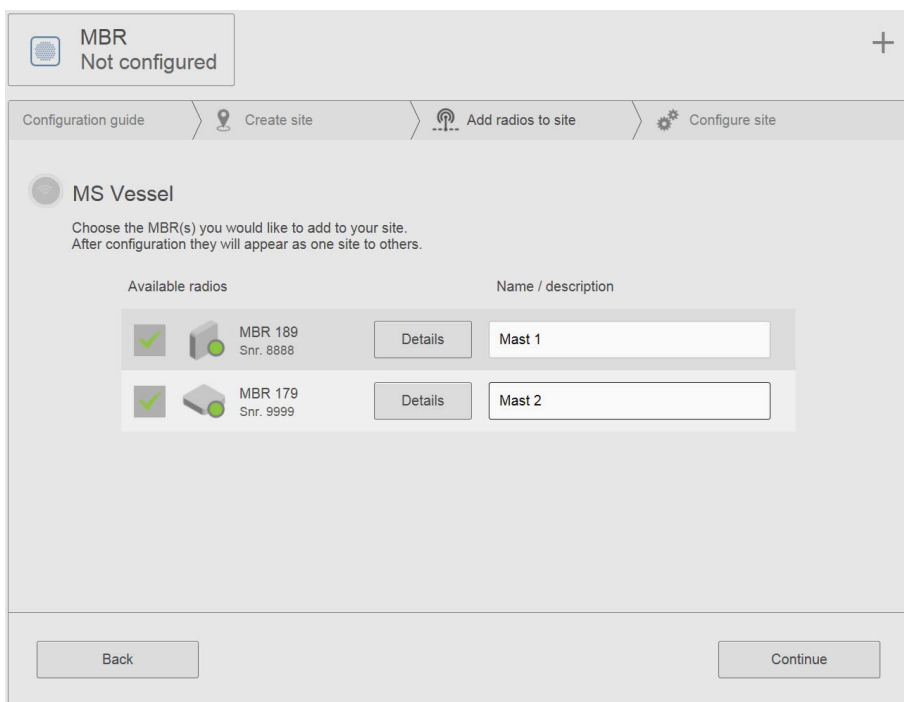

- 5 Type the radio frequency. Select the data rate for the radio site from the **Rate** list.

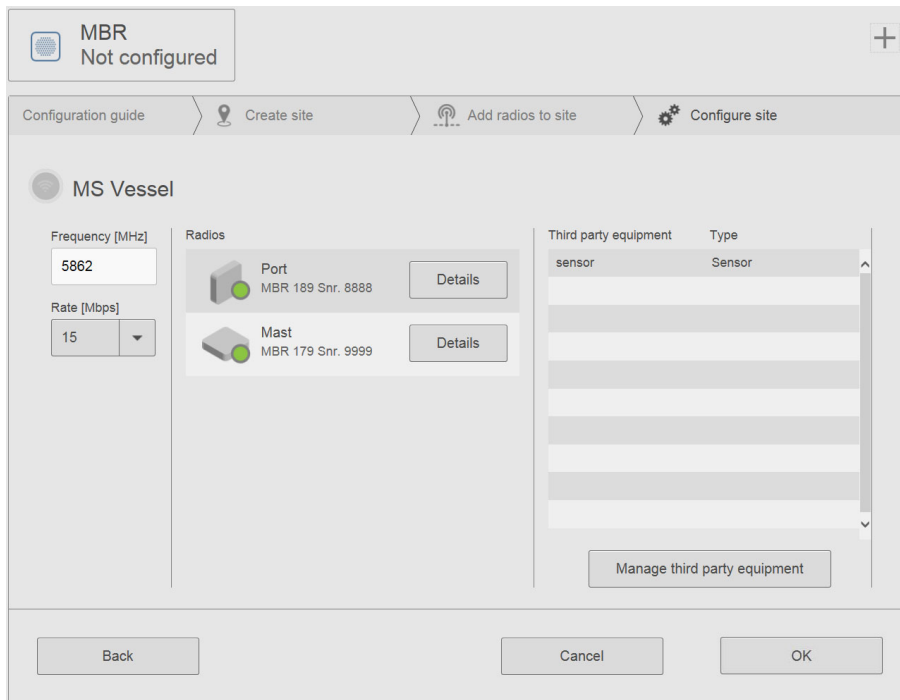

- 6 Select **Manage third party equipment** to open the **Third party equipment** dialog box. This is where you add third party equipment to your radio site.

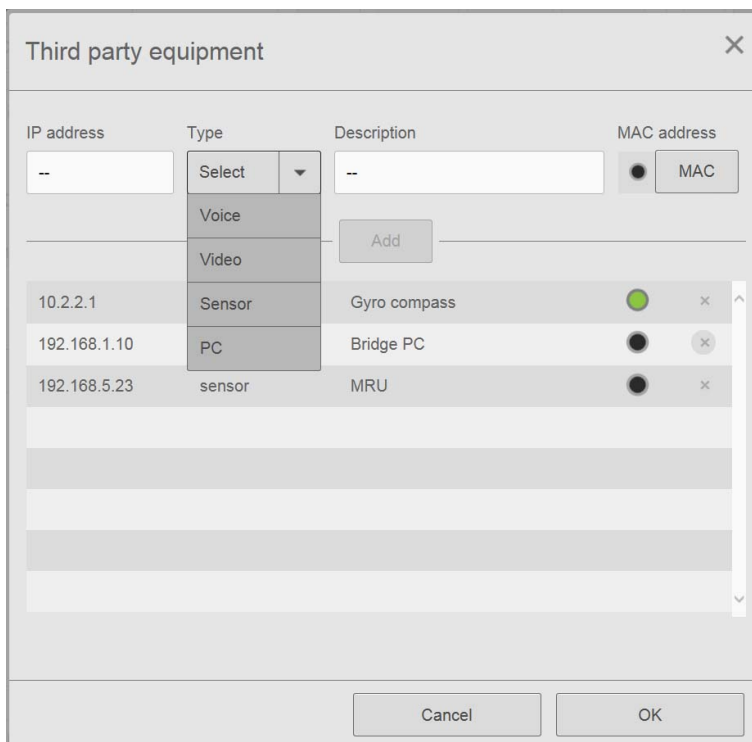

- 7 Type the IP address of the equipment you want to connect. Select type of equipment from the **Type** list. Type a description of the equipment for identification purposes.

If the third party equipment is switched on, the MAC address appears automatically. If not, type the MAC address. Select **Add** to add the equipment.

Note

*You can add and/or change information later by selecting the equipment, making the changes and selecting **Update**. You can also delete equipment by selecting the **X** symbol at the end of the line.*

- 8 Continue for all the equipment you want to add. Select **OK** to save the selected setting and close the dialog box.
- 9 Select **Finish** to complete your radio site configuration.
- 10 Observe the site ID for you radio site. Select **OK**.



Result

The **Main** view appears and you are now ready to start using the radios.

Related topics

[Enabling contact with the Radio Unit, page 14](#)

[Defining the IP address on the computer network adapter, page 15](#)

[Creating a new radio network, page 22](#)

[Configuration guide, page 33](#)

[Create site, page 34](#)

[Add radios to site, page 35](#)

[Configure site, page 36](#)

[Setting to work summary, page 51](#)

Creating a new radio network

You must create a new radio network in order to communicate with other radio sites.

Context


Important

The radio network name is in upper case. It is converted into a numeric value. This numeric value is the ID of the new radio network. It is this name that other sites which shall join this radio network must type in the **Join network** dialog box when they want to join a radio network.

Procedure

- 1 Select the **System menu** button **[+]** in the top right corner of the **Main** view to open the **System** menu.
- 2 Under **Network**, select **New** to open the **New network** dialog box.

Observe that your own radio site is listed as a participant in the radio network Guest list.

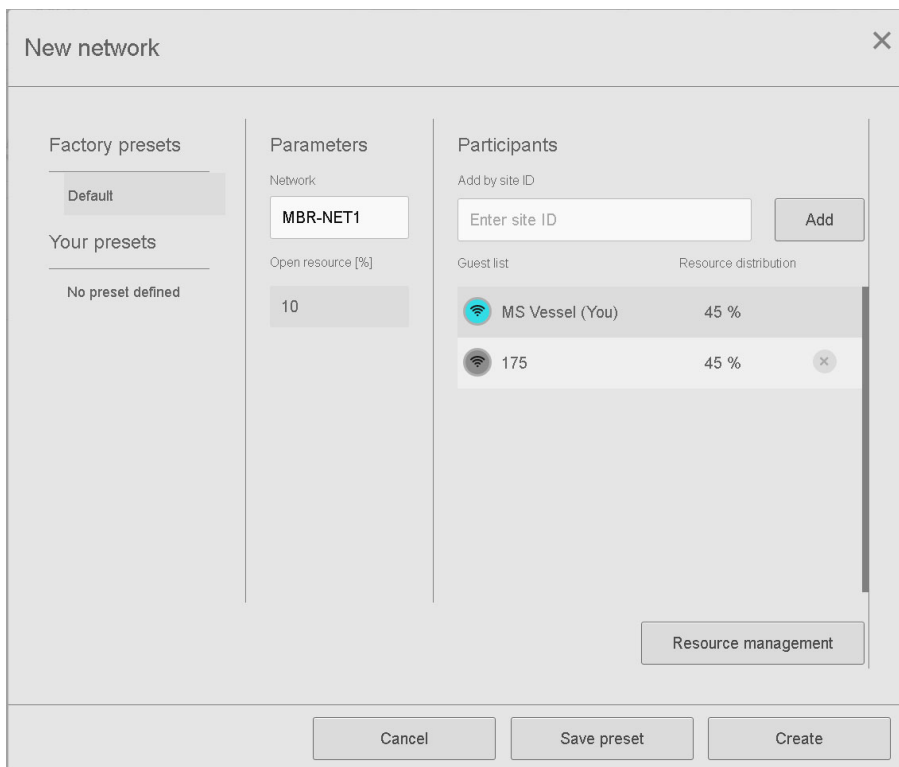

- 3 In the **Add by site ID** box, type the site ID. Select **Add** to add site IDs for other sites that you want to add to the radio network.

Observe that the new radio site appears in the Guest list. The site ID is the ID you were given by the system at the end of the radio site configuration.

- 4 Select **Resource management** to open the **Resource management** dialog box. This is where you adjust the bandwidth resource for each radio site.


Guest list	Resource distribution [%]	Rate [Mbps]	Bandwidth
MS Vessel (You)	50	7	3.5 Mbps
MS Boat	42	15	6.3 Mbps

- 5 Leave the **Superframe** value at 100 ms. Select the wanted **Resource distribution** from the list.

Note

For Superframe length it is recommended to use 100 ms. However, for applications where a lower latency is needed, the superframe can be adjusted. This will affect the data throughput.

- 6 Select **OK** to store the bandwidth settings and return to **New network**.
- 7 Type a radio network name in the **Network** box.
The radio network name is in upper case.
- 8 Select **Save preset** if you want your network configuration to be stored locally.
- 9 Select **Create** to create the new radio network.
The **Distribute changes** dialog box appears.

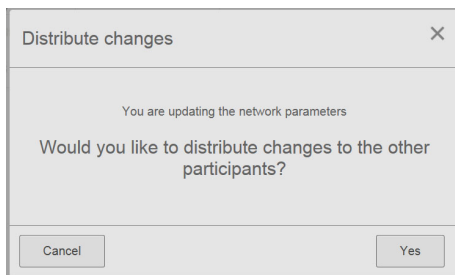

- 10 Select **Yes** if you want to distribute the network changes to other radio sites. Select **Cancel** if you do not want to distribute the network changes to other radio sites.

Related topics

[Setting up the radio site for operation, page 17](#)

[New network, page 41](#)

[Editing an existing radio network, page 25](#)

[Resource management, page 43](#)

[Setting to work summary, page 51](#)

Joining a radio network


You must join the radio network which you want your operation to be a part of. If another radio site has created a new radio network, you might want to become a part of this network.

Context

If you are out of range of the radio network at the time you carry out this procedure, the radio will automatically detect the radio network and establish a connection when you are within reach of this network.

Procedure

- 1 Select the **System menu** button **[+]** in the top right corner of the **Main** view to open the **System** menu.
- 2 Under **Network**, select **Join** to open the **Join network** dialog box.

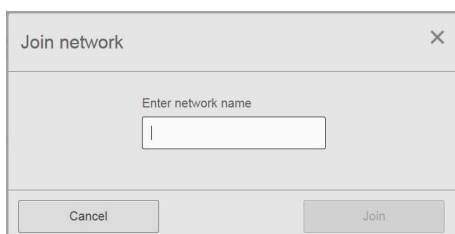

- 3 Type the name of the radio network you want to join.

Note

The radio network name is in upper case.

- 4 Select **Join** to join the radio network.

Related topics

[Setting to work summary, page 51](#)

[Join network, page 44](#)

Editing an existing radio network


During operation you might want to administer and make changes to an existing radio network. If a new site has been established or you want to change the bandwidth resources.

Prerequisites

A radio network must have been set up previously.

Procedure

- 1 Select the **System menu** button **[+]** in the top right corner of the **Main** view to open the **System** menu.
- 2 Under **Network**, select **Edit** to open the **Current network** dialog box.

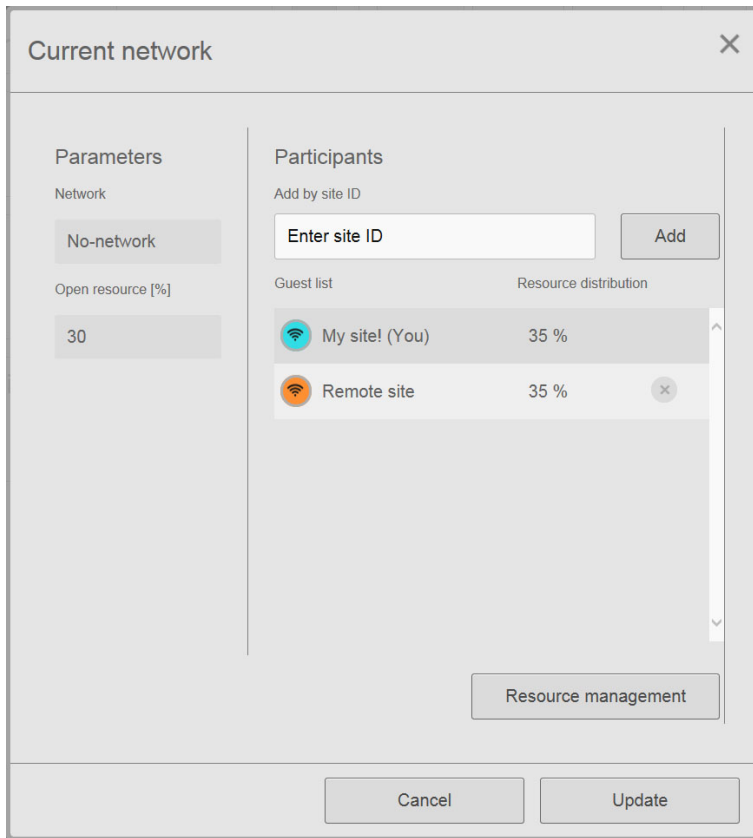

- 3 Type a new site name in the **Add by site ID** box. Select **Add** to add a new site to the existing network.
- 4 If you want to adjust the bandwidth resource for each site, select **Resource management** to enter the **Resource management** dialog box.
- 5 Select **Update** to save the network settings.

Related topics

[Creating a new radio network, page 22](#)

[Edit current network, page 40](#)

[Resource management, page 43](#)

Adding or removing third party equipment

If you want to communicate with other types of equipment, for example sensors, you can add this equipment to your radio site. When third party equipment is no longer in use on your site, you can remove it.

Procedure

- 1 Select the **System menu** button **[+]** in the top right corner of the **Main** view to open the **System** menu.
- 2 Select **Site** to enter the **Configure site** page.

- 3 Select the **Manage third party equipment** button to open the **Third party equipment** dialog box.

IP address	Type	Description	MAC address
--	Select	--	MAC
	Voice		
	Video		
10.2.2.1	Sensor	Gyro compass	<input checked="" type="radio"/> X
192.168.1.10	PC	Bridge PC	<input type="radio"/> X
192.168.5.23	sensor	MRU	<input type="radio"/> X

- 4 Type the IP address of the equipment you want to connect. Select equipment type from the drop-down list. Type a description of the equipment for identification purposes.
If the third party equipment is switched on, the MAC address appears automatically. If not, type the MAC address.
Select **Add** to add the equipment.
- 5 To remove third party equipment, select the X symbol at the end of the line.
- 6 Continue for all the equipment you want to add or remove. Select **OK** to close the dialog box.
- 7 Back to the **Configure site** page. Select **OK** to save the chosen settings.

Related topics

[Third party equipment, page 38](#)

Checking the status of the MBR network

During operation you can check the status of the local radio site, the remote site(s) and the entire network of radio sites.

Prerequisites


The radio site(s) must have been set up for operation. If not, there is no status information to display.

Context

The status information is located to the left of the Main view. It is easily visible to the operator.

Procedure


- 1 Look at the system status information to view the status about your local site.
The status is **Active** when the radio site is set up for operation. The status is **Not configured** when the radio site is not set up for operation.

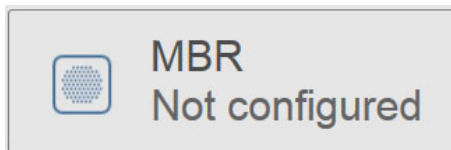

- 2 Look at the network information to view the status of the current radio network.
The current name and the frequency of the network are displayed.




- 3 Look at the **Site list** to view information about each site in the radio network.
The **Site list** holds information about your local site and remote radio sites. Your local radio site is blue. The remote radio sites are orange.

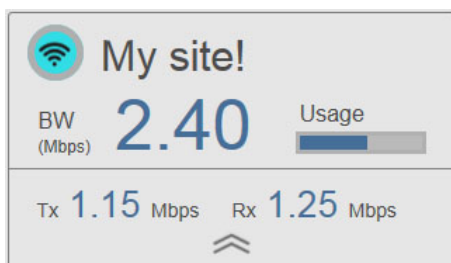

BW indicates the bandwidth resource allocated to the local radio site. The **Usage** bar indicates the instantaneous usage of the bandwidth resource.

Select the **Unfold** button to show Tx and Rx traffic on the radio site.

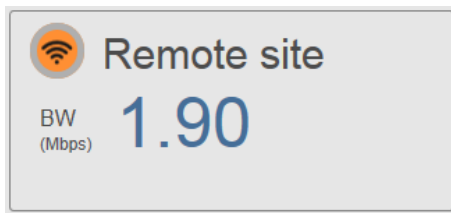

BW indicates the bandwidth resource allocated to the remote radio site.

Related topics

[System status, page 45](#)

[Network status, page 45](#)

[Individual radio site status, page 45](#)

[Display organisation, page 30](#)

User preference procedures

Topics

[Choosing the colour palette, page 29](#)

Choosing the colour palette

You can select a colour scheme for the display which suits your current light conditions.

Context

The **Palette** function provides colour schemes for the display presentation. Two palettes are available. Day black and Day white.



Procedure

- 1 Select the **System menu** button **[+]** in the top right corner of the **Main** view to open the **System** menu.
- 2 Under **Palette**, select the colour scheme you want to use.

User interface

Topics

[Operational principles, page 30](#)

[Display organisation, page 30](#)

Operational principles

The MBR 144 OEM has a graphical configuration and user interface. Use a mouse and keyboard to navigate, select and operate the system.


The MBR 144 OEM is operated and configured from the **System** menu.

Related topics

[Menu system, page 32](#)

Display organisation

The display is made up of three main parts. Information about the status of the overall system, the networks and the radio sites to the left. A hideable **System** menu, from which you operate and configure the system, in the top right. The **Network view** which displays the Maritime Broadband Radio sites.

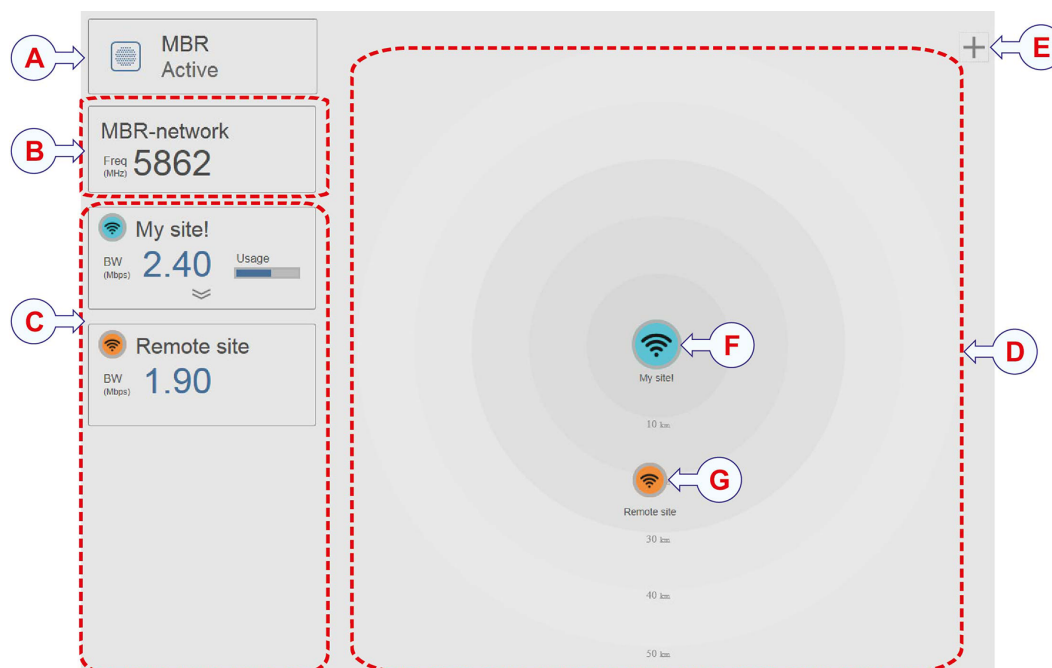

A **System status:** *It shows the overall radio system status.*

- B Network information:** *It shows the name and frequency of the current network.*
- C Site list:** *A list of radio sites in the current network.*
- D Network view:** *It displays the MBR sites in the current network.*
- E System menu button:** *It provides various system settings and operational functions.*
- F Local site:** *It shows the position of local site in the network.*
- G Remote sites:** *It shows the position of remote sites in the network.*

Related topics

[Checking the status of the MBR network, page 28](#)

Functions and dialog boxes

Topics

[Menu system, page 32](#)

[Welcome, page 32](#)

[Configuration guide, page 33](#)

[Create site, page 34](#)

[Add radios to site, page 35](#)

[Configure site, page 36](#)

[Third party equipment, page 38](#)

[Status, page 39](#)

[Edit current network, page 40](#)

[New network, page 41](#)

[Resource management, page 43](#)

[Join network, page 44](#)


[System status, page 45](#)

[Network status, page 45](#)

[Individual radio site status, page 45](#)

Menu system

Select the **System menu** button **[+]** in the top right corner of the **Main** view to open the **System** menu. When the **System** menu is open, this button changes to a **Close** button **[x]**. Select the **Close** button to close the **System** menu.

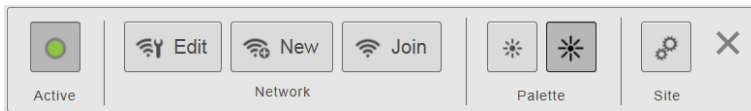

The **System** menu provides access to four groups of functions.

Active

Active shows the radio operation mode. **Active** is currently not used in this system and is always green.

Network

Network allows you to add a new radio network, join an existing network or edit an existing network.

Palette

Palette provides you with colour schemes for the display presentation. Select the colour scheme which suits your light conditions.

Site

Site allows you to configure the radio site. Select **Site** to return to the configuration of your radio site. Here you can update the frequency, the data rate the third party equipment for the local radio site. You can also see the radio details for the radios on the local site.

Related topics


[Operational principles, page 30](#)

Welcome

The **Welcome** page is the start page of your radio unit configuration. It only appears the first time you set up your radio site.

How to open

The **Welcome** page appears when you have enabled contact with the radio unit via the web interface.

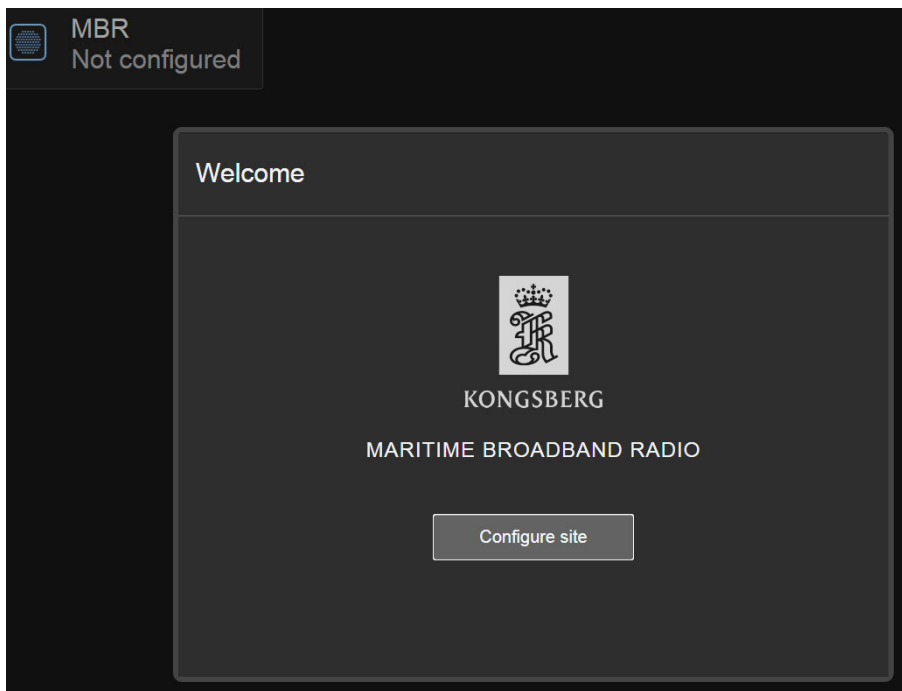

Details

Configure site button

Select the **Configure site** button to open the installation wizard. The wizard takes you through the step-to-step configuration of your radio site.

Related topics


[Enabling contact with the Radio Unit, page 14](#)

Configuration guide

An installation wizard takes you through the setup of the radio site. The **Configuration guide** page is the first page in the step-to-step configuration of your radio site.

How to open

Select the **Configure site** button on the Welcome page to open the installation wizard.

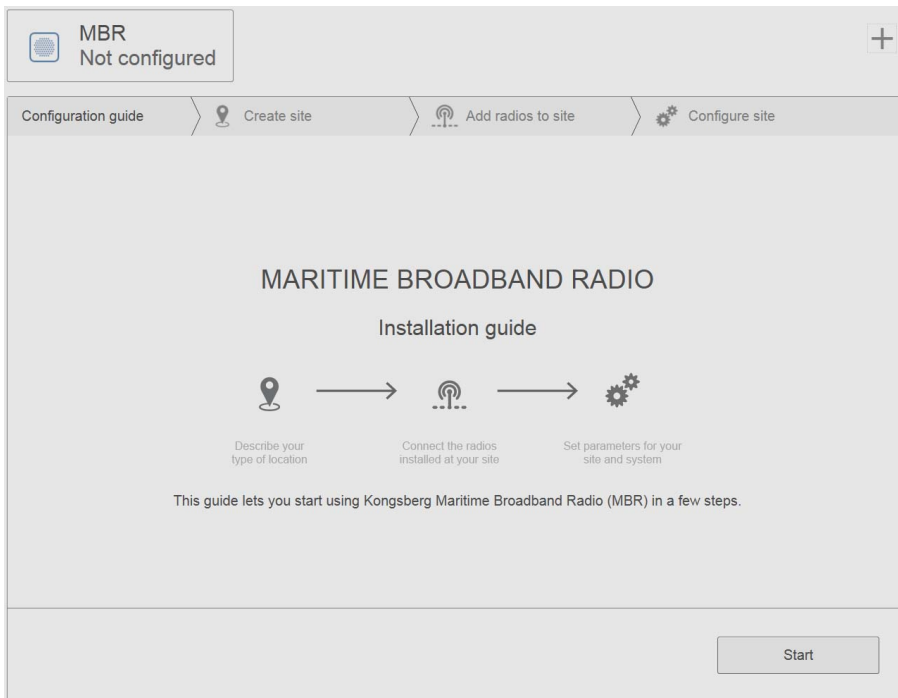

Details

Start button

Select the **Start** button to start the step-to-step configuration of your radio site.

Related topics

[Setting up the radio site for operation, page 17](#)

Create site

Here you can type the name of your radio site.

How to open

This page is step 2 in the step-to-step configuration of your radio site.

MBR
Not configured

Configuration guide > Create site > Add radios to site > Configure site

Enter a name for your site (eg. name of your vessel)

Name of site

MS Vessel

Back Continue

Details

Name of site

Type a suitable name for your radio site. This name will be displayed in the **Site list** and in the **Network** view.

Related topics


[Setting up the radio site for operation, page 17](#)

Add radios to site

Here you can add radios to your radio site.

How to open

This page is step 3 in the step-to-step configuration of your radio site.

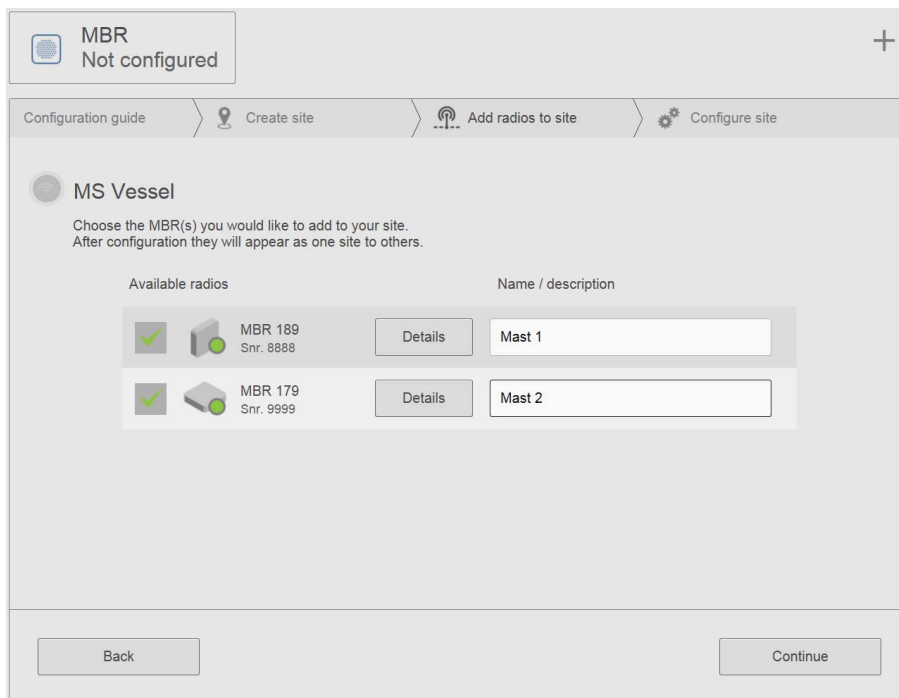

Details

Available radios

This is a list of available radios. Radio units connected on the local Ethernet will appear automatically. They are by default selected.

Details

Select the **Details** button to open the **Radio status property sheet**. This dialog box shows the serial number, product version, configured values and diagnostics for the Radio Unit.

Name/description

Here you can type a description of the location of the Radio Unit.

Related topics

[Setting up the radio site for operation, page 17](#)


[Status, page 39](#)

Configure site

Here you can set the frequency, the data rate and select third party equipment for the local radio site. You can also see the radio details for the radios on the local radio site. This is also where you make changes to the radio site setup.

How to open

This is the last page in the step-to-step configuration of your radio site.

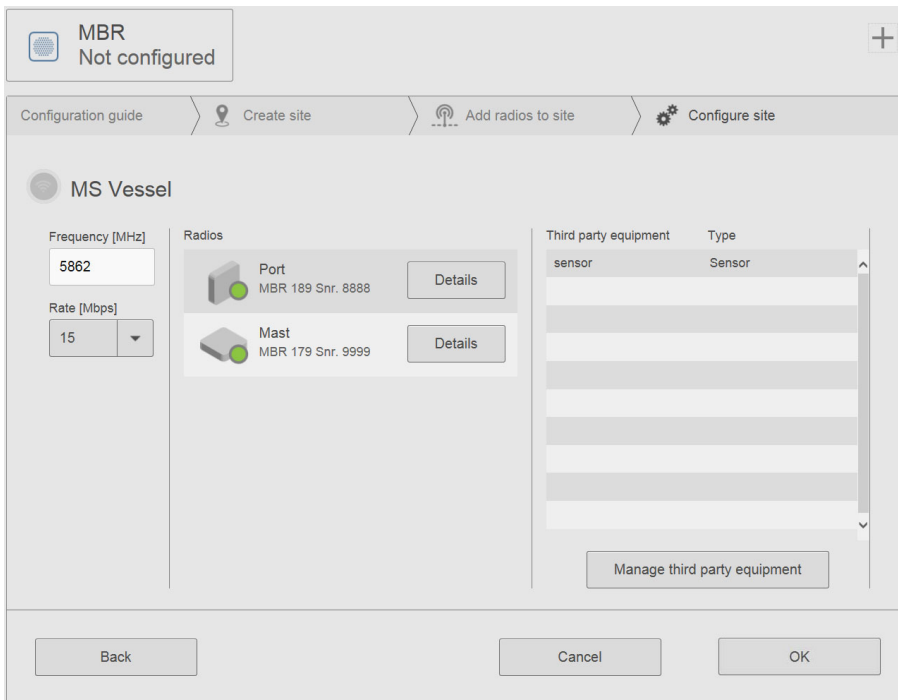

Details

Frequency

This is the operating frequency of the radio site.

Rate

This is the operating data rate of the radio site.

Radios

This is a list of radios which are added to the radio site.

Details

Select the **Details** button to open the **Radio status property sheet**. This dialog box shows the serial number, product version, configured values and diagnostics for the Radio Unit.

Manage third party equipment

This button opens the **Third party equipment** dialog box. Here you can manage third party equipment which is connected to the radio site.

Related topics

[Setting up the radio site for operation, page 17](#)

[Third party equipment, page 38](#)

[Status, page 39](#)

Third party equipment

In the **Third party equipment** dialog box you can manage third party equipment connected to your radio site. It contains a list of equipment where the radio site provides internet protocol (IP) connectivity in the Maritime Broadband Radio (MBR) network.

How to open

This dialog box is opened from the **Configure site** page.

IP address	Type	Description	MAC address
--	Select	--	MAC
	Voice		
	Video		
10.2.2.1	Sensor	Gyro compass	● x
192.168.1.10	PC	Bridge PC	● x
192.168.5.23	sensor	MRU	● x

Details

IP address

This is the IP address of the equipment you want to add to your radio site.

Type

This is a drop-down list of various types of equipment which can be useful to add to your radio site. For example computers and motion sensors.

Description

Here you can type a name which describes the equipment you want to add to your radio site. When you type in this box, the **Add** button becomes active.

MAC address

This is the MAC address of the equipment you want to add to your radio site. The circle becomes green when a MAC address is found automatically for the entered IP address. Select the **MAC** button to change or view the MAC address.

Related topics

[Adding or removing third party equipment, page 26](#)


[Configure site, page 36](#)

Status

The radio **Status** dialog box shows the serial number, product version, configured values and diagnostics for the Radio Unit.

How to open

This dialog box is opened by selecting the **Details** button in the **Add radio to site** page or the **Configure site** page in the step-to-step configuration.

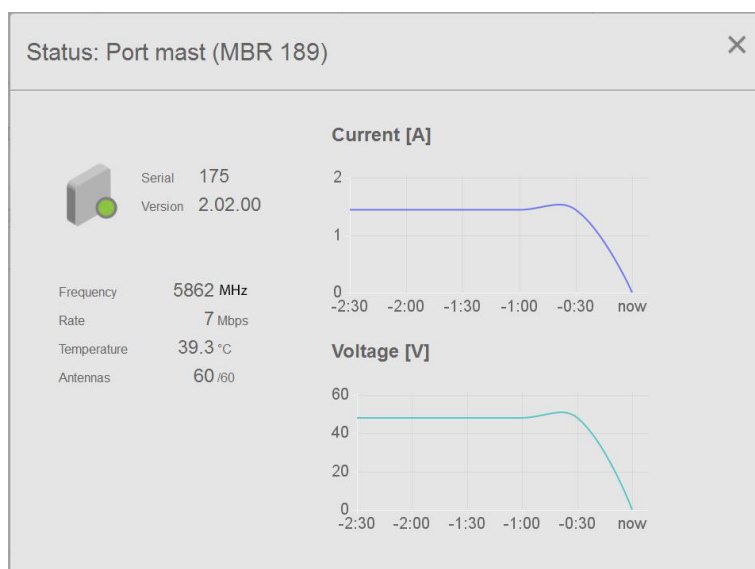

Details

Serial

This is the serial number of the Radio Unit.

Version

This is the software version of the Radio Unit.

Frequency

This is the operating frequency of the Radio Unit.

Rate

This is the data rate for the Radio Unit.

Temperature

This is the internal temperature of the Radio Unit.

Antennas

This is the number of active antenna elements.

Current

This graph shows the input current to the Radio Unit.

Voltage

This graph shows the input voltage to the Radio Unit.

Related topics

[Add radios to site, page 35](#)

[Configure site, page 36](#)


[Checking the product version, page 58](#)

Edit current network

The **Edit current network** dialog box allows you to edit the current radio network.

How to open

This dialog box is opened from the **System** menu.

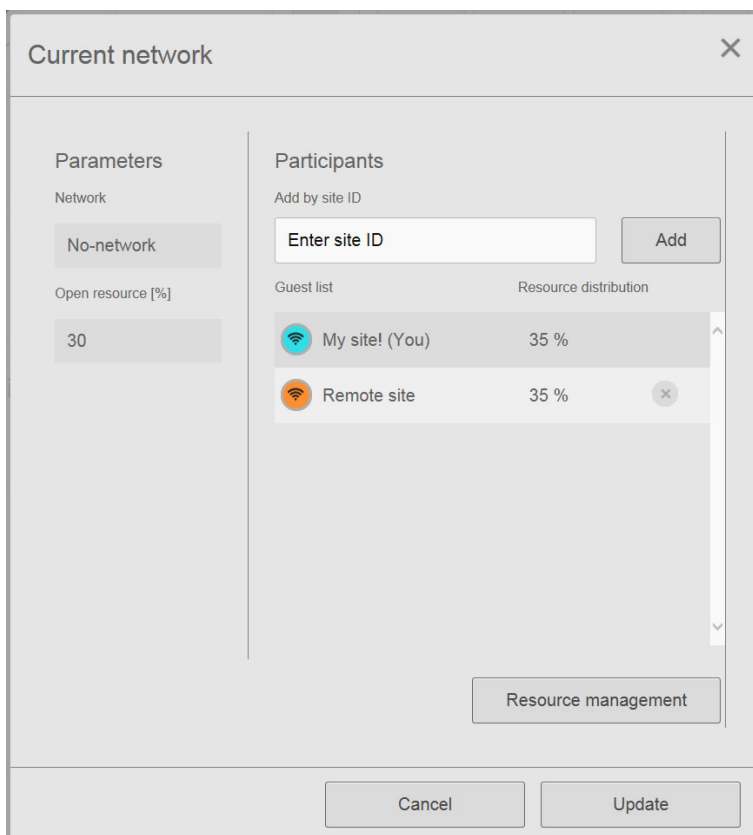

Details

Network

This is the name of the current radio network.

Open resource

It shows the percentage of the bandwidth which is an open resource. Open resource is a contention-based multiple access protocol which allows radio sites to communicate without having a fixed allocated time slot.

Add by site ID

You can add a radio site to the guest list of the network by typing the site ID for the remote site.

Guest list and resource distribution

They show all sites in the current network with the same network name and the resource distribution between the radio sites.

Resource management

This button opens the **Resource management** dialog box. This is where you can change the resource distribution between the radio sites.

Related topics

[Editing an existing radio network, page 25](#)


[Resource management, page 43](#)

New network

The **New network** dialog box allows you to define a new Maritime Broadband Radio (MBR) wireless network for MBR sites. The changes will be distributed to all the radio sites in the network.

How to open

This dialog box is opened from the **System** menu.

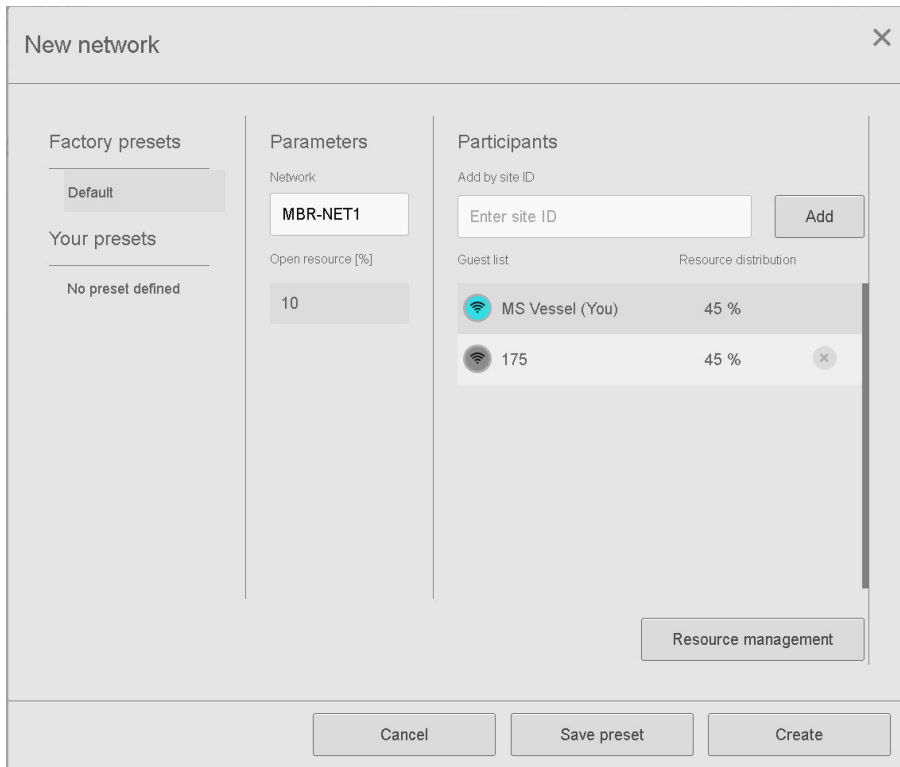

Details

Factory presets

Factory presets contains a set of default configuration parameters for the radio network.

Your presets

This is a list of saved presets.

Network

This is the name of the new radio network.

Open resource

It shows the percentage of the bandwidth which is an open resource. Open resource is a contention-based multiple access protocol which allows radio sites to communicate without having a fixed allocated time slot.

Add by site ID

You can add a radio site to the guest list of the network by typing the site ID for the remote site.

Guest list and resource distribution

They show all sites in the current network with the same network name and the resource distribution between the radio sites.

Resource management

This button opens the **Resource management** dialog box. This is where you can change the resource distribution between the radio sites.

Save preset

This button allows you to save the current configuration as a preset.

Related topics

[Creating a new radio network, page 22](#)


[Resource management, page 43](#)

Resource management

The **Resource management** dialog box allows you to change the resource distribution between the radio sites in the radio network.

How to open

This dialog box is opened from the **Edit current network** or the **New network** dialog boxes.

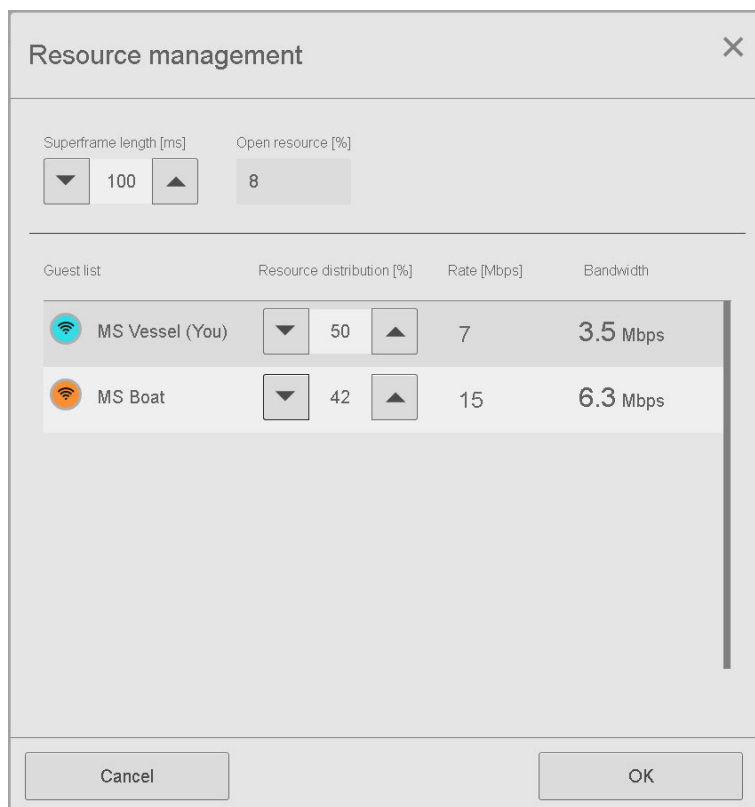

Details

Superframe length

This is the length of the repeating superframe of bandwidth allocation in milliseconds.

Open resource

It shows the percentage of the bandwidth which is an open resource. Open resource is a contention-based multiple access protocol which allows radio sites to communicate without having a fixed allocated time slot.

Guest list and resource distribution

They show all sites in the current network with the same network name and the resource distribution between the radio sites.

Rate

This is the operating data rate of the radio site.

Bandwidth

It shows the bandwidth of the radio site for the selected resource distribution and the data rate.

Related topics

[Creating a new radio network, page 22](#)

[Editing an existing radio network, page 25](#)

[Edit current network, page 40](#)


[New network, page 41](#)

Join network

The **Join network** dialog box allows you to join an existing Maritime Broadband Radio (MBR) network by typing the network name.

How to open

This dialog box is opened from the **System** menu.

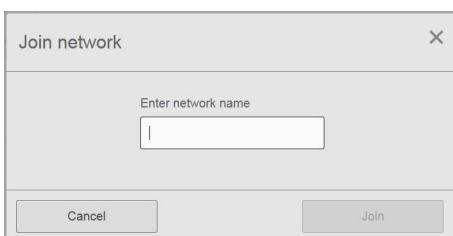

Details

Enter network name


This is the name of the radio network you want to join. The radio network name is in upper case.

Related topics

[Joining a radio network, page 24](#)

System status

The **System status** shows the status for the local radio site. The status is **Active** when the radio site is configured. The status is **Not configured** when the radio site is not configured.

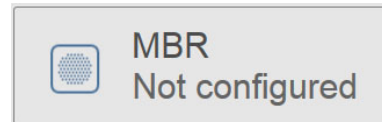

The **System status** is located to the left in the **Main** view.

Related topics

[Checking the status of the MBR network, page 28](#)

Network status

The **Network status** shows the current network name and the frequency of the network. The Network status is located to the left in the **Main** view.



Related topics


[Checking the status of the MBR network, page 28](#)


Individual radio site status

The **Site list** contains information about each radio site in the network. Both for local and remote radio sites.

The **Site list** is located to the left in the **Main** view.

Local radio site

BW indicates the bandwidth resource allocated to the local site. The **Usage** bar indicates the usage of the bandwidth resource. Select the **Unfold** button, , to show Tx and Rx traffic on the radio site.

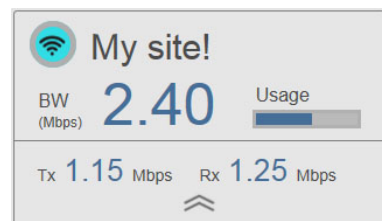


Remote radio site

BW indicates the bandwidth resource allocated to the remote site.

Related topics

[Checking the status of the MBR network, page 28](#)

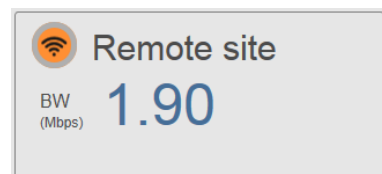

Installation

Topics

[Preparations, page 46](#)

[Arranging the antennas, page 47](#)

[Installing the Radio Unit, page 49](#)

[Cable layout and interconnections, page 50](#)

[Setting to work summary, page 51](#)

Preparations

Topics

[Mechanical drawings, page 46](#)

[Necessary tools and equipment, page 47](#)

[Radio Unit location, page 47](#)

Mechanical drawings

Outline dimension drawings are included in this manual.

Unless otherwise specified, all measurements are in millimetres. The drawings are not to scale.

Related topics

[Radio Unit dimensions, page 53](#)

Necessary tools and equipment

We assume that you are equipped with a standard set of tools. This tool set must comprise the normal tools for electronic and electromechanical tasks. This includes different screwdriver types, pliers, spanners, a cable stripper, a soldering iron, etc. Each tool must be provided in various sizes. We recommend that all tools are demagnetized to protect your equipment.

We recommend a 21 Ncm torque wrench to tighten the antenna connectors.

Unless otherwise stated, all mounting hardware (such as bolts, nuts, washers, screws etc.) referred to in this document is to be supplied by the customer or the shipyard.

An external computer is required for configuration of the Radio Unit through a web interface. You also need a computer if you want to change the configuration later.

Radio Unit location

Correct location of the Radio Unit is important for the system performance. Consider these factors when installing the unit.

- Mount the Radio Unit in such a way that external cooling through the bottom aluminium plate is possible.
- Do not mount on heat-insulating surfaces.
- Use a stable power source with correct voltage. Maximum power consumption is 25 W.


Arranging the antennas

The four antennas constitute the antenna array. They can be arranged in a position that works best for your installation. There are three suggested ways to arrange the antenna array.

As the antenna array is self-calibrating, the antenna arrangement is flexible. You can safely select which of the three arrangements will best suit your operation.

Quadratic array

Arrange the antennas in a square with 25 mm space between the antennas.

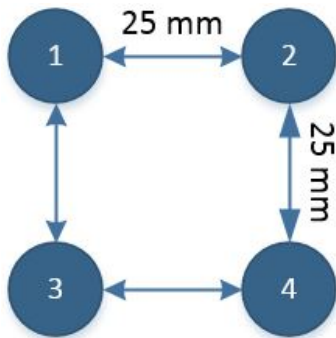


Linear array

Arrange the antennas in a straight line with 25 mm space between the antennas.



Distributed array

If you have a situation where an obstruction will cause shadowing of the signal in a particular direction, it is better for the signal margin to arrange the antennas around the obstruction.

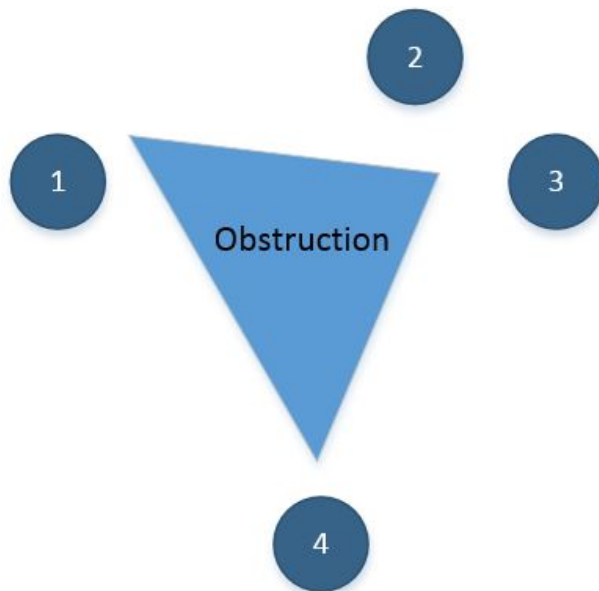

Related topics

[Installing the Radio Unit, page 49](#)

Installing the Radio Unit

Mount the Radio Unit on a flat surface which allows for heat transfer.

Prerequisites

Thermal paste or thermal pad for the aluminium bottom plate. M3 screws which fit the mounting surface. Torque wrench 21 Ncm to tighten the antenna connectors.


Context

The Radio Unit has four mounting holes which must be used when mounting the unit.

The Radio Unit is connected to external equipment with the Ethernet end of the combined Ethernet and power cable. This cable is attached to the Radio Unit by a connector.

Procedure

- 1 Find a suitable location for the Radio Unit according to your environment.
- 2 Apply thermal paste or a thermal pad to the bottom of the Radio Unit.
This is to prevent overheating of the Radio Unit.

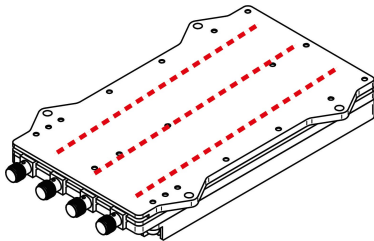

- 3 Place the Radio Unit on a flat surface which allows for heat transfer.
- 4 Use the mounting holes and fasten the Radio Unit to the surface with for M3 screws.
- 5 Mount the four antennas according to one of the antenna arrangements.
- 6 Connect the antennas to the Radio Unit.
Use a torque wrench to tighten the SMA antenna connectors.
- 7 Connect the Combined Ethernet and power cable to the connector on the Radio Unit.
- 8 Connect the Ethernet end of the cable to the user equipment.
- 9 Connect the power end of the cable to a power source on the vessel.

Related topics

[Radio Unit dimensions, page 53](#)

[Arranging the antennas, page 47](#)

[Cable layout and interconnections, page 50](#)

Cable layout and interconnections

The cable connections for the Radio Unit consists of:

- Combined Ethernet and power cable from the Radio Unit to user equipment.
- Four SMA antenna connectors.

The cable connector type is LEMO FGL.1B.308.CLLD72.

Radio Unit Ethernet and power connector

Pin no.	Description/Cable colours
1	DC+
2	ETH Green/White
3	ETH Orange
4	DC-
5	DC-
6	ETH Orange/White
7	ETH Green
8	DC+
Cable screen	GroundShield

Ethernet connector at user end

RJ-45 Pin no. (T-568B assignment)	Description/Cable colours
1	Orange/White
2	Orange
3	Green/White
4	Not connected
5	Not connected
6	Green
7	Not connected
8	Not connected

Related topics

[Installing the Radio Unit, page 49](#)

Setting to work summary

When all hardware units have been installed, and all the cables have been connected, the Radio Unit can be turned on and set to work.

Procedure

- 1 Turn on the Radio Unit.
- 2 Enable contact with the Radio Unit.
- 3 Configure the radio site.
- 4 Join a radio network.

Related topics

[Turning on the Radio Unit, page 13](#)

[Enabling contact with the Radio Unit, page 14](#)

[Defining the IP address on the computer network adapter, page 15](#)

[Setting up the radio site for operation, page 17](#)

[Creating a new radio network, page 22](#)

[Joining a radio network, page 24](#)

Drawings

Topics



[About drawings, page 52](#)

[Radio Unit dimensions, page 53](#)

About drawings

Unless otherwise specified, all measurements are in millimetres. The drawings are not to scale.

Radio Unit dimensions

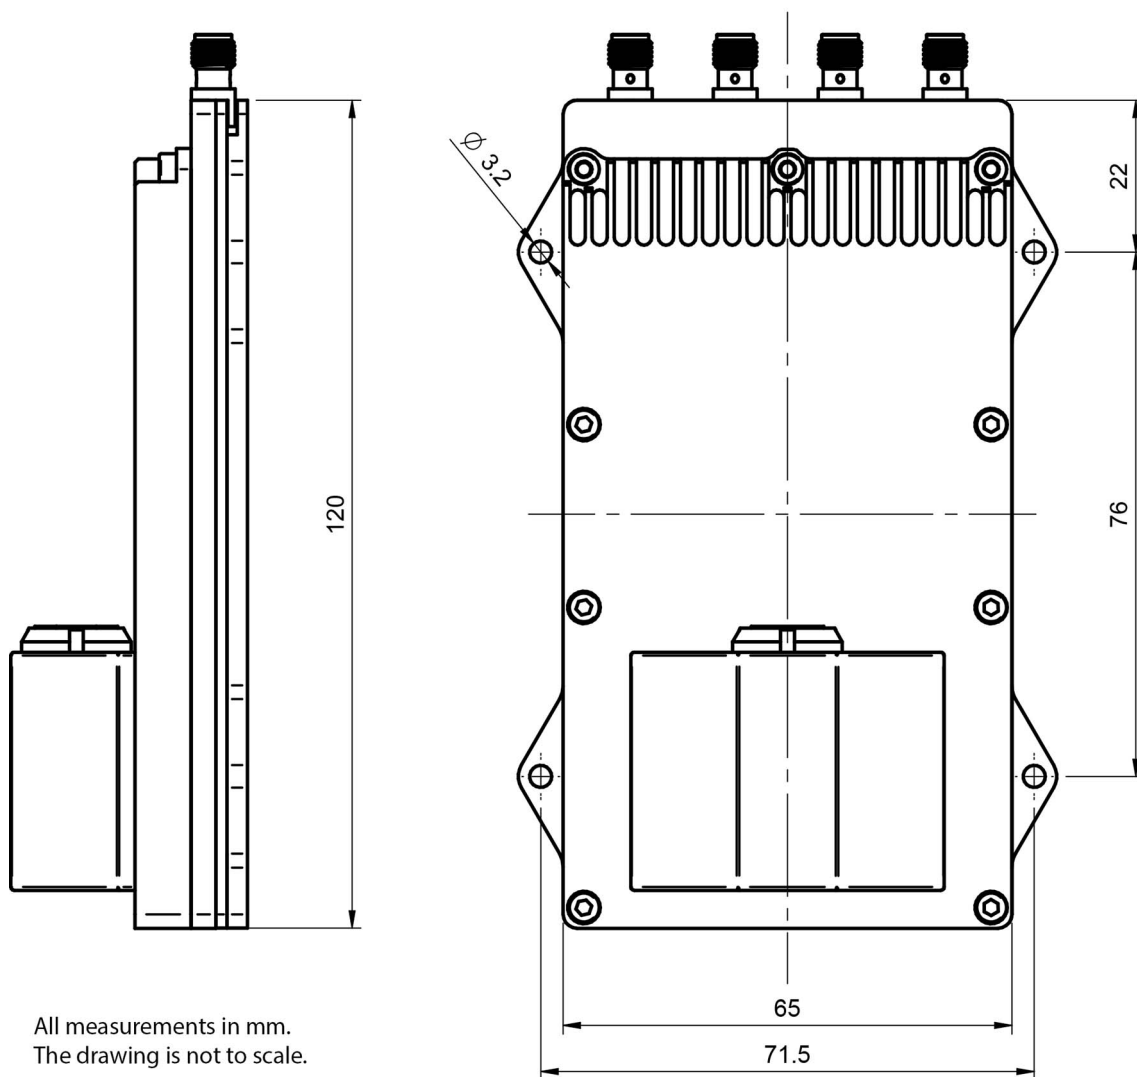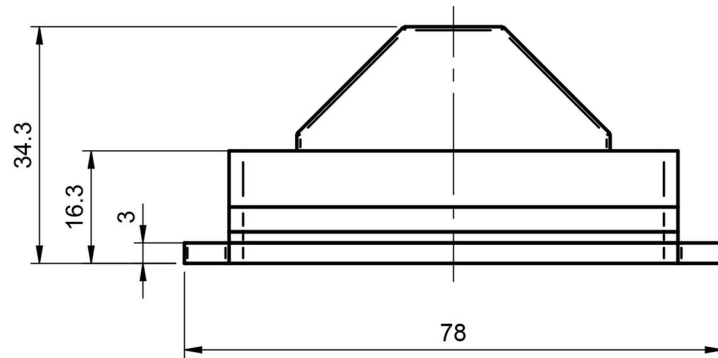

All measurements in mm.
The drawing is not to scale.

Technical specifications

Topics

- [Performance specifications, page 54](#)
- [Interface specifications, page 54](#)
- [Frequency specifications, page 55](#)
- [Weight and outline dimensions, page 55](#)
- [Power specifications, page 56](#)
- [Environmental specifications, page 56](#)
- [Standards and regulations, page 56](#)

Performance specifications

These performance specifications summarize the main functional and operational characteristics of the MBR 144 OEM.

- **Operating range:** 20 km (Dependent on antenna placement and height).
- **User data:** 0.7 – 16.5 Mbps
 - Available rates: 0.7, 1.4, 2.8, 8.5, 16.5 Mbps
- **Antenna coverage:** 360 degrees azimuth, omni-directional

Interface specifications

The system will interface with external systems and sensors via Ethernet.

The MBR 144 OEM product is available in two versions.

MBR 144 OEM

- **Ethernet/LAN:** 1 Port

MBR 144 OEM 2ETH

- **Ethernet/LAN:** 2 Ports

Frequency specifications

The radio frequency specifications summarize the frequency specifications for the receivers in the system.

- **Frequency range:**
 - **Frequency overall tuning range:** 4900 MHz - 5900 MHz
Configurable range for the single 20 MHz channel.
 - **Frequency range ETSI EN 303 276:** 5852 and 5890 MHz
 - **Frequency range FCC part 15.407:** 5725 – 5850 MHz
- **Channel bandwidth:** 20 MHz
- **TX power:**
 - **HW Maximum:** Up to 2 W
 - **ETSI EN 303 276:** Up to 2 W
 - **FCC part 15.407:** Up to 1 W
- **Maximum EIRP:**
 - **HW Maximum:** 39 dBm
 - **ETSI EN 303 276:** 39 dBm
 - **FCC part 15.407:** 36 dBm
- **Modulation:** GMSK
- **Antenna gain:** 6 dBi
- **Antenna elements:** 4

Weight and outline dimensions

These weights and outline dimension characteristics summarize the physical properties of the MBR 144 OEM.

- **Outline dimensions:**
 - **Height Radio Unit:** 35 mm
 - **Width Radio Unit:** 78 mm
 - **Length Radio Unit:** 120 mm (excl. SMA connectors)
- **Weight:**

- **Weight – Radio Unit:** 260 g (excl. cable and antennas)
- **Weight – Antennas 30 cm:** 95 g (4 pcs)
- **Weight – Antennas 60 cm:** 160 g (4 pcs)
- **Weight – Antennas 100 cm:** 255 g (4 pcs)
- **Weight – Power and Ethernet cable 100 cm:** 65 g

Power specifications

These power characteristics summarize the supply power requirements for the MBR 144 OEM system.

- **Voltage:** 12 – 24 V DC
- **Power consumption:** 25 W (maximum)
- **Idle:** 6 W

Note

Use a dedicated power supply or battery to power the Radio Unit.

Environmental specifications

These environmental specifications summarize the temperature and humidity specifications for the MBR 144 OEM.

- **Enclosure material:** Aluminium
- **Operating temperature:** -30 °C – 55 °C
- **Operating humidity:** 20 – 100 % RH
- **Storage humidity:** 20 – 70 % RH
- **Ingress protection (IP) rating:** IP41

Standards and regulations

This product is in compliance with relevant product standards.

- **Radio Equipment Directive (RED) 2014/53/EU:**
 - Electromagnetic compatibility:
 - * ETSI EN 301 843-1
 - * ETSI EN 301 843-7

- * IEC 60945/EN 60945
- Radio spectrum:
 - * ETSI EN 303 276
- Product safety:
 - * IEC 61010–1/EN 61010–1
- **Environmental standards:**
 - IEC 60945/EN 60945
- **Radiation hazard standards:**
 - EN 50385
 - FCC ????

Maintenance

Topics

[Checking the product version, page 58](#)

[Repairing the Radio Unit, page 58](#)

Checking the product version

For software updates or contact with customer support it is useful to know the product version of the Radio Unit.

Procedure

- 1 Select the **System menu** button **[+]** to open the **System** menu.
- 2 Select **Site** to enter the **Configure site** page.
- 3 Under **Radios**, select the **Details** button for the radio for which you want to see the product version.
Observe that the **Status** property sheet appears. Here you can see both the serial number and the product version of the Radio Unit.
- 4 Close the dialog box by selecting **[X]** in the upper-right corner.

Related topics

[Status, page 39](#)

Repairing the Radio Unit

The Radio Unit is not designed for repair in the field. All repairs and modifications of the unit, except for installation of new software versions and system setup, must be done by qualified personnel. A failed Radio Unit should be shipped back to Kongsberg Seatex AS or other agreed service point for repair.

Related topics

[Support information, page 12](#)

Equipment handling

Topics

[Taking delivery, page 60](#)

[Unpacking and handling, page 60](#)

[Storage, page 61](#)

[Disposal, page 61](#)

Taking delivery

When the equipment arrives at its destination:

- Perform an inspection immediately to register any damage that may have occurred in transit.
- If you find any damage, both the insurance company and the shipping agent must be informed immediately.

Unpacking and handling

Care should be taken when unpacking and handling the equipment. A visual inspection should be made to check that the equipment has not been damaged during shipment and that all components and parts are present according to the packing list.

The equipment contains delicate electronic components – handle with care and avoid shocks.

The equipment can be lifted by hand.

Storage

After the equipment in the boxes has been inspected and it has been verified that no damage has occurred, the equipment must be stored in its original packaging until the time of installation. The storage premises must be dry and well protected.


Related topics

[Environmental specifications, page 56](#)

Disposal

At the end of the product lifetime, all Kongsberg Seatex AS products must be disposed of in an environmentally-friendly way.

All electrical and electronic components must be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or local authorities. The correct disposal and separate collection of your old appliance will help prevent potential negative consequences for the environment and human health. This is a precondition for reuse and recycling of used electrical and electronic equipment. For more detailed information about disposal of your old appliance, please contact your local authorities or waste disposal service.

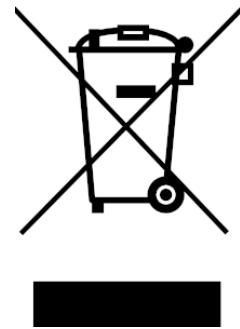

All disposal of mechanical, electromechanical, electronic and chemical waste - including all types of batteries - must take place according to national and international rules and regulations. Observe the relevant Waste Electrical and Electronic Equipment (WEEE) regulations.

The equipment can be returned to Kongsberg Seatex AS if there is no local WEEE collection. The equipment is marked with this waste pictogram.

Index

A	
about	
maintenance	5
product license	5
purpose of this manual	5
target audience	5
Add radios to site dialog box	
description	35
adding third party equipment	26
additional required items	
not provided with the delivery	8
antenna array	
distributed	47
linear	47
quadratic	47
antennas	
how to arrange	47
arranging the antennas	47
audience	
this manual	5
B	
basic items	
provided with the delivery	7
block	
diagram	7
book	
purpose	5
target audience	5
C	
characteristics	
performance	54
checking individual site status	28
checking network status	28
checking system status	28
choosing display colour palette	29
colour palette	
how to choose	29
configuration	
set up radio site for operation	17
Configuration guide dialog box	
description	33
Start button	34
Configure site dialog box	
description	36
connecting	
external devices	49
Create site dialog box	
description	34
creating new network	
how to	22
D	
description	
Add radios to site dialog box	35
Configuration guide dialog box	33
Configure site dialog box	36
Create site dialog box	34
Edit current network dialog box	40
Join network dialog box	44
Local radio site status dialog box	45
Network status dialog box	45
New network dialog box	41
Radio status dialog box	39
Remote radio site status dialog box	45
Resource management dialog box	43
system	6
System menu	32
System status dialog box	45
Third party equipment dialog box	38
Welcome page dialog box	32
dialog box	
Add radios to site dialog box description	35
Configuration guide dialog box description	33
Configure site dialog box description	36
Create site dialog box description	34
Edit current network dialog box description	40
Join network dialog box description	44
Local radio site status dialog box description	45
Network status dialog box description	45
New network dialog box description	41
Radio status dialog box description	39
Remote radio site status dialog box	
description	45
Resource management dialog box	
description	43
System status dialog box description	45
Third party equipment dialog box	
description	38
Welcome page dialog box description	32
dialog boxes	
System menu	32
dimensions	
radio unit	53
display	
colour palette	29
how it is organised	30
display organisation	30
disposal of equipment	61
distributed antenna array	47
drawing	
system diagram	7
E	
Edit current network dialog box	
description	40
editing existing radio network	25
enabling contact with Radio Unit	14
environmental specifications	
radio unit	56
equipment	
disposal	61
storage	61
taking delivery	60
unpacking	60

equipment handling.....	60	interference	
Ethernet and power cable		radio frequency.....	9
pin layout	50	internet	
Ethernet interface		network security	11
network adapter	15	IP address	
		network adapter	15
F		IP Address	
FCC identification number	8	network adapter	15
frequency		J	
radio frequency interference.....	9	join network	
specifications	55	how to	24
functional		Join network dialog box	
diagram.....	7	description	44
functions			
System menu	32	K	
G		Kongsberg Seatex AS	
guarantee		support	12
restrictions	8	L	
H		license	
handling		product license	5
waste.....	61	radio frequency.....	8
hazard		linear antenna array.....	47
radiation hazard	10	Local radio site status dialog box	
high voltage		description	45
safety rules.....	11	location	
how to		radio unit.....	47
add or remove third party equipment	26	M	
arrange the antennas.....	47	main items	
check individual site status	28	provided with the delivery.....	7
check network status	28	maintenance	5
check system status	28	manual	
connect external devices	49	purpose	5
create new radio network	22	target audience	5
edit existing network	25	menu	
enable contact with Radio Unit	14	System menu description	32
find product version	58	System menu functions and dialog boxes	32
install the radio unit	49	N	
join a radio network	24	network	
repair radio unit	58	how to edit existing network	25
set to work	51	network adapter	
set up radio site for operation	17	IP Address	15
turn on the Radio Unit	13	IP address for transceiver communication.....	15
how to open		Subnet mask	15
System menu	32	network security	11
I		network status	
identification		how to check.....	28
FCC.....	8	Network status dialog box	
Industry Canada (IC)	8	description	45
illustration		New network dialog box	
system diagram.....	7	description	41
individual site status		O	
how to check.....	28	open	
Industry Canada (IC) identification number.....	8		
information			
support	12		
installing			
radio unit.....	49		

System menu	32	environmental specifications	56
operation		how to install	49
creating new radio network	22	how to repair	58
joining a radio network	24	location	47
procedures	13	power specifications	56
operational principles	30	Radio Unit	
P		how to enable contact	14
pages		how to turn on	13
System menu	32	reader	
performance		this manual	5
specifications	54	regulations	
pin layout		product regulations	56
Ethernet and power cable	50	Remote radio site status dialog box	
power		description	45
specifications	56	removing third party equipment	26
power specifications		repairing	
radio unit	56	radio unit	58
procedure		required items	
adding or removing third party equipment	26	not provided with the delivery	8
checking individual site status	28	Resource management dialog box	
checking network status	28	description	43
checking system status	28	restrictions	
connect peripheral equipment	49	guarantee	8
creating new radio network	22	S	
editing existing network	25	scope of supply	
enabling contact with Radio Unit	14	basic items	7
how to check product version	58	required items not provided with the delivery	8
how to choose colour palette	29	security	
interfacing external devices	49	network	11
joining a radio network	24	setting to work	
setting to work	51	procedures	51
setting up radio site for operation	17	specifications	
procedures		environmental	56
operation	13	frequency	55
product		performance	54
regulations	56	power	56
standards	56	radio frequency	55
product license	5	standard items	
product version		provided with the delivery	7
how to find	58	standard tools	
publication		installation of system units	47
purpose	5	standards	
target audience	5	product standards	56
purpose		Start button	
this manual	5	Configuration guide dialog box	34
Q		status of individual site	
quadratic antenna array	47	how to check	28
R		status of network	
radiation hazard	10	how to check	28
radio frequency		status of system	
interference	9	how to check	28
license	8	storage of equipment	61
specifications	55	Subnet mask	
radio site		network adapter	15
setup	17	support	
Radio status dialog box		Kongsberg Seatex AS	12
description	39	support information	12
radio unit		system	
dimensions	53	description	6
		diagram	7
		System menu	
		description	32
		functions and dialog boxes	32

how to open.....	32
system status	
how to check.....	28
System status dialog box	
description	45
T	
taking delivery of equipment.....	60
target audience	
this manual.....	5
third party equipment	
how to add or remove	26
Third party equipment dialog box	
description	38
this manual	
purpose	5
target audience	5
tools	
installation of system units	47
turning on the Radio Unit.....	13
U	
unpacking equipment.....	60
W	
waste handling	61
WEEE	61
Welcome page dialog box	
description	32

©2020 Kongsberg Seatex