


Instruction Manual for 5-121BS MURS BASE STATION

LCD Display:

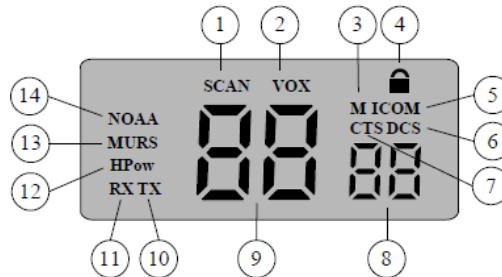

1. Channel Scanning;
2. VOX;
3. Monitoring;
4. Key Lock;
5. Intercom;
6. CDCSS code ;
7. CTCSS code;
8. Subcode;
9. Channel;
10. Transmitting;
11. Receiving;
12. High Power;
13. MURS;
14. NOAA;

MURS Main Display:



NOAA Display:



Buttons:



DCS Code 1---20 ----- 20 buttons (Preset: 1= DCS1, 2=DCS2...)

ON/OFF ----- ON/OFF, CONFIRMATION

NOAA ----- NOAA

CALL ----- CALL / MURS

MONITOR ----- MONITOR

LISTEN-IN ----- LISTEN-IN

MENU ----- MENU

UP ----- UP

DOWN ----- DOWN

INTERCOM ----- INTERCOM

PTT ----- PTT

ON / OFF:

Press ON/OFF button for 2 seconds.

Key Lock/Unlock:

Lock – Press Menu for 2 seconds, LCD shows '🔒', MENU/UP/DOWN buttons are locked;

Unlock -- Press Menu for 2 seconds, 🔒 disappears.

MURS/NOAA:

1. NOAA----- In MURS Mode, press NOAA button to enter NOAA mode, press NOAA button again to choose NOAA channel; Or you can press Menu, then press UP/DOWN to choose NOAA channel under NOAA mode, nA stands for NOAA channel 1 to 10;

MURS ----- Press CALL button to exit NOAA and enter MURS mode.

NOAA Frequency:

- 01=162.550
- 02=162.400
- 03=162.475
- 04=162.425
- 05=162.450
- 06=162.500
- 07=162.525

Channel Selecting:

2. Press MENU until the numbers in  or



are flashing;

3. Press UP or DOWN to select a channel, US stands for MURS channel 1 to 5; Press ON/OFF to confirm and return to the main display.


Channel Scan:



1. Press MENU to enter






2. Press FUNCTION TO enter MURS from 1 to 5 or

NOAA  from 1 to 10 and scan the channels;

- When signal is found, it will stop until the signal disappears or press UP or DOWN to continue; It will scan the channel first and then subcode;
- Whether there is a signal or not, press MENU or ON/OFF button to stop scanning and return to the main display;
- When signal is found, press ON/OFF button to save the channel/subcode, stop scanning, and return to the main display.

Subcode:


- Press MENU until  or  is flashing;
- Press UP or DOWN to select tC(CTCSS) or dC(CDCSS);

- Press MENU to see the numbers in  or

 flashing;


- Press UP or DOWN to select tC(CTCSS) 0 to 38 or dC(CDCSS)0 to 83;
- Press ON/OFF to confirm and return to the main display.

VOX:

- Press MENU to enter , OF or 01 or 02 or 03 flashing;
- Press UP or DOWN to select ON or OF the VOX, the sensitivity has 3 levels;
- Press ON/OFF to confirm and return to the main display.


CALL Tune:



1. Press MENU to enter , 01 up to 06, or OF is flashing;
2. Press UP or DOWN to choose 01 to 06 six different call tones or OF to stop the call function;
3. Press ON/OFF to confirm and return to the main display.


Key Tone:



1. Press MENU to enter , On or OF flashing;
2. Press UP or DOWN to select On or OF the key tone;
3. Press ON/OFF to confirm and return to the main display.


Roger Beep:



1. Press MENU to enter , On or OF flashing;
2. Press UP or DOWN to ON or OFF the Roger Beep;
3. Press ON/OFF to confirm and return to the main display.

HI-POWER:



1. Press MENU to enter , On or OF is flashing;
2. Press UP or DOWN to On or OF the HI Power;
3. Press ON/OFF to confirm and return to the main display.

DCS Code Setting of Intercom:



1. Press MENU to enter .



2. Press one of the 20 intercom buttons, for example, press 1



or 20

3. Press UP or DOWN to choose DCS code from 1---83 (this code is the DCS code of another unit you want to talk to);




4. Press ON/OFF to save, the display shows

5. If you want to continue to set up other intercom buttons, repeat the above step 2、3、4;

6. Press ON/OFF to confirm and return to the main display;

Volume Control:

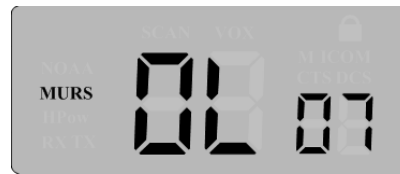

Volume Up -----Press UP to turn up the volume, maximum 07 ;

Volume Down-----Press DOWN to turn down the volume, minimum is 01;

Fast Scanning

When you press the UP or DOWN for more than 1 second to select Channel/subcode/Volume, the number will increase or decrease automatically.

Memory

Press ON/OFF to save the setup. The memory is not lost when you turn off the unit.

LCD Backlight

Press any button to activate the backlight for 5 seconds;

Auto Return to the Main Display

Press Menu and stop for over 10 seconds, the display will return to the main display automatically;

CALL

Press CALL, the unit will send signal out and LCD shows **TX**;

TALK

Press PTT to talk and release to listen.

VOX

When VOX is on, the LCD shows“**VOX**”, the voice will be transmitted automatically without pushing the PTT button;

Channel Busy Indicator

When the channel is occupied by others (no matter the subcode is same or not), LED is on and the LCD shows “**RX**”;

Relay On/Off

This unit can work with old MURS TX boards. When it receives the signal from the old MURS TX board (two units with same channel and subcode), the relay is activated and it gives alarm (the voice chip). When there is no signal received, the relay will be off.


LISTEN-IN :




1. Press LISTEN-IN
2. Press any of DCS1---20 to listen to any unit in the intercom system. For example, press





3. Wait for 3 seconds until the display shows  which means sending out the LISTEN-IN instruction;
4. When DCS20 receives the instruction, it transmits for 15 seconds automatically, the receiver



will show  for 15 seconds. If there is no signal, it will stop receiving after 5 seconds.

Intercom Functions:

All units in a group must be set the same channel and set in DCS mode.

20 DCS buttons, each DCS button can be set with a DCS code (1—83);

Press DCS buttons (DCS codes are corresponding with other units) to talk to other units;

If there is no communication over 10 seconds, the unit will return to its own DCS code.

For example, my unit is DCS10, I press DCS1 to talk with DCS1. In this mode, my unit has changed from DCS 10 to subcode DCS1 automatically in order to talk to DCS1. When there is no signal over 10 seconds, my unit will return to subcode DCS10.

For example, unit A is channel 5, DCS 83, unit B is channel 5, DCS 82. Unit A sets DCS button 1 the DCS code 82. Then you press DCS button 1 of Unit A, Unit A will change its subcode to 82 automatically in order to talk to B. When there is no signal over 10 seconds, unit A will return to its own subcode which is 83.

Talk to All




1. Press INTERCOM, the unit will activate all other units in the group and made the other units change to no subcode;



2. Wait for 3 seconds until the display shows which means you can talk to all units (DCS1 – DCS20);
3. Press PTT to talk and release PTT to listen;
4. If there is no communication over 10 seconds, all units will return to their original DCS code.
Remark: Only 1 unit transmitting at one time.

Talk with some Units

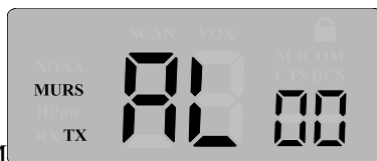

1. Press INTERCOM;



2. Wait for about 3 seconds, when the display shows Press any DSC1 ---20 buttons you want to talk to , for example, press



DCS1



and DCS20;

3. Press PTT to talk with 2 units and release PTT to listen;
4. If there is no communication over 10 seconds, all units will return to its original DCS code.
Remark: Only 1 unit transmitting at one time.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

WARNING:

MODIFICATION THIS DEVICE TO RECEIVE CELLULAR RADIOTELEPHONE SERVICE SIGNALS IS PROHIBITED UNDER FCC RULES.

Any modification to a scanning receiver to receive transmissions from the Cellular Radiotelephone Service frequency bands voids the certification of the scanning receiver, regardless of the date of manufacture of the original unit. In addition, the provisions of §15.23 shall not be interpreted as permitting modification of a scanning receiver to receiver Cellular Radiotelephone Service transmissions.

THE END