

xN930 M.2 Hardware User Guide

1VV0301078 Rev.6 – 2013-11-12

Primary



APPLICABILITY TABLE

PRODUCT
LN930
LN930-AP
HN930

Preliminary



SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Notice

While reasonable efforts have been made to assure the accuracy of this document, Telit assumes no liability resulting from any inaccuracies or omissions in this document, or from use of the information obtained herein. The information in this document has been carefully checked and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies or omissions. Telit reserves the right to make changes to any products described herein and reserves the right to revise this document and to make changes from time to time in content hereof with no obligation to notify any person of revisions or changes. Telit does not assume any liability arising out of the application or use of any product, software, or circuit described herein; neither does it convey license under its patent rights or the rights of others.

It is possible that this publication may contain references to, or information about Telit products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that Telit intends to announce such Telit products, programming, or services in your country.

Copyrights

This instruction manual and the Telit products described in this instruction manual may be, include or describe copyrighted Telit material, such as computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and its licensors certain exclusive rights for copyrighted material, including the exclusive right to copy, reproduce in any form, distribute and make derivative works of the copyrighted material. Accordingly, any copyrighted material of Telit and its licensors contained herein or in the Telit products described in this instruction manual may not be copied, reproduced, distributed, merged or modified in any manner without the express written permission of Telit. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit, as arises by operation of law in the sale of a product.

Computer Software Copyrights

The Telit and 3rd Party supplied Software (SW) products described in this instruction manual may include copyrighted Telit and other 3rd Party supplied computer programs stored in semiconductor memories or other media. Laws in the Italy and other countries preserve for Telit and other 3rd Party supplied SW certain exclusive rights for copyrighted computer programs, including the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Telit or other 3rd Party supplied SW computer programs contained in the Telit products described in this instruction manual may not be copied (reverse engineered) or reproduced in any manner without the express written permission of Telit or the 3rd Party SW supplier. Furthermore, the purchase of Telit products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Telit or other 3rd Party supplied SW, except for the normal non-exclusive, royalty free license to use that arises by operation of law in the sale of a product.



Usage and Disclosure Restrictions

License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

Copyright © Telit Communications S.p.A. 2011.

Preliminary



8.2	Electrical Parameters - Host Interface Signals	57
8.3	Power Consumption.....	58
9	Other Information	60
9.1	EMI/EMC and Platform Noise	60
9.2	Platform Noise Mitigation - Adaptive Clocking	60
9.3	Thermal Monitoring	60
9.4	Seamless Roaming / Wifi Offload	61
9.5	Conducted Transmit Power	61
9.6	Conducted Receiver Sensitivity.....	61
9.7	Antenna Recommendations	62
10	WWAN Card Type 3042-S3-B.....	64
10.1	Mechanical Dimensions	64
10.2	Land Pattern	66
10.3	Antenna Connector Locations	68
11	Safety Recommendations.....	69
12	Conformity assessment issues.....	70
12.1	1999/5/EC Directive	70
12.2	CE RF Exposure Compliance.....	72
12.3	R&TTE Regulation:.....	73
13	FCC/IC Regulatory notices	74
13.1	Modification statement	74
13.2	Interference statement.....	74
13.3	FCC Class B digital device notice	74
13.4	Radiation Exposure Statement.....	75
13.5	End Product Labeling	75
14	Document History	76



<http://www.telit.com>

To register for product news and announcements or for product questions contact Telit Technical Support Center (TTSC).

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.

1.5 Document Organization

This document contains the following chapters (sample):

[“Chapter 1: “Introduction”](#) provides a scope for this document, target audience, contact and support information, and text conventions.

[“Chapter 2: “Chapter two”](#) gives an overview of the features of the product.

[“Chapter 3: “Chapter three”](#) describes in details the characteristics of the product.

“Chapter 6: “Conformity Assessment Issues” provides some fundamental hints about the conformity assessment that the final application might need.

“Chapter 7: “Safety Recommendation” provides some safety recommendations that must be follow by the customer in the design of the application that makes use of the AA99-XXX.

1.6 Text Conventions



Danger – This information MUST be followed or catastrophic equipment failure or bodily injury may occur.



Caution or Warning – Alerts the user to important points about integrating the module, if these points are not followed, the module and end user equipment may fail or malfunction.



Tip or Information – Provides advice and suggestions that may be useful when integrating the module.

All dates are in ISO 8601 format, i.e. YYYY-MM-DD.

1.7 Related Documents

- TBA



Preliminary



Table 1 M.2 Module - General Feature

Feature	Description	Additional Information	M.2 module			
			HN930	LN930-AP	LN930	
Mechanical	M.2 Card Type 3042 Slot B	30 mm x 42 mm Pin count: 75 (67 usable, 8 slot)	x	x	x	
Operating Voltage	3.3 V Typical	-	x	x	x	
Operating Temperature	-10°C to +55°C – Normal +55°C to +70°C – Extended	Extreme - This is the surrounding air temperature of the module inside the platform when the card is fully operating at worst case condition	x	x	x	
Application Interface (75 pin card)	USB 2.0 High-speed	Interprocessor Communications	x	x	x	
	USIM w/ Card Detect	SIM_CLK, SIM_RESET, SIM_IO, SIM_PWR, SIM_DETECT	x	x	x	
	M.2 Control	Full_Card_Power_On_Off		x	x	x
		Reset#		x	x	x
		W_DISABLE#		x	x	x
		LED #1		x	x	x
		DPR (Body SAR)		x	x	x
		Wake on WWAN		x	x	x
		GNSS Disable		x	x	x
	Global Positioning (GPS/ GLONASS)	I2C_SCL, I2C_SDA, I2_IRQ, CLKOUT, TX_BLANKING		x	x	x
Antenna Tuning	(4) GPO (RF Transceiver)		-	x	x	
RF Coexistence	(3) GPIO		-	x	x	
RF Antenna	Main & Diversity/ GNSS	Separate coax connectors	x	x	x	
Debug	JTAG	-	x	x	x	
	ETM11	-	-	x	x	
	MIPI PTI	-	-	x	X	

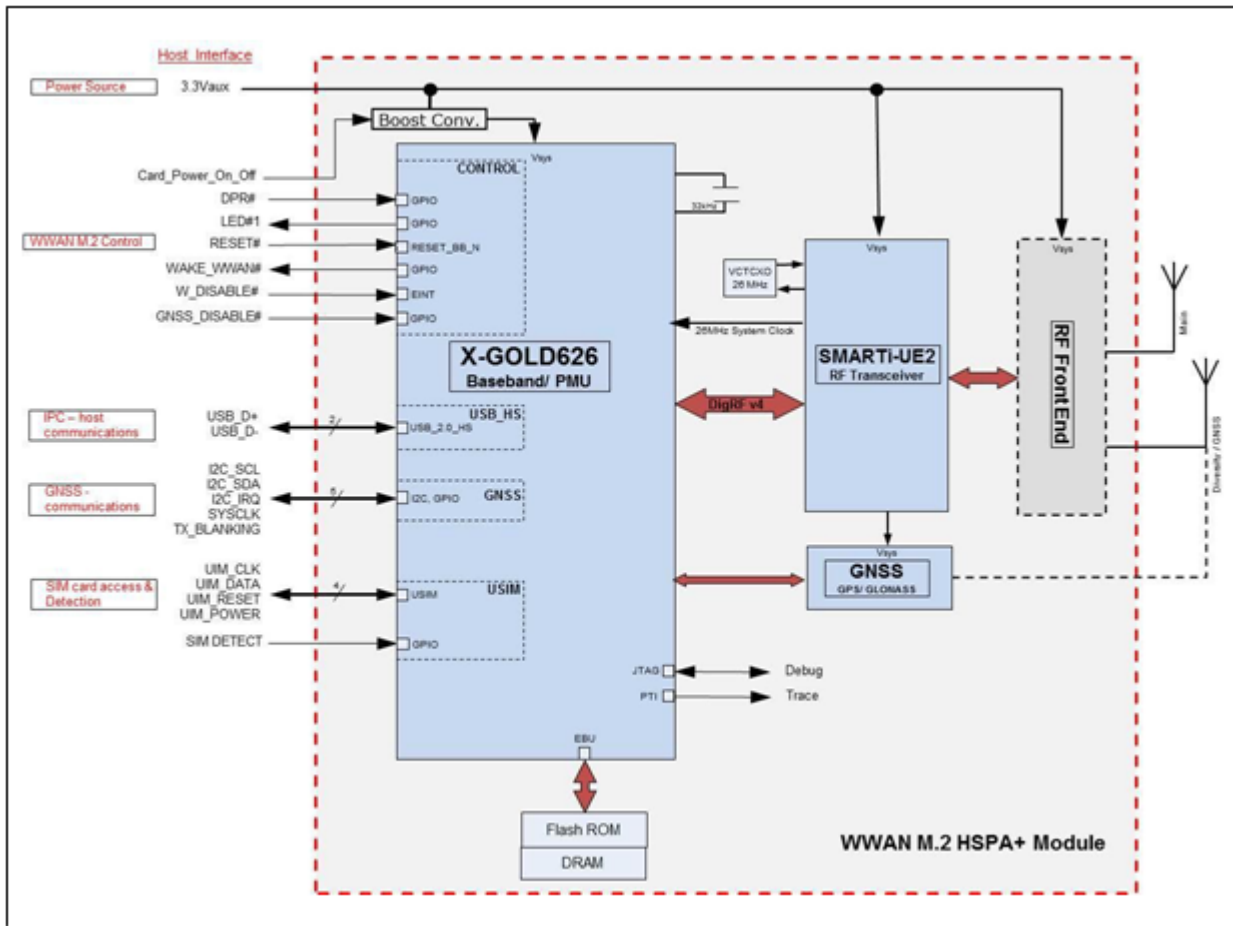


Figure 1 M.2 HSPA+ Block Diagram

Preliminary



2.2.2 M.2 LN930-AP Module

The M.2 APAC LTE module is another Intel design based on the XMM™7160 modem platform. The module has a targeted area of operation in the Asia Pacific rim and offers 3G and LTE datacard functionality, 2G Functionality is not supported.

The M.2 APC LTE module includes support at the 75 pin application interface for M.2 Control, USB 2.0 HS, GNSS, USIM and Antenna Tuning.

A block diagram of the M.2 APAC LTE module is shown in Figure 2.

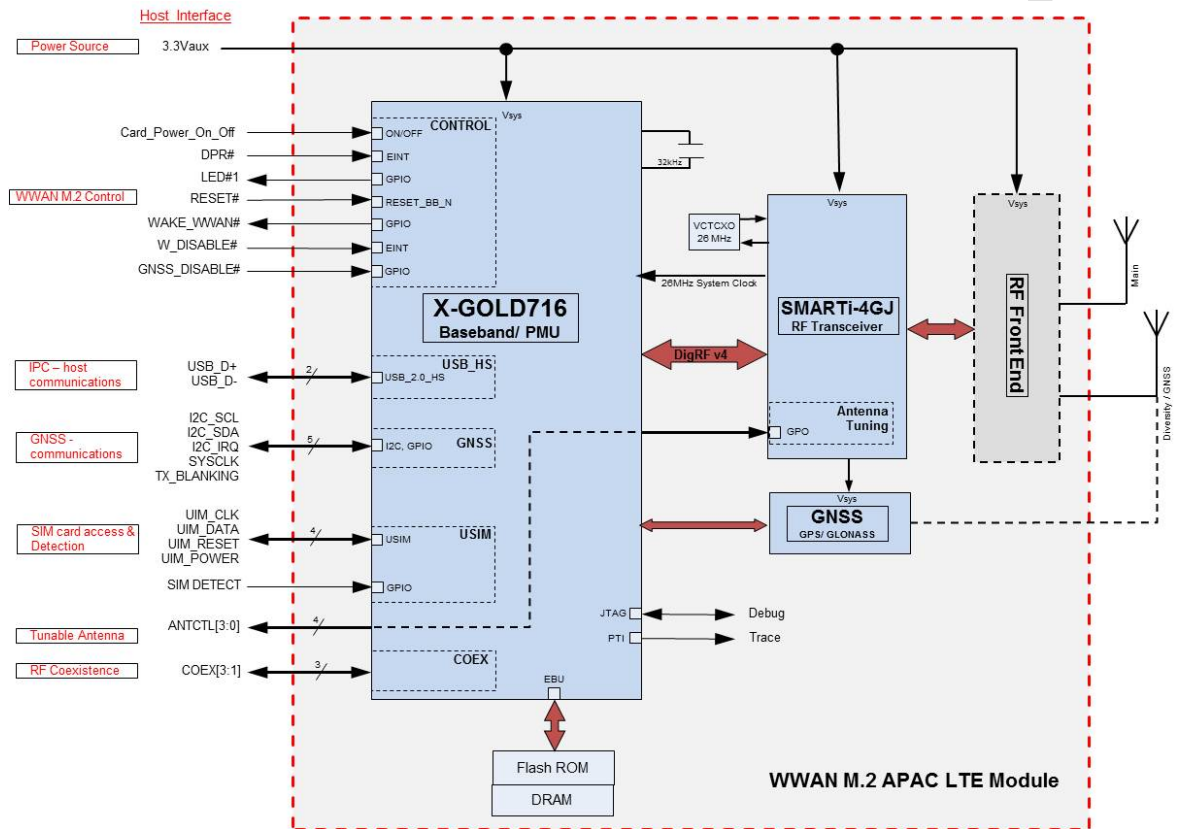


Figure 2 M.2 APAC LTE Module Block Diagram

2.2.3 M.2 LN930 Module

The M.2 LTE module is based on Intel’s XMM™7160 modem platform. The M.2 LTE module is a triple-mode (2G, 3G, and 4G) 3GPP release 9 modem providing datacard functionality.

The M.2 LTE module includes support at the 75 pin application interface for M.2 Control, USB 2.0 HS, GNSS, USIM and Antenna Tuning.

A block diagram of the M.2 LTE module is shown in Figure 3.

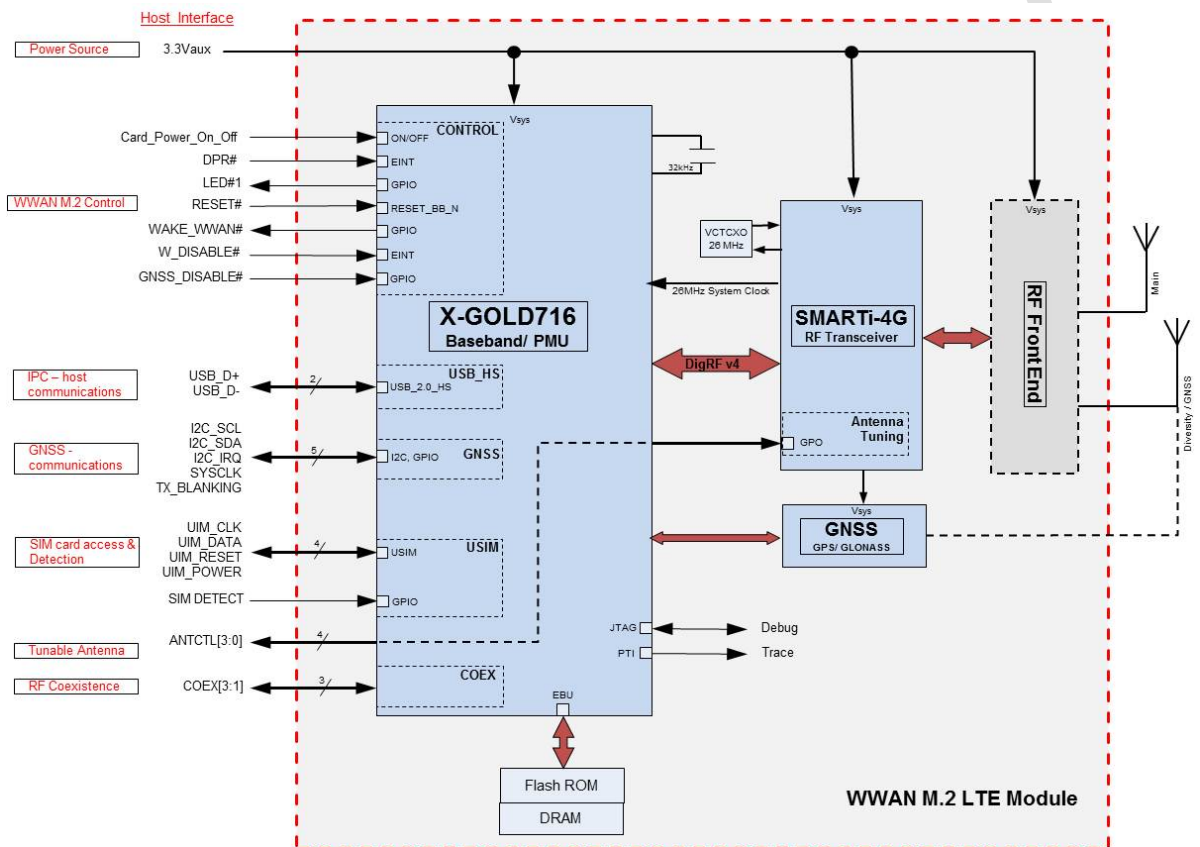


Figure 3 M.2 LTE Module Block Diagram

A more detailed interconnect diagram of the RF Engine utilized on the M.2 LTE Module is shown in Figure 4.

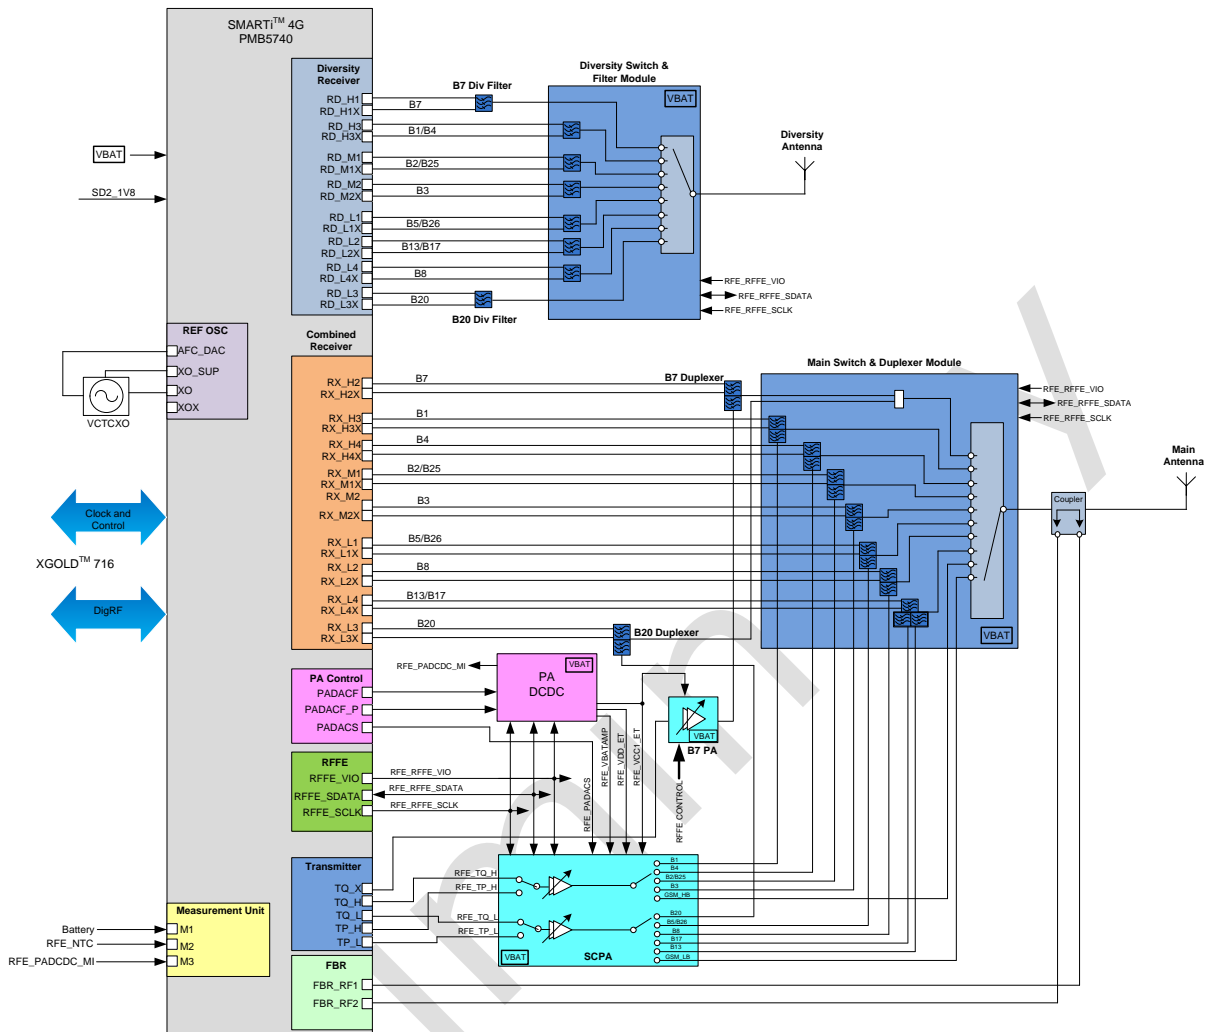


Figure 4 Detailed Interconnection of M.2 LTE Modem RF Engine

2.3 Host Interface Signals

This section describes the signals available to the host processor at the 75 pin application interface. Eight signals are eliminated by the notch on the host connector, leaving 67 usable signals. A diagram of the M.2 module identifying the 75 pin interface is shown in Figure 5.

Note that the M.2 module has all components mounted on the top side. Odd pin numbers are on the top side while even pins on the bottom side.



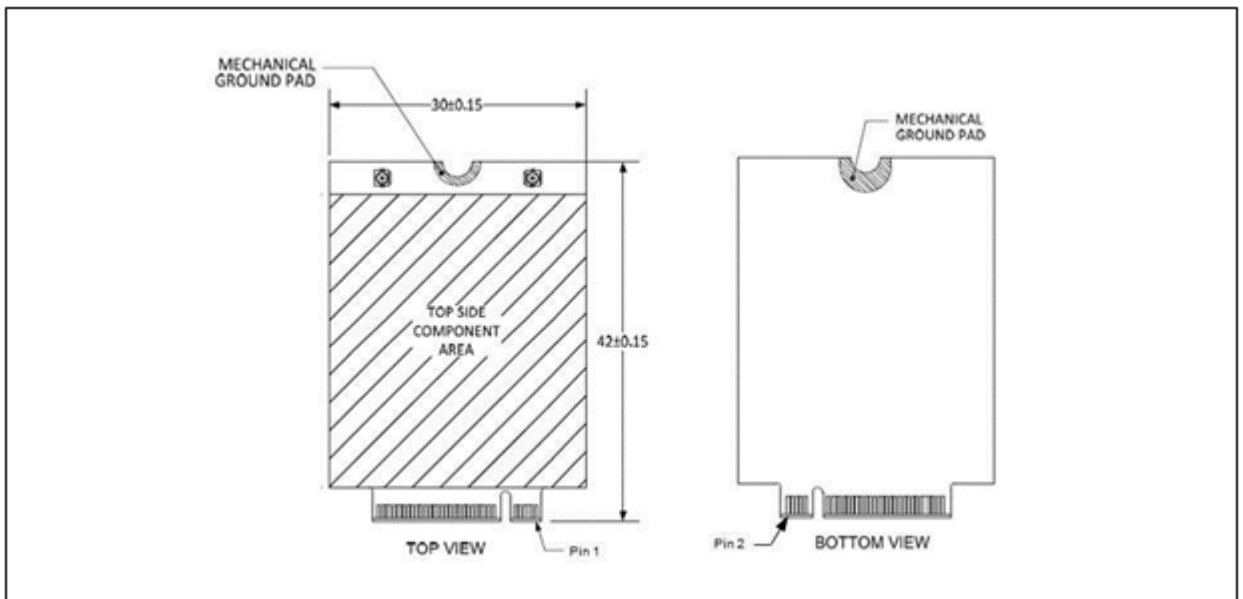


Figure 5 PCI Express M.2 Module Interface

A complete description of all interface signals available at the host interface is listed in Table 4. Some features, such as GNSS and Antenna Tuning, are not available on every M.2 module. On those modules, the signals at the application interface are not connected on the M.2 module.

Table 4 M.2 Host Interface Signals

Pin	Signal Name	I/O	Description	Supply
1	CONFIG_3	O	Presence Indication: WWAN M.2 Connects to GND internally	-
2	3.3V	P	M.2 Supply Pin 3.3 V	3.3 V
3	GND	P	Ground	-
4	3.3V	P	M.2 LTE Supply Pin 3.3 V	3.3 V
5	GND	P	Ground	-
6	Card_Power_On_Off	I	Control signal to power On/Off M.2.	1.8 V
7	USB D+	IO	USB 2.0 HS DPLUS Signal	1.8 V/2.9 V
Pin	Signal Name	I/O	Description	Supply
8	W_DISABLE#	I	Active low signal to Disable Radio Operation	3.3 V

3.2 (U)SIM Interface

An external SIM Card socket is assumed to be mounted on the system board. The M.2 module will access the SIM card through its USIM interface.

The USIM interface is compatible with the ISO 7816-3 IC Card standard on the issues required by the GSM 11.12 and GSM 11.18 standard.

Both 1.8 V and 3 V SIM Cards are supported.

A few comments on the SIM_DETECT signal

1. An external pull-up resistor is not needed on SIM_DETECT. An internal pull-up resistor on X-GOLD™ baseband IC will be used.
2. When a SIM is inserted, SIM_DETECT will be high.
3. When a SIM is removed or not present, SIM_DETECT will be low.
4. The host does not need to drive this signal. It can be tri-stated.

Table 6 (U)SIM Interface Signals

Signal Name	Description	Pin	Direction (WWAN)	Voltage Level
UIM_CLK	Clock SIM Card	32	O	1.8 V/2.9 V
UIM_DATA	Input/ Output SIM Card	34	I, O	1.8 V/2.9 V
UIM_RESET	Reset signal for SIM card	30	O	1.8 V/2.9 V
USIM_PWR	1.8 V/3 V Supply for SIM Card	36	O	1.8 V/2.9 V
SIM Detect	SIM Card Detection	66	I	1.8 V

3.3 GNSS Interface

Some M.2 modules incorporate GPS and GLONASS receivers with aGPS to support Global Positioning.

For M.2 modules that feature GNSS support, see Table 1, the M.2 module incorporates the CG1960 Single-Chip GNSS Device, which is a complete receiver for simultaneous reception and processing of both GPS and GLONASS signals. It includes LNA, mixer, bandpass filter, VCO, ALC, fractional-N frequency synthesizer, digital tunable filters, PGA stage, and multi-bit ADCs. A UART interface is used by the X-GOLD™ Communications Processor on the M.2 module to control the GNSS device. The solution offers best-in-class acquisition and tracking sensitivity, TFF and accuracy.

The GNSS device supports several different power management modes which gives the lowest possible energy usage per fix. The pre-calculated location data will be sent over the USB host interface. In addition, the M.2 will produce GPS data when the system is in sleep mode via an I2C interface to allow for applications to be available in low power modes.



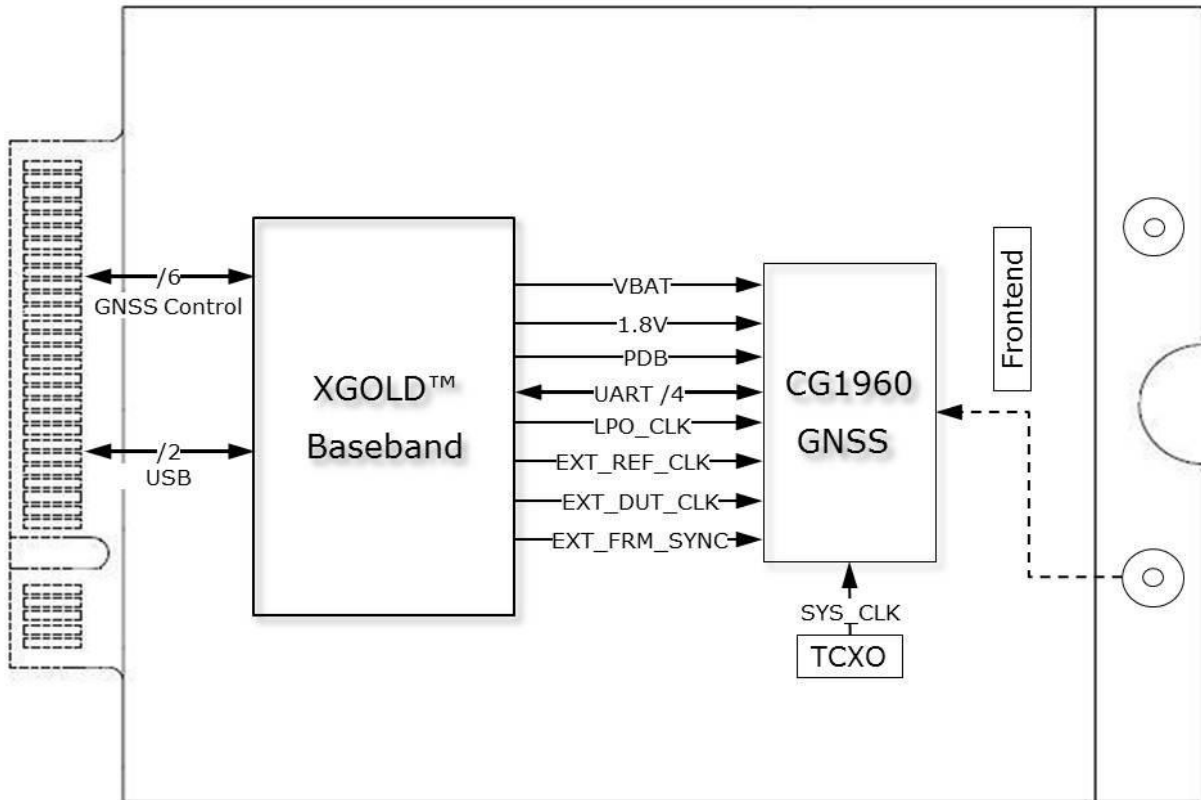


Figure 6 GNSS Connections and Interface

A description of the signals between the X-GOLD™ baseband and the CG1960 interface are defined in [Table 7](#).

PREMIUM



Table 7 X-GOLD™ Baseband to GNSS Interface Signals

Signal	Description
VBAT	Battery Supply
1.8V	1.8 V Supply provided from X-GOLD™ Baseband
UART	The data and control I/F between the X-GOLD™ baseband and the GNSS device is over a 4 wire UART interface which include CTS/RTS handshaking.
PDB	X-GOLD™ baseband uses this signal to control Power-on/reset of the GNSS device
LPO_CLK	X-GOLD™ baseband provides a permanently active 32 kHz clock to the GNSS device
EXT_REF_CLK	X-GOLD™ baseband provides a 26 MHz clock to the GNSS device for frequency aiding.
EXT_DUT_CLK	X-GOLD™ baseband provides this signal to notify the GNSS device of that GSM Tx activity (PA Blanking)
EXT_FRM_SYNC	X-GOLD™ baseband provides a strobe signal to the GNSS device to allow fine time assistance based on 3GPP cell timing.

The GNSS signals available to the host at the WWAN module interface to support GNSS operation are shown in Table 8.

Table 8 GNSS Module Interface Signals

Signal Name	Description	Pin	Direction (WWAN)	Voltage Level
I2C_SCL	I2C Clock	40	I, O	1.8 V
I2C_SDA	I2C Data	42	I, O	1.8 V
I2C_IRQ	I2C IRQ - Interrupt signal	44	I	1.8 V
SYSCLK	Synchronization Clock	46	I	1.8 V
TX_BLANKING	TX Blanking – Active High when M.2 is transmitting.	48	O	1.8 V
GNSS_DISABLE#	GNSS Disable <ul style="list-style-type: none"> High: GNSS function is determine by AT command. Low: GNSS function is disabled. 	26	I	1.8 V

3.4 System Control Interface

The system control interface is used to control the power-up and reset of the WWAN module. There are additional control signals to disable the radio, drive an LED as a status indicator, an output to wake the host processor, and an input for body SAR.



3.4.1 Power On & Reset

The host processor has two signals that can be used to power on and reset the modem. Powering off the modem is accomplished through an AT command.

Table 9 Power-on & Reset Signals

Signal Name	Description	Pin	Direction (WWAN)	Voltage Level
Card_Power_ON_OFF	<p>Modem power on: For Tablet based designs only; this signal is used for power on-off control of X-GOLD™ Baseband IC.WWAN M.2 module</p> <ul style="list-style-type: none"> Logic Low: M.2 Off Logic High: WWAN M.2 Power On <p>This pin has an internal pull-down resistor.</p> <p>Ultrabook designs: Ultrabook host should deliver a 1.8V signal to turn on the module. If 1.8V is not feasible, recommend using a 47k series resistor connected to 3.3V.</p>	6	I	1.8 V
RESET#	<p>Reset the WWAN system. For Tablet based designs, this signal is used to reset the module.</p> <ul style="list-style-type: none"> Asynchronous, active low signal. When active, the WWAN M.2 module will be placed in a power-on reset condition. <p>Ultrabook designs, this signal is not used.</p>	67	I	1.8 V

3.4.2 Host Radio Disable Operation

An additional control signal is used to disable the radio on the module.

Signal W_DISABLE# is provided to allow users to disable, via a system-provided switch, the add-in card's radio operation in order to meet public safety regulations or when otherwise desired. Implementation of this signal is required for systems and all add-in cards that implement radio frequency capabilities.

The W_DISABLE1 signal is an active low signal that when driven low by the system shall disable radio operation. The assertion and de-assertion of the W_DISABLE# signal is asynchronous to any system clock. All transients resulting from mechanical switches need to be de-bounced by the host system and no further signal conditioning will be required. When the W_DISABLE# signal is asserted, all radios attached to the add-in card shall be disabled. When the W_DISABLE# is not asserted or in a high impedance state, the radio may transmit if not disabled by other means such as software.

The operation of the W_DISABLE# Signal is:



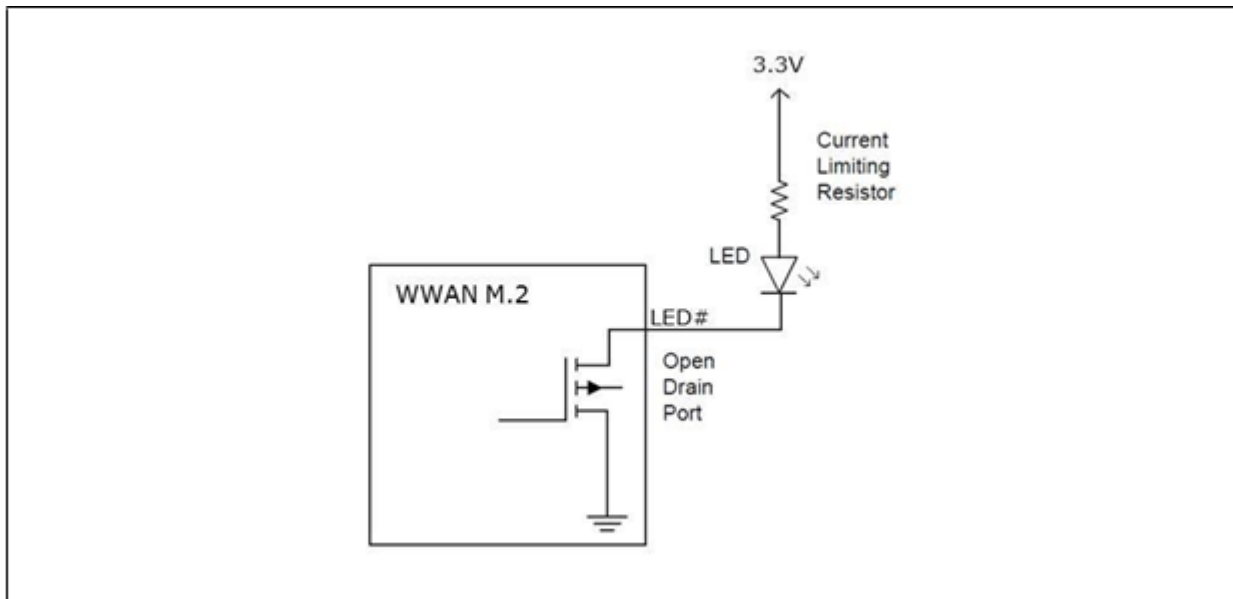


Figure 7 Typical LED Connection

The indication protocol for the LED is shown in Table 13.

Table 13 LED State Indicator

State	Definition	Characteristics	WWAN
OFF	The LED is emitting no	-	Not
ON	The LED is emitting light in a stable non-flashing	-	Powered registered but not transmitting or
Slow Blink	The LED is flashing at a steady but slow	250 ±25% ms ON period. 0.2 ±25% Hz blink rate	Activity proportional to transmitting/ receiving
Intermediate Blink	The LED is flashing intermittently proportional to the activity on the interface	50% duty cycle, 3 Hz minimum blink rate, 20 Hz maximum blink rate	-

3.4.4 Wake on WWAN Signal

An output signal is available to wake the host system, WWAN_N. This is an active low, open-drain output.

This output requires a pull-up resistor on the host system.



Table 14 Wake on WWAN Signal

Signal Name	Detailed Description	Pin	Direction (WWAN)	Voltage Level
WAKE_WWAN#	Used by M.2 module to wake the host. Active Low, Open Drain output	23	O (OD)	3.0 V

3.4.5 Dynamic Power Reduction

With the arrival of Tablets and Ultrabook™ platforms where the antenna is in the base of the unit, there is a significant issue passing Specific Absorption rate (SAR) requirements for certification.

The WWAN M.2 module has the ability to configure RF TX power levels based on proximity sensor input from the host.

A WWAN M.2 power control API is available to the host to dynamically reduce RF transmit power levels of the WWAN module based on proximity sensor input from the host.

The DPR# (Dynamic Power Reduction) signal is available on the host interface to assist in meeting regulatory SAR (Specific Absorption Rate) requirements for RF exposure.

Preliminary



3.5 Tunable Antenna Control Interface

In notebook platforms, since the WWAN antennas are usually located on the top of the lid, there is a long RF mini-coax cable that can be up to 60 cm long between the antenna and WWAN module, it is preferred to use switches/tunable components directly on the antenna for antenna band switching/tuning to improve efficiency.

On select WWAN M.2 modules, four (4) GPOs are available on the host interface that can be connected to an external antenna switch, to load the antenna with different impedances, configuring the different frequency responses for the main antenna. A sample block diagram depicting the antenna control signal connections to the antenna switch is shown in Figure 8 Intel’s current antenna control solution offers an open loop control solution. The WWAN M.2 modem expects the AP to provide the antenna profile detection and through a pre-defined API, notify the WWAN M.2 modem with the correct antenna profile. The WWAN M.2 modem then applies the proper antenna profile data accordingly.

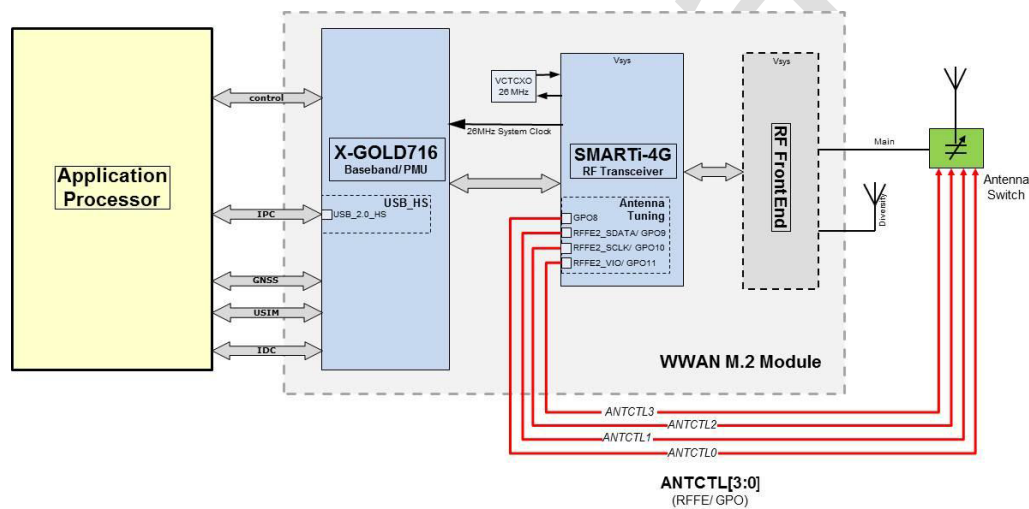


Figure 8 Antenna Control – Connections Detail

The electrical specification for the antenna control GPIOs are shown in Table 16.

Table 16 Tunable Antenna Control Signals

Signal Name	Description	Smarti™ 4G Signal	Pin	Direction (WWAN)	Voltage Level
ANTCTL0	Antenna Control 0	GPO8	59	O	1.7 – 2.6 V
ANTCTL1	Antenna Control 1	RFFE2_SDATA/ GPO9	61	O	1.7 – 2.6 V
ANTCTL2	Antenna Control 2	RFFE2_SCLK/ GPO10	63	O	1.7 – 2.6 V
ANTCTL3	Antenna Control 3	RFFE2_VIO/ GPO11	65	O	1.7 – 2.6 V



3.6 In-Device Coexistence Interface

As more and more radios are added to PC Ultrabook™ and tablet platforms, the sources RF interference increases significantly as multiple radios will have overlapping transmissions and receptions. This problem will increase further as overlapping bands continue to be rolled out; WIFI, BT, WWAN will all use overlapping band from 2300 MHz to 2600 MHz.

In-Device Coexistence is a feature which improves the user experience and maximizes throughput and Quality of Service of connectivity systems (WLAN, BT and GNSS) when these radios are simultaneously running with the WWAN M.2 LTE modem.

A diagram of the In-Device Coexistence architecture is shown in Figure 6.

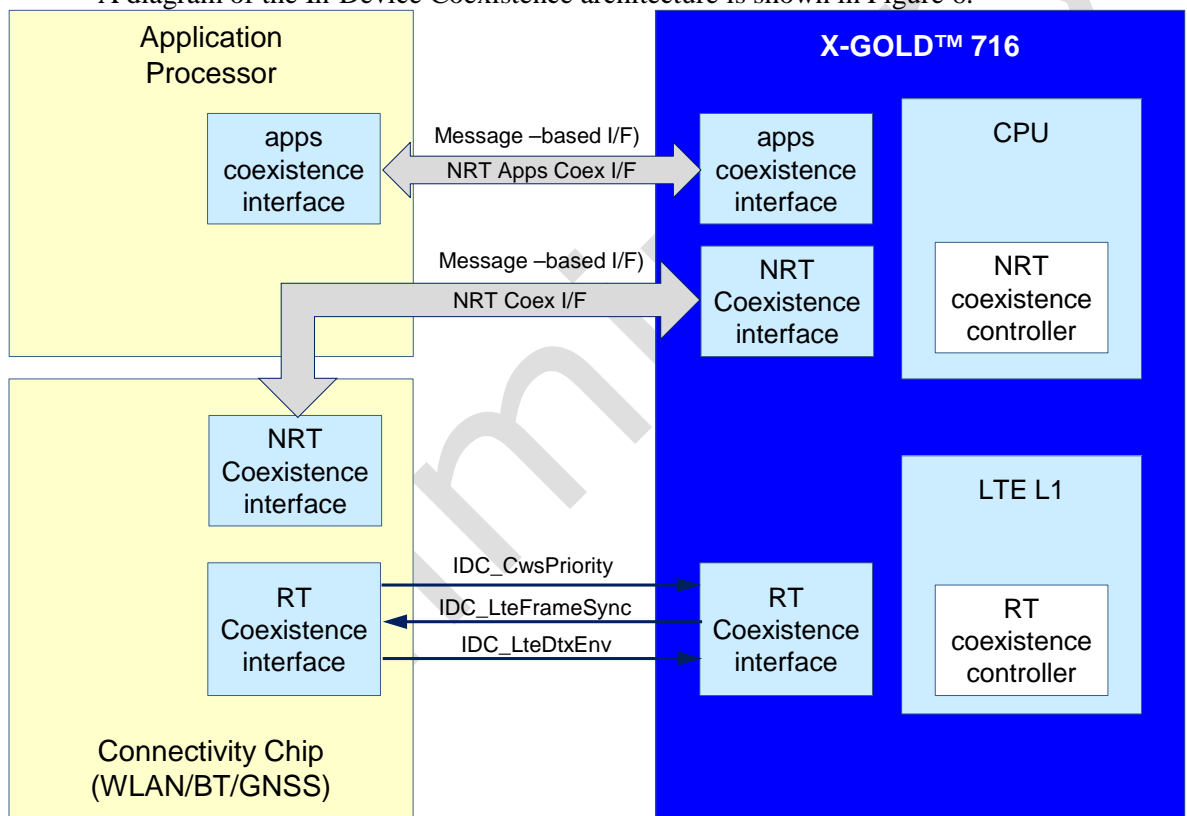


Figure 9 In-Device Coexistence Architecture

Seamless Co-running

In-Device-Coexistence primarily aims at avoiding interference between radio systems to allow seamless co-running where LTE and WLAN/BT/GNSS ensuring their maximum throughput and performance. To do so, a Non Real Time (NRT) coexistence controller is implemented on the ARM™ CPU. The NRT coexistence controller centralizes LTE, WLAN, BT and GNSS information and performs interference avoidance mechanisms, selecting interference-safe frequency configurations whenever possible. The NRT coexistence controller is also in charge of enabling some Real Time (RT) coexistence mechanisms when



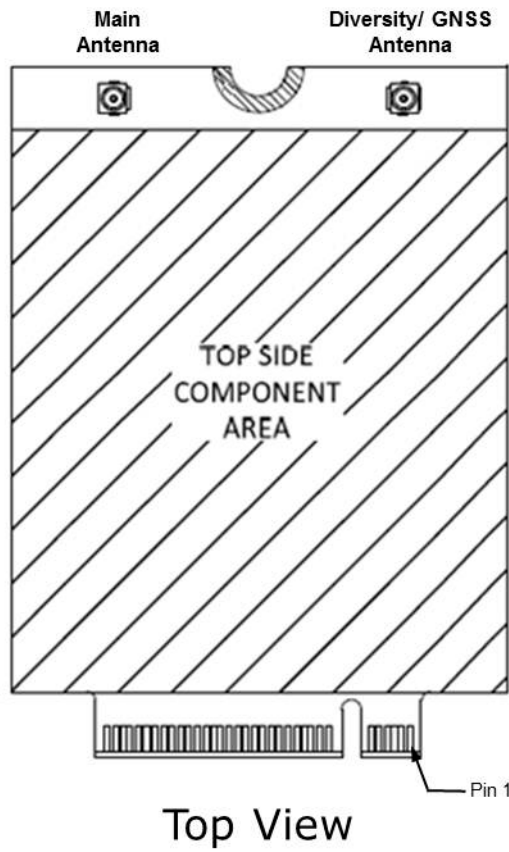


Figure 10 RF Antenna – Coaxial Connector Location

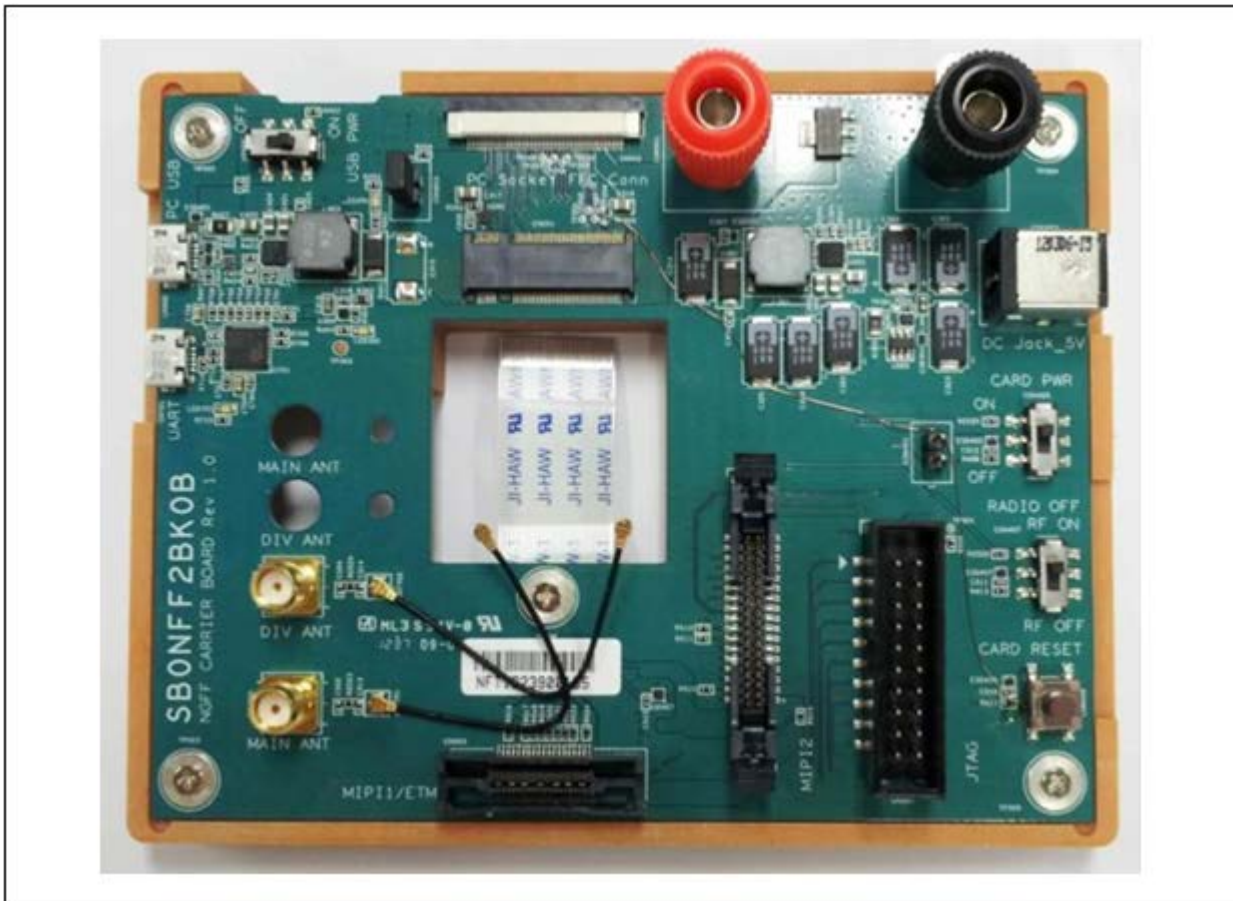


Figure 11 M.2 Carrier Board

4.1.1 FlashTool

Intel Mobile Communications provides a utility program called FlashTool for downloading a binary image into the Flash memory of the M.2 module. The USB-HS port or USIF on the platform is used for connection to a PC via a USB cable for flashing.

FlashTool is a Win32/64 application built on top of the dynamic link library, Download.DLL.

4.1.2 PhoneTool

PhoneTool is a development tool built on top of the so-called “production test dll, DWDIO.dll”. PhoneTool can be used to fine tune the parameters of:

- Audio configuration and settings (if enabled on M.2 module)
- NV (Non-Volatile) memory



5 Windows Software Components

Figure 12 illustrates the various software components in a Windows based system.

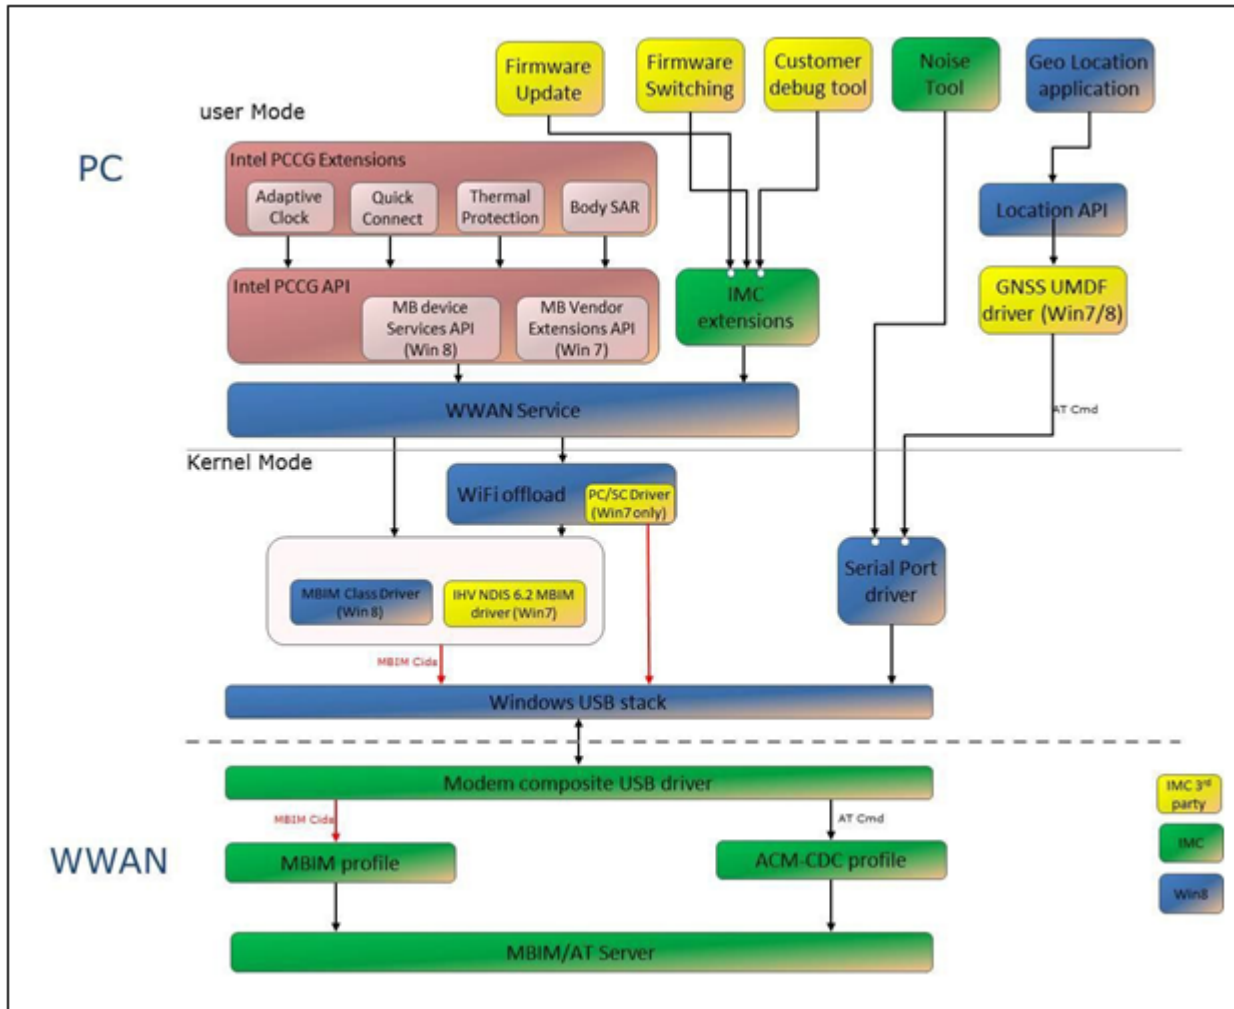


Figure 12 Windows Software Architecture



6.3 USB 2.0 HS Features

The USB 2.0 HS stack is used for communication with a PC in device role. The USB 2.0 HS component supports the following features:

- Modem connection for AT command interface (CDC-ACM)
- Tracing over USB (CDC-ACM)
- Network interface for ethernet frames (CDC-NCM)
- Suspend/Resume, Remote Wake-up and selective suspend (for power saving)
- LPM according to “USB 2.0 Link Power Management Addendum”, Remote Wake-up (for power saving)
- Software download

6.4 USB Configuration

The USB feature may be configured by the UTA_USB API. The user may define different use cases, such as support of different numbers of CDC-ACM or CDC-NCM channels.

6.4.1 Modem Connection

Up to 3 CDC-ACM logical channels are available to be used as an interface for the following functionality:

- AT commands
- 3GPP 27.010 Multiplexer
- Tracing
- Connection to test framework

The ACM channels are connected via UTA-Terminal to S-IO and from there via UTA-Serial to the application on modem side.

6.4.2 Network Connection

Up to 4 CDC-NCM functions are available to be used as interface for network connections servicing for up to four PDN connections.

The NCM channels are connected via the PBM driver interface to PBM and from there via PBM service interfaces to the PTM component of C-PS.



6.4.3 Default Configuration

The default configuration is 3 CDC-ACM channels for control and trace and 4 CDC-NCM channels for data connections. A specific configuration is set via the AT+XSIO command. The detailed usage of the default configuration is:

- 1st ACM channel:: Modem Control Channel, Channel ID: USBCDC/0
- 2nd ACM channel:: Trace data, Channel ID: USBCDC/1
- 3rd ACM channel:: free, Channel ID: USBCDC/2
- 1st - 4th NCM channel: data channel for PDN connection: Channel ID: USBHS/NCM/0-3

6.5 LPM

The host computer can set the modem into USB sleep (L1) state (to save battery power) whenever the link is idle. To return from sleep state the host computer performs L1Resume. This can also be triggered by the modem using L1-Remote- Wake-up. The sleep (L1) state is introduced by “USB 2.0 Link Power Management Addendum” and allows fast state transitions between active and sleep.

6.5.1 Suspend/Resume and Remote Wake-up

The PC can set the modem into USB suspend state (to save battery power) when no communication takes place or when the PC is switched into standby mode. The suspend state also can be triggered by X-GOLD™ Baseband device through a proprietary device initiated selective suspend mechanism. The wake up is performed by Host Resume. The modem can wake up the host computer from standby state using Remote Wake-up.



8.2 Electrical Parameters - Host Interface Signals

Table 26 Electrical Parameters – Host Interface Signals

Signal	Pin	Description	I/O	Voltage Domain (V) (VDD_IO)	DC Characteristics (V)		
					Min	Typ	Max
Card_Power_ON_OFF	6	Power On/Off M.2 Module	I	1.8	-0.3	0/1.8	2.3
RESET#	67	Reset M.2 Module	I	1.8	-0.3	0/1.8	2.3
LED#1	10	M.2 Status Indicator	O (OD)	3	Open-Drain Output, Host requires pull-up resistor		
W_DISABLE#	8	M.2 Disable	I	1.8	-0.3	1.8	2.1
WAKE_WWAN#	23	WWAN wake Host	O	1.8	-0.3	0/1.8	2.4
DPR#	25	Body SAR Detection	I	1.8	-0.3	0/1.8	2.1
USB (D+/D-)	7, 9	USB D+/D- 2.0 High-speed	I/O	1.8/2.9	-0.3	1.8/2.9	V _{DDIO} +0.3
SIM_DETECT	66	SIM Card Detection	I	1.8/2.9	-0.3	1.8/2.9	V _{DDIO} +0.3
UIM_CLK	32	SIM Card Clock	O	1.8/2.9	-0.3	1.8/2.9	V _{DDIO} +0.3
UIM_RESET	30	SIM Card Reset	O	1.8 /2.9	-0.3	1.8/2.9	V _{DDIO} +0.3
UIM_DATA	34	Sim Card DATA	I/O	1.8/2.9	-0.3	1.8/2.9	V _{DDIO} +0.3
UIM_PWR	36	SIM Card Power	O	1.8/2.9	-0.3	1.8/2.9	V _{DDIO} +0.3
I2C_SCL	40	GNSS – I2C Clock	I/O	1.8	-0.3	0/1.8	2.1
I2C_SDA	42	GNSS – I2C Data	I/O	1.8	-0.3	0/1.8	2.1
I2C_IRQ	44	GNSS – I2C Interrupt	I	1.8	-0.3	0/1.8	2.1
CLKOUT0	46	GNSS – 26 MHz Clock Synchronization	O	1.8	-0.3	0/1.8	2.1
TX_BLANKING	48	GNSS – TX Blanking	O	1.8	-0.3	0/1.8	2.1
GNSS_DISABLE#	26	Disable GNSS	I	1.8	-0.3	0/1.8	2.1
ANTCTL[3:0]	59, 61, 63, 65	Antenna Tuning Signals – RF Engine	O	2.3	-0.3	2.3	3.3
COEX[3:1]	60, 62, 64	RF Coexistence Synchronization	I/O	1.8	-0.3	0/1.8	2.1

8.3 Power Consumption

This section lists the power consumption targets.

Typical target values at $V_{sys} = 3.3\text{ V}$

Table 27 LTE Power Consumption

M.2 Power Consumption (*)		Transmit Power	
LTE Use Case	Band	10 dBm	23 dBm
LTE UTP, Cat. 3, 100 Mbps/50 Mbps, 20	Band 7	1068 mW	2531 mW
LTE UTP, Cat. 3, max throughput, 10 MHz	Band 17	916 mW	2394 mW
LTE Use Case	Standby Power		
LTE Stand-by current, DRX 1.28 s serv. Cell only	6 mW		

(*) *Applicable to modules:*

- LN930
- LN930-AP

Table 28 UMTS Power Consumption

M.2 Power Consumption		Transmit Power	
UMTS Use Case (DC-HSDPA+ or HSDPA+)	Band	10 dBm	
UMTS FTP, Cat. 24, RxDiv (M.2 DC-HSDPA+)	Band 1	988 mW	
UMTS FTP, Cat 14, QAM64 (M.2 DC-HSDPA+)	Band 1	771 mW	
UMTS FTP, Cat 14, QAM64 (M.2 HSDPA+)	Band 1	813 mW	
Standby Power			
UMTS Stand-by current, DRX7, 16NB cells	-	6 mW	

Table 29 GSM Power Consumption

GSM Use Case	Band	Transmit Power
--------------	------	----------------




10 WWAN Card Type 3042-S3-B

10.1 Mechanical Dimensions

The mechanical dimensions of WWAN Card Type 3042 are shown in Figure 14.

The WWAN card is 30 mm x 42 mm. The height is 1.5 mm from the top of the PCB to the top of the outside shield. There are a total of 75 pins; however 8 pins are lost to support the slot+. All components are mounted on the Top side.

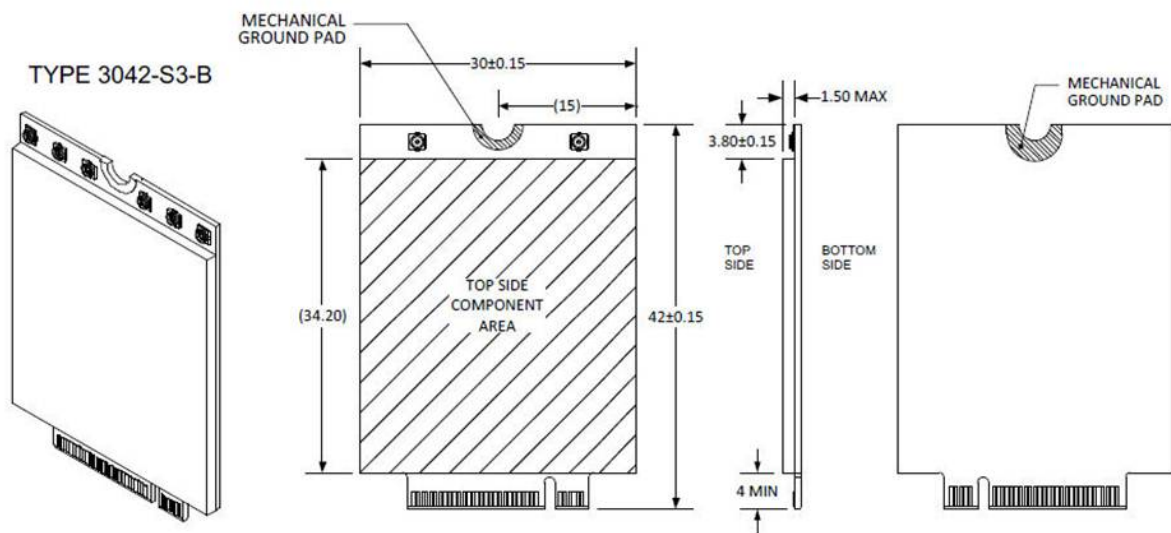

WWAN Card Type 3042-S3-B Mechanical Dimensions

Figure 14 WWAN Card 3042 Mechanical Dimensions

10.2 Land Pattern

Figure 16 illustrates a typical land pattern for a top-mount connector with the key removed.

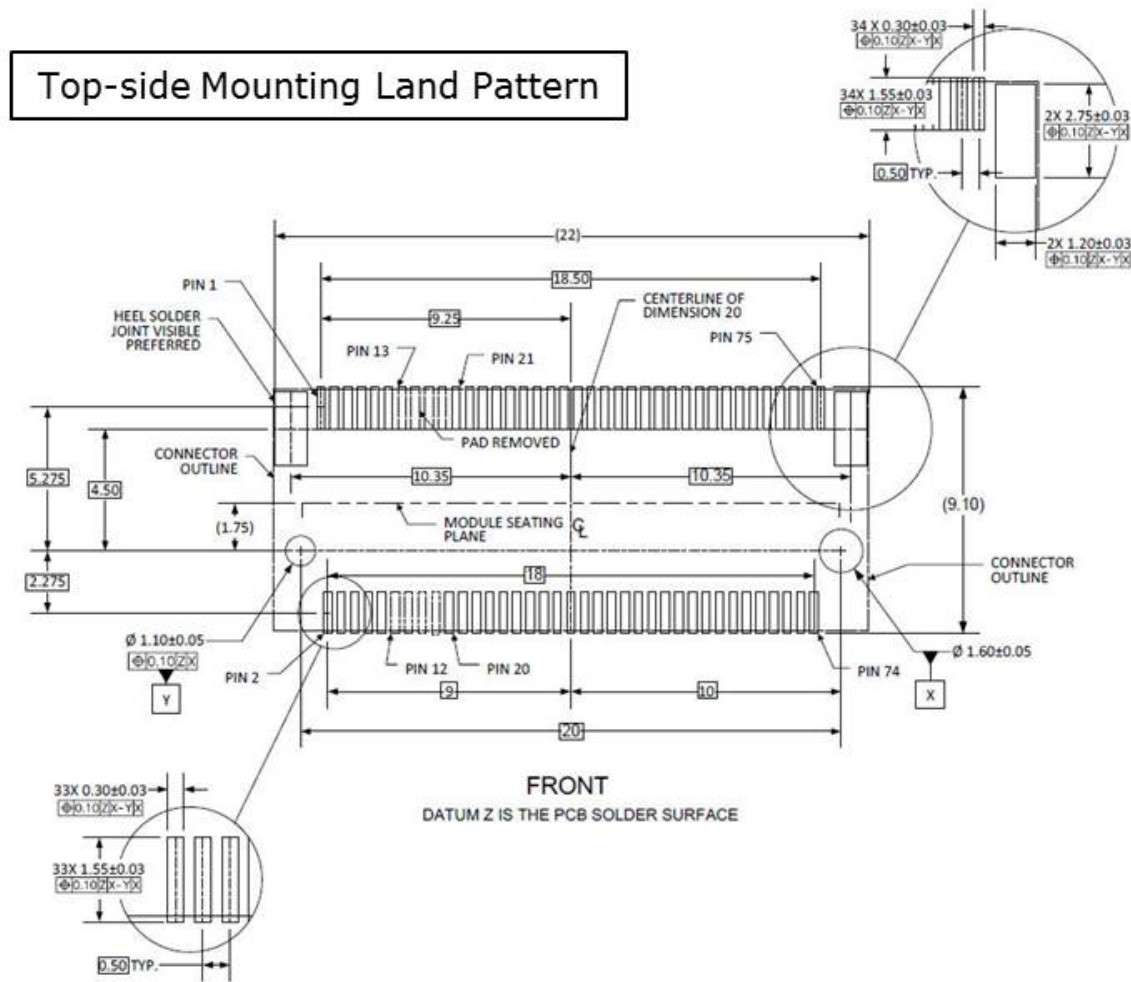


Figure 16 WWAN Card Type 3042 Top-Side Mounting Land Pattern

12 Conformity assessment issues

The following chapters are related to the M.2 module on the EVK carrier board.

12.1 1999/5/EC Directive

The xN930 products portfolio has been evaluated against the essential requirements of the 1999/5/EC Directive.

Bulgarian	С настоящето Telit Communications S.p.A. декларира, че 2G/3G module отговаря на съществените изисквания и другите приложими изисквания на Директива 1999/5/EC.
Czech	Telit Communications S.p.A. tímto prohlašuje, že tento 2G/3G module je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 1999/5/ES.
Danish	Undertegnede Telit Communications S.p.A. erklærer herved, at følgende udstyr 2G/3G module overholder de væsentlige krav og øvrige relevante krav i direktiv 1999/5/EF.
Dutch	Hierbij verklaart Telit Communications S.p.A. dat het toestel 2G/3G module in overeenstemming is met de essentiële eisen en de andere relevante bepalingen van richtlijn 1999/5/EG.
English	Hereby, Telit Communications S.p.A., declares that this 2G/3G module is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.
Estonian	Käesolevaga kinnitab Telit Communications S.p.A. seadme 2G/3G module vastavust direktiivi 1999/5/EÜ põhinõuetele ja nimetatud direktiivist tulenevatele teistele asjakohastele sätetele.
German	Hiermit erklärt Telit Communications S.p.A., dass sich das Gerät 2G/3G module in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 1999/5/EG befindet.
Greek	ΜΕ ΤΗΝ ΠΑΡΟΥΣΑ Telit Communications S.p.A. ΔΗΛΩΝΕΙ ΟΤΙ 2G/3G module ΣΥΜΜΟΡΦΩΝΕΤΑΙ ΠΡΟΣ ΤΙΣ ΟΥΣΙΩΔΕΙΣ ΑΠΑΙΤΗΣΕΙΣ ΚΑΙ ΤΙΣ ΛΟΙΠΕΣ ΣΧΕΤΙΚΕΣ ΔΙΑΤΑΞΕΙΣ ΤΗΣ ΟΔΗΓΙΑΣ 1999/5/ΕΚ.
Hungarian	Alulírott, Telit Communications S.p.A. nyilatkozom, hogy a 2G/3G module megfelel a vonatkozó alapvető követelményeknek és az 1999/5/EC irányelv egyéb előírásainak.
Finnish	Telit Communications S.p.A. vakuuttaa täten että 2G/3G module tyyppinen laite on direktiivin 1999/5/EY oleellisten vaatimusten ja sitä koskevien direktiivin muiden ehtojen mukainen.
French	Par la présente Telit Communications S.p.A. déclare que l'appareil 2G/3G module est conforme aux exigences essentielles et aux autres dispositions pertinentes de la directive 1999/5/CE.
Icelandic	Hér með lýsir Telit Communications S.p.A. yfir því að 2G/3G module er í samræmi við grunnkröfur og aðrar kröfur, sem gerðar eru í tilskipun 1999/5/EC
Italian	Con la presente Telit Communications S.p.A. dichiara che questo 2G/3G module è conforme ai requisiti essenziali ed alle altre disposizioni pertinenti stabilite dalla direttiva 1999/5/CE.
Latvian	Ar šo Telit Communications S.p.A. deklarē, ka 2G/3G module atbilst Direktīvas 1999/5/EK būtiskajām prasībām un citiem ar to saistītajiem noteikumiem.
Lithuanian	Šiuo Telit Communications S.p.A. deklaruoja, kad šis 2G/3G module atitinka esminius reikalavimus ir kitas 1999/5/EB Direktyvos nuostatas.
Maltese	Hawnhekk, Telit Communications S.p.A., jiddikjara li dan 2G/3G module jikkonforma mal-htigijiet essenzjali u ma provvedimenti oħrajn relevanti li hemm fid-Direttiva 1999/5/EC.



The conformity assessment procedure referred to in Article 10 and detailed in Annex IV of Directive 1999/5/EC has been followed with the involvement of the following Notified Body:

Thus, the following marking is included in the product:

CE 0682

The full declaration of conformity can be found on the following address:
<http://www.telit.com/>

There is no restriction for the commercialization in all the countries of the European Union.

Final product integrating this module must be assessed against essential requirements of the 1999/5/EC (R&TTE) Directive. It should be noted that assessment does not necessarily lead to testing. Telit Communications S.p.A. recommends carrying out the following assessments:

RF spectrum use (R&TTE art. 3.2)	It will depend on the antenna used on the final product.
EMC (R&TTE art. 3.1b)	Testing
Health & Safety (R&TTE art. 3.1a)	Testing

Alternately, assessment of the final product against EMC (Art. 3.1b) and Electrical safety (Art. 3.1a) essential requirements can be done against the essential requirements of the EMC and the LVD Directives:

- Low Voltage Directive 2006/95/EC and product safety
- Directive EMC 2004/108/EC for conformity for EMC

12.2 CE RF Exposure Compliance

This device meets the EU requirements (1999/519/EC) and the International Commission on Non-Ionizing Radiation Protection (ICNIRP) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

To comply with the RF exposure requirements, this module must be installed in a host platform that is intended to be operated in a minimum of 20 cm separation distance to the user.



13 FCC/IC Regulatory notices

13.1 Modification statement

Telit has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment.

Telit n'approuve aucune modification apportée à l'appareil par l'utilisateur, quelle qu'en soit la nature. Tout changement ou modification peuvent annuler le droit d'utilisation de l'appareil par l'utilisateur.

13.2 Interference statement

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

13.3 FCC Class B digital device notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



