


2.4GHz Digital Cordless Telephone CT-P9340

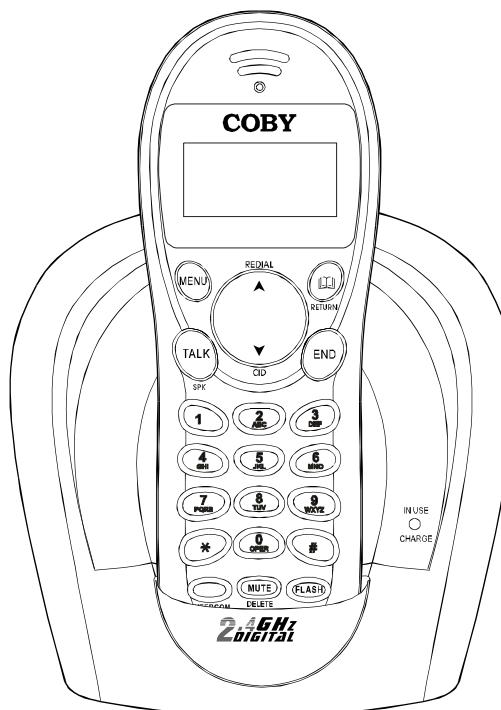

Customer Service Hours
Monday-Friday 8:00 AM - 11:00 PM EST, 1-800-681-2629 or 718-416-3197
Monday-Friday 6:30 PM - 11:00 PM EST, 1-800-727-3592
Saturday-Sunday 9:00 AM - 11:00 PM EST, 1-800-727-3592
Or Send E-Mail to: customerservice@cobyusa.com / techsupport@cobyusa.com

IMPORTANT: To receive Caller ID information on incoming telephone calls, you must subscribe to the Caller ID service provided by your local telephone company; there is a fee for this service and it may not be available in all areas.

CONTENTS

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS



This symbol is to alert you to important operating or servicing instructions that may appear in the user's manual. Always follow basic safety precautions when using this product to reduce the risk of injury, fire, or electrical shock.

When using this product, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Use only with class 2 power source DC 9V 300mA.
4. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
5. Do not use this product near water; for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
6. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
7. Slots and openings in the cabinet back or bottom are provided for ventilation. To protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on the bed, sofa, rug, or other similar surfaces. This product should never be placed near or over a radiator or heat register. This product should not be placed in an enclosed environment unless proper ventilation is provided.
8. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be pinched or walked on.
9. Do not overload wall outlets and extension cords as this can result in risk of fire or electrical shock.
10. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock. Never spill liquid of any kind on the product.
11. To reduce the risk of electrical shock, do not disassemble this product. Instead take it to a qualified service person when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electrical shock when the appliance is subsequently used.
12. Unplug all cords and refer servicing to qualified service personnel under the following conditions:
 - A. When the power supply cord or plug is damaged or frayed.
 - B. If liquid has been spilled into the product.
 - C. If the product has been exposed to rain or water.
 - D. If the product does not operate normally by following the operating instructions. Adjust only those controls covered in the operating instructions. Improper adjustment of other controls may result in damage and require work by a qualified technician to restore the product to normal operation.
13. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
14. Do not use a telephone to report a gas leak in the vicinity of the leak.

IF YOUR PRODUCT UTILIZES BATTERIES, THE FOLLOWING ADDITIONAL PRECAUTIONS SHOULD BE OBSERVED:

1. Use only the type and size of batteries specified in the user's manual.
2. Do not dispose of the batteries in a fire. The cells may explode. Check with local codes for possible special disposal instructions.
3. Do not open or mutilate the batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Exercise care in handling batteries in order not to short the battery with conducting materials such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
5. Do not attempt to recharge the batteries with or identified for use with this product. The batteries may leak corrosive electrolyte or explode.
6. Do not attempt to rejuvenate the batteries provided with or identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to eyes or skin.
7. When replacing batteries, all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged batteries.
8. When inserting the batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, which may result in leakage or explosion.
9. Remove the batteries from this product if the product will not be used for a long period of time (several months or more) since during this time the batteries could leak, damaging the product.
10. Discard "dead" batteries as soon as possible since they are more likely to leak in a product.
11. Do not store this product, or the batteries provided with or for identified use with this product, in high temperature areas.
12. If your product uses a rechargeable battery, charge the battery(ies) only in accordance with the instructions and limitation specified in the User Manual.

SAVE THESE INSTRUCTIONS

FCC RUGULATIONS

Warning: Modifying or tampering with the telephone's internal components can cause a malfunction and might invalidate the telephone's warranty and void your FCC authorization to operate it. If the trouble is harming the telephone lines, the telephone company might ask you to disconnect the telephone until you have resolved the problem. As it complies with Part 68 of the FCC rules and the technical requirements for connection to telephone networks published by ACTA, your unit has been registered with the FCC.

The FCC requires us to provide you with the following information:

1. Connection and use with the nationwide telephone network:

The FCC requires that you connect to a nationwide telephone network through a modular telephone outlet which is TIA/EIA-IS-968 compliant. It is USOC jack type RJ11C. This equipment may not be used o coin service provided by the telephone company. Connection to party lines is subject to state tariffs. Check with your local telephone company.

2. Notification to the telephone company:

FCC rules require that upon request you provide the following information to the phone company.
A. The line (telephone number) to which you will connect the telephone equipment.
B. The Registration Number and Ringer Equivalence Number (REN). These numbers are found on the back or bottom of your telephone equipment.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum all RENs should be 5 or less. To determine the number of devices permitted in your area, contact your local telephone company.

3. Repair instructions:

If it is determined that your telephone equipment is manufacturing, the FCC requires that it not be used and be unplugged from the modular outlet until the problem has been corrected. Repairs to this telephone equipment can be made only by the manufacturer or its authorized agents, or by others who may be authorized by the FCC. Unauthorized repairs void registration and warranty.

4. Rights of the telephone company:

If your product is causing harm to the telephone network, the telephone company may temporarily discontinue your service. If possible, they will notify you in advance. But if advance notice isn't practical, you will be notified as soon as possible. You will be given the opportunity to correct the problem, and you will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in its facilities, equipment, operations or procedures that affect the proper functioning of your telephone equipment. If such changes are planned, you will be notified in advance.

5. This product is compatible with inductively coupled hearing aids.

Note: This applies only if this product is equipped with a corded or cordless handset.

6. Programming/testing emergency numbers:

When programming emergency numbers and/or making test calls to emergency numbers.
A. remain on the line and briefly explain to the dispatcher the reason for the call before hanging up.
B. Perform such activities in the off-peak hours, such as early morning or late evening.

INTERFERENCE INFORMATION: PART 15 OF FCC RULES


Some telephone equipment generates and uses radio frequency energy which if not properly installed, may cause interference to radio and television reception. This unit has been tested and found to comply with the limits for a Class B computing device in accordance with the specifications in Part 15 of the FCC rules. These specifications are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television reception, when it's in use, the user is encouraged to try to correct the interference by one or more of the following measures:

- A. Where it can be done safely, reorient the radio or TV receiving antenna.
- B. To the extent possible, relocate the television, radio, or other receiver with respect to the telephone equipment.
- C. If the telephone product runs on AC power, plug your product into an AC outlet that's not on the same circuit as the one used by the radio or television.

TELEPHONE SETUP

Connections

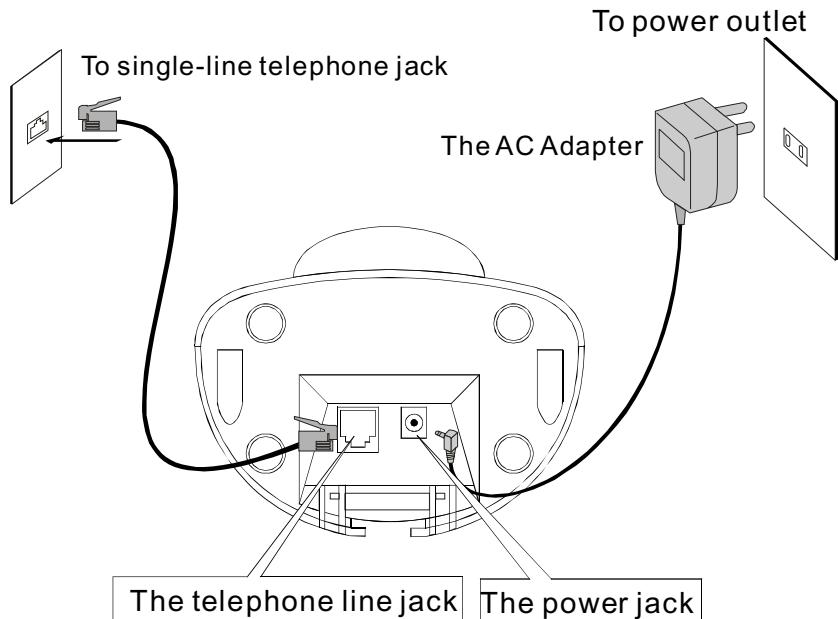


NOTE:

- Use only the included AC adapter.
- The AC Adapter must remain connected at all times. (It is normal for the adapter to feel warm during use.)
- The AC Adapter should be connected to a vertically oriented or floor-mounted AC outlet. Do not connect the AC Adapter to a ceiling-mounted AC outlet, as the weight of the adapter may cause it to become disconnected.
- The unit will not work during a power failure. We recommend connecting a standard telephone to the same telephone line or to the same telephone jack using the included adapter.
- Emergency power can be supplied to the unit by connecting a battery back-up power supply.

TELEPHONE SETUP

Battery installation

1. Slide open the battery compartment door on the back of the handset.
2. Plug the battery connector into the 2-pin connector in the battery compartment, and then insert the battery.
3. Close the battery compartment door.
4. Place the handset on the base unit cradle.
5. **IMPORTANT:** Charge the battery pack for at least 12 hours before using the handset the first time.
6. The CHARGE LED on the base illuminates when the handset is properly making contact with the charge terminals.

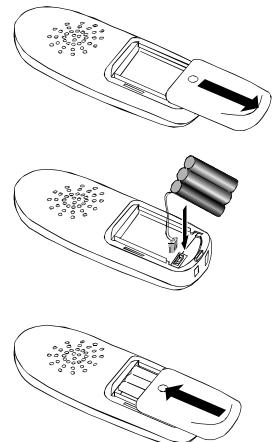

Battery strength

You can confirm the battery strength on the handset display.

Battery icon	Battery strength
	Fully charged
	Medium
	Low When flashing: needs to be recharged.
	Discharged.


Battery duration

A fully charged battery lasts for approximately:
5 hours when you use the handset continuously (talk time).
5 days when the handset is not in use (standby).


TELEPHONE SETUP

Belt Clip

You can hang the handset on your belt or pocket using the included belt clip

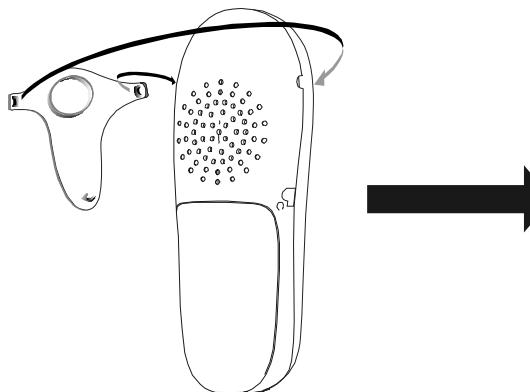

Headset (optional)

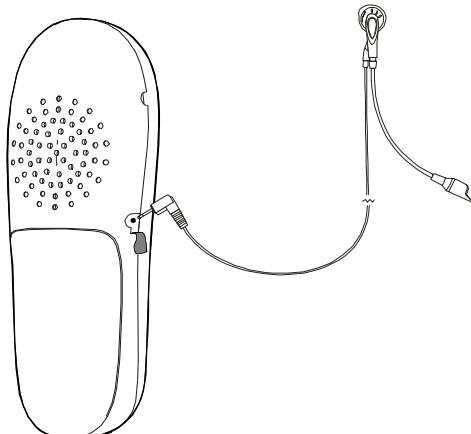

The Headset Jack

The headset jack is located on the side of the handset and is a standard 2.5mm plug. Simply plug a headset into the jack and the headset will be active.



Note: When the headset is plugged into the telephone, the microphone and earpiece on the handset are not active.

TELEPHONE SETUP

Wall Mounting

You may choose to put the base unit of your cordless telephone on a wall.


Align the upper keyhole on the back of the base unit with the upper stud of the wall plate, so that the under keyhole matches the lower stud, then pull the base unit down until it is securely seated.

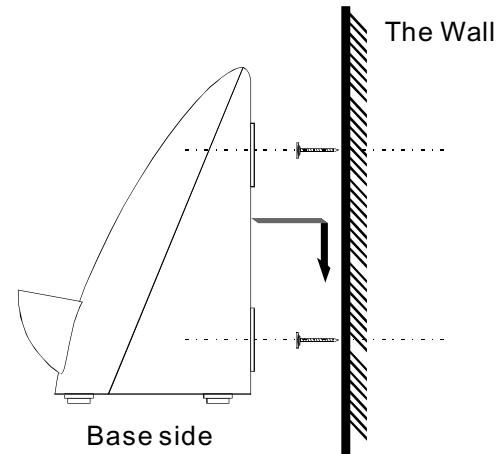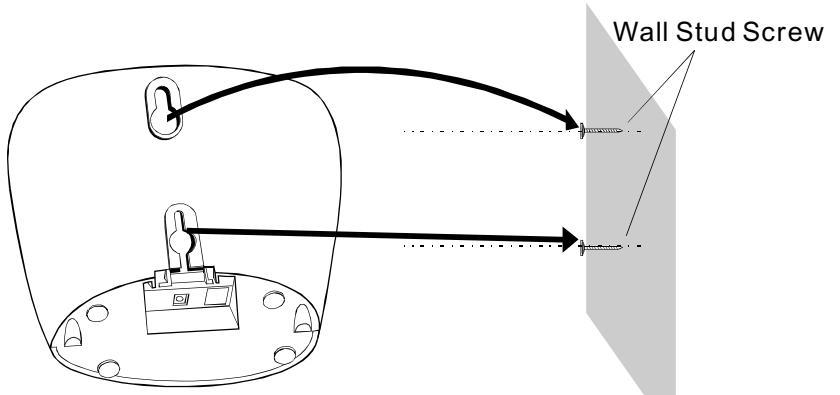

LOCATION OF CONTROLS

Controls and displays


Handset

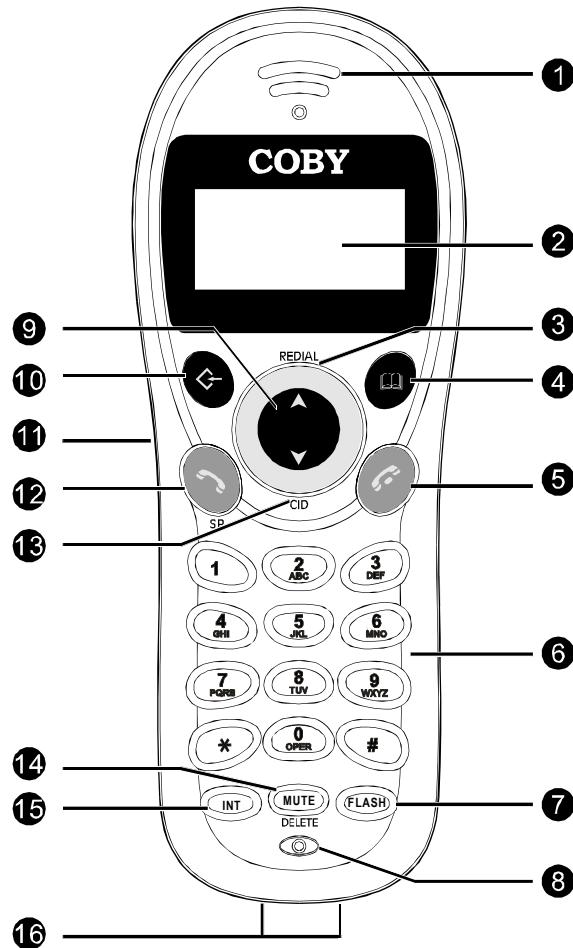

LOCATION OF CONTROLS

- ① **Receiver**
- ② **LCD Display**
- ③ **REDIAL**: Press the key to redial the last number dialed.
- ④ **PHONE BOOK/RETURN**(): Press to make calls to numbers stored in memory.
- ⑤  : Press to end a telephone call.
- ⑥ **Key pad**
- ⑦ **FLASH**: The key is used to access telephone company service, like call waiting.
- ⑧ **Microphone**
- ⑨ **Navigator key**( / ): The key is used to navigate through menus and to select items shown on the display.
- ⑩  (**MENU**) : Press to start and end the programming menu.
- ⑪ **Headset Jack**
- ⑫  /SP: Press to start a call. And when you are talking, press the key to open the speakerphone function(hand free).
- ⑬ **CID**: The key is used to review Caller ID information stored in memory.
- ⑭ **MUTE/DELETE**: The key is used to temporarily mute the handset microphone. When viewing or editing menus and logs, the key is used to erase digits and single or multiple entries from the phone book and Caller ID directories.
- ⑮ **INT**: Press to make an intercom call if you have more than one handset registered to our base unit.
- ⑯ **Charge Contacts**

Soft keys

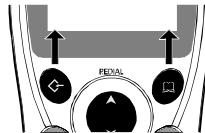



NOTE:

The handset features 2 soft keys under the  button and the  button. By pressing a soft key, you can select the function displayed directly above it.


LOCATION OF CONTROLS

LOCATION OF CONTROLS

Base

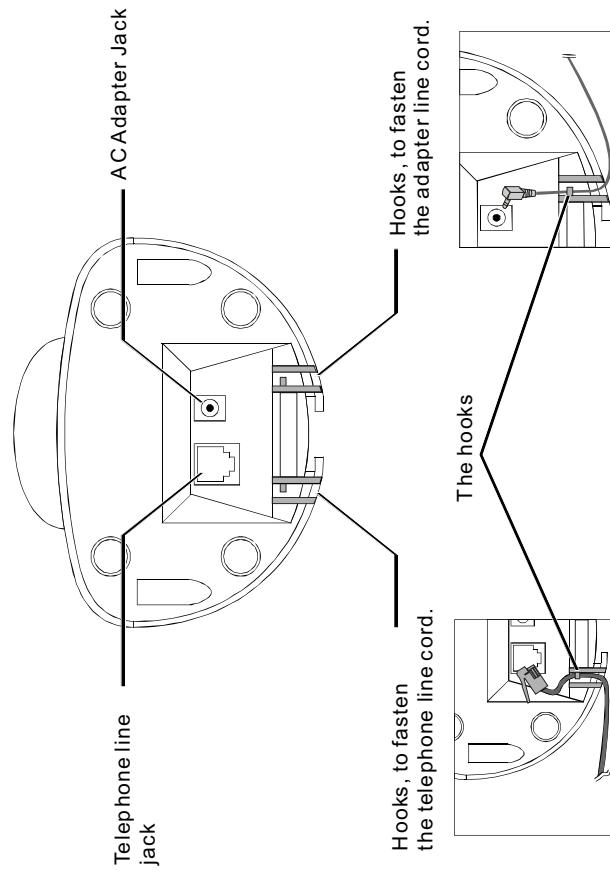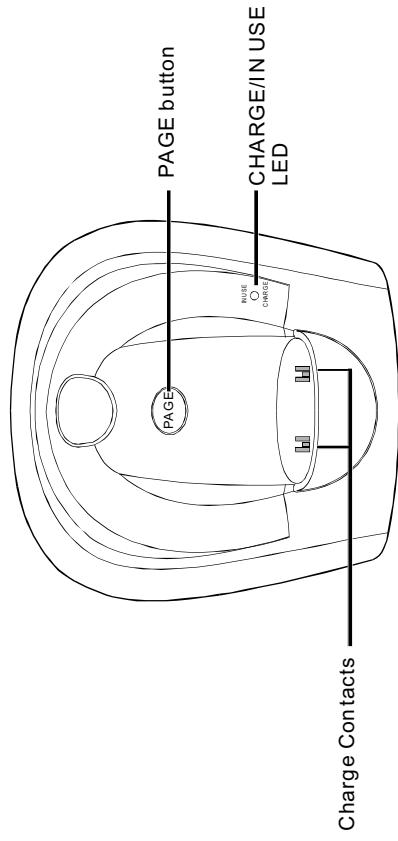

LCD Display

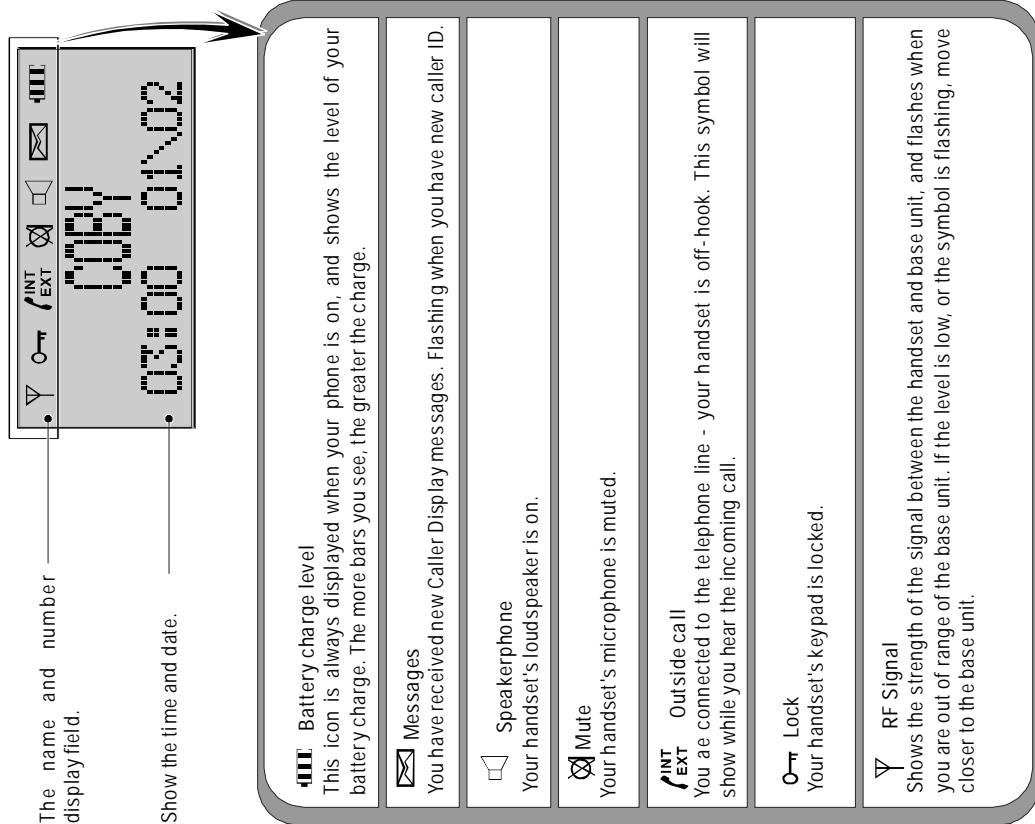

BASIC OPERATION

Setting the date and time

Your CT-P9340 handset can display the time and date. You should set it to the correct time and day at this time. For your first setting on your telephone, follow the instruction below to set the time and date.

1. Press the  button.



2. Scroll to "Date & Time" by pressing the  or  button, then press "OK".



3. Press "OK" to enter the Date setting interface.
4. Use the keypad and the  or  button to enter the current date with DATE\MONTH format.

Example: 23\03, press 2, , 3, , 0, , 3.



5. Press "Save".
6. Press the  button and press "OK" to enter the time setting interface.
7. Use the keypad and the  or  button to enter the current time with 24 HOUR/MINUTE format.

Example: 10:38, press 1, , 0, , 3, , 8.



8. Press "Save".

Note:

If you make a mistake when entering the date and time, press the  or  button to move the cursor, then make the correction.

If a power failure occurs, you need set the date and time again.

Time adjustment (Caller ID subscribers only)

When calls are received, Caller ID will automatically adjust the date and time (including daylight saving time).

BASIC OPERATION

Making Calls

1. Lift the handset and press the  button. "Talking" will be displayed.



2. Dial the phone number.

3. When finished talking, press the  button or place the handset on the base unit or charger. The LCD will display the total call time just now.



To use the speakerphone

While in talking mode, press the  button to switch from the receiver to the speakerphone.

To adjust the receiver volume

7 levels are available. While using the receiver, Press  to increase the volume or  to decrease the volume while in the earphone mode or speakerphone mode.



To make a call using the redial list

The last 10 numbers dialed are stored in the redial list.

1. Press the REDIAL button, the last number dialed will be displayed.
2. Use the  or  button repeatedly to display the desired number.
3. Press the  button.

Answering Calls

When a call is being received, the ringer indicator flashes rapidly.

1. Lift the handset and press the  button.
2. When finished talking, press the  button or place the handset back on the base unit.

Auto talk

This feature allows you to answer a call by simply lifting the handset off the base unit. You do not need to press the  button. To activate this feature, see page ??.

PHONE BOOK


Using the phonebook

The handset phonebook allows you to make calls without having to dial manually. You can add 50 names and phone numbers to the handset phonebook.

1. Press the  button.
2. Press "Add". (The display shows the number of items in the phonebook.)



3. Enter the name (max. 16 characters).
4. Press "Next".
5. Enter the phone number (max. 24 digits).
6. Press "Next".
7. Use the  or  button to select the group you want to save in, then press "Next".
You can select: Colleague, Normal, VIP, Family.
8. Press "Save".(To add more items, repeat from step 2.)
9. To exit the phonebook, press the  button.

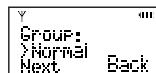

- **Character table**

The dial keys can be used to enter characters. To enter a character, press the appropriate dial key, repeatedly if necessary. To enter another character that is located on the same dial key, first press the  button to move the cursor to the next space.

Key	Characters
1	# & ' () * , - . / 1
2	a b c A B C 2
3	d e f D E F 3
4	g h I G H I 4
5	j k I J K L 5
6	m n o M N O 6
7	p q r s P Q R S 7
8	t u v T U V 8
9	w x y z W X Y Z 9
0	0 Space
*	*
#	#

PHONE BOOK


- **To edit/correct a mistake**

Press the  or  button to move the cursor to the characters or number you wish to correct, then press the **DELETE** button and enter the appropriate character or number.

Calling someone in the phonebook

Phonebook items can be searched for alphabetically by scrolling through the phonebook items.

1. Press the  button.

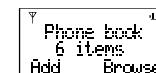

2. Press "Browse".

3. Use the  or  button repeatedly to display the desired item.

4. Press the  button to call out the number.

Note: To view a phone number over 12 digits long, follow steps 1 to 3, then press "Edit" and "Next". Press the  button when finished.

Editing items in the phonebook


1. Press the  button.




2. Press "Browse".

3. Use the  or  button repeatedly to display the desired item.


4. Press "Edit".

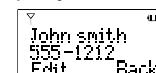

5. Edit the name if necessary.

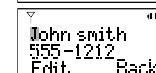

6. Press "Next".

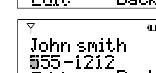

7. Edit the phone number if necessary.


8. Press "Next", then press "Save". To edit other item, repeat from step 2.

9. Press the  button.

PHONE BOOK

Deleting item in the phonebook

1. Press the  button.

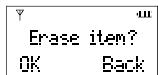

2. Press "Browse".

3. Use the  or  button repeatedly to display the desired item.

4. Press "Ok".

5. Press the  button to exit.

CALLER ID

Using Caller ID service

This unit is Caller ID compatible. To use Caller ID features, you must subscribe to your telephone company's Caller ID service.

If you subscribe to both Caller ID and Call Waiting with Caller ID services, the 2nd caller's information will be displayed after you hear a Call Waiting tone.

For Call Waiting service users

To use Call Waiting, you must subscribe to your telephone company's Call Waiting service. This feature allows you to receive calls while you are already talking on the phone. If you receive a call while on the phone, you will hear a call while on the phone, you will hear a Call Waiting tone.


Press the **FLASH** button to answer the 2nd call.

- The 1st call is put on hold while you answer the 2nd call.
- To switch between calls, press the **FLASH** button.

Caller list


Caller information for the last 30 different callers will be logged in the caller list. You can use the list to return missed calls.

If a call is not answered, the unit treats the call as a missed call. The number of missed calls is shown on the handset display.

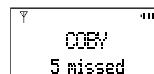


Caller information includes caller names and phone numbers, the data and time of calls.

Caller ID Displays

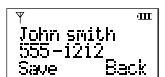

Display shows name and number, time and date of the call.

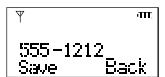

Display shows number-only service.



"**Private**" will be displayed when a call is received from a blocked number. For privacy reasons, some states allow callers the option to prevent their telephone data from being displayed on the other party's Caller ID display.


CALLER ID



"Unavailable" will be displayed when Caller ID information is not available. This call was made from a telephone company that does not offer Caller ID services (including some international calls).



Display shows when a voice mail message has been received and is stored by message waiting service provided by the phone company.

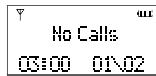

This is displayed when **CID** is pressed and there is no Caller ID data stored.

Viewing the caller list and calling back

1. Press the **CID** button.
2. Any unviewed (new) calls will be displayed first. The most recent call will be displayed.
3. To scroll to the other call, press the **▲** or **▼** button.



4. To return the call, press the **📞** button.

Storing caller information into the phonebook

Items in the caller list can be stored into each handset's phonebook.

1. Press the **CID** button.
2. Use the **▲** or **▼** button to display the desired item.
3. Press "Save". If there is no name information for the caller, the phone will prompt you to enter name.(Refer to the "Adding items to the phonebook" for details in page **xx**.)
4. Press the **📞** button to exit.

CALLER ID

Erasing caller information

1. Press the **CID** button.
2. Use the **▲** or **▼** button to display the desired item.
3. Press the **DELETE** button.
4. Press "OK".
5. Press the **📞** button to exit.



PROGRAMMABLE SETTINGS

Guide to handset programming

For your reference, a chart of all programmable functions is printed below. To program, press the \leftarrow button, use the \wedge or \vee button to scroll through the menu, and press "Ok" or "Back" when the desired menu item or setting is displayed.

Note: Before programming, make sure the handset and base unit are not being used.

Main Menu	Sub-Menu	Page
Handset Set	Register	
	Loc Dereg	
	Comp Dereg	
	Speech V01	
Line Set	Dial Mode	
	Flash Time	
	Pause Time	
	Area Code	
Display Set	HS Name	
	Contrast	
	Language	
Ringer Set	Melody	
	Intcom	
	VIP	
	Ringer V01	
Date & Time	Date	
	Time	
Advanced Set	PIN Code	
	Auto Talk	
	Default All	

PROGRAMMABLE SETTINGS

HANDSET SETTING

Register

If "Not Registered" is displayed even when the handset is near the base unit, you may need to register the handset to the base unit.

1. Make sure you have pressed and holding the PAGE button at base unit.
2. Press the \leftarrow button.
3. Use the \wedge or \vee button scroll to the "Register" and press "Ok".
4. Release the **PAGE** button until the LCD display " REG to BASE" then back to standby mode.

Loc Dereg (Delete the register of handset)

1. Enter the "Handset Set" menu.
2. Use the \wedge or \vee button to scroll to "Loc Dereg".
3. Press "OK".
4. Use the the dial pad to enter the PIN code.
5. If the PIN code that you input is correct, the handset will back to standby mode automatically and display "Not Registered".

Comp Dereg (Delete the register of handset & base)

PROGRAMMABLE SETTINGS

Speech Volume

1. Enter the "Handset Set" menu.
2. Use the ▲ or ▼ button to scroll to "Speech Vol".

3. Press "OK".



4. Use the ▲ or ▼ button to adjust the speech volume.

5. Press "Save".



LINE SET

Dial Mode

1. Enter the "Line Set" menu.

2. Use the ▲ or ▼ button to scroll to "Dial Mode".

3. Press "OK".



4. Use the ▲ or ▼ button to adjust the dial mode between PULSE and TONE.

5. Press "Save".



NOTE: If you are unsure of the proper dialing mode, make a trial call with the dial mode setting to TONE. If the call connects, keep the dial mode as TONE, otherwise, set to PULSE.

Flash Time

The flash time depends on your telephone exchange or host PBX. You can select: "90ms"(milliseconds), "100ms", "110ms", "250ms", "300ms", "400ms", "600ms", or "700ms" (default).

1. Enter the "Line Set" menu.

2. Use the ▲ or ▼ button to scroll to "Flash Time".

3. Press "OK".



PROGRAMMABLE SETTINGS

4. Use the ▲ or ▼ button to select the desired setting.

5. Press "Save".



NOTE:

- The setting should stay at 700ms unless pressing the FLASH button fails to pick up the Call Waiting call.
- If the unit is connected via a PBX, certain PBX functions (call transferring, etc.) may not work correctly. Consult your PBX supplier for the correct setting.

Pause Time

1. Enter the "Line Set" menu.

2. Use the ▲ or ▼ button to scroll to "Pause Time".

3. Press "OK".



4. Use the ▲ or ▼ button to select the pause time. You can select : 3600ms, 3200ms, 2500ms(default), 2000ms, 1500ms, 1000ms, 500ms.

5. Press "Save".

Area Code

Area code programming is used for caller ID callback purpose. It allows people who dial only 7 digits for local numbers to avoid extra work when dialing from caller ID memories. Do not use the area code programming if you are required to dial 10 digits. (E.g. 555-555-1212) to call a local number.

1. Enter the "Line Set" menu.

2. Use the ▲ or ▼ button to scroll to "Area Code".

3. Press "OK".



4. Use the dial pad and the ▲ or ▼ button to enter the area code that you want to set.

5. Press "Save".



PROGRAMMABLE SETTINGS


DISPLAY SET

HS Name(Handset Name)

To set the name that display in the LCD when the handset is idle.

1. Enter the "Display Set" menu.
2. Use the ▲ or ▼ button to scroll to "HS Name".

3. Press "OK".

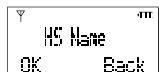

4. Use the dial pad and the ▲ or ▼ button to enter the name.
(Please refer to the LETTER TABLE for details.)

5. Press "Save".




Note: You can set the name with more than 8 characters.

Contrast

You can adjust the handset display contrast. There are 8 levels.


1. Enter the "Display Set" menu.
2. Use the ▲ or ▼ button to scroll to "Contrast".

3. Press "OK".

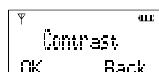

4. Use the ▲ or ▼ button to select the desired setting.

5. Press "Save".

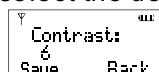


Language

You can select ENGLISH, SPANISH or FRENCH as the display language.

1. Enter the "Display Set" menu.
2. Use the ▲ or ▼ button to scroll to "Language".
3. Press "OK".
4. Use the ▲ or ▼ button to select the desired setting.

5. Press "Save".

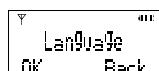

PROGRAMMABLE SETTINGS

RINGER SET

Melody


You can change the ringer tone heard when an outside call is received. There are 19 melodies. And you can turn off the melody by setting the ringer tone to OFF.

1. Enter the "Ringer Set" menu.



2. Use the ▲ or ▼ button to scroll to "Melody".

3. Press "OK".

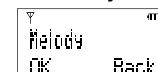

4. Use the ▲ or ▼ button to select the desired setting.

5. Press "Save".



Intcom (PAGE tone)

You can change the ringer tone heard when you find the handset by pressing the PAGE button on the base. There are 19 tones and OFF section to be selected.

1. Enter the "Ringer Set" menu.



2. Use the ▲ or ▼ button to scroll to "Intcom".

3. Press "OK".

4. Use the ▲ or ▼ button to select the desired setting.

5. Press "Save".



VIP

1. Enter the "Ringer Set" menu.



2. Use the ▲ or ▼ button to scroll to "VIP".

3. Press "OK".

4. Use the ▲ or ▼ button to select the desired setting.

5. Press "Save".

PROGRAMMABLE SETTINGS

Ringer Volume

8 levels are available.

1. Enter the "Ringer Set" menu.
2. Use the ▲ or ▼ button to scroll to "Ringer Vol".
3. Press "OK".
4. Use the ▲ or ▼ button to select the desired setting.
5. Press "Save".



ADVANCED SETUP

PIN Code

Due to the restriction for some programming, your telephone must be protected with user PIN. The default PIN is 0000. You can change this PIN code, you must choose a PIN number which is easy to remember by you or write the PIN code secretly. The digit for PIN is 4 digits.

1. Enter the "Advanced Set" menu.
2. Use the ▲ or ▼ button to scroll to "PIN Code".
3. Press "OK".
4. Use the dial pad to enter the 4 digits old PIN code.
5. Use the dial pad to enter the 4 digits new PIN code you want to set.
6. Enter the new PIN code again.
7. Press "Save".


IMPORTANT!!!
-Do not forget your PIN code -
Please note your new PIN here!

PROGRAMMABLE SETTINGS

Auto Talk

When this feature is turned on, you can answer a call by lifting the handset off the base unit or charger without pressing button. The default setting is OFF.

1. Enter the "Advanced Set" menu.
2. Use the ▲ or ▼ button to scroll to "Auto Talk".
3. Press "OK".
4. Use the ▲ or ▼ button to select between ON or OFF.
5. Press "Save".

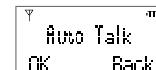

Default All

This feature will restore the default setting of your cordless phone. All programming earlier done like setting the ringing volume, ringing melody, PIN, external call melody, etc. Will be defaulted.

1. Enter the "Advanced Set" menu.
2. Use the ▲ or ▼ button to scroll to "Default All".
3. Press "OK".
4. Enter the correct PIN code. The handset will go back to the "Default All" menu automatically.
5. Press the button to exit.

Note:When performing the default (reset)

- The phonebook memory will not erase entries
- LCR Codes and programming entries will retain
- Handset Name will not change

OTHER FEATURES

Message waiting

If you subscribe to voice mail from the telephone company and if there are voice message that have been left in your voice mailbox, the display will show  .

Note: This function require voice mail subscription from the local telephone company. Furthermore, the local phone company must provide a type of voice mail signaling called "FSK" (Frequency Shift Key). Not all telephone companies have the visual message waiting feature available. Please contact our local telephone company to check if this is available in your area.

Standby mode

When the handset is not in use, the handset is in the STANDBY MODE. The LCD will display the handset name. The clock and date is also shown. *Note that the clock and date should be set.*

Microphone mute

If you want to speak secrecy with any person in your side without sending it to the person on the phone.

1. Press the **MUTE** button. You can now speak freely, the other person on the telephone line will not hear you.
2. Press the **MUTE** button again to un-mute your DT181 . Conversation is again possible.

Paging the handset

This feature is very useful if you cannot remember where you put your handset - you can make it rings by pressing the  button on the base unit.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The model ct-p9340 is designed to comply with FCC standard regarding exposure of human beings to radio frequency electromagnetic energy.

The radiated output power is far below the FCC radio exposure limit. Nevertheless, this device shall be used in such a manners that the potential for human contact during normal operation is minimized.

Security System

Your cordless telephone uses a digital coding security system to prevent unauthorized use of your telephone line by another nearby cordless telephone. The system has its own identifying signal created by microcomputers in both the **BASE UNIT** and the **HANDSET**.

Security Code

This telephone has an internal security code with 65,536 possible combinations.