

User Manual

EG102

*Ethernet IAD with VoIP
Wireless LAN
and Ethernet Switch*

Issue 1.0
18th July, 2008

XAVi Technologies Corporation

Tel: +886-2-2995-7953

9F, No. 129, Hsing Te Road, Sanchung City,
Taipei County 241,
Taiwan

Copyright © 2008, XAVi Technologies Corporation

Information in this manual is subject to change without notice. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying or scanning, for any purpose, without the written permission of XAVi Technologies Corporation.

XAVi Technologies Corporation provides this documentation without warranty of any kind, implied or expressed, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

Table of Contents

1	Introduction	1
	Features	1
	Device Requirements	2
2	Getting to know the device	3
	Parts Check.....	3
	Front Panel.....	4
	Rear Panel	5
3	Connecting your device.....	6
	Connecting the Hardware.....	6
	<i>Step 1. Connect the WAN port to the broadband device like DSL modem, cable modem or fiber modem</i>	7
	<i>Step 2. Connect the Ethernet cable</i>	7
	<i>Step 3. Attach the power connector</i>	7
	<i>Step 4. Configure your Ethernet PCs.....</i>	7
	<i>Or, step 5. Install a Wireless card and connect Wireless PCs if the device is with wireless interface</i>	7
	<i>Next step.....</i>	7
4	Getting Start with the Web pages	8
	Accessing the Web pages.....	8
	Commonly used buttons.....	10
	Testing your Setup.....	11
	Default device settings.....	11
5	Device Information	13
	Summary.....	13
	WAN.....	13
	Statistic.....	14
	Route.....	14
	ARP	15
	DHCP	15
6	Advanced Setup.....	16
	WAN.....	16
	<i>Bridging.....</i>	18
	<i>PPP over Ethernet (PPPoE).....</i>	19
	<i>IP over Ethernet.....</i>	20
	LAN.....	22
	NAT (Network Access Translation).....	23
	<i>Virtual Server</i>	23
	<i>Port Triggering</i>	24

	DMZ.....	25
	Security	26
	IP Address Filter	26
	Parental Control	29
	Quality of Service.....	30
	QoS Classification	30
	Routing.....	32
	Default Gateway	32
	Static Route	33
	Policy Routing.....	33
	RIP	34
	DNS.....	35
	DNS Server.....	35
	Dynamic DNS.....	35
	Print Server	36
	Port Mapping.....	37
7	Wireless Setup	39
	Basic.....	39
	Security	40
	MAC Filter	44
	Wireless Bridge.....	45
	Advanced	46
	Station Information.....	47
8	Voice Setup	48
	Interface Setup.....	48
	Provisioning Setup.....	49
	SIP Setup	49
	Line 1 or Line 2 Setting.....	50
	RTP/Codec Setup.....	51
	Operational Setup.....	53
9	Voice Supplementary Service	55
	Call Forward.....	55
	Call Forward Unconditional	55
	Call Forward No Response	55
	Call Forward on Busy	55
	Secret Number, Calling Line Identification Restriction (CLIR)	55
	Static Configuration	56
	On per call basis	56
	Call Waiting	56
	Call Waiting customer configuration.....	56
	Force Busy.....	56
	Pickup and Release old.....	56

	<i>Pickup and put old on hold</i>	56
	<i>Switch between 2 active calls</i>	56
	<i>Timeout</i>	57
	Three Parties Conference	57
	Call Transfer	57
	Enquiry service	57
	Call Back Busy Subscriber (Busy)	58
	Call Back last number called (Call Return)	58
10	Diagnostic	59
	Diagnostic	59
11	Management	60
	Settings	60
	System Log	61
	TR-069 Client	62
	Internet Time	63
	Access Control	63
	<i>Service</i>	63
	<i>IP Address</i>	64
	<i>Password</i>	64
	Update Software	66
	Save / Reboot	66
	Appendix A - Configuring the Internet Settings	67
	Configuring Ethernet PCs	67
	<i>Before you begin</i>	67
	<i>Windows® XP PCs</i>	67
	<i>Windows 2000 PCs</i>	67
	<i>Windows Me PCs</i>	68
	<i>Windows 95, 98 PCs</i>	68
	<i>Windows NT 4.0 workstations</i>	69
	<i>Assigning static Internet information to your PCs</i>	70
	Configuring Wireless PCs	71
	<i>Positioning the wireless PCs</i>	71
	<i>Wireless PC cards and drivers</i>	71
	<i>Configuring PC access to your Wireless device</i>	71
	Appendix B - Troubleshooting	72
	Troubleshooting Suggestions	72
	Diagnosing Problem using IP Utilities	73
	<i>Ping</i>	73
	<i>Nslookup</i>	74
	Appendix C – Glossary	75
	Appendix D - Specification	82

Appendix E - Warranties 84
Appendix F - Regulation..... 86
Appendix G - Contact information 89

1 Introduction

Congratulations on becoming the owner of the **EG102**, Ethernet IAD. You will now be able to access the Internet using your high-speed connection.

The **EG102** is an IAD integrating wireless, VoIP, and Ethernet interfaces into one device which provides the most flexibility and efficiency way to you. You could connect devices like PCs, Set-Top-Box, servers, phone, and so on easily by Ethernet, wireless, and VoIP interfaces to enjoy data, voice, and video services immediately through high speed connection.

This User Guide will show you how to connect your **EG102** Ethernet IAD and how to customize its configuration to get the most out of your new product.

Features

The list below contains the main features of the device (**EG102**) and may be useful to users with knowledge of networking protocols. The chapters throughout this guide will provide you with enough information to get the most out of your device.

The features include:

- Ethernet interface automatic speed-sensing and crossover correction supports up to 100 Mbps downstream and 100 Mbps upstream rates
- Integrated four-port 10/100BaseTX Ethernet switch with speed-sensing and crossover detection automatically
- 802.11b/g WLAN supports up to 54 Mbps transmission rate
- Provides wireless secure transmitting encryption by either 802.1x; WEP; WEP2; WPA; WPA2; TKIP; AES; 802.11i
- Supports 2 FXS ports for VoIP application including call waiting, call forward, call transfer and so on
- Support voice CODECs like G.711, G.726, G.729AB, BV16, ILBC, T.38 etc.; programmable G.168 echo cancellation, adaptive jitter buffer and packet loss concealment
- Supports Voice activity detection (VAD), comfort noise generation (CNG) and caller ID
- Supports DTMF tone detection and generation; Fax / Modem detection and pass-through
- Support SIP signaling protocol and bonus services like call forwarding, call waiting, call transfer, call busy, call return, enquiry service, CLIP/CLIR and three way conference
- Support Networking protocols such as PPP, Routing, DHCP server / relay / client
- Network address translation (NAT) functions to provide security for your LAN and multiple PCs surfing Internet simultaneously.
- Configuration and management by Web-browser through the Ethernet interface and remotely through WAN interface
- Firmware Support TR-069
- Upgradeable through HTTP / TFTP

Device Requirements

In order to use the **EG102**, you must have the following:

- ▶ High speed broadband service
- ▶ Instructions from your ISP on what type of Internet access you will be using, and the IP addresses needed to set up access
- ▶ One or more computers, each containing an Ethernet card (10Base-T/100Base-T network interface card (NIC)).
- ▶ For system configuration using the supplied web-based program: a web browser such as Internet Explorer v4 or later, or Netscape v4 or later. Note that version 4 of each browser is the minimum version requirement – for optimum display quality, use Internet Explorer v5, or Netscape v6.1



Note

You do not need to use a hub or switch in order to connect more than one Ethernet PC to the device. Instead, you can connect up to four Ethernet PCs directly to the device using the ports labeled LAN1 to LAN4 on the rear panel.

2 Getting to know the device

Parts Check

In addition to this document, your package should arrive containing the following:

- ▶ **The device (EG102)**
- ▶ **Ethernet cable**
- ▶ **Standard phone line cable**
- ▶ **Power adapter**





	One of EG102 devices
	RJ-45 Cable
	RJ-11 Cable
	Power adapter

Figure 1: Package Contents

Front Panel

The front panel of this device will be described here which cover all front panel definitions of other models.



Figure 2: Front Panel and LEDs

Connector and LED definitions from left to right:

Label	Color	Function
Power	Green or Red	GREEN off: No power GREEN on: Power on RED on: Self-test fails
WAN	Green	On: Physical layer sync up successfully. Off: No connection or no signal Blink: Physical sync up progress
Internet	Green or Red	GREEN off: No connection to Internet GREEN on: The device gets an IP address successfully in router mode GREEN blinking: Data being transmitted. RED on: The device is set as a BRIDGE or can not get an IP address in ROUTER mode.
TEL1	Green	On: make or receive a phone call Off: disconnect the phone call Blink: incoming call (ringing)
TEL2	Green	On: make or receive a phone call Off: disconnect the phone call Blink: incoming call (ringing)
LAN	Green	On: LAN link established and active Off: No LAN link Blink: Data being transmitted
WLAN	Green	On: WLAN service is enabled Off: WLAN service is disabled Blink: Data being transmitted

Rear Panel

The rear panel of this device will be described here which cover all rear panel definitions of other models.



Figure 3: Rear Panel Connections

Connector definition:

Label	Function
Antenna	Connects to the 802.11b/11g enabled wireless devices in LAN
Power Switch	ON/OFF switch
Power Jack	Connects to the supplied power adapter
TEL 1 ~ TEL2	Connects to analog telephones for VoIP service
LAN1 ~ LAN4	Connects the device via Ethernet to your devices in LAN
RES	A reset button to reset the device or reset to default settings
WAN Jack	Connects to the broadband network

3 Connecting your device

This chapter provides basic instructions for connecting the device to a computer or LAN and to the Internet.

In addition to configuring the device, you need to configure the Internet properties of your computer(s). For more details, see the following sections in Appendix A:

Configuring Ethernet PCs section

Configuring Wireless PCs section

This chapter assumes that you have already subscribed a broadband service with your Internet service provider (ISP). These instructions provide a basic configuration that should be compatible with your home or small office network setup. Refer to the subsequent chapters for additional configuration instructions.

Connecting the Hardware

This section describes how to connect the device to the power outlet and your computer(s) or network.



WARNING

Before you begin, turn the power off for all devices. These include your computer(s), your LAN hub/switch (if applicable), and the device.

The diagram below illustrates the hardware connections. The layout of the ports on your device may vary from the layout shown. Refer to the steps that follow for specific instructions.

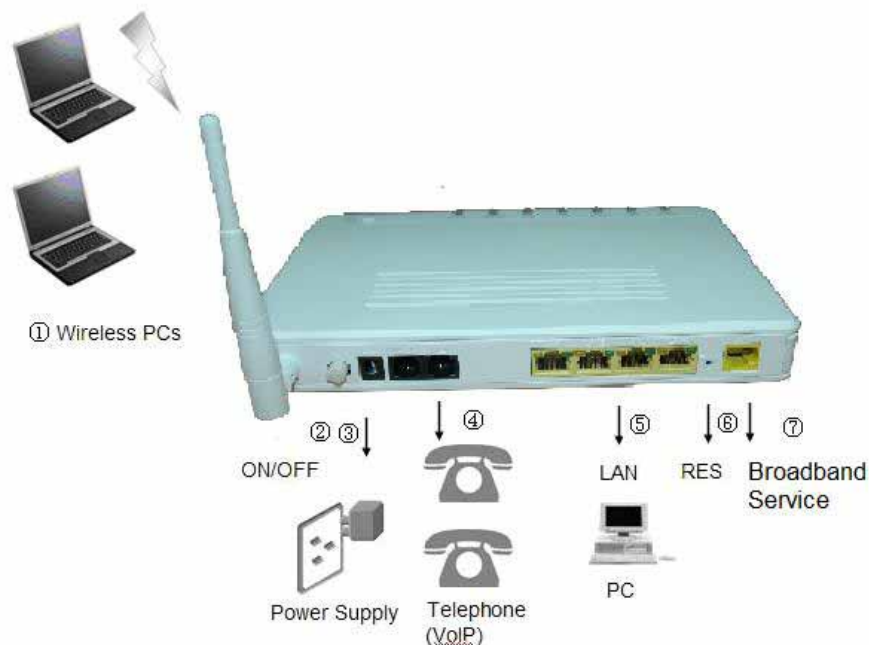


Figure 4: Overview of Hardware Connections

Step 1. Connect the WAN port to the broadband device like DSL modem, cable modem or fiber modem

Connect the WAN port to the broadband device like DSL modem, cable modem or fiber modem which has the high speed internet connection.

Step 2. Connect the Ethernet cable

Connect up to four single Ethernet computers or to a HUB/Switch directly to the device via Ethernet cable(s).

Note that the cables do not need to be crossover cables, the switch provides MDI and MDIX auto-detection.

Step 3. Attach the power connector

Connect the AC power adapter to the Power connector on the back of the device and plug the adapter into a wall outlet or power strip. Turn on and boot up your computer(s) and any LAN devices such as hubs or switches.

Step 4. Configure your Ethernet PCs

You must also configure the Internet properties on your Ethernet PCs. See Configuring Ethernet PCs section.

Or, step 5. Install a Wireless card and connect Wireless PCs if the device is with wireless interface

You can attach a Wireless LAN that enables Wireless PCs to access the Internet via the device.

You must configure your Wireless computer(s) in order to access your device. For complete instructions, see Configuring Wireless PCs section.

Next step

After setting up and configuring the device and PCs, you can log on to the device by following the instructions in "Getting Started with the Web pages" on chapter 4. The chapter includes a section called Testing your Setup, which enables you to verify that the device is working properly.

4 Getting Start with the Web pages

The device includes a series of Web pages that provide an interface to the software installed on the device. It enables you to configure the device settings to meet the needs of your network. You can access it through a web browser on a PC connected to the device.

Accessing the Web pages

To access the web pages, you need the following:

A laptop or PC connected to the LAN or WLAN port on the device.

A web browser installed on the PC. The minimum browser version requirement is Internet Explorer v4 or Netscape v4. For the best display quality, use latest version of Internet Explorer, Netscape or Mozilla Firefox. From any of the LAN computers, launch your web browser, type the URL, <http://192.168.1.1> in the web address (or location) box, and press [Enter]. The default IP address of the device is 192.168.1.1. Then enter the default username and password: admin/admin to access the configuration web page, if you have not changed the username and password. Please be informed that strings of username and password are case-sensitive.



Figure 5: Login Page

The Menu comprises:

Device Information: provides the basic information of the system. It includes sub menus, Summary, WAN, Statistics, Route, ARP and DHCP.



Advanced Setup: provides information about the current configuration of various system features with options to change the configuration. It includes the sub menus WAN, LAN, NAT, Security, Parental Control, Quality of Service, Routing, DNS, Print Server and Port Mapping.

- Advanced Setup**
- WAN
- LAN
- NAT
- Security
- Parental Control
- Quality of Service
- Routing
- DNS
- Print Server
- Port Mapping

Wireless Setup: provides wireless SSID, security, key and various options to change the configuration. It includes the sub menu, Basic, Security, MAC Filter, Wireless Bridge, Advanced, and Station Info.

- Wireless**
- Basic
- Security
- MAC Filter
- Wireless Bridge
- Advanced
- Station Info

Voice Setup: provides the VoIP Setup. It includes the sub menus, Interface Setup, Provisioning Setup, SIP Setup, Line 1 Setting, Line 2 Setting, RTP/Codec Setup and Operational Setup.

- Voice**
- Interface Setup
- Provisioning Setup
- SIP Setup
- Line 1 Setting
- Line 2 Setting
- RTP / Codec Setup
- Operational Setup

Diagnostic: provides the diagnostic utility to check the LAN and Wireless physical connection and WAN connection as well.






Diagnostics

Management: provides the administration utilities. It includes the sub menus, Settings, System Log, TR-069 Client, Internet Time, Access Control, Update Software, and Save/Reboot.



Commonly used buttons

The following buttons are used throughout the web pages:

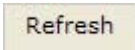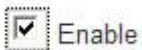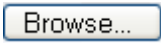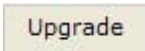Button	Function
	You could click this button to refresh the information on this current page again so that you could get the real time information.
	check button – these appear on many configuration pages. You will be asked to check if you want this feature be selected.
	This button appears on every configuration page. Click on this button once you are through with the changes and decide to save the made changes.
	You may need to browse to find a file which needs to be uploaded for new configuration.
	This button allows you to upgrade to the new configuration file attached using the Browse button.

The following terms are used throughout this guide in association with these buttons:

Click – point the mouse arrow over the button, menu entry or link on the screen and click the left mouse button. This performs an action, such as displaying a new page or performing the action specific to the button on which left mouse button is clicked.

Select – usually is used when describing which radio button to select from a list, or which entry to select from a drop-down list. Point the mouse arrow over the entry and left-click to select it. This does not perform an action – you will also be required to click on a button, menu entry or link in order to proceed.

Testing your Setup

Once you have connected your hardware and configured your PCs, any computer on your LAN should be able to use the device to access the Internet.

To test the connection, turn on the device, wait seconds till device booting up and then verify that the LEDs are illuminated as follows:

LED	Behavior
Power (PWR)	Solid red to indicate that the device is turned on. If this light is not on, check the power cable attachment.
Wireless (WLAN)	Solid green to indicate that the Wireless LAN function is operational.
LAN	Solid green to indicate that the device can communicate with your LAN.
WAN	Solid green to indicate that the device has successfully established a connection with your ISP.

Table 1: LED Indicators

If the LEDs illuminate as expected, test your Internet connection from a LAN computer. To do this, open your web browser, and type the URL of any external website (such as <http://www.yahoo.com>).

If the LEDs do not illuminate as expected, you may need to configure your Internet access settings using the information provided by your ISP. If the LEDs still do not illuminate as expected or the web page is not displayed, see Troubleshooting section or contact your ISP for assistance.

Default device settings

The device is preconfigured with default settings for use with a typical home or small office network.

The table below lists some of the most important default settings; these and other features are described fully in the subsequent chapters. If you are familiar with network configuration, review these settings to verify that they meet the needs of your network. Follow the instructions to change them if necessary. If you are unfamiliar with these settings, try using the device without modification, or contact your ISP for assistance.



WARNING

We strongly recommend that you contact your ISP prior to changing the default configuration.

Option	Default Setting	Explanation/Instructions
User/Password	admin/admin	User name and password to access the device
LAN Port IP Address	Assigned static IP address: 192.168.1.1 Subnet mask: 255.255.255.0	This is the IP address of the LAN port on the device. The LAN port connects the device to your Ethernet network. Typically, you will not need to change this address. See <i>Local Network</i> section.
DHCP (Dynamic Host Configuration Protocol)	DHCP server enabled with the following pool of addresses: 192.168.1.10 through 192.168.1.250 (Please be noted that the default DHCP IP address pool may be different in each firmware version.)	The device maintains a pool of private IP addresses for dynamic assignment to your LAN computers. To use this service, you must have set up your computers to accept IP information dynamically, as described in <i>DHCP Server</i> section.

Table 2: Values of Default Settings

5 Device Information

The Device Information web page menu includes the following submenus:

Summary

WAN

Statistics

Route

ARP

DHCP.

Summary

The Summary Page of the device shows the following information, Board ID, Software version, Bootloader version, Wireless driver version, LAN IP, Default gateway, Primary DNS server and Secondary DNS server.

Device Info

Board ID:	96359PONGEG
Software Version:	EG102_1.12XAT1_20080529
Bootloader (CFE) Version:	1.0.37-12.1
Wireless Driver Version:	4.150.10.15.cpe2.2

This information reflects the current status of your WAN connection.

LAN IPv4 Address:	192.168.1.1
Default Gateway:	
Primary DNS Server:	192.168.1.1
Secondary DNS Server:	192.168.1.1

Figure 6: Device Information

WAN

The WAN information of the device shows detailed information about the WAN connection such as VLAN, WAN port service information, Protocol, IGMP enabled or disabled, QoS enabled or disabled, IP address of WAN port and so on.

WAN Info

VLAN Mux	VLAN 802.1p	Con. ID	Service	Interface	Protocol	Igmp	QoS	State	Status	IPv4 Address
Off	0	1	ipow_1	eth0.6.2	IPoW	Disabled	Disabled	Enabled	Link Down	

Figure 7: WAN Port Information

Statistic

The Statistic Page of the device shows the following information of LAN and WAN ports, Interfaces, data transmitting (Received and Transmitted directions) in that interface such as total bytes, packets, error count and drop count.

Statistics -- LAN

Interface	Received				Transmitted			
	Bytes	Pkts	Errs	Drops	Bytes	Pkts	Errs	Drops
Ethernet	14425608	99051	0	0	40487285	98725	0	0
USB	0	0	0	0	0	0	0	0
Wireless	0	0	0	0	1958	18	0	0

Reset Statistics

Figure 8: Device LAN Port Statistic Information

Statistics -- WAN

Service	Protocol	Interface	Received				Transmitted			
			Bytes	Pkts	Errs	Drops	Bytes	Pkts	Errs	Drops
ipow_1	IPoW	eth0.6.2	0	0	0	0	0	0	0	

Reset Statistics

Figure 9: Device WAN Port Statistic Information

Route

The Route Page of the device shows the route table. It contains Destination IP address, Gateway, Subnet Mask, Flag, Metric, Service and Interface.

Device Info -- Route

Flags: U - up, ! - reject, G - gateway, H - host, R - reinstate
D - dynamic (redirect), M - modified (redirect).

Destination	Gateway	Subnet Mask	Flag	Metric	Service	Interface
192.168.1.0	0.0.0.0	255.255.255.0	U	0		br0

Figure 10: Device Route Table Information

ARP

The ARP Page of the device shows the ARP table mapping the IP address and related MAC address. The ARP table contains IP address, Flag, MAC address, Device Interface.

Device Info -- ARP

IP address	Flags	HW Address	Device
192.168.1.123	Complete	00:E0:18:FE:F5:1E	br0

Figure 11: Device ARP Table Information

DHCP

The DHCP Page of the device shows the DHCP table which DHCP server of device assigns the IP address to the PC requesting an IP address. The DHCP table contains Hostname, MAC address, IP address and Expires In.

Device Info -- DHCP Leases

Hostname	MAC Address	IP Address	Expires In
----------	-------------	------------	------------

Figure 12: Device DHCP Table Information

6 Advanced Setup

The Advance Setup menu includes the sub menus WAN, LAN, NAT, Security, Parental Control, Quality of Service, Routing, DNS, Print Control, and Port Mapping.

WAN

LAN

NAT

Security

Parental Control

QoS (Quality of Service)

Routing

DNS

Print Server

Port Mapping

WAN

You can configure your internet connection from this page. This page displays the details of existing internet connection. The device allows 1 bridge connection and 1 route connection existing at that same time without VLAN setting. But if you need more than 1 bridge connection or 1 route connection, the VLAN tag is required. Please refer below for more details. There are three connection types can be configured including PPP over Ethernet (PPPoE), IP over Ethernet, and Bridging.

Wide Area Network (WAN) Setup

Choose Add, Edit, or Remove to configure WAN interfaces.

Choose Save/Reboot to apply the changes and reboot the system.

VLAN Mux	VLAN 802.1p	Con. ID	Service	Interface	Protocol	Igmp	QoS	State	Remove	Edit
Off	0	1	ipow_1	eth0.6.2	IPoW	Disabled	Disabled	Enabled	<input type="checkbox"/>	Edit

Add Remove Save/Reboot

Figure 13: WAN Setup Page

To configure the WAN port, click Edit or Add to get the configuration pages. If there are many services (protocols) in the WAN interface, please enter the unique VLAN tag number to identify the service (protocol). Otherwise, please let it be as unchecked as default if you do not have any information from ISP about the VLAN settings.

WAN Configuration

To configure the WAN interface, either enter the appropriate 802.1Q VLAN ID with the check box to select multi WAN service over (eth0) interface or disable the check box for WAN service without VLAN tag. Note, before you select multi WAN service over (eth0) interface, you must make sure the VLAN ID is unique for the WAN service. Also, once you select WAN service without VLAN tag, you cannot configure any other WAN service without VLAN tag.

VLAN Mux - Enable Multiple Protocols Over WAN with 802.1Q VLAN Tag

VLAN ID: [3-4095]

Mark 802.1p: [0-7]

Figure 14: WAN Port Configuration

To configure VLAN tag on the WAN interface:

- ▶ Check the “*VLAN Mux – Enable Multiple Protocols Over WAN with 802.1Q VLAN Tag*”
- ▶ Enter the unique *VLAN ID*
- ▶ Enter the *Mark of 802.1p* from 0 to 7
- ▶ Click *Next* to configure the Connection Type

Connection Type

Select the type of network protocol for IP over Ethernet as WAN interface

- PPP over Ethernet (PPPoE)
- IP over Ethernet
- Bridging

Figure 15: WAN Connection Type Configuration

Bridging

Unselect the check box below to disable this WAN service

Enable Bridge Service:

Service Name:

Figure 16: WAN Connection, Bridging Configuration

To configure the Bridging settings:

- ▶ Check "Enable Bridge Service" to enable bridge service
- ▶ Enter the *service name* for this bridging interface.
- ▶ Click *Next*

WAN Setup - Summary

Make sure that the settings below match the settings provided by your ISP.

Connection Type:	Bridge
Service Name:	ipow_1
IP Address:	Not Applicable
Service State:	Enabled
NAT:	Enabled
Firewall:	Enabled
IGMP Multicast:	Not Applicable
Quality Of Service:	Disabled

Click "Save" to save these settings. Click "Back" to make any modifications.

NOTE: You need to reboot to activate this WAN interface and further configure services over this interface.

Figure 17: WAN Setup Summary

The *WAN Setup Summary* page shows all of parameters. Click *Save* if correct and click *Back* to restart the configuration again.

PPP over Ethernet (PPPoE)

PPP Username and Password

PPP usually requires that you have a user name and password to establish your connection. In the boxes below, enter the user name and password that your ISP has provided to you.

PPP Username:

PPP Password:

PPPoE Service Name:

Authentication Method:

Enable Fullcone NAT

Dial on demand (with idle timeout timer)

PPP IP extension

Use Static IP Address

Retry PPP password on authentication error

Enable PPP Debug Mode

Figure 18: WAN Connection, PPPoE Configuration

To configure the PPPoE settings:

- ▶ Enter the User's *PPP Username* and *Password*
- ▶ Enter the *Service Provider Name* if any
- ▶ Select the *Authentication Method* used during negotiation, default is AUTO.
- ▶ Check to *Enable Fullcone NAT*. The device will process all requests from the same internal IP address and. port are mapped to the same external IP address and port
- ▶ Check "*Dial On Demand*" if you do not need PPPoE connection always ON and enter the timeout value to disconnect the PPPoE connection when connection is idle and timeout. If you enter "0", zero for the timeout value, it means always ON.
- ▶ Check the "*PPP IP extension*" if your ISP requests to enable it, otherwise do not select it. This is a special service to forward IP address assigned by remote to the local device in the LAN.
- ▶ Check the "Use Static IP address" and enter the IP address if your ISP assigns a fixed IP address to you. Otherwise, do not select it.
- ▶ Check the "Retry PPP Password on Authentication Error" if necessary
- ▶ Check to "Enable PPP Debug Mode" to get more debug message for analysis if necessary
- ▶ Click *Next*

Enable IGMP Multicast, and WAN Service

Enable IGMP Multicast

Enable WAN Service

Service Name:

Figure 19: IGMP Multicast and WAN Service Configuration

Global Settings:

- ▶ Check to *Enable IGMP Multicast*
- ▶ Check to *Enable WAN Service*
- ▶ Enter the *Service Name*
- ▶ Click *Next*

The *WAN Setup Summary* page as previous WAN Setup Summary figure shows all of parameters. Click *Save* if correct and click *Back* to restart the configuration again.

IP over Ethernet

WAN IP Settings

Enter information provided to you by your ISP to configure the WAN IP settings.

Notice: DHCP can be enabled for PVC in MER mode or IP over Ethernet as WAN interface if "Obtain an IP address automatically" is chosen. Changing the default gateway or the DNS effects the whole system. Configuring them with static values will disable the automatic assignment from DHCP or other WAN connection.

If you configure static default gateway over this PVC in MER mode, you must enter the IP address of the remote gateway in the "Use IP address". The "Use WAN interface" is optional.

Obtain an IP address automatically

Use the following IP address:

WAN IPv4 Address:

WAN Subnet Mask:

Obtain default gateway automatically

Use the following default gateway:

Use IPv4 Address:

Use WAN Interface:

Obtain DNS server addresses automatically

Use the following DNS server addresses:

Primary DNS server:

Secondary DNS server:

Dhcp Vendor Class Identifier (option 60):

Enable Dhcp Vendor Info Extension (option 43)

Figure 20: WAN Connection, IP over Ethernet Configuration

To configure the IP over Ethernet settings:

- ▶ Select “*Obtain an IP address automatically*” or “*User the following (fixed) IP address*” and then also enter the *WAN IP address* and *WAN Subnet Mask*.
- ▶ Select “*Obtain default gateway automatically*” or “*User the following gateway*” and then also enter the *gateway IP address* and *Use WAN Interface* where packets will be sent to.
- ▶ Select “*Obtain DNS server address automatically*” or “*User the following DNS server addresses*” and then also enter the IP addresses of *Primary DNS server* and *Secondary DNS server*.
- ▶ Enter the DHCP Vendor Class Identifier (option 60) if necessary, DHCP server uses this class ID to group clients with similar configuration needs within a scope.
- ▶ Check to Enable DHCP Vendor Info Extension (option 43) if necessary.
- ▶ Click *Next*

Network Address Translation Settings

Network Address Translation (NAT) allows you to share one Wide Area Network (WAN) IP address for multiple computers on your Local Area Network (LAN).

Enable NAT

Enable Firewall

Enable IGMP Multicast, and WAN Service

Enable IGMP Multicast

Enable WAN Service

Service Name:

Figure 21: Network Address Translation Configuration

Global Settings:

- ▶ Check to *Enable NAT* if PCs in the LAN share the same WAN port IP address to surf Internet
- ▶ Check to *Enable Firewall* if you need the device to do the first firewall protection
- ▶ Check to *Enable IGMP Multicast*
- ▶ Check to *Enable WAN Service*
- ▶ Enter the *Service Name*
- ▶ Click *Next*

The *WAN Setup Summary* page shows all of parameters. Click *Save* if correct and click *Back* to restart the configuration again.

LAN

Local Area Network (LAN) Setup

Configure the VoIP Router IP Address and Subnet Mask for LAN interface. Save button only saves the LAN configuration data. Save/Reboot button saves the LAN configuration data and reboots the router to make the new configuration effective.

IP Address:

Subnet Mask:

Enable UPnP

Enable IGMP Snooping

Standard Mode

Blocking Mode

Disable DHCP Server

Enable DHCP Server

Start IP Address:

End IP Address:

Subnet Mask:

Leased Time (hour):

Domain Name:

Static IP Lease List: Please click on Save/Reboot button to make the new configuration effective. (A maximum 32 entries can be configured)

MAC Address	IP Address	Remove
<input type="button" value="Add Entries"/>	<input type="button" value="Remove Entries"/>	

Configure the second IP Address and Subnet Mask for LAN interface

Figure 22: LAN Configuration

To configure LAN:

- ▶ Enter the *IP address* which the CPE in the LAN will use to connect to the device. For example, enter 192.168.1.1
- ▶ Enter the *Subnet Mask*. For example, enter 255.255.255.0
- ▶ Check to *enable UPnP* if necessary
- ▶ Check to *Enable IGMP Snooping*. This feature will snoop all of IGMP packets and record related information. Therefore, multicast packets will be generated to the related LAN ports only to avoid the packet flooding on all of LAN ports. Select one of two modes, *Standard mode* or *Blocking mode*.
- ▶ Select to *Enable or Diable DHCP server*. If it is enabled, please enter the DHCP IP pool of *Start IP address* and *End IP address*. Enter the value of *leased time* in hour about the valid period of assigned IP address. The DHCP server ON (enabled) feature will enable this device to assign IP address automatically to PC in LAN if PC requests an IP address by DHCP client protocol.

- ▶ Besides the dynamic assignment of IP address, you can configure the static IP address too which will be reserved for the device with specified MAC address only. Click *Add Entries* to enter MAC address of the device and fixed IP address. You could check the entry and click *Remove Entries* to remove it.
- ▶ Check to enable and configure the *second IP address and subnet mask for LAN interface* if there are two separated networks in the LAN sharing the device to surf Internet. Then enter the *second IP address and subnet mask*.
- ▶ Click *Save* to save setting or *Save/Reboot* to save and then reboot the device

NAT (Network Access Translation)

The NAT feature provides the basic firewall feature to avoid hacker attacks from remote site. There are three more setting pages including virtual server, port trigger, and DMZ to provide specified service for remote users.

Virtual Server

Virtual Server enables you to run a server on your local network that can be accessed from the remote parties. You need to set up a rule to tell the device on which computer the server is held. When port virtual server is enabled, your router (the device) routes all the inbound traffic on a particular port to the chosen computer on your network.

NAT -- Virtual Servers Setup

Virtual Server allows you to direct incoming traffic from WAN side (identified by Protocol and External port) to the Internal server with private IP address on the LAN side. The Internal port is required only if the external port needs to be converted to a different port number used by the server on the LAN side. A maximum 32 entries can be configured.

Add Remove

Server Name	External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End	Server IP Address	Remote Host	Remove

Figure 23: Virtual Server Setup Configuration

Click Add to add a rule of virtual server.

NAT -- Virtual Servers

Select the service name, and enter the server IP address and click "Save/Apply" to forward IP packets for this service to the specified server. NOTE: The "Internal Port End" cannot be changed. It is the same as "External Port End" normally and will be the same as the "Internal Port Start" or "External Port End" if either one is modified. Remaining number of entries that can be configured:32

Server Name:

Select a Service: Select One

Custom Server:

Server IP Address:

Save/Apply

External Port Start	External Port End	Protocol	Internal Port Start	Internal Port End
		TCP		
		TCP		
		TCP		
		TCP		
		TCP		

Figure 24: Add A Rule Of Virtual Server

Global Setting

- ▶ Select a *service* from the predefined list or enter the name of *Custom Server*
- ▶ Enter the *Server IP Address* located in the LAN to provide the service to remote party
- ▶ Enter the *Start External Port #* and *End External Port #* that open to remote to access the service
- ▶ Select the *Protocol* from the list
- ▶ Enter the *Start Internal Port #* and *End Internal Port #* that may use different port # to secure the service. If you use the same port # as *external port #*, please leave *Internal Port #* as blank.
- ▶ Click *Save/Apply*

Port Triggering

The feature is similar to the virtual server, but provides a more secure way to provide your device. It opens up the port hole temporary and allows CPE in LAN to establish a connection with remote parties. Those ports are open only if a specified request from a PC in LAN is received, and then the device allows the remote parties to access to establish a connection with that PC in LAN.

NAT -- Port Triggering Setup

Some applications require that specific ports in the Router's firewall be opened for access by the remote parties. Port Trigger dynamically opens up the 'Open Ports' in the firewall when an application on the LAN initiates a TCP/UDP connection to a remote party using the 'Triggering Ports'. The Router allows the remote party from the WAN side to establish new connections back to the application on the LAN side using the 'Open Ports'. A maximum 32 entries can be configured.

Add Remove

Application	Trigger		Open		Remove	
Name	Protocol	Port Range		Protocol	Port Range	
		Start	End		Start	End

Figure 25: Port Triggering Setup

Click *Add* to add a rule of port triggering.

Global Setting

- ▶ Select a *service* from the predefined list or enter the name of *Custom Server*
- ▶ Enter the *Server IP Address* located in the LAN to provide the service to remote party
- ▶ Enter the *Start Trigger Port #* and *End Trigger Port #* that open to remote to access the service
- ▶ Select the *Trigger Protocol*
- ▶ Enter the *Start Open Port #* and *End Open Port #* that may use different port # to secure the service. If you use the same port # as *Trigger port #*, please leave *Open Port #* as blank.
- ▶ Select the *Open Protocol*

- ▶ Click *Save/Apply*

NAT -- Port Triggering

Some applications such as games, video conferencing, remote access applications and others require that spe Router's firewall be opened for access by the applications. You can configure the port settings from this screen existing application or creating your own (Custom application)and click "Save/Apply" to add it.

Remaining number of entries that can be configured:32

Application Name:

Select an application: Select One

 Custom application:

Save/Apply

Trigger Port Start	Trigger Port End	Trigger Protocol	Open Port Start	Open Port End	Open Protocol
		TCP			TCP
		TCP			TCP
		TCP			TCP
		TCP			TCP
		TCP			TCP
		TCP			TCP
		TCP			TCP

Save/Apply

Figure 26: Add A Rule Of Port Triggering

DMZ

A DMZ (DeMilitarized Zone) host is a computer on your network that can be accessed from the Internet. The de-militarised zone (DMZ) is for forwarding IP packets from the remote parties that are not fixed to any of the applications configured in the virtual server. These packets are forwarded to a designated DMZ host device. A DMZ is often used to host Web servers, FTP servers etc that need to be accessible from the Internet

NAT -- DMZ Host

The VoIP router will forward IP packets from the WAN that do not belong to any of the applications configured in the Virtual Servers table to the DMZ host computer.

Enter the computer's IP address and click "Apply" to activate the DMZ host.

Clear the IP address field and click "Apply" to deactivate the DMZ host.

DMZ Host IP Address:

Save/Apply

Figure 27: Add A Rule Of Port Triggering

Global Setting

- ▶ Enter the *DMZ Host IP address*

- ▶ Click *Save/Apply*

Security

The Security feature provides two more setting pages including IP filtering in Routed mode and Parental Control.

IP Address Filter

The device can block the packet in outgoing and incoming directions. By default, all outgoing IP packets from LAN is allowed to surf Internet, but some IP packets can be blocked by setting up filters.

Outgoing IP Filtering Setup

By default, all outgoing IP traffic from LAN is allowed, but some IP traffic can be **BLOCKED** by setting up filters.

Choose Add or Remove to configure outgoing IP filters.

Filter Name	Protocol	Source Address / Mask	Source Port	Dest. Address / Mask	Dest. Port	Remove

Figure 28: Outgoing IP Filter Setup

Click *Add* to add a rule of Outgoing IP Filtering.

Check *Remove* and click *Remove* to remove the specified entry.

Add IP Filter -- Outgoing

The screen allows you to create a filter rule to identify outgoing IP traffic by specifying a new filter name and at least one condition below. All of the specified conditions in this filter rule must be satisfied for the rule to take effect. Click 'Save/Apply' to save and activate the filter.

Filter Name:

Protocol:

Source IP address:

Source Subnet Mask:

Source Port (port or port:port):

Destination IP address:

Destination Subnet Mask:

Destination Port (port or port:port):

Figure 29: Add - Outgoing IP Filter Setup

Global Setting

- ▶ Enter the *Filter Name*
- ▶ Select the *Protocol* from the selection list.
- ▶ Enter the *Source IP Address* and *Subnet Mask (range of IP addresses)* of packet
- ▶ Enter the *one port or multi ports (port range)*
- ▶ Enter the *Destination IP Address* and *Subnet Mask (range of IP addresses)* of packet
- ▶ Enter the *one port or multi ports (port range)*
- ▶ Click *Save/Apply*

By default, all incoming IP packets from WAN are blocked to access PCs in LAN, but some IP packets can be accepted by setting up filters.

Incoming IP Filtering Setup

By default, all incoming IP traffic from the WAN is blocked when the firewall is enabled. However, some IP traffic can be **ACCEPTED** by setting up filters.

Choose Add or Remove to configure incoming IP filters.

Filter Name	VPI/VCI	Protocol	Source Address / Mask	Source Port	Dest. Address / Mask	Dest. Port	Remove
<input type="button" value="Add"/> <input type="button" value="Remove"/>							

Figure 30: Incoming IP Filter Setup

Click *Add* to add a rule of Incoming IP Filtering.

Check *Remove* and click *Remove* to remove the specified entry.

Add IP Filter -- Incoming

The screen allows you to create a filter rule to identify incoming IP traffic by specifying a new filter name and at least one condition below. All of the specified conditions in this filter rule must be satisfied for the rule to take effect. Click 'Save/Apply' to save and activate the filter.

Filter Name:	<input type="text"/>
Protocol:	<input type="text"/>
Source IP address:	<input type="text"/>
Source Subnet Mask:	<input type="text"/>
Source Port (port or port:port):	<input type="text"/>
Destination IP address:	<input type="text"/>
Destination Subnet Mask:	<input type="text"/>
Destination Port (port or port:port):	<input type="text"/>

WAN Interfaces (Configured in Routing mode and with firewall enabled only)

Select at least one or multiple WAN interfaces displayed below to apply this rule.

- Select All
- eth_0/eth0,2

Figure 31: Add - Incoming IP Filter Setup

Global Setting

- ▶ Enter the *Filter Name*
- ▶ Select the *Protocol* from the selection list.
- ▶ Enter the *Source IP Address* and *Subnet Mask (range of IP addresses)* of packet
- ▶ Enter the *one port or multi ports (port range)*
- ▶ Enter the *Destination IP Address* and *Subnet Mask (range of IP addresses)* of packet
- ▶ Enter the *one port or multi ports (port range)*
- ▶ Select the *WAN interfaces* which will be applied with this incoming IP filter rule.
- ▶ Click *Save/Apply*

Parental Control

This feature allows you to configure some of PCs in LAN to surf Internet in specific time period.

Time of Day Restrictions -- A maximum 16 entries can be configured.

Username	MAC	Mon	Tue	Wed	Thu	Fri	Sat	Sun	Start	Stop	Remove
<input type="button" value="Add"/> <input type="button" value="Remove"/>											

Figure 32: Parental Control Configuration

Click *Add* to add a rule of schedule for parental control.

Check *Remove* and click *Remove* to remove the specified entry.

Time of Day Restriction

This page adds time of day restriction to a special LAN device connected to the Router. The 'Browser's MAC Address' automatically displays the MAC address of the LAN device where the browser is running. To restrict other LAN device, click the "Other MAC Address" button and enter the MAC address of the other LAN device. To find out the MAC address of a Windows based PC, go to command window and type "ipconfig /all".

User Name

Browser's MAC Address

Other MAC Address

 (xx:xx:xx:xx:xx:xx)

Days of the week	Mon	Tue	Wed	Thu	Fri	Sat	Sun
Click to select	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Start Blocking Time (hh:mm)

End Blocking Time (hh:mm)

Figure 33: Time of Day Restriction Configuration

Global Setting

- ▶ Enter the *Username*
- ▶ Select the *Browser's MAC Address* or *Other MAC Address* to enter the specific PC MAC address.
- ▶ Check *those days* you want to block above PC to surf Internet.
- ▶ Enter the *Start Blocking Time* and *End Blocking Time*
- ▶ Click *Save/Apply*.

Quality of Service

The Quality of Service feature provides a method to prioritize the packet and arrange a better efficiency of bandwidth. In other words, some traffic such as voice or video has handled as higher priority than others such as data to get near real time response.

QoS -- Queue Management Configuration

If Enable QoS checkbox is selected, choose a default DSCP mark to automatically mark incoming traffic without reference to a particular classifier. Click 'Save/Apply' button to save it.

Note: If Enable QoS checkbox is not selected, all QoS will be disabled for all interfaces.

Note: The default DSCP mark is used to mark all egress packets that do not match any classification rules.

Enable QoS

Select Default DSCP Mark

Save/Apply

Figure 34: Quality of Service Configuration

Global Setting

- ▶ Check Enable QoS (Quality of Service)
- ▶ Select "Default DSCP Mark" from the list if the egress packets that do not match any classification rules.
- ▶ Click Save/Apply

QoS Classification

You need to define one or more *classes* of data traffic and set the priority for each of classes.

Quality of Service Setup																
Choose Add or Remove to configure network traffic classes.																
MARK					TRAFFIC CLASSIFICATION RULES											
Class Name	DSCP Mark	Queue ID	802.1P Mark	Lan Port	Protocol	DSCP	Source Addr./Mask	Source Port	Dest. Addr./Mask	Dest. Port	Source MAC Addr./Mask	Destination MAC Addr./Mask	802.1P	Order	Enable/Disable	Remove
<input type="button" value="Add"/> <input type="button" value="Save/Apply"/>																

Figure 35: Quality of Service Setup

Click *Add* to add a class of Quality of Service.

Check *Remove* and click *Remove* to remove the specified entry.

Add Network Traffic Class Rule

The screen creates a traffic class rule to classify the upstream traffic, assign queue which defines the precedence and the interface and optionally overwrite the IP header DSCP byte. A rule consists of a class name and at least one condition below. All of the specified conditions in this classification rule must be satisfied for the rule to take effect. Click 'Save/Apply' to save and activate the rule.

Traffic Class Name:

Rule Order: ▼

Rule Status: ▼

Assign 802.1p Priority and/or DSCP Mark for the class

If non-blank value is selected for 'Assign Differentiated Services Code Point (DSCP) Mark', the corresponding DSCP byte in the IP header of the upstream packet is overwritten by the selected value.

Assign Classification Queue: ▼

Assign Differentiated Services Code Point (DSCP) Mark: ▼

Specify Traffic Classification Rules

Enter the following conditions either for IP level, SET-1, or for IEEE 802.1p, SET-2.

SET-1

Physical LAN Port: ▼

Protocol: ▼

Differentiated Services Code Point (DSCP) Check: ▼

Source IP Address:

Source Subnet Mask:

UDP/TCP Source Port (port or port:port):

Destination IP Address:

Destination Subnet Mask:

UDP/TCP Destination Port (port or port:port):

Source MAC Address:

Source MAC Mask:

Destination MAC Address:

Destination MAC Mask:

SET-2

802.1p Priority: ▼

Figure 36: Quality of Service Configuration

The screen creates a traffic class rule to classify the upstream traffic, assign queue priority which defines the precedence and type of service. A rule consists of a class name and at least one condition below. All of the specified conditions in this classification rule must be satisfied for the rule to take effect. Click 'Save/Apply' to save and activate the rule. If a non-zero value is selected for IP precedence or a value other than "Normal" for IP type of service, the corresponding TOS byte in the IP header of the upstream packet will be overwritten by the selected value.

Global Setting

- ▶ Enter the *Traffic Class Name*
- ▶ Select the *Rule Order* and *Rule Status* from the list
- ▶ Select the *Assign Classification Queue* from the list
- ▶ Select the *Assign Differentiated Service Code Point (DSCP) Mark* from the list. If the field is not empty, the corresponding DSCP byte in the IP header of packet will be overwritten by the selected value.

- ▶ Select the *Physical LAN Port* from the list which packets through this port will be classified.
- ▶ Select the Protocol from the list which packets with this protocol will be classified.
- ▶ Select the *Differentiated Service Code Point (DSCP) Mark Check* from the list.
- ▶ Enter the *Source IP Address*, *Source Subnet Mask*, and *UDP/TCP Source Port* (single port or port range (Port:Port)).
- ▶ Enter the *Destination IP Address*, *Destination Subnet Mask*, and *UDP/TCP Destination Port* (single port or port range (Port:Port)).
- ▶ Enter *Source MAC Address* and *Source MAC Mask*
- ▶ Enter *Destination MAC Address* and *Destination MAC Mask*
- ▶ Select the *802.1q Priority* from the list.
- ▶ Click *Apply* to add this QoS class

Routing

The section shows the IP addresses or address routes for the computers connected to the gateway to reach different destinations, such as the local network, the gateway, or the Internet. The Routing feature provides three more setting pages including Default Gateway, Static Route and RIP.

Default Gateway

Routing -- Default Gateway

If Enable Automatic Assigned Default Gateway checkbox is selected, this router will accept the first received default gateway assignment from one of the PPPoE or DHCP enabled connection(s). If the checkbox is not selected, enter the static default gateway AND/OR a WAN interface. Click 'Save/Apply' button to save it.

NOTE: If changing the Automatic Assigned Default Gateway from unselected to selected, You must reboot the router to get the automatic assigned default gateway.

Enable Automatic Assigned Default Gateway

Save/Apply

Figure 37: Default Gateway Configuration

Global Setting

- ▶ Check *Enable Automatic Assigned Default Gateway* checkbox, this router will accept the first received default gateway assignment from one of the PPPoE or Static IP/DHCP interface. If the checkbox is not checked, enter the static default gateway AND/OR a WAN interface.
- ▶ Click *Save* to save the configuration

NOTE: If changing the Automatic Assigned Default Gateway from "unselected" to "selected", you must reboot the router to get the automatic assigned default gateway

Static Route

You could create your own routing entry by the destination network address and interface to configure the data traffic in the network. Click Add to add entry.

Routing -- Static Route Add

Enter the destination network address, subnet mask, gateway AND/OR available WAN interface then click "Save/Apply" to add the entry to the routing table.

Destination Network Address:

Subnet Mask:

Use Gateway IP Address

Use Interface

Figure 38: Static Route Configuration

Global Setting

- ▶ Enter the *Destination Network Address* and *Subnet Mask* (range)
- ▶ Check *Use Gateway IP Address* and enter the *IP address* where packet will be forwarded to.
- ▶ Check the *Use Interface* and select it from the list
- ▶ Click *Save* to save the configuration

Policy Routing

You could create your own routing entry by the LAN interface or source IP address and WAN interface to configure the data traffic in the network. Click Add to add entry.

Policy Routing Setup

Enter the policy name, policies, and WAN interface then click "Save/Apply" to add the entry to the policy routing table. Note: If selected "MER" as WAN interface, default gateway must be configured.

Policy Name:

Physical LAN Port:

Source IP:

Use Interface

Default Gateway:

Figure 39: Policy Route Configuration

Global Setting

- ▶ Enter the Policy Name of this configuration
- ▶ Select the physical LAN interface (port) from the list
- ▶ Enter the *Source IP Address*
- ▶ Select the *Use Interface* from the list
- ▶ Enter the *Gateway IP Address* where packet will be forwarded to.
- ▶ Click *Save* to save the configuration

RIP

Routing -- RIP Configuration

To activate RIP for the device, select the 'Enabled' radio button for Global RIP Mode. To configure an individual interface, select the desired RIP version and operation, followed by placing a check in the 'Enabled' checkbox for the interface. Click the 'Save/Apply' button to save the configuration, and to start or stop RIP based on the Global RIP mode selected.

Global RIP Mode Disabled Enabled

Interface	VPI/VCI	Version	Operation	Enabled
br0	(LAN)	2	Active	<input type="checkbox"/>
eth0.6.2	0/0/35	2	Passive	<input type="checkbox"/>

Save/Apply

Figure 40: RIP Configuration

Global Setting

- ▶ Select the Enable to activate this RIP service
- ▶ Select the desired *RIP version* and *operation*, followed by placing a check in the 'Enabled' checkbox for the interface.
- ▶ Click *Save* to save the configuration

DNS

The DNS feature provides two more setting pages including DNS server setting and Dynamic DNS.

DNS Server

DNS Server Configuration

If 'Enable Automatic Assigned DNS' checkbox is selected, this router will accept the first received DNS assignment from one of the PPPoA, PPPoE or MER/DHCP enabled PVC(s) during the connection establishment. If the checkbox is not selected, enter the primary and optional secondary DNS server IP addresses. Click 'Save' button to save the new configuration. You must reboot the router to make the new configuration effective.

Enable Automatic Assigned DNS

Primary DNS server:
 Secondary DNS server:

Save

Figure 41: DNS Configuration

Global Setting

- ▶ Check *Enable Automatic Assigned DNS* checkbox, this router will accept the first received DNS assignment from one of the PPPoE or Static IP/DHCP interface. If the checkbox is not checked, enter the IP addresses of the static primary DNS server and secondary DNS server.
- ▶ Click *Save* to save the configuration

Dynamic DNS

The Dynamic DNS feature allows you to bind the dynamic assigned WAN IP address into a specified domain name. You could pass this domain name to friends to access your service in your site instead of informing them every times if WAN IP address is changed.

Dynamic DNS

The Dynamic DNS service allows you to alias a dynamic IP address to a static hostname in any of the many domains, allowing your DSL router to be more easily accessed from various locations on the Internet.

Choose Add or Remove to configure Dynamic DNS.

Hostname	Username	Service	Interface	Remove
<input type="button" value="Add"/> <input type="button" value="Remove"/>				

Figure 42: Dynamic DNS Configuration

Click *Add* to add Dynamic DNS setting.

Check *Remove* and click *Remove* to remove the specified entry.

Add dynamic DDNS

This page allows you to add a Dynamic DNS address from DynDNS.org or TZO.

D-DNS provider	<input type="text" value="DynDNS.org"/>
Hostname	<input type="text"/>
Interface	<input type="text" value="eth_0_1/eth0.2"/>
DynDNS Settings	
Username	<input type="text"/>
Password	<input type="text"/>
<input type="button" value="Save/Apply"/>	

Figure 43: Add a Dynamic DNS

Global Setting

- ▶ Select the Dynamic DNS service provider from the list
- ▶ Enter the your Hostname
- ▶ Select the *Interface* from the list where the device can reach it for registration
- ▶ Enter the *Username* and *Password*
- ▶ Click *Save/Apply* to save the configuration

Print Server

The Print Server feature provides you to setup a network printer in your LAN environment..

Print Server settings

This page allows you to enable / disable printer support.

Enable on-board print server.

Printer name	<input type="text"/>
Make and model	<input type="text"/>

Figure 44: Print Server Configuration

Global Setting

- ▶ Check *Enable On-Board Print Server* checkbox
- ▶ Enter the Printer Name which you like others to see it while searching network printer.
- ▶ Enter the maker and model name..
- ▶ Click *Save* to save the configuration

Port Mapping

The page provides Port Mapping configuration. In default, the LAN1 to LAN4, wireless and virtual wireless_guest are grouped together as a single Ethernet environment. Port Mapping supports multiple ports to VLAN groups. Each VLAN group will perform as an independent network. To support this feature, you must create mapping groups with appropriate LAN and WAN interfaces.

Port Mapping supports multiple ports to VLAN groups. Each VLAN group will perform as an independent network. To support this feature, you must create mapping groups with appropriate LAN and WAN interfaces using the Add button. The Remove button will remove the grouping and add the ungrouped interfaces to the Default group. Only the default group has IP interface.

Group Name	Vlan Id	Enable/Disable	Remove	Edit	Interfaces	Enable/Disable
Default	1				USB	<input checked="" type="checkbox"/>
					LAN1	<input checked="" type="checkbox"/>
					LAN2	<input checked="" type="checkbox"/>
					LAN3	<input checked="" type="checkbox"/>
					LAN4	<input checked="" type="checkbox"/>
					Wireless(SSID1)	<input checked="" type="checkbox"/>
					Wireless_Guest(SSID2)	<input checked="" type="checkbox"/>
					Wireless_Guest1(SSID3)	<input checked="" type="checkbox"/>
					Wireless_Guest2(SSID4)	<input checked="" type="checkbox"/>

Figure 45: Port Mapping Configuration

Click *Add* to add VLAN setting.

Check *Remove* and click *Remove* to remove the specified entry.

Port Vlan Configuration

To create a port vlan configuration:

1. Enter the Group name and select VLAN ID and interfaces from the available interface list and add it to the grouped interface required mapping of the ports. The group name must be unique.
2. Click Save/Apply button to make the changes effective immediately

Note that the selected interfaces will be removed from their existing groups and added to the new group.

Group Name :

Vlan Id :

Grouped Interfaces **Available Interfaces**

LAN1
LAN2
LAN3
LAN4

Figure 46: Port VLAN Configuration

Global Setting

- ▶ Enter the *Group Name*
- ▶ Select the value of *VLAN ID*
- ▶ Select the available *LAN ports* from available LAN interfaces into grouped interface. The selected LAN interface will be removed from its original group and joined this new group.
- ▶ Click *Save/Apply* to save the configuration.

7 Wireless Setup

The Wireless Setup web page menu comprises:

- Basic**
- Security**
- MAC Filter**
- Wireless Bridge**
- Advanced**
- Quality of Service**
- Station Information**

Basic

The device provides wireless connection to wireless clients. This page allows you to enable the wireless service, hide the network from active scan and set the SSID (Service Set Identifier). Besides, it allows you to create a virtual wireless AP which could use different SSID and security key.

Wireless -- Basic

This page allows you to configure basic features of the wireless LAN interface. You can enable or disable the wireless LAN interface, hide the network from active scans, set the wireless network name (also known as SSID) and restrict the channel set based on country requirements. Click "Apply" to configure the basic wireless options.

- Enable Wireless
- Hide Access Point
- Clients Isolation
- Disable WMM Advertise

SSID:

BSSID:

Country:

Max Clients:

Wireless - Guest/Virtual Access Points:

Enabled	SSID	Hidden	Isolate Clients	Disable WMM Advertise	Max Clients	BSSID
<input type="checkbox"/>	Guest	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	16	N/A
<input type="checkbox"/>	Guest1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	16	N/A
<input type="checkbox"/>	Guest2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	16	N/A

Figure 47: Wireless Setting – Basic

- ▶ Check to enable *Wireless feature*
- ▶ Check to enable *Hide Access Point* to hide from active scan of wireless client
- ▶ Check to enable *Clients Isolation* that wireless clients can not share information to each other.
- ▶ Check to disable *WMM Advertise* where WMM stands for WiFi Multimedia. This technology maintains the priority of audio, video and voice applications in a Wi-Fi network so that other applications and traffic are handled in lower priority.
- ▶ Enter the *wireless network name (SSID)*
- ▶ The *BSSID* is the MAC address of device
- ▶ Select the *Country* from the list
- ▶ Enter the *Maximum Wireless Client Number* allowed to associate with the device
- ▶ Check to enable *Wireless Guest Network* to create a virtual wireless AP with different SSID and security key. There are three more guests available for configuration.
- ▶ Enter the Guest SSID
- ▶ Click *Save* to save the configuration

Security

The device provides wireless connection with security including authentication method and data encryption to protect your data in the air.

Wireless -- Security

This page allows you to configure security features of the wireless LAN interface. You may setup configuration manually.

Manual Setup AP

You can set the network authentication method, selecting data encryption, specify whether a network key is required to authenticate to this wireless network and specify the encryption strength. Click "Save/Apply" when done.

Select SSID:	<input type="text" value="EG102"/>
Network Authentication:	<input type="text" value="Open"/>
WEP Encryption:	<input type="text" value="Disabled"/>
<input type="button" value="Save/Apply"/>	

Figure 48: Wireless Setting – Security

Global Setting

- ▶ Select the SSID from the list, then set the related security parameters
- ▶ Select the method of Network Authentication. It could be OPEN (none), Shared, 802.1X, WPA, WPA-PSK, WPA2, WPA2-PSK, Mixed WPA2/WPA, Mixed WPA2/WPA-PSK
- ▶ Select the method of *WEP Encryption* if *Network Authentication* is Open. Select the *Encryption Strength* with 64bits or 128bits, select the current *Key Index* and enter the key and four keys when necessary if WEP Encryption is enabled.

Network Authentication:

WEP Encryption:

Encryption Strength:

Current Network Key:

Network Key 1:

Network Key 2:

Network Key 3:

Network Key 4:

Enter 13 ASCII characters or 26 hexadecimal digits for 128-bit encryption keys
 Enter 5 ASCII characters or 10 hexadecimal digits for 64-bit encryption keys

- ▶ If the *Network Authentication* is Shared. Select the *Encryption Strength* with 64bits or 128bits, select the current *Key Index* and enter the key and four keys when necessary as the same as *Network Authentication* is Open and *WEP Encryption* is enabled.
- ▶ If the *Network Authentication* is 802.1X, enter the *IP address* and *Port number* of Radius server, *Radius Key*, enable or disable *WEP encryption*. If *WEP Encryption* is enabled, select the *Encryption Strength* with 64bits or 128bits, select the current *Key Index* and enter the key and four keys when necessary.

Network Authentication:

RADIUS Server IP Address:

RADIUS Port:

RADIUS Key:

WEP Encryption:

Encryption Strength:

Current Network Key:

Network Key 1:

Network Key 2:

Network Key 3:

Network Key 4:

Enter 13 ASCII characters or 26 hexadecimal digits for 128-bit encryption keys
 Enter 5 ASCII characters or 10 hexadecimal digits for 64-bit encryption keys

- ▶ If the *Network Authentication* is WPA, enter *WPA Group Rekey Interval*, the *IP address* and *Port number* of Radius server, *Radius Key*, WPA Encryption Method (TKIP, AES, TKIP+AES), enable or disable *WEP encryption*. If WEP Encryption is enabled, select the *Encryption Strength* with 64bits or 128bits, select the current *Key Index* and enter the key and four keys when necessary.

Network Authentication:	<input type="text" value="WPA"/>
WPA Group Rekey Interval:	<input type="text" value="0"/>
RADIUS Server IP Address:	<input type="text" value="0.0.0.0"/>
RADIUS Port:	<input type="text" value="1812"/>
RADIUS Key:	<input type="text"/>
WPA Encryption:	<input type="text" value="TKIP"/>
WEP Encryption:	<input type="text" value="Disabled"/>

- ▶ If the *Network Authentication* is WPA-PSK (pre-shared key), enter the WPA Pre-Shared Key and enter *WPA Group Rekey Interval*, *WPA Encryption Method* (TKIP, AES, TKIP+AES), enable or disable *WEP encryption*. If WEP Encryption is enabled, select the *Encryption Strength* with 64bits or 128bits, select the current *Key Index* and enter the key and four keys when necessary.

Network Authentication:	<input type="text" value="WPA-PSK"/>
WPA Pre-Shared Key:	<input type="text"/> Click here to display
WPA Group Rekey Interval:	<input type="text" value="0"/>
WPA Encryption:	<input type="text" value="TKIP"/>
WEP Encryption:	<input type="text" value="Disabled"/>

- ▶ If the *Network Authentication* is WPA2, select Enable or Disable for *WPA2 Pre-authentication*, enter value of *Network Re-Auth Interval*, enter value of *WPA Group Rekey Interval*, the *IP address* and *Port number* of Radius server, *Radius Key*, WPA Encryption Method (TKIP, AES, TKIP+AES), enable or disable *WEP encryption*. If WEP Encryption is enabled, select the *Encryption Strength* with 64bits or 128bits, select the current *Key Index* and enter the key and four keys when necessary.

Network Authentication:	<input type="text" value="WPA2"/>
WPA2 Preauthentication:	<input type="text" value="Disabled"/>
Network Re-auth Interval:	<input type="text" value="36000"/>
WPA Group Rekey Interval:	<input type="text" value="0"/>
RADIUS Server IP Address:	<input type="text" value="0.0.0.0"/>
RADIUS Port:	<input type="text" value="1812"/>
RADIUS Key:	<input type="text"/>
WPA Encryption:	<input type="text" value="AES"/>
WEP Encryption:	<input type="text" value="Disabled"/>

- ▶ If the *Network Authentication* is WPA2-PSK (pre-shared key), enter the WPA Pre-Shared Key and enter *WPA Group Rekey Interval*, *WPA Encryption Method* (TKIP, AES, TKIP+AES), enable or disable *WEP encryption*. If WEP Encryption is enabled, select the *Encryption Strength* with 64bits or 128bits, select the current *Key Index* and enter the key and four keys when necessary.

Network Authentication:

WPA Pre-Shared Key: [Click here to display](#)

WPA Group Rekey Interval:

WPA Encryption:

WEP Encryption:

- ▶ If the *Network Authentication* is mixed WPA2/WPA, select Enable or Disable for *WPA2 Pre-authentication*, enter value of *Network Re-Auth Interval*, enter value of *WPA Group Rekey Interval*, the *IP address* and *Port number* of Radius server, *Radius Key*, *WPA Encryption Method* (TKIP, AES, TKIP+AES), enable or disable *WEP encryption*. If WEP Encryption is enabled, select the *Encryption Strength* with 64bits or 128bits, select the current *Key Index* and enter the key and four keys when necessary.

Network Authentication:

WPA2 Preauthentication:

Network Re-auth Interval:

WPA Group Rekey Interval:

RADIUS Server IP Address:

RADIUS Port:

RADIUS Key:

WPA Encryption:

WEP Encryption:

- ▶ If the *Network Authentication* is Mixed WPA2/WPA-PSK (pre-shared key), enter the WPA Pre-Shared Key and enter *WPA Group Rekey Interval*, *WPA Encryption Method* (TKIP, AES, TKIP+AES), enable or disable *WEP encryption*. If WEP Encryption is enabled, select the *Encryption Strength* with 64bits or 128bits, select the current *Key Index* and enter the key and four keys when necessary

Network Authentication:

WPA Pre-Shared Key: [Click here to display](#)

WPA Group Rekey Interval:

WPA Encryption:

WEP Encryption:

- ▶ Click Save/Apply to save the configuration.

MAC Filter

Wireless -- MAC Filter

Select SSID: EG102

MAC Restrict Mode: Disabled Allow Deny

MAC Address Remove

Add Remove

Figure 49: Wireless Setting – Input MAC Address

Wireless -- MAC Filter

Enter the MAC address and click "Apply" to add the MAC address to the wireless MAC address filters.

MAC Address:

Save/Apply

Figure 50: Wireless Setting – Define the action plan for those MAC address

Global Setting

- ▶ Select the *MAC Restrict Mode* from one of Disable (no MAC filter), Allow (only those PCs with MAC addresses in the table can surf Internet) and Deny (only those PCs with MAC addresses in the table can not surf Internet).
- ▶ Click Add to add more wireless MAC address or click Remove to remove the specified entry.
- ▶ Enter the *MAC Address of wireless client*
- ▶ Click Save/Apply to save the configuration.

Wireless Bridge

The wireless bridge feature is also known as WDS (Wireless Distribution System).

Wireless -- Bridge

This page allows you to configure wireless bridge features of the wireless LAN interface. You can select Wireless Bridge (also known as Wireless Distribution System) to disable access point functionality. Selecting Access Point enables access point functionality. Wireless bridge functionality will still be available and wireless stations will be able to associate to the AP. Select Disabled in Bridge Restrict which disables wireless bridge restriction. Any wireless bridge will be granted access. Selecting Enabled or Enabled(Scan) enables wireless bridge restriction. Only those bridges selected in Remote Bridges will be granted access. Click "Refresh" to update the remote bridges. Wait for few seconds to update. Click "Save/Apply" to configure the wireless bridge options.

AP Mode:	<input type="text" value="Access Point"/>
Bridge Restrict:	<input type="text" value="Enabled"/>
Remote Bridges MAC Address:	<input type="text"/> <input type="text"/>

Figure 51: Wireless Bridge Configuration

Global Setting

- ▶ Set the *AP mode* as Access Point or Wireless Bridge
- ▶ When the *AP mode* is set to Wireless Bridge, the *Wireless Bridge Restrict* determine where it can communicate with all other wireless bridges and also wireless clients (set *Bridge Restrict* is Disabled) or just the specified MAC addresses of below wireless bridge devices (set *Bridge Restrict* is Enable).
- ▶ Click Reflash to get the updated information
- ▶ Click *Save/Apply* to save the configuration

Advanced

This page allows you to configure advanced parameters for wireless communication.

Wireless -- Advanced

This page allows you to configure advanced features of the wireless LAN interface. You can select a particular channel on which to operate, force the transmission rate to a particular speed, set the fragmentation threshold, set the RTS threshold, set the wakeup interval for clients in power-save mode, set the beacon interval for the access point, set XPress mode and set whether short or long preambles are used.

Click "Apply" to configure the advanced wireless options.

Band:	2.4GHz	
Channel:	11	Current: 11
Auto Channel Timer (min)	0	
54g™ Rate:	Auto	
Multicast Rate:	Auto	
Basic Rate:	Default	
Fragmentation Threshold:	2346	
RTS Threshold:	2347	
DTIM Interval:	1	
Beacon Interval:	100	
Global Max Clients:	16	
XPress™ Technology:	Disabled	
54g™ Mode:	54g Auto	
54g™ Protection:	Auto	
Preamble Type:	long	
Transmit Power:	100%	
WMM(Wi-Fi Multimedia):	Auto	
WMM No Acknowledgement:	Disabled	
WMM APSD:	Enabled	

Save/Apply

Figure 52: Wireless Setting – Advanced

Global Setting

- ▶ Enable *AP Isolation* if you do not want AP to be able to communicate with each other.
- ▶ Set the *Wireless Communication Band*. If you do not know it, please it as default.
- ▶ Select the channel from the list
- ▶ Set the *Wireless Communication Rate*, AUTO means to use the highest rate if possible)
- ▶ Set the *Rate for Multicast Packets*, AUTO means to use the highest if possible.
- ▶ Set the *Basic Rate*
- ▶ Set the *Fragmentation Threshold* values from 256 to 2364 bytes. If the value is too small, it may cause a result in poor performance.
- ▶ Set the *RTS (Ready to Send) Threshold*
- ▶ Set *DTIM Interval*. DTIM stands for Delivery Traffic Indication Message. This is a beacon and is a countdown informing wireless clients of the next window for listening to broadcast and multicast messages. It is a wake-up interval for clients in power-saving mode.
- ▶ Set *Beacon Interval*. The interval in milliseconds between beacon transmissions.

- ▶ Set the *Maximum Associated Wireless Client*
- ▶ Set *XPress Technology* enabled or disabled.
- ▶ Set *54g Mode* to 54g Auto, 54g Performance, 802.11b, 54g LRS (limited rate support).
- ▶ Set *54g Protection* to AUTO if there are 802.11g and 802.11b coexisting in the wireless network.
- ▶ Set *Afterburner Technology*
- ▶ Set *Preamble Type*. A preamble is a signal that sync up the timing between devices.
- ▶ Set *Transmission Power*. Larger value means more coverage.
- ▶ Set WMM (Wireless Multimedia)
- ▶ Set WMM No Acknowledgement. Enabling no-acknowledge can result in more efficient throughput but high error rates
- ▶ Set WMM APSD (Automatic Power Save Delivery)
- ▶ Click *Save/Apply* to save the configuration

Station Information

The table shows up whole associated wireless clients the device and their status.

Wireless -- Authenticated Stations

This page shows authenticated wireless stations and their status.

MAC	Associated	Authorized	SSID	Interface
-----	------------	------------	------	-----------

Refresh

Figure 53: Wireless Setting – Station Information

Global Setting

- ▶ Click Refresh to get the latest updated information

8 Voice Setup

The Voice Setup web page menu comprises:

Interface Setup

Provisioning Setup

SIP Setup

Line 1 Setup

Line 2 Setup

RTP/Codec Setup

Operational Setup

Interface Setup

This page allows you to specify the voice packets to pass through the specific interface and to choose different country code to set voice related parameters including ringing type, ringing frequency, tone type, tone frequency, cadence, etc..

Voice -- Interface Setup

Interface name:

Locale selection:

Figure 54: Voice Configuration – Interface Setup

Global Setting:

- ▶ Select *Interface Name* that voice packet go through
- ▶ Select *Location* where you are located
- ▶ Click button to *Start SIP client* or *Stop SIP client*

Provisioning Setup

This page allows you to setup the provisioning server if ISP uses this method to provide customer's configuration profile. The device will use TFTP protocol to get the configuration information from the server.

Voice -- Provisioning Setup

Enable Provisioning

Use TFTP URL :

3DES Key :

Figure 55: Voice Configuration – Provisioning Setup

Global Setting:

- ▶ Check to Enable Provisioning
- ▶ Check to Use TFTP URL and also enter the TFTP URL with configuration file name if applicable
- ▶ Enter the 3DES Key if the configuration file is encrypted
- ▶ Click Save to save the configuration.

SIP Setup

This page allows you to setup the parameters of SIP protocol.

Voice -- SIP Setup

SIP Transport Protocol : UDP TCP

Listen Port :

Maximum Redirect :

Failover Retries : seconds

STUN Server : Port :

External IP :

Keep-Alive Interval : (>=30) seconds.

Session Expires : seconds. (value 0 means not to initiate session expiry time)

Enable Session Timer Feature.

Figure 56: Voice Configuration – SIP Setup

Global Setting:

- ▶ Select the *SIP Transport Protocol*: UDP or TCP.
- ▶ Enter the *Listen Port* number which is a port number of UDP or TCP.
- ▶ Enter the *Maximum Redirect* number which is the number that VoIP may allow to redirect or forward to.
- ▶ Enter the *Failover Retries* number of seconds which ISP requests to retransmit if there is no response received.
- ▶ Enter the *STUN Server* (IP address or host name) and *Port Number*. The STUN server is used to pass through NAT firewall. The default port number for STUN application is 3478. Please check with your ISP to get detailed information.
- ▶ Enter the *External IP*. It is a WAN IP address on the router which the ATA is connected for the NAT mapping.
- ▶ Enter the *Keep-alive Interval* of seconds. The device sends packet to inform SIP server periodically.
- ▶ Enter the *Session Expired* of seconds. The device will close the session in seconds after the call is disconnected.
- ▶ Check to *Enable Session Timer Feature*.
- ▶ Click *Save* to save the configuration

Line 1 or Line 2 Setting

This page allows you to setup the parameters of *Line 1* or *Line 2* including username, password, codec, and call features.

Voice -- Line 1 Configuration

Line Enable	No	
UID (@Domain Name)	: [] @ []	
Password	: []	
Display Name	: []	
Login ID	: []	
Primary Proxy Server	: []	Part : 5060
Secondary Proxy Server	: []	Part : 5060
Registrar Server	: []	Part : 5060
Outbound Proxy Server	: []	Part : 5060
Register Expiry Time	: 3600	seconds
NAT Keep-Alive Method	: Disabled	
SIP Proxy-Require	: []	
User Preferred Audio Codec	: G.711 u-Law	
RTP Base Port	: 10000	
<input type="checkbox"/> Use STUN for NAT Mapping		
<input type="checkbox"/> Support VIA rport		
<input type="checkbox"/> Use DNS SRV		

Figure 57: Voice Configuration – Line 1 or Line 2 Setting

Global Setting:

- ▶ Select to Enable this line or not
- ▶ Enter *UID (User Name)* for Line 1 or Line 2
- ▶ Enter the *Password*
- ▶ Enter the *Display Name* which will be shown in the called party when you call out.
- ▶ Enter the *Login ID* if your login username is not the UID.
- ▶ Enter the *Primary Proxy Server* IP address or domain name and also port number
- ▶ Enter the *Second Proxy Server* IP address or domain name and also port number is applicable
- ▶ Enter the *Registrar Server* IP address or domain name and also port number if applicable.
- ▶ Enter the *Outbound Proxy Server* IP address or domain name and also port number if applicable.
- ▶ Enter the *Register Expiry Number* of seconds which the device will try to register in SIP server during the time period.
- ▶ Select the *NAT Keep-alive Method* from the list
- ▶ Enter the *SIP Proxy Require* if necessary
- ▶ Select the *User Preferred Audio Codec* from the list
- ▶ Enter the *RTP Base number*
- ▶ Check to enable *Use STUN for NAT Mapping to pass through NAT*
- ▶ Check to enable *VIA rport*
- ▶ Check to enable *DNS SVR*
- ▶ Click *Save* to save the configuration

RTP/Codec Setup

This page allows you to setup the parameters of Real Time Protocol (RTP) and voice codec to control the quality of voice connection.

Voice -- RTP/Codec Setup

RTP Packet Period : 20 milliseconds

DTMF Method : Auto

RFC 2833 DTMP PayLoad Type : 101

Jitter Buffer : 60

ECHO Cancellation : 8 milliseconds

Fax Codec : G.711 u-Law

Enable FAX Pass Through

Enable CED Tone Detection

Available Audio Codecs :

G.711 u-Law G.711 A-Law G.723.1

G.729 A/B G.726 16kbps G.726 24kbps

G.726 32kbps G.726 40kbps

Save

Figure 58: Voice Configuration – RTP/Codec Setup

Global Setting:

- ▶ Enter the *TOS* byte. The *TOS* stands for Type of Service. It is defined in the RFC1394 and used in RTP packet.
- ▶ Enter the *RTP Packet Period* of milliseconds. Suggest leave it as default for better quality.
- ▶ Select the *DTMF Method* from the list. The device provides in-band DFTM signaling and out-band DTMF signaling.
- ▶ Enter the *DTMP PayLoad Type*, the default is 101.
- ▶ Select the *Jitter Buffer* and Echo Cancellation from the list. Suggest leave it as default for better quality.
- ▶ Select the *Fax Codec* from the list and check to *Enable Fax Pass Through* and *Enable CED Tone Detection*.
- ▶ Check to select the available Audio Codec from the list.
- ▶ Click *Save* to save the configuration

Operational Setup

This page allows you to configure the call features including call forward, call waiting, three-way conference and so on as well as tones, FXS and caller ID.

Voice -- Operational Setup

Call Features

Features	User1	User2
Call Forward Unconditionally	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Call Forward No Response	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Call Forward on Busy	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Calling Line Identification Restriction	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Call Waiting	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Three-way Conference	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Unattended Call Transfer	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Attended Call Transfer	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Call Back Busy Subscriber	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Call return	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Message waiting indication	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Caller ID	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
Fax	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>

Feature Timer

Redialing duration : minutes

Retry interval : seconds

Onhook delay : seconds

PSTN session progress timeout : seconds

Call waiting ring timeout : seconds

Signal Timer

Call waiting period : seconds

Reorder delay : seconds

Ring timeout : seconds

No answer timeout : seconds

Min. hook flash time : milliseconds

Max. hook flash time : milliseconds

Operational Flags

Enable Call Forwarding On Server

Enable Call Return On Server

Enable Call Waiting On Server

Allow Incoming Call to Phone1

Allow Incoming Call to Phone2

CLIR Method : Anonymouse Form Use Privacy Header

Phone 1 Use : SP User1 SP User2

Phone 2 Use : SP User1 SP User2

Service Activation Codes

Cfwd Unconditional Activation : (number)# Cfwd Unconditional Deactivation :

Cfwd No Answer Activation : (number)# Cfwd No Answer Deactivation :

Cfwd On Busy Activation : (number)# Cfwd On Busy Deactivation :

Call Waiting Activation : Call Waiting Deactivation :

Figure 59: Voice Configuration – Operational Setup 1

Internal Call	<input type="text" value="###"/>	Call Return	<input type="text" value="*69"/>
CCBS Cancel	<input type="text" value="#37"/>	Unattended Call Transfer	<input type="text" value="*90"/>
CLIR	<input type="text" value="*67"/>	CLIP	<input type="text" value="*82"/>

Dial Plan

User1 :

.->#13-

User2 :

.->#13-

Figure 60: Voice Configuration – Operational Setup 2

Global Setting:

- ▶ Place a check in the list of call features which is supported in Line 1 and Line 2.
- ▶ Enter the value of feature timers including Redialing Duration, Retrial Interval, OnHook Delay, PSTN Session Progress Timeout, Call Waiting Ring Timeout.
- ▶ Enter the value of Signal Timers including Call Waiting Period, Reorder Delay, Ring Timeout, No Answer Timeout, Min. Hook Flash Time, Max. Hook Flash Time.
- ▶ Place a check in the list of Operational Flags including Enable Call Forwarding on Server, Enable Call Return on Server, Allow Incoming Call to Phone 1, Allow Incoming Call to Phone 2, CLIR Method (Anonymous Form or Use Privacy Header), Phone 1 Use (SIP1 or SIP2), Phone 2 Use (SIP1 or SIP2)
- ▶ Define the Service Activation Code for each call service
- ▶ Configure your own Dial Plan.
- ▶ Click Save to save the configuration

Those parameters are related to the VoIP service provided by Voice Service Provider. Please leave it as default or consult technician in advance to understand and configure it.

9 Voice Supplementary Service

Call Forward

There are three types of call forward, call forward unconditional, call forward no response and call forward on busy. You could activate and deactivate these features by press keypad in the phone.

Call Forward Unconditional

Call Forward Unconditional (CFU), this enables the customer to have all incoming calls, which are addressed to his number, forwarded to another number. For the duration that Call Forward Unconditional is enabled, a stuttering dial tone shall be played instead of the normal dial tone when picking up the phone.

To configure CFU to any number:

Activation: * 21 * number #

Deactivation: # 21 #

Call Forward No Response

Call Forward No Response (CFNR) enables the customer to have all incoming calls, which meet with no reply and are addressed to his number, forwarded to another number.

To configure CFNR to any number:

Activation: * 61 * number # (forwarding after 30 s)

or: * 61 * number * ss # where ss (5-60 s) is the time until forwarding

Deactivation: # 61 #

Call Forward on Busy

Call Forward Busy Subscriber (CFBS) enables the customer to have all incoming calls, which meet with busy and are addressed to his number, forwarded to another number.

To configure CFBS to any number :

Activation: * 67 * number #

Deactivation: # 67 #

Secret Number, Calling Line Identification Restriction (CLIR)

This is a phone service that called party will not see the incoming caller phone number.

Static Configuration

Secret Number is usually an extra service and customers are charged an additional monthly fee. It must be possible to provision from remote if CLIR is enabled or disabled for each outgoing phone call.

On per call basis

Caller Line Identification Restriction (CLIR) enables a calling party to prevent presentation, on a call by call basis, of his number to the called party. This is in Sweden a regulatory requirement for an operator to provide.

Activation: # 31 # is dialed immediately before the called party number.

Call Waiting

Call Waiting (CW) enables a busy customer to be notified of a new incoming call that is in a waiting position. Then customer has the choice of accepting, rejecting or ignoring the waiting call, making use of switching orders based on R (**R means the hook flash button**).

Call Waiting customer configuration

Call Waiting is permanently enabled or disabled until disabled / enabled again. It is not on a per call basis.

Activation: * 43 #

Deactivation: # 43 #

Force Busy

To reject the new call without answering it: R (dial tone) 0. The "R (dial tone) 0" means to press hook flash button, hear dial tone and then press 0 button. The CPE will send a Busy signal to the calling party.

R0 shall also temporarily deactivate the call waiting service for the rest of the active call. When the subscriber hangs up the service shall automatically be activated again.

Pickup and Release old

To release the old call and take the new call: R (dial tone) 1

Pickup and put old on hold

To place the old (current) call on hold and take the new call: R (dial tone) 2

Switch between 2 active calls

To switch between the old and the new call: R (dial tone) 2

Timeout

The customer receives a call when in a conversation, and chooses to ignore the call waiting notification, the calling party will receive a busy signal after 24 seconds.

Three Parties Conference

Three party conference can be invoked from Call waiting or Enquiry services. When the subscriber has two active calls, one on hold and one in conversation state, it shall be possible to connect all three into a three parties conference.

To connect to both the old and the new call: R (dial tone) 3

To establish the three parties conference, the call shall not be possible in Call waiting state, i.e. before the subscriber has answered the waiting call. Both calls must be answered before they are connected into a conference. When a three party conference is invoked the conference warning tone shall be sent to all three parties every 15 seconds throughout the call.

You are also able to switch back to a two parties state (one in conversation mode and the other is on hold) by R (dial tone) 2 in conference state. All other actions (R plus any other digits) are disregarded in this state.

If the controlling subscriber hangs up the calls are released immediately. If any of the non-controlling subscribers hang up in conference state, the disconnection rules for normal calls shall be followed, i.e. a calling subscriber is released immediately and a called subscriber is disconnected after 90 seconds

Call Transfer

The Call Transfer enables the customer to transfer the current call to another third party.

Procedure: When A and B are engaged in a call, if A wants to transfer the call to C, so B and C can make a conversation. A presses R and dial *90*Number#, when B hear the ring back tone, the call with A will be disconnected and A hears the reorder tone and hangs up the call. The call is transferred.

Enquiry service

The Enquiry service ENQ enables the customer to interrupt communications on an existing call, make a new call and then subsequently, switch between the old and new call, release one call or connect all three parties into a three parties conference..

Procedure: Two parties are engaged in a call. One of the parties (the active party) places the other on hold by pressing R. The active party receives dial tone and makes a call to a new party. After the new party has replied, the active party may return to the old party by pressing R1 and switch between the old and new party by pressing R2. To make a conference call by press R3. If the new party does not reply, the active party may stop the call attempt and return to the party on hold by pressing R.

Call Back Busy Subscriber (Busy)

Call Back Busy Subscriber (CCBS) enables a calling customer (A), encountering a busy destination (B), to have the retry dialing automatically until destination becomes idle, without having to make a new call attempt.

Activation: press 5 when encountering a busy tone

Deactivation: # 37 # deactivates all CCBS

The device will reattempt the last made call every 60 seconds if CCBS is activated.

The B Party alerts the original calling customer (A) with a ringing signal when the busy destination (B) becomes idle, if within 30 minutes. When the original calling customer answers the request, the former busy called party will start ringing.

Timeout for call back ringing signal to A and B-side is 60 seconds. After the timeout both sides must be disconnected from the call.

B has the possibility to make a new call before A answers the call back.

Call Back last number called (Call Return)

The customer has the possibility to press *69# to call back the last number that called. It is not possible to call secret numbers. This call will be screened through the dial plans to screen any call blocking functionality enabled.

10 Diagnostic

Diagnostic

This page allows you to diagnostic the connections of LAN, Wireless and WAN ports.

ipow_1 Diagnostics

Your modem is capable of testing your DSL connection. The individual tests are listed below. If a test displays a fail status, click "Rerun Diagnostic Tests" at the bottom of this page to make sure the fail status is consistent. If the test continues to fail, click "Help" and follow the troubleshooting procedures.

Test the connection to your local network

Test your ENET1 Connection:	PASS	Help
Test your ENET2 Connection:	FAIL	Help
Test your ENET3 Connection:	FAIL	Help
Test your ENET4 Connection:	PASS	Help
Test your USB Connection:	DOWN	Help
Test your Wireless Connection:	DOWN	Help

Test the connection to your Internet service provider

Ping default gateway:	FAIL	Help
Ping primary Domain Name Server:	PASS	Help

Figure 61: Diagnostic

Click *Test* to run the test script and get the diagnostic result.

11 Management

The Management web page menu comprises:

Settings
System Log
TR-069 Client
Internet Time
Access Control
Update Software
Save/Reboot

Settings

This page allows you to backup the current configuration of the device, update the configuration, and restore default configuration (factory setting).

Settings - Backup

Backup VoIP router configurations. You may save your router configurations to a file on your PC.

Backup Settings

Figure 62: Backup Settings

To click Backup Settings to backup the current settings of the device into file in PC.

Tools -- Update Settings

Update DSL router settings. You may update your router settings using your saved files.

Settings File Name:

Update Settings

Figure 63: Restore Default Settings

To click *Browser* to specify the configuration file (settings) in PC and click *Update Settings* to upload the settings to the device.

Tools -- Restore Default Settings

Restore VoIP router settings to the factory defaults.



Figure 64: Restore Default Settings

To click Restore Default Settings to restore the factory default settings.

System Log

This page allows you to view system log and also configure system log that way you want to see.

System Log

The System Log dialog allows you to view the System Log and configure the System Log options.

Click "View System Log" to view the System Log.

Click "Configure System Log" to configure the System Log options.



Figure 65: Management Configuration – System Log

Global Setting

- ▶ Click *View System Log* to view system log
- ▶ Click *Configure System Log* to configure the way you want to see

System Log -- Configuration

If the log mode is enabled, the system will begin to log all the selected events. For the Log Level, all events above or equal to the selected level will be logged. For the Display Level, all logged events above or equal to the selected level will be displayed. If the selected mode is 'Remote' or 'Both,' events will be sent to the specified IP address and UDP port of the remote syslog server. If the selected mode is 'Local' or 'Both,' events will be recorded in the local memory.

Select the desired values and click 'Save/Apply' to configure the system log options.

Log: Disable Enable

Log Level:

Display Level:

Mode:



Figure 66: Management Configuration – Configure System Log

Global Setting

- ▶ Select to *Enable Log* function or not
- ▶ Select *Log Level* from the list
- ▶ Select *Display Level* from the list
- ▶ Select *Mode* from the list
- ▶ Click *Save/Apply* to save the configuration.

TR-069 Client

This page allows you to access TR-069 ACS (Auto-Configuration Server). The ACS can provision, configure, and diagnostic the device from remote site.

TR-069 client - Configuration

WAN Management Protocol (TR-069) allows a Auto-Configuration Server (ACS) to perform auto-configuration, provision, collection, and diagnostics to this device.

Select the desired values and click "Apply" to configure the TR-069 client options.

Inform Disable Enable

Inform Interval:

ACS URL:

ACS User Name:

ACS Password:

Display SOAP messages on serial console Disable Enable

Connection Request Authentication

Connection Request User Name:

Connection Request Password:

Figure 67: Management Configuration – TR-069 client

Global Setting

- ▶ Select to *Enable* or *Disable* to send *Inform* packet to ACS.
- ▶ Enter the *Inform Interval* number of seconds. The Inform packet will be sent to ACS periodically.
- ▶ Enter the *ACS URL* to reach ACS
- ▶ Enter the *ACS User Name* and *Password*
- ▶ Select to enable or disable *displaying SOAP messages on serial console*
- ▶ Check to select *Connection Request Authentication*
- ▶ Enter the *Connection Request User Name* and *Password*
- ▶ Click *Save/Apply* to save the configuration

Internet Time

This page allows you to sync up the real time clock from Internet. .

Time settings

This page allows you to the modem's time configuration.

Automatically synchronize with Internet time servers

Save/Apply

Figure 68: Internet Time Configuration

Global Setting

- ▶ Check to *Automatically synchronize with Internet time servers*
- ▶ Click *Save* to save your settings

Access Control

This submenu provides you local (LAN) or remote (WAN) access to the device. This may help the IT support staff to configure the router locally or remotely.

Service

Access Control -- Services

A Service Control List ("SCL") enables or disables services from being used.

Services	LAN	WAN
FTP	<input checked="" type="checkbox"/> Enable	<input type="checkbox"/> Enable
HTTP	<input checked="" type="checkbox"/> Enable	<input checked="" type="checkbox"/> Enable
ICMP	Enable	<input checked="" type="checkbox"/> Enable
SSH	<input checked="" type="checkbox"/> Enable	<input type="checkbox"/> Enable
TELNET	<input checked="" type="checkbox"/> Enable	<input checked="" type="checkbox"/> Enable
TFTP	<input checked="" type="checkbox"/> Enable	<input type="checkbox"/> Enable

Save/Apply

Figure 69: Management Configuration – Access Control: Service

Global Setting:

- ▶ Specify the method by which you wish to access the router locally or remotely by selecting it. The following are the methods available for local and remote access:
 - FTP
 - HTTP
 - ICMP (Ping)
 - SSH
 - TELNET
 - TFTP

- ▶ Click *Save/Apply* to save the configuration.

IP Address**Access Control -- IP Address**

The IP Address Access Control mode, if enabled, permits access to local management services from IP addresses contained in the Access Control List. If the Access Control mode is disabled, the system will not validate IP addresses for incoming packets. The services are the system applications listed in the Service Control List.

Access Control Mode: Disable Enable



Figure 70: Management Configuration – Access Control: IP Address

Click to enable or disable Access Control by IP address.

Click *Add* to add IP address.

Check *Remove* and click *Remove* to remove the specified entry.

Access Control

Enter the IP address of the management station permitted to access the local management services, and click 'Save/Apply.'

IP Address:

Figure 71: Management Configuration – Access Control: Add IP Address

Global Setting:

- ▶ Add the IP Address which is permitted to access the device and execute the management service.

- ▶ Click *Save/Apply* to save the settings.

Password

There are three levels of access accounts: admin, support, and user. The user name “admin” has unrestricted access to change and view configuration of the device. The user name “support” is used to allow an ISP technician to access the device for maintenance and to run diagnostics. The user name “user” can access the device,

view configuration settings and statistics, as well as update the device software.

Access Control -- Passwords

Access to your DSL router is controlled through three user accounts: admin, support, and user.

The user name "admin" has unrestricted access to change and view configuration of your DSL Router.

The user name "support" is used to allow an ISP technician to access your DSL Router for maintenance and to run diagnostics.

The user name "user" can access the DSL Router, view configuration settings and statistics, as well as, update the router's software.

Use the fields below to enter up to 16 characters and click "Apply" to change or create passwords. Note: Password cannot contain a space.

Username:	<input type="text"/>
Old Password:	<input type="text"/>
New Password:	<input type="text"/>
Confirm Password:	<input type="text"/>

Figure 72: Management Configuration – Access Control: Password

Global Setting:

- ▶ Select the level of *Username* (*admin*, *support*, or *user*). The user name "admin" has the unrestricted access to change the view configuration of the device. The user name "support" is used to allow ISP technician to access the device for maintenance and to run diagnostics. The user name "user" can access the device, view configuration settings and statistics, as well as, update the router's software.
- ▶ Enter the *Old Password*
- ▶ Enter the *New Password* and *Confirm Password*
- ▶ Click *Save/Apply* to save the configuration.

Update Software

This page allows you to upgrade the software (firmware).

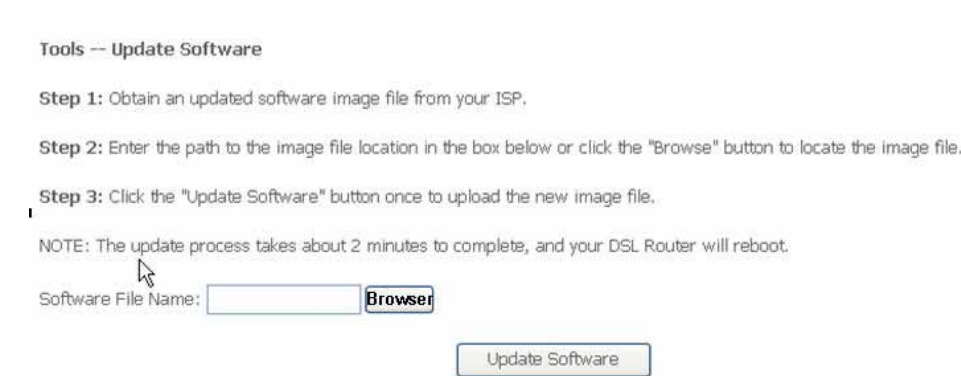


Figure 73: Management Configuration – Update Software

Global Setting:

- ▶ First of all, you have to get the updated software (firmware) from ISP or manufacture.
- ▶ Click *Browser* to specify the location and filename
- ▶ Click *Update Software* to start the process. It could take minutes to complete it.

Save / Reboot

This page allows you to save current configuration and reboot to use the settings.

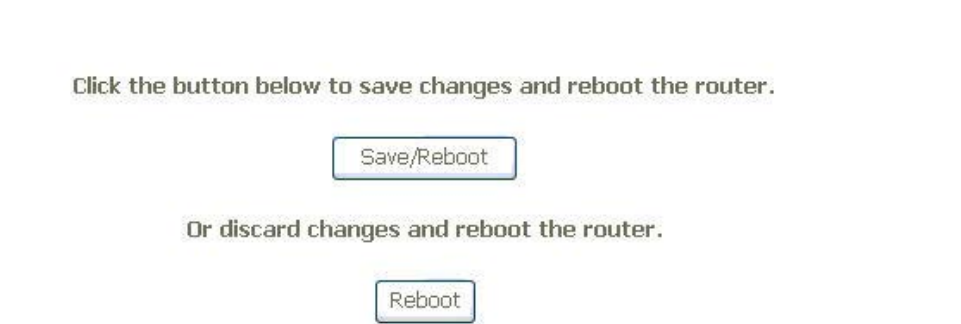


Figure 74: Management Configuration – Save/Reboot (no picture)

Global Setting

- ▶ Click *Save/Reboot* to save the changes and reboot the device.
- ▶ Click *Reboot* to discard changes and reboot the device only

Appendix A - Configuring the Internet Settings

This appendix provides instructions for configuring the Internet settings on your computers to work with the device.

Configuring Ethernet PCs

Before you begin

By default, the device automatically assigns the required Internet settings to your PCs. You need to configure the PCs to accept this information when it is assigned.



Note

In some cases, you may want to assign Internet information manually to some or all of your computers rather than allow the device to do so. See

Assigning static Internet information to your PCs section.

- If you have connected your LAN PCs via Ethernet to the device, follow the instructions that correspond to the operating system installed on your PC:
- Windows® XP PCs
- Windows 2000 PCs
- Windows Me PCs
- Windows\ 95, 98 PCs
- Windows NT 4.0 workstations
- If you want to allow Wireless PCs to access your device, follow the instructions in Configuring Wireless PCs below..

Windows® XP PCs

In the Windows task bar, click the *Start* button, and then click *Control Panel*.

Double-click the Network Connections icon.

In the *LAN or High-Speed Internet* window, right-click on the icon corresponding to your network interface card (NIC) and select *Properties*. (Often, this icon is labelled *Local Area Connection*). The *Local Area Connection* dialog box is displayed with a list of currently installed network items.

Ensure that the check box to the left of the item labelled *Internet Protocol TCP/IP* is checked and click *Properties*.

In the Internet Protocol (TCP/IP) Properties dialog box, click the radio button labelled Obtain an IP address automatically. Also click the radio button labelled Obtain DNS server address automatically.

Click *OK* twice to confirm your changes, and then close the Control Panel.

Windows 2000 PCs

First, check for the IP protocol and, if necessary, install it:

In the Windows task bar, click the *Start* button, point to *Settings*, and then click *Control Panel*.

Double-click the Network and Dial-up Connections icon.

In the *Network and Dial-up Connections* window, right-click the Local Area Connection icon, and then select *Properties*. The *Local Area Connection Properties* dialog box is

displayed with a list of currently installed network components. If the list includes Internet Protocol (TCP/IP), then the protocol has already been enabled. Skip to step 10.

If Internet Protocol (TCP/IP) does not display as an installed component, click *Install*.

In the *Select Network Component Type* dialog box, select *Protocol*, and then click *Add*.

Select *Internet Protocol (TCP/IP)* in the Network Protocols list, and then click *OK*. You may be prompted to install files from your Windows 2000 installation CD or other media. Follow the instructions to install the files.

If prompted, click *OK* to restart your computer with the new settings. Next, configure the PCs to accept IP information assigned by the device.

In the *Control Panel*, double-click the Network and Dial-up Connections icon.

In the *Network and Dial-up Connections* window, right-click the Local Area Connection icon, and then select *Properties*.

In the Local Area Connection Properties dialog box, select *Internet Protocol (TCP/IP)*, and then click *Properties*.

In the Internet Protocol (TCP/IP) Properties dialog box, click the radio button labelled Obtain an IP address automatically. Also click the radio button labelled Obtain DNS server address automatically.

Click *OK* twice to confirm and save your changes, and then close the Control Panel.

Windows Me PCs

In the Windows task bar, click the Start button, point to Settings, and then click Control Panel.

Double-click the Network and Dial-up Connections icon.

In the Network and Dial-up Connections window, right-click the Network icon, and then select *Properties*. The Network Properties dialog box displays with a list of currently installed network components. If the list includes Internet Protocol (TCP/IP), then the protocol has already been enabled. Skip to step 11.

If Internet Protocol (TCP/IP) does not display as an installed component, click *Add*.

In the *Select Network Component Type* dialog box, select *Protocol*, and then click *Add*.

Select Microsoft in the Manufacturers box.

Select Internet Protocol (TCP/IP) in the Network Protocols list, and then click *OK*. You may be prompted to install files from your Windows Me installation CD or other media. Follow the instructions to install the files.

If prompted, click *OK* to restart your computer with the new settings. Next, configure the PCs to accept IP information assigned by the device.

In the Control Panel, double-click the Network and Dial-up Connections icon.

In Network and Dial-up Connections window, right-click the Network icon, and then select *Properties*.

In the Network Properties dialog box, select TCP/IP, and then click *Properties*.

In the TCP/IP Settings dialog box, click the radio button labelled Server assigned IP address. Also click the radio button labelled Server assigned name server address.

Click *OK* twice to confirm and save your changes, and then close the Control Panel.

Windows 95, 98 PCs

First, check for the IP protocol and, if necessary, install it:

In the Windows task bar, click the *Start* button, point to *Settings*, and then click *Control Panel*.

Double-click the Network icon. The *Network* dialog box displays with a list of currently installed network components. If the list includes TCP/IP, and then the protocol has already been enabled. Skip to step 9.

If TCP/IP does not display as an installed component, click *Add*. The Select Network Component Type dialog box displays.

Select *Protocol*, and then click *Add...*The Select Network Protocol dialog box displays.

Click on *Microsoft* in the Manufacturers list box, and then click *TCP/IP* in the Network Protocols list box.

Click *OK* to return to the Network dialog box, and then click *OK* again. You may be prompted to install files from your Windows 95/98 installation CD. Follow the instructions to install the files.

Click *OK* to restart the PC and complete the TCP/IP installation. Next, configure the PCs to accept IP information assigned by the device.

Open the Control Panel window, and then click the Network icon.

Select the network component labelled TCP/IP, and then click *Properties*. If you have multiple TCP/IP listings, select the listing associated with your network card or adapter.

In the TCP/IP Properties dialog box, click the IP Address tab.

Click the radio button labelled Obtain an IP address automatically.

Click the DNS Configuration tab, and then click the radio button labelled *Obtain an IP address automatically*.

Click *OK* twice to confirm and save your changes. You will be prompted to restart Windows.

Click *Yes*.

Windows NT 4.0 workstations

First, check for the IP protocol and, if necessary, install it:

In the Windows NT task bar, click the *Start* button, point to *Settings*, and then click *Control Panel*.

In the Control Panel window, double click the Network icon.

In the *Network dialog* box, click the *Protocols* tab. The *Protocols* tab displays a list of currently installed network protocols. If the list includes TCP/IP, then the protocol has already been enabled. Skip to step 9.

If TCP/IP does not display as an installed component, click *Add*.

In the *Select Network Protocol* dialog box, select *TCP/IP*, and then click *OK*. You may be prompted to install files from your Windows NT installation CD or other media. Follow the instructions to install the files. After all files are installed, a window displays to inform you that a TCP/IP service called DHCP can be set up to dynamically assign IP information.

Click *Yes* to continue, and then click *OK* if prompted to restart your computer. Next, configure the PCs to accept IP information assigned by the device.

Open the Control Panel window, and then double-click the Network icon.

In the *Network* dialog box, click the *Protocols* tab.

In the *Protocols* tab, select *TCP/IP*, and then click *Properties*.

In the Microsoft TCP/IP Properties dialog box, click the radio button labelled Obtain an IP address from a DHCP server.

Click *OK* twice to confirm and save your changes, and then close the Control Panel.

Assigning static Internet information to your PCs

If you are a typical user, you will not need to assign static Internet information to your LAN PCs because your ISP automatically assigns this information for you.

In some cases however, you may want to assign Internet information to some or all of your PCs directly (often called “statically”), rather than allowing the device to assign it. This option may be desirable (but not required) if:

You have obtained one or more public IP addresses that you want to always associate with specific computers (for example, if you are using a computer as a public web server).

You maintain different subnets on your LAN (subnets are described in Appendix B).

Before you begin, you must have the following information available:

The IP address and subnet mask of each PC

The IP address of the default gateway for your LAN. In most cases, this is the address assigned to the LAN port on the device. By default, the LAN port is assigned the IP address 192.168.1.1. (You can change this number or another number can be assigned by your ISP.)

The IP address of your ISP's Domain Name System (DNS) server.

On each PC to which you want to assign static information, follow the instructions relating only to checking for and/or installing the IP protocol. Once it is installed, continue to follow the instructions for displaying each of the Internet Protocol (TCP/IP) properties. Instead of enabling dynamic assignment of the IP addresses for the computer, DNS server and default gateway, click the radio buttons that enable you to enter the information manually.



Note

Your PCs must have IP addresses that place them in the same subnet as the device's LAN port.

Configuring Wireless PCs

You need to configure the operating system installed on your Wireless PCs using the same procedure described for Configuring Ethernet PCs section.

Positioning the wireless PCs

The wireless network cards used determine the maximum distance between your wireless PCs and your device. Guidelines on positioning the hardware components of your wireless network should be provided by your network card provider.

Wireless PC cards and drivers

Each PC on your wireless LAN must be fitted with a wireless access card. You must also install the corresponding driver files for your particular wireless card on your PC. You should receive driver files and instructions on how to install them together with your wireless card.

Configuring PC access to your Wireless device

Before you start configuring your Wireless PC, you must ensure that you have:

A Wireless access card for each of the PCs

Corresponding wireless access card driver software files

The configuration steps below will vary depending on both the operating system and wireless card installed on the PC. These steps provide a basic outline, however you should refer to the documentation provided with your wireless access card for specific instructions.

To configure Wireless PCs:

Install the wireless access card.

Install the wireless driver software files.

Configure the following wireless parameters on each of the wireless PCs:

- Set the adapter to use infrastructure mode. This configures the PCs to access each other and the Internet via the device.

Configure the SSID and channel to match the SSID and channel previously configured on the device.

Your wireless network can now communicate with the Internet via the device.

Appendix B - Troubleshooting

This appendix suggests solutions for problems you may encounter in installing or using the device, and provides instructions for using several IP utilities to diagnose problems.

Contact Customer Support if these suggestions do not resolve the problem.

Troubleshooting Suggestions

Problem	Troubleshooting Suggestion
LEDs	
<i>Power LED does not illuminate after product is turned on.</i>	Verify that you are using the power cable provided with the device and that it is securely connected to the device and a wall socket/power strip.
<i>LINK LAN LED does not illuminate after Ethernet cable is attached.</i>	Verify that the Ethernet cable is securely connected to your LAN hub or PC and to the device. Make sure the PC and/or hub is turned on. Verify that your cable is sufficient for your network requirements. A 100 Mbit/sec network (10BaseTx) should use cables labeled CAT 5. A 10Mbit/sec network may tolerate lower quality cables.
Internet Access	
My PC cannot access the Internet	Run a health check on your device. Use the ping utility (discussed in the following section) to check whether your PC can communicate with the device's LAN IP address (by default 192.168.1.1). If it cannot, check the Ethernet cabling. If you statically assigned a private IP address to the computer, (not a registered public address), verify the following: <ul style="list-style-type: none"> ● Check that the gateway IP address on the computer is your public IP address (see Current Status on page 1 for instructions on viewing the IP information.) If it is not, correct the address or configure the PC to receive IP information automatically. ● Verify with your ISP that the DNS server specified for the PC is valid. Correct the address or configure the PC to receive this information automatically.
<i>My LAN PCs cannot display web pages on the Internet.</i>	Verify that the DNS server IP address specified on the PCs is correct for your ISP, as discussed in the item above. If you specified that the DNS server be assigned dynamically from a server, then verify with your ISP that the address configured on the device is correct, and then you can use the ping utility, discussed on page 73, to test connectivity with your ISP's DNS server.
Web pages	

Problem	Troubleshooting Suggestion
<i>I forgot/lost my user ID or password.</i>	If you have not changed the password from the default, try using "admin" as both the user ID and password. Otherwise, you can reset the device to the default configuration by pressing three times the Reset Default button on the front panel of the device. Then, type the default User ID and password shown above. WARNING: Resetting the device removes any custom settings and returns all settings to their default values.
<i>I cannot access the web pages from my browser.</i>	Use the ping utility, discussed in the following section, to check whether the PC can communicate with the device's LAN IP address (by default 192.168.1.1). If it cannot, check the Ethernet cabling. Verify that you are using Internet Explorer or Netscape Navigator v4.0 or later. Verify that the PC's IP address is defined as being on the same subnet as the IP address assigned to the LAN port on the device.
<i>My changes to the web pages are not being retained.</i>	Be sure to use the <i>Confirm Changes</i> function after any changes.

Diagnosing Problem using IP Utilities

Ping


Ping is a command you can use to check whether your PC can recognize other computers on your network and the Internet. A ping command sends a message to the computer you specify. If the computer receives the message, it sends messages in reply. To use it, you must know the IP address of the computer with which you are trying to communicate.

On Windows-based computers, you can execute a ping command from the Start menu. Click the Start button, and then click Run. In the Open text box, type a statement such as the following:

```
ping 192.168.1.1
```

Click OK. You can substitute any private IP address on your LAN or a public IP address for an Internet site, if known.

If the target computer receives the message, a Command Prompt window is displayed:

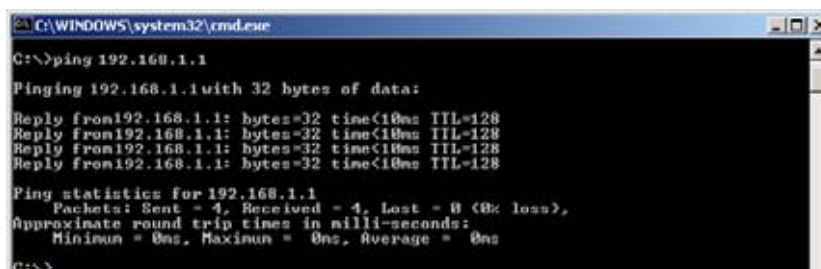

```

C:\WINDOWS\system32\cmd.exe
C:\>ping 192.168.1.1
Pinging 192.168.1.1 with 32 bytes of data:
Reply from 192.168.1.1: bytes=32 time<10ms TTL=128
Reply from 192.168.1.1: bytes=32 time<10ms TTL=128
Reply from 192.168.1.1: bytes=32 time<10ms TTL=128
Reply from 192.168.1.1: bytes=32 time<10ms TTL=128

Ping statistics for 192.168.1.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\>

```

If the target computer cannot be located, you will receive the message Request timed out.

Using the ping command, you can test whether the path to the device is working (using the preconfigured default LAN IP address 192.168.1.1) or another address you assigned.

You can also test whether access to the Internet is working by typing an external address, such as that for www.yahoo.com (216.115.108.243). If you do not know the IP address of a particular Internet location, you can use the nslookup command, as explained in the following section.

From most other IP-enabled operating systems, you can execute the same command at a command prompt or through a system administration utility.

Nslookup


You can use the nslookup command to determine the IP address associated with an Internet site name. You specify the common name, and the nslookup command looks up the name in on your DNS server (usually located with your ISP). If that name is not an entry in your ISP's DNS table, the request is then referred to another higher-level server, and so on, until the entry is found. The server then returns the associated IP address.

On Windows-based computers, you can execute the nslookup command from the Start menu. Click the Start button, and then click Run. In the Open text box, type the following:

Nslookup

Click OK. A Command Prompt window displays with a bracket prompt (>). At the prompt, type the name of the Internet address that you are interested in, such as www.microsoft.com.

The window will display the associate IP address, if known, as shown below:

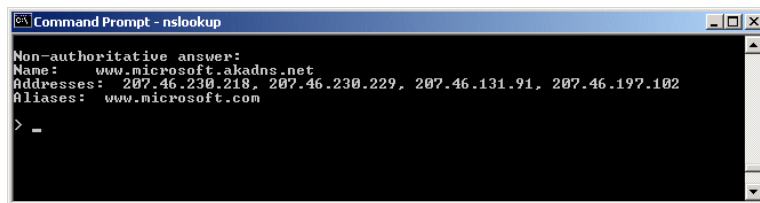

```
Command Prompt - nslookup
Non-authoritative answer:
Name:    www.microsoft.akadns.net
Addresses: 207.46.230.218, 207.46.230.229, 207.46.131.91, 207.46.197.102
Aliases: www.microsoft.com
>
```

There may be several addresses associated with an Internet name. This is common for web sites that receive heavy traffic; they use multiple, redundant servers to carry the same information.

To exit from the nslookup utility, type **exit** and press **[Enter]** at the command prompt.

Appendix C – Glossary

Term	Description
802.11	A family of specifications for wireless LANs developed by a working group of the IEEE. This wireless Ethernet protocol, often called Wi-Fi.
10BASE-T	A designation for the type of wiring used by Ethernet networks with a data rate of 10 Mbps. Also known as Category 3 (CAT 3) wiring. See data rate, Ethernet.
100BASE-T	A designation for the type of wiring used by Ethernet networks with a data rate of 100 Mbps. Also known as Category 5 (CAT 5) wiring. See data rate, Ethernet.
ADSL	Asymmetric Digital Subscriber Line The most commonly deployed “flavor” of DSL for home users is asymmetrical DSL. The term asymmetrical refers to its unequal data rates for downloading and uploading (the download rate is higher than the upload rate). The asymmetrical rates benefit home users because they typically download much more data from the Internet than they upload.
Analog	An analog signal is a signal that has had its frequency modified in some way, such as by amplifying its strength or varying its frequency, in order to add information to the signal. The voice component in DSL is an analog signal. See digital.
ATM	Asynchronous Transfer Mode A standard for high-speed transmission of data, text, voice, and video, widely used within the Internet. ATM data rates range from 45 Mbps to 2.5 Gbps. See data rate.
Authenticate	To verify a user's identity, such as by prompting for a password.
Binary	The “base two” system of numbers that uses only two digits, 0 and 1, to represent all numbers. In binary, the number 1 is written as 1, 2 as 10, 3 as 11, 4 as 100, etc. Although expressed as decimal numbers for convenience, IP addresses in actual use are binary numbers; e.g., the IP address 209.191.4.240 is 11010001.10111111.00000100.11110000 in binary. See bit, IP address, network mask.
Bit	Short for “binary digit,” a bit is a number that can have two values, 0 or 1. See binary.
Bps	bits per second
Bridging	Passing data from your network to your ISP and vice versa using the hardware addresses of the devices at each location. Bridging contrasts with routing which can add more intelligence to data transfers by using network addresses instead. The device can perform both routing and bridging. Typically, when both functions are enabled, the device routes IP data and bridges all other

	types of data. See routing.
Broadband	A telecommunications technology that can send different types of data over the same medium. DSL is a broadband technology.
Broadcast	To send data to all computers on a network.
DHCP	Dynamic Host Configuration Protocol DHCP automates address assignment and management. When a computer connects to the LAN, DHCP assigns it an IP address from a shared pool of IP addresses; after a specified time limit, DHCP returns the address to the pool.
DHCP relay	Dynamic Host Configuration Protocol relay A DHCP relay is a computer that forwards DHCP data between computers that request IP addresses and the DHCP server that assigns the addresses. Each of the device's interfaces can be configured as a DHCP relay. See DHCP.
DHCP server	Dynamic Host Configuration Protocol server A DHCP server is a computer that is responsible for assigning IP addresses to the computers on a LAN. See DHCP.
Digital	Of data, having a form based on discrete values expressed as binary numbers (0's and 1's). The data component in DSL is a digital signal. See analog.
DNS	Domain Name System The DNS maps domain names into IP addresses. DNS information is distributed hierarchically throughout the Internet among computers called DNS servers. For example, www.yahoo.com is the domain name associated with IP address 216.115.108.243. When you start to access a web site, a DNS server looks up the requested domain name to find its corresponding IP address. If the DNS server cannot find the IP address, it communicates with higher-level DNS servers to determine the IP address. See domain name.
Domain name	A domain name is a user-friendly name used in place of its associated IP address. Domain names must be unique; their assignment is controlled by the Internet Corporation for Assigned Names and Numbers (ICANN). Domain names are a key element of URLs, which identify a specific file at a web site. See DNS.
Download	To transfer data in the downstream direction, i.e., from the Internet to the user.
DSL	Digital Subscriber Line A technology that allows both digital data and analog voice signals to travel over existing copper telephone lines.
Encryption keys	See network keys
Ethernet	The most commonly installed computer network technology, usually using twisted pair wiring. Ethernet data rates are 10 Mbps and 100 Mbps. See also 10BASE-T, 100BASE-T, twisted pair.

FTP	<p>File Transfer Protocol</p> <p>A program used to transfer files between computers connected to the Internet. Common uses include uploading new or updated files to a web server, and downloading files from a web server.</p>
Gbps	<p>Abbreviation of Gigabits per second, or one billion bits per second. Internet data rates are often expressed in Gbps.</p>
Host	<p>A device (usually a computer) connected to a network.</p>
HTTP	<p>Hyper-Text Transfer Protocol</p> <p>HTTP is the main protocol used to transfer data from web sites so that it can be displayed by web browsers. See web browser, web site.</p>
Hub	<p>A hub is a place of convergence where data arrives from one or more directions and is forwarded out in one or more directions. It connects an Ethernet bridge/router to a group of PCs on a LAN and allows communication to pass between the networked devices.</p>
ICMP	<p>Internet Control Message Protocol</p> <p>An Internet protocol used to report errors and other network-related information. The ping command makes use of ICMP.</p>
IEEE	<p>The Institute of Electrical and Electronics Engineers is a technical professional society that fosters the development of standards that often become national and international standards.</p>
Internet	<p>The global collection of interconnected networks used for both private and business communications.</p>
Intranet	<p>A private, company-internal network that looks like part of the Internet (users access information using web browsers), but is accessible only by employees.</p>
IP	<p>See TCP/IP.</p>
IP address	<p>Internet Protocol address</p> <p>The address of a host (computer) on the Internet, consisting of four numbers, each from 0 to 255, separated by periods, e.g., 209.191.4.240. An IP address consists of a network ID that identifies the particular network the host belongs to, and a host ID uniquely identifying the host itself on that network. A network mask is used to define the network ID and the host ID. Because IP addresses are difficult to remember, they usually have an associated domain name that can be specified instead. See domain name, network mask.</p>
ISP	<p>Internet Service Provider</p> <p>A company that provides Internet access to its customers, usually for a fee.</p>
LAN	<p>Local Area Network.</p> <p>A network limited to a small geographic area, such as a home or small office.</p>

LED	<p>Light Emitting Diode</p> <p>An electronic light-emitting device. The indicator lights on the front of the device are LEDs.</p>
MAC address	<p>Media Access Control address</p> <p>The permanent hardware address of a device, assigned by its manufacturer. MAC addresses are expressed as six pairs of hex characters, with each pair separated by colons. For example; NN:NN:NN:NN:NN:NN.</p>
Mask	See network mask.
Mbps	Abbreviation for Megabits per second, or one million bits per second. Network data rates are often expressed in Mbps.
NAT	<p>Network Address Translation</p> <p>A service performed by many routers that translates your network's publicly known IP address into a private IP address for each computer on your LAN. Only your router and your LAN know these addresses; the outside world sees only the public IP address when talking to a computer on your LAN.</p>
Network	A group of computers that are connected together, allowing them to communicate with each other and share resources, such as software, files, etc. A network can be small, such as a LAN, or very large, such as the Internet.
Network keys	(Also known as encryption keys.) 64-bit and 128-bit encryption keys used in WEP wireless security schemes. The keys encrypt data over the WLAN, and only wireless PCs configured with WEP keys that correspond to the keys configured on the device can send/receive encrypted data.
Network mask	A network mask is a sequence of bits applied to an IP address to select the network ID while ignoring the host ID. Bits set to 1 mean "select this bit" while bits set to 0 mean "ignore this bit." For example, if the network mask 255.255.255.0 is applied to the IP address 100.10.50.1, the network ID is 100.10.50, and the host ID is 1. See binary, IP address, subnet.
NIC	<p>Network Interface Card</p> <p>An adapter card that plugs into your computer and provides the physical interface to your network cabling. For Ethernet NICs this is typically an RJ-45 connector. See Ethernet, RJ-45.</p>
Packet	Data transmitted on a network consists of units called packets. Each packet contains a payload (the data), plus overhead information such as where it came from (source address) and where it should go (destination address).
Ping	<p>Packet Internet (or Inter-Network) Groper</p> <p>A program used to verify whether the host associated with an IP address is online. It can also be used to reveal the IP address for a given domain name.</p>
Port	A physical access point to a device such as a computer or router, through which data flows into and out of the device.
PPP	<p>Point-to-Point Protocol</p> <p>A protocol for serial data transmission that is used to carry IP (and other protocol) data between your ISP and your computer. The WAN interface on the device uses two forms of PPP called PPPoA and PPPoE. See PPPoA, PPPoE.</p>

PPPoA	Point-to-Point Protocol over ATM One of the two types of PPP interfaces you can define for a Virtual Circuit (VC), the other type being PPPoE. You can define only one PPPoA interface per VC.
PPPoE	Point-to-Point Protocol over Ethernet One of the two types of PPP interfaces you can define for a Virtual Circuit (VC), the other type being PPPoA. You can define one or more PPPoE interfaces per VC.
Protocol	A set of rules governing the transmission of data. In order for a data transmission to work, both ends of the connection have to follow the rules of the protocol.
Remote	In a physically separate location. For example, an employee away on travel who logs in to the company's intranet is a remote user.
RIP	Routing Information Protocol The original TCP/IP routing protocol. There are two versions of RIP: version I and version II.
RJ-11	Registered Jack Standard-11 The standard plug used to connect telephones, fax machines, modems, etc. to a telephone port. It is a 6-pin connector usually containing four wires.
RJ-45	Registered Jack Standard-45 The 8-pin plug used in transmitting data over phone lines. Ethernet cabling usually uses this type of connector.
Routing	Forwarding data between your network and the Internet on the most efficient route, based on the data's destination IP address and current network conditions. A device that performs routing is called a router.
SDNS	Secondary Domain Name System (server) A DNS server that can be used if the primary DSN server is not available. See DNS.
Subnet	A subnet is a portion of a network. The subnet is distinguished from the larger network by a subnet mask that selects some of the computers of the network and excludes all others. The subnet's computers remain physically connected to the rest of the parent network, but they are treated as though they were on a separate network. See network mask.
Subnet mask	A mask that defines a subnet. See network mask.
TCP	See TCP/IP.
TCP/IP	Transmission Control Protocol/Internet Protocol The basic protocols used on the Internet. TCP is responsible for dividing data up into packets for delivery and reassembling them at the destination, while IP is responsible for delivering the packets from source to destination. When TCP and IP are bundled with higher-level applications such as HTTP, FTP, Telnet, etc., TCP/IP refers to this whole suite of protocols.
Telnet	An interactive, character-based program used to access a remote computer. While HTTP (the web protocol) and FTP only allow you to download files from a remote computer, Telnet allows you to log into and use a computer from a remote location.

TFTP	<p>Trivial File Transfer Protocol</p> <p>A protocol for file transfers, TFTP is easier to use than File Transfer Protocol (FTP) but not as capable or secure.</p>
TKIP	<p>Temporal Key Integrity Protocol (TKIP) provides WPA with a data encryption function. It ensures that a unique master key is generated for each packet, supports message integrity and sequencing rules and supports re-keying mechanisms.</p>
Triggers	<p>Triggers are used to deal with application protocols that create separate sessions. Some applications, such as NetMeeting, open secondary connections during normal operations, for example, a connection to a server is established using one port, but data transfers are performed on a separate connection. A trigger tells the device to expect these secondary sessions and how to handle them.</p> <p>Once you set a trigger, the embedded IP address of each incoming packet is replaced by the correct host address so that NAT can translate packets to the correct destination. You can specify whether you want to carry out address replacement, and if so, whether to replace addresses on TCP packets only, UDP packets only, or both.</p>
Twisted pair	<p>The ordinary copper telephone wiring used by telephone companies. It contains one or more wire pairs twisted together to reduce inductance and noise. Each telephone line uses one pair. In homes, it is most often installed with two pairs. For Ethernet LANs, a higher grade called Category 3 (CAT 3) is used for 10BASE-T networks, and an even higher grade called Category 5 (CAT 5) is used for 100BASE-T networks. See 10BASE-T, 100BASE-T, Ethernet.</p>
Unnumbered interfaces	<p>An unnumbered interface is an IP interface that does not have a local subnet associated with it. Instead, it uses a router-id that serves as the source and destination address of packets sent to and from the router. Unlike the IP address of a normal interface, the router-id of an unnumbered interface is allowed to be the same as the IP address of another interface. For example, the WAN unnumbered interface of your device uses the same IP address of the LAN interface (192.168.1.1). The unnumbered interface is temporary – PPP or DHCP will assign a 'real' IP address automatically.</p>
Upstream	<p>The direction of data transmission from the user to the Internet.</p>
VC	<p>Virtual Circuit</p> <p>A connection from your DSL router to your ISP.</p>
VCI	<p>Virtual Circuit Identifier</p> <p>Together with the Virtual Path Identifier (VPI), the VCI uniquely identifies a VC. Your ISP will tell you the VCI for each VC they provide. See VC.</p>
VDSL	<p>Very High Speed Digital Subscriber Line</p> <p>It provides faster transmission rate and is capable of supporting high bandwidth applications like IPTV and bandwidth consumed applications.</p>
VPI	<p>Virtual Path Identifier</p> <p>Together with the Virtual Circuit Identifier (VCI), the VPI uniquely identifies a VC. Your ISP will tell you the VPI for each VC they provide. See VC.</p>

WAN	<p>Wide Area Network</p> <p>Any network spread over a large geographical area, such as a country or continent. With respect to the device, WAN refers to the Internet.</p>
Web browser	<p>A software program that uses Hyper-Text Transfer Protocol (HTTP) to download information from (and upload to) web sites, and displays the information, which may consist of text, graphic images, audio, or video, to the user. Web browsers use Hyper-Text Transfer Protocol (HTTP). Popular web browsers include Netscape Navigator and Microsoft Internet Explorer. See HTTP, web site, WWW.</p>
Web page	<p>A web site file typically containing text, graphics and hyperlinks (cross-references) to the other pages on that web site, as well as to pages on other web sites. When a user accesses a web site, the first page that is displayed is called the home page. See hyperlink, web site.</p>
Web site	<p>A computer on the Internet that distributes information to (and gets information from) remote users through web browsers. A web site typically consists of web pages that contain text, graphics, and hyperlinks. See hyperlink, web page.</p>
WEP	<p>Wired Equivalent Privacy (WEP) encrypts data over WLANs. Data is encrypted into blocks of either 64 bits length or 128 bits length. The encrypted data can only be sent and received by users with access to a private network key. Each PC on your wireless network must be manually configured with the same key as your device in order to allow wireless encrypted data transmissions. Eavesdroppers cannot access your network if they do not know your private key. WEP is considered to be a low security option.</p>
Wireless	<p>Wireless is a term used to describe telecommunications in which electromagnetic waves (rather than some form of wire) carry the signal over part or the entire communication path. See wireless LAN.</p>
Wireless LAN	<p>A wireless LAN (WLAN) is one in which a mobile user can connect to a local area network (LAN) through a wireless (radio) connection. A standard, IEEE 802.11, specifies the technologies for wireless LANs.</p>
WPA	<p>Wi-Fi Protected Access</p> <p>WPA is an initiative by the IEEE and Wi-Fi Alliance to address the security limitations of WEP. WPA provides a stronger data encryption method (called Temporal Key Integrity Protocol (TKIP)). It runs in a special, easy-to-set-up home mode called Pre-Shared Key (PSK) that allows you to manually enter a pass phrase on all the devices in your wireless network. WPA data encryption is based on a WPA master key. The master key is derived from the pass phrase and the network name (SSID) of the device.</p> <p>It provides improved data encryption and stronger user authentication. The mode of WPA supported on your device is called Pre-Shared Key (PSK), which allows you to manually enter a type of key called a pass phrase.</p>
WWW	<p>World Wide Web</p> <p>Also called (the) Web. Collective term for all web sites anywhere in the world that can be accessed via the Internet.</p>

Appendix D - Specification

A1. Hardware Specifications

- LAN Interface
 - Four port 10/100BaseT Ethernet Switch (4 * RJ-45 connectors), IEEE 802.3u with MDI/MDIX auto-detection
 - Integrated 802.11b/g WLAN Access Point
- WAN Ethernet Line Interface
 - 10/100BaseT Ethernet port
- Analog Voice Interface
 - 2 FXS ports (2 * RJ-11 connectors) for analog phone sets
- Indicators
 - PWR – Green LED indicates power and operation. Red LED indicates failure.
 - WAN – Green LED indicates broadband connection
 - Internet – Green LED indicates PPP connection and RED indicates PPP failure or device in BRIDGE mode.
 - TEL1 – Green LED indicates phone connection
 - TEL2 – Green LED indicates phone connection
 - LAN – Green LED indicates LAN connection
 - WLAN – Green LED indicates wireless AP enabled
- OAM&P
 - Local: Telnet and Web management
 - Remote: Telnet Web Management
- Environment
 - Operation Temperature: 0°C ~ 45°C
 - Operation Humidity: 5% ~ 95%
 - Storage Temperature: -20 ~ +85°C
 - Storage Humidity: 5%~95%
- Power
 - AC Adapter: Input 110/220VAC, 50/60Hz; Output 12VDC 1.50A
- Certificates
 - CE, CB (TBD)

A2. Software Specifications

- Bridging
 - ▶ Transparent Bridging and spanning(IEEE 802.1D) with at least 32 MAC addresses
 - ▶ RFC2684 (RFC 1483) Bridged
 - ▶ Bridge filtering with per-port extensions
- Routing
 - ▶ IP routing and PPP supported
 - ▶ PAP and CHAP for user authentication in PPP connection
 - ▶ RFC2684 (RFC1483) Routed
 - ▶ DHCP client, server and relay agent
- Wireless LAN
 - ▶ Supports 802.1x; WEP; WEP2; WPA; WPA2; TKIP; AES; 802.11i
 - ▶ Hidden SSID
 - ▶ WMM for advanced Quality of Service
 - ▶ Multiple SSIDs
- Firewall

- ▶ Support NAT and DMZ
- ▶ Virtual server (port mapping) and IP filters
- ▶ Protection against IP and MAC address spoofing
- ▶ UPnP NAT traversal and VPN / IPSec pass-through
- Voice
 - ▶ Support voice CODECs like G.711, G.726, G.729A/B, BV16, ILBC, T.38 etc
 - ▶ DTMF tone detection / generation, fax / modem detection and pass-through
 - ▶ Adaptive jitter buffer, packet loss concealment (PLC), voice activity detection (VAD), comfort noise generation (CNG) and Caller ID
 - ▶ Support SIP (RFC3261)
 - ▶ Supports Call Waiting, Call Transfer, Call Forward and so on.
 - ▶ G.168 line echo cancellation with programmable tail
- VoIP and Telephone service
 - ▶ Supports SIP (RFC3261), SDP (RFC2327, RFC3264) as well as both TCP and UDP transport
 - ▶ Supports User Agent Client (UAC) - User Agent Server (UAS) call, or proxy call routing
 - ▶ Supports SIP and telephone URL addressing
 - ▶ Supports in-band DTMF tone sending / receiving and out-band DTMF signaling with RTP, as per RFC2833
 - ▶ Bonus services include:
 - Call Forwarding: Unconditional, No Response, On Busy
 - Call Waiting: Force Busy, Pickup and Release Old, Pickup and Put Old on Hold, Switch between two calls
 - Call Transfer, Call Back busy subscriber, Call Back last number called (call return)
 - Enquiry service
 - Three way conference
 - ▶ Provisioning through TFTP client with configuration profile
- Configuration and Network Management Features
 - ▶ DHCP client and server for IP management
 - ▶ UPnP Internet Gateway Device (IGD) compliance
 - ▶ WEB for local or remote management
 - ▶ HTTP or TFTP for firmware upgrade and configuration
 - ▶ Embedded syslog; SNTP with DHCP options
 - ▶ Support TR-069, TR-104 and with parameters: DeviceInfo, ManagementServer, Time, IPPingDiagnostic, etc

Note: The hardware and software specifications are subjected to change without notices.

Appendix E - Warranties

B1. Product Warranty

XAVi Technologies warrants that the xDSL unit will be free from defects in material and workmanship for a period of twelve (12) months from the date of shipment.

XAVi Technologies shall incur no liability under this warranty if

- The allegedly defective goods are not returned prepaid to XAVi Technologies within thirty (30) days of the discovery of the alleged defect and in accordance with XAVi Technologies' repair procedures; or
- XAVi Technologies' tests disclose that the alleged defect is not due to defects in material or workmanship.

XAVi Technologies' liability shall be limited to either repair or replacement of the defective goods, at XAVi Technologies' option.

XAVi Technologies MARKS NO EXPRESS OR IMPLIED WARRANTIES REGARDING THE QUALITY, MERCHANTABILITY, OR FITNESS FOR A PARTICULAR PURPOSE BEYOND THOSE THAT APPEAR IN THE APPLICABLE USER'S DOCUMENTATION. XAVi SHALL NOT BE RESPONSIBLE FOR CONSEQUENTIAL, INCIDENTAL, OR PUNITIVE DAMAGE, INCLUDING, BUT NOT LIMITED TO, LOSS OF PROFITS OR DAMAGES TO BUSINESS OR BUSINESS RELATIONS. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES.

B2. Warranty Repair

1. During the first three (3) months of ownership, XAVi Technologies will repair or replace a defective product covered under warranty within twenty-four (24) hours of receipt of the product. During the fourth (4th) through twelfth (12th) months of ownership, XAVi Technologies will repair or replace a defective product covered under warranty within ten (10) days of receipt of the product. The warranty period for the replaced products shall be ninety (90) days or the remainder of the warranty period of the original unit, whichever is greater. XAVi Technologies will ship surface freight. Expedited freight is at customer's expense.
2. The customer must return the defective product to XAVi Technologies within fourteen (14) days after the request for replacement. If the defective product is not returned within this time period, XAVi Technologies will bill the customer for the product at list price.

B3. Out-of-Warranty Repair

XAVi Technologies will either repair or, at its option, replace a defective product not covered under warranty within ten (10) working days of its receipt. Repair charges are available from the Repair Facility upon request. The warranty on a serviced product is thirty (30) days measured from date of service. Out-of-warranty repair charges are based upon the prices in effect at the time of return.

Appendix F - Regulation

FCC Part 15 Notice

Warning: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 to the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential environment. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is unlikely to cause harmful interference. But if it does, the user will be required to correct the interference at his or her own expense. The authority to operate this equipment is conditioned by the requirement that no modifications will be made to the equipment unless XAVi expressly approves the changes or modifications.

FCC Part 15 Notice with Wireless

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Part 68 Notice

This equipment complies with Part 68 of FCC Rules. On the base unit of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. IF REQUESTED, THIS INFORMATION MUST BE GIVEN TO THE TELEPHONE COMPANY.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your telephone number is called. In most, but not all areas, the sum of the REN of all devices connected to one line should not exceed five (5.0). To be certain of the number of devices you may connect to you line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.

If your equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC. Your telephone company may make changes in it is facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If you experience trouble with this telephone equipment, Please contact the following address and phone number for information on obtaining service or repairs.

The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company. Connection to party lines is subject to state tariffs.

NOTICE: The Telephone Consumer Protection Act of 1991 makes it unlawful for any person to use a computer or an electronic device to send any message via a telephone fax machine, unless such a message clearly contains in a margin at the top or bottom of each transmitted page or on the first page of the transmission the following information:

- ✓ The date and time of transmission
- ✓ Identification of either business, business entity or individual sending message
- ✓ Telephone number of either the sending machine, business entity or individual

Warning: Users should not attempt to make such connections themselves, but should contact appropriate electric inspection authority, or electrician, as appropriate. Do not use any other power adapter except the one that accompanies the unit. Use of other adapter could result in damage to the unit. To prevent electronic shock, please do not open the cover.

UL Safety Regulations

- ✓ Disconnect TNV circuit connector or before removing cover or equivalent.
- ✓ Disconnect TNV circuit connector(s) before disconnecting power.
- ✓ Do not use this product near water for example, near a bathtub, washbowl, and kitchen sink or laundry tub, in a wet basement, or near a swimming pool.
- ✓ Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightening.
- ✓ Do not use the telephone to report a gas leak in the vicinity of the leak.
- ✓ Use only the power cord batteries indicated in this manual. Do not dispose of batteries in a fire, as they may explode. Check with local codes for possible special disposal instructions.

No. 26 AWG Telephone Line Cord shall either be provided with the equipment or shall be described in the safety instruction. If fuse (F1) is not present, see the caution statement listed below:

CAUTION: To reduce the risk of fire, use only No. 26 AWG or larger UL Listed or CSA Certified Telecommunication Line Cord.

Appendix G - Contact information

You can help us serve you better by sending us your comments and feedback. Listed below are the addresses, telephone and fax numbers of our offices. You can also visit us on the World Wide Web at www.xavi.com.tw for more information. We look forward to hearing from you!

WORLD HEADQUARTER

XAVi Technologies Corporation
9F, No. 129 Hsing Te Road, Sanchung City
Taipei County 241, Taiwan

Tel: +886-2-2995-7953 Fax: +886-2-2995-7954

USA BRANCH OFFICE

53 Parker Irvine, CA 92618

Tel: +1-949-380-7550 Fax: +1-949-380-9204

S.AMERICA OFFICE

Tel: +55-12-8144-2972

EUROPEAN BRANCH OFFICE

Oehleckerring 6B, 22419 Hamburg, Germany

Tel: +49-40-514400-53 Fax: +49-40-514400-79

CHINA SUBSIDIARY

Room 401, Floor 4, #608 ZhaoJiaBang Road,
Shanghai, 200031

Tel: +86-21-6431-8800 Fax: +86-21-6431-7885