



Manual

LKR-604

Broadband Router

About This Manual

Congratulations on your purchase of the LKR-604 4-port Cable/DSL Broadband Router. This device integrates 100Mbps Fast Ethernet and 10Mbps Ethernet network capabilities. This router is a complete solution for sharing the Broadband Internet connection and other office resources.

Purpose

This manual discusses how to install the LKR-604 4-port Broadband Router and gives an overview of this User's Manual.

Introduction

Describes the LKR-604 Broadband Router and its features.

Unpacking and Setup

Helps you get started with the basic installation of the Router.

Identifying External Components

Describes the front panel, rear panel, and LED indicators of the Router.

Connecting the Router

Explains how you connect the LKR-604 Broadband Router to your Cable/DSL Modem.

Technical Specifications

Lists the technical (general, physical, environmental, performance and Routers settings) specifications of the Broadband Router.

Introduction

The LKR-604 is a 4-port Ethernet Broadband Router. It enables users quickly and easily sharing a single high-speed Internet connection as well as sharing information and resources such as files and printers with a built-in 4-port 10/100 Switch. The LKR-604 also incorporates many advanced features, traditionally found in more expensive routers.

This manual is designed to help you connect the LKR-604 4-port Ethernet Broadband Router to a high-speed Internet connection and 4 wired-Ethernet PCs connect to a built-in 4-port 10/100 Switch.

This manual provides a quick introduction to Ethernet Broadband router technology, Firewalls, and Local Area Networking. Please take a moment to read through this manual and get acquainted with these various technologies.

Check Package Contents

- LKR-604 Ethernet Broadband Router
- Quick Installation Guide
- User's Manual CD-ROM
- 1 X RJ-45 Ethernet Cable
- Power Adapter

Installation Requirements

- A computer with a wired network adapter properly installed
- Broadband Internet Connection
- Installed Cable or DSL Modem
- Web Browser: Internet Explorer (5.0 or higher)

Applications

• Local Network Access

The LKR-604 Broadband Router provides connectivity to 10/100 Mbps wired-Ethernet devices that making it easy to create a network in small offices or homes.

• Internet Access

The LKR-604 supports Broadband Internet access through a CABLE or DSL connection. Since many DSL providers use PPPoE to establish communications with end users, the LKR-604 includes a built-in client for these protocols, eliminating the need to install these services on your computer.

• Shared Internet Connection

The LKR-604 shares a single Broadband Internet connection using only one ISP account, multiple users on your network can access the Internet at the same time.

• Virtual Server

If you have a static public IP address, you can set the LKR-604 to act as a virtual host for network address translation. Remote users access various services at your site using a static IP address. Then, depending on the requested service (or port number), the LKR-604 routes the request to the appropriate server (at a local private IP address). This secures your network from direct attack by hackers, and provides more flexible management by allowing you to change internal private IP addresses without affecting outside access to your network.

- **DMZ Host Support**

Allows a networked computer to be fully exposed to the Internet. This function is used when NAT or Firewall security prevent the special application feature from functioning correctly.

- **Virtual Private Network (VPN)**

The LKR-604 supports most commonly used VPN protocols — PPTP and IPSec. These protocols allow remote users to establish a secure VPN connection over the Internet to their corporate network. If your Internet service provider supports PPTP and IPSec protocols, then these protocols can be used to create an authenticated and encrypted VPN tunnel for passing secure data over the Internet (i.e., a traditionally shared data network).

Features and Benefits

- High-speed data transfer rate
- Supports NAT (sharing one IP address with all LAN users)
- Supports PPPoE and PPTP protocol for Dial-Up ADSL
- Supports DHCP Server / Client
- Supports UPnP (Universal Plug and Play)
- Supports virtual server mapping
- Supports VPN PPTP and IPSec pass-through
- Supports packet filtering
- Simple Firewall protection
- Upgradeable firmware for future functions
- Easy setup via Web Browser.

TABLE OF CONTENTS


HARDWARE DESCRIPTION	1
FRONT PANEL	1
POWER.....	1
STATUS.....	1
WAN	2
LAN (LINK/ACT)	2
REAR PANEL	2
WAN	2
LAN (1-4).....	3
RESET	3
POWER.....	3
HARDWARE CONNECTIONS	4
CONNECT THE LKR-604 INTERNET BROADBAND ROUTER.....	4
CHECK THE INSTALLATION	5
CONFIGURING PC NETWORK TCP/IP SETTINGS	6
WINDOWS 95/98/ME.....	6
WINDOWS XP/2000	8
WINDOWS NT 4.0.....	9
WINDOWS VISTA	10
NETWORK SETTINGS	11
FOR EXAMPLE:	11
DISABLE HTTP PROXY.....	11
CONFIGURING THE LKR-604	12
STARTUP AND LOGIN	12
QUICK SETUP	13
TIME ZONE.....	13
WAN TYPE	14
DYNAMIC IP (CABLE MODEM)	15
STATIC IP (FIXED-IP XDSL)	15
PPPOE (DIAL-UP XDSL).....	16
PPTP	17
DNS.....	18

ADVANCED SETUP	19
SYSTEM.....	19
SYSTEM TIME.....	20
ADMINISTRATOR SETTINGS.....	21
FIRMWARE UPGRADE	22
CONFIGURATION TOOLS	23
STATUS.....	24
SYSTEM LOG	25
RESET	25
WAN	26
DYNAMIC IP	26
STATIC IP.....	27
PPPOE (DIAL-UP XDSL).....	28
PPTP.....	29
DNS.....	30
DYNAMIC DNS.....	30
LAN	32
LAN SETTINGS	32
DHCP CLIENT LIST	33
NAT	34
SPECIAL APPLICATION	34
VIRTUAL SERVER	36
FIREWALL	37
DISCARD PING FROM WAN SIDE	37
CLIENT FILTERING	38
MAC ADDRESS CONTROL	39
DMZ (DE-MILITARIZED ZONE).....	39
URL FILTER	40
ROUTING	41
STATIC ROUTING	41
TECHNICAL SPECIFICATIONS	42
FCC WARNING	43
CE MARK WARNING	43

Hardware Description

LKR-604 4-port Cable/DSL Broadband Router

Front Panel

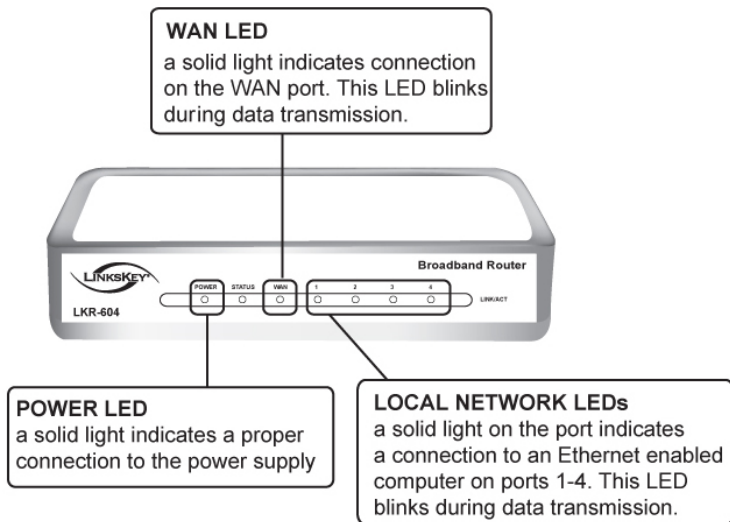

POWER

The LED lights up a solid green when the Router is powered on. Otherwise, it is off.

STATUS

The LED is flashing when the Router is successfully working. If the LED is either always on or off, the Router is not working properly.


WAN

The LED lights up a solid green when the WAN port is connected to a Cable/DSL Modem successfully. If the LED is flashing, the WAN port is sending or receiving data from the Cable/DSL modem.

LAN (Link/ACT)

The LED lights up a solid green when the port is connected to a 100Mbps Fast Ethernet device. If the LED is flashing, the port is sending or receiving data over the network.

Rear Panel

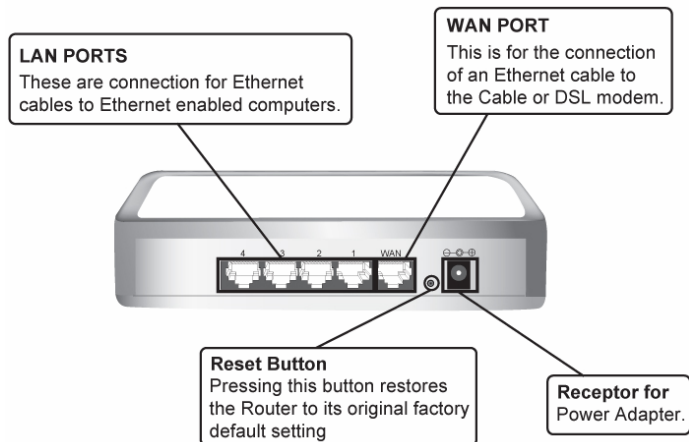

WAN

One RJ-45 10/100Mbps Auto-MDIX WAN port for connecting to your Cable/DSL Modem.

LAN (1-4)

Four RJ-45 10/100Mbps Auto-MDIX ports for connecting to Ethernet enabled computers.

RESET

Use a pin-shaped object to reset the Router to factory default settings. Resetting the Router will also reset the login password to the default.

Power

Connect one end of the included power adapter to the power port on the Router and the other end into a power outlet.

Hardware Connections



Connect the LKR-604 Internet Broadband Router

1. Connect one end of the included Ethernet cable to the WAN port on the LKR-604 Internet Broadband Router.
2. Connect the other end of the included Ethernet cable to the Ethernet port on the Cable or DSL modem.
3. Connect one end of another Ethernet cable to the Ethernet port on the computer and the other end of the Ethernet cable to any of the LAN ports on the Router. Since the LKR-604 Internet Broadband Router has four LAN ports, you can connect up to four computers directly to the Router.

Check The Installation

The LEDs on the LKR-604 Internet Broadband Router are clearly visible and the status of the traffic can be seen immediately:

1. Once the Router is connected to the Cable or DSL modem and the power is connected, the Power, System and WAN port LEDs on the LKR-604 Internet Broadband Router will light up.
2. If the LAN port is connected to the Ethernet port on the computer, the LAN port LED on the LKR-604 Internet Broadband Router will light up

Configuring PC Network TCP/IP Settings


The network TCP/IP settings differ based on the computer's operating system (Win95/98/ME/NT/2000/XP/Vista), if you need information on how to configure a TCP/IP settings on a computer, refer to the following section.

Windows 95/98/ME


1. On Desktop screen, right-click the “**Network Neighborhood**” icon and click “**Properties**”.
2. Select the **TCP/IP** line that has been assigned to your Ethernet network adapter on the “**Configuration**” tab of the “**Network**” windows then click the “**Properties**” button.
3. Select “**Obtain an IP address automatically**” in the “**IP Address**” tab.



4. Click on the “DNS Configuration” tab and select “Disable DNS”.

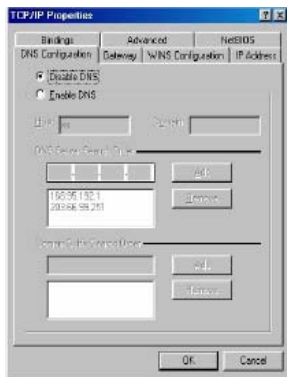


5. Click on the “Gateway” tab. If there is a gateway listed under “Installed gateways”, select it and click “Remove” button.

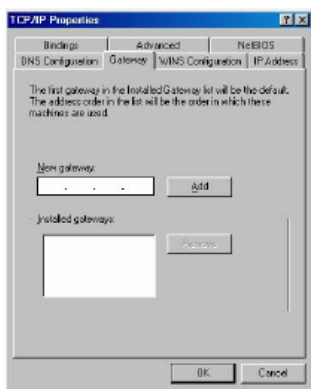

6. Click “OK” button, and Windows might ask you to restart the computer, click “Yes”.


Windows XP/2000

1. Click the **“Start”** button then right-click **“My Network Places”** and then click **“Properties”**.
2. Right-click **“Local Area Connection”** listed under **“LAN or High-Speed Internet”** then click **“Properties”**.
3. Select the **“Internet Protocol (TCP/IP)”** then click **“Properties”** button.
4. Select **“Obtain an IP address automatically”** and **“Obtain DNS server address automatically”** in **“General”** tab.
6. Click **“OK”** button.

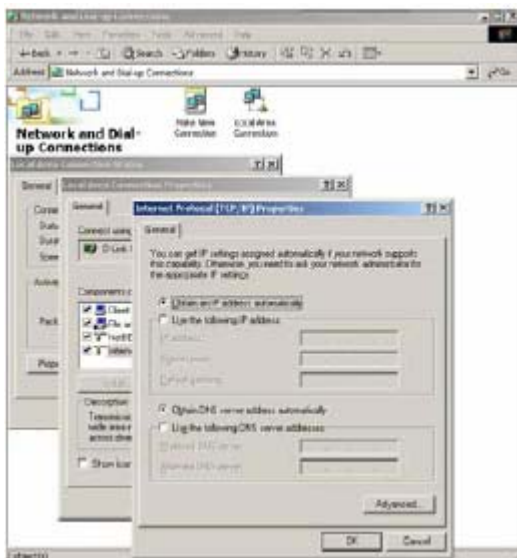


Windows NT 4.0

1. Click the **“Start”** button, located in the lower left corner of the screen.
2. Move to **“Settings”** and then click **“Control Panel.”**
3. In the **“Control Panel”** window, double-click the **“Network”** icon to open **“Network”** configuration windows.
4. Click on the **“Protocols”** tab, then double-click **“TCP/IP Protocol”**.
5. Select **“Obtain an IP address from a DHCP server”** in **“IP Address”** tab.

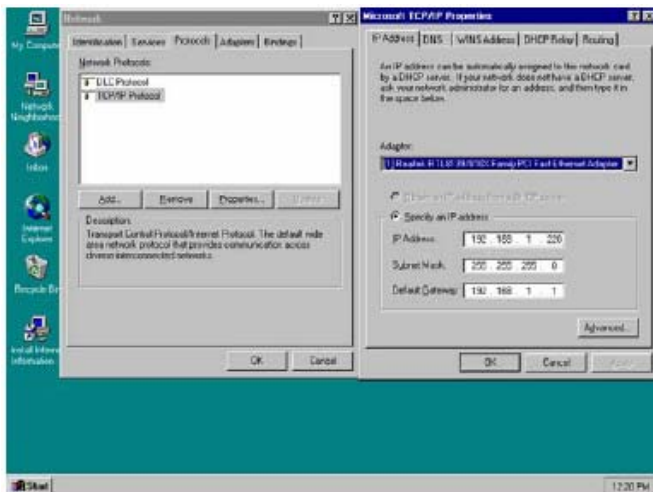

Windows Vista

1. Click the **“Start”** button then right-click **“Network”** then click **“Properties”**.
2. Under **“Tasks”** located on the left-hand side of the windows, click **“Manage network connections”**.
3. Right-click **“Local Area Connection”** listed under **“LAN or High-Speed Internet”** then click **“Properties”**.
4. Click **“Continue”** to open the **“Local Area Connection Properties”** windows.
5. Select **“Internet Protocol Version 4 (TCP/IPv4)”**, then click **“Properties”** button.
6. Select **“Obtain an IP address automatically”** and **“Obtain DNS server address automatically”** in **“General”** tab.
7. Click **“OK”** button.

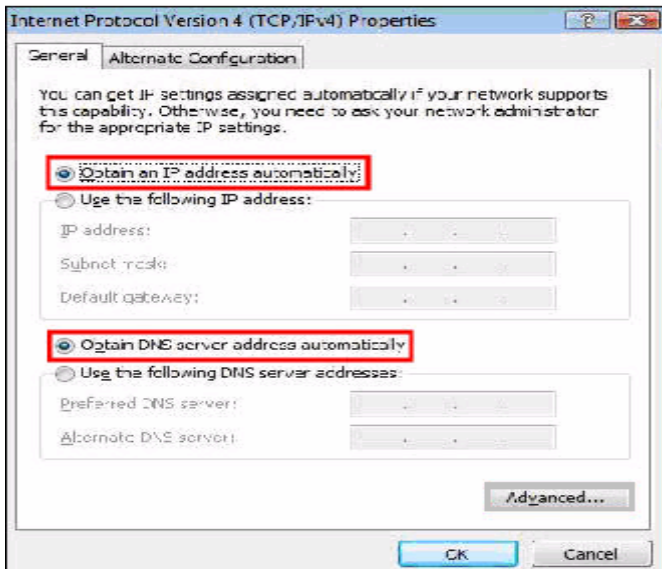

Network Settings

Accessing the Internet through the LKR-604 Internet Broadband Router, you have to properly configure the network settings of your computers to use the same IP subnet as the LKR-604.

The default IP address of the LKR-604 is **192.168.0.1**, and the default subnet mask is **255.255.255.0**. These addresses can be changed as needed, but the default values are used in this manual. If the network TCP/IP settings of your computer has not yet been configured, you can refer to Configuring PC Network TCP/IP Settings and configure it.

For example:

1. Configure your computer using a static IP address as 192.168.0.10, subnet mask is 255.255.255.0 and gateway as 192.168.0.1, since the default IP address of the LKR-604 is 192.168.0.1, the IP address of your computer must be 192.168.0.X (where "X" is a number between 2 and 254.). Each computer on your network must have a different IP address within the range. The default gateway must be 192.168.0.1 (the default IP address of the LKR-604).
2. Or more conveniently, configure your computer to obtain TCP/IP settings automatically from the DHCP server feature of the LKR-604.

Disable HTTP Proxy

In order to access and view the LKR-604's configuration web pages, you need to verify that the "HTTP Proxy" feature of your web browser is disabled.

Configuring The LKR-604

First, make sure that the network connections are functioning normally. The LKR-604 Internet Broadband Router can be configured using Internet Explorer 5.0 or above or Netscape Navigator 5.0 or above.

Startup and Login

Open your web browser and type in the IP address of the LKR-604 into the Location (for Netscape) or Address (for IE) field and press “Enter”. The default IP address of the LKR-604 is **192.168.0.1**

Address	http://192.168.0.1
---------	--------------------

After the connection is established, a logon screen will pop up. To log in as an administrator, type in the user name “admin” and the password (by default, there is no password), then click the “**LOGIN**” button, the web-based management interface will appear.

LOGIN PASSWORD	
User Name:	<input type="text"/>
Password:	<input type="text"/>
<input type="button" value="LOGIN"/> <input type="button" value="CANCEL"/>	

Two setup options appear: **Quick Setup** and **Advanced Setup**. It is recommended that you use **Quick Setup** if you are a beginner. It will lead you through the step-by-step configuration.

	<p>Quick Setup</p> <p>The quick setup will allow you to configure your Broadband Router for use with a Cable or DSL modem. Follow the wizard through each step to set up the Broadband Router.</p>
	<p>Advanced Setup</p> <p>The Broadband Router supports advanced functions like hacker attack detection, special application access, a virtual DMZ host, virtual servers, client filtering, and VPN pass-through. Highly recommend you to keep the default settings.</p>

Quick Setup

On the main webpage, select **“Quick Setup”** to setup the **Time Zone** and the **WAN Type**.

Time Zone

Select the appropriate time zone so your system clock can synchronize itself through the SNTP Server.

1. Time Zone

[Help](#)

You must set the Time Zone in order to synchronize the Broadband Router clock. This clock is used to record the system log and control client filtering.

Set Time Zone	(GMT+08:00) Hong Kong, Perth, Singapore, Taipei ▼
Set Daylight Saving (Optional)	Enable <input type="checkbox"/>
	Start from February ▼ 01 ▼
	End by July ▼ 08 ▼

WAN Type

To select the WAN connection type, click **Dynamic IP (Cable Modem)**, **Static IP (Fixed-IP)**, **PPPoE (Dial-Up xDSL)** or **PPTP**

2. WAN Type

[Help](#)

Specify the WAN connection type required by your Internet Service Provider. Specify a Cable modem, Fixed-IP xDSL, or PPPoE xDSL.



Dynamic IP (Cable modem)

A Cable modem requires minimal configuration. When you have set up an account with your Cable provider, the Cable modem will automatically configure itself, so you probably do not need to enter anything more. However, if there is a Domain Name System (DNS) server that you would rather use, you need to specify the IP address.



Static IP (Fixed-IP xDSL)

Some xDSL Internet Service Providers may assign a fixed IP address for your Broadband Router. If you have been provided with this information, choose this option and enter the assigned IP address, subnet mask, gateway IP and DNS IP addresses for your Broadband Router.



PPPoE (Dial-Up xDSL)

If you connect to the Internet using an xDSL Modem and your ISP has provided you with a password, and Service Name, then your ISP uses PPPoE. You must choose this option and enter the required information.



PPTP

If your ISP provided you the PPTP Account, PPTP Password, Host Name, Service IP Address, IP Address, Subnet Mask and the Connection ID, then your ISP uses PPTP. You have to choose this option and enter the required information.

Dynamic IP (Cable Modem)

To connect to a Dynamic IP (Cable Modem) Broadband Internet connection with the LKR-604 Broadband Router, check the Cable Modem with the related user's guide. The Cable Modem will automatically configure itself, and the LKR-604 Broadband Router is configured to automatically assign IP addresses to each PC. If required by your ISP, input a host name and MAC address.

Dynamic IP (Cable modem)	
Host Name	<input type="text"/>
MAC Address	<input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> <input type="button" value="Duplicate MAC address from the customer end"/>

Static IP (Fixed-IP xDSL)

If your Internet Service Provider (ISP) has assigned you a fixed IP address, select this option. Enter the assigned IP address, subnet mask, and the gateway IP address for the LKR-604 Broadband Router.

Static IP (Fixed-IP xDSL)	
IP address assigned by your ISP	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>
Subnet Mask	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>
ISP Gateway Address	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>

PPPoE (Dial-Up xDSL)

If your DSL Broadband Internet connection is PPPoE (Dial-Up xDSL), your ISP will provide a password and user name. Select this option, and enter the required information. If your ISP provides a Service Name, enter it in the Service Name field. Otherwise, leave it blank.

The Service Name and IP Address fields must be completed if provided by your ISP. If your ISP provides a Dynamic IP Address, you should skip these fields. The MTU feature specifies the maximum packet size permitted for network transmission. Enter the value desired; for most DSL Broadband Internet connection users, 1492 is recommended. By default, MTU is set at 1492. The Maximum Idle Time feature can control the Internet connection time if you want to reduce the connection fees charged by your ISP (default time=0, always connect).

Select Connect-on-demand for the Connect mode select feature to enable the LKR-604 Broadband Router to connect to your ISP whenever an Internet connection is required.

User Name	<input type="text"/>
Password	<input type="password" value="••••••"/>
Please retype your password	<input type="password" value="••••••"/>
Service Name	<input type="text"/> (optional)
IP Address	<input type="text"/> (optional)
MTU (40-1492)	<input type="text" value="1492"/>
Maximum Idle Time	<input type="text" value="1"/> (1-60 minutes)
Connect mode select	<input checked="" type="radio"/> Always-on <input type="radio"/> Manual <input type="radio"/> Connect-on-demand

PPTP

If connecting to the Internet using a PPTP DSL Modem, enter the PPTP Account Name, PPTP Password, Host Name, Service IP Address, My IP Address, and My Subnet Mask in the appropriate fields provided by your ISP. If your ISP has provided you with a Connection ID, enter it in the Connection ID field. Otherwise, leave it blank.

The MTU feature specifies the maximum packet size permitted for network transmission. Enter the value desired; for most DSL Broadband Internet connection users, 1460 is recommended. By default, MTU is set at 1460. The Maximum Idle Time feature can control the Internet connection time (default time=0, always connect).

Select Connect-on-demand for the Connect mode select feature to enable the LKR-604 Broadband Router to connect to your ISP whenever an Internet connection is required.

PPTP Account	<input type="text"/>
PPTP Password	<input type="password" value="••••••"/>
Please retype your password	<input type="password" value="••••••"/>
Host Name	<input type="text"/>
Service IP Address	<input type="text" value="0.0.0.0"/>
My IP Address	<input type="text" value="0.0.0.0"/>
My Subnet Mask	<input type="text" value="255.255.255.0"/>
Connection ID	<input type="text" value="0"/> (Optional)
MTU (1400-1460)	<input type="text" value="1460"/>
Maximum Idle Time	<input type="text" value="1"/> (1-60 minutes)
Connect mode select	<input type="radio"/> Always-on <input type="radio"/> Manual <input checked="" type="radio"/> Connect-on-demand

DNS

The Domain Name System (DNS) manages the translation of a domain name into an IP address, and vice versa that of an IP address into a domain name.

Your ISP should provide one or more DNS Server IP addresses, type those IP addresses in the Primary DNS address and Secondary DNS address fields, the LKR-604 Broadband Router will utilize these simultaneously for quicker access to functioning DNS Servers.

Primary DNS address	<input type="text" value="168"/>	<input type="text" value="95"/>	<input type="text" value="1"/>	<input type="text" value="1"/>
Secondary DNS address	<input type="text" value="168"/>	<input type="text" value="95"/>	<input type="text" value="192"/>	<input type="text" value="1"/>

Advanced Setup

The LKR-604 Broadband Router supports advanced functions like System settings, WAN settings, LAN settings, NAT Settings, and Firewall settings.

System

This page includes all of the basic configuration tools for the LKR-604 Broadband Router. Under “**System**” located on the left-hand of the windows, select that you want to configure.



System Time

Connecting to a Simple Network Time Protocol (SNTP) server allows the LKR-604 Broadband Router to synchronize the system clock to the global Internet time through the SNTP Server. The synchronized clock in the LKR-604 Broadband Router is used to record the system log and control client filtering.

Local Time	December 31, 1999 06:01:13		
Set Time Zone	(GMT+08:00) Hong Kong, Perth, Singapore, Taipei ▾		
Default SNTP Server (Optional)	Enable	<input type="checkbox"/>	
	Server IP	tock.usno.navy.mil	
Set the Time	Year	2007 ▾	Month January ▾
	Day	19 ▾	Hour 16 ▾
Set Daylight Saving (Optional)	Minute	50 ▾	Second 07 ▾
	Enable	<input type="checkbox"/>	
Set Daylight Saving (Optional)	Start from	February ▾	01 ▾
	End by	July ▾	08 ▾

Administrator Settings

Password Settings: Set an Administrator password if you wish to restrict management access to the LKR-604 Broadband Router.

Password Settings	
Current Password	<input type="text"/>
Password	<input type="password" value="••••••"/>
Re-type password	<input type="text"/> (3-12 Characters)
Idle Time Out	5 <input type="text"/> Min

Remote Management: To manage the LKR-604 Broadband Router from a remote location (outside of the local network), you must specify the IP address of the remote computer. Leave the IP address as 0.0.0.0, to allow any IP address to access to the LKR-604 Broadband Router.


Remote Management	
Enable	<input type="checkbox"/>
IP Address	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/> (0.0.0.0: means all legal ip address can access the device.)
Port	8080 <input type="text"/>

Firmware Upgrade

Upgrading firmware for the LKR-604 Broadband Router improves functionality and performance. Specify the path and name of the upgrade file then click the “**APPLY**” button. You will be prompted to confirm the upgrade.

Current Firmware Version:	v1.00(C)
Firmware Date:	Thu Dec 25 12:04:07 2003
Upgrade Firmware:	<input type="text"/> <input type="button" value="Browse"/>

While upgrading the firmware, please wait after pressing the “**APPLY**” button, and follow the instructions on the screen; the System LED on the front panel will start blinking when the firmware has been upgraded successfully.

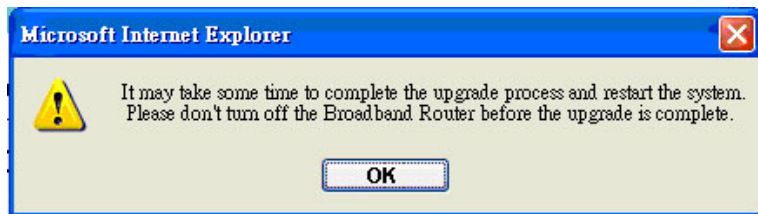

Uploading..
OK!

Configuration Tools

Use the "**Backup Settings**" tool to save the LKR-604 Broadband Router current configuration to a file named "config.bin" on your PC. You can then use the "**Restore Settings**" tool to restore the saved configuration file back to the LKR-604 Broadband Router that was set previously. Select "**Restore to Factory Default**" tool to force the LKR-604 Broadband Router to reset and restore the original factory settings.

Restore to Factory Default

To restore the factory default settings of the Broadband Router, click on the "Restore" button. You will be asked to confirm your decision.

Backup Settings

Please press the "Backup Settings" button to save the configuration data to your PC

Restore Settings

Enter the path and name of the backup file then press the "Restore Settings" button below. You will be prompted to confirm the backup restoration.

- **Restore Factory Default**

To restore the factory default settings of the LKR-604 Broadband Router, select the "**Restore to Factory Default**" option.

- **Backup Settings**

Select the "**Backup Settings**" option to save the current LKR-604 Broadband Router settings in a file called "config.bin," or save to a filename of your choosing.

• Restore Settings

To restore a backup file back to the LKR-604 Broadband Router, specify the path and filename of the backup file (i.e. config.bin).

Status

The “**Status**” screen will display the LKR-604 Broadband Routers' WAN/LAN interfaces, firmware and hardware version numbers, and the number of connected clients to the network.


WAN	
Connection Type	Static IP
WAN IP	10.2.5.111
Subnet Mask	255.255.0.0
Gateway	0.0.0.0
DNS	0.0.0.0
Secondary DNS	0.0.0.0
Cable/DSL	Connected

LAN	
IP Address	192.168.9.100
Subnet Mask	255.255.255.0
DHCP Server	Enabled

INFORMATION	
System Time	12/31/1999 16:01:13
System Boot Up Time	00:01:40
Connected Clients	3
Runtime Code Version	V0.1.1.0
Boot Code Version	V0.2.1.0
LAN MAC Address	00:AA:00:12:34:56
WAN MAC Address	00:AA:00:12:34:57

System Log

View any attempts that have been made to gain access to the network.

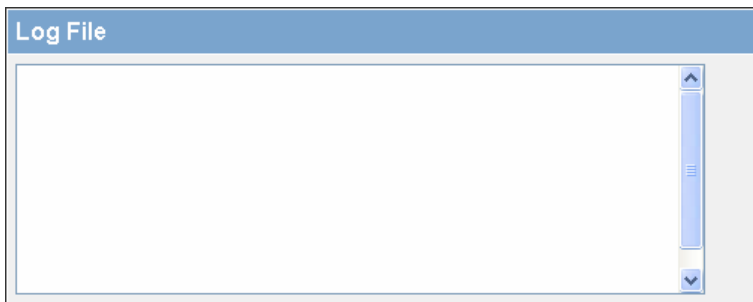

Reset

For some reason if you need to reset the LKR-604 Broadband Router without changing any settings, click on the "Reset" to reset the LKR-604 Broadband Router.

In the event that the Broadband Router stops responding correctly or in some way stops functioning, you can perform a reset. Your settings will not be changed. To perform the reset, click on the "Reset" button below. You will be asked to confirm your decision. The reset will be complete when the system light starts blinking.

Reset

WAN

The LKR-604 Broadband Router supports the following types of the Internet connections: Dynamic IP Address, Static IP Address, PPPoE, and PPTP.

<input type="radio"/> Dynamic IP (Cable modem)	Obtain an IP address automatically from your service provider.
<input type="radio"/> Static IP (Fixed-IP xDSL)	Uses a static IP address. Your service provider gives a static IP address to access Internet services.
<input checked="" type="radio"/> PPPoE (Dial-Up xDSL)	PPP over Ethernet is a common connection method used for xDSL.
<input type="radio"/> PPTP	PPTP is a popular connection method used for xDSL in Europe.

Dynamic IP

The Host Name is optional, but may be required by some Internet Service Providers. The MAC address is set to the WAN's physical interface on the LKR-604 Broadband Router. If the Internet Service Provider requires the MAC address, type it in. Click the "**Clone MAC Address**" button to copy the MAC address of the Ethernet network adapter installed in the PC. The WAN MAC address will be replaced by this MAC address. If your ISP is BigPond (Australia), check the Enable box.

Host Name	<input type="text"/>
MAC Address	<input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> <input type="button" value="Clone MAC Address"/>
BigPond	<input type="checkbox"/> Enable

Static IP

If the Internet Service Provider has assigned a fixed IP address, enter the assigned IP address, subnet mask and gateway IP address fields. Click “**Yes**” if you are using two or more IP addresses.

IP address assigned by your ISP	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>
Subnet Mask	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>
ISP Gateway Address	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>
Does ISP provide more IP addresses	<input type="checkbox"/> Yes

PPPoE (Dial-Up xDSL)

If you are connecting to the Internet using a PPPoE (Dialup xDSL) Modem and your ISP has provided you with a password and username, then your ISP uses PPPoE. Select this option, and enter the required information. If the ISP provided a Service Name, enter it in the Service Name field. Otherwise, leave it blank.

The Service Name, IP Address, and DNS Address fields must be completed if your ISP provides you with this information. If your ISP provides a Dynamic IP Address, skip these fields.

The MTU feature specifies the maximum packet size permitted for network transmission. Enter the value desired; for most DSL Broadband Internet connection users, 1492 is recommended. By default, MTU is set at 1492. The Maximum Idle Time feature can control the Internet connection time if you want to reduce the connection fees charged by your ISP (default time=0, always connect).

User Name	<input type="text"/>
Password	<input type="password" value="••••••"/>
Please retype your password	<input type="password" value="••••••"/>
Service Name	<input type="text"/> (optional)
IP Address	<input type="text"/> (optional)
Primary DNS Address	<input type="text"/> (optional)
Secondary DNS Address	<input type="text"/> (optional)
MTU (40-1492)	<input type="text"/>
Maximum Idle Time	<input type="text"/> (1-60 minutes)
Connect mode select	<input type="radio"/> Always-on <input type="radio"/> Manual <input checked="" type="radio"/> Connect-on-demand

PPTP

If connecting to the Internet using a PPTP DSL Modem, enter the PPTP Account Name, PPTP Password, Host Name, Service IP Address, My IP Address, and My Subnet Mask as provided by your ISP in the appropriate fields. If your ISP has provided you with a Connection ID, enter it in the Connection ID field. Otherwise, leave it blank.

The MTU feature specifies the maximum packet size permitted for network transmission. Enter the value desired; for most DSL Broadband Internet connection users, 1460 is recommended.

By default, MTU is set at 1460.

The Maximum Idle Time feature can control the Internet connection time (default time=0, always connect). Select Connect-on-demand for the Connect mode select feature to enable the LKR-604 Broadband Router to connect to your ISP whenever an Internet connection is required.

PPTP Account	<input type="text"/>
PPTP Password	<input type="password"/>
Please retype your password	<input type="password"/>
Host Name	<input type="text"/>
Service IP Address	<input type="text"/>
My IP Address	<input type="text"/>
My Subnet Mask	<input type="text"/>
Connection ID	<input type="text"/> (Optional)
MTU (1400-1460)	<input type="text"/>
Maximum Idle Time	<input type="text"/> (1-60 minutes)
Connect mode select	<input type="radio"/> Always-on <input type="radio"/> Manual <input checked="" type="radio"/> Connect-on-demand

DNS

The Domain Name System (DNS) manages the translation of a domain name into an IP address, and vice versa that of an IP address into a domain name.

Your ISP should provide one or more DNS Server IP addresses, type those IP addresses in the Primary DNS address and Secondary DNS address fields, the LKR-604 Broadband Router will utilize these simultaneously for quicker access to functioning DNS Servers.

Domain Name Server (DNS) Address	168	95	1	1
Secondary DNS Address (optional)	168	95	192	1

Dynamic DNS

The Dynamic DNS feature allows you to host a server (Web, FTP, Game Server, etc.) using a host name with your dynamically assigned IP address. Most Broadband Internet Service Providers assign dynamic IP addresses. When you use a Dynamic DNS service provider, your friends can enter your host name to connect to your server, no matter what your IP address is.

Use Dynamic DNS Service	<input type="checkbox"/>
Service Provider	DynDns.org ▼
Host Name	<input type="text"/>
User Name	<input type="text"/>
Password	<input type="password"/>

- **Use Dynamic DNS Service :**
Check this option to enable Dynamic DNS.
- **Service Provider :**
Select a Dynamic DNS service provider from the drop down list.
- **Host Name :**
Enter the host name that your Dynamic DNS service provider has assigned to you; for example: myhost.mydomain.net.
- **User Name :**
Enter the user name provided by your Dynamic DNS service provider.
- **Password :**
Enter the password provided by your Dynamic DNS service provider.

LAN

To set the LAN's IP Address.

LAN Settings

The default value of the LKR-604 Broadband Router is 192.168.0.1 for the IP address and 255.255.255.0 for the Subnet Mask. You may change the value according to your needs.

To enable the DHCP server to allocate dynamic IP addresses to the clients PCs, click "Enable". The client can get an IP Address that is between the IP Pool Starting Address and the IP Pool Ending Address. You may also change the IP Pool range value.

The Lease Time is the amount of time a network user will be allowed to connect to the LKR-604 Broadband Router with his/her current dynamic IP address. Enter the amount of time, in hours, days or weeks, which the user will be "leased" this dynamic IP address.

You can enter your local domain name in the Local Domain Name fields.

IP Address	192 . 168 . 0 . 1
Subnet Mask	255 . 255 . 255 . 0
The Gateway acts as DHCP Server	<input checked="" type="checkbox"/> Enable
IP Pool Starting Address	192.168.0. 100
IP Pool Ending Address	192.168.0. 199
Lease Time	One day <input type="button" value="v"/>
Local Domain Name	<input type="text"/> (optional)

DHCP Client List

The DHCP client list allows you to see which clients are connected to the LKR-604 Broadband Router via IP address, host name, and MAC address.

IP Address	Host Name	MAC Address
192.168.0.15	mars0	00:11:22:33:44:55
192.168.0.16	mars1	01:11:22:33:44:55
192.168.0.17	mars2	02:11:22:33:44:55
192.168.0.18	mars3	03:11:22:33:44:55
192.168.0.19	mars4	04:11:22:33:44:55

NAT

Network Address Translation (NAT) allows multiple users at the local site to access the Internet through a single public IP address. NAT can also prevent hacker attacks by mapping local addresses to public addresses for key services such as the Web or FTP.

Special Application

Some applications require multiple connections, such as Internet gaming, video conferencing, and Internet telephony. These applications cannot work when Network Address Translation (NAT) is enabled. When users send this type of request to your network via the Internet, the LKR-604 Broadband Router will forward those requests to the appropriate PC. If you need to run applications that require multiple connections, specify the port normally associated with an application in the "Trigger Port" field, select the protocol type as TCP or UDP, then enter the public ports associated with the trigger port to open them for inbound traffic.

- **TCP (Transmission Control Protocol)** - A method (protocol) used along with the Internet Protocol (Internet Protocol) to send data in the form of message units between computers over the Internet. While IP takes care of handling the actual delivery of the data, TCP takes care of keeping track of the individual units of data (called packets) that a message is divided into for efficient routing through the Internet.
- **UDP (User Datagram Protocol)** - A communications method (protocol) that offers a limited amount of service when messages are exchanged between computers in a network that use the Internet Protocol IP). UDP is an alternative to the TCP and, together with IP, is sometimes referred to as UDP/IP. Like the Transmission Control Protocol, UDP uses the Internet Protocol to actually get a data unit (called a datagram) from one computer to another. Unlike TCP, however, UDP does not provide the service

of dividing a message into packets (data grams) and reassembling it at the other end. Specifically, UDP doesn't provide sequencing of the packets that the data arrives in. This means that the application program that uses UDP must be able to make sure that the entire message has arrived and is in the right order. Network applications that want to save processing time because they have very small data units to exchange (and therefore very little message reassembling to do) may prefer UDP to TCP

	Trigger Port	Trigger Type	Public Port	Public Type	Enabled
1.	<input type="text" value="9000"/>	<input type="radio"/> TCP <input checked="" type="radio"/> UDP	<input type="text" value="8000,8500-9000,9050"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input checked="" type="checkbox"/>
2.	<input type="text" value="9001"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text" value="8001,8500-9000,9050"/>	<input type="radio"/> TCP <input checked="" type="radio"/> UDP	<input type="checkbox"/>
3.	<input type="text" value="9002"/>	<input type="radio"/> TCP <input checked="" type="radio"/> UDP	<input type="text" value="8002,8500-9000,9050"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input checked="" type="checkbox"/>
4.	<input type="text" value="9003"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text" value="8003,8500-9000,9050"/>	<input type="radio"/> TCP <input checked="" type="radio"/> UDP	<input type="checkbox"/>
5.	<input type="text" value="9004"/>	<input type="radio"/> TCP <input checked="" type="radio"/> UDP	<input type="text" value="8004,8500-9000,9050"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input checked="" type="checkbox"/>
6.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
7.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
8.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
9.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
10.	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="text"/>	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>

Virtual Server

The virtual server option allows you to define port number on your LKR-604 Broadband Router for redirection to an internal LAN IP address. This feature is useful for hosting online services such as FTP or Web servers.

	Server IP	Mapping Ports	Type	Enabled
1.	192.168.0.50	23	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input checked="" type="checkbox"/>
2.	192.168.0.51	80	<input type="radio"/> TCP <input checked="" type="radio"/> UDP	<input type="checkbox"/>
3.	192.168.0.52	21	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input checked="" type="checkbox"/>
4.	192.168.0.53	20	<input type="radio"/> TCP <input checked="" type="radio"/> UDP	<input checked="" type="checkbox"/>
5.	192.168.0.		<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
6.	192.168.0.		<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
7.	192.168.0.		<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
8.	192.168.0.		<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
9.	192.168.0.		<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>
10.	192.168.0.		<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="checkbox"/>

Firewall

The LKR-604 Broadband Router provides extensive Firewall protection by restricting connection parameters to limit the risk of hacker attacks and by defending against a wide array of common hacker attacks.

The LKR-604 Broadband Router provides packet filtering rules by restricting service ports, IP address or MAC address. However, for applications that require unrestricted access to the Internet, you may configure a specific client/server as a demilitarized zone (DMZ)

Discard PING From WAN Side

When "**Discard PING from WAN side**" is checked, it causes the public WAN IP address on the LKR-604 Broadband Router to ignore ping commands. Pinging public WAN IP addresses is a common method used by hackers to test whether the WAN IP address is valid.

Discard PING from
WAN side

Client Filtering

To block certain client PCs from accessing the Internet:

You can filter Internet access for local clients based on IP addresses, application types, (i.e., HTTP port), and time of day.

For example, this screen shows that clients in the address range 192.168.0.50-60 are blocked from using FTP (Port 21) from Sunday to the following Saturday and from 2:00AM to 11:00 PM

	IP	Port	Type	Block Time	Day	Time	Enable
1.	192.168.0.50 ~ 60	21 ~ 23	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="radio"/> Always <input checked="" type="radio"/> Block	SUN ~ SAT	2:00am ~ 11:00pm	<input checked="" type="checkbox"/>
2.	192.168.0. ~	~	<input type="radio"/> TCP <input checked="" type="radio"/> UDP	<input checked="" type="radio"/> Always <input type="radio"/> Block	~	1:00am ~ 1:00pm	<input type="checkbox"/>
3.	192.168.0. ~	~	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input checked="" type="radio"/> Always <input type="radio"/> Block	~	~	<input type="checkbox"/>
4.	192.168.0. ~	~	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input type="radio"/> Always <input checked="" type="radio"/> Block	~	~	<input type="checkbox"/>
5.	192.168.0. ~	~	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input checked="" type="radio"/> Always <input type="radio"/> Block	~	~	<input type="checkbox"/>
6.	192.168.0. ~	~	<input checked="" type="radio"/> TCP <input type="radio"/> UDP	<input checked="" type="radio"/> Always <input type="radio"/> Block	~	1:00am ~ 2:00am	<input type="checkbox"/>

MAC Address Control

MAC Address Control allows you to block certain client PCs from accessing the Internet based on MAC addresses.

MAC Address Control	<input checked="" type="checkbox"/> Enable <input type="checkbox"/> Allow all to pass except the following MACs. <input checked="" type="checkbox"/> Deny all to pass except the following MACs.						
Add MAC Address	<input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> <input type="text"/>						
DHCP Client	<input type="text" value="00:11:22:33:44:55"/> <input type="button" value="Clone"/>						
MAC Address Control List	<table border="1"> <thead> <tr> <th colspan="2">MAC Address</th> </tr> </thead> <tbody> <tr> <td>00-00-e8-00-00-01</td> <td><input type="button" value="Delete"/></td> </tr> <tr> <td>00-00-e8-00-00-02</td> <td><input type="button" value="Delete"/></td> </tr> </tbody> </table>	MAC Address		00-00-e8-00-00-01	<input type="button" value="Delete"/>	00-00-e8-00-00-02	<input type="button" value="Delete"/>
MAC Address							
00-00-e8-00-00-01	<input type="button" value="Delete"/>						
00-00-e8-00-00-02	<input type="button" value="Delete"/>						

DMZ (De-Militarized Zone)

If a local client PC cannot run an Internet application properly from behind the NAT firewall, open the client up to unrestricted two-way Internet access by defining a PC as a virtual DMZ Host.

DMZ function	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled														
DMZ table	<table border="1"> <thead> <tr> <th>Public IP</th> <th>DMZ Host</th> <th>Action</th> </tr> </thead> <tbody> <tr> <td>61.220.15.11 <input type="button" value="v"/></td> <td>192.168.0. <input type="text"/></td> <td><input type="button" value=" << Add"/></td> </tr> <tr> <td>61.222.15.13</td> <td>192.168.0.101</td> <td><input type="button" value="Delete"/></td> </tr> <tr> <td>61.222.15.12</td> <td>192.168.0.102</td> <td><input type="button" value="Delete"/></td> </tr> </tbody> </table>			Public IP	DMZ Host	Action	61.220.15.11 <input type="button" value="v"/>	192.168.0. <input type="text"/>	<input type="button" value=" << Add"/>	61.222.15.13	192.168.0.101	<input type="button" value="Delete"/>	61.222.15.12	192.168.0.102	<input type="button" value="Delete"/>
Public IP	DMZ Host	Action													
61.220.15.11 <input type="button" value="v"/>	192.168.0. <input type="text"/>	<input type="button" value=" << Add"/>													
61.222.15.13	192.168.0.101	<input type="button" value="Delete"/>													
61.222.15.12	192.168.0.102	<input type="button" value="Delete"/>													

URL Filter

URL Filter is used to deny LAN computers from accessing specific web sites by its URL. A URL is a specially formatted text string that defines a location on the Internet. If any part of the URL contains the blocked word, the site will not be accessible. If any part of the URL contains the blocked word, the web page will also not display.

URL filter function	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
Add URL	<input type="text" value="urlString0"/>
Delete URL	<div style="border: 1px solid gray; padding: 5px;"><div style="background-color: #e0e0e0; padding: 2px;">urlString0</div></div> <div style="text-align: right; margin-top: 10px;"><input type="button" value="Delete"/></div>

Routing

Static Routing

The process by manually specify a specific route packets should take on the way to a destination address. You need to configure the Static Routing only for such as multiple Routers or multiple IP subnets located on your network.

Destination LAN IP	Subnet Mask	Gateway	
<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>	<input type="text"/> . <input type="text"/> . <input type="text"/> . <input type="text"/>	<input type="button" value=" << Add"/>

Technical Specifications

Standards	IEEE 802.3 10BASE-T Ethernet IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.3x Flow Control
WAN Interface	RJ-45 10BASE-T/100BASE-TX port
LAN Interfaces	4 x RJ-45 10BASE-T/100BASE-TX ports
Firewall	IP Filter MAC Filter Domain Blocking URL Blocking Scheduling UPnP enable
VPN Support	IPSec pass-through, PPTP pass-through
Configuration & Management	Web-based configuration
Diagnostic LED	Power Status WAN Link/Act 1, 2, 3, 4 LAN ports
Power Input	DC 5V, 800mA
Dimension	109 x 155 x 33mm
Operating Temperature	0°- 55°C (32° – 131° F)
Humidity	90%RH maximum non-condensing
EMI Certification	FCC Class B CE Class B

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



LKR-03/08/2007

Rev.B

TECHNICAL SUPPORT
E-mail: btitech@linkskey.com
Website: www.linkskey.com