


Brookstone®

wireless
auto-tune headphones
working name

FPO
b&w image goes here

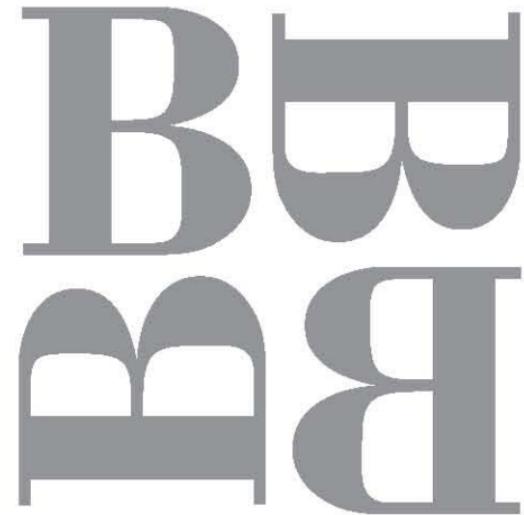

wireless auto-tune headphones

BETTER BY BROOKSTONE®

We believe that exacting standards are the core of our success. Our Wireless Auto-Tune Headphones have been thoroughly tested to be certain they meet our rigorous quality control criteria.

Our Wireless Auto-Tune Headphones let you enjoy crisp stereo sound anywhere around your home or office—and you never have to tune into a stereo signal. Their 900MHz frequency ensures a 150-foot broadcast range through walls, floors, ceilings and glass. And with two channels, the headphones avoid interference when used near other cordless headsets and phones.

FCC INFORMATION

This equipment has been tested and found to comply with the limits for a class B digital Device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.

- Connect the equipment to an outlet on a circuit different from which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This equipment may not cause harmful interference.
2. This equipment must accept any interference received, including interference that may cause undesired operation.

SAVE THESE INSTRUCTIONS

WARNING


1. Do not disassemble the headphones. There are no user-serviceable parts.
2. Do not place the headphones near heat sources such as radiators, heating vents or direct sunlight.
3. Do not place the headphones where there is moisture, rain, vibration, shock or excessive dust.
4. Keep the transmitter and headphones dry.
5. Do not use or store the transmitter and headphones in extreme temperatures.
6. Turn the power off on both the headphones and transmitter when not in use.

CAUTION

Listening at high volume levels can lead to permanent hearing damage.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

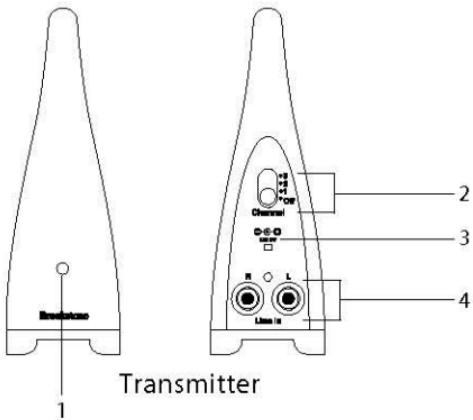

Transmitter



Headphones




LOCATION OF CONTROLS

TRANSMITTER

1. POWER INDICATOR
2. CHANNEL OFF 1, 2, 3
3. DC 9V
4. R/L LINE IN

HEADPHONES

5. POWER INDICATOR
6. ON/OFF
7. BATTERY COMPARTMENT COVER
8. (Open)
9. VOLUME
10. CHANNEL OFF 1, 2, 3
11. SIGNAL LED

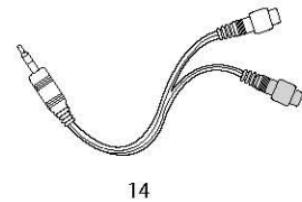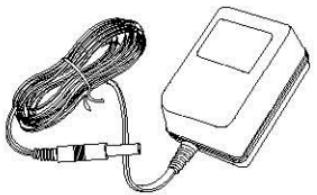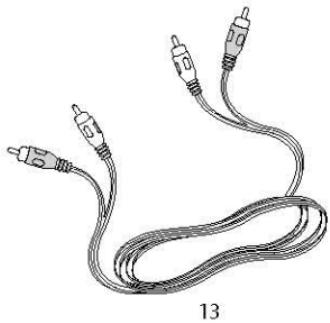

CORD/CABLES

- 12. AC/DC ADAPTER
- 13. DUAL RCA CABLE
- 14. Y ADAPTER CABLE

HEADPHONE OPERATION

INSTALLING THE HEADPHONE BATTERIES

1. While pressing , lift up and remove the headphone's BATTERY COMPARTMENT COVER.
2. Insert two AA batteries (not included) according to polarity indicators inside the compartment.
3. Replace the BATTERY COMPARTMENT COVER.

CONNECTING THE TRANSMITTER

The transmitter may be connected two ways, depending on your audio source. If your audio source has left and right RCA output jacks, you will use just the DUAL RCA CABLE. If your audio source does not have left and right output jacks, but rather a 3.5mm stereo headphone jack, you will use both the Y ADAPTER CABLE and the DUAL RCA CABLE.

Left and Right Output Jacks

1. Insert one end of the AC/DC ADAPTER into DC 9V  on the transmitter, and the other end into an electrical outlet.
2. Insert one end of the DUAL RCA CABLE into the appropriately colored R/L LINE IN jack on the transmitter, and the other end into your audio source's left and right audio output jacks.

Note:

- If there are no fixed-level audio outputs on your audio source, connect the DUAL RCA CABLE to variable-level (HI-FI) audio outputs or refer to *Headphone Jack for Y ADAPTER CABLE* connection instructions.
- Do not connect the DUAL RCA CABLE to speaker terminals on your TV or audio source. This may damage the transmitter, your TV or audio source.

Headphone Jack

1. Insert one end of the AC/DC ADAPTER into DC 9V  on the transmitter, and the other end into an electrical outlet.
2. Insert one end of the DUAL RCA CABLE into the appropriately colored R/L LINE IN jacks on the transmitter, and the other end into the appropriate colored ends of the Y ADAPTER CABLE.
3. Insert the 1/8" single end of the Y ADAPTER CABLE into your audio source's headphone jack.

Note: If your audio source requires a 1/4" headphone plug, you will need a 1/4" adapter (not included).

USING THE HEADPHONES

1. Turn on the power to your audio source.
Note: If the transmitter is connected to your audio source's variable-level output jacks, you may adjust the volume on your audio source. If the transmitter is connected to your audio source's fixed-level output jacks, no volume adjustment is needed.
2. Slide CHANNEL OFF 1, 2 ,3 on the transmitter to either channel 1, 2 or 3. The POWER INDICATOR on the transmitter illuminates.
3. Slide ON/OFF on the headphones to "On." The POWER INDICATOR on the headphones illuminates.
4. While standing 10-15 feet away from the transmitter, slide CHANNEL 1, 2 ,3 on the headphones to the same channel selected on the transmitter. The SIGNAL INDICATOR on the headphones illuminates.
5. Place the headphones over your ears and adjust VOLUME on the headphones to your desired listening level.

Note:

- If signal interference occurs, adjust the channel on both the headphones and transmitter.
- When not in use, turn the power on both the headphones and transmitter to "Off."

CARE AND MAINTENANCE

Wipe with a soft, damp cloth. Do not use abrasive cleaning agents.

SPECIFICATIONS

AC/DC ADAPTER

Input 120V AC 60 Hz 5W
Output..... 9V DC 200 mA
Polarity..... Positive Tip
Coaxial Plug..... O.D.—0.187 in. (4.75mm), I.D.—0.067 in. (1.7mm)

TRANSMITTER

Range..... 150 feet
Fine Tuning Automatic
Power Supply AC/DC Adapter
Channels..... 3

SPECIFICATIONS (CONT.)

HEADPHONES

Headbands Self-Adjusting

Power On/Off Yes

Volume Control Yes

Fine Tuning Automatic

Power Supply 2 AA Batteries (not included)



BETTER BY BROOKSTONE® WE CREATE PRODUCTS
TO MAKE LIFE BETTER. THROUGH INNOVATIVE
DESIGN, BEST-IN-CLASS PRODUCT SELECTION AND
AN UNYIELDING COMMITMENT TO EXCELLENCE, WE
MAXIMIZE THE QUALITY OF OUR PRODUCTS—AND
HELP YOU ENHANCE THE QUALITY OF YOUR LIFE.

Merrimack, New Hampshire 03054 • Customer Service 800-846-3000 • www.brookstone.com