

Wireless TEC Room Temperature Sensor (Mesh)

Product Description

The family of APOGEE® Wireless Room Temperature Sensors eliminates the need to run wire between the Terminal Equipment Controllers (TECs) and their respective room temperature sensor. The sensors communicate with the Field Level Network Transceivers (FLNXs), mounted at the TECs, that also support the Wireless Field Level Network (WFLN).

Product Numbers

QAA2290.EWSC	Sensing only
QAA2290.DWSC	Sensing with temperature display *
QAA2290.FWSC	Sensing with override, setpoint, and temperature display*

* NOTE: Field selectable Fahrenheit or Celsius display.

Accessories

544-643	RTS passkey (to change display to DIAG mode)
PXA-LITH.P10	Battery (10-pack): 3.6 Volts lithium AA (Tadiran Batteries part number TL-4903/5 [standard] or SAFT part number 14500)
540-143	Laptop PC cable (RJ-11 to DB-9)

Related Products

Wireless Field Level Network (WFLN)

563-054	Field Level Network Transceiver (FLNX)
563-055	Field Panel Transceiver (FPX)
563-056	Wireless Transceiver Tool (TLX)

Expected Installation Time

10 minutes

Caution Notations

CAUTION:		Equipment damage, or loss of data may occur if the user does not follow a procedure as specified.
-----------------	---	---

Prerequisite

All wiring must conform to NEC and local codes and regulations.

Required Tools

- Phillips screwdrivers, sizes 1 and 2
- Medium and small flat-blade screwdrivers
- 1/16" hex key
- Medium-duty electric drill and 3/16-inch (4.8 mm) drill bit
- Small level and tape measure

NOTE: Depending on the actual installation (surface mounting) some of these tools may not be required.



Figure 1. Room Temperature Sensor.

Installation Accessories

- Gym Guard Kit, 182-621 desert beige, 182-621E satin chrome, (incompatible with adapter bases and the extender ring), see *TB 193, document number 155-222P25*.
- Spring Clips: Finished Drywall Mounting Kit (10 pack), 182-685, see *document number 129-073*.

Mounting Information

CAUTION:



Do not mount the WRTS within 3 feet of other RF devices such as microwave ovens, Wi-Fi/802.11 access points, etc.).

WRTS Installation

1. Select a location for the WRTS, following the standard rules for room temperature sensor placement. Locate the WRTS no further than 100 feet from the nearest FLNX on its Wireless FLN, ideally in a location where there are no major RF obstructions (for example, metal or concrete walls) between the two.
2. Remove the plastic insulating strip between the battery in the WRTS battery holder (or insert the battery) to power-up the WRTS.

NOTE: Even though the WRTS is now powered, it will stay in a low-power sleep mode until commissioned.

3. Mount the WRTS base plate to the wall, snap on the WRTS front cover, and the WRTS is now ready for use.
4. Commission per the WFLN Start-up Procedure (140-0649)

Always mount the sensor vertically. Locate the sensor as follows:

- Per design specifications, and local regulations.
- Where the air circulates around it freely (not in recessed areas or behind doors).
- Allow a minimum of 4 inches (10 cm) free space above and below for proper airflow and the front cover removal tool.
- Away from drafts caused by doors, windows, outside walls, air registers, return air plenums, etc.
- Away from heat sources such as strong lights, fireplaces, direct sunlight, etc.
- On an inside wall, about 5 feet (1.5 m) above the finished floor.
- The line of sight distance (through walls) to the nearest FLNX ideally should be less than 100 feet (30 m).

Drywall Base-Plate Mounting (Figure 2)

1. Using the sensor base plate as a template, mark the top and bottom mounting hole locations for drywall mounting.
2. Drill two 3/16-inch (4.8 mm) mounting holes and mount the two wall anchors.
3. Orient the "UP" arrow on the base plate at the top and mount on the wall as follows:
 - a. Level the sensor base plate.
 - b. Tighten the two mounting screws to the sensor base plate.



CAUTION:

Over-tightening may cause the sensor base plate to crack or bend.

4. Snap the sensor front to the sensor base plate by first hooking the sensor front to the top latches, and then rotating the cover downward until it latches.
5. Loosen the safety set screw at the bottom of the base one or two revolutions to lock the cover to the base. Be careful not to loosen too far as the screw can be completely removed from the base.

The installation is now complete.

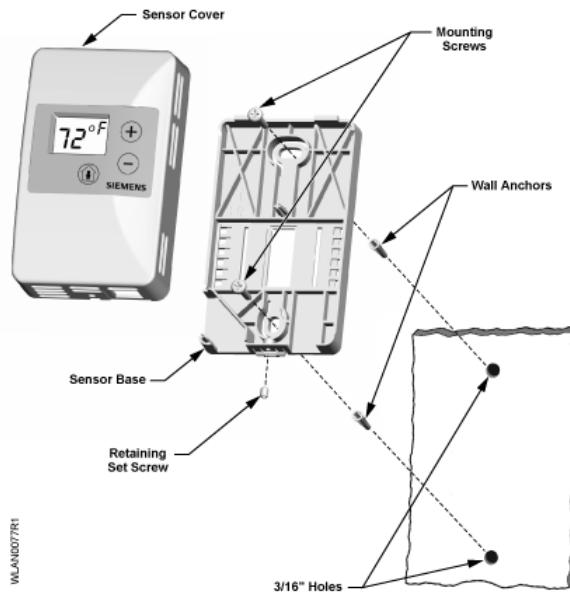


Figure 2. Drywall Mounting.

Section 7.1.5 of RSS-GEN

Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

This device complies with Part 15 of the FCC rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

To comply with FCC's RF exposure limits for general population/uncontrolled exposure, the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Interference Statement

Part 15.105 (b)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Information in this publication is based on current specifications. The company reserves the right to make changes in specifications and models as design improvements are introduced. Other product or company names mentioned herein may be the trademarks of their respective owners. © 2007 Siemens Building Technologies, Inc.