



IEEE 802.11b/g/n Smart Energy Module AW-CU288

V0.3

2014/07/14
Kai. Wu

Relative Software

Application Software

- FTDI VCP Drivers (FT2232D)
- Libusb-win32-bin-1.2.6.0
- Cygwin

Set-up Procedure

1. Download FTDI VCP Drivers (FT2232D)
2. Download Libusb-win32-bin-1.2.6.0
3. Set Up CU288 EVB for Windows
4. Install FTDI VCP Drivers
5. Install Libusb-win32-bin-1.2.6.0
6. Install Cygwin
7. Insert file “OpenOCD.zip” (By wmsdk_bundle-2.13.78)
8. Burning MCU Image with normal firmware
9. Run WIFI Normal Driver
10. Burning MCU Image with MFG firmware
11. Run WIFI MFG tool

1. Download FTDI VCP Drivers (FT2232D)


Install the driver manually. You can get the driver from FTDI's web site.
<http://www.ftdichip.com/Drivers/VCP.htm>

Currently Supported VCP Drivers:

Operating System	Release Date	Processor Architecture							Comments
		x86 (32-bit)	x64 (64-bit)	PPC	ARM	MIPSII	MIPSIV	SH4	
Windows	2014-02-21	2.10.00	2.10.00	-	-	-	-	-	2.10.00 WHQL Certified Available as setup executable Release Notes

2. Download Libusb-win32

You can get the driver from libusb-win32's web site.
<http://sourceforge.net/projects/libusb-win32>

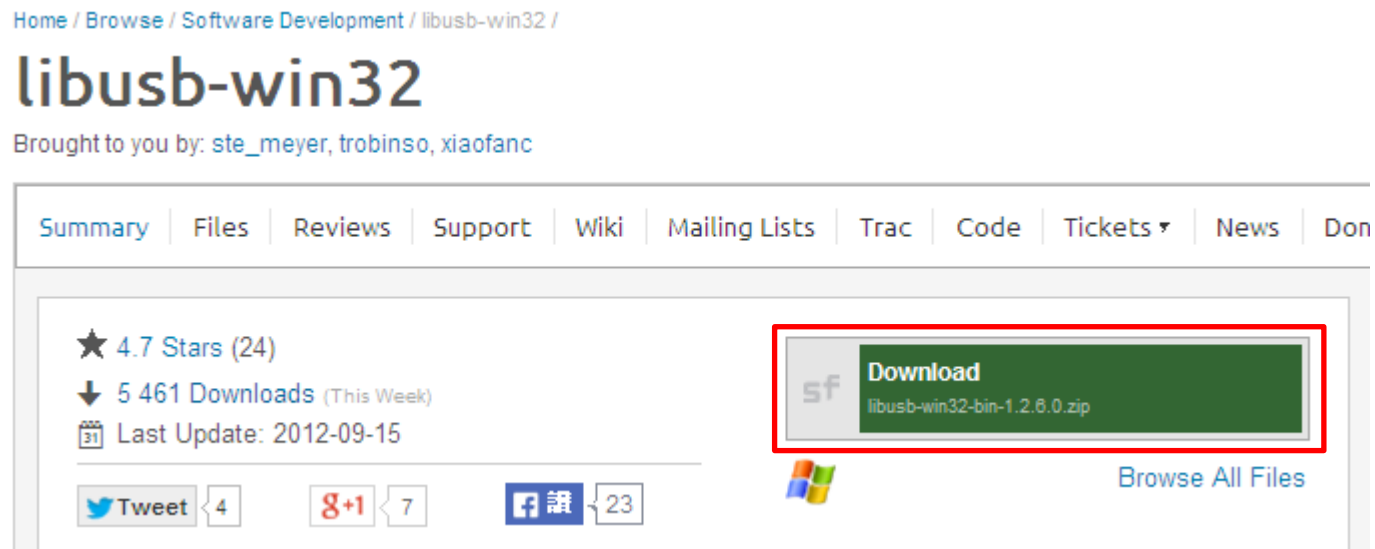

Home / Browse / Software Development / libusb-win32 /

libusb-win32

Brought to you by: ste_meyer, trobinso, xiaofanc

Summary | Files | Reviews | Support | Wiki | Mailing Lists | Trac | Code | Tickets ▾ | News | Don

★ 4.7 Stars (24)
↓ 5 461 Downloads (This Week)
📅 Last Update: 2012-09-15


[Tweet](#) 4 [+1](#) 7 [讚](#) 23

[Download](#)
libusb-win32-bin-1.2.6.0.zip

[Browse All Files](#)

3. Set Up CU288 EVB for Windows

The USB port connects the CU288 evaluation board to the PC.

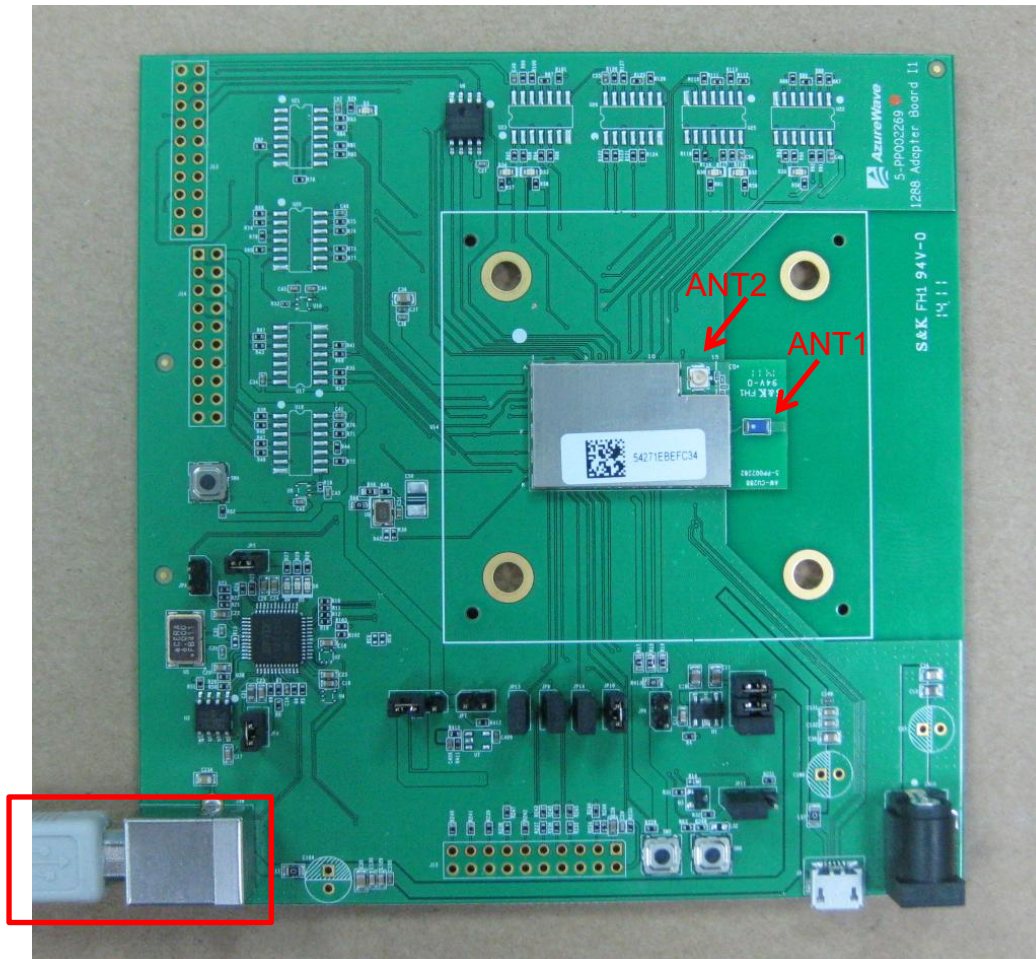

4-1. Install FTDI VCP Drivers

尋找新增硬體精靈

這個精靈協助您安裝軟體於：
Dual RS232-HS

如果您的硬體附有安裝 CD 或磁片，現在將它插入。

您要精靈執行什麼工作？

- 自動安裝軟體 (建議選項) (A)
- 從清單或特定位置安裝 (進階) (S)

請按 [下一步] 繼續。

< 上一步 (B) 下一步 (N) > 取消

硬體更新精靈

請選擇您的搜尋和安裝選項。

- 在這些位置中搜尋最好的驅動程式 (S)
使用下列核取方塊來限制或擴充包括本機路徑和可卸式媒體的預設搜尋，將安裝找到的最佳驅動程式。
- 搜尋可卸式媒體 (軟碟，CD-ROM...) (M)
- 搜尋時包括這個位置 (O):
D:\usb_driver4 瀏覽 (R)
- 不要搜尋，我將選擇要安裝的驅動程式 (D)
選擇這個選項來從清單中選取裝置驅動程式。Windows 不保證您所選取的驅動程式最符合您的硬體。

< 上一步 (B) 下一步 (N) > 取消

瀏覽資料夾

選擇包含您的硬體的資料夾。

- Application form
- CDM v2.10.00 WHQL Certified
- amd64
- i386
- Static
- DESK

要瀏覽任何子資料夾，請按上述 + 號。

確定 取消

尋找新增硬體精靈

完成尋找新增硬體精靈

這個精靈安裝了軟體於：
USB Serial Converter A

按 [完成] 關閉精靈。

DONE

< 上一步 (B) 完成 取消


4-2. Install FTDI VCP Drivers

Verifying Driver Installation:

To verify that driver installation has completed successfully, you can open the “**Device Manager**” (right-click My Computer, select Properties).


In the **System Properties** windows, select Hardware, Device Manager.

Two “**USB Serial Port**” should be listed under MY-PC\Ports (COM & LPT)

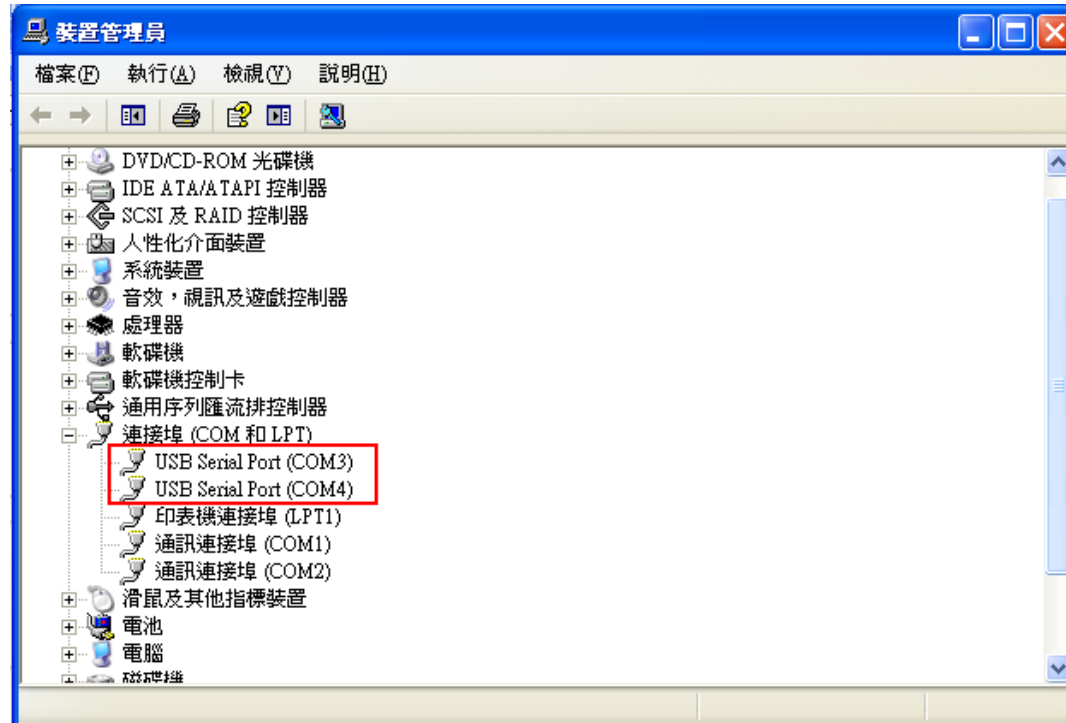


5-1. Install Libusb-win32

Install inf-wizard:

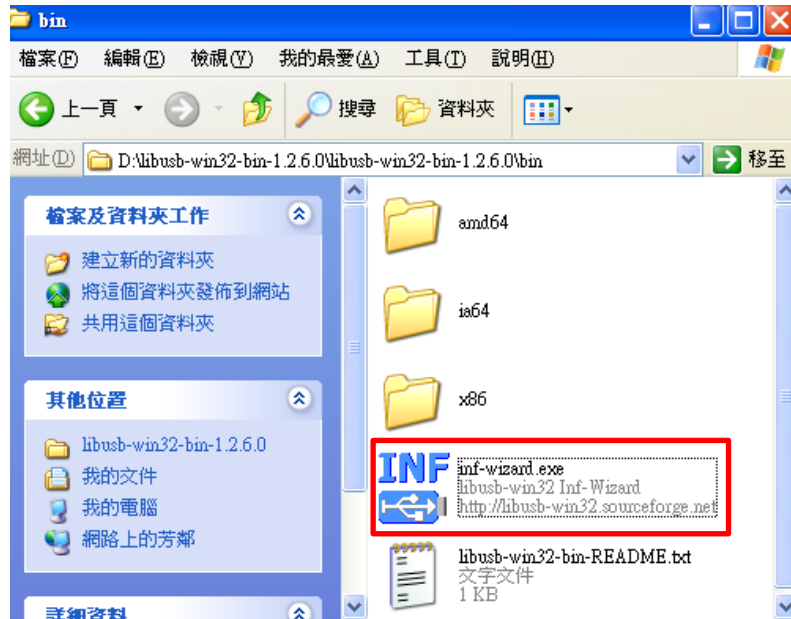

USB Serial Converter A (Interface 0)

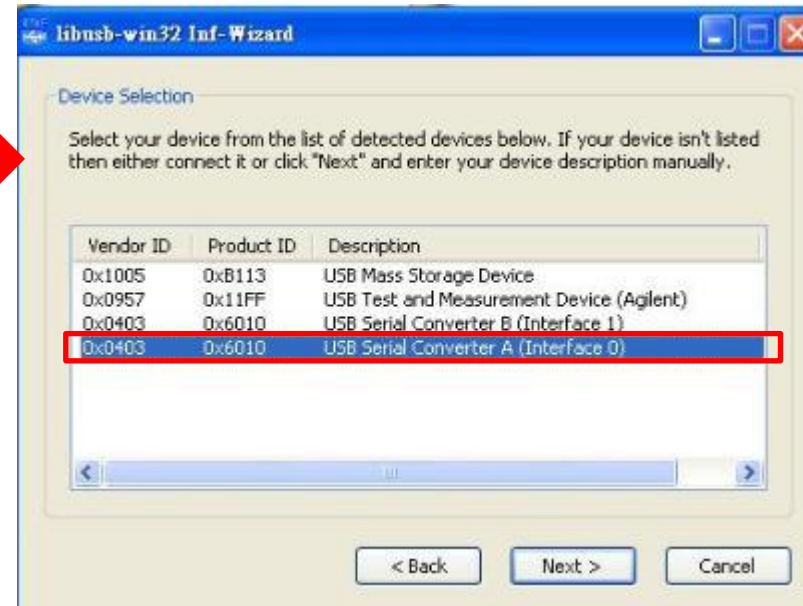


5-2. Install Libusb-win32

Verifying Driver Installation:

To verify that driver installation has completed successfully, you can open the “**Device Manager**” (right-click My Computer, select Properties).

In the **System Properties** windows, select Hardware, Device Manager.

One “**USB Serial Converter A**” should be listed under MY-PC\Ports (lib usb-win32 devices)

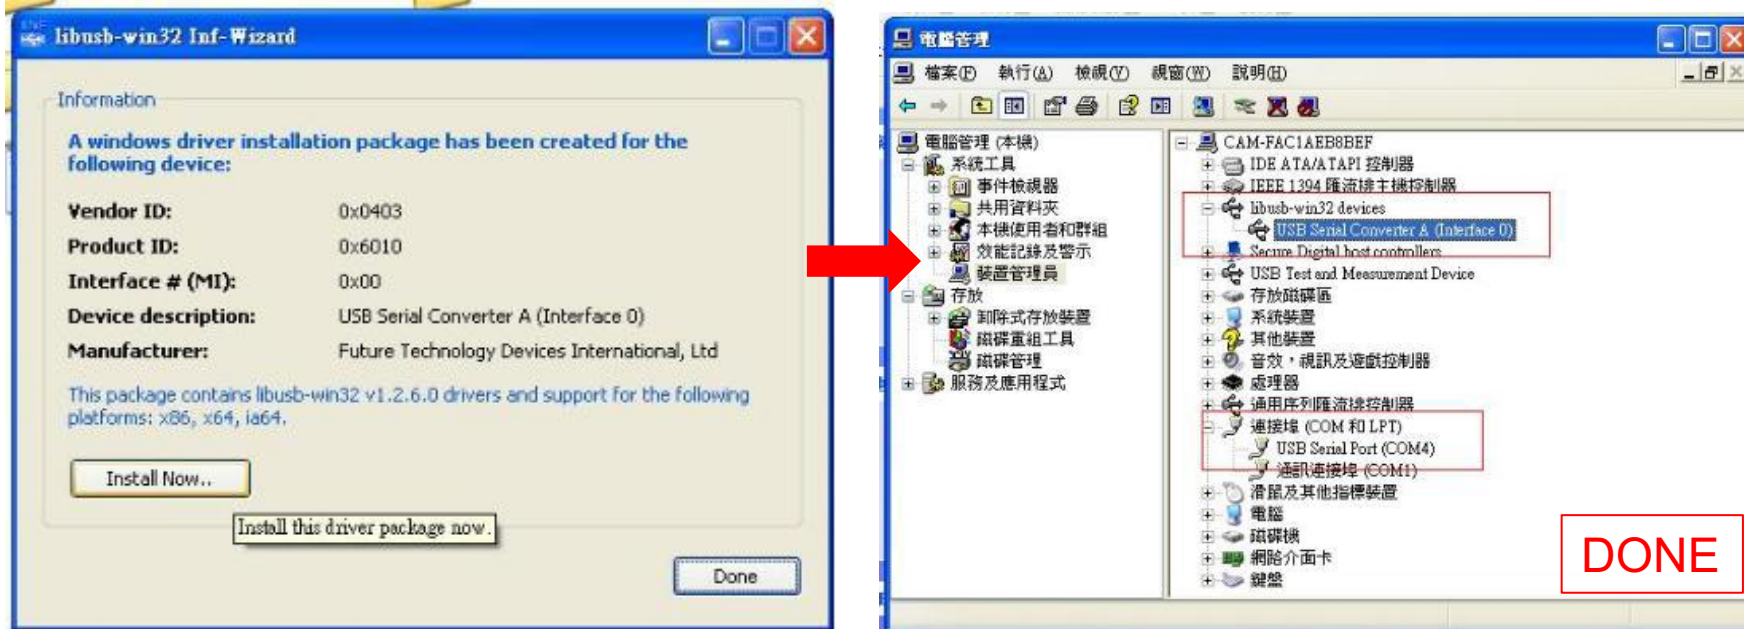

6-1. Install Cygwin

Install Cygwin:





1. Install Cygwin from: http://www.cygwin.com/setup_x86.exe (for x86 32-bit systems) or http://www.cygwin.com/setup_x86_64.exe (for x86 64-bit systems)
2. Select the option Install from Internet
3. Use default installation path: c:\cygwin. If you chose an alternate installation directory, please make sure that there are no spaces in the path.
4. Pick the Local Package Directory (this is the download cache directory)
5. Select the option Direct Connection
6. Select any mirror you want to use
7. Add additional packages to the default selection:

Click “Next”. The Cygwin Setup window will show the progress as each package gets installed.

Note:


If you are not familiar with cygwin, please visit <http://cygwin.com/> for additional information and details. In particular, the Cygwin User Guide (<http://cygwin.com/cygwin-ug-net/>) is a good resource for new users.

6-2. Install Cygwin

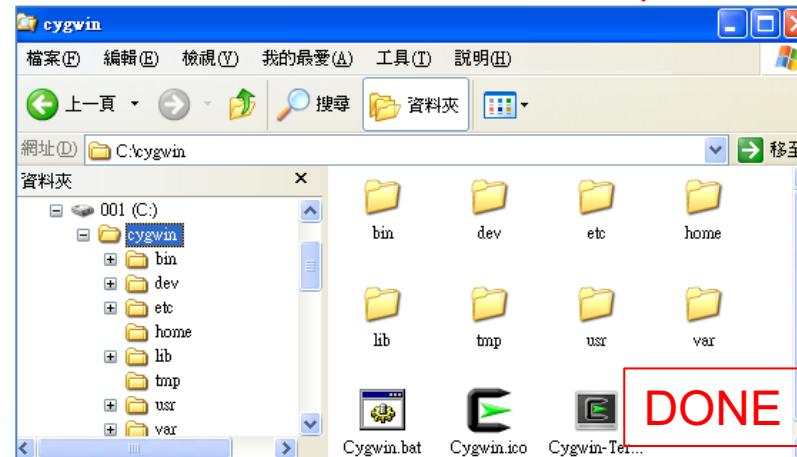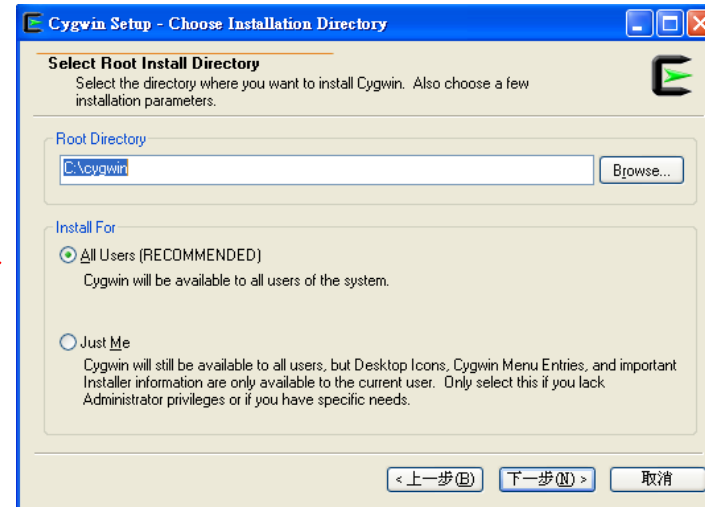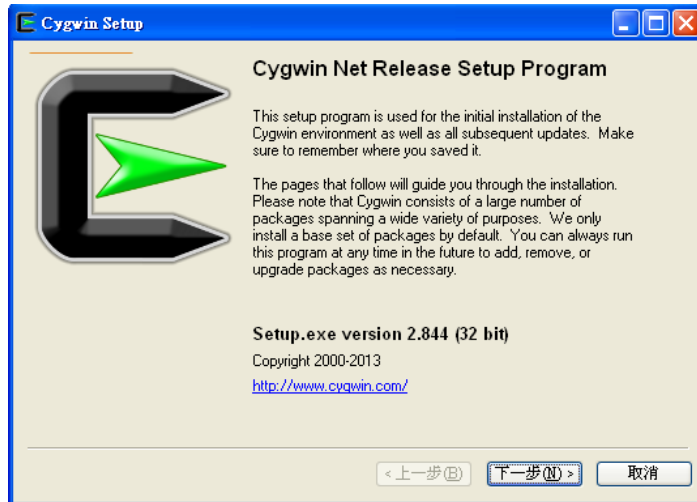


7-1. Insert file “OpenOCD.zip”

Unzip “CU288_OpenOCD.zip” and put “readelf.exe” to C:\cygwin\bin

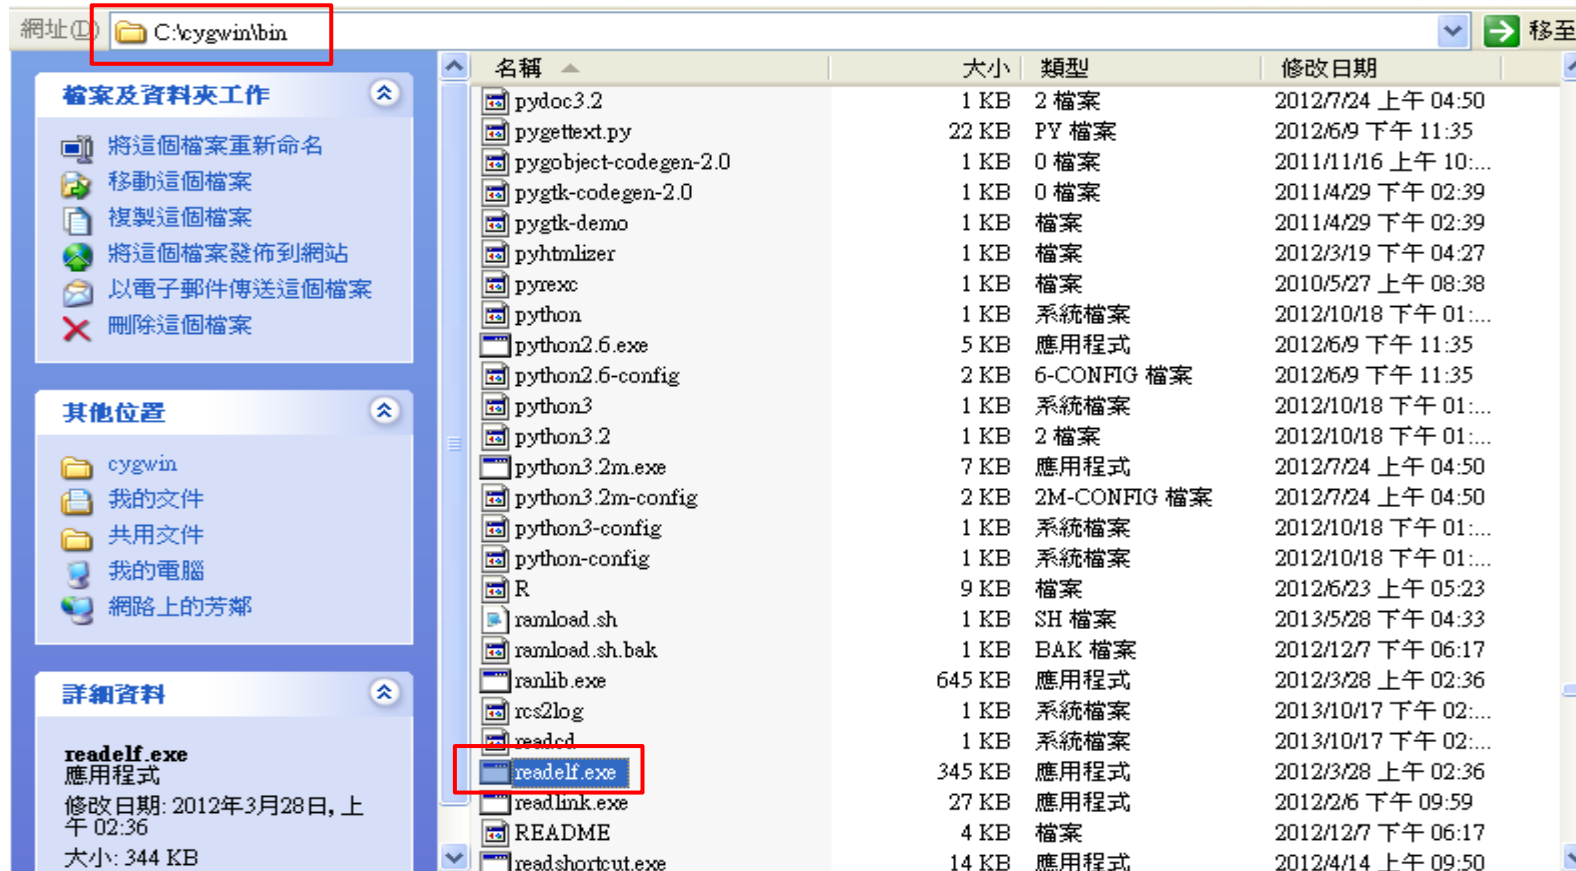


7-2. Insert file “OpenOCD.zip”

Unzip “CU288_OpenOCD.zip” and put them to C:\cygwin\

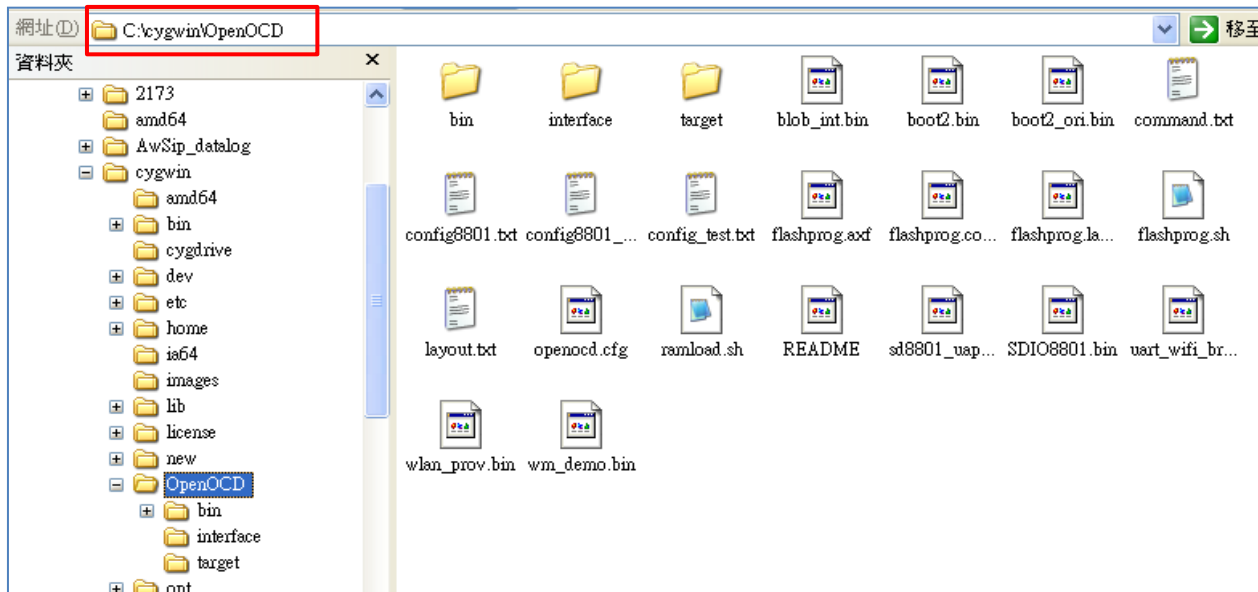

7-3. Insert file “OpenOCD.zip”

Process C:\cygwin\Cygwin.bat

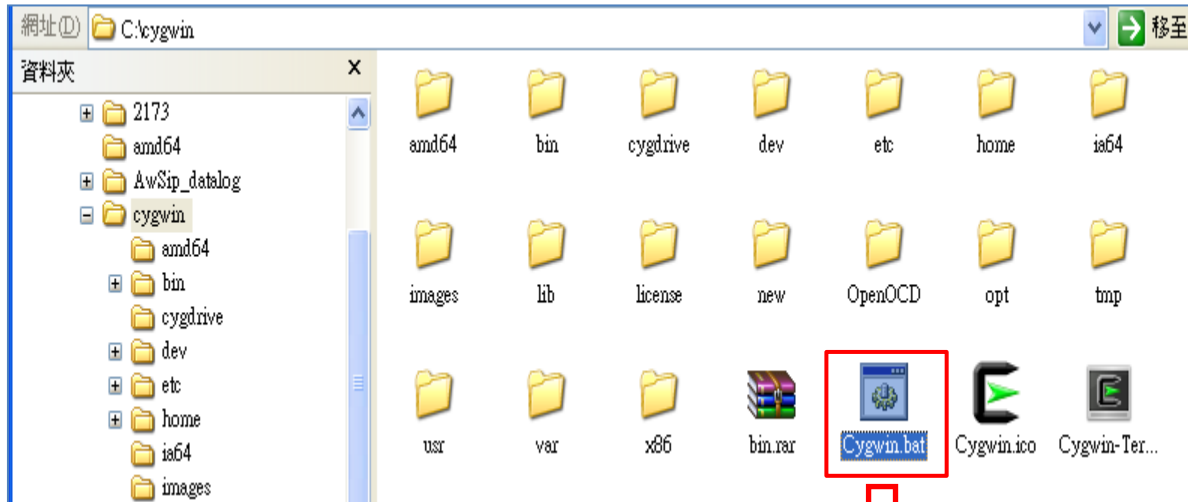

```
C:\ ~
Your group is currently "mkpasswd". This indicates that your
gid is not in /etc/group and your uid is not in /etc/passwd.

The /etc/passwd (and possibly /etc/group) files should be rebuilt.
See the man pages for mkpasswd and mkgroup then, for example, run


mkpasswd -l [-d] > /etc/passwd
mkgroup -l [-d] > /etc/group

Note that the -d switch is necessary for domain users.

Steve Yang@azwave-steve ~
$
```

7-4. Insert file “OpenOCD.zip”

Key in command : `cd /cygdrive/c/cygwin/OpenOCD`

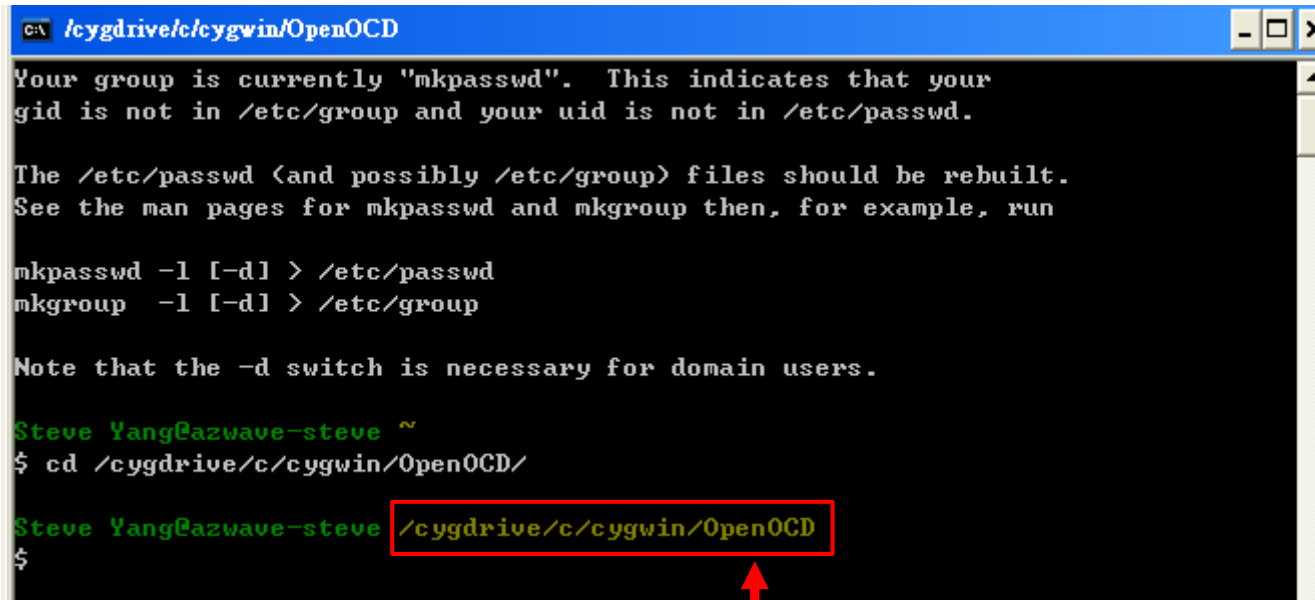

```
C:\ /cygdrive/c/cygwin/OpenOCD
Your group is currently "mkpasswd". This indicates that your
gid is not in /etc/group and your uid is not in /etc/passwd.

The /etc/passwd (and possibly /etc/group) files should be rebuilt.
See the man pages for mkpasswd and mkgroup then, for example, run

mkpasswd -l [-d] > /etc/passwd
mkgroup -l [-d] > /etc/group

Note that the -d switch is necessary for domain users.

Steve Yang@azwave~
$ cd /cygdrive/c/cygwin/OpenOCD/

Steve Yang@azwave~ /cygdrive/c/cygwin/OpenOCD
$
```

Check the path is correct

8-1. Burning Normal F/W

Check config8801.txt, layout.txt ... 6 files in OpenOCD folder

The screenshot shows a Windows file explorer window titled "C:\cygwin\OpenOCD". The left sidebar shows a tree view of folders, with "OpenOCD" selected. The main pane displays a grid of files and folders. Several files are highlighted with red boxes: "bin", "interface", "target", "blob_int.bin", "boot2.bin", "boot2_ori.bin", "command.txt", "config8801.txt", "config8801_...", "config_test.txt", "flashprog.axf", "flashprog.co...", "flashprog.la...", "flashprog.sh", "layout.txt", "openocd.cfg", "ramload.sh", "README", "sd8801_uap...", "SDIO8801.bin", "uart_wifi_br...", "wlan_prov.bin", and "wm_demo.bin".

A Notepad window titled "config8801.txt - 記事本" is open in the foreground, showing the following text:

```
boot2 boot2.bin  
mc200fw wm_demo.bin  
wififw sd8801 uapsta beta.bin
```

Below the text in the Notepad window, the text "Check files name" is written in red.

8-2. Burning Normal F/W

Key in command : `./flashprog.sh -l layout.txt -b config8801.txt`

```
CA /cygdrive/c/cygwin/OpenOCD
Your group is currently "mkpasswd". This indicates that your
gid is not in /etc/group and your uid is not in /etc/passwd.

The /etc/passwd (and possibly /etc/group) files should be rebuilt.
See the man pages for mkpasswd and mkgroup then, for example, run

mkpasswd -l [-d] > /etc/passwd
mkgroup -l [-d] > /etc/group

Note that the -d switch is necessary for domain users.

Steve Yang@azwave~
$ cd /cygdrive/c/cygwin/OpenOCD/

Steve Yang@azwave~ /cygdrive/c/cygwin/OpenOCD
$ ./flashprog.sh -l layout.txt -b config8801.txt_
```

8-3. Burning Normal F/W

Burning information print as followed:

Note : Please restart DUT after burning (Plug-in and Plug-out USB)

```
C:\ /cygdrive/c/cygwin/OpenOCD
target state: halted
target halted due to debug-request, current mode: Thread
xPSR: 0x01000000 pc: 0x00000fb8 msp: 0x20010400
requesting target halt and executing a soft reset
target state: halted
target halted due to debug-request, current mode: Thread
xPSR: 0x01000000 pc: 0x00000fb8 msp: 0x20010400
80984 bytes written at address 0x00100000
downloaded 80984 bytes in 0.640625s (123.451 KiB/s)
verified 80984 bytes in 0.218750s (361.536 KiB/s)
semihosting is enabled


Erasing internal flash...done
Erasing external flash...done
Writing new flash layout...done
Writing "boot2" @0x0 (internal)...done
Writing "mc200fw" @0x7000 (internal).....done
Writing "wififw" @0xb7000 (internal).....done
Please press CTRL+C to exit.
Exiting.

Terminated

Steve Yang@azwave-steve /cygdrive/c/cygwin/OpenOCD
$
```

9-1. Run normal F/W


Open OS terminal and set USB comport (reference to page9), set baud-rate as 115200

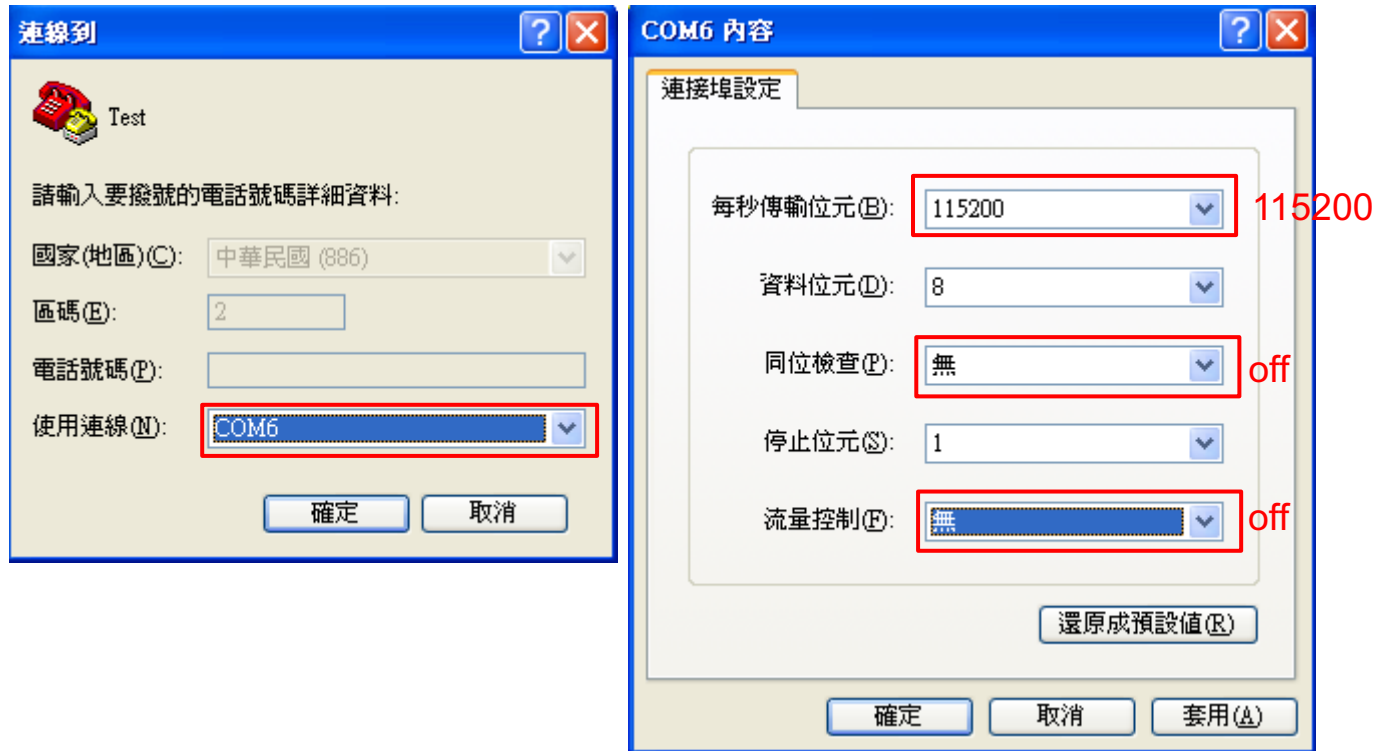

9-2. Run normal F/W


Enter help on the screen to see a full list of commands available for use

EX:
wlan-scan

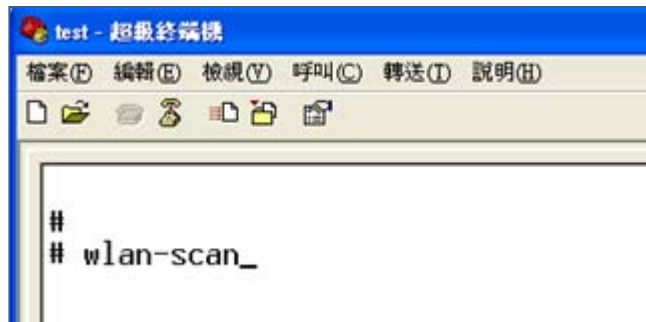

```
test - 超級終端機
檔案(F) 編輯(E) 檢視(V) 呼叫(C) 轉送(T) 說明(H)
#
# wlan-scan_
```


That will scan around AP

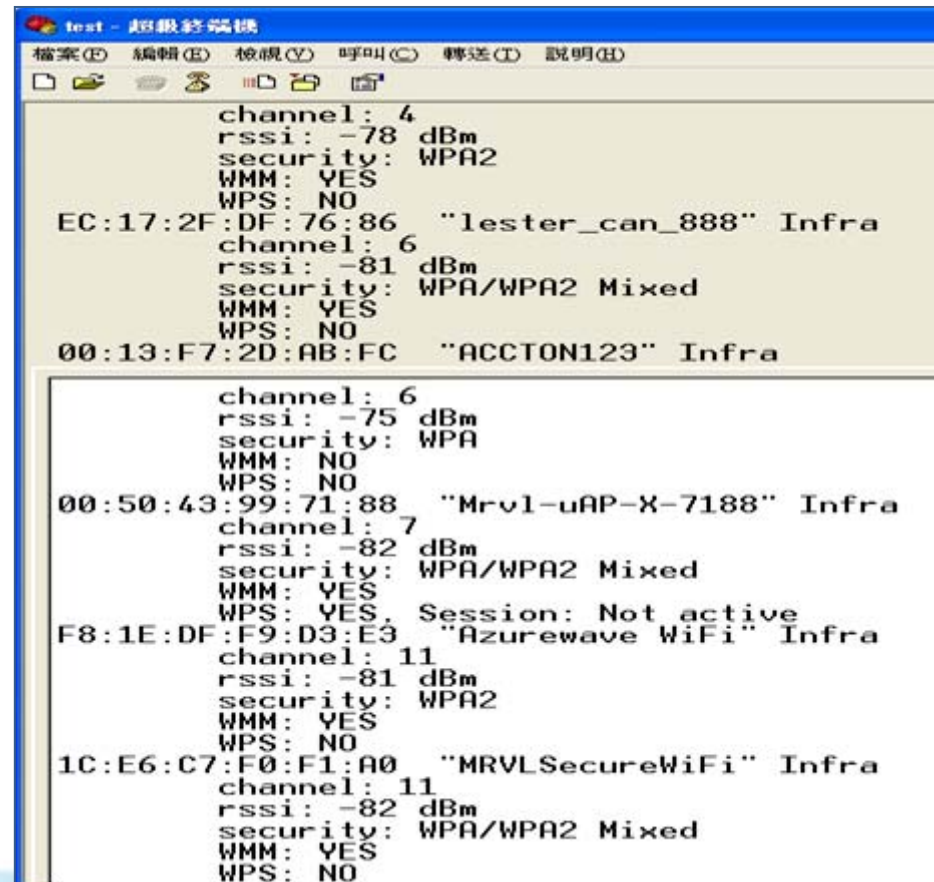

```
test - 超級終端機
檔案(F) 編輯(E) 檢視(V) 呼叫(C) 轉送(T) 說明(H)
channel: 4
rssi: -78 dBm
security: WPA2
WMM: YES
WPS: NO
EC:17:2F:DF:76:86 "lester_can_888" Infra
channel: 6
rssi: -81 dBm
security: WPA/WPA2 Mixed
WMM: YES
WPS: NO
00:13:F7:2D:AB:FC "ACCTON123" Infra
channel: 6
rssi: -75 dBm
security: WPA
WMM: NO
WPS: NO
00:50:43:99:71:88 "Mrvl-uAP-X-7188" Infra
channel: 7
rssi: -82 dBm
security: WPA/WPA2 Mixed
WMM: YES
WPS: YES. Session: Not active
F8:1E:DF:F9:D3:E3 "Azurewave WiFi" Infra
channel: 11
rssi: -81 dBm
security: WPA2
WMM: YES
WPS: NO
1C:E6:C7:F0:F1:A0 "MRVLSecureWiFi" Infra
channel: 11
rssi: -82 dBm
security: WPA/WPA2 Mixed
WMM: YES
WPS: NO
```


10-1. Burning MFG F/W

Check config8801_mfg.txt, layout.txt ... 6files in OpenOCD folder

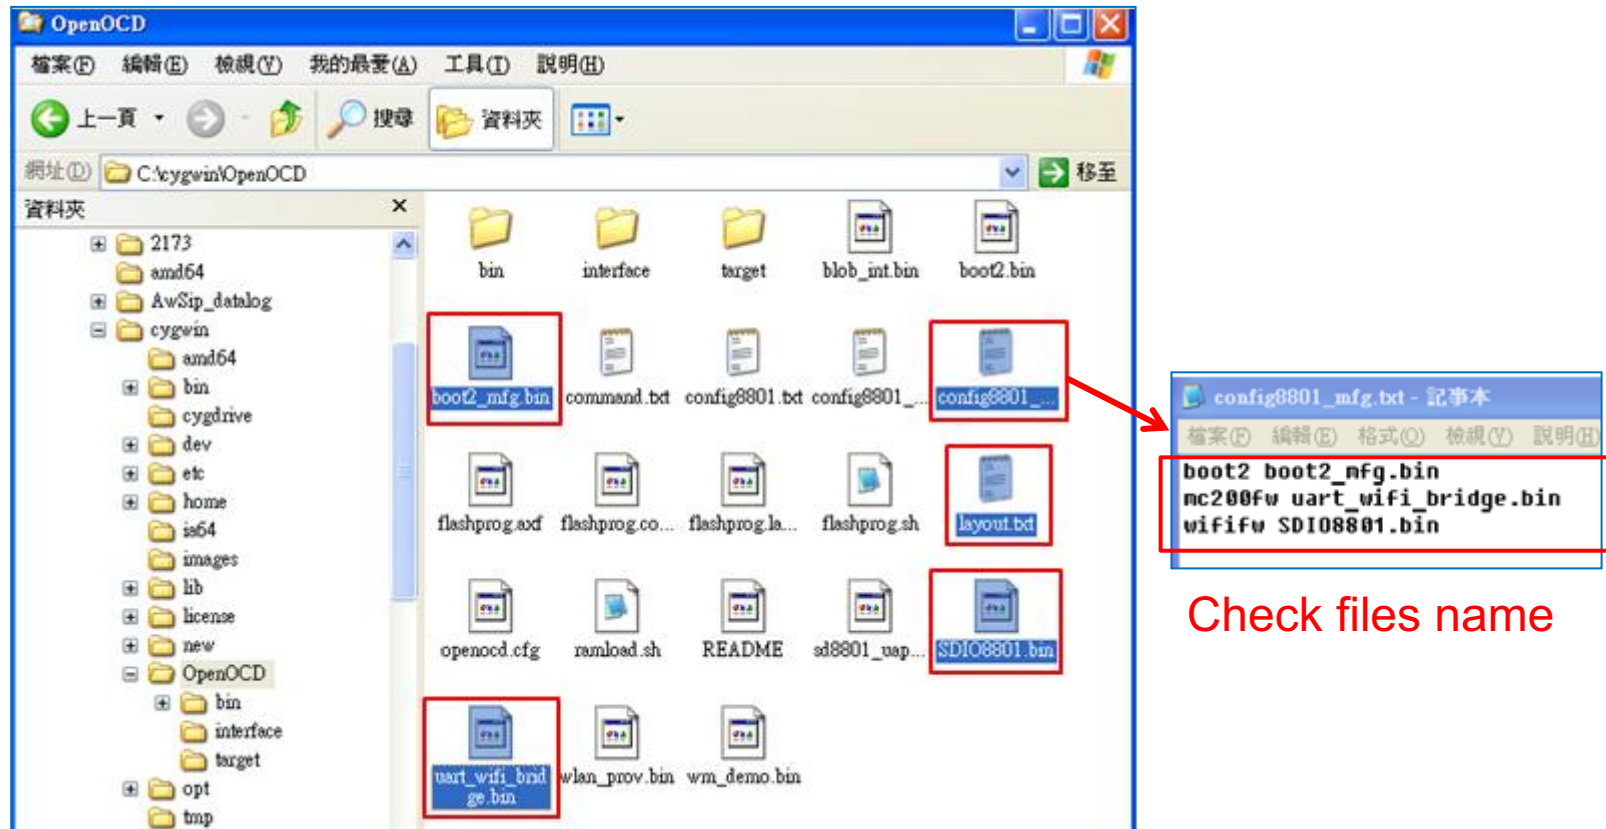

10-2. Burning MFG F/W

Command : `./flashprog.sh -l layout.txt -b config8801_mfg.txt`

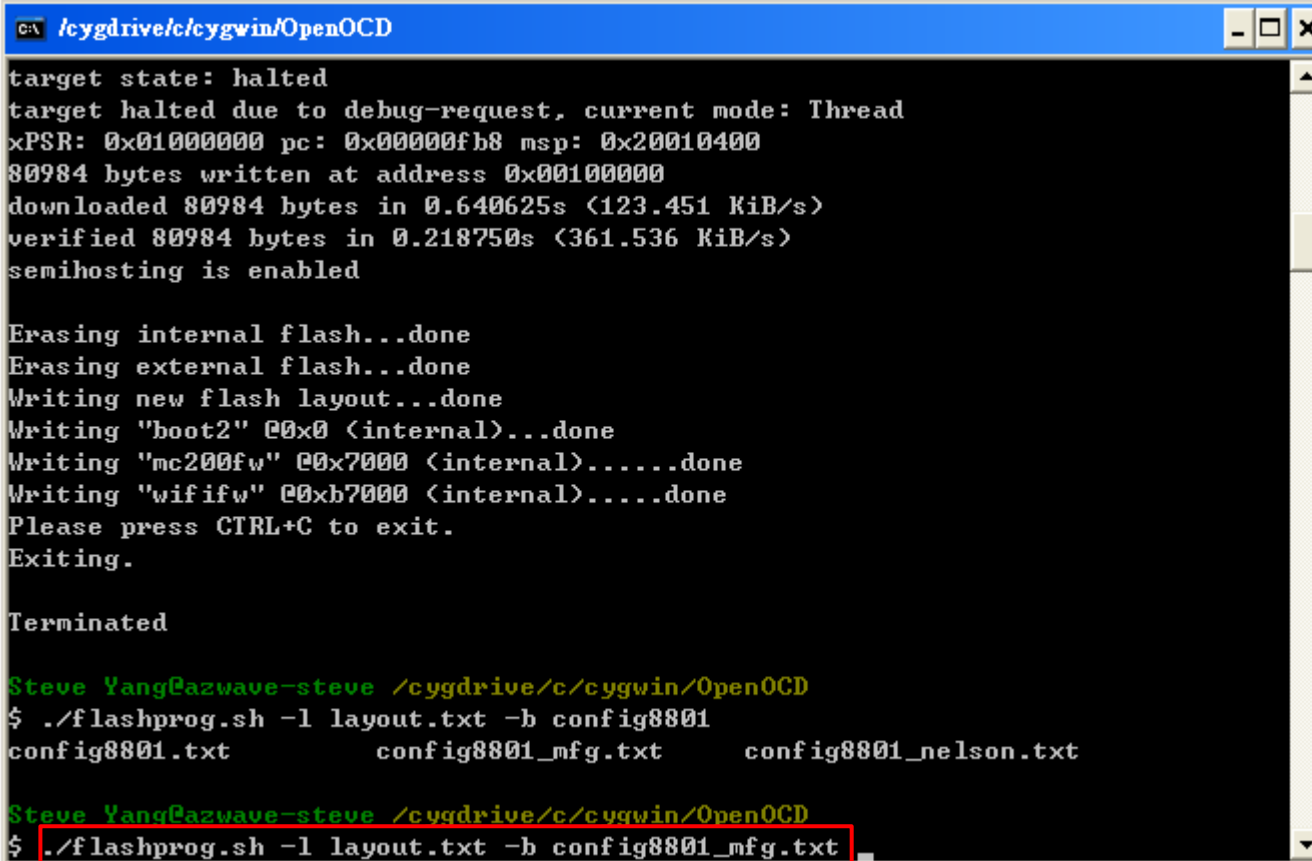

```
c:\ /cygdrive/c/cygwin/OpenOCD
target state: halted
target halted due to debug-request, current mode: Thread
xPSR: 0x01000000 pc: 0x00000fb8 msp: 0x20010400
80984 bytes written at address 0x00100000
downloaded 80984 bytes in 0.640625s <123.451 KiB/s>
verified 80984 bytes in 0.218750s <361.536 KiB/s>
semihosting is enabled

Erasing internal flash...done
Erasing external flash...done
Writing new flash layout...done
Writing "boot2" @0x0 <internal>...done
Writing "mc200fw" @0x7000 <internal>.....done
Writing "wififw" @0xb7000 <internal>.....done
Please press CTRL+C to exit.
Exiting.

Terminated

Steve Yang@azwave-steve /cygdrive/c/cygwin/OpenOCD
$ ./flashprog.sh -l layout.txt -b config8801
config8801.txt          config8801_mfg.txt     config8801_nelson.txt

Steve Yang@azwave-steve /cygdrive/c/cygwin/OpenOCD
$ ./flashprog.sh -l layout.txt -b config8801_mfg.txt
```

10-3. Burning MFG F/W

Burning information print as followed:

Note : Please restart DUT after burning (Plug-in and Plug-out USB)

```
C:\ /cygdrive/c/cygwin/OpenOCD
target state: halted
target halted due to debug-request, current mode: Thread
xPSR: 0x01000000 pc: 0x00000fb8 msp: 0x20010400
requesting target halt and executing a soft reset
target state: halted
target halted due to debug-request, current mode: Thread
xPSR: 0x01000000 pc: 0x00000fb8 msp: 0x20010400
80984 bytes written at address 0x00100000
downloaded 80984 bytes in 0.640625s (123.451 KiB/s)
verified 80984 bytes in 0.218750s (361.536 KiB/s)
semihosting is enabled

Erasing internal flash...done
Erasing external flash...done
Writing new flash layout...done
Writing "boot2" @0x0 (internal)...done
Writing "mc200fw" @0x7000 (internal).....done
Writing "wififw" @0xb7000 (internal).....done
Please press CTRL+C to exit.
Exiting.

Terminated

Steve Yang@azwave-steve /cygdrive/c/cygwin/OpenOCD
$
```

11-1. Run Marvel 88w8801 WIFI MFG tool

The image shows two screenshots of a Windows environment. The top screenshot shows a Windows Explorer window titled 'labtool_8801' with the address bar set to 'C:\labtool_8801'. The file list includes 'DutFmApi878XDll.h', 'DutWlanApi878XDll.h', 'DutWlanApi.hc', 'Flash_SPI_header.bin', 'Flash_SPI_header.sbin', 'GenHeader.bin', 'SetUp.ini', 'test.txt', 'UsbHeader.bin', and 'WlanCalData_ext.conf'. A red box highlights 'SetUp.ini', with a red arrow pointing to a Notepad window titled 'SetUp.ini - 記事本'. The Notepad window contains the following text:

```
;Protocol=UDP  
  
[COMSET1]  
ComNo=4  
BaudRate=115200  
byParity=0  
byStopBits=1  
byByteSize=8  
UartDelay=20  
maxWait=2000
```

A red arrow points from the 'SetUp.ini' file in the Explorer to the Notepad window, labeled 'Set USB comport'. A second red arrow points from the Notepad window down to the second screenshot, labeled 'Run Marvel 88w8801 MFG tool'. The second screenshot shows the same Explorer window, but the file list is different, including 'AddCalDLL.dll', 'cal.bat', 'DutApi878XDll.h', 'DutApiWiFi8801BridgEth.exe', 'DutApiWiFi8801BridgeUart.exe', 'DutApiWiFi8801Dll_BRIDGE_ETH.dll', 'DutApiWiFi8801Dll_BRIDGE_ETH.lib', 'DutApiWiFi8801Dll_BRIDGE_UART.dll', 'DutApiWiFi8801Dll_BRIDGE_UART.lib', 'DutBtApi878XDll.h', and 'DutFmApi878XDll.h'. The status bar at the bottom of the Explorer window reads '描述: Dut Wlan BT Labtool 公司: Marvell Semiconduct 140 KB'.

11-2. Run Marvel 88w8801 WIFI MFG tool

```
Name:          Dut labtool
Version:       2.0.0.79
Date:         Feb 19 2014 <22:59:42>

Note:

Name:          DutApiClass
Interface:     EtherNet
Version:       2.0.0.79
Date:         Feb 19 2014 <22:59:07>

Note:

DutIf_InitConnection: 0

-----
                        W87xx <802.11a/g/b/n> TEST MENU
-----

Enter option: 1
Unknown Option
Enter option: 45
DutIf_GetMACAddress: 0x00000000
DutIf_GetMACAddress: 54.27.1e.be.fc.34
Enter option: 88
DLL Version : 2.0.0.79
LabTool Version: 2.0.0.79
FW Version: 14.1.36.21 Mfg Version: 2.0.0.31
SOC:      0001    10
BBP:      9F     00
RF:       48     10
OR Version: 1.6      Customer ID: 0
Enter option:
```



THANK YOU!

Inspired by wireless

Inspired by wireless

Inspired by wireless

Inspired by wireless

Inspired by wireless

Inspired by wireless

Inspired by wireless

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device is intended only for OEM integrators under the following conditions:

- 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as 2 conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed

IMPORTANT NOTE: In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the FCC authorization is no longer considered valid and the FCC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate FCC authorization.

End Product Labeling

This transmitter module is authorized only for use in device where the antenna may be installed such that 20 cm may be maintained between the antenna and users. The final end product must be labeled in a visible area with the following: “Contains FCC ID: **TLZ-CU288**”. The grantee's FCC ID can be used only when all FCC compliance requirements are met.

Manual Information To the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user’s manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

Industry Canada statement:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Ce dispositif est conforme à la norme CNR-210 d'Industrie Canada applicable aux appareils radio exempts de licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage préjudiciable, et (2) ce dispositif doit accepter tout brouillage reçu, y compris un brouillage susceptible de provoquer un fonctionnement indésirable.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

This device is intended only for OEM integrators under the following conditions: (For module device use)

- 1) The antenna must be installed such that 20 cm is maintained between the antenna and users, and
- 2) The transmitter module may not be co-located with any other transmitter or antenna.

As long as **2** conditions above are met, further transmitter test will not be required. However, the OEM integrator is still responsible for testing their end-product for any additional compliance requirements required with this module installed.

Cet appareil est conçu uniquement pour les intégrateurs OEM dans les conditions suivantes: (Pour utilisation de dispositif module)

- 1) L'antenne doit être installée de telle sorte qu'une distance de 20 cm est respectée entre l'antenne et les utilisateurs, et
- 2) Le module émetteur peut ne pas être coïmplanté avec un autre émetteur ou antenne.

Tant que les **2** conditions ci-dessus sont remplies, des essais supplémentaires sur l'émetteur ne seront pas nécessaires. Toutefois, l'intégrateur OEM est toujours responsable des essais sur son produit final pour toutes exigences de conformité supplémentaires requis pour ce module installé.

IMPORTANT NOTE:

In the event that these conditions can not be met (for example certain laptop configurations or co-location with another transmitter), then the Canada authorization is no longer considered valid and the IC ID can not be used on the final product. In these circumstances, the OEM integrator will be responsible for re-evaluating the end product (including the transmitter) and obtaining a separate Canada authorization.

NOTE IMPORTANTE:

Dans le cas où ces conditions ne peuvent être satisfaites (par exemple pour certaines configurations d'ordinateur portable ou de certaines co-localisation avec un autre émetteur), l'autorisation du Canada n'est plus considéré comme valide et l'ID IC ne peut pas être utilisé sur le produit final. Dans ces circonstances, l'intégrateur OEM sera chargé de réévaluer le produit final (y compris l'émetteur) et l'obtention d'une autorisation distincte au Canada.

End Product Labeling

This transmitter module is authorized only for use in device where the antenna may be

installed such that 20 cm may be maintained between the antenna and users. The final end product must be labeled in a visible area with the following: “Contains IC: 6100A-CU288”.

Plaque signalétique du produit final

Ce module émetteur est autorisé uniquement pour une utilisation dans un dispositif où l'antenne peut être installée de telle sorte qu'une distance de 20cm peut être maintenue entre l'antenne et les utilisateurs. Le produit final doit être étiqueté dans un endroit visible avec l'inscription suivante: "Contient des IC: 6100A-CU288".

Manual Information To the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module.

The end user manual shall include all required regulatory information/warning as show in this manual.

Manuel d'information à l'utilisateur final

L'intégrateur OEM doit être conscient de ne pas fournir des informations à l'utilisateur final quant à la façon d'installer ou de supprimer ce module RF dans le manuel de l'utilisateur du produit final qui intègre ce module.

Le manuel de l'utilisateur final doit inclure toutes les informations réglementaires requises et avertissements comme indiqué dans ce manuel.

低功率電波輻射性電機管理辦法

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。


第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前項合法通信，指依電信法規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

模組認證：

1. 本模組於取得認證後將依規定於模組本體標示審驗合格標籤。

2. 系統廠商應於平台上標示「本產品內含射頻模組：

XXXyyyLPDzzzz-x」字樣。