

SIEMENS

Gigaset SX682 WiMAX

User Guide – User



This device works in a frequency band for which no general licence has been obtained from your National Authority for Frequency Management. Please contact your service provider or your National Authority for Frequency Management about licensing before putting this device into service.

Contents

| | |
|---|-----------|
| For your safety | 5 |
| Safety precautions | 5 |
| Cleaning and care | 5 |
| Trademarks | 5 |
| Information on Specific Absorption Rate (SAR) | 6 |
| Information about the optional outdoor antenna | 6 |
| Gigaset SX682 WiMAX | 9 |
| What is WiMAX? | 9 |
| Gigaset SX682 WiMAX | 9 |
| Product features | 10 |
| Product overview | 10 |
| Connectors and LEDs | 10 |
| Installing the Gigaset SX682 WiMAX | 13 |
| Choosing your location | 13 |
| System requirements | 15 |
| Connecting the Gigaset SX682 WiMAX | 16 |
| Connecting the Siemens outdoor antenna | 16 |
| Connecting the PC | 16 |
| Connecting a telephone, fax machine or answer machine | 17 |
| Switching on the devices | 18 |
| Restarting and resetting the Gigaset SX682 WiMAX | 19 |
| Rebooting the Gigaset SX682 WiMAX | 19 |
| Returning the Gigaset SX682 WiMAX to factory settings | 19 |
| Configuration with the Web browser | 20 |
| Launching the user interface | 20 |
| User interface | 21 |
| UI elements | 22 |
| User interface | 24 |
| Setting the language | 24 |
| Opening online Help | 24 |
| Menu structure | 24 |
| The Home page | 25 |
| Connection wizard | 26 |
| Establishing a radio connection with a WiMAX network | 26 |
| Precisely aligning the antenna | 29 |
| Administration | 30 |
| System password | 30 |

- Status 32**
 - Internet 34
 - Local network LAN 35
 - Telephony 35
 - Device status 36
 - Radio status 37
- Preparing to use Gigaset SX682 WiMAX 38**
 - Making a phone call or faxing with the Gigaset SX682 WiMAX 38
 - Making calls via VoIP 39
 - Receiving VoIP phone calls 39
- Appendix 40**
 - Troubleshooting 40
 - Other faults and problems 41
 - Before contacting customer service or your provider 42
 - Checking the connection to the Gigaset SX682 WiMAX 43
 - Configuring the Web browser 44
 - Setting up an HTTP proxy 44
 - Allowing JavaScript and Java 45
 - Allowing pop-up windows 46
 - Adjusting the network settings on the PC 47
 - DHCP 47
 - Windows Vista: activating DHCP 48
 - Setting up the TCP/IP network protocol with DHCP 48
 - Windows XP Home: activating DHCP 51
 - Setting up the TCP/IP network protocol with DHCP 51
 - Windows 2000: activating DHCP 54
 - Setting up the TCP/IP network protocol with DHCP 54
 - Specifications 56
 - Specifications for Siemens outdoor antenna (optional) 57
 - Putting into service 57
 - CE declaration 57
- Gigaset SX682 WiMAX – Free software 58**
 - WPA supplicant 59
 - gSOAP 59
- Glossary 60**
- Index 68**

For your safety

→ Please read the safety instructions carefully before putting into service.

Safety precautions

General safety instructions

- ◆ If you give the Gigaset SX682 WiMAX to someone else, make sure you also give them its documentation.
- ◆ The Gigaset SX682 WiMAX must only be used as described in these installation instructions.

Safety instructions for connection

- ◆ Only use the mains adapter supplied, as indicated on the underside of the Gigaset SX682 WiMAX.

Safety precautions for the Gigaset SX682 WiMAX

- ◆ The operation of medical appliances may be affected. Be aware of the technical conditions in your particular environment, e.g. doctor's surgery.
- ◆ The Gigaset SX682 WiMAX and the antenna can interfere with the functioning of medical devices such as pacemakers. Keep at least 20 cm between the devices and the pacemaker. For more information, consult your doctor.
- ◆ The device may cause an unpleasant humming noise in hearing aids.
- ◆ Do not use the devices in environments with a potential explosion hazard, e.g. car paint shops, or in a humid environment (bathroom etc.).
- ◆ The Ethernet function (LAN socket, **LAN**) and the FXS function (analogue phone port, **Phone**) are designed exclusively for connection **inside** a building.

Cleaning and care

Wipe the Gigaset SX682 WiMAX with a **damp** cloth (do not use solvent) or an antistatic cloth.

Never use a dry cloth. This can cause static.

Trademarks

- ◆ Microsoft Windows 2000, Windows XP, Windows Vista and Internet Explorer are registered trademarks of the Microsoft Corporation.
- ◆ Mozilla Firefox is a registered trademark of the Mozilla Organization.


Information on Specific Absorption Rate (SAR)

This device meets the limits for protecting the health of the public from the effects of exposure to electromagnetic fields when it is operated in connection with the designated antenna(s) like described in the user manual.

Your device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to emission from electromagnetic fields recommended by international guidelines from the International Commission on Non-Ionizing Radiation Protection (ICNIRP). These limits are part of comprehensive guidelines for the protection of the public and establish permitted levels of exposure to electromagnetic radiation for the population. The guidelines were confirmed by independent scientific organisations through periodic and thorough evaluation of scientific studies. The limits include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure limit employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit stated in the international guidelines is 2.0 W/kg. Tests for SAR are conducted in all frequency bands with the device transmitting at its highest power level with minimum possible distance to the body. The actual SAR level of the device during operation with the designated antenna(s) is below the maximum value and is additionally decreased by a distance to the device. This is because the device is designed to operate at multiple power levels so as to use only the power required to enable seamless network connection.

Information about the optional outdoor antenna

| | |
|---|---|
|  | <p>Only one of the antennas listed on page 13 must be used.</p> <p>The outdoor antenna must be installed and put into service by a qualified electrician.</p> <p>➔ Only commence the outdoor work once you have taken all the necessary steps to make the location safe.</p> <p>Be sure to observe the safety instructions.</p> |
|---|---|

Wall duct:

To connect the Gigaset SX682 WiMAX to the outdoor antenna, the antenna cable must be fed through the wall to the outside of the building. It must be possible to make a suitable wall or window duct at or near the location of the Gigaset SX682 WiMAX.

Setting up the antenna mast:

There should not be any obstructions (walls, trees etc.) in front of the antenna.

Information about the optional outdoor antenna

The best results will be obtained if the Siemens outdoor antenna is in sight of the WiMAX base station (cf. Fig. 1).

If a line of sight is not possible, you can reflect the radio waves off neighbouring buildings. To do this, direct the antenna at the building it is to reflect off and not at the base station (cf. Fig. 2).


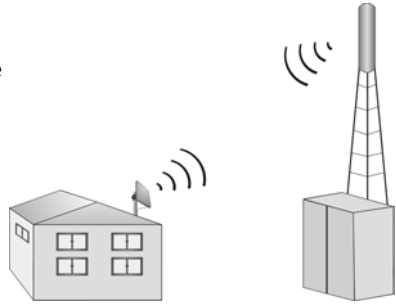


Fig. 1

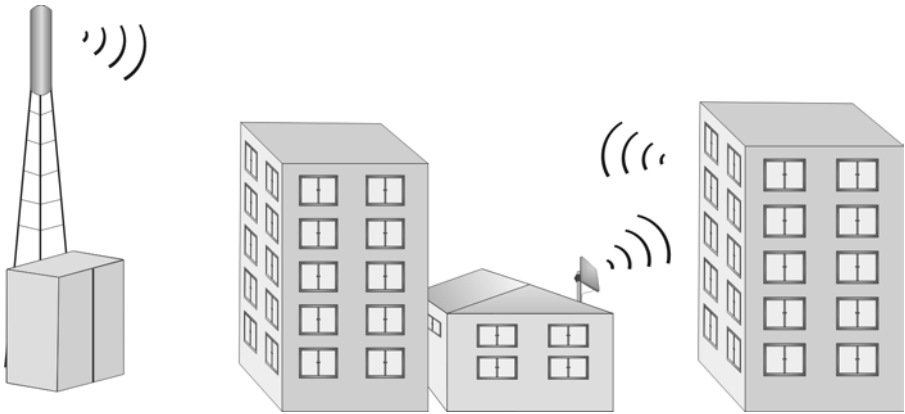

The antenna mast must be structurally secure. Check how secure the various attachments are.

The antenna mast must be within reach of the cable. Ideally, the antenna cable should be protected outside (from frost, sun, unauthorised and mechanical influences etc.).

In particular, make sure the antenna mast has sufficient load capacity. If you are mounting the mast on the roof, make sure the roof is fully sealed again afterwards.

Lightning protection

The antenna mast should be positioned near a lightning conductor. A suitable lightning conductor must be installed where necessary.

The Siemens outdoor antenna is not designed to be struck directly by lightning and must be protected accordingly. The antenna must therefore be mounted in areas that are protected against lightning (Lightning Protection Zone 0B). The corresponding separation distance (IEC 62305) must be complied with.

Earthing and lightning protection work may only be carried out by electricians specifically qualified for such work.

Information about the optional outdoor antenna

The appropriate earthing clamps must be used to create an equipotential bonding between a cable shield and an equipotential bonding bar that complies with regulations.

Please observe the standard DIN VDE 0855-300 and find out more on the Internet at http://www.dehn.de/www_DE/PAGES_D/service/down/blitzplaner.html (German)

Or

<http://www.dehn-usa.com/dehn-Application-Guides-pubcid1.html> (English)

Antenna cable and antenna connection:

It must be possible to connect the outdoor antenna to the Gigaset SX682 WiMAX by means of an antenna cable.

Please note that the antenna connection must be protected from the impact of rain and other weather effects.

Use cable clamps to attach the cable to the mast. Please note that the cable must be long enough to turn the antenna at a later stage.

Antenna alignment:

When aligning the antenna, we recommend asking a second person to run the connection wizard on the PC and to check the reception quality on the screen; see Chapter "Connection wizard" on page 26.

| | |
|----------|---|
| <i>i</i> | <p>Aligning the antenna using acoustic signals</p> <p>If neither you nor the assistant are able to check the signal strength on screen while the antenna is being aligned, you can monitor it via a radio system. To do this you will need, for example, two cordless phones, mobile phones or radio devices:</p> <ul style="list-style-type: none">➔ Activate Tone on on the configuration PC.➔ Establish an internal connection between the two handsets and switch on the loudspeaker on both devices.➔ Leave one handset next to the configuration PC and carry the other with you (belt clip). <p>You will now be informed of the signal strength by means of beeps. The closer together the sequence of beeps, the better the connection quality.</p> |
|----------|---|

After installation:

Tighten all screw connections to the torques listed in the installation instructions.

Secure the antenna cable with cable clamps and cable ties. The cable must be protected from exposure to pressure and tension.

Gigaset SX682 WiMAX

What is WiMAX?

WiMAX stands for "Worldwide Interoperability for Microwave **A**ccess", a modern wireless network technology that enables fast Internet connection even in remote areas. With WiMAX technology you are no longer dependent on a DSL infrastructure in your home or place of work. Instead, you connect your PC or network wirelessly to radio stations operated in your region by your provider. As a result, WiMAX gives you fast, economical broadband Internet access, even in places that are not connected to the DSL cable network.

The WiMAX standard IEEE 802.16 generally defines WiMAX technology. Your Gigaset SX682 WiMAX already meets the latest IEEE 802.16e-2005 standard, a mobile WiMAX standard that offers many extra possibilities.

Gigaset SX682 WiMAX

With your Gigaset SX682 WiMAX, you can make use of everything the Internet has to offer:

◆ Downloads

- Even large files download quickly to your PC.
- Complex Website designs are no longer characterised by the time they take to download – you can enjoy flash animation and high-resolution graphics immediately after clicking on a link.

◆ Audio

- Play back audio files straight from the Internet.
- Listen to the radio via the Internet in superb digital quality.

◆ Video

- View short or longer films you find on the Internet without tedious waiting times.
- Watch television via the Internet (IPTV).
- Use "Video on Demand" and order films that are transmitted to you via the Internet.

◆ Real time

- Take part in video conferences and feel as if you are sitting in the same room as the people you are talking to.
- Speak to and see your chat partners.

◆ VoIP

- Benefit from the economical telephone rates for Internet telephony (Voice over IP, VoIP). Your PC does not even need to be switched on.


Product features

- ◆ Wireless high-speed Internet access with a transmission rate of up to 20 Mbps (14 Mbps downlink, 6 Mbps uplink)
- ◆ Standard compatibility: IEEE 802.16e-2005
- ◆ Compatible with all current operating systems
- ◆ Suitable for home and business facilities
- ◆ Multi-protocol support: TCP/IP, SMTP, HTTP and other Internet related protocols
- ◆ Easy to set up without installing software
- ◆ Internet and VoIP connection without the hassle of entering access data
- ◆ DHCP server and routing functions
- ◆ High performance and quality of service
- ◆ Optional: Siemens outdoor antenna for improved connection quality

Product overview


Connectors and LEDs

Connectors

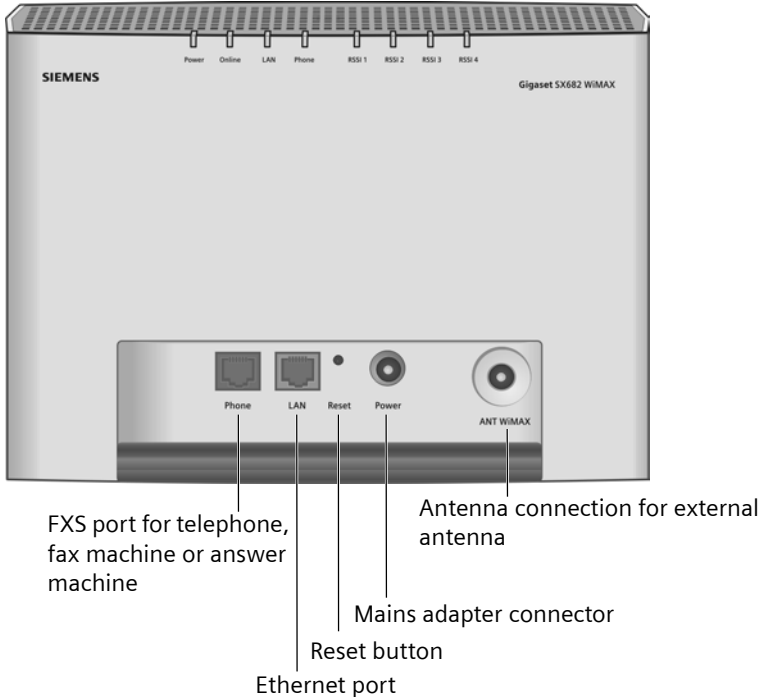

- ◆ For information about the optional Siemens outdoor antenna, please refer to "Connecting the Siemens outdoor antenna" on page 16.
- ◆ For information on connecting the mains adapter, please refer to "Switching on the devices" on page 18.
- ◆ For information on the reset button, please refer to "Restarting and resetting the Gigaset SX682 WiMAX" on page 19.
- ◆ For information on the Ethernet port, please refer to "Connecting the PC" on page 16.

LEDs

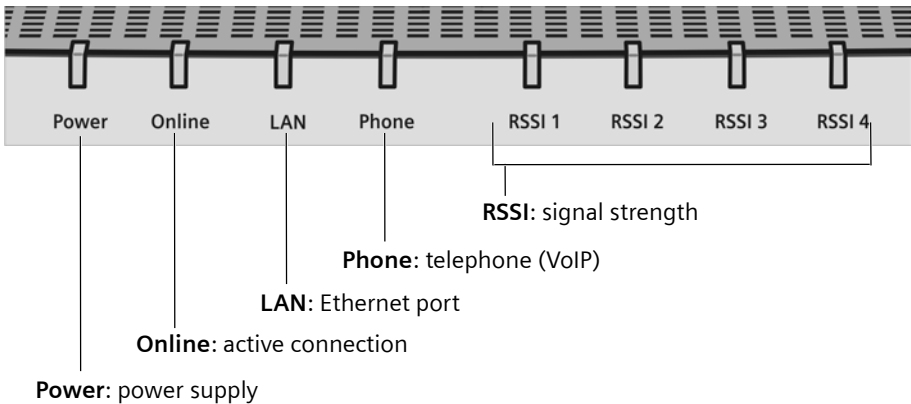

The LEDs indicate the status of the Gigaset SX682 WiMAX and the current signal strength.

| Name | LED | Meaning |
|----------------------------------|-------------------|--|
| Power: power supply | Lights up green | The Gigaset SX682 WiMAX is powered correctly. |
| | Does not light up | The Gigaset SX682 WiMAX is not powered correctly or the power supply has failed. |
| Online: active connection | Lights up green | The Gigaset SX682 WiMAX is registered with a WiMAX network and ready for use. |
| | Does not light up | The Gigaset SX682 WiMAX is not registered with a WiMAX network; it is not possible to establish an Internet connection. |
| | Flashes green | The Gigaset SX682 WiMAX is establishing a connection with a WiMAX network. |
| | Lights up red | The Gigaset SX682 WiMAX is not ready. Possible cause: device is overheating or faulty. |

Product overview

| Name | LED | Meaning |
|------------------------------|----------------------------|--|
| LAN: Ethernet port | Lights up green | Correct cable connection with a powered connection partner. |
| | Does not light up | No or incorrect cable connection. |
| | Flashes green | Data transfer via the Ethernet port. |
| Phone: telephone | Lights up green | The phone connection is active and registered with a VoIP provider. You can make calls via the Internet. |
| | Does not light up | The telephone connection is not active or not registered with a VoIP provider. You cannot make calls via the Internet. |
| | Flashes green | The connected telephone is active: it is being used to make a call or there is an incoming call. |
| RSSI: signal strength | 0 to 4 LEDs light up green | The LEDs on the Gigaset SX682 WiMAX help you to position the antenna more easily. The LEDs indicate the signal strength; the more LEDs that light up, the better the signal reception. |
| | All 4 LEDs flash green | The Gigaset SX682 WiMAX is being reset to the factory settings; see "Returning the Gigaset SX682 WiMAX to factory settings" on page 19. |

Installing the Gigaset SX682 WiMAX

If you use the separate outdoor antenna (optional, not included in the scope of delivery):

The Gigaset SX682 WiMAX can only be used with the device's integrated antenna or with one of the following outdoor antennas.

| | | | | | |
|---------|--------|-------|-----------------|----------------|----------------|
| 3,5 GHz | 18 dBi | WiMAX | Antenna Outdoor | C39453-Z5-C504 | A5B00076092365 |
| 3,5 GHz | 9 dBi | WiMAX | Antenna Outdoor | C39453-Z5-C505 | A5B00076093200 |
| 2,6 GHz | 9 dBi | WiMAX | Antenna Outdoor | C39453-Z5-C506 | A5B00076093231 |
| 2,6 GHz | 15 dBi | WiMAX | Antenna Outdoor | C39453-Z5-C507 | A5B00076093596 |



3.5 GHz versions should be used for the European Economic Area.

The following requirements apply:

All the external antennas used for this product must undergo a conformity assessment procedure.

The 3.5 GHz antennas listed here meet the European requirements and guarantee the functionality of the complete system.

During the conformity assessment procedure it was ensured that the SAR limits set down in directive 99/519/EC are observed. Verification was performed using EN 50385.

The Siemens outdoor antenna must be installed and put into service by a qualified electrician.

The notes in the enclosed installation instructions must be followed

This user guide assumes that installation of the outdoor antenna has been completed.

Choosing your location


- ◆ Choose a location that enables you to simply set up the following connections without any further work.
 - Connect the Ethernet cable for connection to a PC or network.
 - Connect the power lead to the mains socket.
- ◆ Stand the Gigaset SX682 WiMAX upright on an even, non-slip surface.
- ◆ Lay the cables in such a way that nobody can tread on or trip over them.
- ◆ Position the Gigaset SX682 WiMAX so that you can see the LEDs.
- ◆ Do not cover the openings in the Gigaset SX682 WiMAX housing to ensure the heat can circulate; otherwise, the duty cycle of the device will be reduced or the Gigaset SX682 WiMAX switched off to avoid overheating.
- ◆ Do not operate the Gigaset SX682 WiMAX under the influence of direct heat sources (e.g. directly in the sun).

Choosing your location


If you use the antenna integrated into the Gigaset SX682 WiMAX:

- ◆ Position the Gigaset SX682 WiMAX directly in a window, so that the side with the LEDs and connectors is pointing into the room, towards you. Wherever possible, position the Gigaset SX682 WiMAX on one of the upper storeys. Note that obstructions, particularly doors and wall coverings containing metal can affect data transmission.
- ◆ Position the Gigaset SX682 WiMAX as far away as possible from metallic objects and coated foils.

Gigaset SX682 WiMAX with integrated antenna

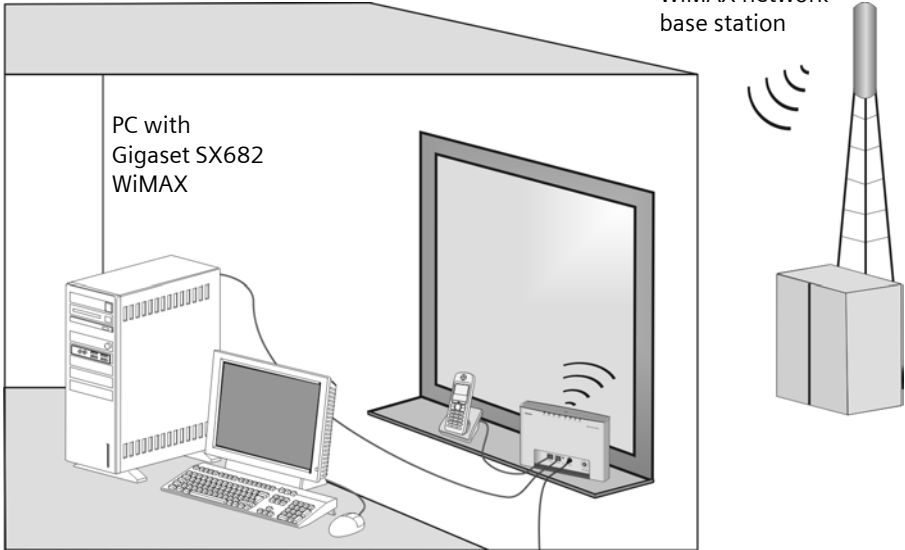

Gigaset SX682 WiMAX with Siemens outdoor antenna

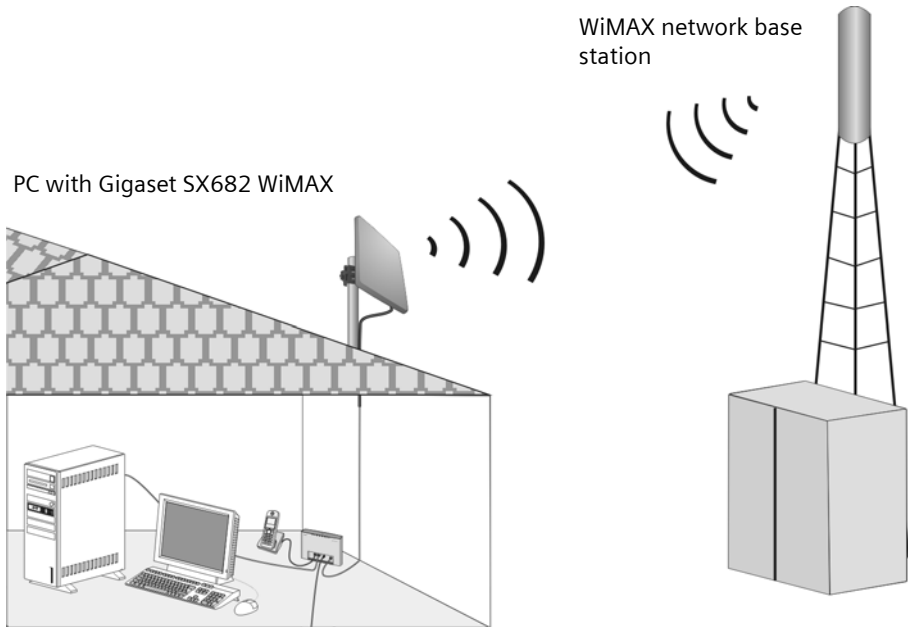*i*

When used with the antenna integrated into the device or the Siemens outdoor antenna, the Gigaset SX682 WiMAX complies with the regulations on limiting the effect of electromagnetic fields on the general population.

System requirements

To use the Gigaset SX682 WiMAX, the following requirements have to be fulfilled.


- ◆ You will need a PC that meets the following requirements:
 - PC with a free LAN interface 10/100BaseT (network adapter). The network adapter on the configuration PC must support one of the following modes: 10BaseT Full Duplex, 100BaseT Half Duplex, 100BaseT Full Duplex. The TCP/IP protocol has to be set up on the PC (standard installation for Windows XP and Windows Vista; if you are using a different Windows operating system, read the separate instructions on network configuration, if necessary).
 - A Web browser is installed on the configuration PC (e.g. Internet Explorer or Mozilla Firefox).
- ◆ To access the Internet you will need to register your Gigaset SX682 WiMAX with a WiMAX Internet provider. To use Internet telephony, your provider will need to register a VoIP account for your Gigaset SX682 WiMAX.

Connecting the Gigaset SX682 WiMAX

Connect the Gigaset SX682 WiMAX in the following order:

1. If you use the Siemens outdoor antenna, have it installed by a radio and television technician. Connect the antenna cable from outside to the Gigaset SX682 WiMAX.
2. Connect the PC to the Gigaset SX682 WiMAX.
3. Connect an analogue terminal (telephone, fax machine, answer machine).
4. Connect the Gigaset SX682 WiMAX to the mains power supply and switch all the devices on.

Connecting the Siemens outdoor antenna

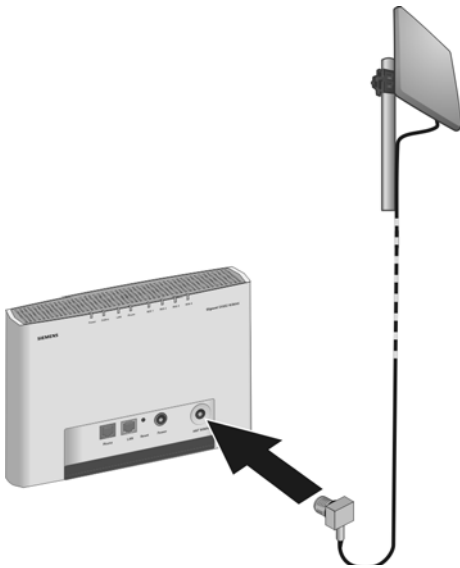

- Plug the connector of the antenna cable into the **ANT WiMAX** connector on your Gigaset SX682 WiMAX. To remove the antenna cable plug, push the slider on the plug away from the antenna socket and pull the plug out.


Connecting the PC



Use either the Ethernet cable that is supplied or a standard network cable (CAT-5) to connect the device to the PC. It is not important whether the Ethernet cable has straight or crossed wiring.

Always use a shielded Ethernet cable.

Connecting Gigaset SX682 WiMAX to the PC

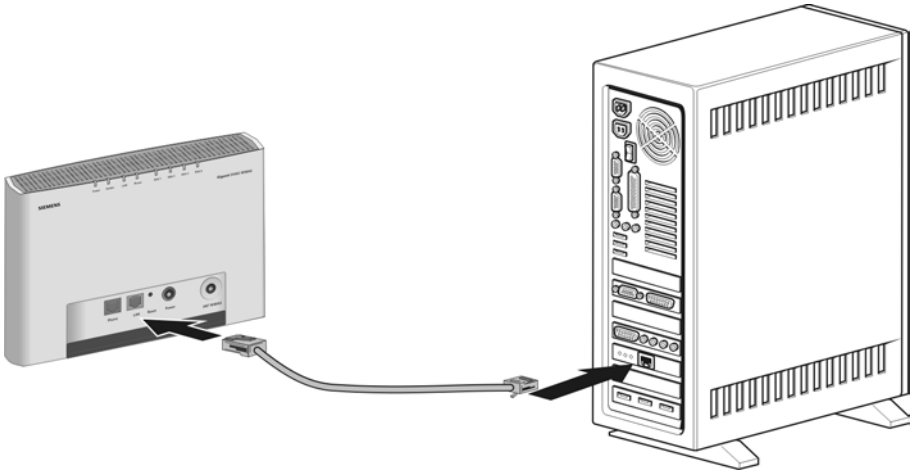

- ➔ Connect one Ethernet cable plug to the Ethernet port on the Gigaset SX682 WiMAX.
- ➔ Connect the other plug of the Ethernet cable to the LAN interface on the PC.

Optional: connecting several terminals

If you wish to connect several terminals (for example a PC and a laptop) and establish an Internet connection with all the devices, connect a switch or hub to your Gigaset SX682 WiMAX.

i

A DHCP server is integrated into your Gigaset SX682 WiMAX. Please ensure that a second DHCP server is not activated on your server. For details on this, read the operating instructions for your switch/hub.

Connecting a telephone, fax machine or answer machine

You can connect an analogue terminal, such as a telephone with cord, cordless telephone, fax machine or answer machine, and operate them via the Internet in future (Internet telephony/VoIP).

i

Depending on the connection plug on your analogue terminal, you may require an additional adapter (TAE socket on the RJ11 plug).

Connecting the Gigaset SX682 WiMAX



- Connect the plug on the analogue terminal to the **Phone** connection on the Gigaset SX682 WiMAX.

If your analogue terminal has a TAE plug, first connect this to the adapter (connect a telephone to the F-coded socket, a fax machine or answer machine to the N-coded socket). Then connect the adapter plug to the **Phone** connection on the Gigaset SX682 WiMAX.

- If necessary connect the telephone, fax machine or answer machine to the mains power supply.


Switching on the devices



Only use the Gigaset SX682 WiMAX with the mains adapter supplied.

- Connect the mains adapter plug to the Gigaset SX682 WiMAX socket.
- Power up the PC.
- Connect the mains adapter to the mains power supply.
The system starts up and performs a self-test. After the self-test, the Gigaset SX682 WiMAX continually attempts to register with a WiMAX network. Registration may be successful immediately. If not, registration will take place when the Gigaset SX682 WiMAX is being configured.
- Check the LEDs during startup:
- LEDs during startup:**
- The **Power** power supply LED lights up **green**, and the Gigaset SX682 WiMAX starts a self-test. If the LED does not light up, check that the mains adapter is connected correctly and the power socket is live.
 - The **LAN** Ethernet LED is continuously lit **green**. If the LED does not light up, check that the Ethernet cable is connected correctly.
 - If registration with a WiMAX network has already been successful, the **Online** LED lights up **green**. If the LED does not light up, register your Gigaset SX682 WiMAX during configuration.

Restarting and resetting the Gigaset SX682 WiMAX

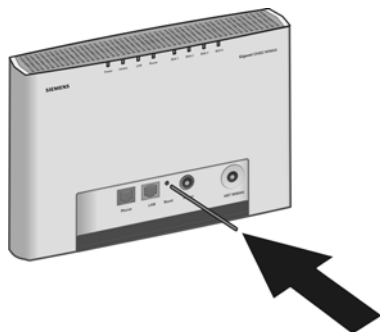

The reset button is located inside the Gigaset SX682 WiMAX so that it cannot be pressed accidentally. If you need to restart or reset the Gigaset SX682 WiMAX, use a thin object such as an opened up paper clip.

Rebooting the Gigaset SX682 WiMAX

➔ Briefly press the reset button (for less than 5 seconds). The configuration settings will remain, the Gigaset SX682 WiMAX will be restarted.

You can also restart the Gigaset SX682 WiMAX by briefly cutting the power supply.

Returning the Gigaset SX682 WiMAX to factory settings

If you no longer have access to your Gigaset SX682 WiMAX, you can also restore factory settings with the reset button on the back of the device.



When the factory settings are restored, all personal settings are deleted.

➔ Press and hold the reset button for more than 5 seconds.

The 4 **RSSI** LEDs will begin to flash green. The configuration settings are returned to the factory settings and the Gigaset SX682 WiMAX is restarted. This process takes about 25 seconds. The Gigaset SX682 WiMAX will then automatically try to set up a connection to a WiMAX network; depending on the connection quality, 0 to 4 **RSSI** LEDs will permanently light up green.

Factory settings

After restoring the factory settings, your Gigaset SX682 WiMAX will be in its original condition:

Menu

Connection Wizard

Administration

Setting

Installation must be carried out again; see "Connection wizard" on page 26.

No system password is set.

Configuration with the Web browser

You do not need to install any software on your PC to configure your Gigaset SX682 WiMAX; the configuration software is stored on the device. Open this software in the same way as an Internet page in the Web browser and make the required settings. Your settings are then stored directly on the device.

The connection wizard will help you to get started and establish a connection with the WiMAX network; you will not need to enter connection data to do this. You do not need any information from your provider.

| | |
|-----------------|---|
| <i>i</i> | <p>For experienced users:</p> <ul style="list-style-type: none">– IP address: 192.168.2.1– Subnet mask: 255.255.255.0 |
|-----------------|---|

Presentation of the configuration software

To configure your Gigaset SX682 WiMAX, we recommend the Microsoft Internet Explorer Version 7.0 or Mozilla Firefox Version 2.0 Web browser. However, you can also use most other or older Web browsers.

Launching the user interface

- ➔ Open your Web browser.
- ➔ Enter the IP address of your Gigaset SX682 WiMAX in the address field of your Web browser:
`http://192.168.2.1`
- ➔ Press Enter (Return).
Your Gigaset SX682 WiMAX does not have a default system password; for this reason, a security message appears first. You can set up your own system password later; then once you have entered the IP address for your Gigaset SX682 WiMAX the English registration page will open for you to enter your system password.
- ➔ Click *Ok*.

If the registration page does not open:

- ➔ Check the connections; see "Connecting the Gigaset SX682 WiMAX" on page 16.
- ➔ If you use a firewall on the PC, it must allow connection to the Gigaset SX682 WiMAX. If applicable, switch off the firewall for a test; if you can then open the registration page, configure the firewall accordingly. For details, refer to the user guide for your firewall.

If you have changed the standard settings on your PC, you might not be able to open the configuration pages.


- ➔ For details on how to find and rectify the fault, see "Fault tracing" on page 40.

Saving the user interface address

- ➔ You can add the address of the registration page to your favourites/bookmarks so that you will no longer need to enter the IP address manually in future:
 - Internet Explorer: **Add to Favorites** button
 - Firefox: **Bookmarks > Add Bookmark**

User interface

The user interface you open with the Web browser is divided into the following sections:

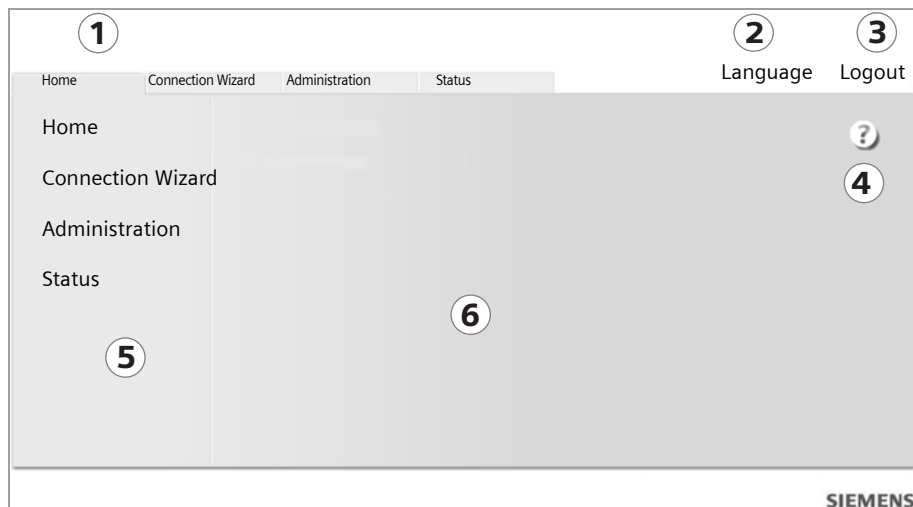

UI elements

- ① **Tab selection:**
Open the *Home*, *Connection Wizard*, *Administration* or *Status* tabs to display the contents of each configuration area.
- ② **Language button:**
Select your language.
- ③ **Logout button:**
The button is only displayed if a system password is set up.
Log off from your Gigaset SX682 WiMAX.
- ④ **Open Help window button:**
Open the online Help relating to the menu item currently in the working area.
- ⑤ **Menu area:**
Click on the menu items to display the relevant pages of the configuration area that is currently open.
- ⑥ **Working area:**
Check the settings on your Gigaset SX682 WiMAX and change them as necessary.

Buttons



Open online Help.

Click on this button if you require information about the screen you currently have open. The corresponding Help topic is opened.

Home

Button with which you return to the user interface overview.

Logout

Button with which you end the connection between the PC and the Gigaset SX682 WiMAX.

Back

Return to the previous screen in the connection wizard.

Next

Move on to the next screen in the connection wizard.

Cancel

Changed settings are not applied and you return to the next highest level.

Ok

Save the settings and return to the next highest level.

End

Save the settings and exit the connection wizard.

You will see other buttons depending on the screen currently open. If you require further information about these, open the online Help at the appropriate place using the question mark button.

Input fields

On the configuration screens, change the required settings using the following input fields:



Option fields:

Two or more fields, of which one is activated. As soon as you click in another option field, it is activated and the one previously selected is reset. You will find option buttons wherever there is a choice between several possibilities, e.g. whether or not you wish to use an external antenna.



Text field:

Enter text or digits. Click in the field to activate input mode. You will find text fields at points where you can specify text or numbers as required, e.g. frequencies.

User interface

Setting the language

The user interface is initially displayed in English. However, you can select another language, e.g. German, French, Spanish.

- ➔ If you wish to set your language, click on the **Language** button at the top right. This opens the page for setting the language.
- ➔ Click on the arrow next to the selection field to open it and select your language.
- ➔ Click on **Ok** to change the language.

Opening online Help

There is an online Help for each screen of the configuration software, which you can open directly on the screen.

- ➔ Click on the question mark button at the top right.
The online Help is shown in the right pane of the configuration software.
- ➔ If necessary, click on **Open Help window** to open the online Help in a separate window.

Menu structure

The menu of the user interface on your Gigaset SX682 WiMAX is split into the following main areas: **Home**, **Connection Wizard**, **Administration** and **Status**. Under these menu options, you will find the following areas:

| | | |
|--------------------------|---|-------------------------------------|
| Home | Brief description of all the menus in your Gigaset SX682 WiMAX, as well as the connection status and the language change feature; see "User interface" on page 24. | |
| Connection Wizard | Establish a connection to the WiMAX network and optimise the antenna alignment; see "Connection wizard" on page 26. | |
| Administration | Enter a system password for access to your Gigaset SX682 WiMAX or change the system password; see "Administration" on page 30. | |
| Status | Obtain information about the operating status of your Gigaset SX682 WiMAX and read off the device and version numbers as well as IP addresses; see "Status" on page 32. | |
| | Internet | See "Internet" on page 34. |
| | Local Network | See "Local network LAN" on page 35. |
| | Telephony | See "Telephony" on page 35. |
| | Device Status | See "Device status" on page 36. |
| | Radio Status | See "Radio status" on page 37. |

The Home page

Once you have logged in successfully to the Gigaset SX682 WiMAX, you will see the **Home** page for the device software. The start screen offers an overview of all areas of the configuration software:

| Menu | Description |
|--------------------------|--|
| Connection Wizard | Establish the radio connection with the WiMAX network. |
| Administration | Set up or change a system password. |
| Status | Obtain information about the status of your Gigaset SX682 WiMAX. |

In the area to the right of the start screen, you will see the connection status of your Gigaset SX682 WiMAX:

- ◆ **connected** = The Gigaset SX682 WiMAX has established a radio connection with a WiMAX network. You will see the connection duration in brackets and in the format ddd:hh:mm:ss (d=days, h=hours, m=minutes, s=seconds).
- ◆ **disconnected** = The Gigaset SX682 WiMAX is trying to establish a connection with a WiMAX network.

To configure your Gigaset SX682 WiMAX, use the connection wizard, which will help you establish a radio connection.

Connection wizard

The connection wizard comprises the following steps:

- ◆ Selecting the antenna
- ◆ Scanning the frequencies in order to establish a radio connection with a WiMAX network
- ◆ Exact alignment of the antenna in order to optimise the quality of the connection

Establishing a radio connection with a WiMAX network

First scan the frequencies with the connection wizard. This establishes an initial radio connection with a WiMAX network.

- ➔ Click on the **Connection Wizard** tab.
The connection wizard will be opened.
- ➔ Click **Next**.
- ➔ Choose whether you wish to operate your Gigaset SX682 WiMAX with an external antenna.
 - Click in the upper option field if you are using the antenna integrated in the Gigaset SX682 WiMAX. Your Gigaset SX682 WiMAX is already standing by the window with the cable connections turned inwards and is connected.
 - Click in the lower option field if you received the Siemens outdoor antenna together with your Gigaset SX682 WiMAX. The outdoor antenna must already have been installed and connected by a qualified electrician.
- ➔ Click **Next**.
- ➔ If you are using the antenna integrated in the Gigaset SX682 WiMAX, align it towards the window. If you are using the outdoor antenna, align the antenna later. Click **Next**.

The frequency scan begins automatically. A progress bar indicates how far the scan has progressed. In addition, you will see in the **Remaining time** area roughly how much time is still needed for the complete scan. Depending on how your Gigaset SX682 WiMAX has been preconfigured by your provider, the scan can last several minutes before the first radio connection is established.

i

During the scan, the Gigaset SX682 WiMAX or antenna must not be moved; this is the only way to guarantee a complete scan with the current antenna alignment.

As soon as a radio connection has been established with a WiMAX network, the scan will end. The progress bar is fully filled in and the display in the **Remaining time** area jumps to **0 seconds**.

- ➔ If the scan has been successful, read on in Chapter "Precisely aligning the antenna" on page 29.

If the scan has not been successful:

Both the integrated antenna and the Siemens outdoor antenna are directional antennae; this means that they must at least be pointing roughly in the direction of a WiMAX network base station in order to establish a radio connection.

If the scan was unsuccessful, align the antenna differently:

If you are using the antenna integrated in the Gigaset SX682 WiMAX:

➔ Turn your Gigaset SX682 WiMAX by approx. 60°.

Correct:



Incorrect:



➔ Click on **Ok** to restart the scan.


| | |
|----------|---|
| <i>i</i> | You must not move the Gigaset SX682 WiMAX during the scan. You should therefore always place the Gigaset SX682 WiMAX upright and on a level surface directly by the window. |
|----------|---|

If the scan has still not been successful with the alignment changed:

- ➔ Place the Gigaset SX682 WiMAX by a window that faces a different direction.
- ➔ If necessary, repeat the scan with all possible locations and alignments.
- ➔ If necessary, ask your provider for the location of the nearest WiMAX network base station and select a location for your Gigaset SX682 WiMAX that points towards this base station.

The best results will be obtained if the Gigaset SX682 WiMAX is in sight of a WiMAX network base station.

If a line of sight is not possible, you can reflect the radio waves off neighbouring buildings. To do this, direct the Gigaset SX682 WiMAX at the building it is reflecting off and not at the WiMAX network base station.

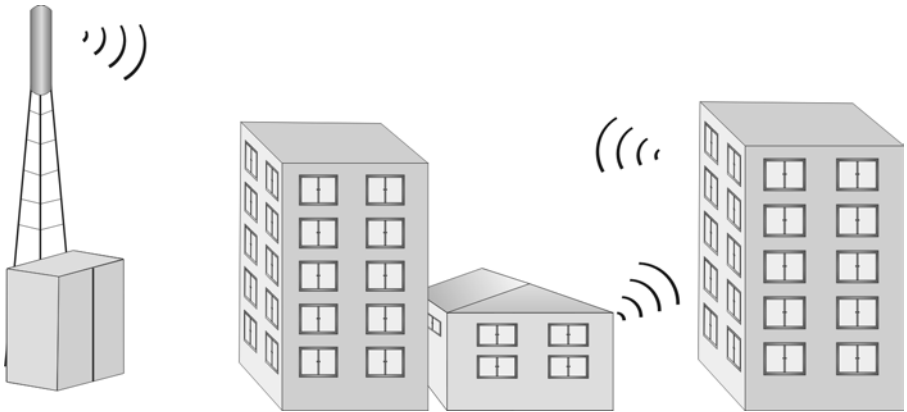

If you are using the Siemens outdoor antenna:

- ➔ The qualified electrician turns the antenna through 20° in the vertical axis. Then the scan is repeated by clicking on the **Ok** button.
- ➔ If necessary, the scan should be repeated with all possible antenna alignments.

Precisely aligning the antenna

Once you have established a wireless connection to a WiMAX network, align your Gigaset SX682 WiMAX or antenna precisely using the connection wizard.

i

Take extra care to align the Gigaset SX682 WiMAX or Siemens outdoor antenna precisely. The better the connection quality, the faster your Internet connection will be in the future.

To obtain precise alignment of the Gigaset SX682 WiMAX or antenna, turn it a little at a time. If you use the antenna integrated in the Gigaset SX682 WiMAX, you can also move the device a little at a time to optimise the reception quality.

➔ When a connection to a WiMAX network has been established, click on **Next** to make fine adjustments to the antenna.

The quality of the radio connection is represented graphically by a signal strength bar. The longer the bar is, the better the radio connection. Try to obtain the best possible radio connection setting.

- ➔ If you are using the antenna integrated in the Gigaset SX682 WiMAX: Memorise the current location and alignment of your Gigaset SX682 WiMAX, so that you can restore it if the connection is broken.
- ➔ If you are unable to check the display of the signal strength on the screen while aligning the antenna: Activate the **Audible feedback** option to obtain information about the signal strength by means of beeps. The closer together the sequence of beeps, the better the connection quality.
- ➔ Turn or move the Gigaset SX682 WiMAX or turn the antenna a little at a time and note the signal strength display. Use this to move the antenna to the position with the best signal strength.

In addition to the beeps and on-screen bar graph you can also determine the quality of the connection by how many of the 4 LEDs indicating signal strength are lit up on the device (**RSSI 1–RSSI 4**). The more LEDs that light up, the better the connection quality.

If you have turned your Gigaset SX682 WiMAX or the antenna too far, the connection might break. You should then return to the alignment that provided a connection and repeat the procedure for establishing a connection to the WiMAX network. Then make any fine adjustments step by step.

When your Gigaset SX682 WiMAX or Siemens outdoor antenna is optimally aligned:

- ➔ Click **End**.
- ➔ Make sure that in future your Gigaset SX682 WiMAX or Siemens outdoor antenna is always in the set position.

Administration

| | |
|----------|---|
| ! | The system password protects your Gigaset SX682 WiMAX and your local network from unauthorised access. For this reason, it is important to set up a password and change the default password. |
|----------|---|

System password

➔ Click on the **Administration** tab.

The system password is the password to configure your Gigaset SX682 WiMAX and is requested when you open the configuration pages. Your Gigaset SX682 WiMAX does not have a default system password. You assign your own password to protect the Gigaset SX682 WiMAX and your local network from unauthorised access.

| | |
|----------|---|
| i | <p>Features of a secure password</p> <p>A password should be difficult for unauthorised persons to determine. Note the following points when choosing a password:</p> <ul style="list-style-type: none">◆ The more characters a password has, the more secure it is.◆ Choose a series of characters that is as varied as possible (not AAAA, 0000) and alternate between letters and numbers.◆ Do not use any term that could be found in a dictionary.◆ Do not use sequential characters (not 123456, abcd) and no recognisable system (not 1a2b3c).◆ Never use a password several times for different applications.◆ Never save a password on the PC. Instead, make a note of it and store it in a secure place.◆ Change your passwords regularly. |
|----------|---|


➔ Enter the current password in the **Current password** field. No default system password has been set. In this case, you should leave the field empty.

- ➔ Enter a new password in the **New password** field.
- Select any series of characters with a minimum length of 4 and a maximum length of 20 characters. You can use the following characters: A–Z, a–z, 0–9 as well as the following special characters: ! " # \$ % & ' () * + , - . / : ; < = > ? @ [\] ^ _ ' { | } ~ .
 - Note down your new password on a sheet of paper and store it in secure place.

➔ Enter your new password in the **Confirm new password** field again. This entry is case-sensitive.

The new password can only be activated if both entries match. This detects typing errors when the password is entered.

- Finally, click on **Ok** to accept your change and to activate the new password. The new password is valid immediately for each instance the configuration is called up.

| | |
|---|--|
|  | <p>The configuration of the Gigaset SX682 WiMAX cannot be accessed if you do not enter a valid password. In this case, you must restore all of the factory settings of the Gigaset SX682 WiMAX. To find out how to do this, please read Chapter "Returning the Gigaset SX682 WiMAX to factory settings" on page 19.</p> |
|---|--|

Status

You can check the status of your Gigaset SX682 WiMAX with the pages in the **Status** menu. The menu is divided into several individual pages opened by clicking on the entries in the menu area. To help with orientation, in the following sections the path is placed first so that you can quickly find the status messages described.

For example, with the following address you can open the settings of your LAN:

Status > Local Network.

| | |
|-----------------|---|
| <i>i</i> | <p>If you have problems, before contacting your provider or customer service, check the status of your Gigaset SX682 WiMAX.</p> <p>When looking for the fault, your provider or customer service will need some details that you will find on the status pages.</p> |
|-----------------|---|

You will find the most important status information summarised on the homepage. For detailed information, click on an entry in the submenu.

Information on the Status homepage

- Connection status** The status of the radio connection with the WiMAX network is displayed as follows:
- ◆ **connected** = The Gigaset SX682 WiMAX has established a radio connection with a WiMAX network. You will see the connection duration in brackets and in the format ddd:hh:mm:ss (d=days, h=hours, m=minutes, s=seconds).
 - ◆ **disconnected** = The Gigaset SX682 WiMAX is trying to establish a connection with a WiMAX network.
- IP address** For an existing Internet connection only:
Displays the IP address used by the Gigaset SX682 WiMAX on the Internet.
- Fixed IP address** IP address used by the Gigaset SX682 WiMAX in your local network: 192.168.2.1
- DHCP server** Displays whether the DHCP server of your Gigaset SX682 WiMAX is activated. As DHCP server, your Gigaset SX682 WiMAX assigns an IP address to all the PCs in the network. DHCP must be activated on a PC for the PC to receive an IP address from the DHCP server. Further information about this can be found in the Chapter "Adjusting the network settings on the PC" on page 47.
- VoIP status** Displays whether Internet telephony is set up.
- System time** Displays the current date and time. The date and time are transmitted to your Gigaset SX682 WiMAX from the WiMAX network.

Operating mode Type of protocol with which your Gigaset SX682 WiMAX establishes the connection with the Internet (**Router** or **Bridge**).

Firmware version Version number of the currently installed device software. You will also need to give your provider this number.

➔ If necessary, click on the **Refresh** button to refresh the data in the status display.

Internet

Status > Internet

The connection settings for your Gigaset SX682 WiMAX are displayed in the **Internet** submenu.

Connection status

The status of the radio connection with the WiMAX network is displayed as follows:

- ◆ **connected** = The Gigaset SX682 WiMAX has established a radio connection with a WiMAX network. You will see the connection duration in brackets and in the format ddd:hh:mm:ss (d=days, h=hours, m=minutes, s=seconds).
- ◆ **disconnected** = The Gigaset SX682 WiMAX is trying to establish a connection with a WiMAX network.

IP address

Subnet mask

For an existing Internet connection only:

Displays the public IP address and subnet mask via which your Gigaset SX682 WiMAX establishes the connection with the Internet.

MAC address

For an existing Internet connection only:

The MAC address uniquely identifies a network component within a network, in this case the public MAC address of your Gigaset SX682 WiMAX within the WiMAX network you use.

Default gateway

For an existing Internet connection only:

Displays the gateway the Gigaset SX682 WiMAX uses for connecting to the Internet.

DHCP server

IP address of the DHCP server with which the Gigaset SX682 WiMAX is connected. While the Gigaset SX682 WiMAX has not been assigned an IP address by the WiMAX network, the field stays empty.

Preferred DNS server

For an existing Internet connection only:

Alternate DNS server

Displays the domain name server the Gigaset SX682 WiMAX uses to convert names to IP addresses.

Address Translation (NAT)

Displays whether NAT mode is activated on your Gigaset SX682 WiMAX. NAT converts the internal IP addresses of the PCs in your network to public IP addresses. This maintains the confidentiality of your internal IP addresses.

➔ If necessary, click on the **Refresh** button to refresh the data in the status display.

Local network LAN

Status > Local Network

The configuration of the local network is displayed in the **Local Network** submenu.

| | |
|--------------------------|---|
| Fixed IP address | IP address used by the Gigaset SX682 WiMAX in your local network: 192.168.2.1 |
| Fixed subnet mask | Subnet mask of your local network: 255.255.255.0 |
| Fixed MAC address | The MAC address uniquely identifies a network component within a network, in this case the local MAC address of your Gigaset SX682 WiMAX within your local network. |
| DHCP server | Displays whether the DHCP server of your Gigaset SX682 WiMAX is activated. As DHCP server, your Gigaset SX682 WiMAX assigns an IP address to all the PCs in the network. If the DHCP server is activated, you will see the network subscribers that have received your IP address from the DHCP server in the DHCP clients field. DHCP must be activated on a PC for the PC to receive an IP address from the DHCP server. Further information about this can be found in the Chapter "Adjusting the network settings on the PC" on page 47. |

➔ If necessary, click on the **Refresh** button to refresh the data in the status display.

Telephony

Status > Telephony

The VoIP configuration is displayed in the **Telephony** submenu.

| | |
|-------------------|---|
| User name | The user name registered with your VoIP provider. |
| SIP domain | The name of your VoIP provider's SIP domain. |
| Status | Current status of your analogue phone connection: You can see whether your Gigaset SX682 WiMAX is registered to a server and whether there is currently an active connection. |

➔ If necessary, click on the **Refresh** button to refresh the data in the status display.

Device status

Status > Device Status

The device status of your Gigaset SX682 WiMAX is displayed in the **Device Status** sub-menu.

| | |
|---------------------------|--|
| System uptime | Operating time of your Gigaset SX682 WiMAX since it was last restarted. The operating time is given in the format ddd:hh:mm:ss (d=days, h=hours, m=minutes, s=seconds). |
| System time | Displays the current date and time. This information is transmitted to your Gigaset SX682 WiMAX by the WiMAX network. |
| Operating mode | Type of protocol with which your Gigaset SX682 WiMAX establishes the connection with the Internet (Router or Bridge). |
| Device temperature | Current device temperature inside your Gigaset SX682 WiMAX. This temperature should be below 75°C. In the event of overheating, the Gigaset SX682 WiMAX switches off. |
| System Log | Error protocol in which you will find information about problems. |

➔ If necessary, click on the **Refresh** button to refresh the data in the status display.

Radio status

Status > Radio Status

Information about received and sent data as well as possible data transmission errors is displayed in the **Radio Status** submenu.

| | |
|---|---|
| Received power level | Range: from 0 dBm to –110 dBm Readings above 0 dBm indicate possible overload traffic on the RF interface, and in this case all other measured values are invalid. Averaging is carried out according to the standard. |
| Transmitted power level | Current transmission power. |
| Carrier to interference and noise ratio | CINR = Carrier to Interference plus Noise Ratio. The CINR calculation is based on the value of the downlink measurement. Averaging is carried out according to the standard. |
| Centre frequency of current uplink channel | Currently used uplink frequency. The reading changes frequently during the measurement. |
| Centre frequency of current downlink channel | Currently used downlink frequency. |
| Current channel size | Currently used bandwidth. |
| Radio port uplink current average throughput | Average approximate uplink throughput in 1 second, moving average (5 samples). |
| Radio port downlink current average throughput | Average approximate downlink throughput in 1 second, moving average (5 samples). |
| Current uplink modulation scheme | Currently used uplink modulation type. |
| Current downlink modulation scheme | Currently used downlink modulation type. |

➔ If necessary, click on the **Refresh** button to refresh the data in the status display.

Preparing to use Gigaset SX682 WiMAX

When you have finished configuring your Gigaset SX682 WiMAX, use it to surf the Internet, send e-mails etc.

Generally speaking, you do not need to worry about your Gigaset SX682 WiMAX any more: your provider carries out all the maintenance work, such as installing new device software, adjusting network settings etc. All you need to do is ensure that the alignment of the device or antenna does not change.

As soon as you attempt to access the Internet with a PC connected to the Gigaset SX682 WiMAX (for example, by opening the Web browser and calling up an Internet site, or by starting your e-mail program and retrieving e-mails), your Gigaset SX682 WiMAX automatically establishes a connection to the Internet or uses the permanent Internet connection. Whether the connection needs to be established or is permanently available depends on your provider's default settings. Unlike conventional Internet connections, you do not need to enter any access data in order to establish an Internet connection.

Making a phone call or faxing with the Gigaset SX682 WiMAX

You can use your Gigaset SX682 WiMAX to make calls via the Internet (VoIP) and operate a fax machine or answer machine without installing any additional software. If you wish, for example, to make a phone call via the Internet, you do not need to switch on your PC.

In order to operate an analogue terminal on your Gigaset SX682 WiMAX, the following preconditions must be satisfied:

- ◆ You have an analogue terminal (telephone, fax machine or answer machine) connected to your Gigaset SX682 WiMAX.
- ◆ Internet telephony (VoIP) is included in your contract with your provider. This is necessary as your provider needs to set up VoIP access for you and transfer this data to your Gigaset SX682 WiMAX. Your provider can establish this access by means of remote management. You can find out whether VoIP access is configured in your Gigaset SX682 WiMAX either from the documentation given to you by your provider or by referring to the relevant status page on your Gigaset SX682 WiMAX; see Chapter "Telephony" on page 35.
- ◆ Your Gigaset SX682 WiMAX will adjust extremely flexibly to your requirements: if you wish to make a call via VoIP, the Gigaset SX682 WiMAX will automatically provide a high bandwidth for the purpose. This enables good voice quality when making a call via VoIP. However, in order to provide the highest possible bandwidth, your Gigaset SX682 WiMAX or your Siemens outdoor antenna must be optimally aligned. Optimise the alignment if necessary to obtain maximum voice quality when making a call.
- ◆ You need a permanent Internet connection if you wish to be permanently accessible and make calls via VoIP.

| | |
|----------|---|
| <i>i</i> | <p>Please note that you cannot make phone calls via the Internet in the event of a power failure.</p> <p>Ask your provider which emergency numbers are available via the VoIP connection. It is also possible that service numbers cannot be reached in the usual way.</p> <p>Ask your provider about VoIP rates for VoIP connections, fixed line network connections and mobile phone connections.</p> |
|----------|---|

The VoIP features may vary considerably, depending on your provider's VoIP configuration. You should therefore read the documentation given to you by your provider and, where applicable, visit your provider's Internet site for further options.

Making calls via VoIP

Make telephone calls in the same way as on a conventional telephone: dial as usual or use the directory to dial. The **Phone** LED flashes green.

If the dialled number is a fixed line connection, your call will first be transmitted via the Internet to the relevant regional exchange. Only on the last stretch will your call be directed via a fixed line to the person you are calling.

Receiving VoIP phone calls

Your PC does not need to be switched on for you to receive calls. It is only necessary for the Gigaset SX682 WiMAX to be ready for operation (**Phone** LED lights up green).

For you to receive calls via VoIP, let potential callers know your VoIP phone number. You will find your VoIP phone number in the documentation provided by your provider.


As soon as a call is received on your VoIP phone, the **Phone** LED starts to flash green. When you lift the receiver or press the connection button, your Gigaset SX682 WiMAX will provide the highest possible bandwidth for voice transmission. If you are surfing the Internet at the same time, it is possible that the data will be transmitted a little more slowly, similar to when downloading several large data packets. The call is made in the same way as via a conventional phone line. When you have ended the call, the **Phone** LED lights up a constant green again and your Gigaset SX682 WiMAX makes the entire bandwidth available for data transfer.

Appendix

Troubleshooting

Fault tracing

When troubleshooting, start by checking the LEDs on your Gigaset SX682 WiMAX. Please answer the questions on the left-hand side and follow the arrows to the answers and solutions:

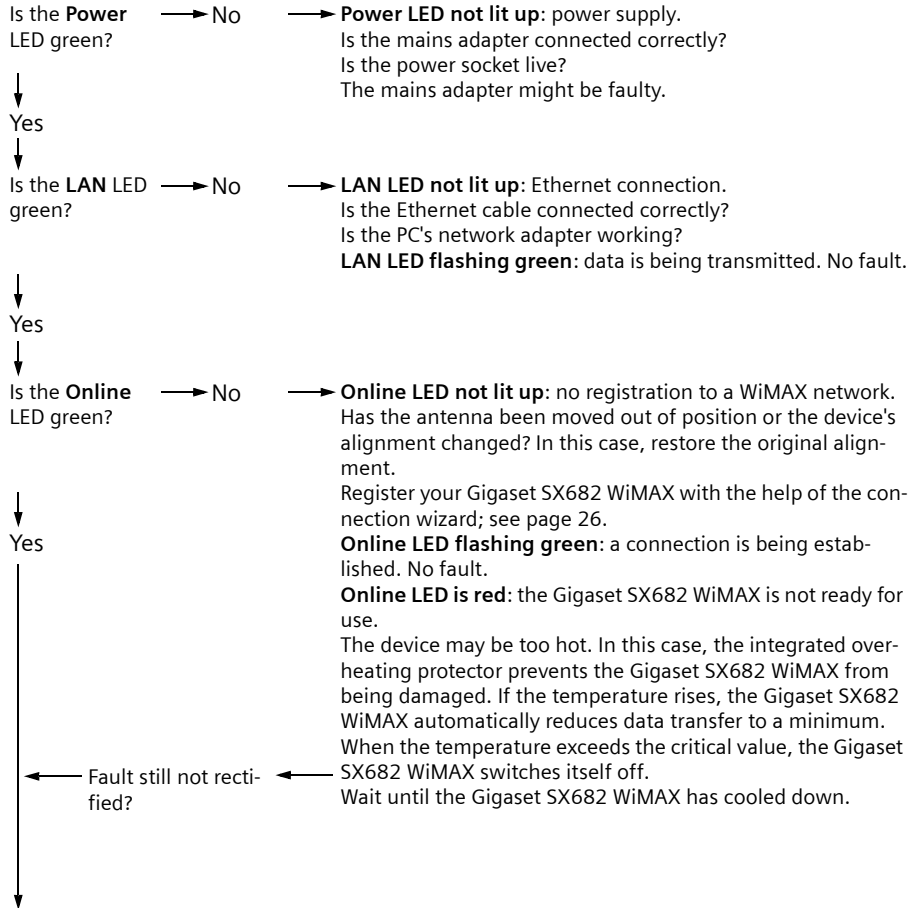

Can the configuration software be accessed? → Yes → Look for a suitable place to set up your Gigaset SX682 WiMAX; see page 13.
 Register your Gigaset SX682 WiMAX with the help of the connection wizard; see page 26.

↓
 No

↓
 Check the connection to your Gigaset SX682 WiMAX; see page 43.

↓
 Is there a connection? → Yes → The Web browser (Internet Explorer, Mozilla Firefox) is incorrectly configured; see page 44.

↓
 No

↓
 The TCP/IP network is incorrectly configured on the PC; see next chapter:
 "Windows Vista: activating DHCP" on page 48
 "Windows XP Home: activating DHCP" on page 51
 "Windows 2000: activating DHCP" on page 54

Other faults and problems

You are using a firewall on the PC that prevents access to the Gigaset SX682 WiMAX

Test this, if necessary, by briefly switching off the firewall. If access is possible, configure the firewall. For details, refer to the user guide for your firewall.

You have forgotten the system password

If you have assigned your own system password or changed and forgotten it, you need to return your Gigaset SX682 WiMAX to the factory settings; see Chapter "Returning the Gigaset SX682 WiMAX to factory settings" on page 19.

If you have not yet entered a system password, leave the field empty.

Troubleshooting

The Online LED is lit up permanently in red and the possibility of the device overheating can be excluded

The Gigaset SX682 WiMAX may be faulty. Restart the Gigaset SX682 WiMAX; see "Rebooting the Gigaset SX682 WiMAX" on page 19. If the **Online** LED remains red after the device has been restarted and does not go off, please contact your provider/service technician.

Only a few LEDs have lit up to display the signal strength (RSSI) and the Online LED is green

If you are using the antenna integrated in the Gigaset SX682 WiMAX, turn the Gigaset SX682 WiMAX until more LEDs light up. Try to place the Gigaset SX682 WiMAX even closer to the window and check the signal strength bar in the connection wizard for the configuration software.

Power failure

No data will be lost.

Before contacting customer service or your provider

- ➔ First exclude all the faults listed in this section.
- ➔ Have the documentation supplied by your provider ready.
- ➔ If you can open the configuration software in the Web browser, click on the **Status** tab.
- ➔ Note the number in the **Firmware version** field. This is the number of the currently installed device software.
- ➔ Open the **Local Network** submenu and note the entry consisting of numbers and letters in the **Fixed MAC address** field. The MAC address is used for the globally unique identification of your device.
- ➔ Leave the PC switched on and the configuration software open when you phone customer service or your provider. They might need still more information, which you will find on the status pages.

Checking the connection to the Gigaset SX682 WiMAX

You can check whether the PC is correctly connected to the Gigaset SX682 WiMAX. This can be done as follows:

- ➔ Open the command prompt on the PC:
 - Click on **Start > Run**.
 - Enter **cmd** in the input field and click on **OK**.
The **Command prompt** window opens.
- ➔ Check whether the Gigaset SX682 WiMAX responds with the ping command. Enter **ping 192.168.2.1** and press Enter.

```
C:\>ping 192.168.2.1
```

The PC now sends some test packets via this connection and checks whether the connection partner responds. The connection partner may respond in the following ways:

- ◆ **Reply from the IP address of your Gigaset SX682 WiMAX;** statistics about the connection are presented. If you receive these statistics, the connection to the device is OK.
- ◆ **The request exceeds the time limit;** it was not possible either to send or receive any packets. There is no physical connection between the PC and your Gigaset SX682 WiMAX. Check the following points:
 - Is the Ethernet cable between the Gigaset SX682 WiMAX and the PC properly connected?
The **LAN LED** on the Gigaset SX682 WiMAX must light up.
 - Has TCP/IP been properly configured on your PC?
If the Gigaset SX682 WiMAX has the IP address 192.168.2.1, your PC's IP address must be between 192.168.2.2 and 192.168.2.254. The subnet mask must be 255.255.255.0.
To find out the IP address of your PC, enter **ipconfig** in the command prompt.

```
C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix. . . : 
    IP Address. . . . . : 192.168.2.5
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 192.168.2.1

C:\>_
```

If the Gigaset SX682 WiMAX has not responded successfully to the **ping** command, you need to adjust the network settings on the PC. To find out how to do this, please read the Chapter "Adjusting the network settings on the PC" on page 47.

If the Gigaset SX682 WiMAX has responded successfully to the **ping** command, the network is configured correctly. If it is not possible to access the configuration software of your Gigaset SX682 WiMAX, check and change the settings in your Web browser. To find out how to do this, please read the next chapter.

Configuring the Web browser

If you are using a current Web browser but cannot open the configuration software in it, check the Web browser settings.

i

We recommend Microsoft Internet Explorer Version 7.0 or Mozilla Firefox 2.0 as the Web browser.

- ◆ Do not use an HTTP proxy for accessing your Gigaset SX682 WiMAX.
- ◆ Java and Javascript must be enabled.
- ◆ Popup windows must be enabled for your Gigaset SX682 WiMAX.

The following descriptions relate to Internet Explorer Version 7.0 and Mozilla Firefox Version 2.0.

Setting up an HTTP proxy

An HTTP proxy is a buffer for Internet pages that have been called up. For example, once called up, a page can continue to be shown even if you are currently offline. However, this buffer would prevent the configuration pages being read again when you call up the configuration for your Gigaset SX682 WiMAX; for this reason, your Gigaset SX682 WiMAX can only be configured if the HTTP proxy is not being used for local pages.

Check the HTTP proxy in the Web browser you wish to use for the configuration.

Internet Explorer 7.0:

- ➔ Open Internet Explorer.
- ➔ Click on **Tools** and then on **Internet Options**.
- ➔ Open the **Connections** tab.
- ➔ Click on **LAN settings**.
- ➔ If the option **Use proxy server for LAN** is activated in the **Proxy server** area, activate the selection field **Circumvent proxy server for local addresses**. If the option **Use proxy server for LAN** is not activated, you do not need to make any settings.
- ➔ Click on **OK** and then **OK** again to close the **Internet Options** window.

Firefox 2.0:

- ➔ Open Firefox.
- ➔ Click on **Tools** and then on **Settings**.
- ➔ Click on **Advanced**.
- ➔ Open the **Network** tab and click on **Settings** in the **Connection** area.
- ➔ Select either **Direct connection to the Internet** or **Manual proxy configuration**.
If you have chosen **Manual proxy configuration**, in the **No proxy for:** field, enter the IP block in which the IP address of your Gigaset SX682 WiMAX is found:
192.168.2.0/24
- ➔ Click on **OK** and then **OK** again to close the **Settings** window.

Allowing JavaScript and Java

Internet Explorer 7.0:

- ➔ Open Internet Explorer.
- ➔ Click on **Tools** and then on **Internet Options**.
- ➔ Open the **Security** tab.
- ➔ Select the **Local Intranet** entry as the Web content zone.
- ➔ Click on the **Sites** button.
- ➔ Select the **Include all sites that circumvent the proxy server** entry.
- ➔ Click on **OK** and then **OK** again to apply the settings.

Firefox 2.0:

- ➔ Open Firefox.
- ➔ Click on **Tools** and then on **Settings**.
- ➔ Click on **Content**.
- ➔ Check the **Activate JavaScript** and **Activate Java** boxes.
- ➔ Click on **OK** to apply the settings.

Allowing pop-up windows

Pop-up windows are small windows that are opened either as the result of an action or automatically. The device software for your Gigaset SX682 WiMAX uses pop-up windows to display the online Help, for example.

Many Internet sites, however, call up distracting pop-up windows for effective advertisement placement, for example, without detracting from the layout of the site itself. To prevent these pop-up windows from opening, current Web browsers offer pop-up blockers.

If necessary, you can configure the pop-up blocker to display desirable pop-up windows and to block undesirable windows.

i

If you are using a different pop-up blocker, configure it to allow pop-up windows for the IP address 192.168.2.1.

Internet Explorer 7.0:

- ➔ Open Internet Explorer.
- ➔ Click on **Tools** and then on **Pop-up Blocker** and choose **Pop-up Blocker Settings**.
- ➔ Enter the IP address of your Gigaset SX682 WiMAX as the Website address:
192 . 168 . 2 . 1
- ➔ Click on the **Add** button.
- ➔ Click on **Close** to apply the settings.

Firefox 2.0:

- ➔ Open Firefox.
- ➔ Click on **Tools** and then on **Settings**.
- ➔ Click on **Content**.
- ➔ If the **Block pop-up windows** check box is activated, click to its right on **Exceptions**.
- ➔ Enter the IP address of your Gigaset SX682 WiMAX as the Website address:
192 . 168 . 2 . 1
- ➔ Click on the **Allow** button.
- ➔ Click on **Close** and on **OK** to apply the settings.

Adjusting the network settings on the PC

If you have connected a PC to your Gigaset SX682 WiMAX and cannot open the configuration software in the Web browser, read the next chapter for information on which settings you need to adjust.

Modern PCs with the Windows Vista, Windows XP or Windows 2000 operating system are normally already configured so that they can easily be incorporated in a local network. The connection with your Gigaset SX682 WiMAX is established automatically if the general configuration of your PC complies with this standard.

If you have changed the network configuration on your PC or the configuration software of your Gigaset SX682 WiMAX can be accessed for other reasons, check the network settings and change them if necessary.

The PC needs to satisfy the following conditions for you to establish a network:

- ◆ There must be a network adapter installed in the PC; the TCP/IP network protocol is set up.

i

The Windows user interfaces depicted in this user guide may differ from those on your screen because of the settings you have made. In each case, the view that usually follows the initial installation has been chosen.

DHCP

Activate DHCP to enable the DHCP server of your Gigaset SX682 WiMAX to assign an IP address to your PC. Depending on the structure of your local network, select one of the following procedures:

- ◆ If you have connected your Gigaset SX682 WiMAX directly to a PC, activate DHCP on this PC.
- ◆ If you have connected your Gigaset SX682 WiMAX to several PCs via a switch or hub to form a local network, activate DHCP on all the PCs in the network.
- ◆ If you have connected your Gigaset SX682 WiMAX to one or more PCs via a router, you must activate DHCP on the router. For details, please read the user guide for your router.

i

You need administrator rights on the PC to set up the network. If necessary, contact your system administrator.

Depending on your PC's operating system, continue by reading one of the following chapters:

- ◆ Windows Vista: "Windows Vista: activating DHCP" on page 48
- ◆ Windows XP: "Windows XP Home: activating DHCP" on page 51
- ◆ Windows 2000: "Windows 2000: activating DHCP" on page 54

Windows Vista: activating DHCP

To activate DHCP with Windows Vista, set the TCP/IP network protocol so that it obtains the IP address automatically from your DHCP server.

Setting up the TCP/IP network protocol with DHCP


Make the necessary settings for the TCP/IP network protocol.




➔ Click on the icon in the taskbar (bottom right of the screen next to the time).

The networks are displayed to which a connection currently exists.

➔ Click in the lower area of the small window on the entry **Network and Sharing Center**.

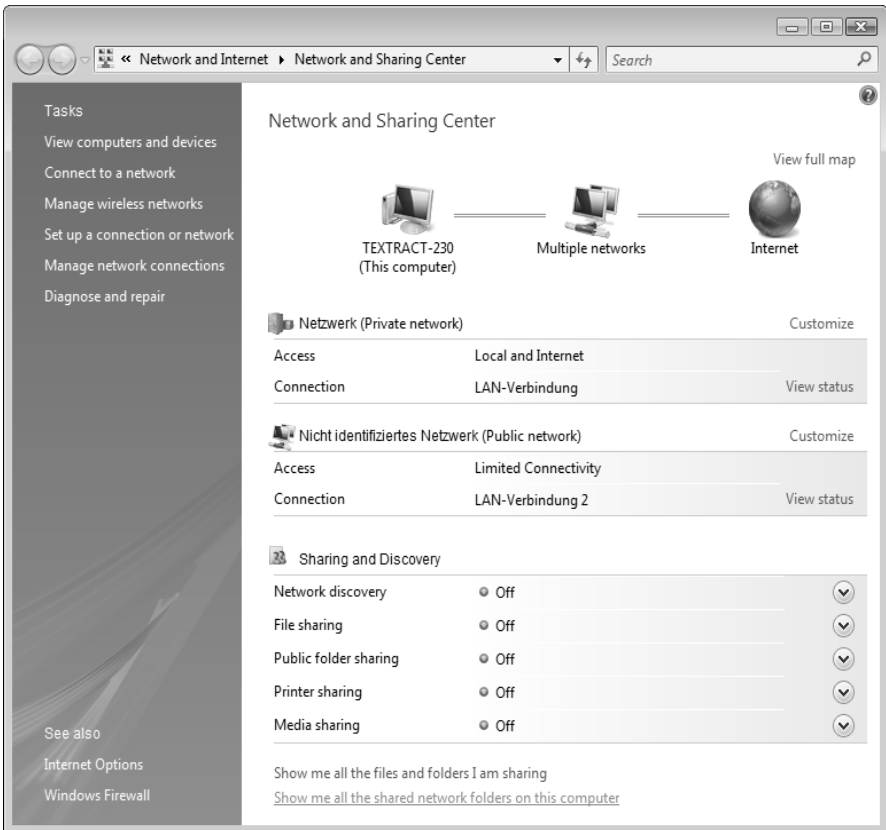


➔ Next to the network connection with which your PC is connected to the Gigaset SX682 WiMAX, click on **View status**.

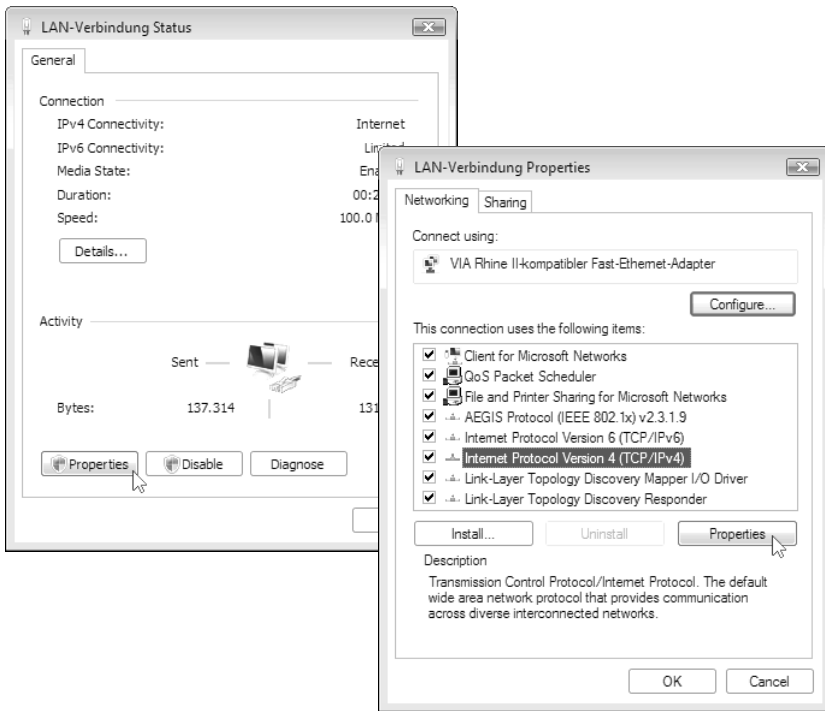

- ➔ Click on **Properties**.
- ➔ Select the entry **Internet Protocol Version 4 (TCP/IP)** and click on **Properties**.

Windows Vista: activating DHCP

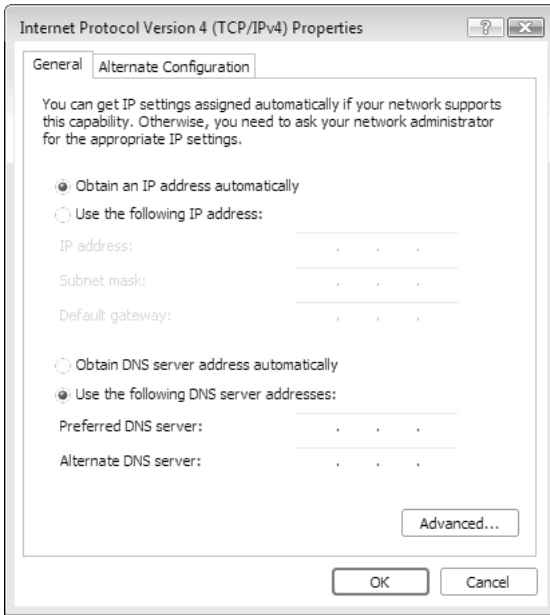

- ➔ Select ***Obtain an IP address automatically.***
- ➔ If your provider does not specify another setting, select ***Obtain DNS server address automatically.***
- ➔ Click on ***OK*** to apply the settings.
- ➔ Reboot your PC to apply the settings.

When you reboot, the DHCP server of your Gigaset SX682 WiMAX will automatically assign an IP address to your PC. With this you can establish a connection to the Gigaset SX682 WiMAX and open the configuration software.

Windows XP Home: activating DHCP


Configuring the network with Windows XP Home differs slightly from configuration with Windows XP Professional. The next section describes configuration with Windows XP Home as an example.

To activate DHCP with Windows XP Home, set the TCP/IP network protocol so that it obtains the IP address automatically from your provider's DHCP server.


Setting up the TCP/IP network protocol with DHCP

Make the necessary settings for the TCP/IP network protocol.

- ➔ Click on **Start > Control Panel**.
- ➔ Click on **Network and Internet Connections**.
- ➔ Click on **Network Connections**.

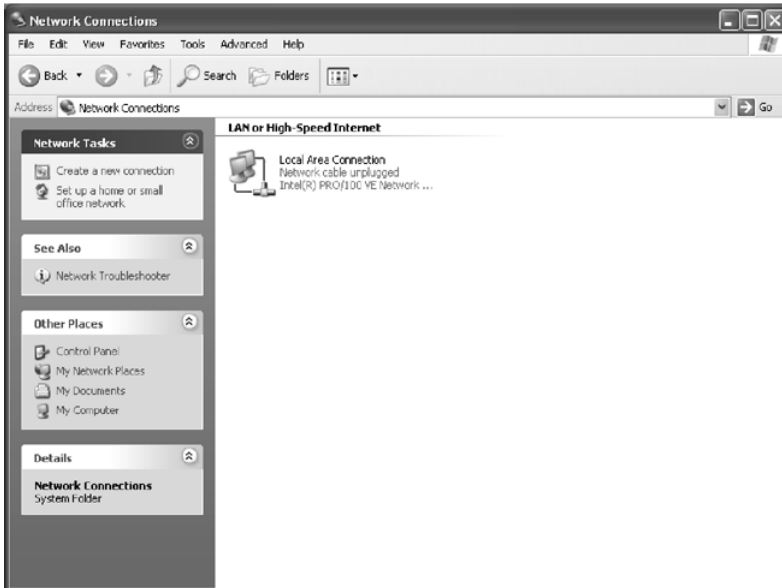


- ➔ Double-click on the LAN connection with which the PC is connected to the Gigaset SX682 WiMAX.

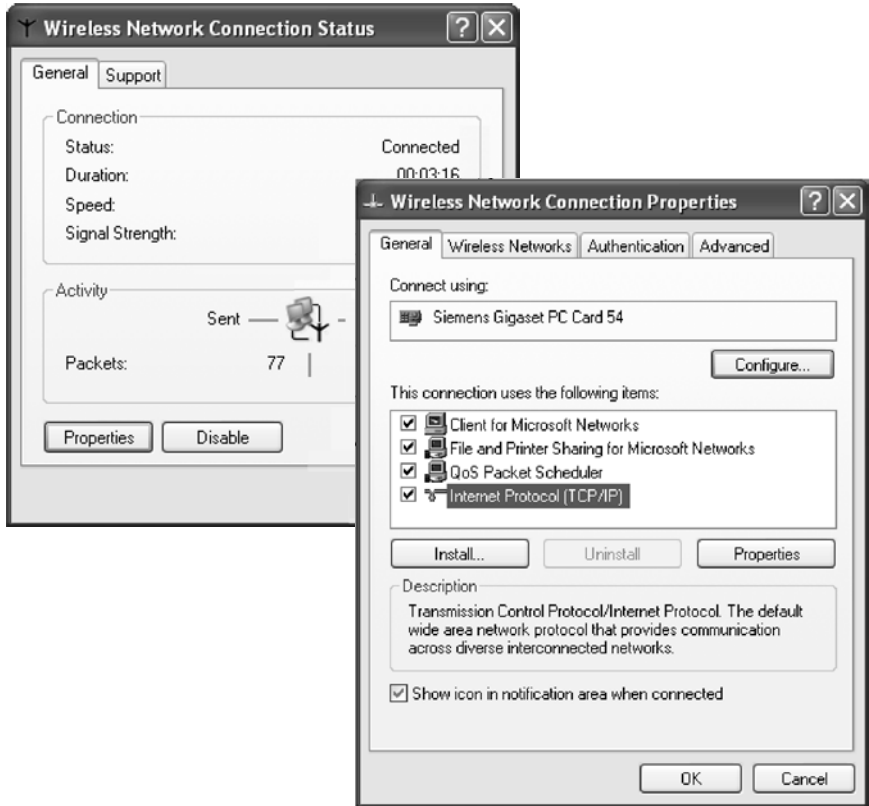

➔ Click on **Properties**.

➔ Select the entry **Internet Protocol (TCP/IP)** and click on **Properties**.

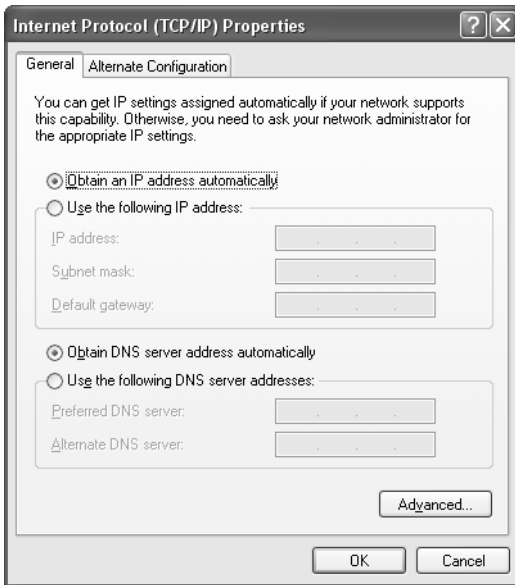

- ➔ Select **Obtain an IP address automatically**.
- ➔ If your provider does not specify another setting, select **Obtain DNS server address automatically**.
- ➔ Click on **OK** to apply the settings.
- ➔ Reboot your PC to apply the settings.

When you reboot, the DHCP server of your Gigaset SX682 WiMAX will automatically assign an IP address to your PC. With this you can establish a connection to the Gigaset SX682 WiMAX and open the configuration software.


Windows 2000: activating DHCP

To activate DHCP with Windows 2000, set the TCP/IP network protocol so that it obtains the IP address automatically from the DHCP server of your Gigaset SX682 WiMAX.


Setting up the TCP/IP network protocol with DHCP

Make the necessary settings for the TCP/IP network protocol.

- ➔ Click on **Start > Settings > Control Panel**.
- ➔ Double-click on the **Network and Dial-up Connections** icon.
- ➔ Right-click on the entry for the **LAN connection** with which your PC is connected to the Gigaset SX682 WiMAX.
This opens the pop-up menu.
- ➔ In the pop-up menu, click on **Properties**.
The **Properties** window for your network adapter opens.

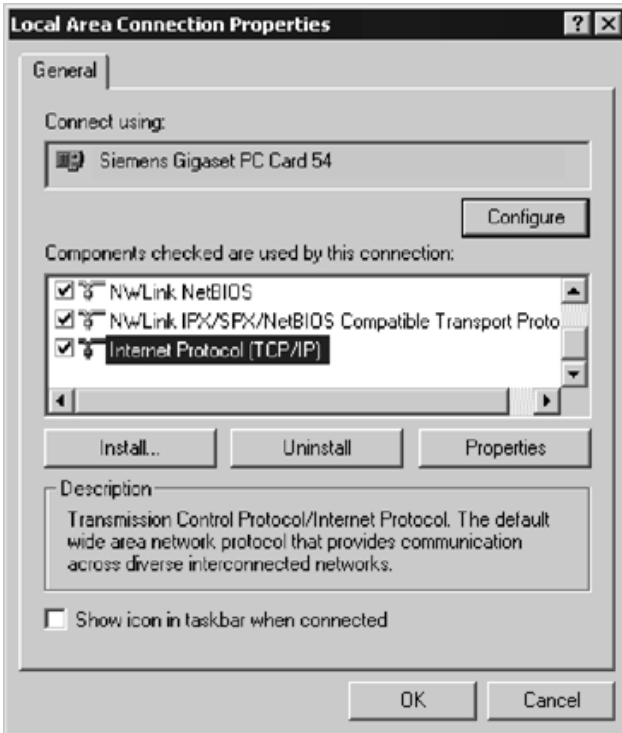

- ➔ Select the entry **Internet Protocol (TCP/IP)** and click on **Properties**.

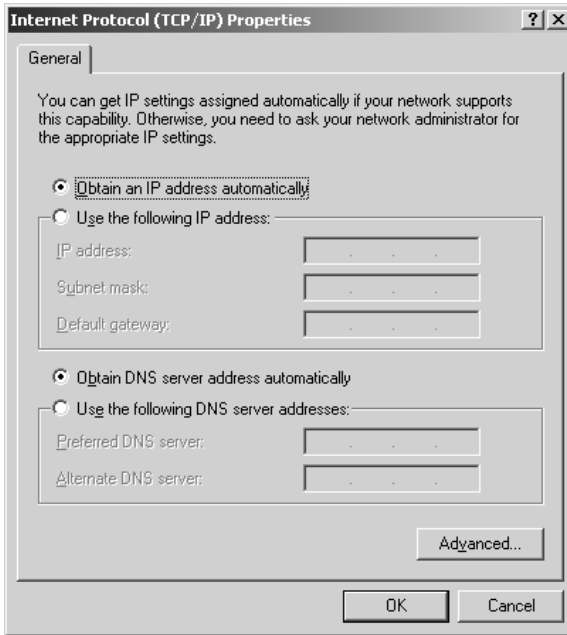

- ➔ Select ***Obtain an IP address automatically.***
- ➔ If your provider does not specify another setting, select ***Obtain DNS server address automatically.***
- ➔ Click on ***OK*** to apply the settings.
- ➔ Reboot your PC to apply the settings.

When you reboot, the DHCP server of your Gigaset SX682 WiMAX will automatically assign an IP address to your PC. With this you can establish a connection to the Gigaset SX682 WiMAX and open the configuration software.

Specifications

Specifications

| | |
|-----------------------|---|
| Model | Gigaset SX682 WiMAX |
| Dimensions | Approx. 230 x 160 x 52 mm |
| Operating temperature | +5°C to +40°C |
| Storage temperature | -25°C to +70°C |
| Network interface | 1 Ethernet 10/100BaseT (RJ45) LAN connection (10BaseT Full Duplex, 100BaseT Half Duplex or 100BaseT Full Duplex) |
| Telephone interface | 1 FXS (RJ11) for connecting an analogue terminal (telephone, fax machine or answer machine) |
| Frequency | 2.5–2.7 GHz or 3.4–3.6 GHz |
| Output power | Max. 26 dBm at 2.5–2.7 GHz, Max. 24 dBm at 3.4–3.6 GHz (Europe) |
| Power consumption | 3–6 W, depending on operating state |
| Bandwidth | Optional 5.0/7.0 or 10.0 MHz |
| Type of transmission | TDD |
| Modulation technique | SOFDMA 512/1024 |
| Subcarrier modulation | QPSK, 16/64 QAM |
| Encoding rate | 1/2, 2/3, 3/4, 5/6 |
| Antenna socket | 50 Ohm reverse SMA |
| Antenna type | 2 internal antennae (2xRX, 1xTX) for MIMO Matrix A & B; Type DN1 (EN 302 326-3 V1.2.2) Optional: Siemens outdoor antenna |
| Antenna gain | 2,6 GHz: 7 dBi 3,5 GHz: 9 dBi (integrated antennae) |
| Antenna polarisation | Send direction vertical, Receive direction vertical and horizontal |
| Mains adapter | Input: 100–240 V AC Output: 12 V; 1.0 A DC |

Specifications for Siemens outdoor antenna (optional)

| | |
|-----------------------|--|
| Model | Siemens outdoor antenna |
| Operating temperature | -40°C to +70°C |
| Storage temperature | -40°C to +70°C |
| Frequency | 2.5–2.7 GHz or 3.4–3.6 GHz |
| Antenna socket | 50 Ohm |
| Antenna gain | 3,5 GHz: 18 dBi 3,5 GHz: 9 dBi 2,6 GHz: 9 dBi 2,6 GHz: 15 dBi |
| Antenna polarisation | Vertical, horizontal |

Putting into service

This device is intended for use in the country indicated on the device's label.

The device is operated under a single licence, which is held by your service provider.

Contact your service provider regarding licensing before you put the device into service.

Please observe the legal provisions and local restrictions when putting the device into service. Please ask your service provider for further information.

CE declaration

This device is intended for use with WiMAX base stations.

We, Siemens Home and Office Communication Devices GmbH & Co. KG, declare that this device meets the essential requirements and other relevant regulations laid down in Directive 1999/5/EC. National laws and regulations must be considered before putting the device into service.

A copy of the 1999/5/EC declaration of conformity is available at this Internet address:

www.siemens.com/gigasetdocs

CE 0682 Ⓢ

Gigaset SX682 WiMAX – Free software

The Gigaset SX682 WiMAX contains, among other things, free software that was developed by third parties and is protected by copyright.

The software is provided free of charge. You are authorised to use this free software in accordance with the relevant licence conditions. In the event of contradictions between these licence conditions and the licence conditions that apply for the software according to Siemens Home and Office Communication Devices GmbH & Co. KG, the above-mentioned licence conditions shall take precedence for the free software.

Use of the free software contained in this product extending beyond the program sequence intended by Siemens is at the user's own risk – i.e. without a claim against Siemens based on liability for defects.

You shall have no right to assert a claim against Siemens based on liability for defects, if a defect in the product is or could be due to changes you have made to the programs or their configuration. Furthermore, you shall have no right to assert a claim against Siemens based on liability for defects if the free software infringes the copyright of third parties.

Siemens shall not provide technical support for the software, including the free software included within it, if it has been changed.

WPA supplicant

Copyright (c) 2003-2007, Jouni Malinen <j@w1.fi> and contributors

All Rights Reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name(s) of the above-listed copyright holder(s) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

gSOAP

"Part of the software embedded in this product is gSOAP software.

Portions created by gSOAP are Copyright (C) 2001-2004 Robert A. van Engelen, Genivia inc.

All Rights Reserved.

THE SOFTWARE IN THIS PRODUCT WAS IN PART PROVIDED BY GENIVIA INC AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE."

Glossary

Address Translation (NAT)

Network Address Translation. NAT is a method for converting IP addresses (mainly private IP addresses) in a network to one or more public IP addresses on the Internet. With NAT, several network components in a LAN can share a public IP address to connect to the Internet. The network components of the local network are hidden behind the IP address registered on the Internet. NAT is often used as part of the firewall in a network because of this security function.

Bridge

A bridge connects several network segments to form a joint network, e.g. to make a [TCP/IP](#) network. The segments can have different physical characteristics, e.g. different linking such as Ethernet and wireless LANs. Local networks can be expanded by linking individual segments via bridges.

dB

Decibel (a tenth of a Bel). Logarithmic unit of measurement for ratios between two currents, voltages, sound levels or powers. In order to depict large value differences clearly and graphically, these are given in dB; e.g. 60 dB corresponds to the factor 1000 relative to the voltage drops.

dBm

Decibel milliwatt. Power level in decibels relative to 1 milliwatt.

DHCP

Dynamic Host Configuration Protocol. DHCP handles the automatic assignment of IP addresses to network components.

DHCP was developed because in large networks – especially the Internet – the defining of IP addresses is very complex as subscribers frequently move, drop out or new ones join. A [DHCP server](#) server automatically assigns the connected network components (DHCP clients) dynamic IP addresses from a defined IP pool range, thus saving a great deal of configuration work. In addition, the address blocks can be used more effectively: since not all subscribers are on the network at the same time, the same [IP address](#) can be assigned to different network components in succession as and when required.

DHCP server

There is a DHCP integrated into the Gigaset SX682 WiMAX that automatically assigns IP addresses to PCs in the local network.

DNS

Domain Name System. DNS permits the assignment of IP addresses to PC or domain names that are easier to remember. A DNS server must administer this information for each local network with an Internet connection. As soon as a page on the Internet is called up, the Web browser obtains the corresponding IP address from the DNS server so that it can establish the connection.

On the Internet, the assignment of domain names to IP addresses follows a hierarchical system. A local PC only knows the address of the local name server. This in turn knows all the addresses of the PCs in the local network and the superordinated name servers, which again know addresses and the next superordinated name servers.

Domain name

The domain name is the reference to one or more web servers on the Internet. The domain name is mapped via the [DNS](#) service to the corresponding IP address.

Downlink

Files that your Gigaset SX682 WiMAX receives and forwards to your local network.

DSL

Digital Subscriber Line. DSL is a technique whereby data is transmitted via the conventional phone line. To do this, you require suitable phone lines and special technology to be set up by a [Provider](#). As these preconditions are not satisfied in all areas, it is not possible to use DSL in all locations. In order to make use of high-performance Internet access in these areas as well, technologies such as WiMAX, Wi-Fi or satellite connections are implemented.

Ethernet

Ethernet is a network technology for local networks (LANs) defined by the [IEEE](#) as standard IEEE 802.3. Depending on the network adapter used, the transmission speed on the Ethernet varies between 10 [Mbps](#) and 1 Gbps.

Firewall

Firewalls are used by network operators as protection against unauthorised external access. This involves a whole bundle of hardware and software actions and technologies that monitor and control the data flow between the private network to be protected and an unprotected network such as the Internet.

Firmware

Device software. To correct errors or update the device, a new firmware version can be loaded onto the device's memory (firmware update).

Flat rate

Flat rate is a particular billing system for Internet connections. The [Provider](#) charges a set monthly fee for a certain service package.

Glossary

FTP

File Transfer Protocol. Protocol for exchanging files via the Internet. FTP is used, for example, to make files available for download or to receive files from other users.

Full duplex

Data transmission operating mode in which data can be sent and received at the same time.

FXS

Foreign Exchange Station. Phone port to which an analogue terminal (phone, fax or answer machine) can be connected.

Gateway

A gateway connects networks with one another. In contrast to a [Router](#), a gateway is not dependent on protocol, i.e. it is also able to establish connections between networks with a different architecture (protocols, application interfaces etc.).

Half duplex

Operating mode for data transfer. Only one party can receive or send data at a time.

HTTP

Hypertext Transfer Protocol. Network protocol for the transmission of data, which is mainly used for transmitting and displaying Internet content.

HTTP proxy

An [HTTP](#) proxy is a server that network components use for their Internet traffic. All requests are sent via the proxy.

Hub

A hub is a central distribution point in a network, to which PCs and other network devices are connected. The hub forwards received data to all connected PCs. For this reason, in large networks, a [Switch](#) is recommended to ensure that data is only sent to the PC requesting it.

IEEE

Institute of Electrical and Electronics Engineers. The IEEE is an international body for defining network standards, especially for standardising [LAN](#) technologies, transmission protocols and speeds, and wiring.

IEEE 802.16

Standard defined by the [IEEE](#) for WiMAX. Similarly to other standards in the 802 series (e.g. 802.3 [Ethernet](#), 802.11 WLAN), the WiMAX standard is one of the standards for networks. The standard has progressed in accordance with new developments; there are currently two main versions:

- ◆ IEEE 802.16-2004: WiMAX, which specifies the secure location for connection partners.
- ◆ IEEE 802.16e-2005: Mobile WiMAX, which enables wireless cells to be exchanged during data transmission.

Internet telephony (VoIP)

Voice transmission via the Internet (Voice over IP).

IP

Internet Protocol. The protocol is responsible for addressing of subscribers in a network using IP addresses, and routes data from the sender to the recipient. In doing so, it decides on the way in which data packets will be forwarded between sender and recipient.

IP address

An IP address is the unique network-wide address of a network component in a network based on the [TCP/IP](#) protocol (e.g. in a local network or on the Internet). The IP address consists of four parts (each of up to three-figure strings of digits from 0–255) that are separated from one another by full stops (e.g. 192.168.2.1). The IP address is made up of the network number and the number of the network component. Depending on the [Subnet mask](#), one, two or three parts form the network number, the remainder form the network component number. You can find out the IP address of your PC using the `ipconfig` command.

There are two different types of IP address:

- ◆ **Private IP address:**
IP address of a network component within a local network.
- ◆ **Public IP address:**
IP address that uses a network component for accessing the Internet.

IP addresses can be assigned manually or automatically:

- ◆ **Static IP address:**
The IP address is manually assigned to a network component and never changes.
- ◆ **Dynamic IP address:**
The IP address is assigned to the network component by a DHCP server. The IP address of this network component can change each time it registers with a network or at specific time intervals.

On the Internet, domain names are normally used instead of the IP addresses. DNS is used to assign domain names to IP addresses.

Glossary

IPTV

Internet Protocol Television. You receive your provider's television service via the DSL connection. To do this, you require an IPTV-capable set-top box and the configuration data of your IPTV provider.

ISP

Internet Service Provider. See [Provider](#).

LAN

Local Area Network, local network. A local network links network components so that they can exchange data and share resources. The physical range is restricted to a particular area (a site). A local network can be connected to other local networks or a wide-area network (WAN) such as the Internet.

LED

Light Emitting Diode. An LED is an electronic component (semi-conductor) that generates light at low power consumption. LEDs are often used as signal lights for display and UI elements.

Login

Access to a PC or a service, password e.g. for access to the Internet.

MAC address

Media Access Control. The MAC address is used for the globally unique identification of a network adapter. It comprises six parts (hexadecimal numbers), e.g. 00-90-96-34-00-1A. The MAC address is assigned by the network adapter manufacturer and cannot be changed.

Mbps

Million bits per second. Specification of the transmission speed in a network.

Network

A network is a group of devices connected in wired or wireless mode so that they can share resources such as data and peripherals. A general distinction is made between local networks (LANs) and wide-area networks (WANs).

Network adapter

The network adapter is the hardware device that creates the connection between a network component and a local network. The connection can be wired or wireless. An Ethernet network card is an example of a wired network adapter. The Gigaset PC Card 108 and the Gigaset USB Adapter 108 are examples of wireless network adapters. A network adapter has a unique address, the [MAC address](#).

Network protocol

The network protocol is the standard via which different PCs exchange data in a network. A connection can only be established between PCs in a network if they all use the same protocol. The [TCP/IP](#) network protocol is the most extensive network protocol, which is also used for connections to the Internet. This must be set up on each PC from which a network connection is to be established.

Protocol

A protocol describes the agreements for communicating on a network. It contains rules for opening, administering and closing a connection, as well as about data formats, time frames and handling possible errors. Communications between two applications require different protocols at various levels, e.g. the [TCP/IP](#) protocols for the Internet.

Provider

A provider (Internet Service Provider) offers access to the Internet for a fee.

QoS

Quality of Service. QoS allows network traffic to be sorted according to priorities. This makes it possible to grant [Internet telephony \(VoIP\)](#) priority over other data traffic. This is a precondition for problem-free calls.

RJ

Registered Jack. Standardised connection, also known as a modular jack.

Router

A router directs data packets from one local area network ([LAN](#)) to another via the fastest route. A router enables the connection between networks of different network technologies and this is performed on the basis of a common protocol. For example, it can link a local network with WiMAX technology to the Internet.

RSSI

Received Signal Strength Indication. Characteristic value for the signal strength of radio connections, used by communication devices for the automatic selection of a suitable channel.

Server

A server makes services available to other network components (clients). The term "server" is often used to refer to a PC. However it can also mean an application that provides a particular service such as [DNS](#), [DHCP](#) or a Web service.

SIP

Session Initiation Protocol. SIP is a standard for data transfer in Internet telephony ([VoIP](#)). It describes how a call is carried over the data network and which components, which transport and signalling protocols are involved.

Glossary

SMTP

Simple Mail Transfer Protocol. The SMTP protocol is a [TCP/IP](#) protocol and regulates the exchange of electronic post on the Internet. Your [Provider](#) provides you with access to an SMTP server.

Subnet

A subnet divides a network into smaller units.

Subnet mask

The subnet mask determines how many parts of the IP addresses of a network represent the network number and how many parts represent the network component number. If the subnet mask in a network is 255.255.255.0, for example, this means that the first three parts of the [IP address](#) make up the network number and only the last part can be used to assign network component numbers. The first three parts of the IP address of all network components are in this case always the same.

Switch

A switch is a central distributor in a wired network, which, unlike a hub, provides intelligent distribution of data transfer. The switch only ever forwards a data packet to the subnet or network component the data packet is intended for. Unnecessary transfer of data in the network thus avoided.

TAE

Telecommunications connecting unit (German: **Telekommunikations-Anschlusseinheit**). Connector for connecting analogue telecommunications devices. F for phone, N for additional devices such as fax or answer machines.

TCP

Transmission Control Protocol. TCP is part of the [TCP/IP](#) protocol family. TCP handles data transport between communication partners (applications). TCP is a session-based transmission protocol, i.e. it sets up, monitors and terminates a connection for transporting data.

TCP/IP

Transmission Control Protocol/Internet Protocol. Protocol family on which the Internet is based. IP forms the basis of each PC to PC connection. [TCP](#) provides applications with a reliable transmission link in the form of a continuous data stream. TCP/IP is the basis on which services such as WWW, Mail and News are built. There are other protocols as well. In order to access the Internet from a PC, TCP/IP must be set up on the PC.

Uplink

Data that your Gigaset SX682 WiMAX forwards from your PC or local network to external sites (e.g. to the Internet).

URL

Universal Resource Locator. Globally unique address of a domain on the Internet, e.g. <http://www.siemens.com>.

VoIP

Voice over Internet Protocol; voice transmission via the Internet (Internet telephony).

WAN

Wide Area Network. A WAN is a network that is not restricted to one particular area, such as the Internet. A WAN is run by one or more public providers to enable private access. You access the Internet via a [Provider](#).

Index

- A**
- Address Translation 60
 - Administration. 30
 - system password 30
 - Antenna
 - aligning precisely 29
 - integrated 14
 - Siemens outdoor antenna 15
 - Appendix. 40
 - CE declaration 57
 - putting into service 57
 - specifications 56
 - troubleshooting 40
- B**
- Bridge 60
- C**
- Care 5
 - Checking connection 43
 - Cleaning 5
 - Configuration 20
 - administration 30
 - aligning antenna precisely 29
 - connection wizard 26
 - Home. 25
 - menu structure 24
 - opening online Help. 24
 - setting the language 24
 - status. 32
 - Connecting 16
 - answer machine. 17
 - fax machine 17
 - PC 16
 - Siemens outdoor antenna 16
 - telephone 17
 - Connection wizard. 26
 - establishing a radio connection . . . 26
 - Connectors 10
- D**
- dB 60
 - dBm 60
- Device status 36**
- DHCP 47, 60
 - DHCP server 60
 - Disposal 6
 - Disposal (Switzerland) 5
 - DNS 61
 - Domain name 61
 - Downlink 61
 - DSL 61
- E**
- Establishing a radio connection 26
 - Ethernet. 61
- F**
- Factory settings 19
 - Faxing 38
 - Firewall 61
 - Firmware 61
 - Flat rate 61
 - Free software 58
 - FTP. 62
 - Full duplex 62
 - FXS 62
- G**
- Gateway. 62
- H**
- Half duplex 62
 - Home. 25
 - HTTP 62
 - HTTP proxy. 62
 - Firefox 45
 - Internet Explorer. 44
 - setting up 44
 - Hub 62
- I**
- IEEE 62
 - IEEE 802.16 63
 - Installation
 - connecting 16

- location 13
- PC 16
- resetting 19
- restarting 19
- switching on 18
- system requirements 15
- Installing 13
- Internet telephony 63
- IP 63
- IP address 20, 63
 - dynamic 63
 - private 63
 - public 63
 - static 63
- IPTV 64
- ISP 64

- J
- Java
 - allowing 45
 - Firefox 45
 - Internet Explorer 45
- JavaScript
 - allowing 45
 - Firefox 45
 - Internet Explorer 45

- L
- LAN 64
- LED 64
- LEDs
 - overview 11
 - startup 18
- Location 13
- Login 64

- M
- MAC address 64
- Making calls 38
 - calling 39
 - receiving calls 39
- Mbps 64
- Menu structure 24

- N
- NAT 60
- Network 64
 - Network adapter 64
 - Network protocol 65
 - Network settings
 - adjusting 47
 - DHCP 47

- O
- Opening online Help 24

- P
- Password
 - forgotten 41
- PC
 - network settings 47
- ping command 43
- Pop-up blocker
 - Firefox 46
 - Internet Explorer 46
- Pop-up window 46
 - Firefox 46
 - Internet Explorer 46
- Product features 10
- Product overview 10
- Protocol 65
- Provider 65
- Putting into service 38

- Q
- QoS 65

- R
- Radio status 37
- Resetting 19
- Restarting 19
- RJ 65
- Router 65
- RSSI 65

- S
- Safety 5
 - disposal (Switzerland) 5
- Safety precautions 5
- Security
 - disposal 6
 - safety precautions 5
- Server 65

Index

| | | | |
|-----------------------------------|----|------------------------------------|--------|
| Setting the language | 24 | Uplink | 66 |
| Siemens outdoor antenna | 15 | URL | 66 |
| SIP | 65 | User interface | 21, 24 |
| SMTP | 66 | connection wizard | 26 |
| Specifications | 56 | Home | 25 |
| Start screen | 25 | menu structure | 24 |
| Status | 32 | opening online Help | 24 |
| device | 36 | setting the language | 24 |
| Internet | 34 | | |
| LAN | 35 | V | |
| local network | 35 | VoIP | 38, 67 |
| radio status | 37 | | |
| telephony | 35 | W | |
| Subnet | 66 | WAN | 67 |
| Subnet mask | 66 | Web browser | |
| Switch | 66 | configuring | 44 |
| Switching on | 18 | HTTP proxy | 44 |
| System password | 30 | Java | 45 |
| forgotten | 41 | JavaScript | 45 |
| System requirements | 15 | launching user interface | 20 |
| | | menu structure | 24 |
| T | | pop-up window | 46 |
| TAE | 66 | UI elements | 22 |
| TCP | 66 | user interface | 21 |
| TCP/IP | 66 | WiMAX | 9 |
| Trademarks | 5 | Windows 2000 | |
| Troubleshooting | 40 | activating DHCP | 54 |
| customer service | 42 | Windows Vista | |
| fault tracing | 40 | activating DHCP | 48 |
| other faults | 41 | Windows XP Home | |
| | | activating DHCP | 51 |
| U | | | |
| UI elements | 22 | | |

Safety and Certifications - Important Information about the Gigaset SE681 WiMAX / Gigaset SX682 WiMAX

Installation and Safe Usage Instructions

1. Place the Gigaset DSL gateway in a horizontal orientation on a flat surface.
2. Connect the manufacturer supplied AC to DC power adapter.
The Gigaset SE681 WiMAX / Gigaset SX682 WiMAX requires the use of a 9 VDC, 1.0 A power adapter. Only use a manufacturer supplied and approved power adapter.
3. Connect the Ethernet cable (provided) to an RJ45 port on the Gigaset DSL Gateway labeled "Ethernet". Then connect the other end of the Ethernet Cable then to the Ethernet port of a computer. Repeat as necessary for the available Ethernet ports.
4. If a USB port is available, connect the "B" end of the provided USB cable to the port on the Gigaset DSL Gateway labeled "USB". Then connect the "A" end of the USB Cable to the USB host port of a computer.
5. Connect the provided DSL Cable to the port on the Gigaset DSL Gateway labeled "DSL". Connect the other end of the DSL Cable to a standard Phone Jack.
Always use a DSL cable with a minimum wire gauge of 26AWG (0.4 mm dia. or 0.129 mm²).
6. If using a USB port, use the Gigaset CD to configure the computer's USB connection.

Power Outage: In the event of a power outage, Gigaset SE681 WiMAX / Gigaset SX682 WiMAX will not operate. You should have a telephone that does not require electricity available for use during power outages.

When using this device, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons including the following:

1. Do not use this product near water and avoid contact with moisture. For example, do not use near a bathtub, wash bowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool. Care should be taken so that liquids are not spilled on this equipment.
2. Never insert objects into the vents of this equipment as this can result in the risk of electrical shock or fire.
3. This equipment should only be operated with the power supply provided with the product.
4. Do not overload wall outlets or extension cords. Doing so can result in the risk of fire or electrical shock.
5. Avoid blocking any vent openings or exhaust exits on this equipment. Do not place equipment in a built-in installation such as a cabinet that may impede the flow of air through the ventilation openings.
6. The equipment should be situated away from heat sources such as radiators, heat registers, stoves, or other heat producing appliances and equipment.
7. Care should be taken to ensure that the power cord is routed, so it is not likely to be walked on or pinched by items placed upon or next to it.
8. Unplug this equipment before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning only.
9. This equipment is not user serviceable and is to be serviced by qualified personnel only. Do not disassemble this equipment. If service is required, disconnect all power and phones lines from the equipment and consult qualified service personnel.

Save these Instructions!

Federal Communications Commission (FCC) Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Radio Exposure Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The installation of the base unit should allow at least 8 inches between the base and persons to be in compliance with FCC RF exposure guidelines.

Modifications

You are cautioned that charges or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Issued by
Siemens Home and Office Communication Devices GmbH & Co. KG
Schlavenhorst 66
D-46395 Bocholt

© Siemens Home and Office Communication Devices GmbH & Co. KG 2008
All rights reserved. Subject to availability.
Rights of modification reserved.

www.siemens.com/gigaset

Gigaset SX682 WiMAX USA 07.2008