

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 1/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

USER MANUAL

EZD-LICPA23

EZS-LICPA37

May 11, 2018

GS Instech Co., Ltd.

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 2/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

[CHANGE RECORD]

DATE	NAMES	DESCRIPTIONS	VERSION	REMARK
May 11, 2018	H.J.CHOI	Original Draft	0.1	

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 3/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

[TABLE OF CONTENTS]

CHAPTER's INDEX

1.	GENERAL.....	6
1.1.	Purpose.....	6
1.2.	Copyright.....	6
1.3.	FCC Warning Statements.....	7
2.	INTRODUCTION	10
2.1.	System Overview	10
2.2.	Main Features	11
3.	SYSTEM DESIGN FOR EZD-LICPA23 (DONOR UNIT).....	12
3.1.	Exterior View.....	12
3.2.	Interior View	13
3.3.	External Interface	14
3.4.	FCC Statement	15
4.	SYSTEM DESIGN FOR EZS-LICPA37 (SERVICE UNIT)	16
4.1.	Exterior View.....	16
4.2.	Interior View	17
4.3.	External Interface	18
4.4.	FCC Statement.....	19

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 4/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

5.	SYSTEM SPECIFICATION	20
5.1.	RF Performance	20
5.2.	Frequency Information	22
5.2.1.	700MHz	22
5.2.2.	800/850M	23
5.2.3.	1900M	24
5.2.4.	2100M	25
5.3.	Configuration & Mechanical Specification	26
6.	SYSTEM BLOCK CONFIGURATION	27
6.1.	Block Diagram	27
7.	GUI OVERVIEW	29
7.1.	Configuration the Laptop to Connect to the Repeater	29
7.2.	Login-In Screen	30
7.3.	Main Screen	31
7.4.	RF Status	32
7.5.	RF Configuration	33
7.6.	Band Selection.....	34
8.	SYSTEM INSTALLATION	35
8.1.	Warnings and Hazards	36
8.1.1.	Electric Shock	36
8.1.2.	Exposure to RF	36
8.2.	Service Man Installation Guide.....	37
8.2.1.	Wall Mount Installation.....	37
8.3.	Cable Connection.....	39

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 5/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

8.3.1.	AC Power cable connection.....	39
8.3.2.	Local Maintenance Connection.....	40
8.3.3.	Grounding cable Connection.....	40

FIGURE's INDEX

FIGURE 1.	FCC/ UL CERTIFICATION STATEMENT.....	7
FIGURE 2.	EZ-DAS APPLICATION CONFIGURATIONS.....	10
FIGURE 3.	EZD-LICPA23 EXTERIOR VIEW.....	12
FIGURE 4.	EZD-LICPA23 INTERIOR VIEW.....	13
FIGURE 5.	EZD-LICPA23 EXTERNAL INTERFACE.....	14
FIGURE 6.	EZD-LICPA23 UNIT FCC STATEMENT.....	15
FIGURE 6.	EZS-LICPA37 EXTERIOR VIEW.....	16
FIGURE 7.	EZS-LICPA37 INTERIOR VIEW.....	17
FIGURE 9.	EZS-LICPA37 EXTERNAL INTERFACE.....	18
FIGURE 10.	EZS-LICPA37 UNIT FCC STATEMENT.....	19
FIGURE 11.	EZD-LICPA23 BLOCK DIAGRAM CONFIGURATION.....	27
FIGURE 12.	EZS-LICPA37 BLOCK DIAGRAM CONFIGURATION.....	28
FIGURE 13.	THE WAY TO FIX THE BRACKET ON THE POLE (NORMAL TYPE).....	37
FIGURE 14.	THE WAY TO FIX FIRMLY THE SYSTEM FOR POLE MOUNTING.....	38

TABLE's INDEX

TABLE 1.	EZD-LICPA23 UNIT CONFIGURATION.....	13
TABLE 2.	EZ-DSAD-LICPA02 EXTERNAL INTERFACE DESCRIPTION.....	14
TABLE 3.	EZ-DSAS-LICPA37 UNIT CONFIGURATION.....	17
TABLE 4.	EZS-LICPA37 EXTERNAL INTERFACE DESCRIPTION.....	18
TABLE 5.	EZ-DAS RF PERFORMANCE DESCRIPTION.....	21
TABLE 6.	EZ-DAS 700MHZ OPERATING FREQUENCY INFORMATION.....	22
TABLE 7.	EZ-DAS 800/850MHZ OPERATING FREQUENCY INFORMATION FOR CDMA.....	23
TABLE 8.	EZ-DAS 800/850MHZ OPERATING FREQUENCY INFORMATION FOR LTE.....	23
TABLE 9.	EZ-DAS 1900MHZ OPERATING FREQUENCY INFORMATION FOR CDMA.....	24
TABLE 10.	EZ-DAS 1900MHZ OPERATING FREQUENCY INFORMATION FOR LTE.....	24
TABLE 11.	EZ-DAS 2100MHZ OPERATING FREQUENCY INFORMATION.....	25
TABLE 12.	EZ-DAS CONFIGURATION & MECHANICAL SPECIFICATION.....	26
TABLE 13.	EZ-DAS INSTALLATION ACCESSORIES.....	35

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 6/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

1. General

1.1. Purpose

This document introduces features, specifications, structures and operation guideline for the EZD-LICPA23/ EZS-LICPA37.

1.2. Copyright

All text and image in this document are subject to the copyright of GS Instech Co., Ltd.

This document may not be reproduced, distributed, or modified without the written permission of GS Instech Co., Ltd.

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 7/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

1.3. FCC Warning Statements

FCC Warning Statement for system is follows. Must attach the label under manufacturing.

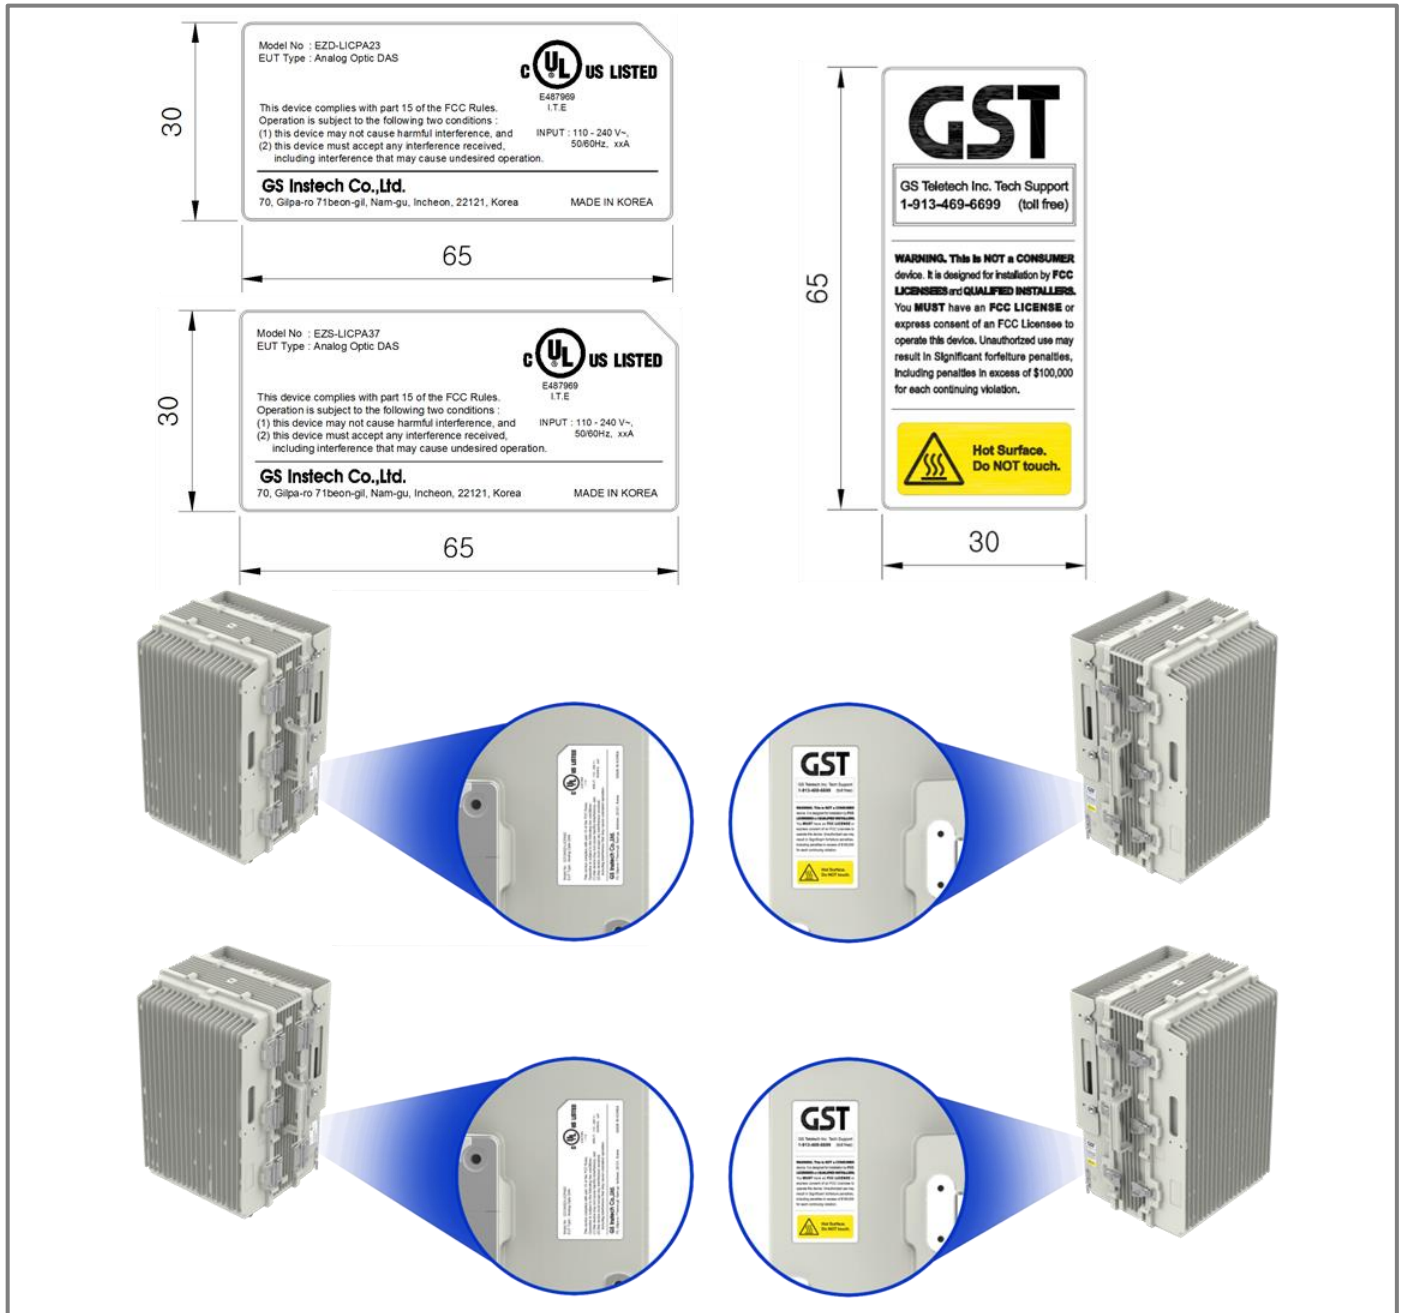


Figure 1.FCC/ UL Certification Statement

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 8/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

FCC Part 15.105 statement (Class A)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Part 15.21 statement

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

- Home/ personal use are prohibited
- Use of unauthorized antennas, cables, and/or coupling devices not conforming with ERP/EIRP and/or indoor-only restrictions is prohibited

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 9/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

RF Radiation Exposure

This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. RF exposure will be addressed at time of installation and the use of higher gain antennas may require larger separation distances.

Antenna installation

Antennas must be installed in accordance with FCC 27.50, 24. The height of the antenna above average terrain (HAAT) must not exceed limit in the following table.

Type	Model name(s)	HAAT (m)	Antenna again
SU	EZ-DASS-L37	11 337.60	3dBi
	EZ-DASS-L30	25 313.42	3dBi
	EZ-DASS-IC37	4 293.78	3dBi
	EZ-DASS-IC30	9 534.59	3dBi
	EZ-DASS-P37	2 749.43	7dBi
	EZ-DASS-P30	6 135.58	7dBi
	EZ-DASS-A39	5 725.41	7dBi
	EZ-DASS-A32	13 003.80	7dBi
DU	EZ-DASD-L23	14 408.20	15dBi
	EZ-DASD-IC23	5 360.99	15dBi
	EZ-DASD-P23	3 799.80	18dBi
	EZ-DASD-A23	10 151.20	18dBi

WARNING. THIS is NOT a CONSUMER device. It is designed for installation by FCC LICENSEES and QUALIFIED INSTALLERS. You MUST have an FCC LICENSE or express consent of an FCC Licenses to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 10/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

2. Introduction

2.1. System Overview

EZ-DAS is designed to improve coverage and capacity of Commercial Quad Band.

Either feeding Carrier BTS signal directly or receiving signal via antenna, it provides coverage

Building in RF shadow.

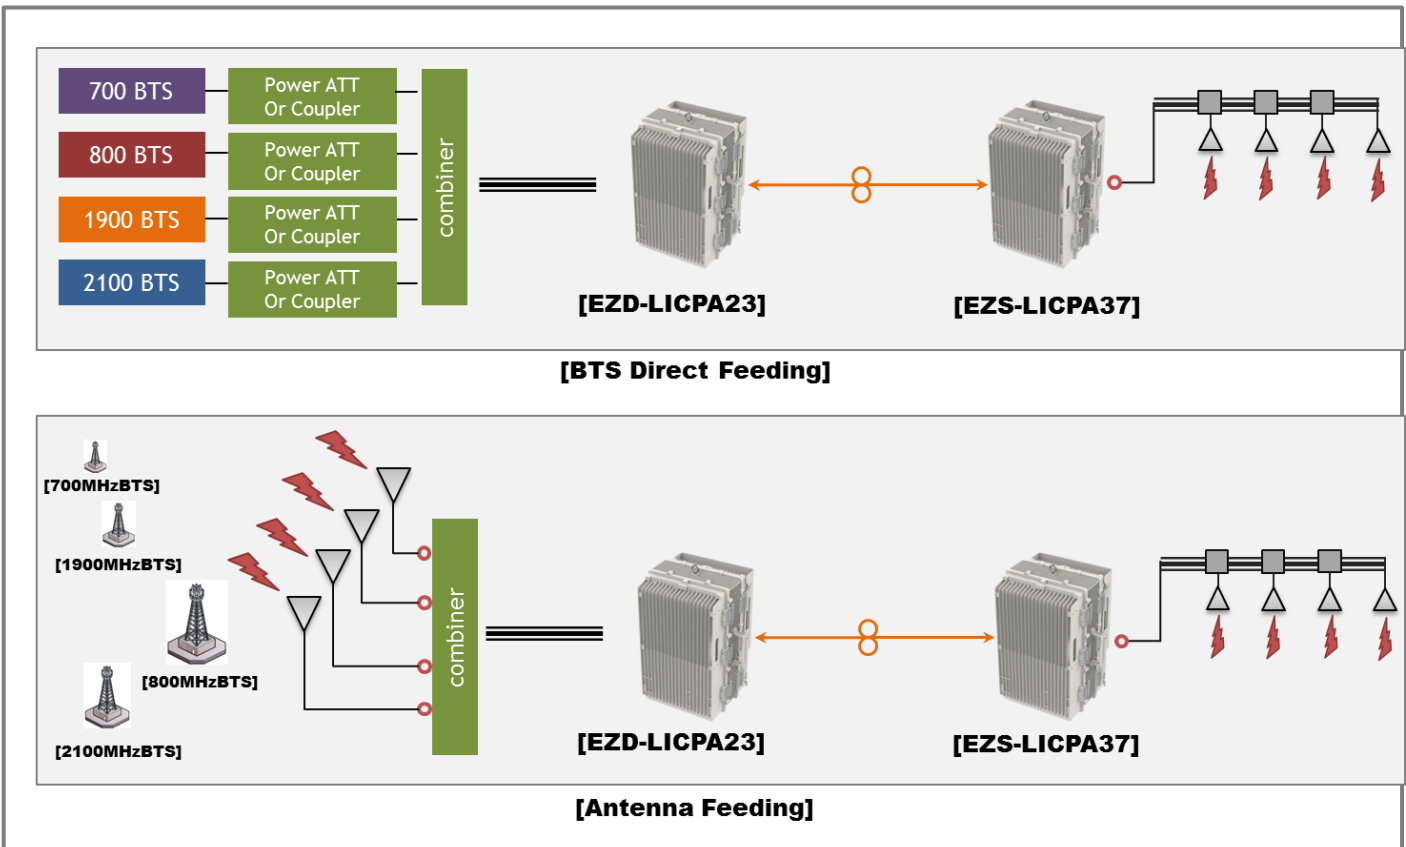


Figure 2.EZ-DAS Application Configurations

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 11/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

2.2. Main Features

- All-in One Donor Unit
 - Compose several units such as Optic Transceiver, NMS, PSU, BDA, Cavity Filter etc.
 - Convenient to install in Middle Size Building with proper cost of one set
- Support the BTS or Antenna Feeding Solution
 - Either feeding Carrier BTS Signal directly or receiving signal via Antenna
 - With built-in BDA(Bi-Directional Amplifier) function, it is possible to use under Antenna feeding condition
- Choose the Filtering Methods accord to the operating condition
 - For Neutral Host installations, able to support the Full Band Filtering
- Improving Service Quality under Multi-Carriers Area
 - Up to 6 Non-Contiguous block and gain per block based on Downlink Input Topologies
 - Dealing with Near-far & Uplink Noise Floor Rise
- Topologies
 - 1:4 Branches between Donor Unit and Service Unit.
 - 3 Daisy Chain is possible with Daisy Chain Optic Unit.
- Supporting Technologies
 - CDMA, LTE
- Supporting Frequencies
 - Commercial Quad band (700M, 800+850M, 1900M, 2100M)
- Supporting Output Power
 - Composite 4W with EZ-DASS-LICPA 30 (1W per Band)
 - Composite 20W with EZ-DASS-LICPA 37 (5W per Band)
- Functions
 - Support AGC, ALC, AGA with LLA(Low Limit ALC), ASD
- FCC Part 22, 24,27,90 & Part 15B class A

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 12/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

3. System Design for EZD-LICPA23 (Donor Unit)

3.1. Exterior View

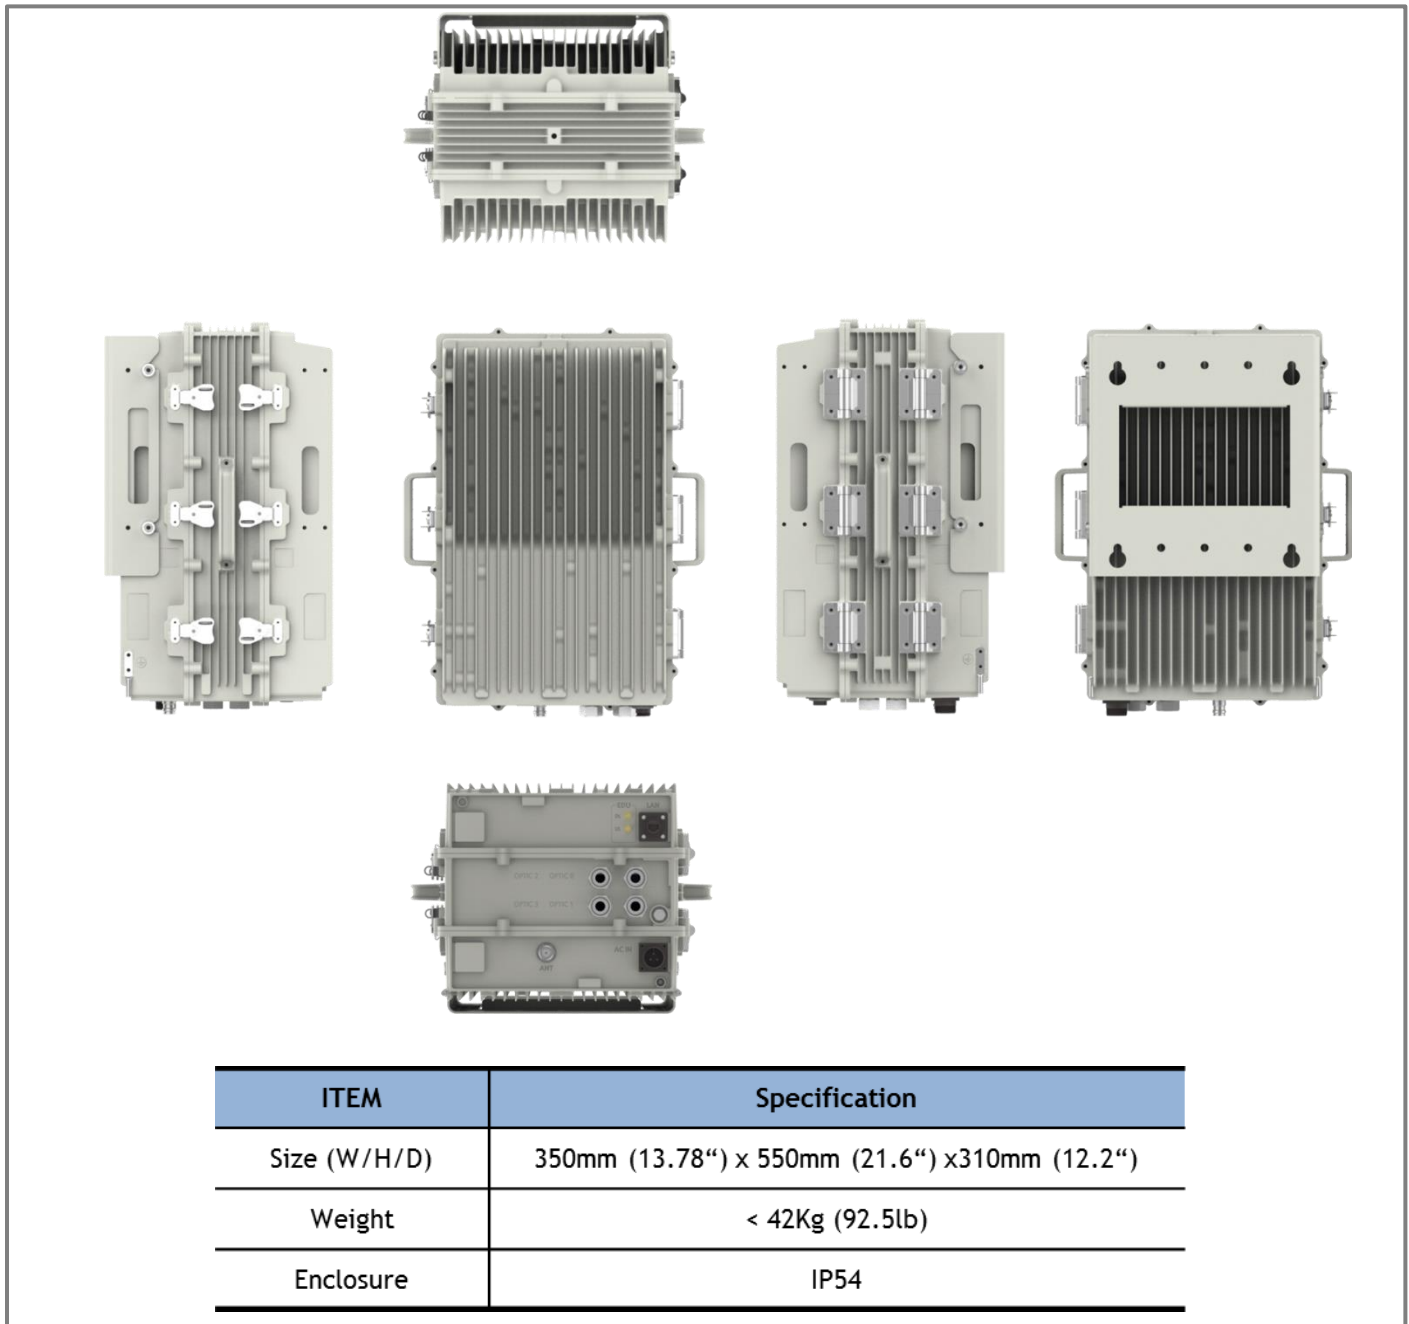


Figure 3. EZD-LICPA23 Exterior View

<u>Version</u>	<u>Date</u>	<u>Page</u>
0.1	May 11, 2018	13/ 41
<u>Title</u>	<u>Prepared by</u>	<u>Reviewed by</u>
USER MANUAL		

3.2. Interior View

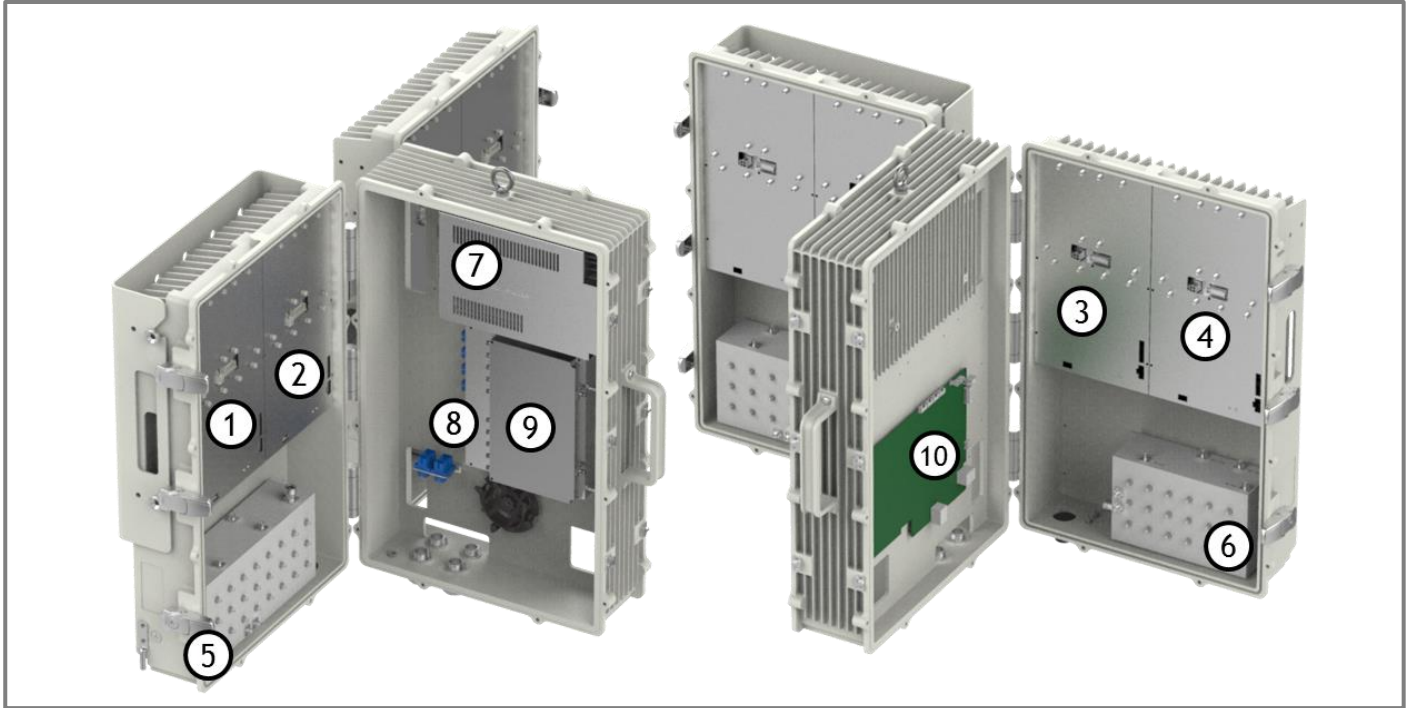


Figure 4. EZD-LICPA23 Interior View

No	Name	Remark
1	EZ-DASD-IC23	800/850MHz RF Digital Filter Unit
2	EZ-DASD-P23	1900MHz RF Digital Filter Unit
3	EZ-DASD-L23	700MHz RF Digital Filter Unit
4	EZ-DASD-A23	2100MHz RF Digital Filter Unit
5	Cavity Filter	Quadplexer for 800/850M & 1900M/ 700M+2100M Band Combiner
6	Cavity Filter	Quadplexer for 700M & 2100M
7	PSU	AC Input Voltage: 110VAC~240VAC(60Hz)/ DC Output Voltage: +6V
8	DOU	Donor Optic Unit (4Port)
9	RCDU-5W	5Way RF Channel Distribute Unit
10	SNMP Board	Apply for Web-UI/ Communicate with Service Unit

Table 1. EZD-LICPA23 Unit Configuration

<u>Version</u>	<u>Date</u>	<u>Page</u>
0.1	May 11, 2018	14/ 41
<u>Title</u>	<u>Prepared by</u>	<u>Reviewed by</u>
USER MANUAL		<u>Approved by</u>

3.3. External Interface

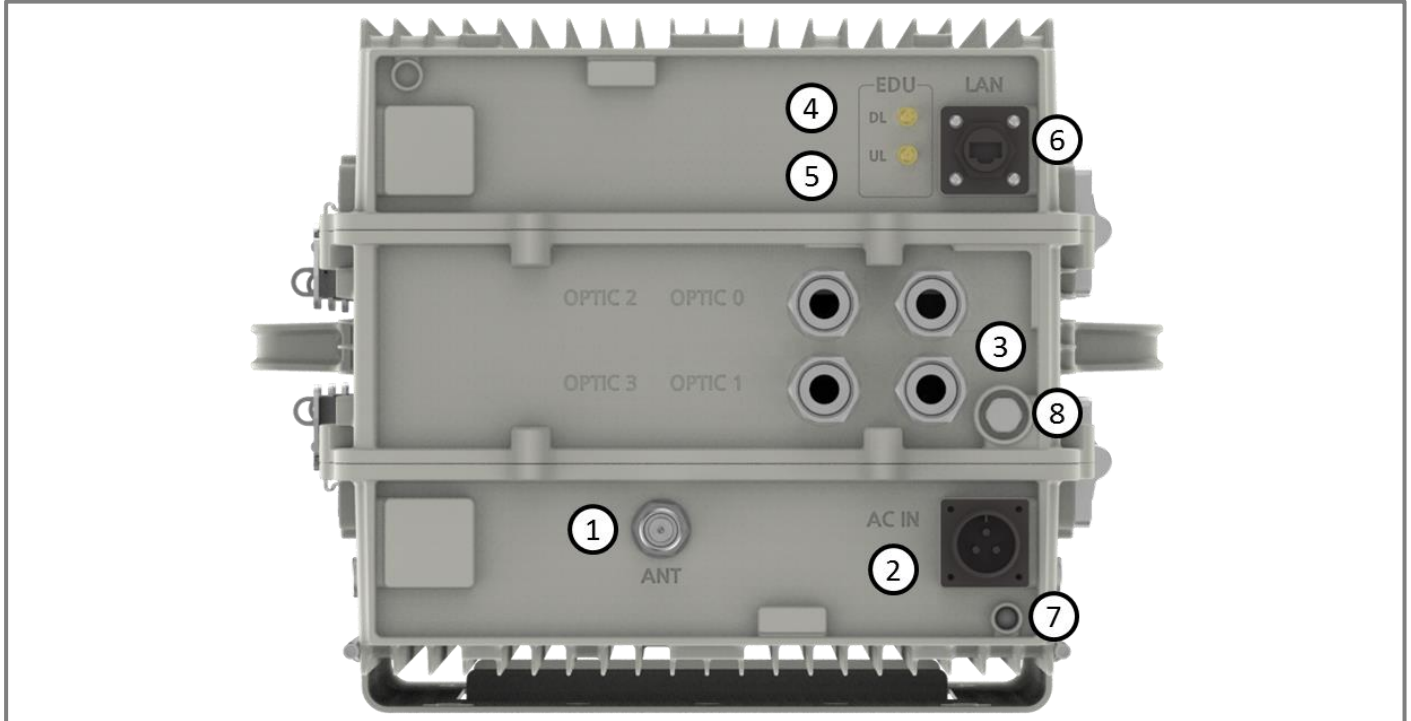


Figure 5. EZD-LICPA23 External Interface

No	NAMES	DESCRIPTION	SPECIFICATION
1	ANT	Feeding Downlink Signal / Transmit Uplink Output	4.3-10 Din Connector
2	AC IN	AC Input Outlet	MS3102A 22-2
3	OPTIC0~3	Insert the optic cable to Service Unit	Metal Cable Gland
4	EDU RF DL	Receive a Downlink RF Signal from EDU (Wire only)	SMA(F)
5	EDU RF UL	Transmit a uplink RF Signal to EDU (Wire only)	SMA(F)
6	LAN	Communicate a data between MDU & EDU or Server	RJ-45
7	LED	System Total Alarm Indication	General Performance
8	Vent-Core	Maintain Humidity & Temp Inside	IP66

Table 2. EZ-DSAD-LICPA02 External Interface Description

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 15/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

3.4. FCC Statement

Model No : EZ-DASD-A23
FCC ID : U88-EZDASD-A23
EUT Type: Analog Optic DAS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING. This is NOT a CONSUMER device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an **FCC Licensee** to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

Serial No :
[Barcode]

Model No : EZ-DASD-P23
FCC ID : U88-EZDASD-P23
EUT Type: Analog Optic DAS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING. This is NOT a CONSUMER device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an **FCC Licensee** to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

Serial No :
[Barcode]

Model No : EZ-DASD-IC23
FCC ID : U88-EZDASD-C23
EUT Type: Analog Optic DAS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING. This is NOT a CONSUMER device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an **FCC Licensee** to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

Serial No :
[Barcode]

Model No : EZ-DASD-L23
FCC ID : U88-EZDASD-L23
EUT Type: Analog Optic DAS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING. This is NOT a CONSUMER device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an **FCC Licensee** to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

Serial No :
[Barcode]

← 55mm →

↑ 45mm ↓

Figure 6. EZD-LICPA23 UNIT FCC Statement

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 16/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

4. System Design for EZS-LICPA37 (Service Unit)

4.1. Exterior View

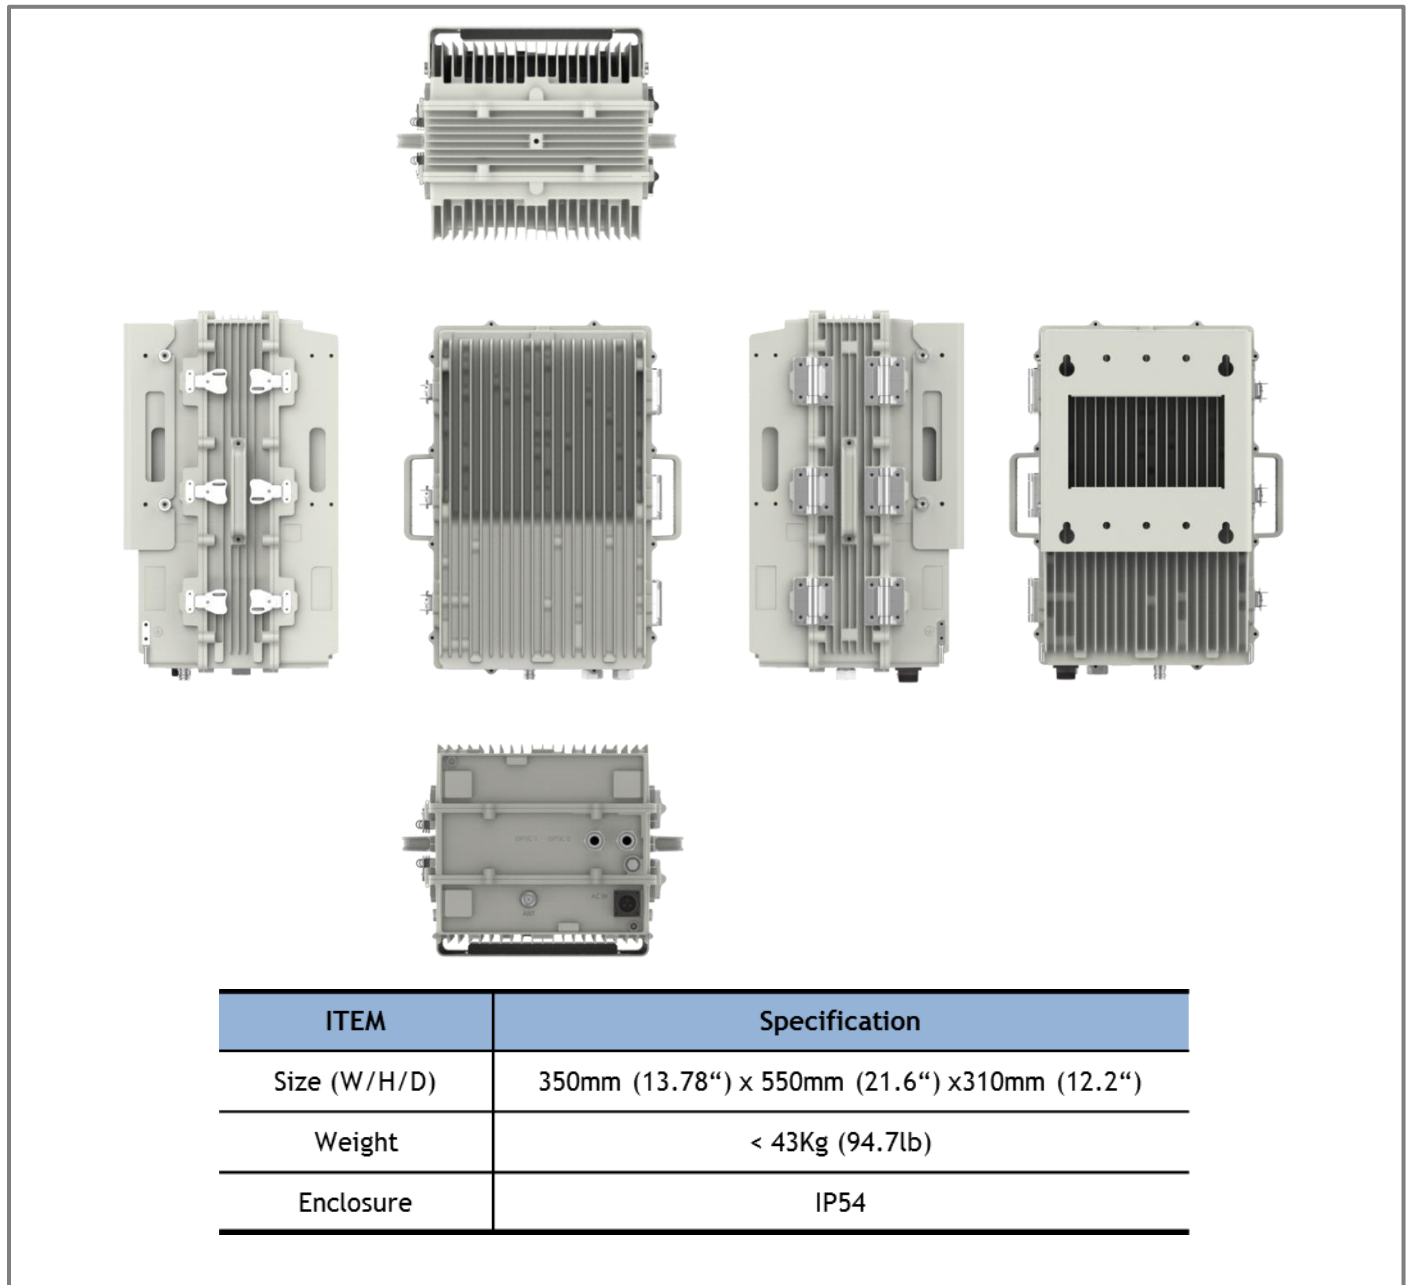


Figure 7. EZS-LICPA37 Exterior View

<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 17/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>
		<u>Approved by</u>

4.2. Interior View

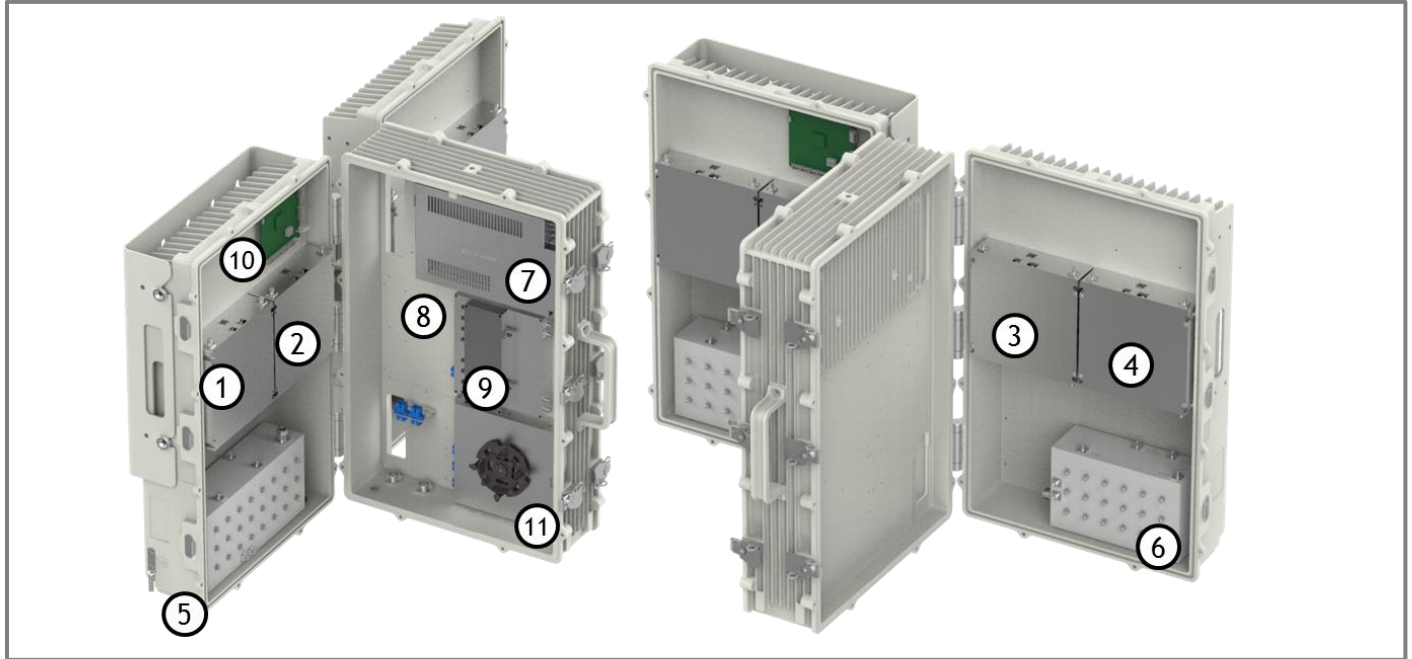


Figure 8. EZS-LICPA37 Interior View

No	Name	Remark
1	EZ-DASS-IC37	800/850MHz RF Power Amp Unit
2	EZ-DASS-P37	1900MHz RF Power Amp Unit
3	EZ-DASS-L37	700MHz RF Power Amp Unit
4	EZ-DASS-A39	2100MHz RF Power Amp Unit
5	Cavity Filter	Quadplexer for 800/850M & 1900M/ 700M+2100M Band Combiner
6	Cavity Filter	Quadplexer for 700M & 2100M
7	PSU	AC Input Voltage: 110VAC~240VAC(60Hz)/ DC Output Voltage: +6V/ +29V
8	SOU	Service Optic Unit
9	RCDU-4W	4Way RF Channel Distribute Unit
10	NMS Board	Apply for GUI/ Communicate with Donor Unit
11	DCO	Daisy Chain Optic Unit/ For SU Cascade Application

Table 3. EZ-DSAS-LICPA37 Unit Configuration

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 18/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

4.3. External Interface

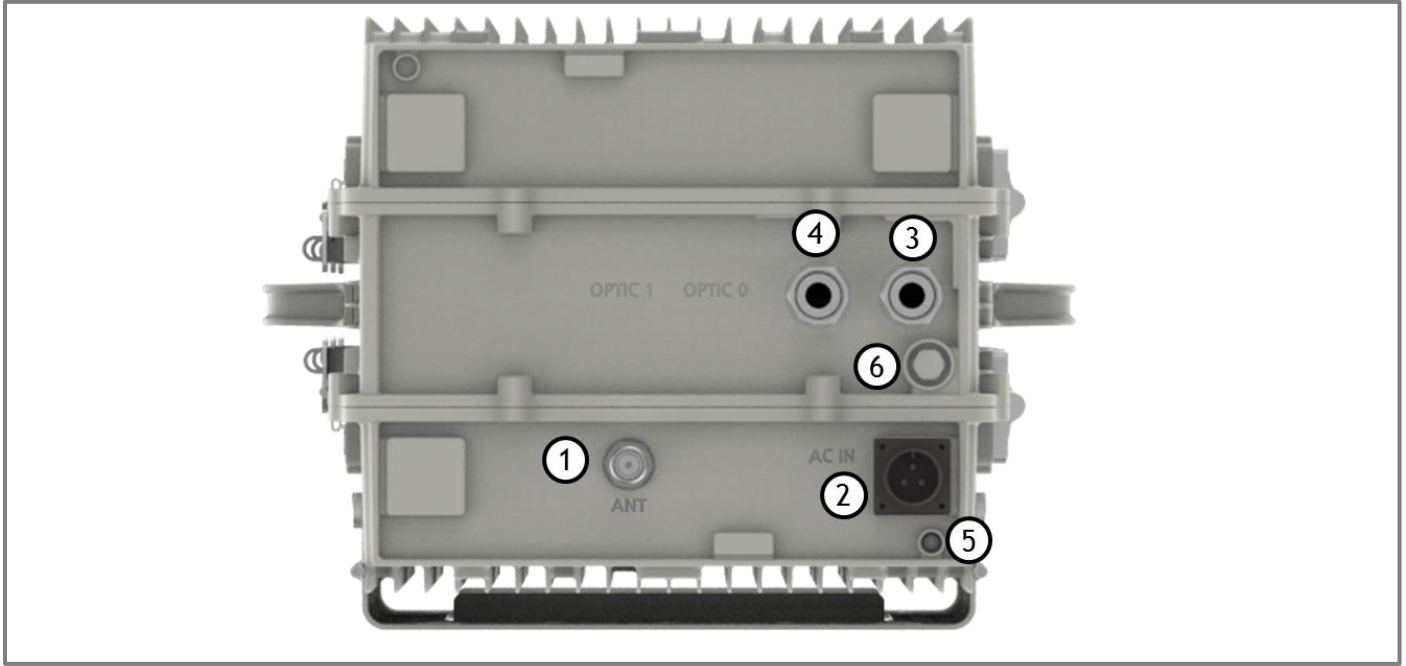


Figure 9. EZS-LICPA37 External Interface

No	NAMES	DESCRIPTION	SPECIFICATION
1	ANT	Feeding Uplink Signal / Transmit Downlink Output	4.3-10 Din Connector
2	AC IN	AC Input Outlet	MS3102A 22-2
3	OPTIC0	Insert the optic cable to Donor Unit	Metal Cable Gland
4	OPTIC1	Insert the optic cable to Next SU for Daisy Chain	Metal Cable Gland
5	LED	System Total Alarm Indication	General Performance
6	Vent-Core	Maintain Humidity & Temp Inside	IP66

Table 4. EZS-LICPA37 External Interface Description

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 19/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

4.4. FCC Statement

Model No : EZ-DASS-A39
FCC ID : U88-EZDASS-A39
EUT Type : Analog Optic DAS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING. This is NOT a CONSUMER device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an **FCC Licensee** to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

Serial No :
[Barcode]

Model No : EZ-DASS-P37
FCC ID : U88-EZDASS-P37
EUT Type : Analog Optic DAS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING. This is NOT a CONSUMER device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an **FCC Licensee** to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

Serial No :
[Barcode]

Model No : EZ-DASS-ICT37
FCC ID : U88-EZDASS-C37
EUT Type : Analog Optic DAS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING. This is NOT a CONSUMER device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an **FCC Licensee** to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

Serial No :
[Barcode]

Model No : EZ-DASS-L37
FCC ID : U88-EZDASS-L37
EUT Type : Analog Optic DAS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions :
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING. This is NOT a CONSUMER device. It is designed for installation by **FCC LICENSEES** and **QUALIFIED INSTALLERS**. You **MUST** have an **FCC LICENSE** or express consent of an **FCC Licensee** to operate this device. Unauthorized use may result in significant forfeiture penalties, including penalties in excess of \$100,000 for each continuing violation.

Serial No :
[Barcode]

← 55mm →

↑ 45mm ↓

Figure 10. EZS-LICPA37 UNIT FCC Statement

<u>Version</u>	<u>Date</u>	<u>Page</u>
0.1	May 11, 2018	20/ 41
<u>Title</u>	<u>Prepared by</u>	<u>Reviewed by</u>
USER MANUAL		
		<u>Approved by</u>

5. System Specification

5.1. RF Performance

Parameter	Down Link	Up Link	Remark
Frequency Range	728MHz~756MHz	698MHz~716MHz/ 777MHz~787MHz	700MHz
	862MHz~894MHz	817MHz~849MHz	800/850MHz
	1930MHz~1995MHz	1850MHz~1915MHz	1900MHz
	2110MHz~2180MHz	1710MHz~1755MHz	2100MHz
Input Range	-60dBm ~ -30dBm/ Total	-74dBm	Per Band
Output Power	+37dBm with EZS-LICPA37	+23dBm(0.2W) With EZD-LICPA23	700M
	+37dBm with EZS-LICPA37		800/850MHz
	+37dBm with EZS-LICPA37		1900M
	+39dBm with EZS-LICPA37		2100M
Channel Capacity	【CDMA】 15MHz max/ 1.25MHz Step		
	【LTE】 5M, 10M, 20M		
Gain	Range	57dB ~ 97dB with EZS-LICPA37	ALC, AGC Included
	Adjust Step	1dB	
	Accuracy	±1dB	
Ripple	4dB p-p		
Roll off	> 50dBc @ Channel OBW ±1MHz		
Rho	≥ 0.912 (Rho)		For CDMA
EVM	< 4% for 256QAM	< 4% for 64QAM	For LTE

<u>Version</u>	<u>Date</u>	<u>Page</u>
0.1	May 11, 2018	21/ 41
<u>Title</u>	<u>Prepared by</u>	<u>Reviewed by</u>
USER MANUAL		
		<u>Approved by</u>


Parameter	Down Link	Up Link	Remark
Frequency Error	< 0.05ppm		
System Delay	< 5us		Exclude Fiber Optic Delay
Noise Figure	Less than 6dB @ Min & Max Gain		Only UL
VSWR	< 1.5 : 1		
OB Unwanted Emission	<-5.5dBm @50KHz ≤ Δf < 5.05MHz (RBW: 100KHz)		For LTE
	<-12.5dBm @5.05MHz ≤ Δf < 10.05MHz (RBW: 100KHz)		
	<-13dBm @10.5MHz ≤ Δf < 15MHz (RBW: 1MHz)		
ACLR	> 45dBc @ ±5MHz, ±10MHz, ±20MHz, ±40MHz		For LTE
Spurious Emission For CDMA	885 kHz	-45dBc with a 30KHz RBW	
	1.98 MHz	$P_{out} \geq 33dBm$; -55dBc with a 30KHz RBW	
		$28dBm \leq P_{out} < 33dBm$; -22dBm with a 30KHz RBW	
	2.25 MHz	-13dBm with a 30KHz RBW	
	4.0 MHz	-13dBm / 1 kHz: 9 kHz < f < 150 kHz	ITU category A
		-13dBm / 10 kHz: 150 kHz < f < 30 MHz	
		-13dBm/100 kHz: 30 MHz < f < 1 GHz	
		-13dBm / 1 MHz: 1 GHz < f < 12.75 GHz	

Table 5. EZ-DAS RF Performance Description

<u>Version</u>	<u>Date</u>	<u>Page</u>
0.1	May 11, 2018	22/ 41
<u>Title</u>	<u>Prepared by</u>	<u>Reviewed by</u>
USER MANUAL		
	<u>Approved by</u>	

5.2. Frequency Information

5.2.1. 700MHz

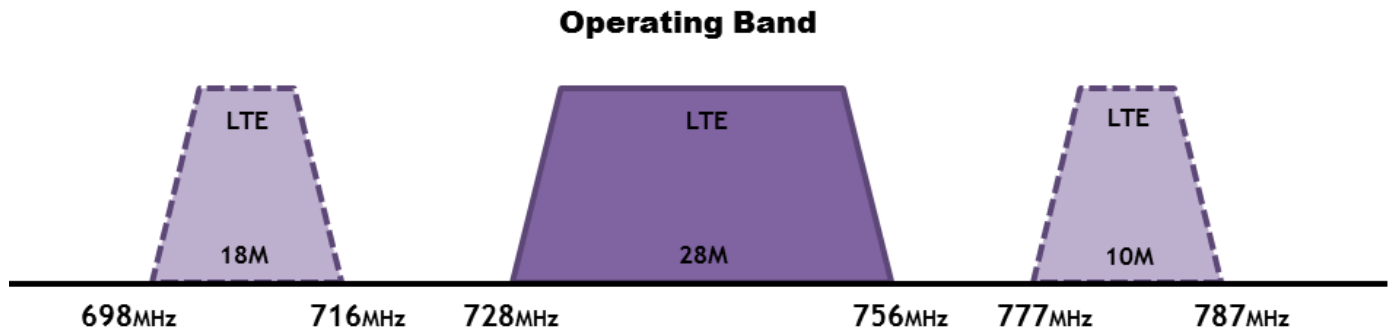

[LTE]


Block	Transmit frequency band (MHz)				Bandwidth UL / DL
	Uplink		Downlink		
LTE 10M	698	716	728	746	18 (Lower C)
	777	787	746	756	10 (Upper C)

Table 6. EZ-DAS 700MHz Operating Frequency Information

<u>Version</u>	<u>Date</u>	<u>Page</u>
0.1	May 11, 2018	23/ 41
<u>Title</u>	<u>Prepared by</u>	<u>Reviewed by</u>
USER MANUAL		
	<u>Approved by</u>	

5.2.2. 800/850MHz

Operating Band

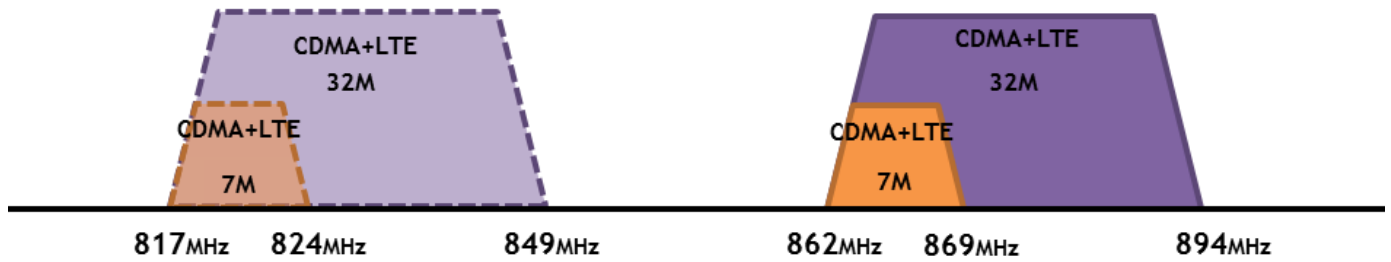

[CDMA]

Block	Transmit frequency band (MHz)				Bandwidth UL / DL
	Uplink		Downlink		
A1	824	835	869	880	11
B1	835	845	880	890	10
A2	845	846.5	890	891.5	1.5
B2	846.5	849	891.5	894	2.5

Table 7. EZ-DAS 800/850MHz Operating Frequency Information for CDMA

[LTE]


Block	Transmit frequency band (MHz)				Bandwidth UL / DL
	Uplink		Downlink		
LTE 5M	817	849	862	894	32

Table 8. EZ-DAS 800/850MHz Operating Frequency Information for LTE

<u>Version</u>	<u>Date</u>	<u>Page</u>
0.1	May 11, 2018	24/ 41
<u>Title</u>	<u>Prepared by</u>	<u>Reviewed by</u>
USER MANUAL		
	<u>Approved by</u>	

5.2.3. 1900MHz

Operating Band

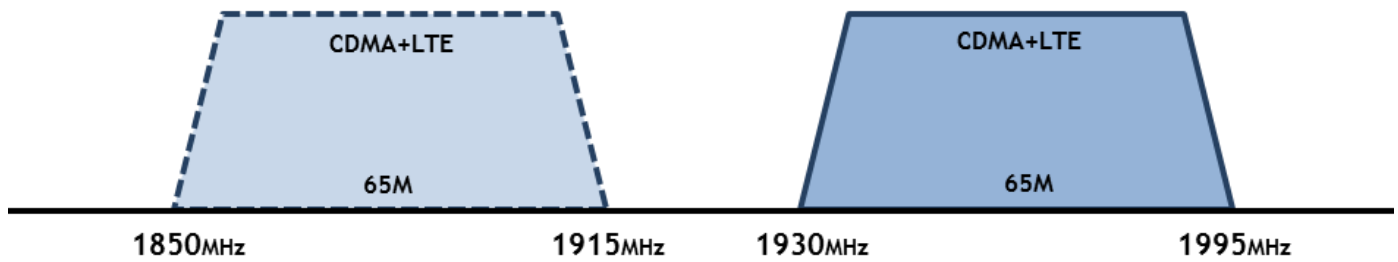

[CDMA]

Block	Transmit frequency band (MHz)				Bandwidth UL / DL
	Uplink		Downlink		
A	1850	1865	1930	1945	15
D	1865	1870	1945	1950	5
B	1870	1885	1950	1965	15
E	1885	1890	1965	1970	5
F	1890	1895	1970	1975	5
C	1895	1910	1975	1990	15

Table 9. EZ-DAS 1900MHz Operating Frequency Information for CDMA

[LTE]


Block	Transmit frequency band (MHz)				Bandwidth UL / DL
	Uplink		Downlink		
LTE 20M	1850	1915	1930	1995	65

Table 10. EZ-DAS 1900MHz Operating Frequency Information for LTE

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 25/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

5.2.4. 2100MHz

Operating Band

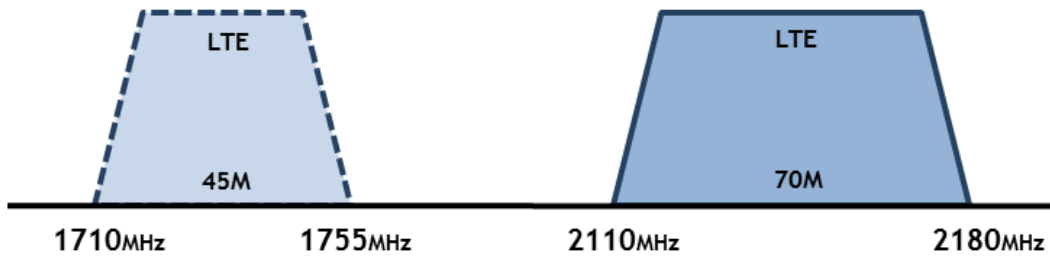

[LTE]

Block	Transmit frequency band (MHz)				Bandwidth UL / DL
	Downlink		Uplink		
LTE 10M	2110	2180	1710	1755	45M/ 70M

Table 11. EZ-DAS 2100MHz Operating Frequency Information

<u>Version</u>	<u>Date</u>	<u>Page</u>
0.1	May 11, 2018	26/ 41
<u>Title</u>	<u>Prepared by</u>	<u>Reviewed by</u>
USER MANUAL		<u>Approved by</u>

5.3. Configuration & Mechanical Specification

Parameter	Specification	Remark
Donor/ Service Antenna Filter	QUADPLEXER+BAND COMBINER	One port In/Output
Power Supply	AC Input Voltage: 110VAC~240VAC(60Hz)	Free Voltage
	DC Output Voltage: +6V	EZD-LICPA23
	DC Output Voltage: +6V/ +29V	EZS-LICPA37
Operation Temperature	-10°C~+50°C (100%RH)	
Storage Temperature	-10°C~+80°C (5~95%RH)	
Connectors	Antenna: 4.3-10 DIN Female	EZD-LICPA23
	AC: MS-3102A 22-2	EZS-LICPA37
	Optic Connection: Metal Cable Gland	
	EDU Connection: SMA Female(RF)/ MS3102A18-8(DATA)	EZD-LICPA23
Cable	1/2" Plenum-Rated Air-Dielectric Coaxial Cable	
Size	13.78" x 21.6" x 12.2" without Bracket	EZD-LICPA23
	13.78" x 21.6" x 12.2" without Bracket	EZS-LICPA37
Weigh	Less than 42kg (92.5lb) without Bracket	EZD-LICPA23
	Less than 43kg (94.7lb) without Bracket	EZS-LICPA37
Power Consumption	Less than 200W	EZD-LICPA23
	Less than 400W	EZS-LICPA37
Environment	IP54	
MTBF	100,000 hours or higher	
Grounding	nonferrous metal and anchoring point on bottom side	For RF and power cabling
Mount Application	Wall Mount	

Table 12. EZ-DAS Configuration & Mechanical Specification

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 27/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

6. System Block Configuration

6.1. Block Diagram

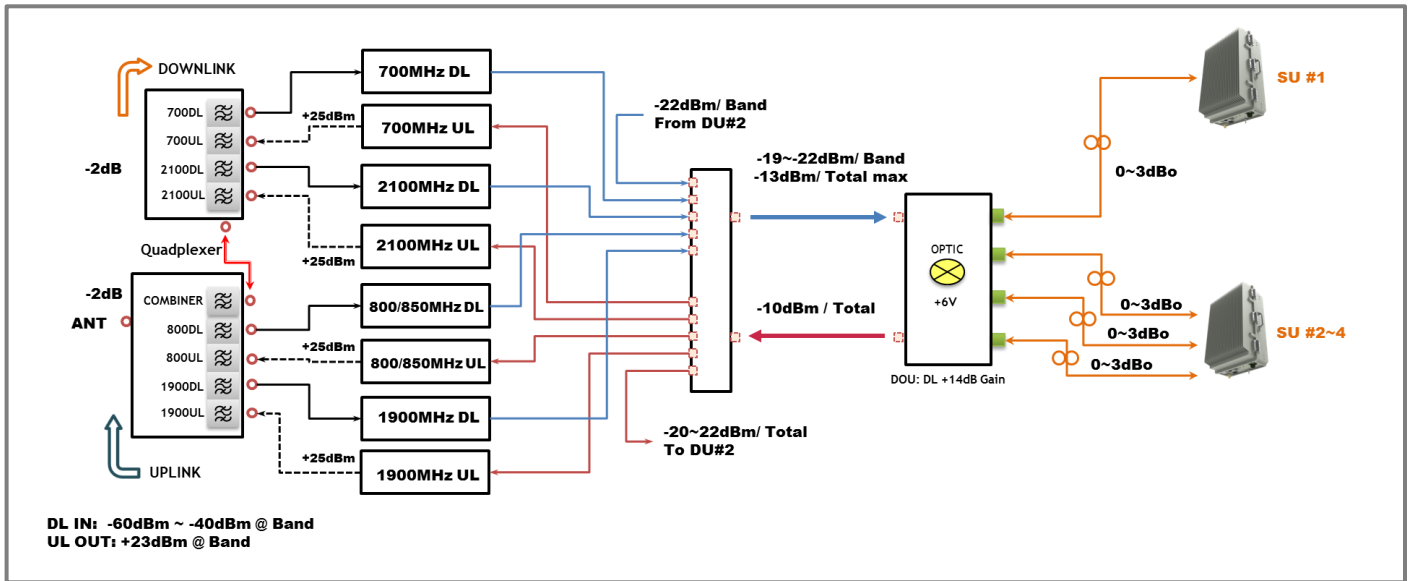


Figure 11. EZD-LICPA23 Block Diagram Configuration

The repeater improves service in the commercial Quad-Band.

User may select frequency band according to the site peculiarities.

After receiving a weak signal from Donor antenna or BTS directly, the EZD-LICPA23 sends downlink signal to EZS-LICPA37 using DOU (Donor Optic Unit).

DOU supports the translation of RF signal to Optic signal for connecting EZS-LICPA37 through the fiber optic cable. And then Uplink Signal that received from EZS-LICPA37 amplify,

is send to the Base station via Donor Antenna or is connected to BTS directly.

In other words, EZD-LICPA23 is only transmitting the Uplink Signal over the air.

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 28/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

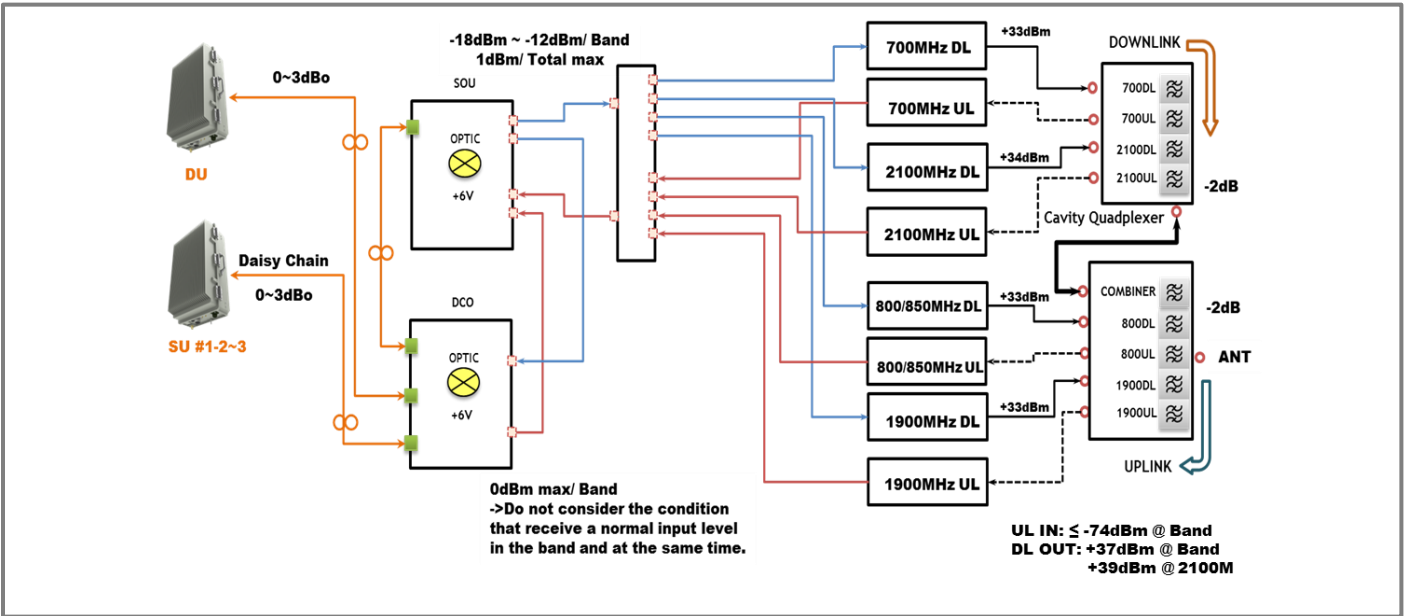


Figure 12. EZS-LICPA37 Block Diagram Configuration

EZS-LICPA37 is operating very similar to the EZD-LICPA23

After receiving an Uplink Signal from service antenna, the EZ-DASD-LICPA37 sends Uplink signal to EZD-LICPA23 using SOU (Service Optic Unit).

SOU supports the translation of RF signal to Optic signal for connecting EZD-LICPA23 through the fiber optic cable. And then Down Signal that received from EZD-LICPA23 amplifies, is sent to the Mobile station via Service Antenna.

In other words, EZD-LICPA23 is only transmitting the Uplink Signal over the air.


	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 29/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

7. GUI Overview


- Provide all functions that can be performed at Service Unit will be available thru the Donor Unit.
- Support the GUI pages that will be addressable via UDP Interface.

7.1. Configuration the Laptop to Connect to the Repeater


- Connect an Ethernet crossover cable from the LAN port of the repeater's bottom side to your laptop

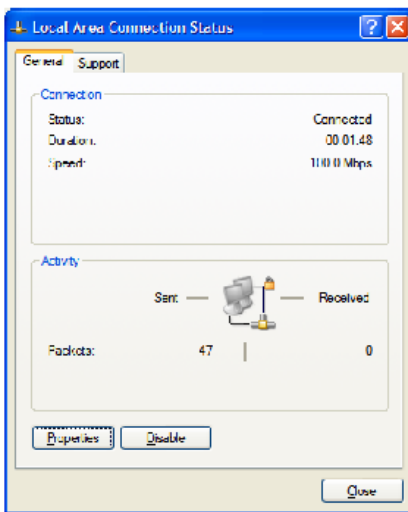

1. Go to Local Connection
2. Click on "Properties"

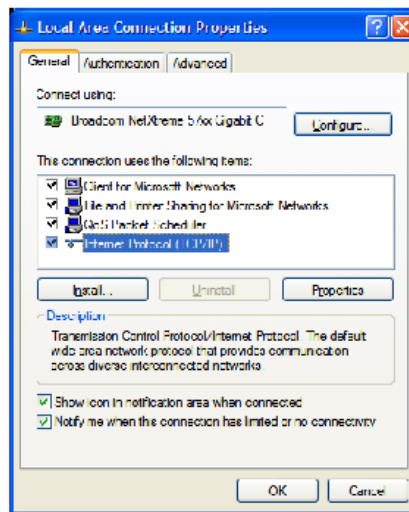

3. Highlight "Internet Protocol"
4. Click on "Properties"

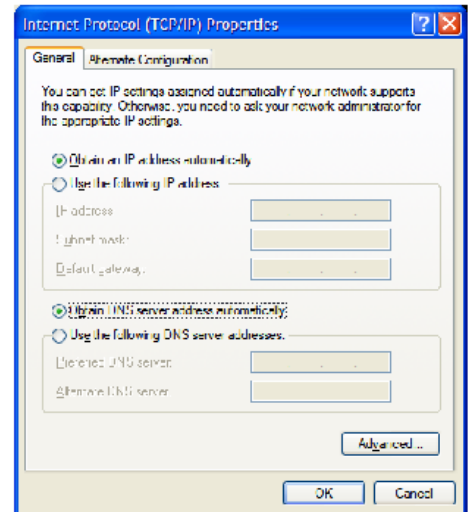


5. Choose "Obtain DNS Server address automatically"
6. Click OK

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 30/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

7.2. Login-In Screen


- GUI Screen for Log-In
- Enter the IP Address "**192.168.1.1**" and Port into GUI Main Screen. And then Connect.

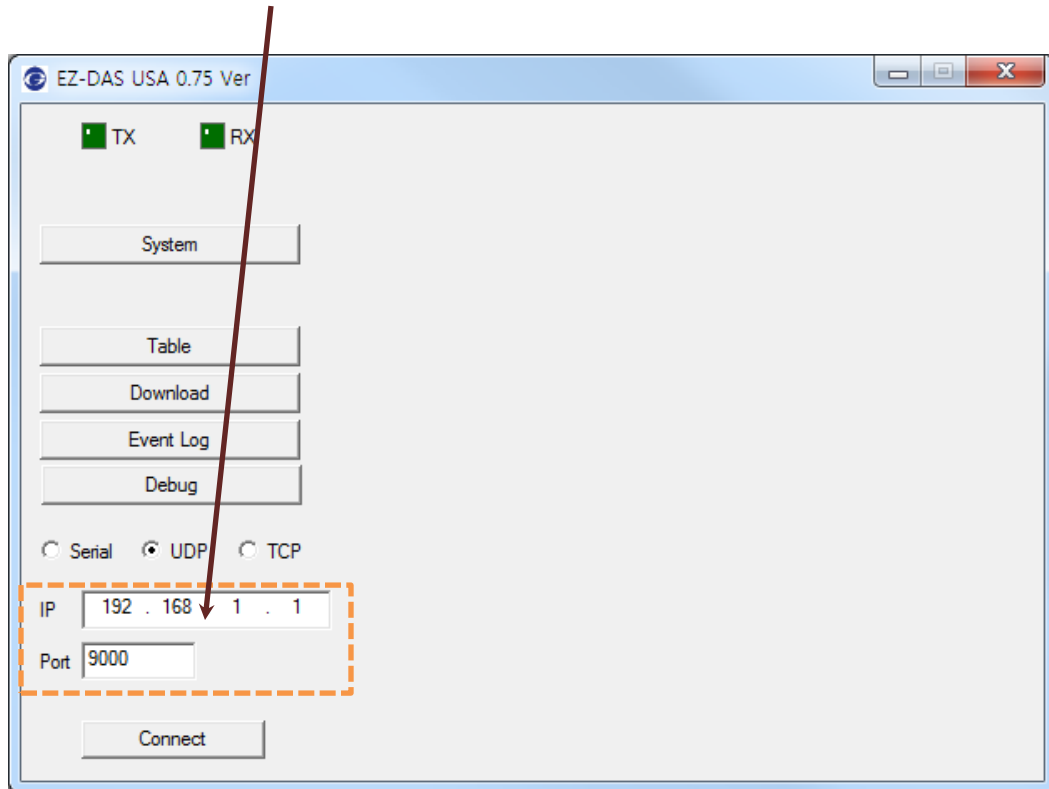

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 31/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

7.3. Main Screen

- GUI Screen for Main Menu
- Able to select system that user control, Configuration & Status monitoring

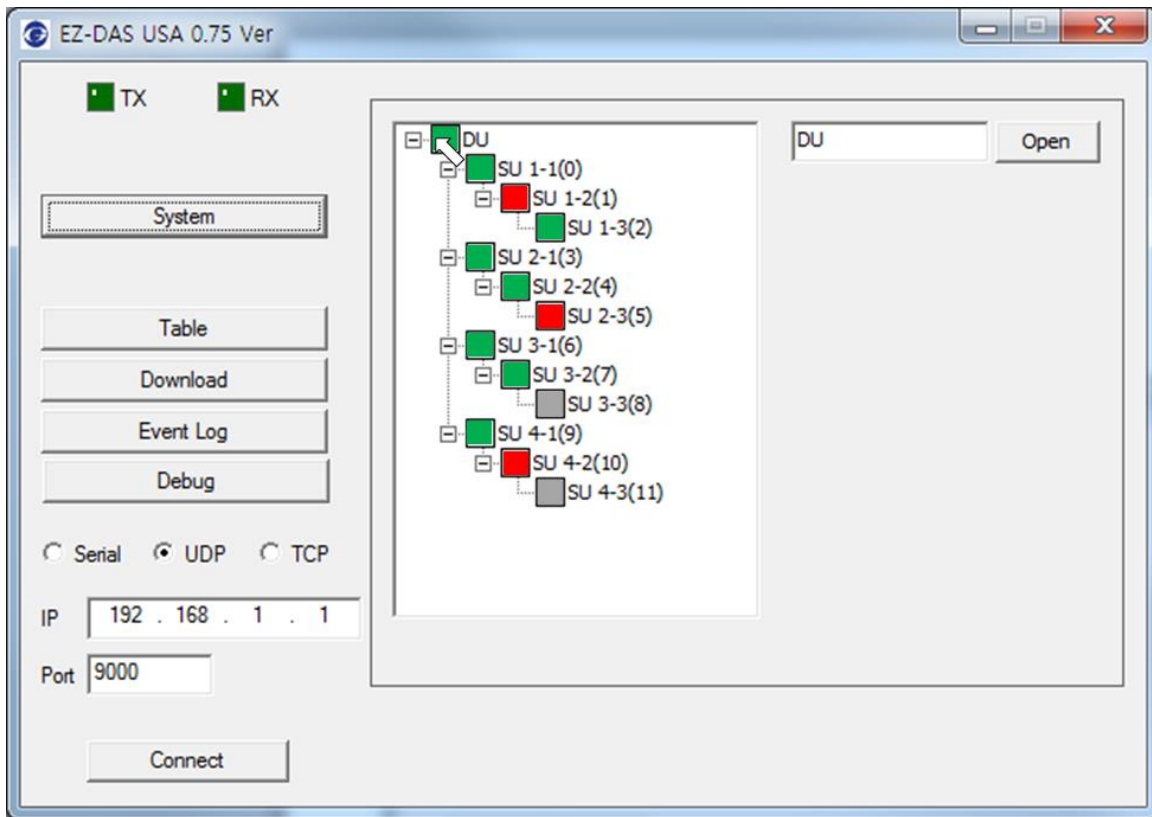

- Green means that the system is operating under normal condition.
- Red means that the system is operating under abnormal condition. In other words, system is likely non-working.
- Gray means that the system is not linked or communicated fail. But if it is not communicated between DU and SU, Donor Unit is also changed Red.

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 32/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

7.4. RF Status

- GUI Screen for display Repeater's RF Status

The screenshot displays the 'System DU - Main' GUI. At the top, there are TX and RX indicators, a 'SET' button, and a 'Close' button. Below these are configuration fields: System Version (0.0.0), MUX Select (Normal), Service Code (EZ-DAS_USA DU(4BR)), and SNMP Board S/N. A table lists alarm status for RFM1-4 Comm (all 'Uninstall') and EDU Comm (SU Install). Further down, there are fields for Engineering Number, System Serial Number, Site Name, and PSU S/N. The main section is divided into DOU and RFDU1-4 status panels. Each RFDU panel shows various alarm indicators (DL Low RSSI, DL Over RSSI, DL Low Input, DL Low Output, DL Over Output, UL Over Output, UL Shut Down, HW Fail) with green status icons and 0/5 minute delay settings. Below the RFDU status is a section for RFDU1-4 details, including Service Code (NONE), Alarm Delay On/Off (Off), RFDU Version, and EPGA Version.

<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 33/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>
		<u>Approved by</u>

7.5. RF Configuration


- GUI Screen in order to change the RF values
- User may change the various RF values of the repeater on this page
- Changes will not take effect until you click "Apply" button
- This menu is where the installer will choose references for specific implementation

RFDU 1	RFDU 2	RFDU 3	RFDU 4
Service Code <input type="checkbox"/> NONE	Service Code <input type="checkbox"/> NONE	Service Code <input type="checkbox"/> NONE	Service Code <input type="checkbox"/> NONE
Alarm Delay On/Off <input type="checkbox"/> Off <input type="checkbox"/>	Alarm Delay On/Off <input type="checkbox"/> Off <input type="checkbox"/>	Alarm Delay On/Off <input type="checkbox"/> Off <input type="checkbox"/>	Alarm Delay On/Off <input type="checkbox"/> Off <input type="checkbox"/>
RFDU Version <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0	RFDU Version <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0	RFDU Version <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0	RFDU Version <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0
FPGA Version <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0	FPGA Version <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0	FPGA Version <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0	FPGA Version <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0 . <input type="text"/> 0
DFM Serial No <input type="text"/>	DFM Serial No <input type="text"/>	DFM Serial No <input type="text"/>	DFM Serial No <input type="text"/>
RFDU Serial No <input type="text"/>	RFDU Serial No <input type="text"/>	RFDU Serial No <input type="text"/>	RFDU Serial No <input type="text"/>
DL	DL	DL	DL
Input Power Output Power	Input Power Output Power	Input Power Output Power	Input Power Output Power
SB1 <input type="text"/> 0.0 <input type="text"/> 0.0	SB1 <input type="text"/> 0.0 <input type="text"/> 0.0	SB1 <input type="text"/> 0.0 <input type="text"/> 0.0	SB1 <input type="text"/> 0.0 <input type="text"/> 0.0
SB2 <input type="text"/> 0.0 <input type="text"/> 0.0	SB2 <input type="text"/> 0.0 <input type="text"/> 0.0	SB2 <input type="text"/> 0.0 <input type="text"/> 0.0	SB2 <input type="text"/> 0.0 <input type="text"/> 0.0
SB3 <input type="text"/> 0.0 <input type="text"/> 0.0	SB3 <input type="text"/> 0.0 <input type="text"/> 0.0	SB3 <input type="text"/> 0.0 <input type="text"/> 0.0	SB3 <input type="text"/> 0.0 <input type="text"/> 0.0
SB4 <input type="text"/> 0.0 <input type="text"/> 0.0 AGC ATT	SB4 <input type="text"/> 0.0 <input type="text"/> 0.0 AGC ATT	SB4 <input type="text"/> 0.0 <input type="text"/> 0.0 AGC ATT	SB4 <input type="text"/> 0.0 <input type="text"/> 0.0 AGC ATT
SB5 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	SB5 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	SB5 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	SB5 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0
SB6 <input type="text"/> 0.0 <input type="text"/> 0.0 RGC ATT	SB6 <input type="text"/> 0.0 <input type="text"/> 0.0 RGC ATT	SB6 <input type="text"/> 0.0 <input type="text"/> 0.0 RGC ATT	SB6 <input type="text"/> 0.0 <input type="text"/> 0.0 RGC ATT
Total <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	Total <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	Total <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	Total <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0
AGC On/Off <input type="checkbox"/> Off <input type="checkbox"/>	AGC On/Off <input type="checkbox"/> Off <input type="checkbox"/>	AGC On/Off <input type="checkbox"/> Off <input type="checkbox"/>	AGC On/Off <input type="checkbox"/> Off <input type="checkbox"/>
AGC Value <input type="text"/> 0	AGC Value <input type="text"/> 0	AGC Value <input type="text"/> 0	AGC Value <input type="text"/> 0
DL LNA On/Off <input type="checkbox"/> Off <input type="checkbox"/>	DL LNA On/Off <input type="checkbox"/> Off <input type="checkbox"/>	DL LNA On/Off <input type="checkbox"/> Off <input type="checkbox"/>	DL LNA On/Off <input type="checkbox"/> Off <input type="checkbox"/>
DL BDA On/Off <input type="checkbox"/> Off <input type="checkbox"/>	DL BDA On/Off <input type="checkbox"/> Off <input type="checkbox"/>	DL BDA On/Off <input type="checkbox"/> Off <input type="checkbox"/>	DL BDA On/Off <input type="checkbox"/> Off <input type="checkbox"/>
UL	UL	UL	UL
Input Power Output Power Output	Input Power Output Power Output	Input Power Output Power Output	Input Power Output Power Output
SB1 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="text"/> 0.0	SB1 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="text"/> 0.0	SB1 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="text"/> 0.0	SB1 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="text"/> 0.0
SB2 <input type="text"/> 0.0 <input type="text"/> 0.0 AGC ATT	SB2 <input type="text"/> 0.0 <input type="text"/> 0.0 AGC ATT	SB2 <input type="text"/> 0.0 <input type="text"/> 0.0 AGC ATT	SB2 <input type="text"/> 0.0 <input type="text"/> 0.0 AGC ATT
SB3 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	SB3 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	SB3 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	SB3 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0
SB4 <input type="text"/> 0.0 <input type="text"/> 0.0 RGC ATT	SB4 <input type="text"/> 0.0 <input type="text"/> 0.0 RGC ATT	SB4 <input type="text"/> 0.0 <input type="text"/> 0.0 RGC ATT	SB4 <input type="text"/> 0.0 <input type="text"/> 0.0 RGC ATT
SB5 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	SB5 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	SB5 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0	SB5 <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="checkbox"/> 0.0
SB6 <input type="text"/> 0.0 <input type="text"/> 0.0 ALC ATT	SB6 <input type="text"/> 0.0 <input type="text"/> 0.0 ALC ATT	SB6 <input type="text"/> 0.0 <input type="text"/> 0.0 ALC ATT	SB6 <input type="text"/> 0.0 <input type="text"/> 0.0 ALC ATT
Total <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="text"/> 0.0	Total <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="text"/> 0.0	Total <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="text"/> 0.0	Total <input type="text"/> 0.0 <input type="text"/> 0.0 <input type="text"/> 0.0
PAM On/Off <input type="checkbox"/> Off <input type="checkbox"/>	PAM On/Off <input type="checkbox"/> Off <input type="checkbox"/>	PAM On/Off <input type="checkbox"/> Off <input type="checkbox"/>	PAM On/Off <input type="checkbox"/> Off <input type="checkbox"/>
AGC On/Off <input type="checkbox"/> Off <input type="checkbox"/>	AGC On/Off <input type="checkbox"/> Off <input type="checkbox"/>	AGC On/Off <input type="checkbox"/> Off <input type="checkbox"/>	AGC On/Off <input type="checkbox"/> Off <input type="checkbox"/>
ALC On/Off <input type="checkbox"/> Off <input type="checkbox"/>	ALC On/Off <input type="checkbox"/> Off <input type="checkbox"/>	ALC On/Off <input type="checkbox"/> Off <input type="checkbox"/>	ALC On/Off <input type="checkbox"/> Off <input type="checkbox"/>
ALC Value <input type="text"/> 0	ALC Value <input type="text"/> 0	ALC Value <input type="text"/> 0	ALC Value <input type="text"/> 0
UL Shutdown On/Off <input type="checkbox"/> Off <input type="checkbox"/>	UL Shutdown On/Off <input type="checkbox"/> Off <input type="checkbox"/>	UL Shutdown On/Off <input type="checkbox"/> Off <input type="checkbox"/>	UL Shutdown On/Off <input type="checkbox"/> Off <input type="checkbox"/>
Gain Balance ATT <input type="text"/> 0	Gain Balance ATT <input type="text"/> 0	Gain Balance ATT <input type="text"/> 0	Gain Balance ATT <input type="text"/> 0
Gain Balance On/Off <input type="checkbox"/> Off <input type="checkbox"/>	Gain Balance On/Off <input type="checkbox"/> Off <input type="checkbox"/>	Gain Balance On/Off <input type="checkbox"/> Off <input type="checkbox"/>	Gain Balance On/Off <input type="checkbox"/> Off <input type="checkbox"/>
UL BDA On/Off <input type="checkbox"/> Off <input type="checkbox"/>	UL BDA On/Off <input type="checkbox"/> Off <input type="checkbox"/>	UL BDA On/Off <input type="checkbox"/> Off <input type="checkbox"/>	UL BDA On/Off <input type="checkbox"/> Off <input type="checkbox"/>
UL Idle Mode	UL Idle Mode	UL Idle Mode	UL Idle Mode
On/Off <input type="checkbox"/> Off <input type="checkbox"/>	On/Off <input type="checkbox"/> Off <input type="checkbox"/>	On/Off <input type="checkbox"/> Off <input type="checkbox"/>	On/Off <input type="checkbox"/> Off <input type="checkbox"/>
Status <input type="text"/> Normal	Status <input type="text"/> Normal	Status <input type="text"/> Normal	Status <input type="text"/> Normal
On Value <input type="text"/> 0.0 <input type="checkbox"/> Off Value <input type="text"/> 0.0	On Value <input type="text"/> 0.0 <input type="checkbox"/> Off Value <input type="text"/> 0.0	On Value <input type="text"/> 0.0 <input type="checkbox"/> Off Value <input type="text"/> 0.0	On Value <input type="text"/> 0.0 <input type="checkbox"/> Off Value <input type="text"/> 0.0

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 34/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

7.6. Band Selection

- Repeater support the capacity of CDMA and LTE Technologies
- Ability to set the 6 Non-Contiguous channel
- Support the CDMA 15MHz max per 1.25 step and LTE 5MHz, 10MHz, 20MHz
- User can set the desired channel using the GUI

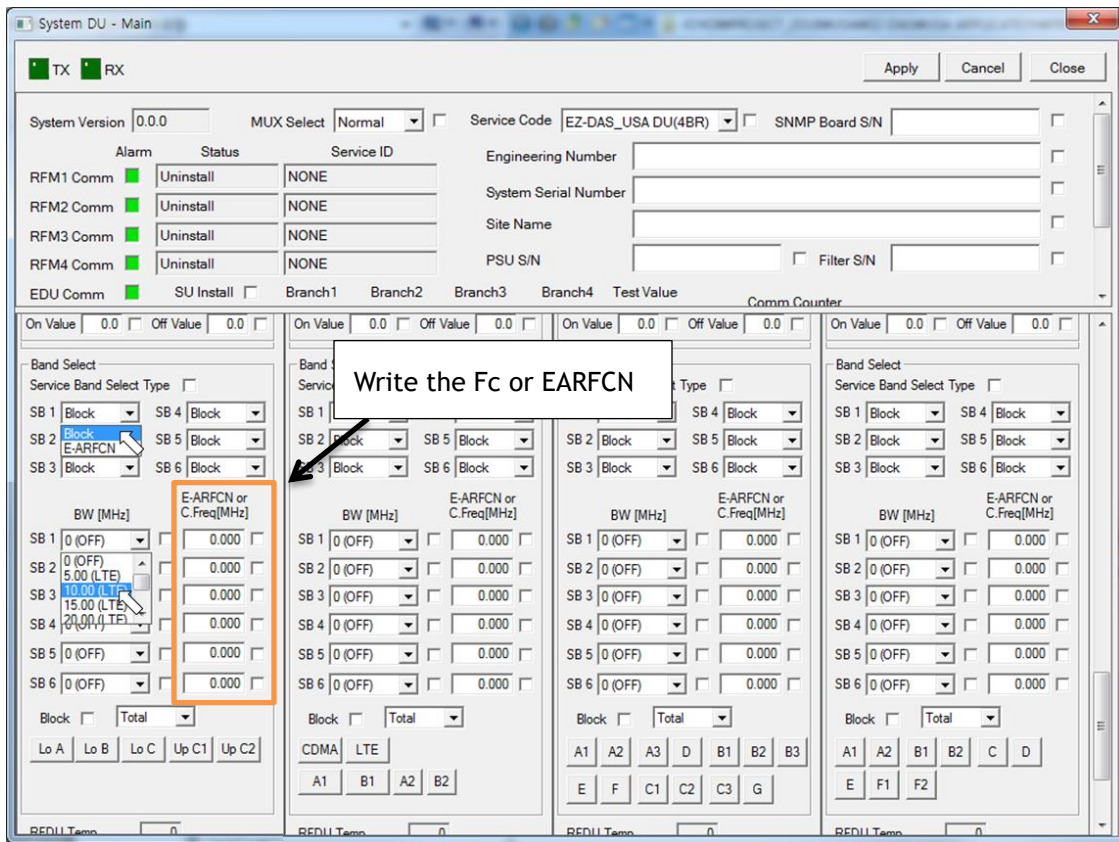

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 35/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

8. System Installation

- This chapter describes how to install the repeater and Cabling method
- The needed accessories and tools are list up as below







#	Contents		Picture	Q'ty
1	Mounting Bracket			1EA
2	AC Power Cable SJT 3/16 AWG, 6ft			1EA
3	Frame Ground Cable with Tubular Cable Lug, 6ft			1EA
4	Installation purchase set	EYE BOLT(M12)		1EA
		M5x12mm WRENCH BOLT, SEMS		2EA
		PH(+) M4x8mm ,SEMS		4EA
5	Mounting Screw set	LAG SCREW 3/8"x3"		2EA
		HEX HEAD 3/8"x2", SCM440		2EA
		Φ10.5mm/Φ21mm PLAIN WASHER		2EA
		Φ10.2mm/Φ18.4mm SPRING WASHER		2EA
6	Tubing Tube Sleeve Black	Φ30mm/L:150mm Adhesive Polyolefin 3:1 Heat Shrink		1EA

Table 13. EZ-DAS Installation Accessories

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 36/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

8.1. Warnings and Hazards

8.1.1. Electric Shock



- Opening the Repeater could result in electrical shock and may cause severe injury
- Operating the Repeater with antennas in very close proximity facing each other could lead to severe damage to the repeater

8.1.2. Exposure to RF



Working with the repeater while in operation, may expose the technician to RF electromagnetic fields that exceed FCC Rules for human exposure.

Visit the FCC Website at <http://www.fcc.gov/oet/rfsafety> to learn more about

The effects of exposure to RF electromagnetic fields

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 37/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

8.2. Service Man Installation Guide

8.2.1. Wall Mount Installation

The procedure for fixing the pole type system is as follows.

Service man is mounting the same way the EZD-LICPA23 and EZS-LICPA37.

- 1) To mount the system on the wall, first fix the bracket on the wanted position.
- 2) Hang the system to the hooking position at the top of the mounting bracket
- 3) Push the system to the hooking position at the bottom of the mounting bracket.

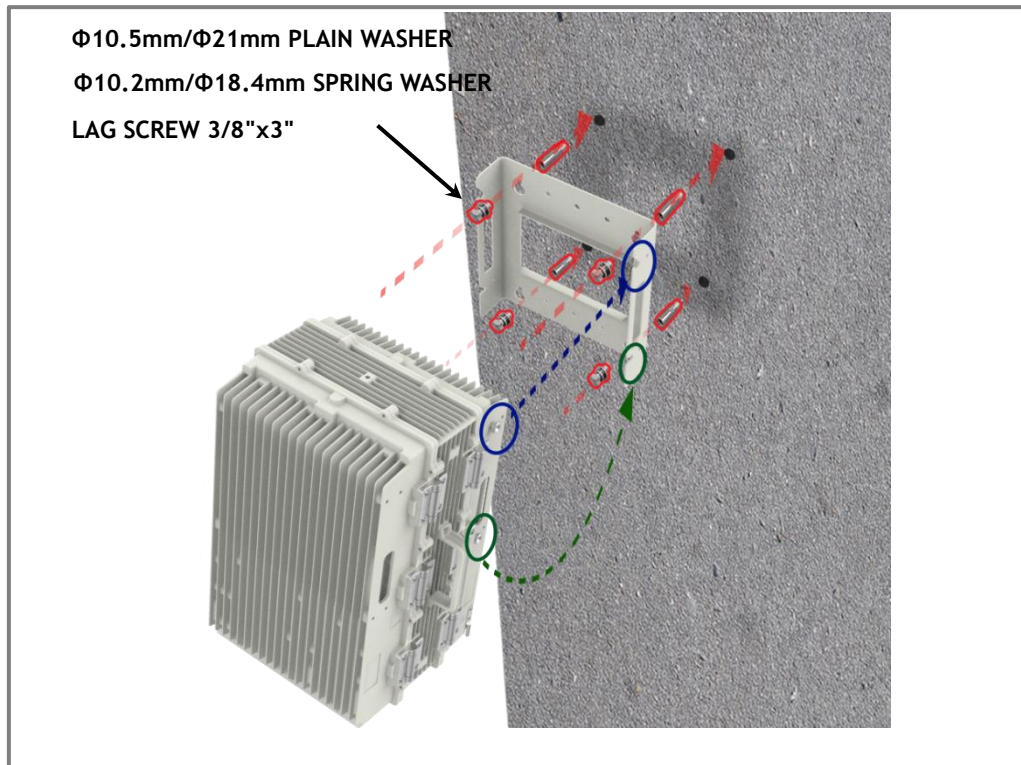


Figure 13. The way to fix the bracket on the pole (Normal type)



Protection gloves and goggles

Make sure that worker wears protection gloves and goggles to prevent damages from debris while drilling holes in a Pole or Wall

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 38/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>



Cautions while drilling on the pole

Drilling thru-hole on a center of the pole

- 4) Align the system with the fixing holes of the mounting bracket and fix them firmly

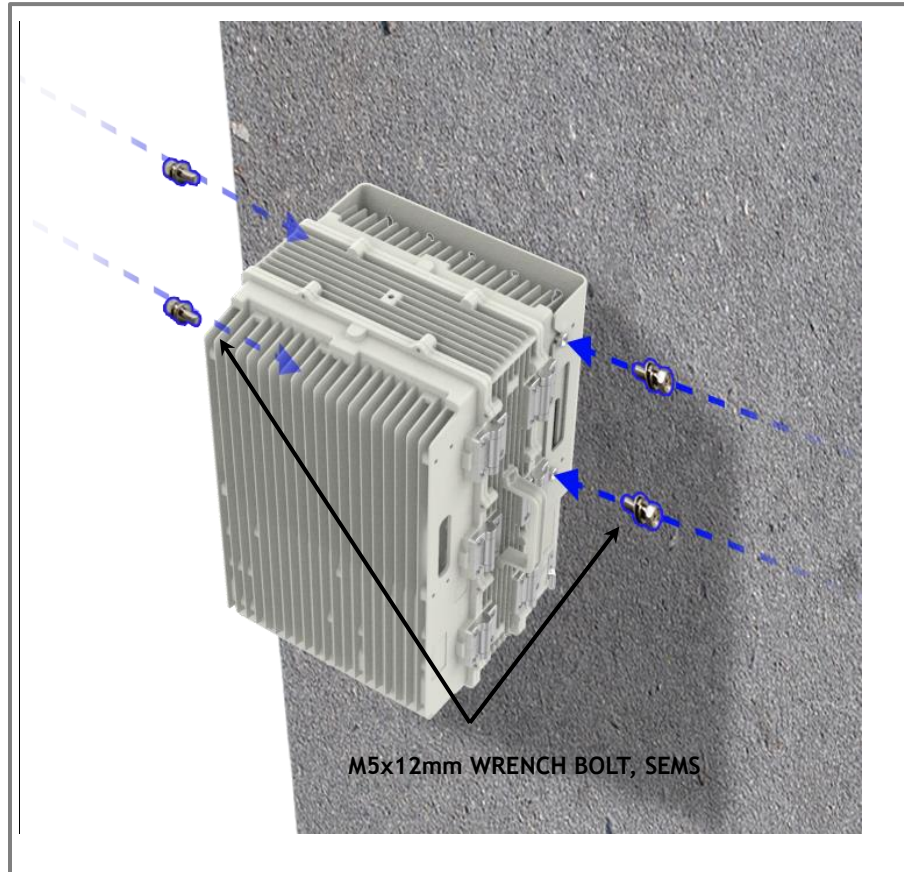


Figure 14. The way to fix firmly the System for Pole Mounting



Cautions System leveling


Before fixing the system, Check the horizontal and vertical level using a spirit level

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 39/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>



8.3. Cable Connection

8.3.1. AC Power cable connection

- Repeater supports a free AC Input voltage from 110V to 240V
- Provided Power cable is single type, so it can be used flexibly
- The pin description of AC Port is below. User should connect exact polarity of AC

Port Outlook (System Side)	Port numbering for MS	NAME	Description
 MS-3102A-10SL-3P	A	AC_H	AC Hot
	B	AC_N	AC Neutral
	C	F.G	Frame Ground

- The specification & Connection of AC Power Cable

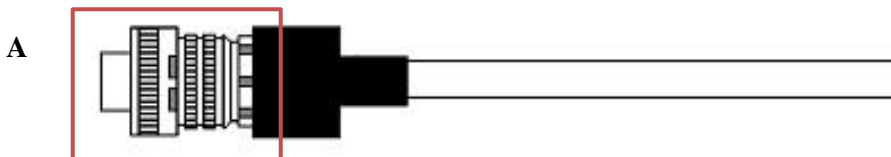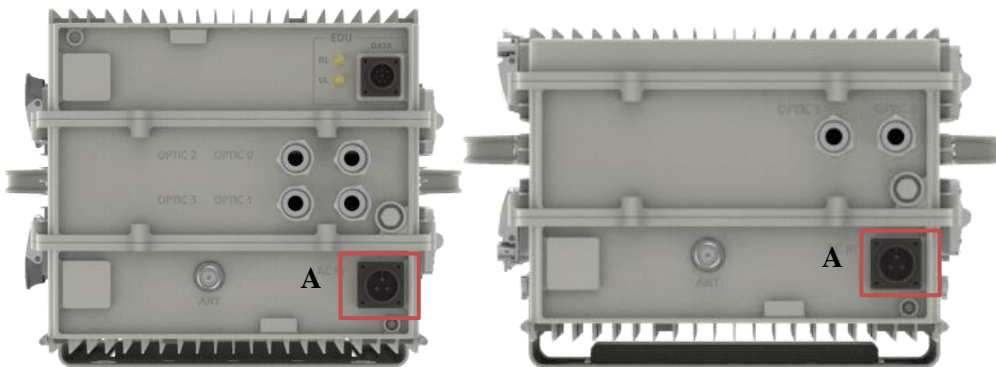


- A: MS3106A-22-2
- Connect Port A for inserting AC Power

	<u>Version</u>	<u>Date</u>	<u>Page</u>
	0.1	May 11, 2018	40/ 41
<u>Title</u>	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>
USER MANUAL			


8.3.2. Local Maintenance Connection

- Repeater Support a RJ-45 connector

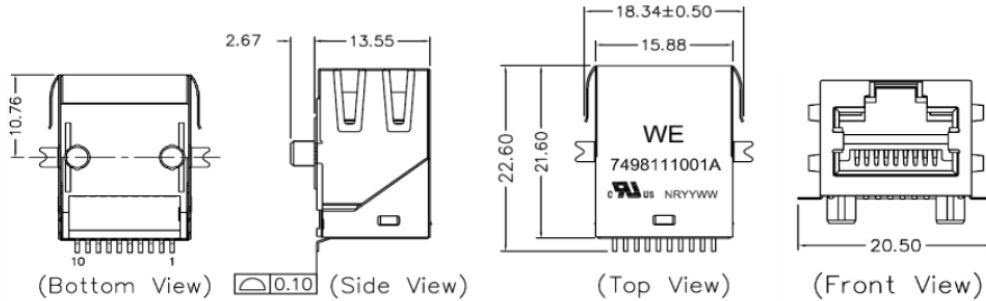

8.3.3. Grounding cable Connection

- Frame(Earth) Wire size is AWG #6. The way to install the grounding cable is below

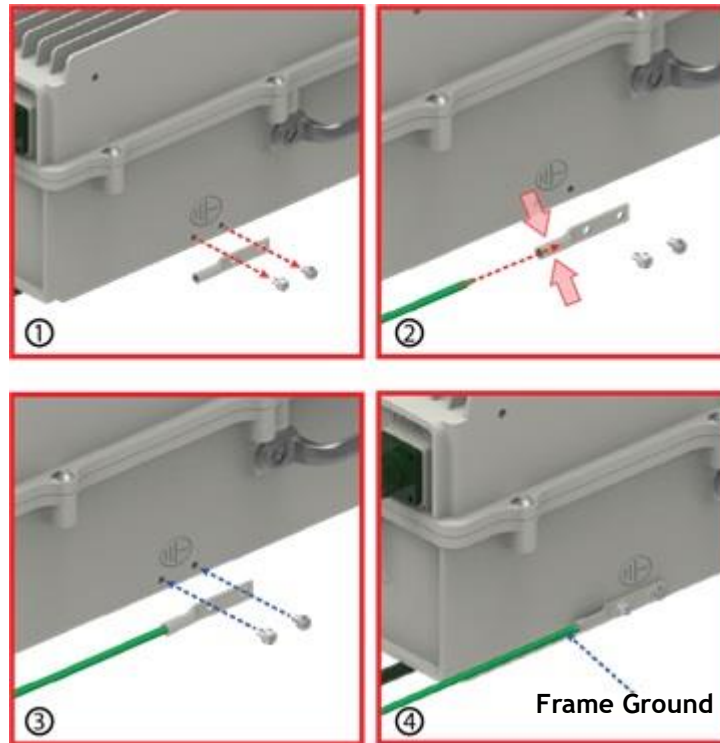


- The specification of ground terminal lug is like below (Refer to JOCT 0202-RL05)

	<u>Version</u> 0.1	<u>Date</u> May 11, 2018	<u>Page</u> 41/ 41
<u>Title</u> USER MANUAL	<u>Prepared by</u>	<u>Reviewed by</u>	<u>Approved by</u>

**TUBULAR CABLE LUGS, TWO-HOLE, STANDARD BARREL AND LONG BARREL
TYPE-CT**

- Material : Electrolytic Copper (TPC)
- Surface : Tin Plated
- With Inspection Hole
- Color Coded to Show Proper Die Number and Color 10mm~630mm
- To IEC 60228 Class 2 and Class 5
- UL Listed 486A-486B up to 35KV

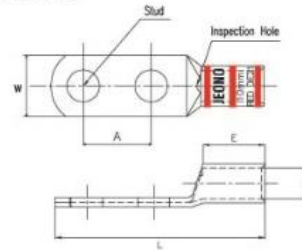

Part No Explanation : JOC0 0201-X X 04 → Stud Size(mm, UNC)

Tongue Form R : Round Type
S : Square Type

Barrel Form *S : Standard Barrel Type
*L : Long Barrel Type



Part Number	Wire Range				Stud Size	Dimension (mm)						Color Code & Die No	Q'ty / bag	
	CODE		FLEX			W	d	A	E		L			
	AWG	mm ²	AWG	mm ²					*S	*L	*S			*L
JOCT 0202-XX05	6	16	6	16	M5	12	5.4	16	15	30	52	67	Blue 24 JOC0-6	300
JOCT 0202-XX06					M6									
JOCT 0202-XX08					M8	15.5	19	70			85			
JOCT 0202-XX10					M10									
JOCT 0202-XX12					M12							18		