

Pepwave Routers User Manual

Pepwave Products:
MAX 700/HD2/HD2 IP67/HD2 mini/HD4/BR1/BR1 IP55/BR2 IP55/On-The-Go
MAX HD2/HD4 with MediaFast
Surf SOHO

Pepwave Firmware 6.1
December 2014

COPYRIGHT & TRADEMARKS
Specifications are subject to change without notice. Copyright © 2014 Pepwave Ltd. All Rights Reserved. Pepwave and the Pepwave logo are trademarks of Pepwave Ltd. Other brands or products mentioned may be trademarks or registered trademarks of their respective owners.

Table of Contents

1 INTRODUCTION AND SCOPE	5
2 GLOSSARY	6
3 PRODUCT FEATURES	7
3.1 SUPPORTED NETWORK FEATURES.....	7
3.2 OTHER SUPPORTED FEATURES	9
4 PEPWAVE MAX MOBILE ROUTER OVERVIEW	10
4.1 MAX 700.....	10
4.2 MAX HD2	12
4.3 MAX HD2 IP67	14
4.4 MAX HD2 MINI	15
4.5 MAX HD2 WITH MEDIAFAST	17
4.6 MAX HD4/MAX HD4 WITH MEDIAFAST	18
4.7 MAX BR1.....	19
4.8 MAX BR1/2 IP55	21
4.9 MAX ON-THE-GO.....	23
5 PEPWAVE SURF SOHO ROUTER OVERVIEW	24
5.1 SURF SOHO	24
6 INSTALLATION	26
6.1 PREPARATION.....	26
6.2 CONSTRUCTING THE NETWORK.....	27
6.3 CONFIGURING THE NETWORK ENVIRONMENT.....	28
7 MOUNTING THE UNIT	29
7.1 WALL MOUNT.....	29
7.2 CAR MOUNT	29
8 CONNECTING TO THE WEB ADMIN INTERFACE	30
9 CONFIGURING THE LAN INTERFACE(S)	32
9.1 BASIC SETTINGS LAN_BASIC_SETTINGS	32
9.2 CAPTIVE PORTAL.....	40
10 CONFIGURING THE WAN INTERFACE(S)	43
10.1 ETHERNET WAN	44
10.2 CELLULAR WAN	51
10.3 WI-FI WAN	56
10.4 WAN HEALTH CHECK.....	59
10.5 DYNAMIC DNS SETTINGS	61

Pepwave Routers User Manual


11 ADVANCED WI-FI SETTINGS	63
12 MEDIAFAST CONFIGURATION	66
12.1 SETTING UP MEDIAFAST CONTENT CACHING	66
12.2 SCHEDULING CONTENT PREFETCHING.....	67
12.3 VIEWING MEDIAFAST STATISTICS.....	68
13 BANDWIDTH BONDING SPEEDFUSION™ / PEPVPN	69
13.1 PEPVPN	69
13.2 THE PEPWAVE ROUTER BEHIND A NAT ROUTER	74
13.3 SPEEDFUSION™ STATUS	76
14 IPSEC VPN	77
14.1 IPSEC VPN SETTINGS.....	77
15 OUTBOUND POLICY MANAGEMENT	81
15.1 OUTBOUND POLICY	81
15.2 CUSTOM RULES FOR OUTBOUND POLICY	82
16 INBOUND ACCESS	92
16.1 PORT FORWARDING SERVICE.....	92
17 NAT MAPPINGS	95
18 QOS	97
18.1 USER GROUPS.....	97
18.2 BANDWIDTH CONTROL.....	98
18.3 APPLICATION	98
19 FIREWALL	100
19.1 OUTBOUND AND INBOUND FIREWALL RULES	100
20 MISCELLANEOUS SETTINGS	106
20.1 HIGH AVAILABILITY.....	106
20.2 PPTP SERVER	109
20.3 CERTIFICATE MANAGER.....	111
20.4 SERVICE FORWARDING	111
20.5 SERVICE PASSTHROUGH.....	114
20.6 GPS FORWARDING.....	115
21 AP CONTROLLER	116
21.1 WIRELESS SSID	116
21.2 SETTINGS.....	120
21.3 TOOLBOX.....	124
22 SYSTEM SETTINGS	125

Pepwave Routers User Manual

22.1 ADMIN SECURITY	125
22.2 FIRMWARE.....	129
22.3 TIME.....	130
22.4 EMAIL NOTIFICATION	130
22.5 EVENT LOG	132
22.6 SNMP.....	133
22.7 IN CONTROL.....	135
22.8 CONFIGURATION.....	136
22.9 FEATURE ADD-ONS.....	137
22.10 REBOOT	137
22.11 PING.....	138
22.12 TRACEROUTE TEST.....	139
22.13 PEPVPN TEST	139
22.14 PEPVPN ANALYZER.....	140
22.15 CLI (COMMAND LINE INTERFACE SUPPORT)	140
23 STATUS	141
23.1 DEVICE.....	141
23.2 ACTIVE SESSIONS	143
23.3 CLIENT LIST	145
23.4 WINS CLIENT	146
23.5 SPEEDFUSION™ STATUS	147
23.6 UPNP / NAT-PMP	148
23.7 EVENT LOG	149
23.8 BANDWIDTH	150
APPENDIX A. RESTORATION OF FACTORY DEFAULTS	155
APPENDIX B. DECLARATION	156

1 Introduction and Scope

Pepwave routers provide link aggregation and load balancing across multiple WAN connections, allowing a combination of technologies like 3G HSDPA, EVDO, 4G LTE, Wi-Fi, external WiMAX dongle, and satellite to be utilized to connect to the Internet. This manual covers setting up Pepwave routers and provides an introduction to their features and usage.

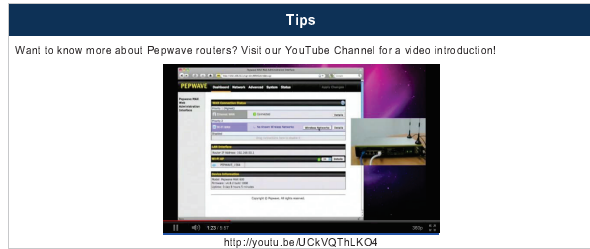

3 Product Features

Pepwave routers enable all LAN users to share broadband Internet connections, and they provide advanced features to enhance Internet access. Below is a list of supported features on Pepwave routers. Features vary by model. For more information, please see peplink.com/products.

3.1 Supported Network Features

3.1.1 WAN

- Ethernet WAN connection in full/half duplex
- Static IP support for PPPoE
- Built-in HSPA and EVDO cellular modems
- USB mobile connection(s)
- Wi-Fi WAN connection
- Network address translation (NAT)/port address translation (PAT)
- Inbound and outbound NAT mapping
- IPsec NAT-T and PPTP packet passthrough
- MAC address clone and passthrough
- Customizable MTU and MSS values
- WAN connection health check
- Dynamic DNS (supported service providers: changeip.com, dyndns.org, no-ip.org, tzo.com and [DNS-O-Matic](http://DNS-O-Matic.com))
- Ping, DNS lookup, and HTTP-based health check

3.1.2 LAN

- Wi-Fi AP
- Ethernet LAN ports
- DHCP server on LAN
- Extended DHCP option support
- Static routing rules
- VLAN on LAN support

3.1.3 VPN

- PepVPN with SpeedFusion™
- PepVPN performance analyzer
- X.509 certificate support
- VPN load balancing and failover among selected WAN connections

2 Glossary

The following terms, acronyms, and abbreviations are frequently used in this manual:

Term	Definition
3G	3rd Generation standards for wireless communications
4G	4th Generation standards for wireless communications
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name System
EVDO	Evolution-Data Optimized
HSDPA	High-Speed Downlink Packet Access
HTTP	Hyper-Text Transfer Protocol
ICMP	Internet Control Message Protocol
IP	Internet Protocol
LAN	Local Area Network
MAC Address	Media Access Control Address
MTU	Maximum Transmission Unit
MSS	Maximum Segment Size
NAT	Network Address Translation
PPPoE	Point to Point Protocol over Ethernet
QoS	Quality of Service
SNMP	Simple Network Management Protocol
TCP	Transmission Control Protocol
UDP	User Datagram Protocol
VPN	Virtual Private Network
VRRP	Virtual Router Redundancy Protocol
WAN	Wide Area Network
WINS	Windows Internet Name Service
WLAN	Wireless Local Area Network

- Bandwidth bonding and failover among selected WAN connections
- IPsec VPN for network-to-network connections (works with Cisco and Juniper only)
- Ability to route Internet traffic to a remote VPN peer
- Optional pre-shared key setting
- SpeedFusion™ throughput, ping, and traceroute tests
- PPTP server
- PPTP and IPsec passthrough

3.1.4 Firewall

- Outbound (LAN to WAN) firewall rules
- Inbound (WAN to LAN) firewall rules per WAN connection
- Intrusion detection and prevention
- Specification of NAT mappings
- Outbound firewall rules can be defined by destination domain name

3.1.5 Captive Portal

- Splash screen of open networks, login page for secure networks
- Customizable built-in captive portal
- Supports linking to outside page for captive portal

3.1.6 Outbound Policy

- Link load distribution per TCP/UDP service
- Persistent routing for specified source and/or destination IP addresses per TCP/UDP service
- Traffic prioritization and DSL optimization
- Prioritize and route traffic to VPN tunnels with Priority and Enforced algorithms

3.1.7 AP Controller

- Configure and manage Pepwave AP devices
- Review the status of connected APs

3.1.8 QoS

- Quality of service for different applications and custom protocols
- User group classification for different service levels
- Bandwidth usage control and monitoring on group- and user-level

- Application prioritization for custom protocols and DSL/cable optimization

3.2 Other Supported Features


- User-friendly web-based administration interface
- HTTP and HTTPS support for web admin interface
- Configurable web administration port and administrator password
- Firmware upgrades, configuration backups, ping, and traceroute via web admin interface
- Remote web-based configuration (via WAN and LAN interfaces)
- Time server synchronization
- SNMP
- Email notification
- Read-only user for web admin
- Shared IP drop-in mode
- Authentication and accounting by RADIUS server for web admin
- Built-in WINS servers*
- Syslog
- SIP passthrough
- PPTP packet passthrough
- Event log
- Active sessions
- Client list
- WINS client list *
- UPnP / NAT-PMP
- Real-time, hourly, daily, and monthly bandwidth usage reports and charts
- IPv6 support
- Support USB tethering on Android 2.2+ phones

* Not supported on MAX Surf-On-The-Go, Surf SOHO, and BR1 variants

4 Pepwave MAX Mobile Router Overview

4.1 MAX 700

4.1.1 Panel Appearance

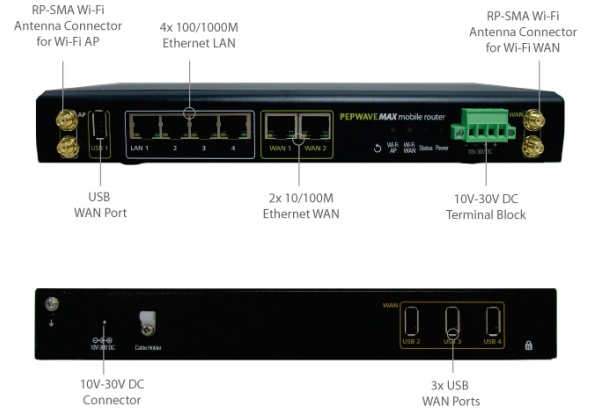

4.1.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:


Status Indicators		
Status	OFF	System initializing
	Red	Booting up or busy
	Blinking red	Boot up error
	Green	Ready

Wi-Fi AP and Wi-Fi WAN Indicators		
Wi-Fi WAN	OFF	Disconnected
	Blinking slowly	Connecting to network
	Blinking	Connected to network with traffic
Wi-Fi AP	ON	Connected to network without traffic
	OFF	Disabled
	Blinking slowly	Enabled but no client connected
	Blinking	Connected to network with traffic
	ON	Client(s) connected to wireless network

LAN and Ethernet WAN Ports		
Green LED	ON	10 / 100/ 1000 Mbps
	Blinking	Data is transferring
Orange LED	OFF	No data is being transferred or port is not connected
Port Type		Auto MDI/MDI-X ports

4.2 MAX HD2

4.2.1 Panel Appearance

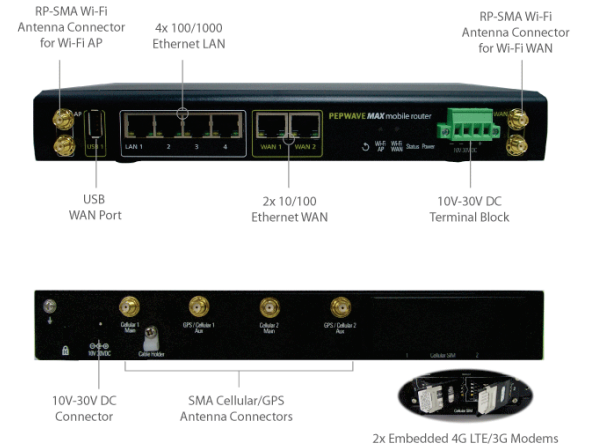

4.2.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:


Status Indicators		
Status	OFF	System initializing
	Red	Booting up or busy
	Blinking red	Boot up error
	Green	Ready

Wi-Fi AP and Wi-Fi WAN Indicators		
Wi-Fi WAN / Cellular 1 / Cellular 2	OFF	Disabled Intermittent
	Blinking slowly	Connecting to wireless network(s)
	Blinking	Connected to wireless network(s) with traffic
	ON	Connected to wireless network(s) without traffic

LAN and Ethernet WAN Ports		
Green LED	ON	10 / 100 / 1000 Mbps
	Blinking	Data is transferring
Orange LED	OFF	No data is being transferred or port is not connected
	ON	
Port Type	Auto MDI/MDI-X ports	

4.3 MAX HD2 IP67

4.3.1 Panel Appearance

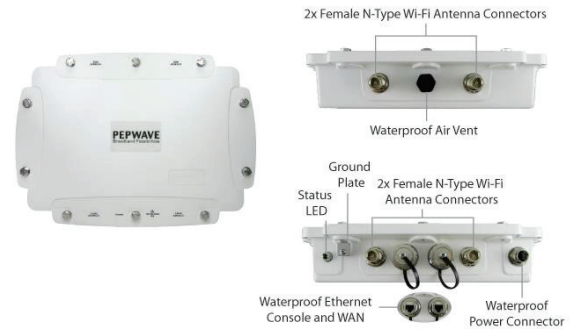


The statuses indicated by the front panel LEDs are as follows:

Status Indicators		
Status	OFF	System initializing
	Red	Booting up or busy
	Blinking red	Boot up error
	Green	Ready

4.4 MAX HD2 mini

4.4.1 Panel Appearance

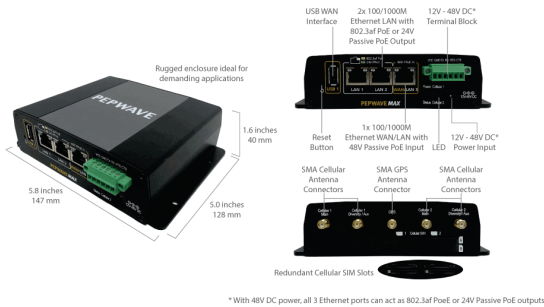

4.4.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:


Status Indicators		
Status	OFF	System initializing
	Red	Booting up or busy
	Blinking red	Boot up error
	Green	Ready

Cellular WAN Indicators		
Cellular 1 / Cellular 2	OFF	Disabled intermittent
	Blinking slowly	Connecting to wireless network(s)
	Blinking	Connected to wireless network(s) with traffic
	ON	Connected to wireless network(s) without traffic

LAN and Ethernet WAN Ports		
Right LED (LAN Port)	Green	24V PPoE input is ready
	Orange	802.3af PoE is ready
Left LED	Orange	Data is transferring
	OFF	No data is being transferred or port is not connected
Port Type	Auto MDI/MDI-X ports	

4.5 MAX HD2 with MediaFast

4.5.1 Panel Appearance

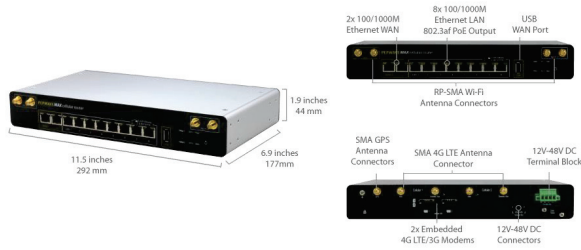

4.5.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:


Status Indicators		
Status	OFF	System initializing
	Red	Booting up or busy
	Blinking red	Boot up error
	Green	Ready

Wi-Fi AP and Wi-Fi WAN Indicators		
Wi-Fi WAN / Cellular	OFF	Disabled Intermittent
	Blinking slowly	Connecting to wireless network(s)
	Blinking	Connected to wireless network(s) with traffic
	ON	Connected to wireless network(s) without traffic

LAN and Ethernet WAN Ports		
Right LED (LAN port)	Green	802.3af PoE is ready
Left LED	Orange	Data is transferring
	OFF	No data is being transferred or port is not connected
Port Type	Auto MDI/MDI-X ports	

4.6 MAX HD4/MAX HD4 with MediaFast

4.6.1 Panel Appearance

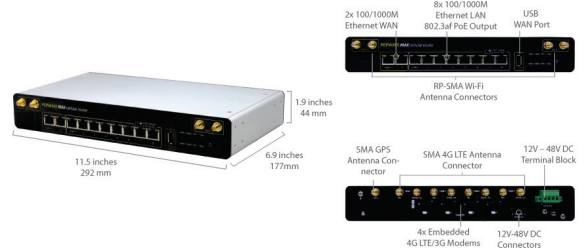

4.6.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:

Status Indicators		
Status	OFF	System initializing
	Red	Booting up or busy
	Blinking red	Boot up error
	Green	Ready

Wi-Fi AP and Wi-Fi WAN Indicators		
Wi-Fi WAN / Cellular	OFF	Disabled Intermittent
	Blinking slowly	Connecting to wireless network(s)
	Blinking	Connected to wireless network(s) with traffic
	ON	Connected to wireless network(s) without traffic

LAN and Ethernet WAN Ports		
Right LED (LAN port)	Green	802.3af PoE is ready
Left LED	Orange	Data is transferring
	OFF	No data is being transferred or port is not connected
Port Type	Auto MDI/MDI-X ports	

4.7 MAX BR1

4.7.1 Panel Appearance



4.7.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:

Status Indicators		
Status	OFF	System initializing
	Red	Booting up or busy
	Blinking red	Boot up error
	Green	Ready


Wi-Fi Indicators		
Wi-Fi	OFF	Disabled intermittent
	Blinking slowly	Connecting to wireless network(s)
	Blinking	Connected to wireless network(s) with traffic
	ON	Connected to wireless network(s) without traffic

Cellular Indicators		
Cellular	OFF	Disabled or no SIM card inserted
	ON	Connecting or connected to network(s)

LAN and Ethernet WAN Ports		
Green LED	ON	100 Mbps
	OFF	10 Mbps
	ON	Port is connected without traffic
Orange LED	Blinking	Data is transferring
	OFF	Port is not connected
Port Type	Auto MDI/MDI-X ports	

4.8 MAX BR1/2 IP55

4.8.1 Panel Appearance

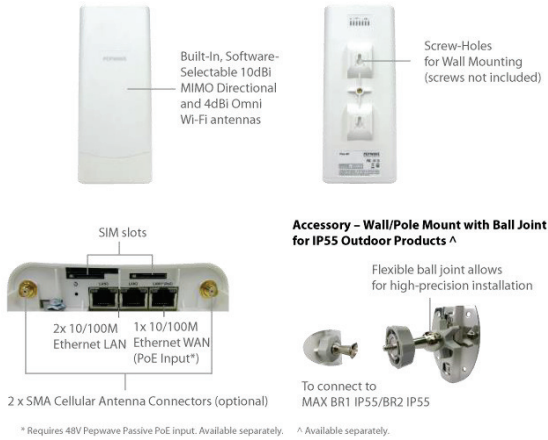

4.8.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:

Status Indicators	
Status	OFF System initializing
	Red Booting up or busy
	Blinking red Boot up error
	Green Ready

Wi-Fi Indicators	
Wi-Fi	OFF Disabled Intermittent
	Blinking slowly Connecting to wireless network(s)
	Blinking Connected to wireless network(s) with traffic
	ON Connected to wireless network(s) without traffic

Cellular Indicators	
Cellular	OFF Disabled or no SIM card inserted
	ON Connecting or connected to network(s)

LAN and Ethernet WAN Ports		
Green LED	ON	100 Mbps
	OFF	10 Mbps
Orange LED	ON	Port is connected without traffic
	Blinking	Data is transferring
	OFF	Port is not connected
Port Type	Auto MDI/MDI-X ports	

4.9 MAX On-The-Go

4.9.1 Panel Appearance



4.9.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:

Cellular Indicators	
WAN	OFF Modem is not attached to the port
	Green Modem is attached to the port

Wi-Fi Indicators	
Wi-Fi	OFF Disconnected from AP
	Green Connected to AP


Status Indicators	
Status	OFF System initializing
	Red Booting up or busy
	Green Ready

LAN and Ethernet WAN Ports		
Green LED	ON	100 Mbps
	OFF	10 Mbps
Orange LED	ON	Port is connected without traffic
	Blinking	Data is transferring
Port Type	Auto MDI/MDI-X ports	

5 Pepwave Surf SOHO Router Overview

5.1 Surf SOHO

5.1.1 Panel Appearance

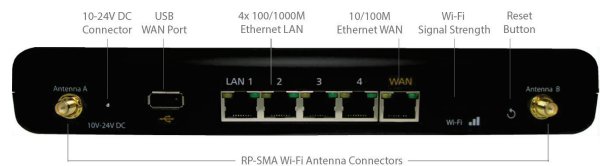

5.1.2 LED Indicators

The statuses indicated by the front panel LEDs are as follows:

Wi-Fi and Status Indicators	
Wi-Fi	OFF Disabled Intermittent
	Blinking Enabled but no client connected
	ON Client(s) connected to wireless network
	Continuous blinking Transferring data to wireless network
Status	OFF System initializing
	Red Booting up or busy
	Green Ready state

LAN and Ethernet WAN Ports		
Green LED	ON	10 / 100 Mbps
	Blinking	Data is transferring
Orange LED	OFF	No data is being transferred or port is not connected
Port type	Auto MDI/MDI-X ports	

Wi-Fi Signal	
Off	No connection
Signal strength	Wi-Fi signal strength (low, medium, and high)

6 Installation

The following section details connecting Pepwave routers to your network.

6.1 Preparation

Before installing your Pepwave router, please prepare the following as appropriate for your installation:


- At least one Internet/WAN access account and/or Wi-Fi access information
- Depending on network connection type(s), one or more of the following:
 - **Ethernet WAN:** A 10/100/1000BaseT UTP cable with RJ45 connector
 - **USB:** A USB modem
 - **Embedded modem:** A SIM card for GSM/HSPA service
 - **Wi-Fi WAN:** Wi-Fi antennas
 - **PC Card/Express Card WAN:** A PC Card/ExpressCard for the corresponding card slot
- A computer installed with the TCP/IP network protocol and a supported web browser. Supported browsers include Microsoft Internet Explorer 8.0 or above, Mozilla Firefox 10.0 or above, Apple Safari 5.1 or above, and Google Chrome 18 or above.

6.2 Constructing the Network

At a high level, construct the network according to the following steps:

1. With an Ethernet cable, connect a computer to one of the LAN ports on the Pepwave router. Repeat with different cables for up to 4 computers to be connected.
2. With another Ethernet cable or a USB modem/Wi-Fi antenna/PC Card/Express Card, connect to one of the WAN ports on the Pepwave router. Repeat the same procedure for other WAN ports.
3. Connect the power adapter to the power connector on the rear panel of the Pepwave router, and then plug it into a power outlet.

The following figure schematically illustrates the resulting configuration:

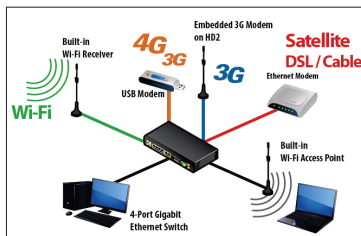

6.3 Configuring the Network Environment

To ensure that the Pepwave router works properly in the LAN environment and can access the Internet via WAN connections, please refer to the following setup procedures:

- LAN configuration
For basic configuration, refer to **Section 8, Connecting to the Web Admin Interface**.
For advanced configuration, go to **Section 9, Configuring the LAN Interface(s)**.
- WAN configuration
For basic configuration, refer to **Section 8, Connecting to the Web Admin Interface**.
For advanced configuration, go to **Section 9.2, Captive Portal**.

7 Mounting the Unit

7.1 Wall Mount

The Pepwave MAX 700/HD2/On-The-Go can be wall mounted using screws. After adding the screw on the wall, slide the MAX in the screw hole socket as indicated below. Recommended screw specification: M3.5 x 20mm, head diameter 6mm, head thickness 2.4mm.

The Pepwave MAX BR1 requires four screws for wall mounting.

7.2 Car Mount

The Pepwave MAX700/HD2 can be mounted in a vehicle using the included mounting brackets. Place the mounting brackets by the two sides and screw them onto the device.



Device Information displays details about the device, including model name, firmware version, and uptime. For further information, please refer to **Section 22**.

Important Note

Configuration changes (e.g. WAN, LAN, admin settings, etc.) will take effect only after clicking the **Save** button at the bottom of each page. The **Apply Changes** button causes the changes to be saved and applied.

8 Connecting to the Web Admin Interface

1. Start a web browser on a computer that is connected with the Pepwave router through the LAN.
2. To connect to the router's web admin interface, enter the following LAN IP address in the address field of the web browser:

http://192.168.50.1


(This is the default LAN IP address for Pepwave routers.)

3. Enter the following to access the web admin interface.


Username: admin

Password: admin

(This is the default username and password for Pepwave routers. The admin and read-only user passwords can be changed at **System>Admin Security**.)

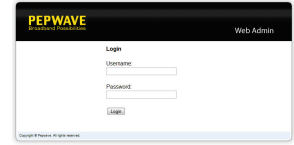

4. After successful login, the **Dashboard** will be displayed.

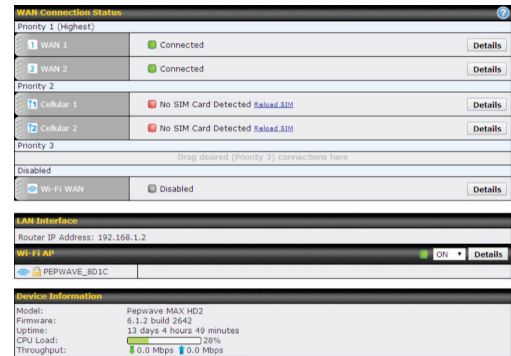


The **Dashboard** shows current WAN, LAN, and Wi-Fi AP statuses. Here, you can change WAN connection priority and switch on/off the Wi-Fi AP. For further information on setting up these connections, please refer to **Sections 8 and 9**.

9 Configuring the LAN Interface(s)


9.1 Basic Settings LAN_Basic_Settings

LAN interface settings are located at **Network>LAN>Basic Settings**.



IP Settings


IP Address The IP address and subnet mask of the Pepwave router on the LAN.



Port Settings

Speed

This is the port speed of the LAN interface. It should be set to the same speed as the connected device to avoid port negotiation problems. When a static speed is set, you may choose whether to advertise its speed to the peer device. **Advertise Speed** is selected by default. You can choose not to advertise the port speed if the port has difficulty negotiating with the peer device.

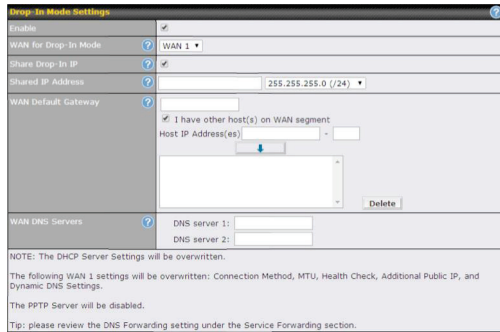


Drop-in Mode Settings

Enable	Drop-in mode eases the installation of PepLink routers on a live network between the existing firewall and router, such that no configuration changes are required on existing equipment. Check the box to enable the drop-in mode feature, if available on your model.
WAN for Drop-In Mode	Select the WAN port to be used for drop-in mode. If WAN 1 with LAN Bypass is selected, the high availability feature will be disabled automatically.
Share Drop-In IP^A	When this option is enabled, the passthrough IP address will be used to connect to WAN hosts (email notification, remote syslog, etc.). The Pepwave router will listen for this IP address when WAN hosts access services provided by the Pepwave router (web admin access from the WAN, DNS server requests, etc.).
Shared IP Address^A	To connect to hosts on the LAN (email notification, remote syslog, etc.), the default gateway address will be used. The Pepwave router will listen for this IP address when LAN hosts access services provided by the Pepwave router (web admin access from the WAN, DNS proxy, etc.).
WAN Default Gateway	Access to this IP address will be passed through to the LAN port if this device is not serving the service being accessed. The shared IP address will be used in connecting to hosts on the WAN (email notification, remote syslog, etc.). The device will also listen on the IP address when hosts on the WAN access services served on this device (web admin access from the WAN, DNS server, etc.).
WAN Default Gateway	Enter the WAN router's IP address in this field. If there are more hosts in addition to the router on the WAN segment, check the I have other host(s) on WAN segment box and enter the IP address of the hosts that need to access LAN devices or be accessed by others.

WAN DNS Servers

Enter the selected WANs corresponding DNS server IP addresses.

^A - Advanced feature, please click the button on the top right-hand corner to activate.

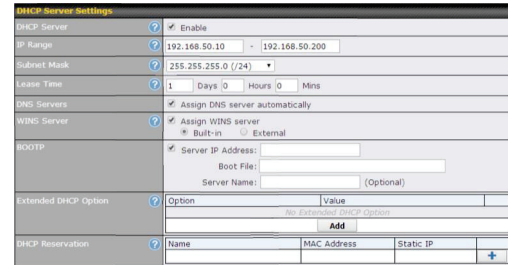

DHCP Server Settings

DHCP Server

When this setting is enabled, the DHCP server automatically assigns an IP address to each computer that is connected via LAN and configured to obtain an IP address via DHCP. The Pepwave router's DHCP server can prevent IP address collision on the LAN.

IP Range & Subnet Mask

These settings allocate a range of IP addresses that will be assigned to LAN computers by the Pepwave router's DHCP server.

Lease Time

This setting specifies the length of time throughout which an IP address of a DHCP client remains valid. Upon expiration of the lease time, the assigned IP address will no longer be valid and renewal of the IP address assignment will be required.

DNS Servers

This option allows you to input the DNS server addresses to be offered to DHCP clients. If **Assign DNS server automatically** is selected, the Pepwave router's built-in DNS server address (i.e., LAN IP address) will be offered.

WINS Server

This option allows you to optionally specify a Windows Internet Name Service (WINS) server. You may choose to use the **built-in WINS server** or **external WINS servers**. When this unit is connected using SpeedFusion™, other VPN peers can share this unit's built-in WINS server by entering this unit's LAN IP address in their **DHCP WINS Server** setting. Afterward, all PC clients in the VPN can resolve the NetBIOS names of other clients in remote peers. If you have enabled this option, a list of WINS clients will be displayed at **Status>WINS Clients**.

BOOTP

Check this box to enable BOOTP on older networks that still require it.

Extended DHCP Option


In addition to standard DHCP options (e.g., DNS server address, gateway address, subnet mask), you can specify the value of additional extended DHCP options, as defined in RFC 2132. With these extended options enabled, you can pass additional configuration information to LAN hosts.

DHCP Reservation

To define an extended DHCP option, click the **Add** button, choose the option to define and enter its value. For values that are in IP address list format, you can enter one IP address per line in the provided text area input control. Each option can be defined once only.

This setting reserves the assignment of fixed IP addresses for a list of computers on the LAN. The computers to be assigned fixed IP addresses on the LAN are identified by their MAC addresses. The fixed IP address assignment is displayed as a cross-reference list between the computers' names, MAC addresses, and fixed IP addresses.

Name (an optional field) allows you to specify a name to represent the device. MAC addresses should be in the format of **00-AA-BB-CC-DD-EE**. Press to create a new record. Press to remove a record. Reserved client information can be imported from the **Client List**, located at **Status>Client List**. For more details, please refer to **Section 23.3**.




Static Route Settings

Static Route

This table is for defining static routing rules for the LAN segment. A static route consists of the network address, subnet mask, and gateway address. The address and subnet mask values are in **w.x.y.z** format.


The local LAN subnet and subnets behind the LAN will be advertised to the VPN. Remote routes sent over the VPN will also be accepted. Any VPN member will be able to route to the local subnets. Press to create a new route. Press to remove a route.



WINS Server Settings

Enable

Check the box to enable the WINS server. A list of WINS clients will be displayed at **Status>WINS Clients**.

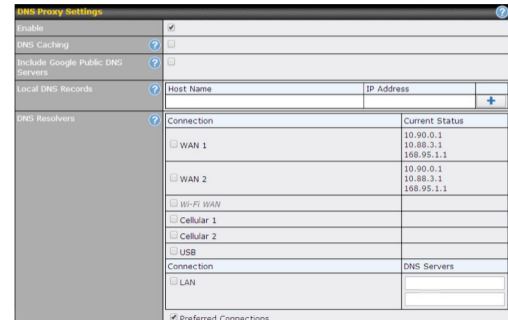

DNS Proxy Settings

Enable

To enable the DNS proxy feature, check this box, and then set up the feature at **Network>LAN>DNS Proxy Settings>DNS Resolvers**. A DNS proxy server can be enabled to serve DNS requests originating from LAN/PPP/SpeedFusion™ peers. Requests are forwarded to the **DNS servers/resolvers** defined for each WAN connection.

DNS Caching

This field is to enable DNS caching on the built-in DNS proxy server. When the option is enabled, queried DNS replies will be cached until the records' TTL has been reached. This feature can help improve DNS lookup time. However, it cannot return the most up-to-date result for those frequently updated DNS records. By default, **DNS Caching** is disabled.

Include Google Public DNS Servers

When this option is **enabled**, the DNS proxy server will also forward DNS requests to Google's Public DNS Servers, in addition to the DNS servers defined in each WAN. This could increase the DNS service's availability. This setting is disabled by default.


Local DNS Records


This table is for defining custom local DNS records. A static local DNS record consists of a host name and IP address. When looking up the host name from the LAN to LAN IP of the Pepwave router, the corresponding IP address will be returned. Press to create a new record. Press to remove a record.

DNS Resolvers ^A

Check the box to enable the WINS server. A list of WINS clients will be displayed at **Network>LAN>DNS Proxy Settings>DNS Resolvers**. This field specifies which DNS resolvers will receive forwarded DNS requests. If no WAN/VPN/LAN DNS resolver is selected, all of the WAN's DNS resolvers will be selected. If a SpeedFusion™ peer is selected, you may enter the VPN peer's DNS resolver IP address(es). Queries will be forwarded to the selected connections' resolvers. If all of the selected connections are down, queries will be forwarded to all resolvers on healthy WAN connections.

^A - Advanced feature, please click the button on the top right hand corner to activate.


To enable VLAN configuration, click the  button in the **IP Settings** section.



To add a new LAN, click the **New LAN** button. To change LAN settings, click the name of the LAN to change under the **LAN** heading.



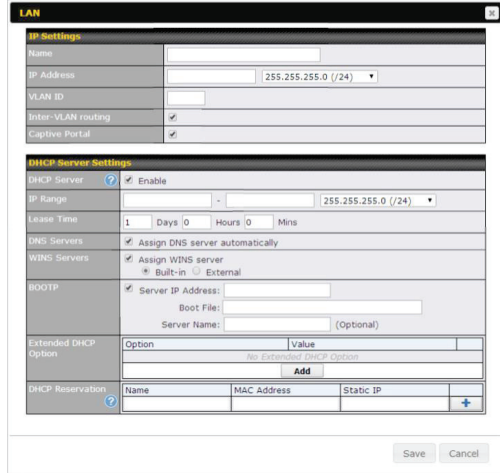

The following settings are displayed when creating a new LAN or editing an existing LAN.




IP Settings	
Name	Enter a name for the LAN.
IP Address &	Enter the Pepwave router's IP address and subnet mask values to be used on the LAN.

Subnet Mask	
Inter-VLAN routing	Check this box to enable routing between virtual LANs.
Captive Portal	Check this box to turn on captive portals.

DHCP Server Settings	
DHCP Server	When this setting is enabled, the Pepwave router's DHCP server automatically assigns an IP address to each computer that is connected via LAN and configured to obtain an IP address via DHCP. The Pepwave router's DHCP server can prevent IP address collisions on the LAN.
IP Range & Subnet Mask	These settings allocate a range of IP address that will be assigned to LAN computers by the Pepwave router's DHCP server.
Lease Time	This setting specifies the length of time throughout which an IP address of a DHCP client remains valid. Upon expiration of Lease Time , the assigned IP address will no longer be valid and the IP address assignment must be renewed.
DNS Servers	This option allows you to input the DNS server addresses to be offered to DHCP clients. If Assign DNS server automatically is selected, the Pepwave router's built-in DNS server address (i.e., LAN IP address) will be offered.
WINS Servers	This option allows you to specify the Windows Internet Name Service (WINS) server. You may choose to use the built-in WINS server or external WINS servers. When this unit is connected using SpeedFusion™, other VPN peers can share this unit's built-in WINS server by entering this unit's LAN IP address in their DHCP WINS Servers setting. Therefore, all PC clients in the VPN can resolve the NetBIOS names of other clients in remote peers. If you have enabled this option, a list of WINS clients will be displayed at Status>WINS Clients .
BOOTP	Check this box to enable BOOTP on older networks that still require it.
Extended DHCP Option	In addition to standard DHCP options (e.g. DNS server address, gateway address, subnet mask), you can specify the value of additional extended DHCP options, as defined in RFC 2132. With these extended options enabled, you can pass additional configuration information to LAN hosts. To define an extended DHCP option, click the Add button, choose the option to define, and then enter its value. For values that are in IP address list format, you can enter one IP address per line in the provided text area input control. Each option can be defined once only.
DHCP Reservation	This setting reserves the assignment of fixed IP addresses for a list of computers on the LAN. The computers to be assigned fixed IP addresses on the LAN are identified by their MAC addresses. The fixed IP address assignment is displayed as a cross-reference list between the computers' names, MAC addresses, and fixed IP addresses. Name (an optional field) allows you to specify a name to represent the device. MAC addresses should be in the format of 00:AA:BB:CC:DD:EE . Press  to create a new record. Press  to remove a record. Record clients information can be imported from the Client List , located at Status>Client List . For more details, please refer to Section 23.3 .

Once configuration is complete, click **Save** to store the changes.


To configure DHCP relay, first click the  button found next to the **DHCP Server** option to display the settings.





DHCP Relay Settings	
Enable	Check this box to turn on DHCP relay.
DHCP Server IP Address	Enter the IP addresses of one or two DHCP servers in the provided fields. The DHCP servers entered here will receive relayed DHCP requests from the LAN. For active-passive DHCP server configurations, enter active and passive DHCP server relay IP addresses in DHCP Server 1 and DHCP Server 2 .
DHCP Option 82	DHCP Option 82 includes device information as relay agent for the attached client when forwarding DHCP requests from client to server. This option also embeds the device's MAC address and network name in circuit and remote IDs. Check this box to enable DHCP Option 82.

Once DHCP is set up, configure **LAN Physical Settings**, **Static Route Settings**, **WINS Server Settings**, and **DNS Proxy Settings** as noted above.


Finally, if needed, configure Bonjour forwarding, Apple's zero configuration networking protocol. Once VLAN configuration is complete, click **Save** to store your changes.



Bonjour Forwarding Settings	
Enable	Check this box to turn on Bonjour forwarding.
Bonjour Service	Choose Service and Client networks from the drop-down menus, and then click  to add the networks. To delete an existing Bonjour listing, click  .

9.2 Captive Portal

The captive portal serves as gateway that clients have to pass if they wish to access the internet using your router. To configure, navigate to **Network>LAN>Captive Portal**.

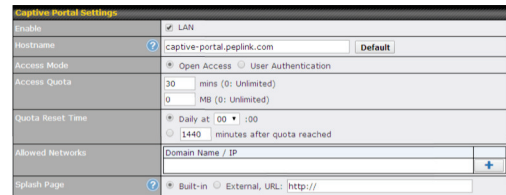

Captive Portal Settings																													
Enable	Check Enable and then, optionally, select the LANs/LANs that will use the captive portal.																												
Hostname	To customize the portal's form submission and redirection URL, enter a new URL in this field. To reset the URL to factory settings, click Default .																												
Access Mode	Click Open Access to allow clients to freely access your router. Click User Authentication to force your clients to authenticate before accessing your router. This authenticates your clients through a RADIUS server. After selecting this option, you will see the following fields:																												
RADIUS Server	<table border="1"> <tbody> <tr> <td>Authentication</td> <td>Radius Server</td> <td>Port 1812</td> <td>Default</td> </tr> <tr> <td>Auth Server Secret</td> <td></td> <td><input type="checkbox"/> Hide Characters</td> <td></td> </tr> <tr> <td>Auth URL</td> <td></td> <td></td> <td></td> </tr> <tr> <td>Accounting Server</td> <td>Radius Server</td> <td>Port 1813</td> <td>Default</td> </tr> <tr> <td>Accounting Server Secret</td> <td></td> <td><input type="checkbox"/> Hide Characters</td> <td></td> </tr> <tr> <td>Accounting Session Interval</td> <td></td> <td>seconds</td> <td></td> </tr> <tr> <td>Internal Connection</td> <td>LAN</td> <td></td> <td></td> </tr> </tbody> </table> <p>Fill in the necessary information to complete your connection to the server and enable authentication.</p>	Authentication	Radius Server	Port 1812	Default	Auth Server Secret		<input type="checkbox"/> Hide Characters		Auth URL				Accounting Server	Radius Server	Port 1813	Default	Accounting Server Secret		<input type="checkbox"/> Hide Characters		Accounting Session Interval		seconds		Internal Connection	LAN		
Authentication	Radius Server	Port 1812	Default																										
Auth Server Secret		<input type="checkbox"/> Hide Characters																											
Auth URL																													
Accounting Server	Radius Server	Port 1813	Default																										
Accounting Server Secret		<input type="checkbox"/> Hide Characters																											
Accounting Session Interval		seconds																											
Internal Connection	LAN																												