

project nursery®

SMART

SMART

WI-FI BABY MONITOR

User Guide

PNMAL2

What's inside

Welcome!	2
Getting started	3
Tour of the system	9
Everyday use	13
<i>Motion detection</i>	14
<i>Sound detection</i>	14
<i>Auto-record time</i>	15
<i>Battery life</i>	15
<i>Temperature alarm</i>	16
<i>Music</i>	16
<i>Share camera with friend</i>	17
<i>Flip horizontally / vertically</i>	18
<i>Camera time set</i>	18
<i>Camera info</i>	19
<i>Delete Camera</i>	19
Troubleshooting / FAQs	20

WELCOME!

This WiFi Baby Monitor makes it simple to keep your eyes and ears on your little one from anywhere! This guide takes you through the steps to get started!

Check out our setup videos

On your computer, go to <http://bit.ly/pnwifi-setup> or scan the QR code here.



Before you start...

Make sure you read the Important Information sheet included in this package.

Step 1: Unpack



Smart Baby
WiFi Camera


The accessories:

- (1) Power adapter
- (1) 10' Power cable
- (2) Mounting screws

GETTING STARTED

Step 2: Position the camera

Find a location for the camera that gives you the best view of your baby in his or her crib.

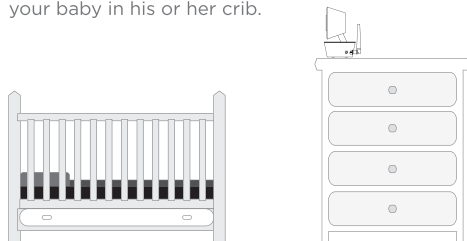

Place the camera on a flat surface, like a dresser or shelf, or mount the camera to a wall using the keyhole slots on its bottom (see the mounting template included in this package).

IMPORTANT: NEVER place the camera or cords of any kind inside the crib. NEVER place the camera or cords within reach of the baby.

WARNING

Strangulation Hazard:

Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (0.9m) away).



Never use extension cords with AC Adapters. Only use the AC Adapters provided.

Step 3: Test your WiFi signal

Your Project Nursery Smart Baby WiFi Camera needs strong enough signal from your WiFi router in order to send its video signal. Here's how to test it.


First, go to where you want to put the camera. Make sure your smartphone or other portable wireless device is connected to the WiFi network you want to test.

Look at the WiFi icon on your device screen to see the strength of the connection. For example, on iOS devices look in the upper left-hand corner of the screen for the WiFi icon (shown here).


For best results, look for a location with at least 50% strength to use the WiFi camera.



Step 4: Plug in the camera

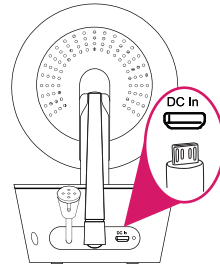

Plug one end of the included power cable into the **DC In** jack on the back of the camera.

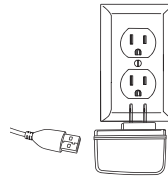

Plug the other end into the included power adapter. Then plug the adapter into an outlet or surge protector.

The camera turns on automatically when you plug it in (the indicator light on its back panel turns solid red).

Step 5: Install the App on your phone or tablet



In the Google Play or Apple App Stores, search for “PROJECT NURSERY SMART MONITOR” and look for the icon shown here. Then download and install the App.

Step 6: Launch the App

Once the Project Nursery Smart Monitor App has installed on your smartphone or tablet, press the icon to launch the App.

Step 7: Create a Project Nursery account and password



The first time you launch the Project Nursery App, you'll need to create an account and password so that you can access your camera securely.

Press **Register** to start, then follow the steps to set up your account.

IMPORTANT: *Make sure you give a valid email address that you have easy access to. The App will use this address if you ever need to recover or reset your password.*

 This image shows the registration form with the following fields:


- Email address
- Re-enter the email address
- New password
- Re-enter new password

 Below the fields is a "Register" button. A note at the bottom states: "Password must be between 8 and 16 characters in length, numbers, capital letters, lower case letters and least the types twice in total."


Once you've finished creating your account and password, the App will ask you to Login with the email address and password for your account.

Step 8: Pair the Project Nursery camera with the App

Make sure the Project Nursery Smart Monitor App is open on your phone or tablet. Also make sure that your phone or table is connected to your WiFi network.

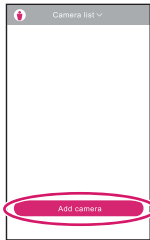

In the App's home screen, press the **Add camera** button at the bottom of the screen.



In the next screen, press the **Add new camera with WiFi** button.

Problems connecting?


If the *Add new camera with WiFi* method doesn't work, try the *Scan QR code to add* method. Choose **Add Camera**, then **Scan QR code to add** and follow the on-screen directions.

The App will prompt you to make sure your camera is on. If you haven't already turned it on, press the **Power** button on the right side of the camera (the camera's LED lights up), then press the **Next step** button in the App.




The next screen in the App lets you name the camera you're setting up and prompts you to scan the QR code on the bottom of the camera.

To name the camera you're setting up: Press in the Camera name field and enter the name you want to use. **Hint:** Use a name that's easy for Alexa to recognize with voice commands, like "nursery."

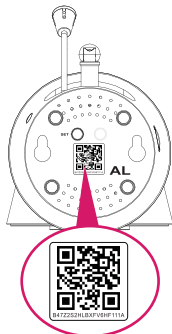


To scan the QR code on the camera: Find the QR code on the bottom of the camera. Position your smartphone or tablet so that its camera can scan this QR code. Then press where indicated in the App to scan this QR code.

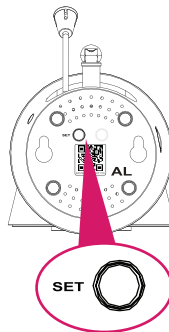

Find the **SET** button on the bottom of the WiFi camera. Press it for one second (until the camera gives an audio signal).



After you've scanned the QR code on the bottom of the WiFi Camera, the App will ask you to press the **SET** button on the bottom of the camera and enter the name (WIFI SSID) and password of your WiFi network.

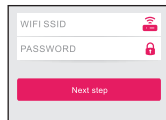


Enter the name (WIFI SSID) and password for your home WiFi network in the App.

IMPORTANT: *Double check your network name and password correctly—these must be correct to work with the App!*

Continues on next page...

Once you've finished entering your network name and password, press the **Next step** button on the App screen. The indicator light on the back of the camera starts flashing—the camera is trying to join your WiFi network.

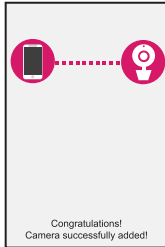

Once the camera has successfully connected to your WiFi network, you'll see the Success screen in the App and the indicator light on the back of the camera will turn green. **Congratulations—you've just set up your first camera!**

IMPORTANT: *If the camera does not connect, follow the instructions in the App to troubleshoot.*

Connection Troubleshooting


- + Make sure your phone or tablet is connected to the WiFi network you want to use.
- + Make sure the camera is getting a good signal from your WiFi router. See step 3 for more information.
- + Test your WiFi network with other devices to make sure its working.
- + Double check that you've entered the correct password for your WiFi network in the Project Nursery App.
- + Make sure your router is broadcasting its SSID (name). The Project Nursery camera does not support hidden SSIDs.
- + Make sure that Wi-Fi signal is 2.4GHz. The Project Nursery camera does not support 5GHz WiFi.
- + Make sure that your WiFi router uses either WPA2-PSK/WPA-PSK or AES as its encryption method.
- + Make sure that there is no MAC filter on router or add MAC address to router whitelist.
- + Reset the camera to set up connection again. Press and hold SET key for 10 seconds. The camera gives a long beep when it is fully reset.

For additional assistance, please call 1-844-393-7338.

Step 9: Choose the camera from the home screen



Press the part of the home screen showing the camera you set up in order to choose this camera.

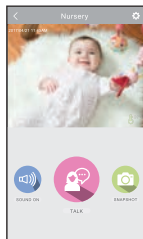

The Camera View screen is your gateway to total control of your WiFi camera from virtually anywhere.

The next section gives you a tour of the features available from this screen.

Step 10: Activate the Project Nursery Alexa Skill


If you have an Alexa-enabled speaker, you can control the Project Nursery Smart Baby Monitor System with your voice! Here's how...



Download and launch the Amazon Alexa App on your smartphone or tablet.



In the Alexa App, search for "Project Nursery." Then choose the Project Nursery skill from the results.

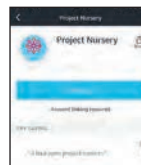

In the next screen, press the ENABLE button. Then follow the on-screen instructions to link your Project Nursery Smart Monitor account with the Project Nursery skill.

TOUR OF THE SYSTEM

Using Alexa


Once you've enabled the Project Nursery Alexa Skill, you're ready to start using Alexa with your Smart WiFi Baby Monitor.

To start controlling with Alexa: Say "Alexa, open Project Nursery." Then use one of voice commands below.


Tour of the system


	Say...	Example
Pan/Tilt	" Pan the [camera name] camera left/right."	<i>"Pan the nursery camera left."</i>
	" Tilt the [camera name] camera up/down."	<i>"Tilt the nursery camera up."</i>
Snapshots/ Video	" Take a picture with the [camera name] camera."	<i>"Take a picture with the nursery camera."</i>
	" Start/stop recording with the [camera name] camera."	<i>"Start recording with the nursery camera."</i>
Motion- Sound- Temperature Alerts	" Turn on/off [camera name] camera motion/sound detection ."	<i>"Turn on nursery camera motion detection."</i>
	" When was the last motion/sound detected by the [camera name] camera?"	<i>"When was the last motion detected by the nursery camera?"</i>
	" What is the temperature at the [camera name] camera?"	<i>"What is the temperature at the nursery camera?"</i>
Lullaby	" Play/stop lullabies on the [camera name] camera."	<i>"Play lullabies on the nursery camera."</i>

Tour of the System: Camera View Screen

 **(Settings)** accesses the Settings menu for this camera. Press this icon to adjust the WiFi and other settings.

Camera view shows you the image from your WiFi camera. Pan and tilt the camera by swiping on the screen left/right or up/down. Zoom the camera by double-tapping the screen.

 **(Snapshot)** takes a still photo of the camera video. The snapshot file is saved to your smartphone or tablet.


 **(Talk)** lets you speak through this camera's built-in speaker. Press and hold this icon to start speaking.

 **(Sound On/Off)** turns the sound from the camera on and off.


Pan, Tilt, and Zoom

To zoom the active camera: Double-tap the camera view screen.

To pan or tilt the active camera: Swipe the camera view screen left/right or up/down.

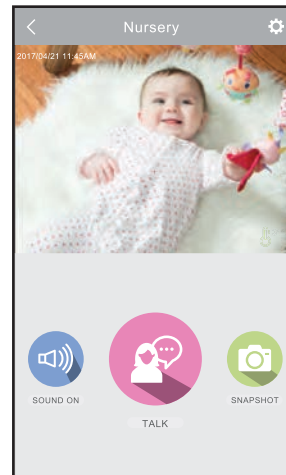

Camera (front)

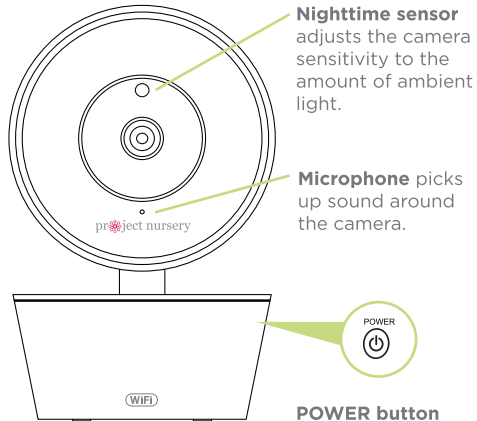


Nighttime sensor adjusts the camera sensitivity to the amount of ambient light.

Microphone picks up sound around the camera.

POWER button (right side) turns the camera on and off (press and hold).

Camera (back)

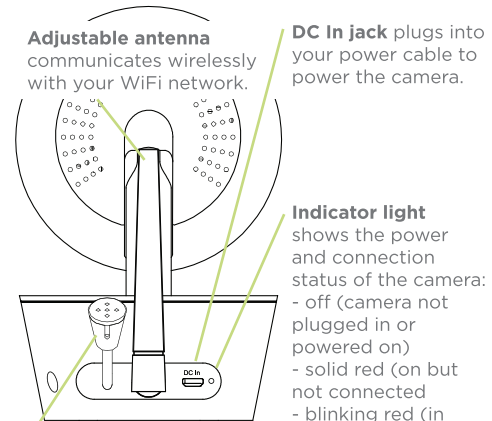

Adjustable antenna communicates wirelessly with your WiFi network.


DC In jack plugs into your power cable to power the camera.

Indicator light shows the power and connection status of the camera:

- off (camera not plugged in or powered on)
- solid red (on but not connected)
- blinking red (in the process of connecting)
- solid green (connected to network and App)
- blinking green (camera being actively viewed).

Thermal sensor detects the temperature around the camera.

Camera (bottom)

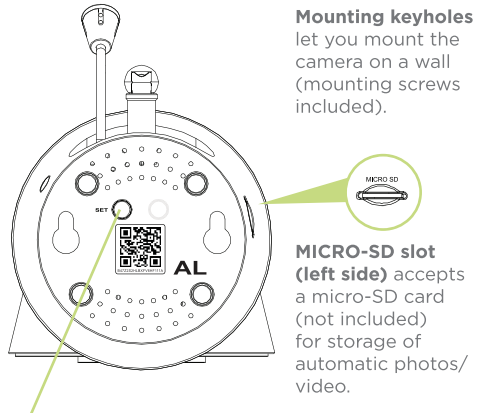

Mounting keyholes let you mount the camera on a wall (mounting screws included).


MICRO-SD slot (left side) accepts a micro-SD card (not included) for storage of automatic photos/video.


SET starts the WiFi setup process (press and hold).

QR code passes the camera ID information to the App during the WiFi setup process.

3. EVERYDAY USE

Everyday use

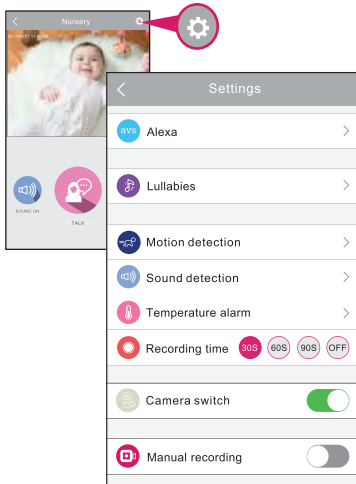

In the Camera View screen, press the  (Settings) icon to customize your WiFi camera's setup.

This chapter takes you through the settings you can customize, one by one.



Alexa

You can set up the App and camera to follow voice commands and provide feedback through Alexa Voice Services (see page 9 for more information on configuring Alexa). This option lets you access settings and other options associated with the Alexa skill.



Lullabies


This Project Nursery system comes with 3 lullabies, 2 nature sounds, and white noise ready to play—simply choose the one you want, and the camera you're on will play it back.

To play a lullaby, nature sound, or white noise from the active camera: Press **Lullabies** in the **Setup** menu. Then press the option you want to play.

Note: Make sure you're displaying the camera you want to play the lullaby on. If you want to play on a different camera, go back to the App's home screen and choose that camera.



IMPORTANT: You must have a micro SD card installed in your camera to use the auto-recording function of this feature.



IMPORTANT: You must have a micro SD card installed in your WiFi camera to use the auto-recording function of this feature.

Motion detection

You can set up the App and camera so that you get a notification on your phone and the camera automatically records video when the camera detects that your baby is moving.

To set up motion detection: In the **Settings** menu, press the **Motion detection** sensitivity setting you want to use: **OFF**, **L** (low), **M** (medium), or **H** (high).

Note: You might want to test different levels of sensitivity for this setting, to find the best fit for your environment and preference.


Sound detection

You can set up the App and camera so that you get a notification on your phone and the camera automatically records video when the camera detects sound from your baby.

To set up sound detection: In the **Settings** menu, press the **Sound detection** sensitivity setting you want to use: **OFF**, **L** (low), or **H** (high).


Note: You might want to test different levels of sensitivity for this setting, to find the best fit for your environment and preference.

Notes about notifications:

- + Pressing on a sound- or motion-detection notification or going to messages shows you a screenshot of the motion detection event. To view the video, press the  icon in the camera view screen.
- + The App sends a maximum of 2 notifications every 4 minutes. It prioritizes notifications in the following order: temperature, sound, motion.



IMPORTANT: You must have a *micro SD card installed in your WiFi camera to use this feature.*



Auto-record time

You can set up the camera so that it automatically records a certain amount of video when the camera detects a motion or sound alert.

To set up an auto-record time: In the **Settings** menu, press the amount of **Recording time** you want (in seconds) when a motion or sound alert is triggered: **30s**, **60s**, or **90s** (or **OFF** for none).

Temperature alarm

These alerts tell you when your baby's room is too hot or too cold.

- 1 In the **Settings** menu, press **Temperature alarm**.
- 2 In the **Temperature alarm** menu, press **Edit** at the top of the screen to change the settings.
To change from degrees Fahrenheit to Celsius: Press the C.
To set a high temperature alert: Press the switch next to **High temperature alert**. Then set the temperature you want for the high temperature alert.
To set a low temperature alert: Press the switch next to **Low temperature alert**. Then set the temperature you want for the high temperature alert.

If the temperature in your baby's room goes beyond the limit(s) you set, you will get a push notification on your phone or tablet.



Camera switch


You can turn the camera on and off from the App settings screen with this setting.

To turn the camera on or off: In the **Settings** menu, press the toggle next to the **Camera switch** setting.



Manual recording

Manual recording lets you enable or disable a 5-minute video recording loop on your WiFi camera's SD card. Press the switch next to this option to turn manual recording on and off (motion detection and sound detection recording are not affected by the manual recording setting).




Rotate video 180 degrees

This option lets you reverse the orientation of the Camera View video. Press the switch to toggle it on and off.



Nightvision

This option lets you configure the camera's IR light for viewing nighttime video. Press it to access the Nightvision menu.



Share with friends

The Project Nursery Smart Camera lets you share video with friends and family, so that they can see what's happening with baby. These guest accounts have limited access to settings—they can view and talk through cameras and record pictures and videos directly to their phone.

- 1 Make sure the person you want to share with has downloaded the Project Nursery Smart Camera App on their phone or tablet.
- 2 On your phone or tablet, go to the **Settings** menu and press **Share with friends**. Have the person you want to share with follow the steps in the App.


IMPORTANT: *Your friend or family member will need to scan the QR code on the screen. If they are not physically present to do so, either print the screen or do a screenshot and send it to a phone they can scan with their phone.*

Everyday use



Camera time check

The camera's internal clock might need to be periodically synchronized with your phone's clock. If you notice the two times don't match, choose Camera time check in the App's Settings menu, and follow the directions on the page that appears. The App will sync the current camera's clock with your phone or tablet's clock.



WiFi setting

The WiFi setting screen gives you details about your camera's WiFi connection and lets you update settings if your network changes.



Camera information

The Camera information screen gives you details about the currently selected camera, including the amount of memory left on the micro-SD card if you have one installed.

The Format SD card button at the bottom of the Camera info screen lets you format a micro-SD card before you use it for the first time.

To format a micro-SD card: Insert the card into the WiFi camera's micro-SD card slot. Then press the Format SD card button at the bottom of the Camera info page.



Delete Camera

If you've tried all of the troubleshooting solutions to solve a problem, and nothing seems to work, you might need to reset the camera and App to their factory settings and start setup again. **WARNING: Delete camera erases all of your custom settings. You will have to set up the camera from scratch.**

4. TROUBLESHOOTING / FAQs

Most issues with the Project Nursery baby monitoring system can be solved by following one of the troubleshooting tips below. For additional assistance, please call 1-844-393-7338.

I can't connect the camera to my network.

- + Make sure your phone or tablet is connected to the WiFi network you want to use.
- + Make sure the camera is getting a good signal from your WiFi router. See page xx for more information.
- + Make sure your router is broadcasting its SSID (name). The Project Nursery camera does not support hidden SSIDs.
- + Make sure that Wi-Fi signal is 2.4GHz. The Project Nursery camera does not support 5GHz WiFi.
- + Make sure that your WiFi router uses either WPA2-PSK/WPA-PSK or AES as its encryption method.
- + Make sure that there is no MAC filter on router or add MAC address to router whitelist.
- + Reset the camera to set up connection again. Press and hold SET key for 10 seconds. The camera will give a long beep when it is fully reset.

The camera's indicator light remains red (connection to network failed).

- + Double check that you've entered the correct password for your WiFi network in the Project Nursery App.
- + Test your WiFi network with other devices to make sure its working.
- + Make sure the camera is getting a good signal from your WiFi router. See page xx for more information.
- + Make sure that Wi-Fi signal is 2.4GHz. The Project Nursery camera does not support 5GHz WiFi.
- + Make sure that your WiFi router uses either WPA2-PSK/WPA-PSK or AES as its encryption method.

The WiFi camera's indicator light flashes green.

- + The camera is being actively viewed.

I don't see video from the camera on my phone/tablet.

- + Make sure the camera is turned on and that it is plugged in to a working outlet.
- + Make sure the camera is within range of your WiFi router (certain kinds of signal obstacles, like large metal objects, might shorten the range somewhat).
- + Make sure your phone/tablet has an active data or WiFi connection and that the Project Nursery App is open and configured with the camera.

I can't record video or pictures on the camera (for motion or sound alerts).

- + Make sure you have an Micro SD card (not included) inserted in the **MICRO SD** card slot on the side of the parent monitor.
- + Make sure auto-record is set to on and a motion or sound alert is set.

I can't record video or pictures on my phone/tablet.

- + Make sure your phone/tablet has enough available memory to record video or pictures.

My video feed is frozen.

- + Check the time stamp on the video feed screen to make sure the video is frozen. Then return to the camera home screen and reload that camera again.
- + Close the app and re-open.

I can't pan/tilt the camera from my phone or tablet.

- + Make sure you're swiping on the video from the camera on your phone or tablet. Pan and tilt the camera by swiping on the screen left/right or up/down. Zoom the camera by double-tapping the screen.
- + Make sure the camera is moving freely. In certain positions, the camera might bump into the stand neck. If the neck is in the way, pan or tilt the camera in the other direction so that you have a free range of movement.

The App is frozen.

- + Force close the App on your phone or tablet. Then re-open it.

I can't hear sounds from baby's room.

- + Make sure the volume on your phone or tablet is turned up.
- + Make sure sound is turned on in the Camera view screen.
- + Make sure the microphone on the camera is not blocked. The microphone is just below the lens.

The lullabies/sounds aren't playing.

- + If you have multiple cameras, make sure you've chosen the one you want the lullabies to play on before you start the lullaby. Go to the Home screen and choose the camera you want. Then go to **Settings**, then **Lullabies** and select an option to play.

The temperature alerts don't work.

- + Make sure you've set the temperature preference to the system you use, Fahrenheit (standard in the US) or Celsius (standard outside the US). To switch your temperature preference, go to **Settings** > **Temperature alert**.
- + Make sure you've set the right kind of temperature alert—for example, if you want to make sure your baby's room does not get below 68 degrees Fahrenheit, set the **Low Temperature Alert** to **68**. If you want to make sure your baby's room doesn't get above a certain temperature, set the **High Temperature alert** to that temperature.

Motion alerts don't work.

- + You might need to adjust the sensitivity of the alerts—for example, if **Motion detection** is set to **Low**, the monitor will not come on as often as when **Motion detection** is set to **Medium** or **High**. To adjust this setting, go to **Settings** > **Motion detection**.
- + If you have multiple cameras, you might need to set an alert for the camera you're using—motion alerts need to be set separately for each camera.
- + The App gives a maximum of 2 notifications every 4 minutes.

Sound alerts don't work.

- + You might need to adjust the sensitivity of the alerts—for example, if **Sound detection** is set to **Low**, the monitor will not come on as often as when **Sound detection** is set to **High**. To adjust this setting, go to **Settings > Sound detection**.
- + If you have multiple cameras, you might need to set an alert for the camera you're using—sound alerts need to be set separately for each camera.
- + The App gives a maximum of 2 notifications every 4 minutes.

I'd like to stop sharing the camera view with a friend/family member.

- + Go to the Settings menu in the Project Nursery App on your phone/tablet and select Delete camera at the bottom of the menu. This will stop all sharing, but you'll need to set up the camera again on your phone.

I'd like to give someone full access to my camera (including settings).

- + Guest accounts have limited access to settings. If you want to give someone full access, you will need to give them your account log-in info and password (not recommended!).

I can't access the camera from my computer.

- + The Project Nursery camera works with the Project Nursery App on iOS and Android devices only. It does not support computers or other mobile device operating systems.

I can't open the App on my Android tablet.

- + The Project Nursery App is not compatible with some makes and models of Android tablets. Contact our customer service at 1-844-393-7338 to see if your Android tablet is compatible with the Project Nursery App.

©2017 Voxx Accessories Corp.
 3502 Woodview Trace, Suite 220
 Indianapolis, IN 46268

PNMAL2 IB 00

IMPORTANT INFORMATION for Project Nursery PNMAL2

CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT OPEN.

Caution: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

WARNING:

Strangulation Hazard: Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3ft (1m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.



Baby Unit SET UP & USE:

- Determine a location for the Baby Unit that will provide the best view of your baby in his/her crib.
- Place the Baby Unit on a flat surface, such as a dresser, bureau, or shelf or mount the Unit to a wall securely using the keyhole slots under the stand.
- NEVER place the Baby Unit or cords within the crib.
- Do not place the Baby Unit or cords in the crib or within reach of the baby (the unit and cords should be more than 3 feet away).

For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible. The power unit for this device should be plugged in so that it stays vertical or lies flat.

WARNING

This digital video Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not place the Baby Unit or cords in the crib or within reach of the baby (the unit and cords should be more than 3 feet away)
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel or blanket.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.

- Do not use the Baby Monitor near water.
- Do not install the Baby Monitor near a heat source.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device.
- Do not touch the plug contacts with sharp or metal objects.

CAUTION

The camera should be installed and operated with a minimum distance of 20cm between the radiator and your body.

The USB Port is for charging only.

Ecology

At the end of the product lifecycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. Some of the product materials can be reused if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.

Cleaning

Clean the Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals -- this may cause permanent damage to the product which is not covered by the warranty.
- Keep the Baby Monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself -- contact Customer Service for assistance.

FCC and IC regulations

FCC Part 15

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The cable with ferrite core provided with the baby monitor must be used with this equipment in order to comply with FCC rules.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Privacy of communications may not be ensured when using this device.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF EXPOSURE

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition aux radiations IC CNR-102 établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20 cm entre le radiateur et votre corps.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3(B)/NMB-3(B)

Product Information

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model numbers in case you need them. These numbers are located on the product.

Model No.: _____

Purchase Date: _____

Dealer/Address/Phone: _____

12 Month Limited Warranty

Voxx Accessories Corporation (the "Company") warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with new or reconditioned product (at the Company's option) without charge for parts and repair labor. To obtain repair or replacement within the terms of the warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to an approved warranty station. For the location of the nearest warranty station to you, call toll-free to our control office: 1-844-393-7338.

This Warranty is not transferable and does not cover product purchased, serviced or used outside the United States or Canada. The warranty does not extend to the elimination of externally generated static, noise, or loss of range or audio/video quality due to external factors, to costs incurred for the installation, removal or reinstallation of the product, or to damage to digital media devices or memory. The warranty does not apply to any product or part thereof which, in the opinion of the company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident or exposure to moisture. This warranty does not apply to damage caused by an AC adapter not provided with the product or by removal or defacement of factory serial number/barcode labels. THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT. This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO DURATION OF THIS WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER, INCLUDING ANY IMPLIED WARRANTY, MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM THE DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES WHATSOEVER. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

Some states/provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may also have other rights which vary from state/province to state/province.

©2017 Voxx Accessories Corp.
3502 Woodview Trace, Suite 220 Indianapolis, IN 46268

For customer service, call 1-844-393-7338