

REVISION TABLE									
Change Point	Ref. PN.	PN.	Part Description	Date	Change Notes	Author			
		MP-0000066493	QIG, 49201, Generic, EN, Color, Multi, R0, v0	26.07.2018	Initial Release	MB			
		1							

Printing Colors




Flat dimension	210mm × 148mm
Dimension after binding	A6 (105mm*148mm)
Pages	12 Pages
Cover Printing Color	Colour Printing
Inner Printing Color	Colour Printing
Cover Page Material	120-140 gr white paper (C2S)/Copperplate paper
Inner Pages Material	120-140 gr white paper (C2S)/Copperplate paper
Cover Page Coating	Glossy Varnish
Inner Pages Coating	Glossy Varnish
Binding & Folding Process	Book type folding & 2pcs staple biding
Printing Technique	Offset printing
Output Ipi	200Lpi
Size Tolerance	L*W: + 1/-1mm.
Color Tolerance	ΔE=2 for Pantone ΔE=3 for CMYK
Part Number	MP-0000066493





PORTS and BUTTONS



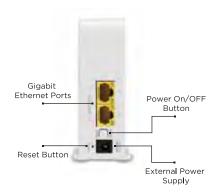


2



Please remove protective plastic cover from the products before installation.

TRIPLE and DUAL PACK INSTALLATION

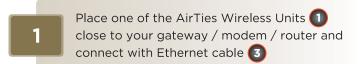



Plug one of the power adapters 2 first into the product and then to a power socket. Turn on the unit.



3

After few seconds Power LED will be blinking in white, wait until the power LED becomes solid white.





To complete the installation please download **«AirTiesWiFi»** application on your mobile device.







AirTiesWiFi

Please follow the instructions on your mobile application to complete your setup. This process should take only a couple of minutes.

You are about to enjoy an amazing Wi-Fi network.

ADDITIONAL PACK INSTALLATION

Please open «AirTiesWiFi» application on your mobile device.


Please follow the instructions on your mobile device to complete your setup. This process should take only a couple of minutes.

You are about to enjoy an amazing Wi-Fi network.



AirTiesWiFi

^{*}If prompted for password, please type in **Wi-Fi Password** printed on the bottom label of the AirTies Wireless Unit.

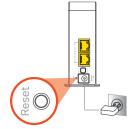

NOTES

• Returning to factory settings:

To return unit to factory settings, press down on the reset button (in a small opening on the back) for 5 seconds. A metal paperclip (with an extended tip) or strong toothpick are typically good choices for this task. When the reset process is triggered, the LEDs in the front will temporarily "shimmer" and the unit will reboot (in about 3 minutes) to factory settings.

• If you personalize the network settings, please record them here:

Network Name:
Network Password:
User Interface Password

Operational modes:

2.4 GHz: 802.11b, 802.11g, 802.11n (HT20), 802.11n (HT40),

5 GHz : 802.11a, 802.11n (HT20), 802.11n (HT40), 802.11ac (VHT20),

802.11ac (VHT40), 802.11ac (VHT80)

Hereby, [AirTies Wireless Networks] declares that the radio equipment type [Air 4920v2] is in compliance with Directive 2014/53/EU.

The full text of the EU decleration of conformity is available at the following internet address: http://www.airties.com/declarations-of-conformity.html

TIPS FOR BEST PERFORMANCE:

- · Keep units away from:
- Potential sources of electrical interference. Equipment that potentially cause interference include ceiling fans, home security systems, microwaves, PCs, and cordless phones (handset and base).
- -Large metal surfaces and objects. Large objects and wide surfaces such as glass, insulated walls, fish tanks, mirrors, brick, and concrete walls can also weaken wireless signals.
- -Sources and areas of heat such as ovens and sun rooms as well as direct sun light even if there is good air conditioning.
- Please make sure to remove the protective plastic covers used on the device before first use
- Please use device upright position. The openings are provided for ventilation, do not block or cover openings.
- Your device is designed to work indoors and under room temperature conditions only. Avoid placing the device to very cold, very hot, very humid or very dry locations inside your home."
- Maximum power consumption of networked standby mode is 6.2 W.
- This product has an overheating protection mechanism which may be enabled automatically when the product overheats due to abnormal ambient conditions or use cases. In such cases 2.4 and 5 GHz LED's will blink RED for about 20 seconds and the product will go to standby mode. The product will not be in use during this time and it will turn on automatically once the temperature goes down to regular operating temperatures.
- In such a case, please change the operating condition of the device based on the instructions above.

This product makes use of software developed by the open source community. Any such software is licensed under the specific license terms applicable to that particular software (like GPL, LGPL etc.). Detailed information on the applicable licenses and license terms can be found on the device's user interface.

By using this product, you acknowledge that you have reviewed such learnes are face terms can be found on the device's user interface. By using this product, you acknowledge that you have reviewed such learnes mand that you garee to be bound by them. Where such terms entitle you to the source code of said software, that source code will be made available at cost upon request from AirTies.

To obtain a copy of said source code, please send your request in writing via email to our bigarties.com or via snall mail to:

AirTies Wireless Communications

Rithat Upunit Solak No. 22 Sentetope,
Pp. 43995 99 list PARABUL/Turkey

AirTies will mail to you a CD with the requested source code at the cost of CD preparation and shipping&handling. For details please contact osrb@airties,

TROUBLESHOOTING

LED Indicators	Condition	LED Color	LED Behavior	Timing
	Power OFF	(OFF/Dark)	-	
Power	Power ON	White	Solid (No blinking)	
	Device is not ready	White	Blinking	
	WLAN is active and the node has an active strong Mesh connection on the Radio	Green	Blinking	50ms OFF 5000ms ON
	WLAN is active and all Mesh links on the Radio are weak	Red	Solid (No blinking)	
	Radio is inactive or Searching for radar activity	(OFF/Dark)		
<u></u>	WPS is in progress	Green	Blinking in sync	
5 GHz	WPS is succesful	Green	Solid (No blinking)	
	Unconfigured device	Green	Blinking in sync	4000ms OFF 4000ms ON
2.4 GHz	WLAN active, Device configured, No Mesh link on the Radio	Green	Solid (No blinking)	
	There is configured Mesh connection on the radio, however connection is inactive (Can not connect)	Red	Blinking	1000msec OFF 1000msec ON
	WPS is not successful	Red		

State Identifier	Explanation	Recommended Action(s)
А		Power the device on if desired. No other action required.
В		No action required. If unit was just powered on, then please wait for at least 2 minutes for the unit to complete its boot process.
С		No action required. Please wait.
D		No action required.
Е		Bring device closer to another device on the Mesh network.
F		No action required.
G		No action required.
Н	This behavior is temporary and lasts for about 5 seconds, after which the LEDs go to one of the following states:	If LED is red (state E) then bring device closer to another device on the Mesh network.
	Mesh with strong signal (state D), Mesh with poor signal (state E)	If LED is green (state D), then no action is required.
I	Device has factory setting and is not connected to the home network in any way (e.g., the device is not wired to the router-gateway)	Configure device (refer to Quick Installation Guide)
J	First AP (wired to router-gateway)	No action required.
К	AP is part of Mesh but unable to find any of its Mesh partners.	Make sure other device(s) that are part of the Mesh network are powered on and close enough to connect.
L	This behavior is temporary and lasts for about 5 seconds, after which the LEDs go back to the state the device was in before the WPS attempt	On failure, repeat WPS attempt after bringing device near another device that is already on the Mesh network (i.e., in state D).

