


UNX-05G

User's Manual

About Portable 5G Modem

Portable 5G Modem is a kind of online device which designed for the user who may use mobile internet to get online, and the user may access to the internet at anywhere and anytime.

Part Names and Functions

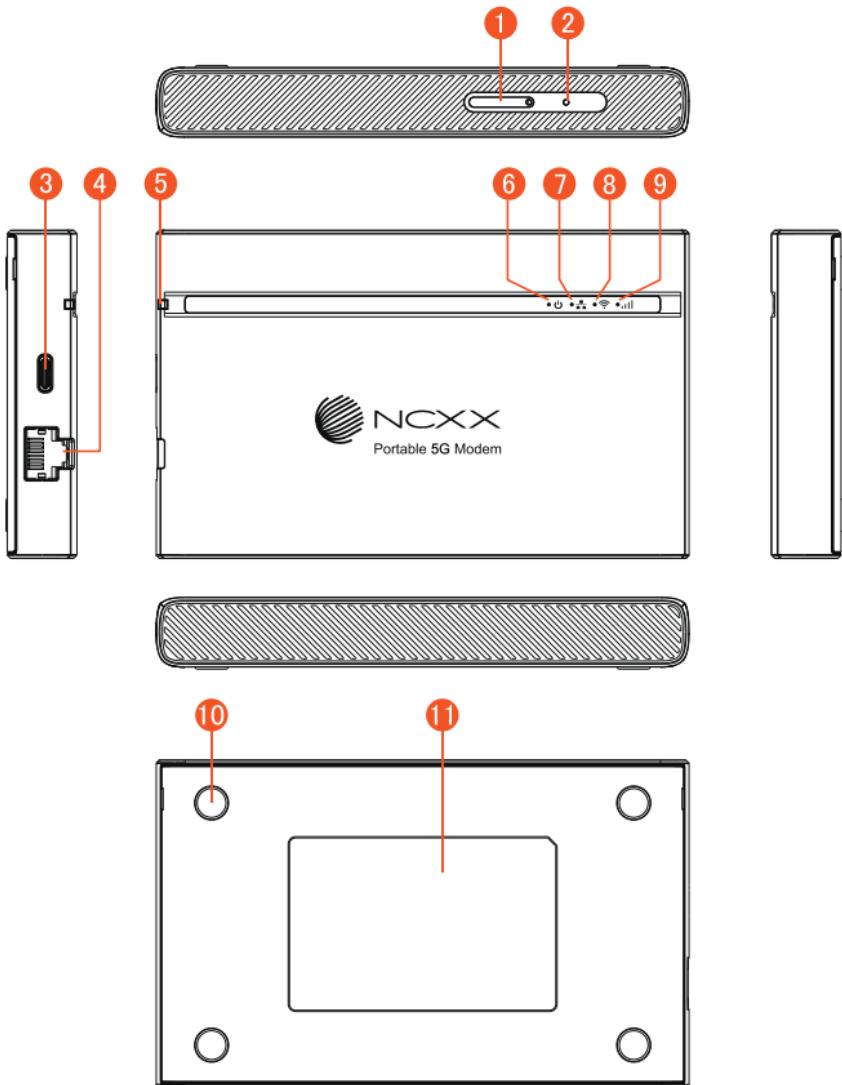

1 nano SIM Card tray

2 Reset button

The product settings can be restored to the factory default settings.

3 USB Type-C port

Connect USB Type-C cable (sample).

4 Ethernet ポート

Connect LAN cable.

5 Temperature rise warning indicator

This LED indicates that the temperature of this product has risen and communication is restricted or stopped.

6 Power indicator

Indicator for power supply status.

7 Ethernet indicator

Indicator for LAN status.

8 Wi-Fi indicator

Indicator for Wi-Fi status.

9 5G/4G indicator

This indicator indicates the type and strength of the radio wave being received.

10 Special Screws

11 ラベル


SSID, encryption key, etc. can be confirmed.

■ A label printed with IMEI information (product identification number) and other information is attached to the bottom of this product. Do not remove the sticker, as the IMEI number will be required for repair requests and after-sales service.

■ Place the product with the logo side turned up.


The radio wave condition of the 5G/4G antenna is improved.

■ With the product powered on, insert the tip of the SIM eject pin (sample) into the RESET button hole. Hold down the RESET button for at least 5 seconds. The product will automatically restart and the settings will be restored to its factory default settings.

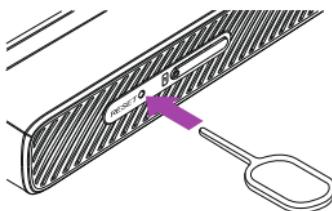

Indicator lamp

The following indicator lamps inform you of the communication status of the product.

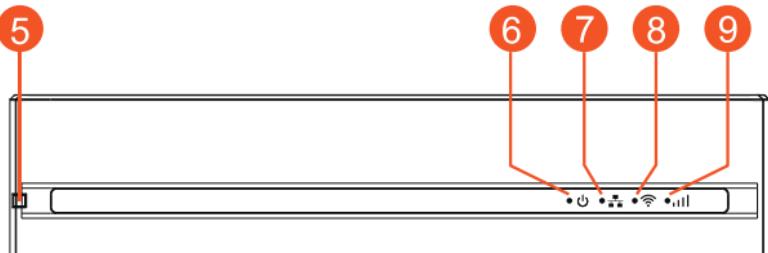

5 High Temperature lamp

Product Condition	Color and Lighting Pattern
Stop Operation	Red Lighting
Functional limitation	Orange Flashing (Lights on ⇔ lights off at the same interval)
Normal Operation	OFF

6 Power lamp

Product Condition	Color and Lighting Pattern
Boot Sequence	Cyan Lighting
Power Rule	15W mode
	7.5W mode
	4.5W mode
Lack of supply capacity	Red Lighting
Factory Reset	Cyan Flashing (Lights on ⇔ lights off at the same interval)

7 5G/4G connection lamp

Product Condition	Color and Lighting Pattern
5G	Antenna Level : 4 ~ 5ber
	Antenna Level : 3ber
	Antenna Level : 2ber
	Antenna Level : 1ber
LTE	Antenna Level : 4 ~ 5ber
	Antenna Level : 3ber
	Antenna Level : 2ber
	Antenna Level : 1ber
Network searching	Cyan Flashing

	(Lights on ↔ lights off at the same interval)
Out of service	Red Flashing
Standby State for Modem	(Lights on ↔ lights off at the same interval)
SIM PIN Lock State / SIM Error	Red Lighting
ME-PIN Lock State	Orange Lighting
APN Error	Red

8 Wi-Fi connection lamp

Product Condition		Color and Lighting Pattern
Wi-Fi mode	2.4GHz	Blue Lighting
	2.4GHz, 5GHz,	Orange Lighting
DFS		Red Flashing (Lights on ↔ lights off at the same interval)
Wi-Fi OFF		OFF

9 Ethernet port connection lamp

Product Condition		Color and Lighting Pattern
Link speed	1000Mbps	Green Lighting
	100Mbps	Orange Lighting
Ethernet No Link / Disable		OFF


Inserting the SIM Card

Before inserting/removing the SIM Card, ensure you turn off the product.
Insert/remove the card with the logo side of the product turned up.


1 Insert the tip of the SIM eject pin (sample) into the SIM Card tray hole.

Push the tool firmly in until the SIM card tray comes out.

Pushing this other than straight in may cause damage or malfunction.

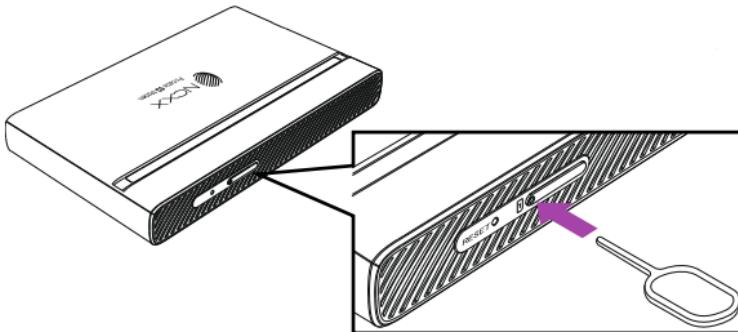


2 Pull out the SIM Card tray.

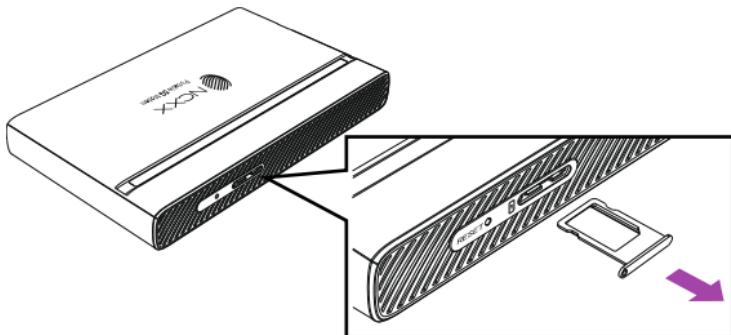


3 Put the nano SIM (4FF) Card into the SIM Card tray with the IC (metal) side facing down.

Check the direction of the IC Card, and place it security in the SIM Card tray.

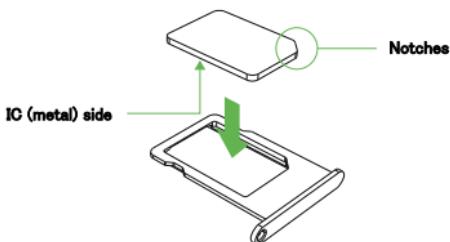


4 Insert the SIM Card tray fully into the product straight and horizontally with logo side facing up.

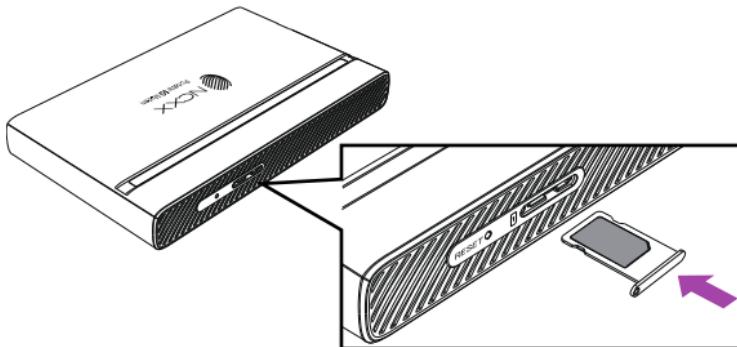

Set the connection destination

- 1 Connect the USB Type-C cable (sample) to the USB Type-C port on this product and the USB Type-C port on the PC.

Insert the cable straight to the back.

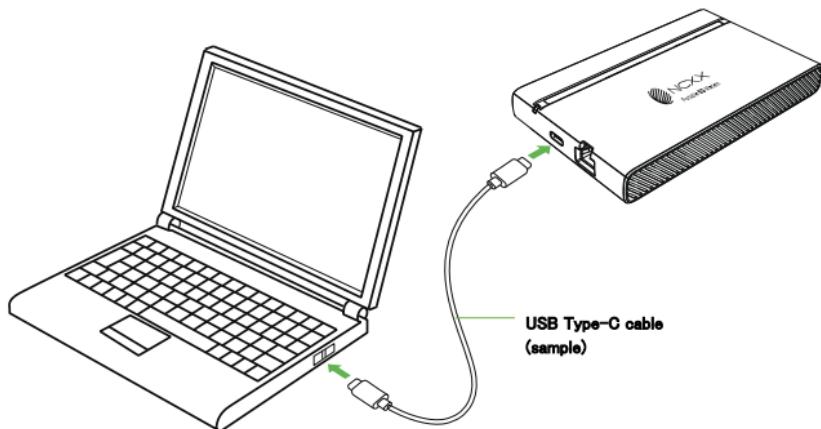

- 2 Launch the Web browser

- 3 Input the URL

Enter "<http://192.168.0.1/>" in the URL entry field and press "Enter".

- 4 Enter the user name and password on the login screen

Enter "admin" in the User Name field and "admin" in the Password field and click "LOGIN".
Enter lower-case single-byte alphanumeric characters.

- 5 Set the connection destination

Select "WAN Settings" → "Profile Management" and click "New Profile".
Set the connection destination (APN), user name, and password obtained from your provider.
Click "Save" to save the profile.

- 6 Select the connection destination

If multiple profiles are registered, select a profile from "Carrier Name" and click "Apply".

Troubleshooting

- **This product does not turn on**

- Is the USB TYPE-C cable (sample) correctly plugged into the product?
- Is the USB TYPE-C cable (sample) correctly plugged into the PC?
- Some energy-saving PCs may have the power to this product turned off. If the indicator lamp of this product is off, the power to this product may not be supplied, so check the power status according to the instruction manual of the PC.

- **The product becomes hot during operation**

- This product and the USB TYPE-C cable (sample) may become warm during operation, but there is no problem with operation.

- **Unable to communicate**

- Is the 5G/4G connection lamp lit in red?
Make sure the SIM card is installed correctly.
The SIM card PIN code may be valid, PIN locked, or completely locked. Check your PIN code settings.
- Is the 5G/4G connection lamp blinking in red?
Disconnect the USB TYPE-C cable (sample) connected to this product and then reinsert it to restart this product.
If the problem persists, relocate this product in a location where radio waves are more likely to reach.
- Depending on the nature of radio waves or the congestion of radio waves depending on the time of day, communication may be interrupted or the service may not be able to be used normally.
Please wait for a while before using.

Trademarks

- Microsoft®, Windows®, Internet Explorer®, and Microsoft Edge are trademarks or registered trademarks of Microsoft Corporation in the United States and other countries.
- Mac, macOS, Safari are trademarks or registered trademarks of Apple Inc. in the United States and other countries.
- Intel and Intel are trademarks of Intel Corporation in the United States and other countries.
- QR Code is a registered trademark of DENSO WAVE INCORPORATED.
- Ethernet and Ethernet are registered trademarks of FUJIFILM Business Innovation Corporation.
- USB Type-C™ is a trademark of USB Implementers Forum.
- Wi-Fi®, Wi-Fi Alliance®, Wi-Fi CERTIFIED®, Wi-Fi Protected Access® (WPA), WPA2™, WPA3™ and Wi-Fi Protected Setup™ are trademarks or registered trademarks of Wi-Fi Alliance.
- LTE is a registered trademark of the European Telecommunications Standards Institute (ETSI).
- Google, Android, and Google Chrome are trademarks of Google LLC.
- Adobe Reader and Acrobat Reader are trademarks or registered trademarks of Adobe Systems Incorporated in the United States and other countries.
- All other company and product names are trademarks or registered trademarks of their respective owners. The TM and ® marks may be omitted in the text.

FCC Regulations

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation; if this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient/relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radio Wave Exposure Information

This Product meets the government's requirements for exposure to radio waves.

The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of this Device MiFi (FCC ID :SLKUNX-05G) has been tested against this SAR limit.

The SAR value of the device is 1.12 W/kg, meet the standards. SAR information on this can be viewed on-line at <http://www.fcc.gov/oet/ea/fccid/>.

Please use the device FCC ID number for search. This device was tested for typical operations 10mm from the body. To maintain compliance with FCC RF exposure requirements, 10mm separation distance should maintain to the user's bodies.

European RF Exposure Information

This device meets guidelines for exposure to radio waves. Your device is a 5G Portable Modem. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), an independent scientific organization, and include safety measures designed to ensure the safety of all users, regardless of age and health. The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level during operation can be well below the value. This is because the device is designed to use the minimum power required to reach the network. The SAR limit adopted by Europe is 2.0W/kg averaged over 10grams of tissue, the SAR value of the device is 1.54W/kg, meet the standards.

Regulatory conformance

● Statement

Hereby, NCXX Inc. declares that this device UNX-05G is in compliance with the following.

Directive: RED 2014/53/EU, RoHS 2011/65/EU,

The full text of the EU declaration of conformity information and most recent information about accessories & software are available at the following internet address: <https://www.ncxx.co.jp/>

● Frequency Bands and Power

Frequency bands in which the radio equipment operates: Some bands may not be available in all countries or all areas.

Please contact the local carrier for more details.

LTE Band: 1/2/3/4/5/7/8/18/19/20/26/28/41/42: 25.7 dBm,

5G NR n1/n3/n28/n77/n78/n79: 25.7 dBm,

Wi-Fi 2.4G: 20 dBm, Wi-Fi 5G 5150–5350 MHz: 23 dBm, Wi-Fi 5G 5470–5725 MHz: 23 dBm.

W52/53 Indoor Use only.